RENAULT

Электрические схемы Mégane выпуска с 25-10-99 Техническая нота 8169A

Содержание

Глава 1	Предметный указатель
Глава 2	Общие положения
Глава 3	Комплект принципиальных электросхем автомобиля
Глава 4	Предохранители и реле
Глава 5	Схема расположения точек соединения с «массой»
Глава 6	Указатель электрических разъемов и соединений
Глава 7	Номенклатура разъемов
Глава 8	Схемы прокладки жгутов проводов
Справочные материалы	A. Список сокращений B. Перечень элементов электрооборудования C. Перечень разъемов жгутов проводов D. Перечень соединений на «массу»

77 11 297 040 **Русское издание**

«Методы ремонта, рекомендуемые изготовителем в настоящем документе, соответствуют техническим условиям, действительным на момент составления руководства. В случае внесения конструктивных изменений в изготовление деталей, узлов, агрегатов автомобиля данной модели, методы ремонта могут быть также соответственно изменены».

Все авторские права принадлежат Renault.

Воспроизведение или перевод, в том числе частичные, настоящего документа, равно как и использование системы нумерации запасных частей, запрещены без предварительного письменного разрешения Renault.

© **Renault S. A. 2000**

Предметный указатель

ФУНКЦИЯ ИЛИ ЭЛЕКТРОПРИБОР	№ ЛИСТОВ
УСИЛИТЕЛЬ РУЛЕВОГО УПРАВЛЕНИЯ	38
ПОДУШКА БЕЗОПАСНОСТИ	39
ОХРАННАЯ СИГНАЛИЗАЦИЯ	40
ПРИКУРИВАТЕЛЬ	41
СИСТЕМА ЭЛЕКТРОННОЙ ПРОТИВОУГОННОЙ БЛОКИРОВКИ ЗАПУСКА ДВИГАТЕЛЯ	42-43-44-45-46-47
АНТИБЛОКИРОВОЧНАЯ СИСТЕМА ТОРМОЗОВ	48-49
ЗВУКОВОЙ СИГНАЛ	50-51-52-53
АВТОМАТИЧЕСКАЯ КОРОБКА ПЕРЕДАЧ	54-55-56
ЦЕНТРАЛЬНЫЙ ЭЛЕКТРОННЫЙ КОММУТАЦИОННЫЙ БЛОК В САЛОНЕ	57-58-59-60-61-62-63-64
ЦЕПЬ ЗАРЯДКИ АККУМУЛЯТОРНОЙ БАТАРЕИ	65-66-67-68-69-70-71
ЦЕПЬ ЗАПУСКА ДВИГАТЕЛЯ	72-73-74-75-76
ЦЕНТРАЛЬНЫЙ ЗАМОК	77-78-79-80-81-82-83-84-85
КОНДИЦИОНЕР	86-87-88-89-90-91-92-93-94
ЭЛЕКТРОКОРРЕКТОР ФАР	95-96-97-98
ОБОГРЕВ ЗАДНЕГО СТЕКЛА	99-100-101-102
ОБОГРЕВ ЗАДНЕГО СТЕКЛА И НАРУЖНЫЕ ЗЕРКАЛА ЗАДНЕГО ВИДА С ЭЛЕКТРОПРИВОДОМ И ЭЛЕКТРООБОГРЕВОМ	103-104-105
ОБОГРЕВ ВЕТРОВОГО СТЕКЛА	106-107
РАСПРЕДЕЛЕНИЕ ЦЕПЕЙ ПИТАНИЯ МОТОРНОГО ОТСЕКА	108-109-110
МАКСИМАЛЬНЫЙ ПРЕДОХРАНИТЕЛЬ	111-112-113-114-115-116-117
ОСВЕЩЕНИЕ САЛОНА	118-119-120-121-122-123-124
РЕОСТАТ РЕГУЛИРОВКИ ОСВЕЩЕНИЯ СО СТОРОНЫ ВОДИТЕЛЯ	125-126
ОСВЕЩЕНИЕ ВЕЩЕВОГО ЯЩИКА	127
ОЧИСТИТЕЛЬ И НАСОС ОМЫВАТЕЛЯ ВЕТРОВОГО СТЕКЛА	128
ОЧИСТИТЕЛЬ И НАСОС ОМЫВАТЕЛЯ ВЕТРОВОГО/ЗАДНЕГО СТЕКЛА	129-130-131-132
ЗАДНИЕ ПРОТИВОТУМАННЫЕ ФОНАРИ	133-134-135-136
ПРОТИВОТУМАННЫЕ ФАРЫ	137
БЛИЖНИЙ СВЕТ И ДАЛЬНИЙ СВЕТ ФАР	138-139-140-141
СИСТЕМА ОСВЕЩЕНИЯ ДНЕВНОГО ДВИЖЕНИЯ	142
СВЕТ ЗАДНЕГО ХОДА	143-144-145-146-147-148-149-150-151-152
ГАБАРИТНЫЕ ОГНИ	153-154-155-156-157-158-159-160-161-162-163
СТОП-СИГНАЛ	164-165-166-167-168
УКАЗАТЕЛЬ	169-170-171-172-173
УКАЗАТЕЛЬ УРОВНЯ ТОПЛИВА	174-175-176-177-178-179-180
УКАЗАТЕЛЬ УРОВНЯ МАСЛА	181
УКАЗАТЕЛЬ ДАВЛЕНИЯ МАСЛА	182-183
ИНДИКАЦИЯ ТЕМПЕРАТУРЫ НАРУЖНОГО ВОЗДУХА	184-185
ЭЛЕКТРОННАЯ СИСТЕМА ВПРЫСКА	186-187-188-189-190-191-192-193-194-195-196-197-198-199-200-201-202-203-204
ОМЫВАТЕЛИ ФАР	205
ЭЛЕКТРОСТЕКЛОПОДЪЕМНИКИ ЗАДНИХ ДВЕРЕЙ	206-207
СТЕКЛОПОДЪЕМНИК ДВЕРИ ВОДИТЕЛЯ	208-209-210-211
ЦЕПЬ СОЕДИНЕНИЯ С «МАССОЙ»	1-2-3-4-5-6-7-8-9-10-11-12-13-14-15-16-17-18-19-20-21-22-23-24-25-26-27-28-29-30-31-32-33-34-35-36-37
ЭБУ СКЛАДНОЙ КРЫШИ	212-213
ЧАСЫ	214
БЛОК ПРЕДОХРАНИТЕЛЕЙ В САЛОНЕ АВТОМОБИЛЯ	215-216-217-218-219-220-221-222-223-224

ФУНКЦИЯ ИЛИ ЭЛЕКТРОПРИБОР	№ ЛИСТОВ
БЛОК ПРЕДОХРАНИТЕЛЕЙ В МОТОРНОМ ОТСЕКЕ	225-226-227-228-229-230-231-232-233-234
ПРЕДПУСКОВОЙ ПОДОГРЕВ ДИЗЕЛЬНОГО ДВИГАТЕЛЯ И ПОДОГРЕВ ДИЗЕЛЬНОГО ТОПЛИВА	235-236-237-238
ПОДГОТОВКА ДЛЯ УСТАНОВКИ АУДИОСИСТЕМЫ	239
ДИАГНОСТИЧЕСКИЙ РАЗЪЕМ	240
ДИАГНОСТИЧЕСКИЙ РАЗЪЕМ БОРТОВОЙ СИСТЕМЫ ДИАГНОСТИКИ OBD 2	241-242-243-244-245
АУДИОСИСТЕМА	246-247-248
ПОДОГРЕВАТЕЛЬ ФИЛЬТРА ДИЗТОПЛИВА	249-250
СИСТЕМА ОХЛАЖДЕНИЯ ДВИГАТЕЛЯ	251-252-253-254-255-256-257-258-259-260
НАРУЖНЫЕ ЗЕРКАЛА ЗАДНЕГО ВИДА С ЭЛЕКТРОПРИВОДОМ	261
СИДЕНЬЯ С ОБОГРЕВОМ	262
ЩИТОК ПРИБОРОВ	263-264-265-266-267-268-269-270-271-272-273-274-275
СИГНАЛЬНАЯ ЛАМПА НЕЗАСТЕГНУТОГО РЕМНЯ БЕЗОПАСНОСТИ	276
СИГНАЛЬНАЯ ЛАМПА МИНИМАЛЬНОГО УРОВНЯ ЖИДКОСТИ В БАЧКЕ ОМЫВАТЕЛЯ	277
СИГНАЛЬНАЯ ЛАМПА СТОЯНОЧНОГО ТОРМОЗА И МИНИМАЛЬНОГО УРОВНЯ ТОРМОЗНОЙ ЖИДКОСТИ	278-279-280
ПОГРУЖНЫЕ ПОДОГРЕВАТЕЛИ	281-282
ЛЮК КРЫШИ	283
ЛЮК КРЫШИ С ЭЛЕКТРОПРИВОДОМ	284

Технические Ноты «Электрические Схемы Автомобиля» (ТН ЭСА) дают возможность подобрать необходимую Принципиальную Электрическую Схему (с цифровым обозначением рядом с графическим символом), соответствующую неисправному электроприбору или нереализуемой функции. Перечень функций и электроприборов приведен в конце настоящего документа.
Каждая Техническая Нота «Электрические Схемы Автомобиля» идентифицирована аналогично идентификации соответствующего автомобиля, т. е:

- в соответствии с семейством автомобиля (например, J64),
- в соответствии с моделью двигателя, указанной на табличке двигателя, и его индексом (например, E7J 764),
- в соответствии с модельным годом или датой выпуска автомобиля.

1. СТРУКТУРА ТЕХНИЧЕСКОЙ НОТЫ

1.1 Предметный указатель (Глава 1 ТН «ЭСА»)

Благодаря указателю можно, зная функцию или электроприбор, быстро отыскать в комплекте схем (см. следующую главу) ту схему, которая необходима: схемы сгруппированы по каждой функции или электроприбору.
Указатель составлен в алфавитном порядке функций или электроприборов.

1.2 Комплект Принципиальных Электрических Схем Автомобиля. (Глава 3 ТН «ЭСА»)

В этой части Технической Ноты собраны все Принципиальные Электросхемы Автомобиля.

На Принципиальных Схемах представлено детальное внутреннее строение простых электрических устройств (разъемов, реле), что облегчает понимание работы системы и диагностики. На схеме изображены:

- электроприборы с присвоенным номером,
- разъемы, обозначенные буквой с последующими цифрами (R107),
- соединения с «массой», обозначаемые буквой, за которой следуют цифры или буква (например, M4 или MG).

Принципиальные схемы даны в следующем порядке: схемы электропитания, схемы соединения с «массой» и функциональные схемы.

Принципиальные схемы дополнены:

- указанием на назначение проводов в каждом разъеме (глава 5),
- схемами прокладки электропроводки, которые позволяют определить местоположение элементов на автомобиле,
- складной схемой,
- перечнями функций и электроприборов, приведенными в конце документа, с помощью которых можно быстро найти соответствующие принципиальные схемы.

1.3 Блоки реле и коробки предохранителей (Глава 4 ТН ЭСА)

В этой главе представлены коробки предохранителей и блоки реле, установленные на автомобиле; для каждого блока и для каждой коробки дано:

- графическое изображение передней или задней частей коробки или блока.

1.4 Схемы соединения с «массой» (Глава 5 ТН ЭСА)

Схемы показывают точки соединения с «массой» с указанием их местоположения на кузове автомобиля.

1.5 Указатель разъемов (Глава 6 ТН ЭСА)

Указатель предназначен для быстрого определения приборов (см. следующую главу), с которыми соединен разъем на основе его идентифицированной функции: для каждой функции разъема указывается страница с соответствующим перечнем. Указатель составлен в порядке возрастания номеров разъемов.

1.6 Номенклатура разъемов (Глава 7 ТН ЭСА)

В Главе приведены и даны описания всех разъемов, использованных в электропроводке автомобиля.
По каждому пункту номенклатуры:

- дано графическое изображение разъема, также как назначение его выводов;
- дан перечень электрических проводов, подключаемых к данному разъему, с указанием номера вывода, к которому каждый провод должен быть подключен;

Номенклатура определяется по разъему. Перечень разъемов приведен в конце настоящего документа.

2 9!.ST!0 .1M!-8 , -234562,0!7 4!-!7

2.1 0BAK$=B=D9:$*I$&$B(D*@R ,J%<@:

(</%1"/ '#"1, </%3"6"$ $%")

L".+,D	«+» J2 H <*"." 971(7 97:%A7$%5
K*.=4*D	?"<; *#/7$$*D '%A$7.%97?%%.%
1 0"1"D'+3* 73+*1*4%.5	=+/*D'+3 %6"$+%@%(7?%%
2M"/$.D E/%+"/%D3,4*/7 '$"1;"/"6'+3"$$*" '*"6%$"$%" $7 «17"= »
3)7%1"$*37$%" @=$(?%%.%C."(+/*</%4*/7
4.5 6/=A%#?3"+*3 : 4"., , A*.=4," , 4":"3," (4"?3"+$,"), '"/," , .".+," , (*/%&$"3," , &"/$," , */7$."3," , (/7'$," , /*9*3," , 9"."$," ;"@%".'+*3," .
5 O3"+ /79I"17 C."(+/%&"'(%1 ?"<51 .
6 0#"17 C."(+/%&"'(%# '*"6%$"$%5 ' «17"*D », ?"<%' %91"$"$%"1 <*.5/$*'+% $" *+$*'5+'5 (*'$*3$,1 C."(+/%&"'(%1 ?"<51 .
7 0#"17 C."(+/%&"'(%# '*"6%$"$%5)7.%&%" %.%+-(+/+3% (+/*D'+3 97B%+, ?"<"D (<.73(%" %4%1"+7..%&"'(%" </"6*#/7$%+".%) $" 3.%5"+ $7 </%1"$5"1*'+; C."(+/%&"'(%# </*3*6*3 .
8 O3"+ /79I"17 P7'?3"+(7 C."(+/%&"'(%# </*3*6*3 $7 C."(+/**4*/=6*37$%% , <*'+73.5"1*1 3 (7&"'+3" 97<7'$,# &7'+"D)*1"/ </%4*7
10)*1"/ </%4*7
11 67$$*D !"#$%&"'(%# '*"6%$"$%5 C."(+/*</%4*/*3 , /79I"1*3 %+/7" </*(.76(% C."(+/*</*3*6(% $7 73+*1*4%." .
12 P7'<* *:"$%" <73(*A* </"6*#/7$%+".5 3 (*/*4(" F=(37 «N» $7 "17# </*(.76(% C."(+/*</*3*6*3 *4*9$7&7"+ %6"$+%@%(7?%*$$=8+%("+(= :A=+7 </*3*6*3
13 O3"+ /79I"17 &7'+%'*"6%$%+".5
14 9%:14A$;*)?1"/ &%:%%&$%5
15 «'</73*&$*1 <*'*4%%» </%1"$"$$*1 3 67$$*D !"#$%&"'(%D)*+" , (*+*/*" 67"+

1.7 ,J%<> &?A(B;A$)O@='F &:'F';'F (E(BFB 8 -4 H,1)


1.8 9%:14A$;*)?1"/ &%:%%&$%5

P"&; %6"+* '3*"*4/79$*1 1"+7 7B%37$%5 </*3*6*3 3*91*:$*'+; <*.;9*37+".8 '/79= *4/7+%+';5 ('#"171 /79I"1*3 %(/793*6(" </*3*6*3 , $" *4/7B75'; (<"/"&$51 . (67 9(7(7D97#"1A7$%(597$, $*1"/7 C."(+/*</%4*/*3 %/79I"1*3 , $*1"/7 .%'+*3 '#"1 /79I"1*3 % '#"1 </*(.76(% </*3*6*3).

E7:675 '#"17 6"D'+3%+".;$7 +*.;(* 6.5 +*D $*+, , %9(*+*/*D *$7 395+7. 0#"17 *4$*3.5"+'5 </% (7:6*1 <"/"%967$%%

1.9 9:'K$% ;'A@<%*=>

P -%J*$K%LA'? 4'=% 8074 <*6/*4$* /7"17+/%378+'5 1"+*6, /74*+ , 3 +*1 &%'." %$7 C."(+/%&"'(%# '*"6%$"$%5# , 3,<*.$"$$,# <* $*3*D +"#$*.*A%% R6"'; :" </%3*6%+'5 '<%'*('<"?%7.;$*A* *4*/=6*37$%5 %</%'<*'*4."$%D , $"*4#*6%1,# 6.5 (7&"'+3"$$*A* 3,<*.$"$%5 /"1*$+$,# /74*+ . S4/7B7D+"'; (67$$*D)*+" </% .84,# *<"/7?%5# ' /79I"171% . -%J*$K%LAB+4'=B 8075 *<%',37"+ *<"/7?%%, '3597$$," ' %'<*.;9*37$%"1 +"/1*='76*&$,# 1=@+6.5 /"1*$+7 C."(+/*</*3*6(% 73+*1*4%.5 . H 6*(=1"$+" PR 830 %3 «,&:BF'K*$A% L&%I$B($L=B &' Q(%A=:'"":@;'FB*$R BF='<'"$(%? » </%3*65+'5 '(.76'(%" $*1"/7 %*<%'7$%53'"# <*'+73.5"1,# </%4*/*3 , *4*/=6*37$%5 %17+"/%7.*3 , %1"8B%# *+$*Q"$%" (C."(+/**4*/=6*37$%8 73+*1*4%.5 .

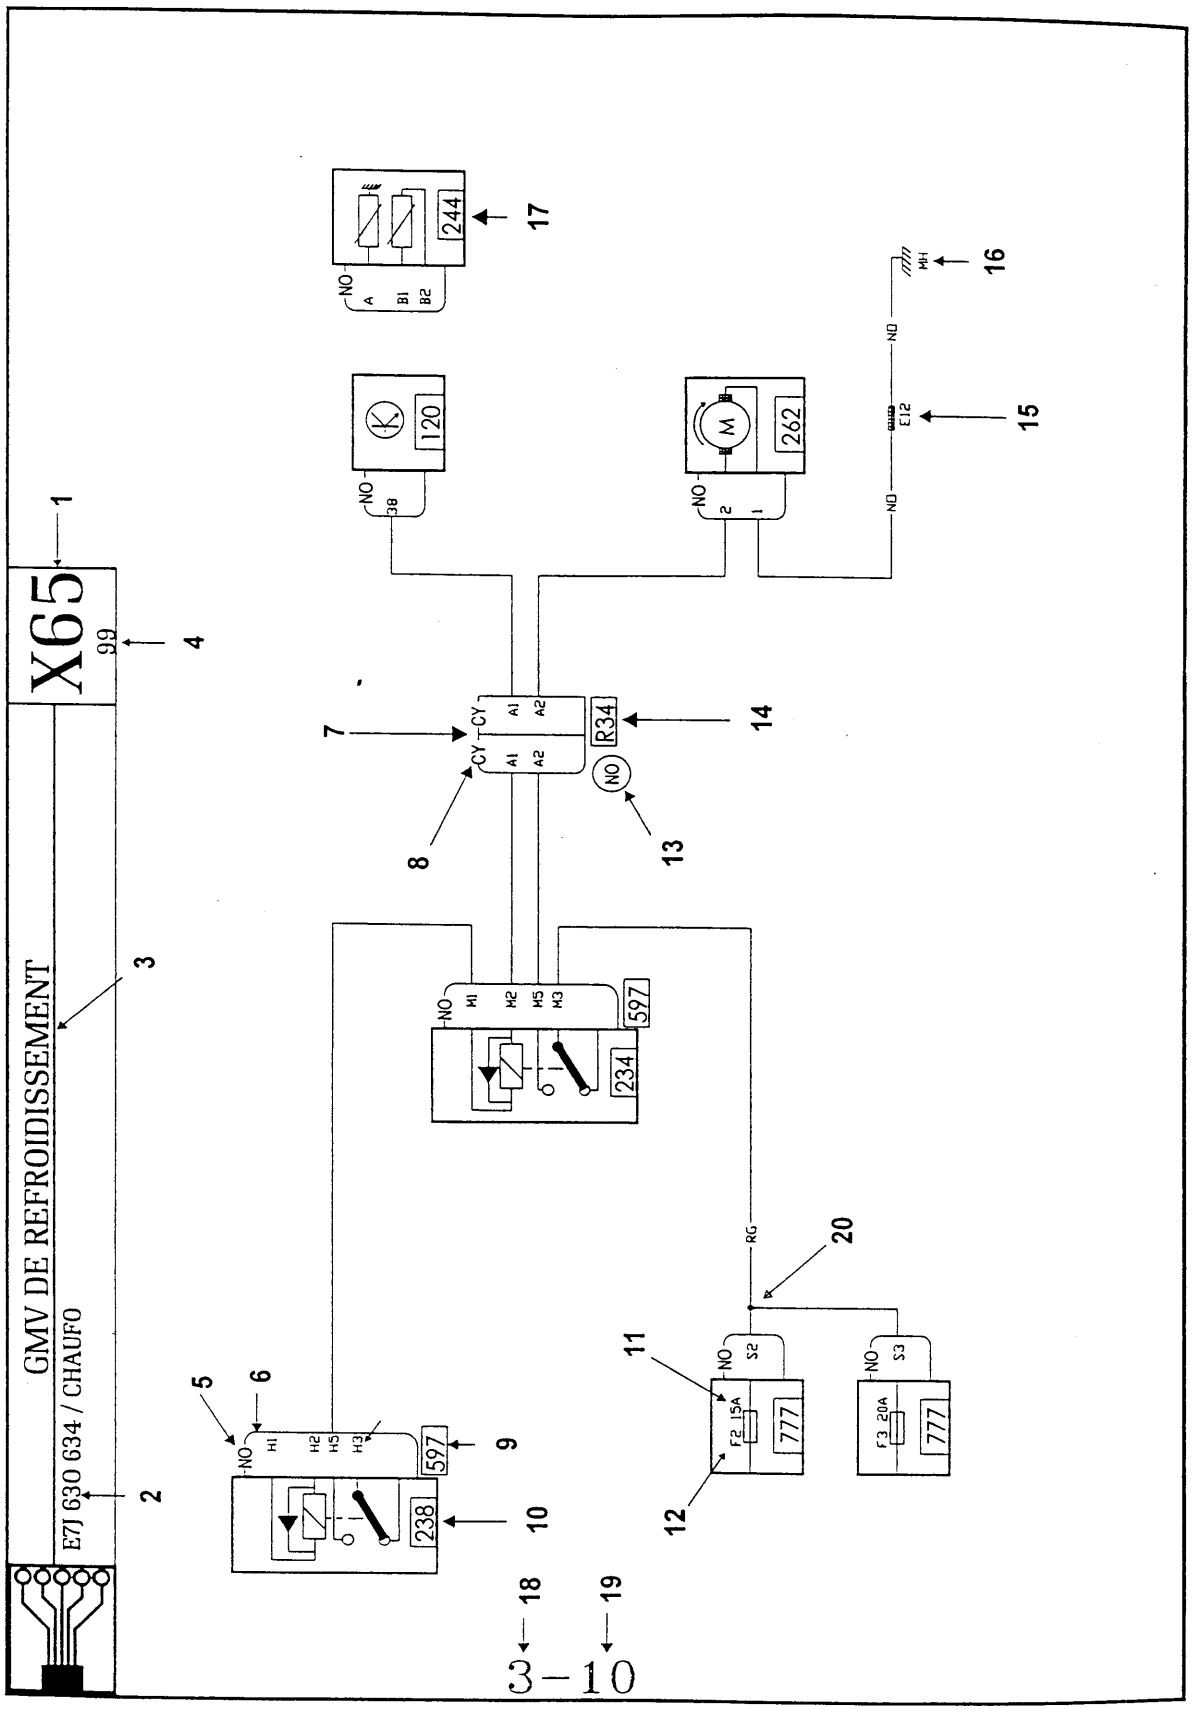


Примечание: Вспомогательный электроприбор: На данной схеме ЭБУ управляет реле на основании информации, поступающей от этого прибора. Более детально соединения между прибором и ЭБУ представлены на соответствующей схеме.


2.2 Как читать номенклатуру


(Пример номенклатуры приведен ниже)

1	Символ листа номенклатуры
2	Назначение разъема
3	Назначение электропроводки
4	Применяемость
5	Семейство автомобиля
6	Текущий модельный год
7	Сокращенное обозначение применяемости разъема
8	№ жгута проводов, в котором подлежит определению местоположение разъема
9	Обозначение разъема (только для изготовителя)
10	Номер электроприбора
11	Цвет разъема
12	Графическое изображение разъема
13	№ используемого вывода
14	Сечение провода, подключаемого к выводу
15	Код электрической цепи (используется, если соблюдается маркировка проводов)
16	Название цепи, в которой используется провод
17	Крест означает, что к выводу подключается один провод, два креста означают, что к выводу подключаются два провода. В новых номенклатурах показаны только цвета проводов основной проводки (красный, желтый, черный, синий) **Наличие провода иного цвета указывается крестом в гнезде соединителя**
18	№ Главы и № листа

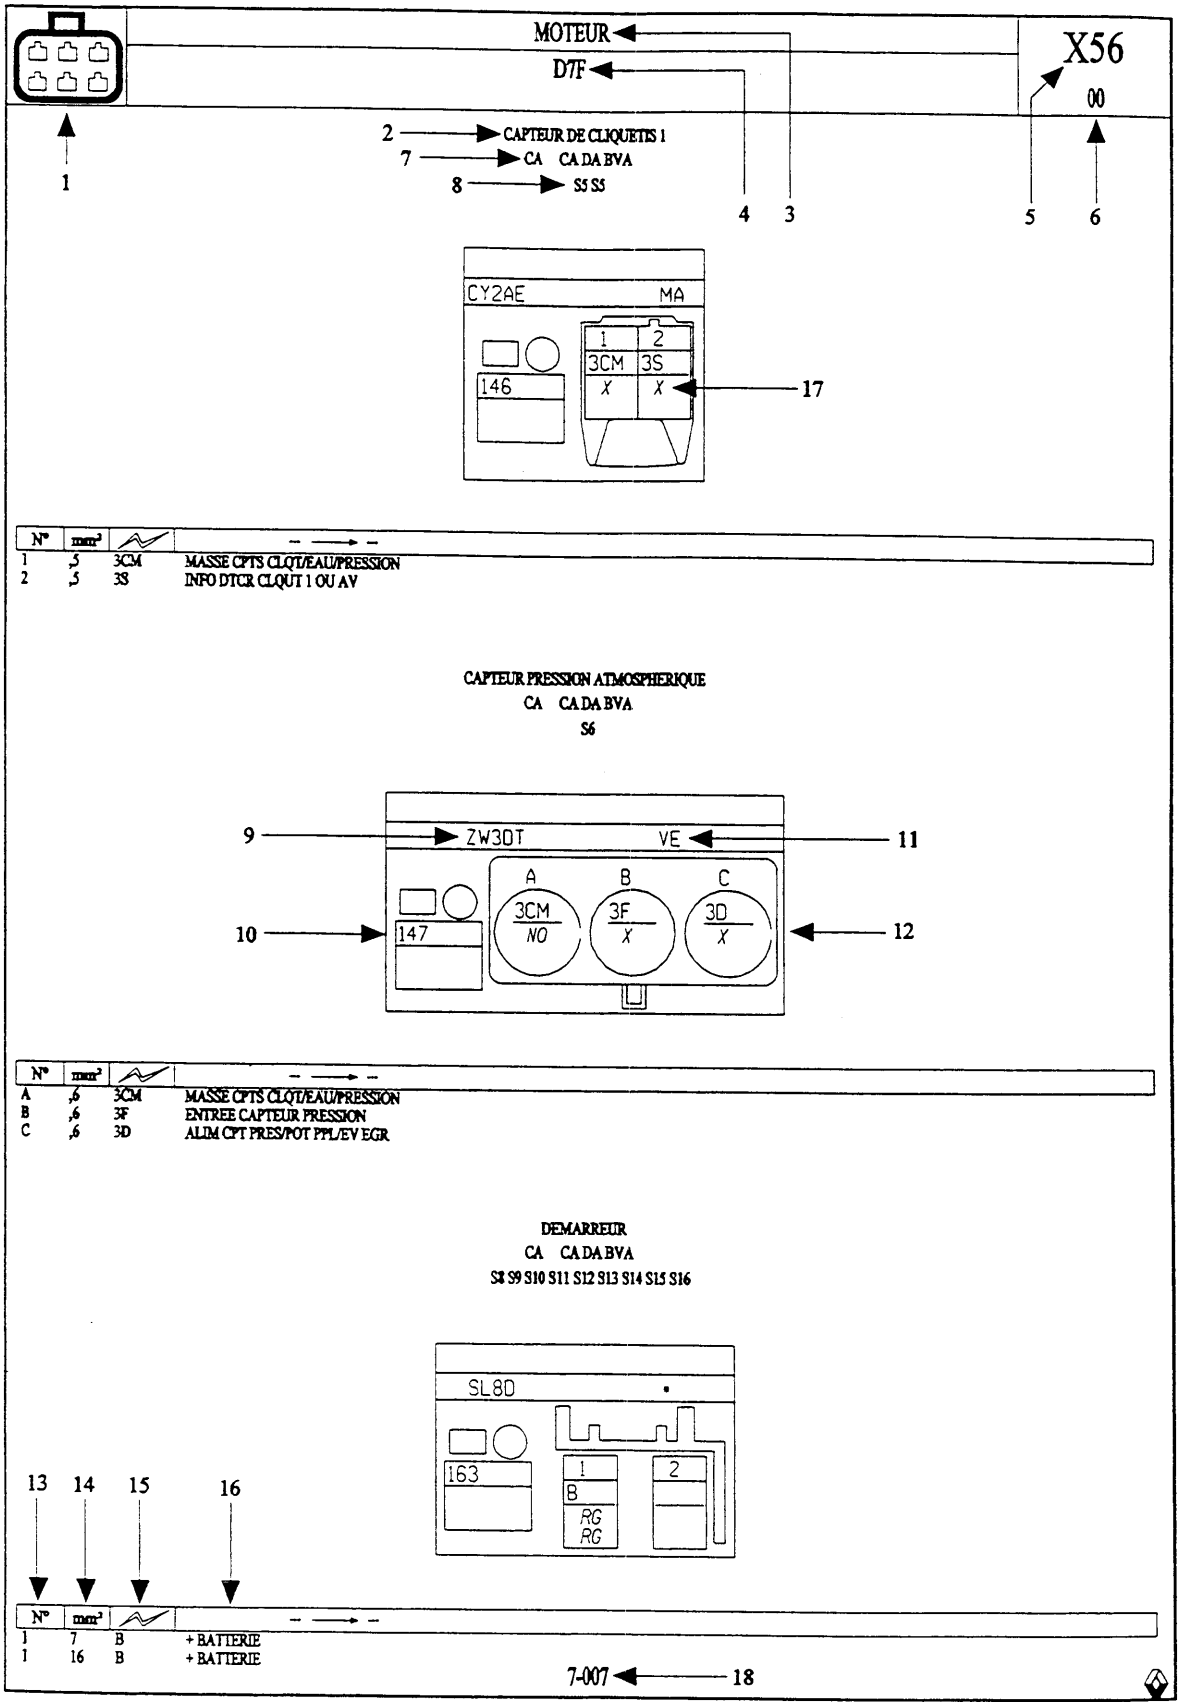
MOTEUR
DTF
X56
00
1
2 CAPTEUR DE CLIQUETIS 1
7 CA CA DA BVA
8 S5 S5
4
3
5
6
CY2AE
MA
1
2
3CM
3S
X
X
146
17
N° mm² B
1 ,5 3CM MASSE CPTS CLQT/EAU/PRESSION
2 ,5 3S INFO DTCR CLQUT 1 OU AV
CAPTEUR PRESSION ATMOSPHERIQUE
CA CA DA BVA
S6
9
ZW3DT
VE
11
A
B
C
3CM
NO
3F
X
3D
X
10
147
12
N° mm² B
A ,6 3CM MASSE CPTS CLQT/EAU/PRESSION
B ,6 3F ENTREE CAPTEUR PRESSION
C ,6 3D ALIM CPT PRES/POT PPL/EV EGR
DEMARREUR
CA CA DA BVA
S8 S9 S10 S11 S12 S13 S14 S15 S16
SL8D
163
1
B
RG
RG
2
13
14
15
16
N° mm² B
1 7 B + BATTERIE
1 16 B + BATTERIE
7-007
18

2.3 Методика поиска неисправности

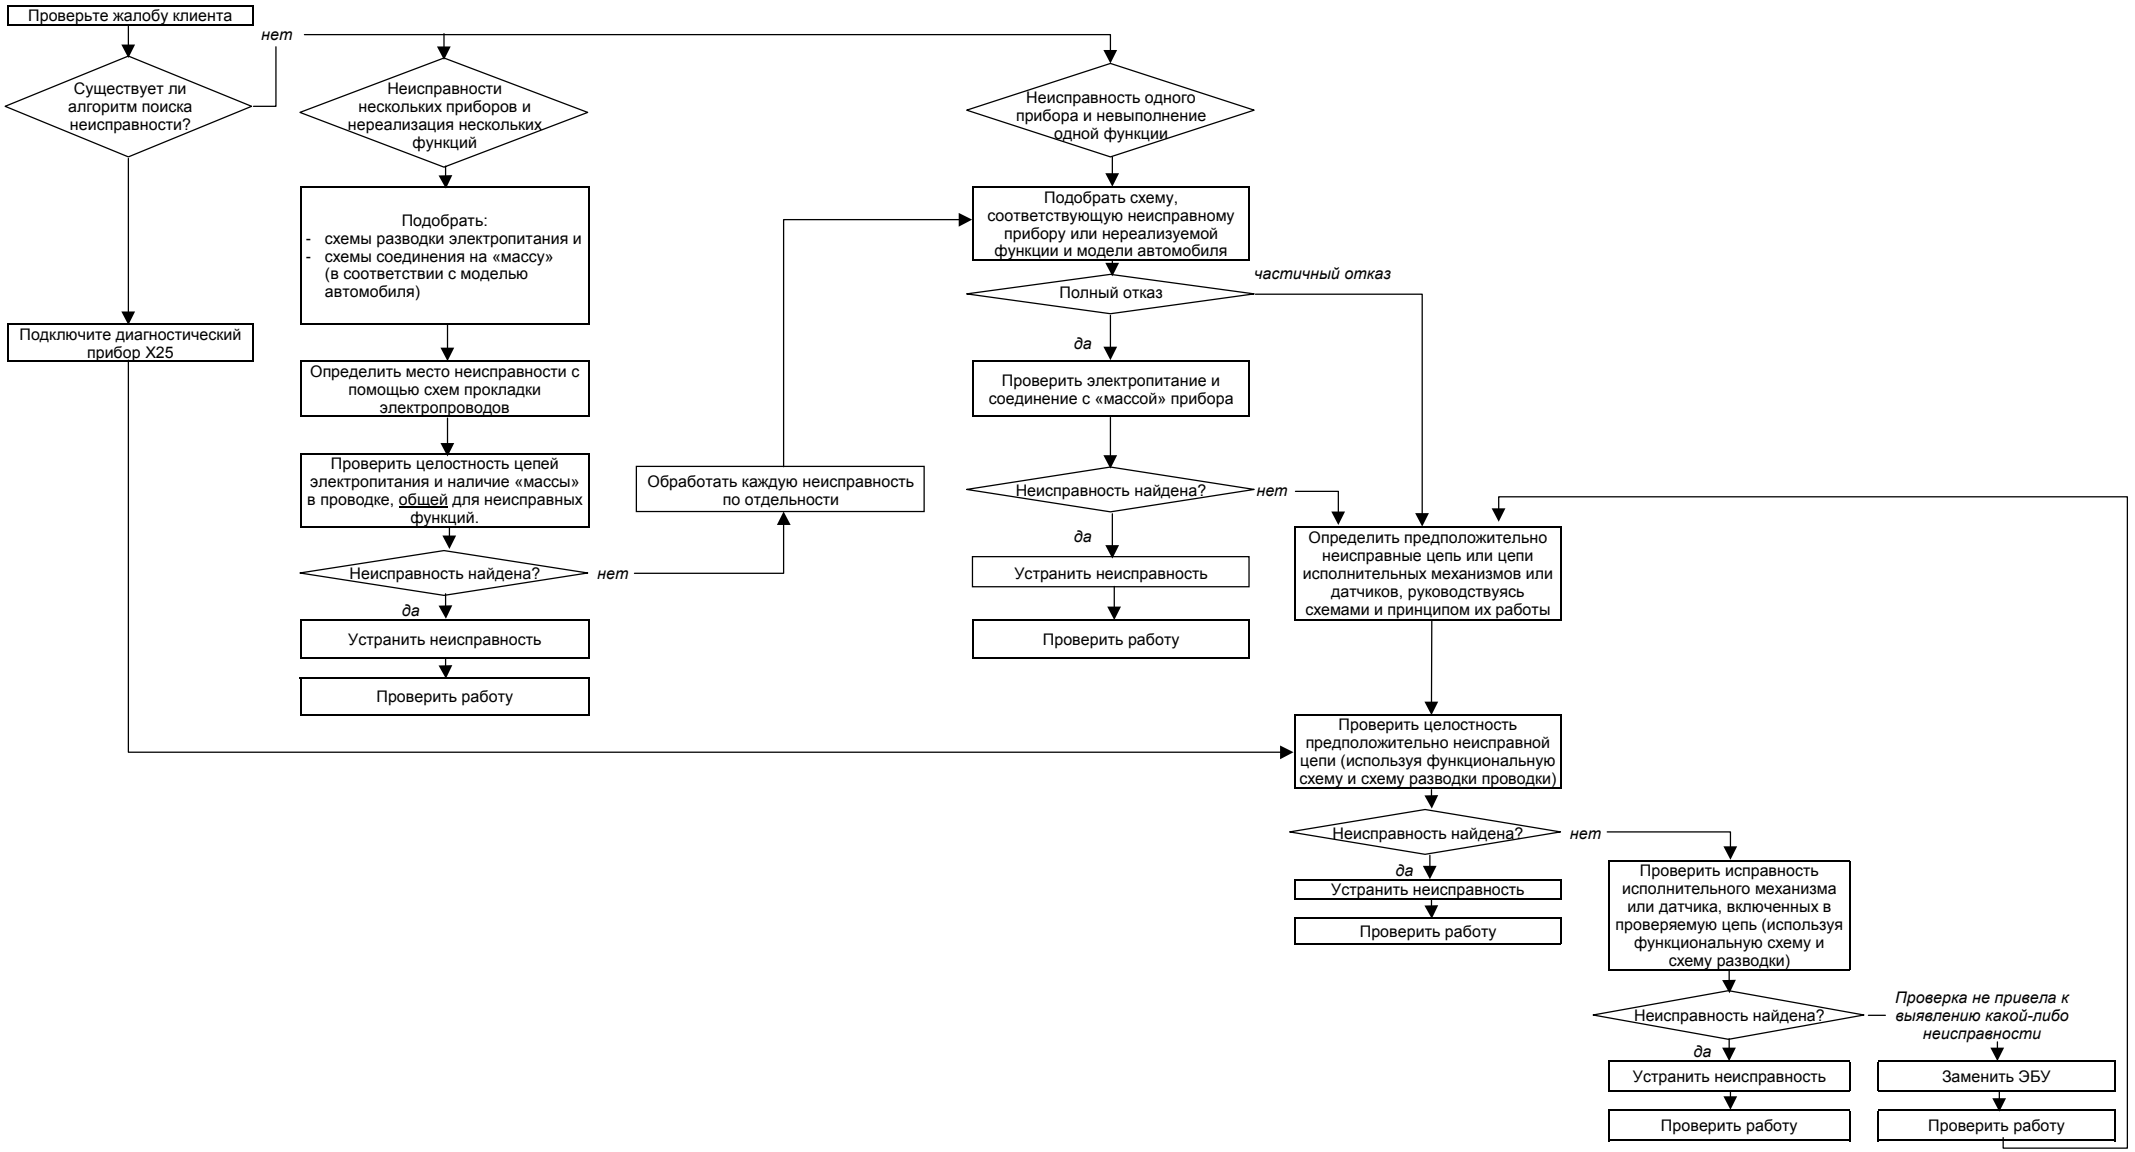

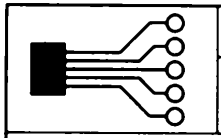



EARTH

B64

X642

00

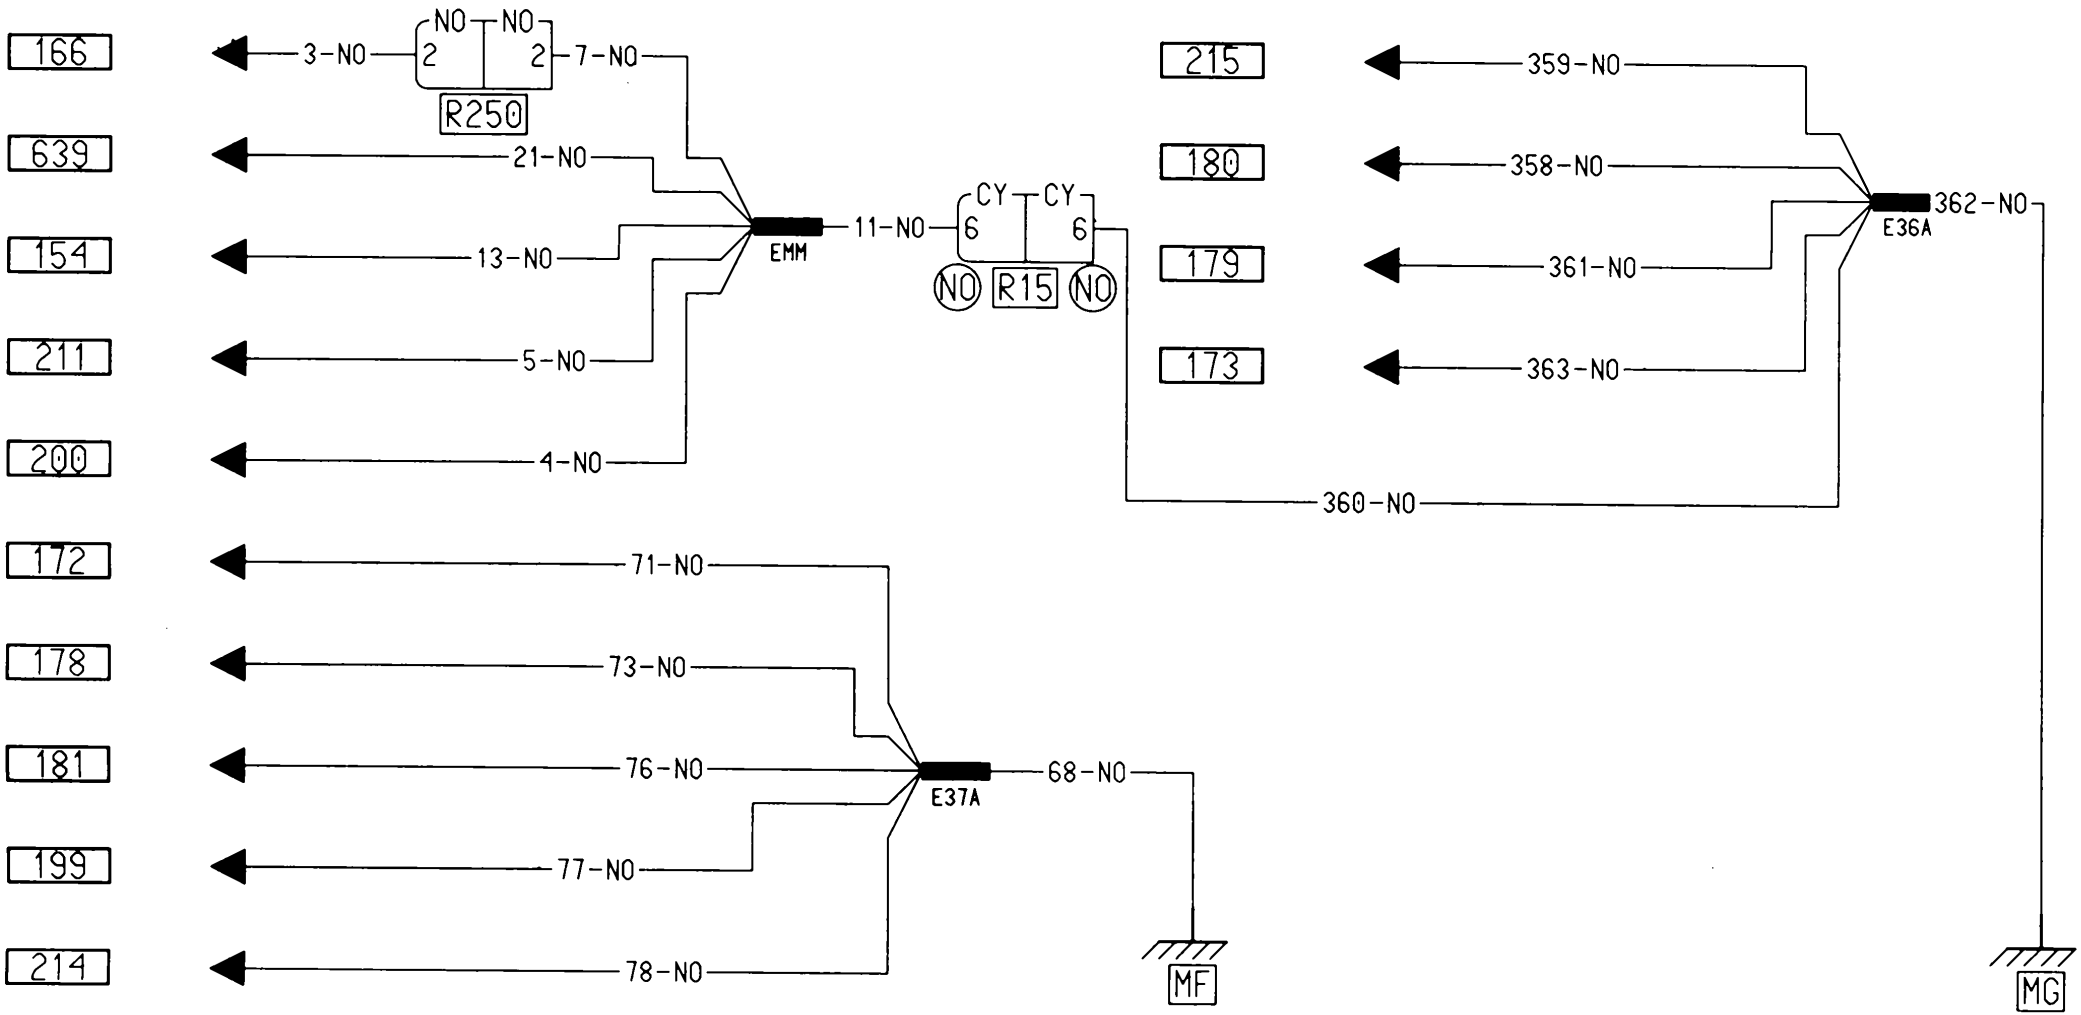


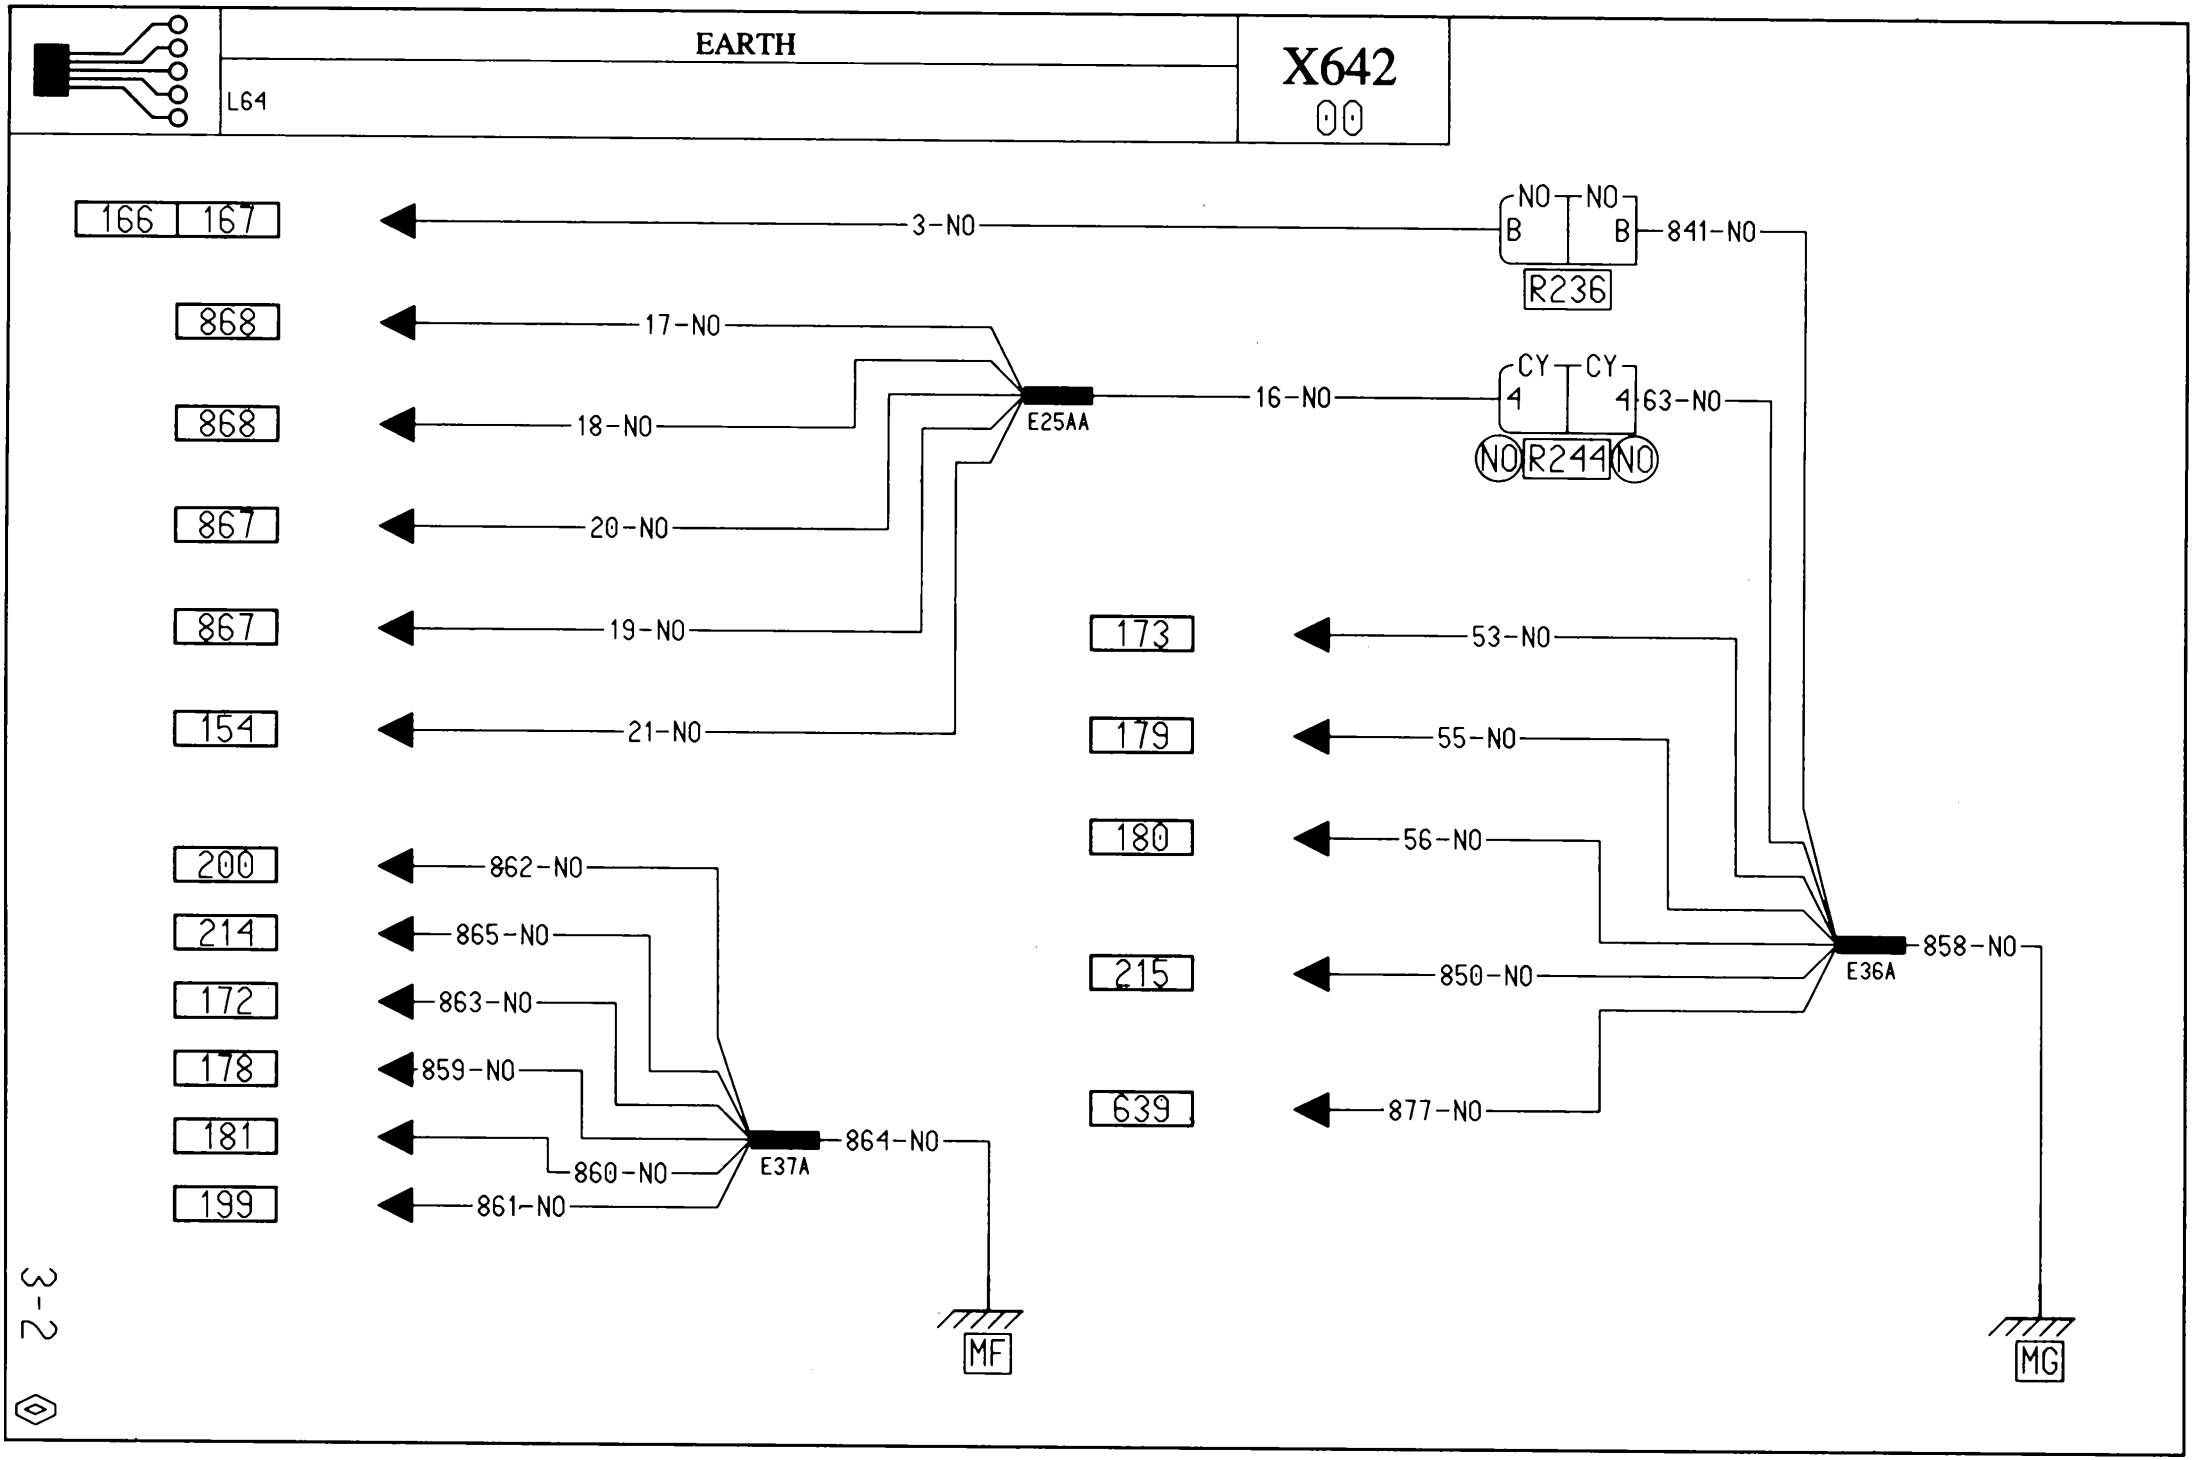

EARTH
L64
X642
00
166
167
3-NO
NO
B
NO
B
841-NO
R236
868
17-NO
868
18-NO
E25AA
16-NO
CY
4
CY
4
63-NO
NO
R244
NO
867
20-NO
867
19-NO
154
21-NO
173
53-NO
179
55-NO
180
56-NO
215
850-NO
639
877-NO
E36A
858-NO
200
862-NO
214
865-NO
172
863-NO
178
859-NO
181
860-NO
199
861-NO
E37A
864-NO
MF
MG
3-2

EARTH

B64,K25,L64/E1/DG/CA/SGSCHA/SRUNLI

X642
00

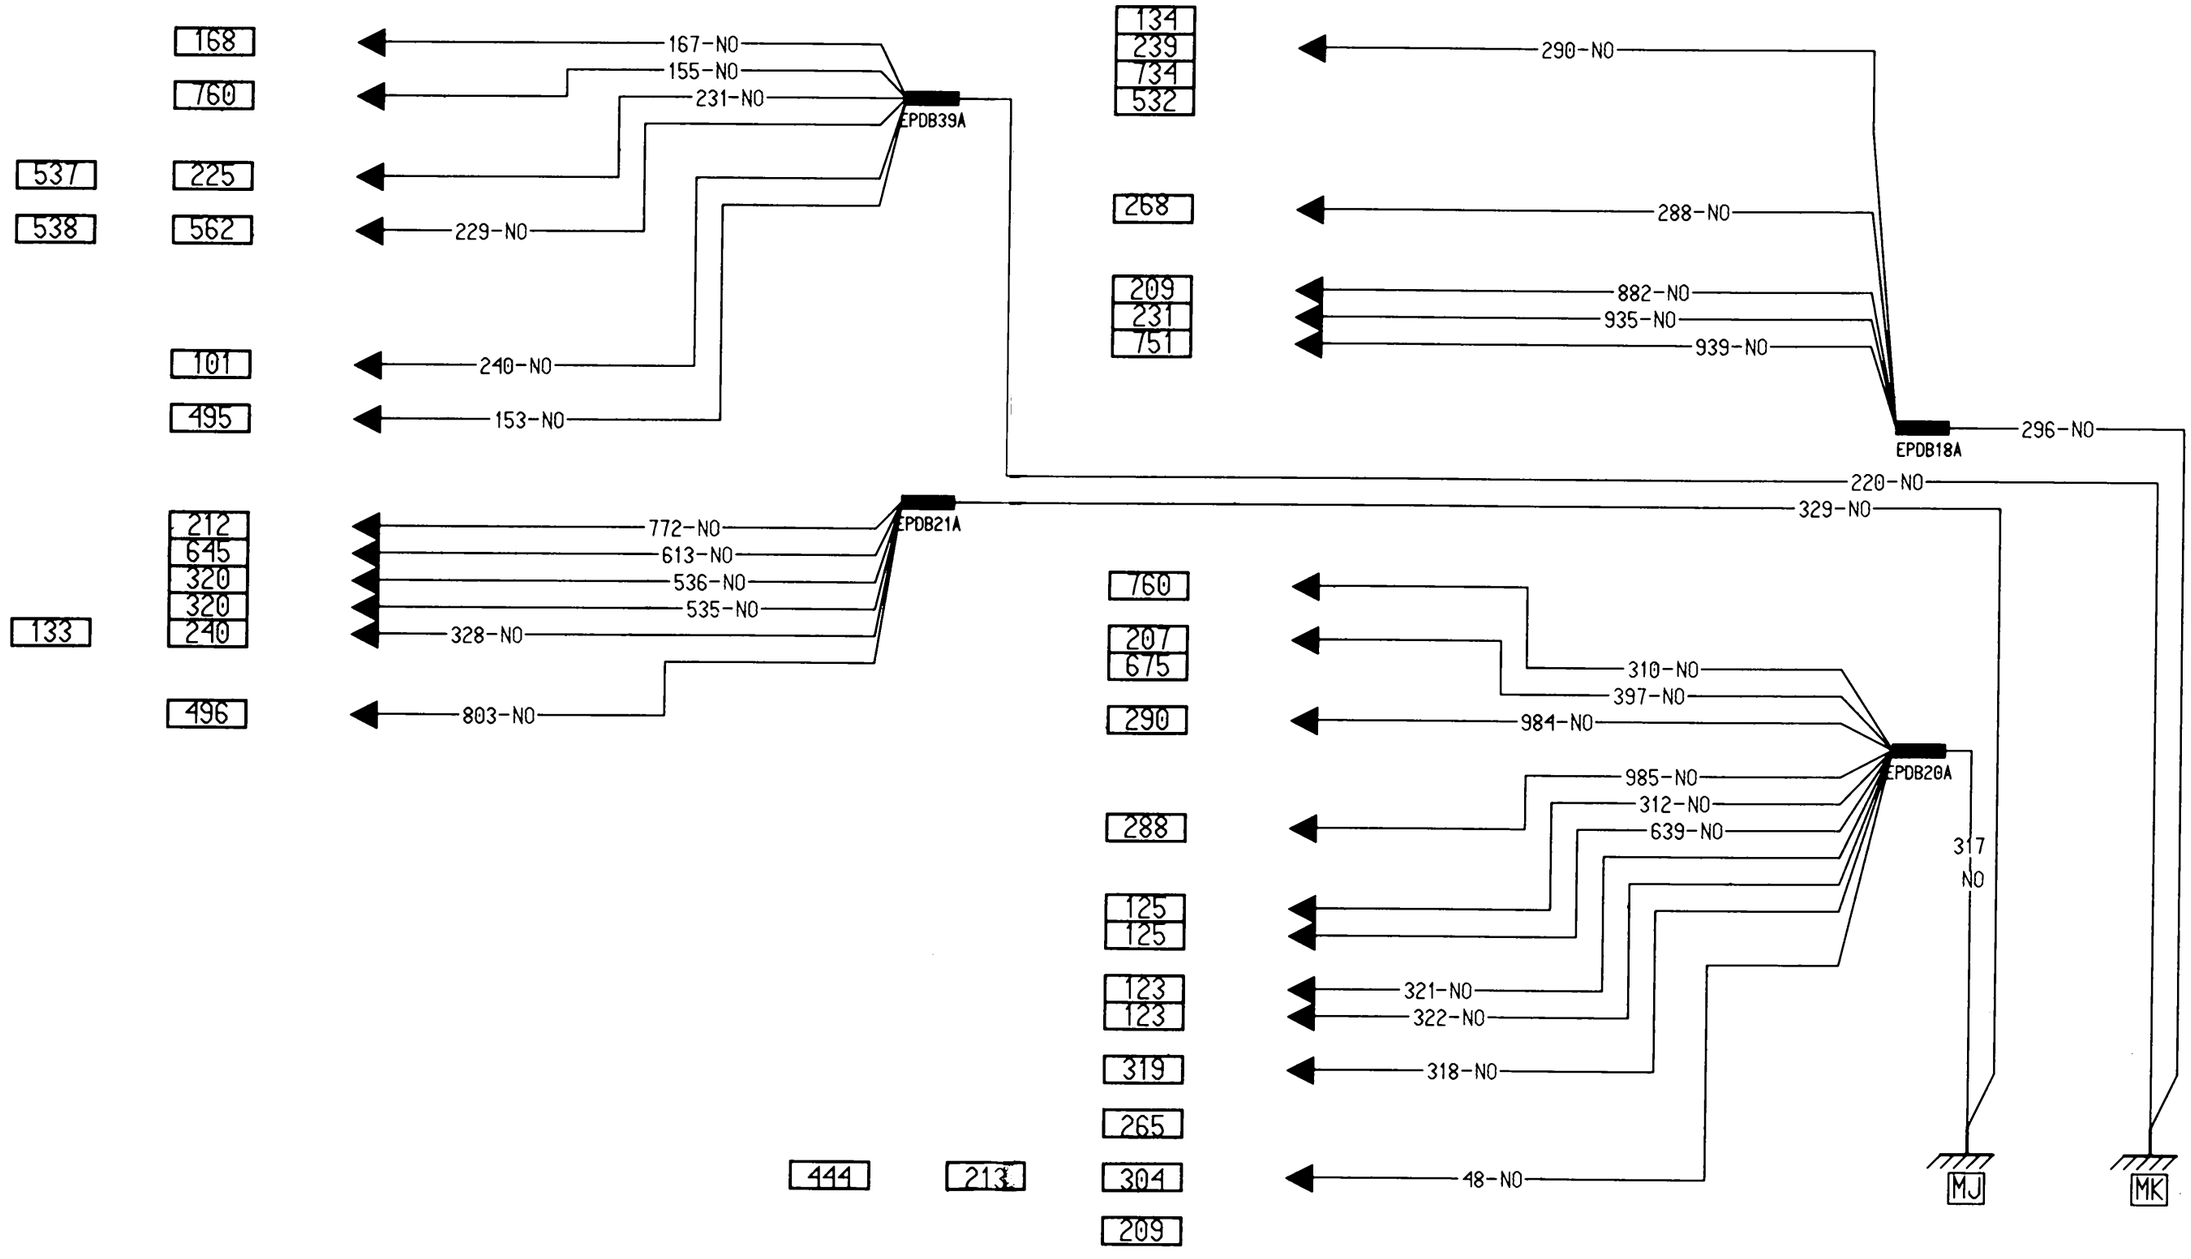


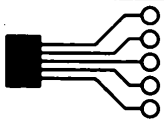


EARTH

B64,D64,E64,K25,L64/DG/ABLAV

X642
00

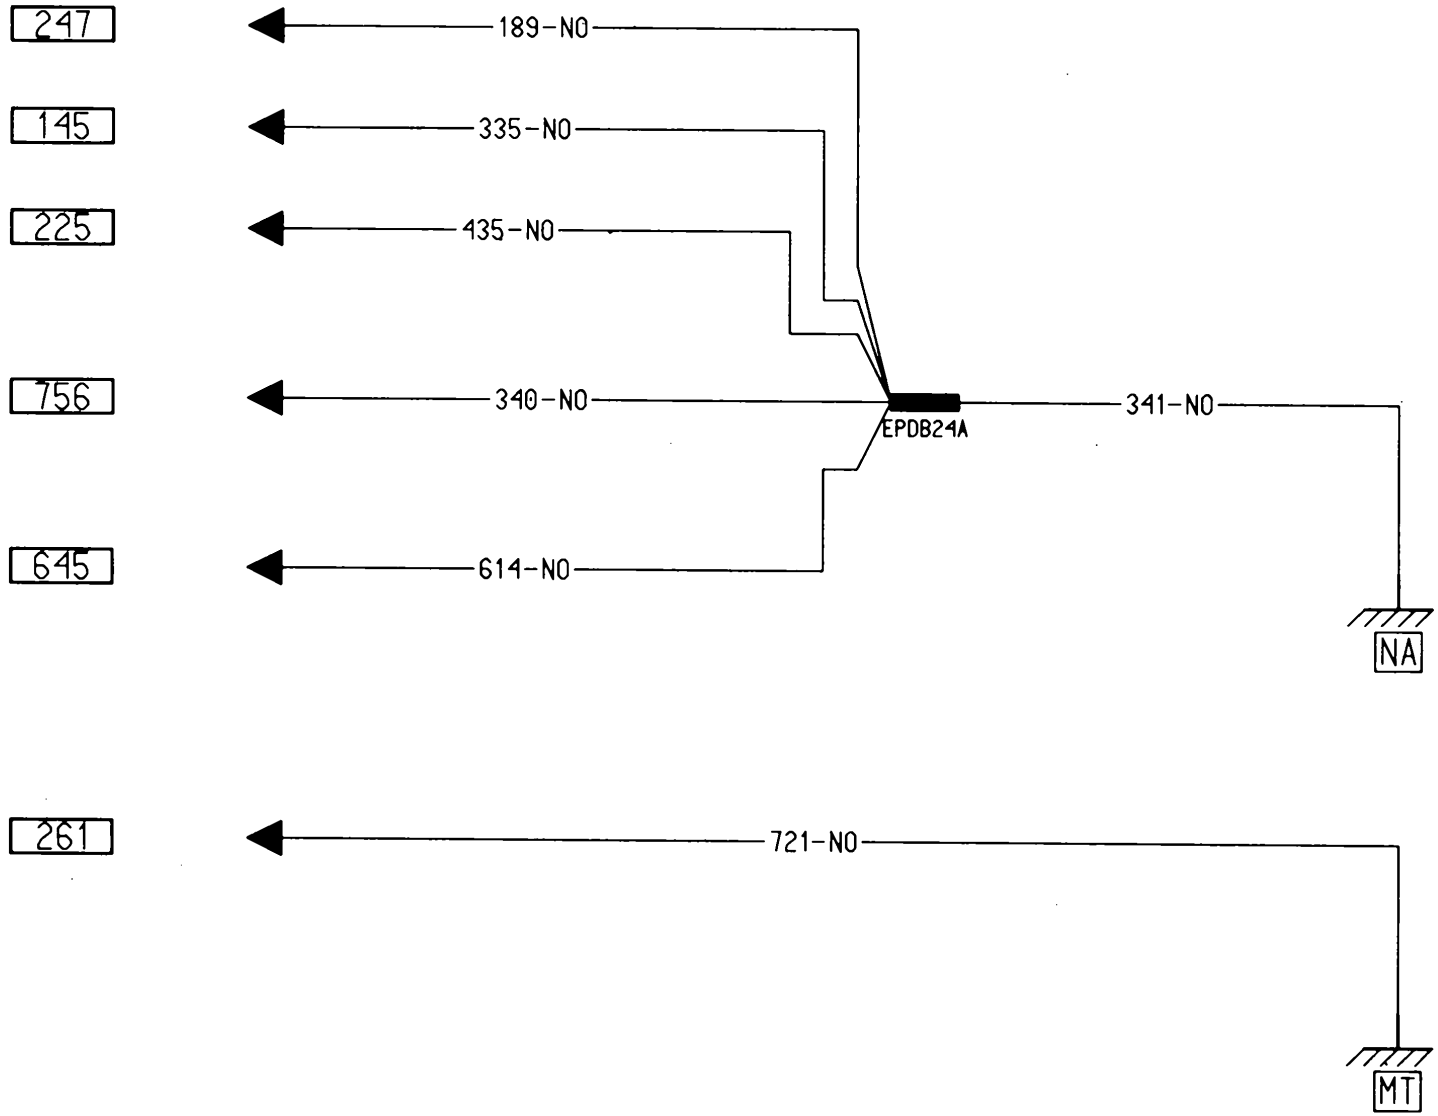


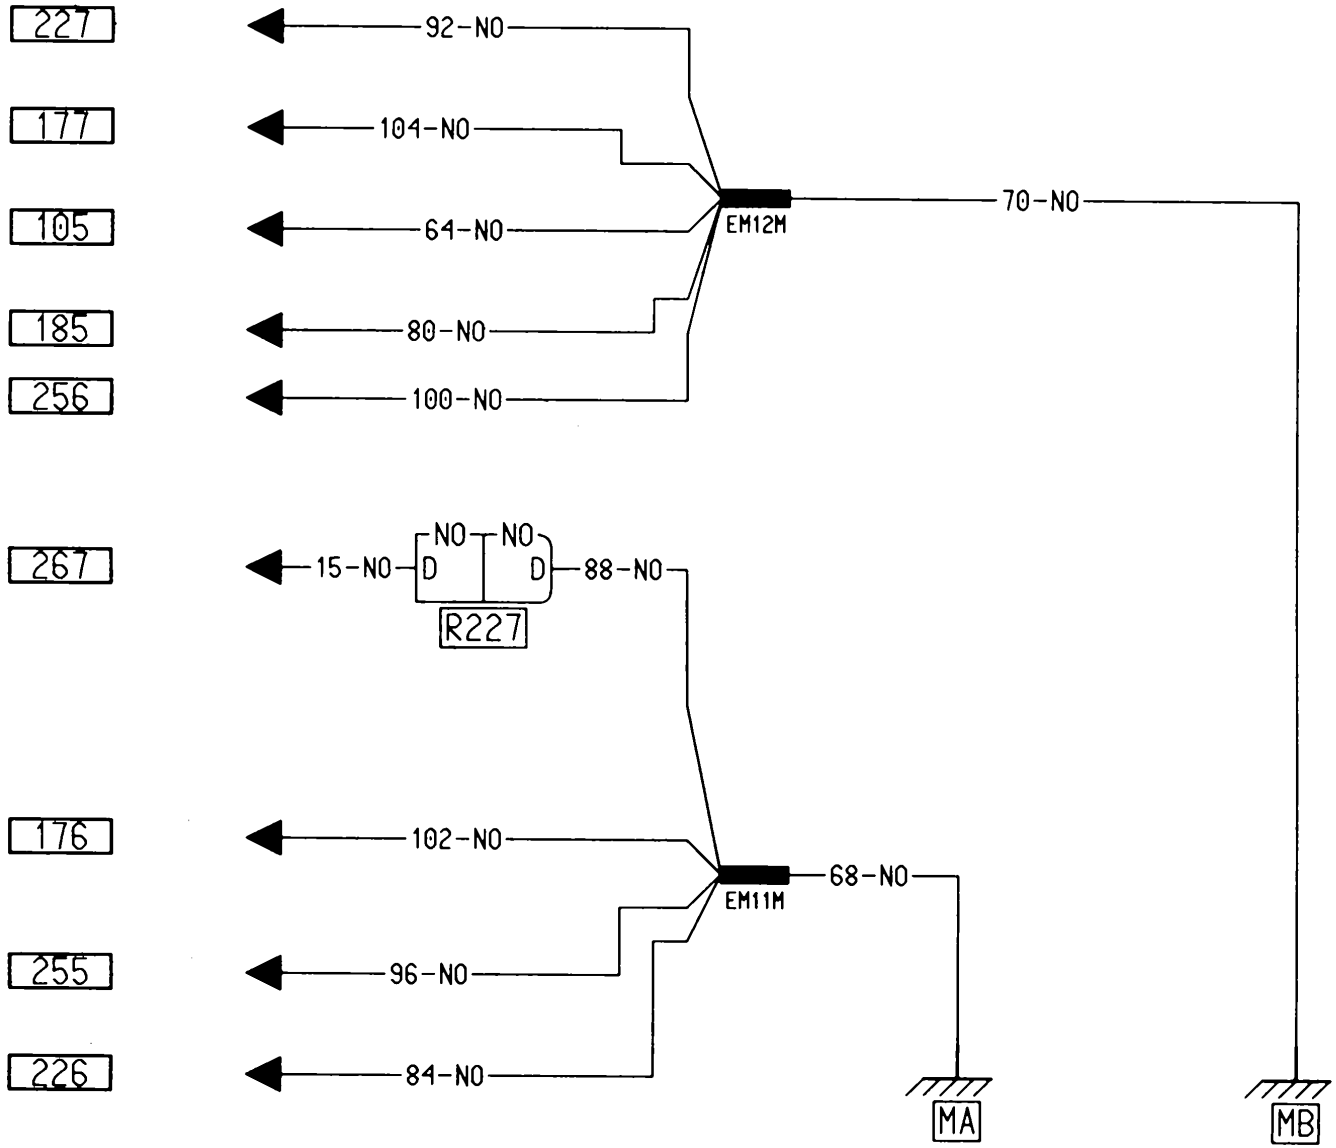
227
177
105
185
256
92-NO
104-NO
64-NO
80-NO
100-NO
EM12M
70-NO
267
15-NO
NO
NO
D
D
88-NO
R227
176
255
226
102-NO
96-NO
84-NO
EM11M
68-NO
MA
MB

EARTH

K25


X642

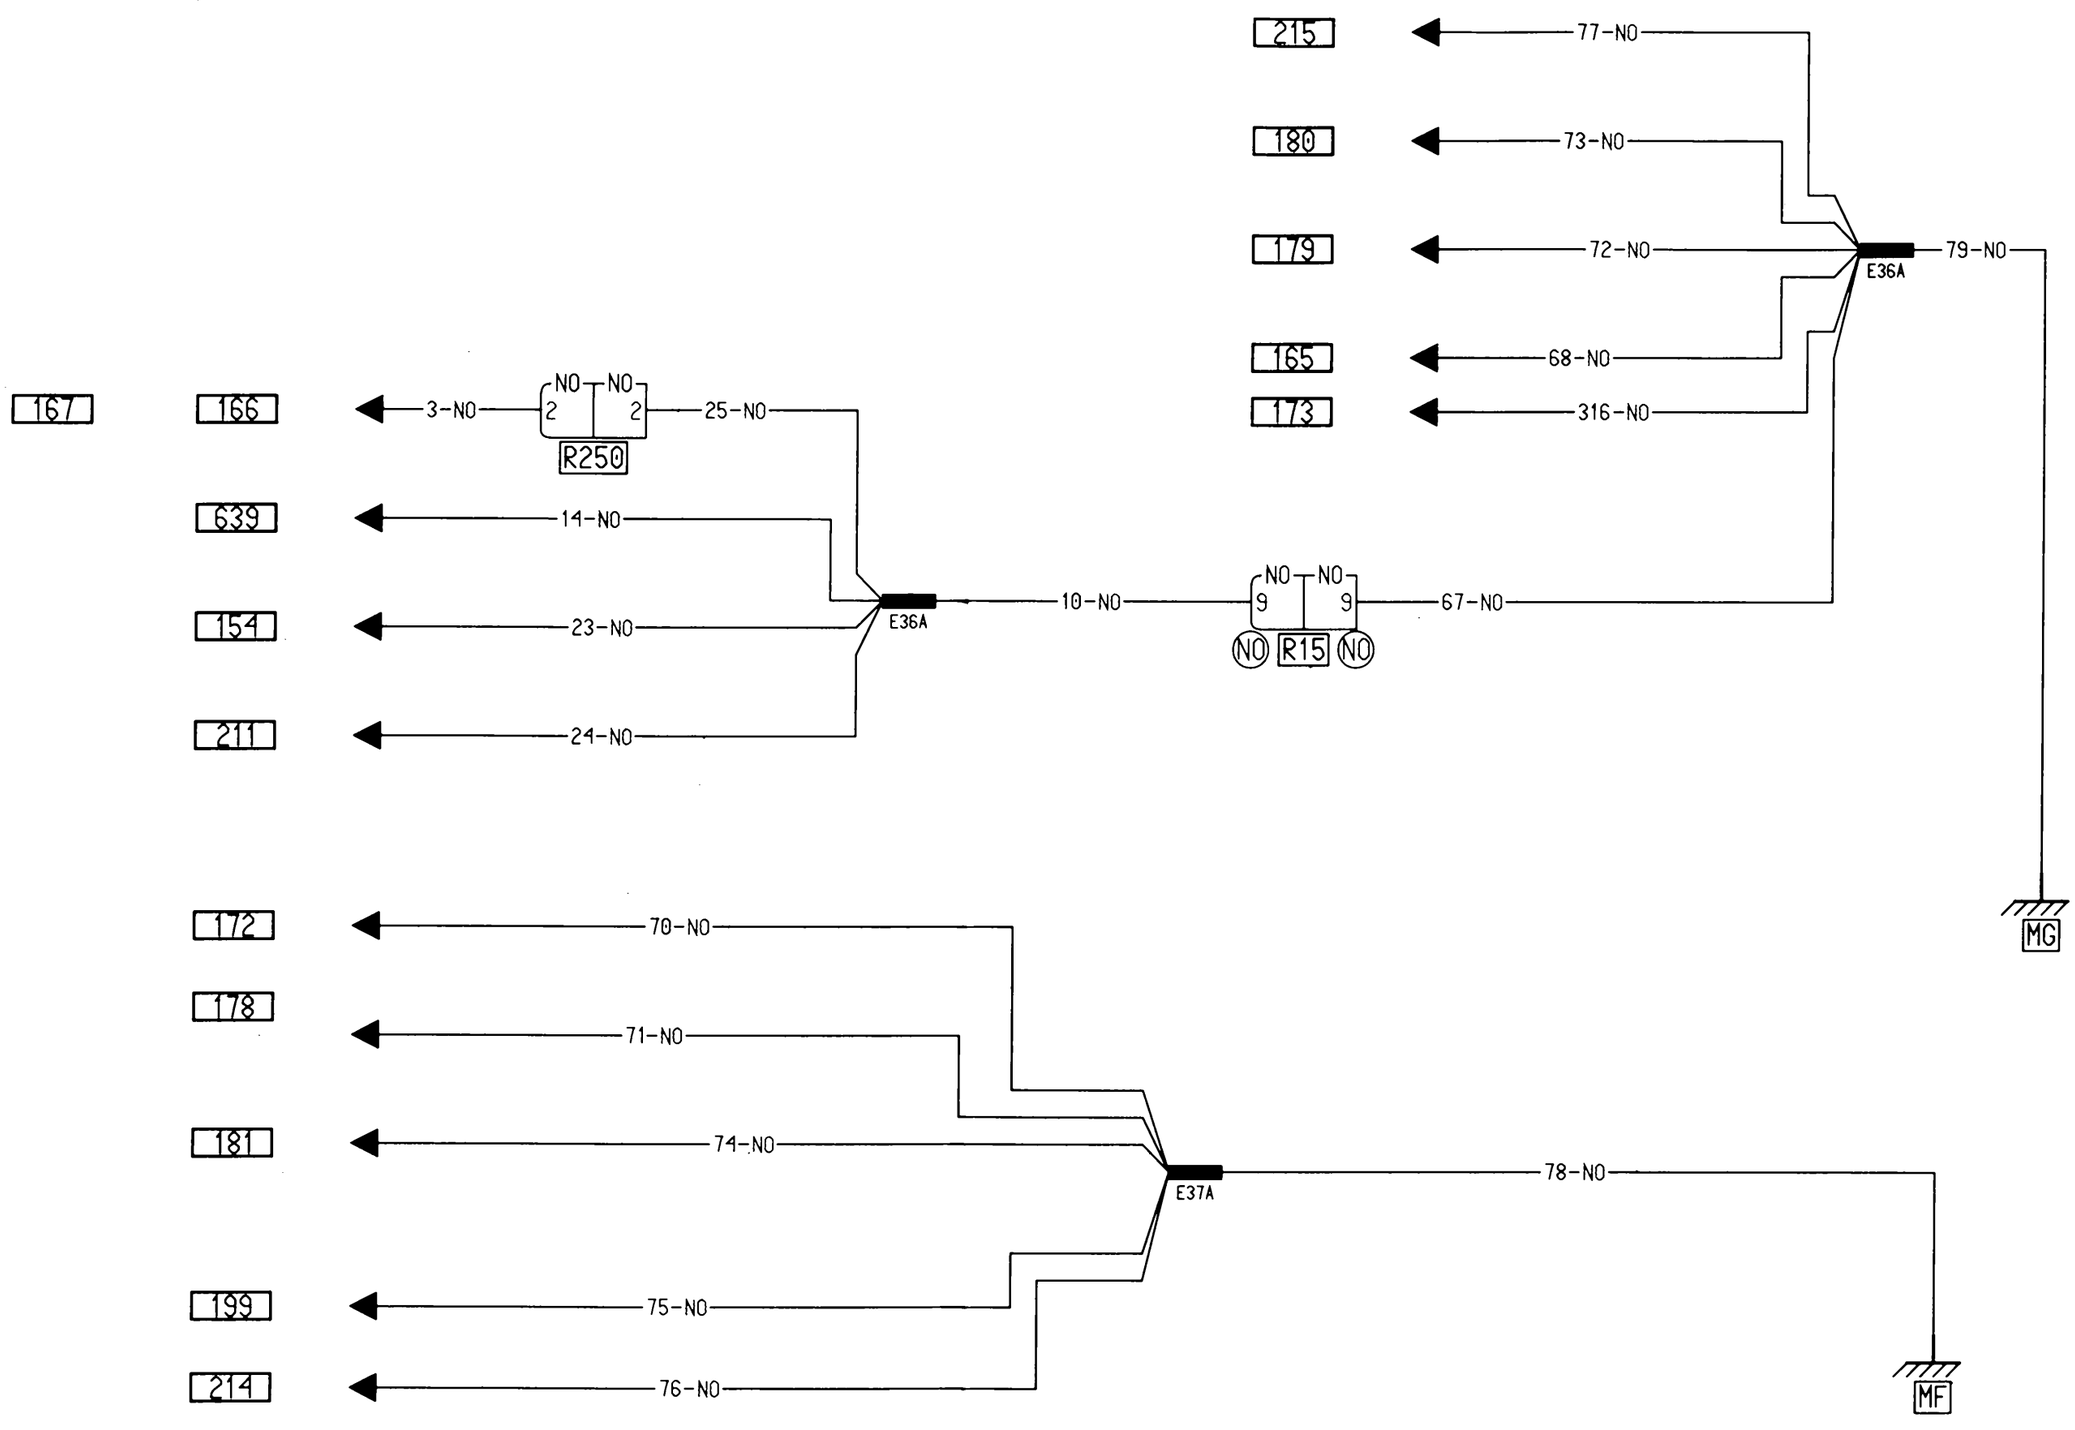

EARTH

B64,D64,E64,K25,L64


X642
00

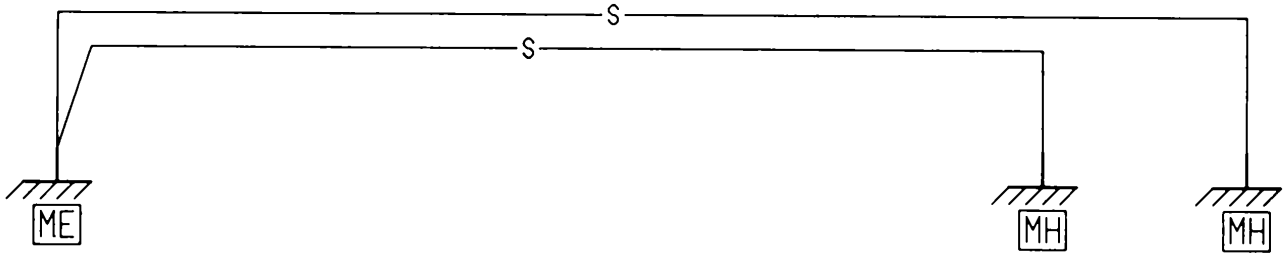

EARTH

F4P722,K4J750/CA/BVM5

X642
00

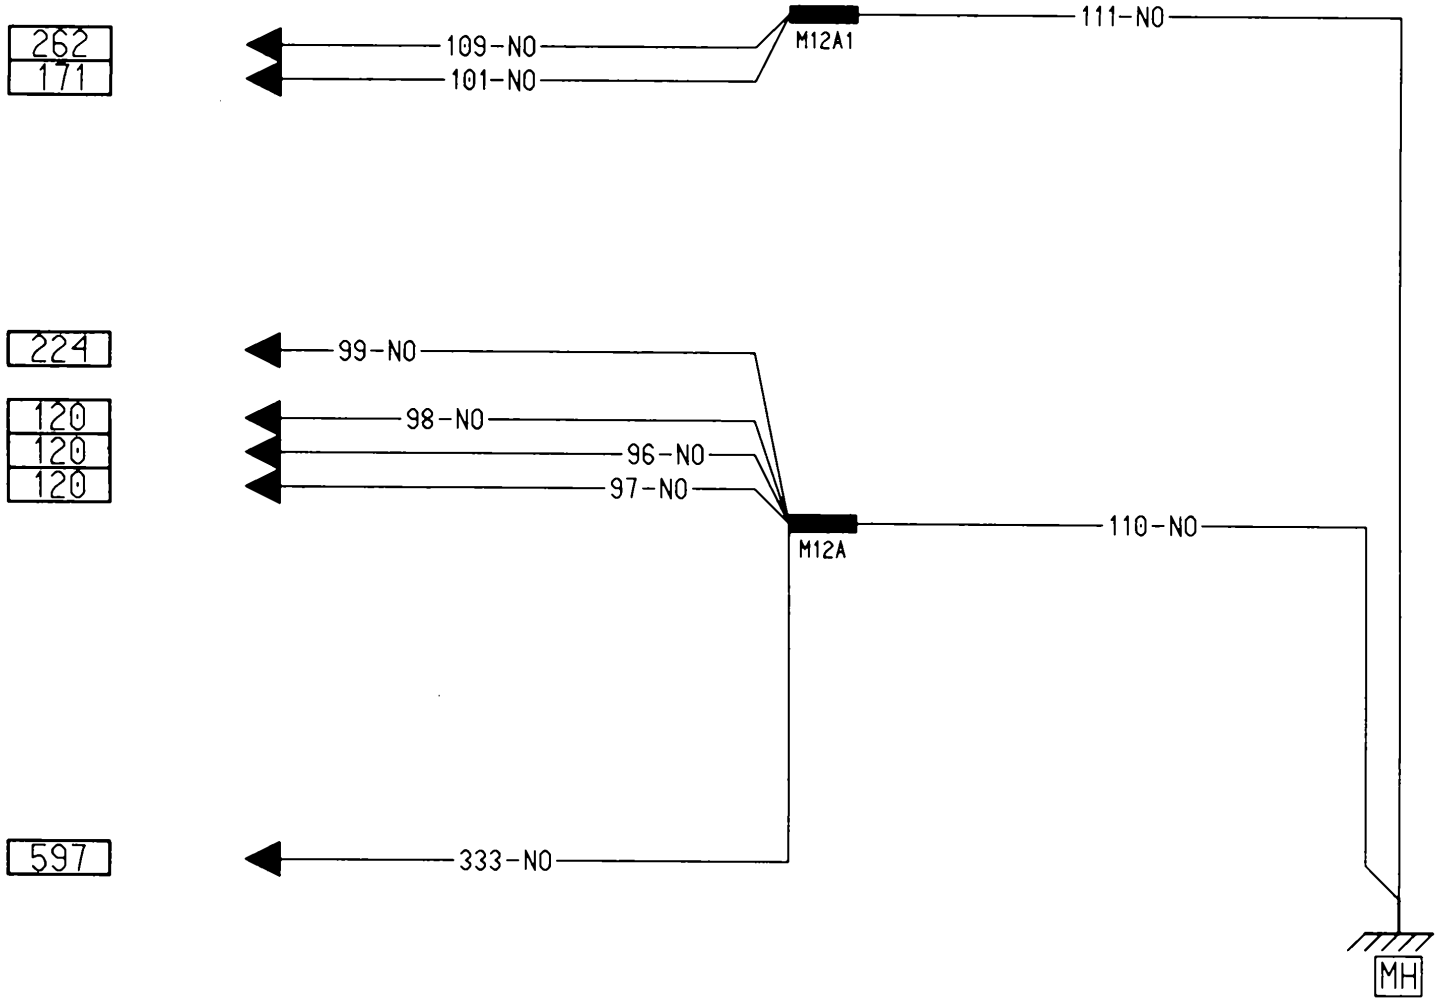

653
210
168
760
537 225
538 562
101
495
615
616

6-NO
167-NO
155-NO
231-NO
229-NO
240-NO
153-NO
96-NO
122-NO

EPDB39A

134
239
734
532
268
241
209
231
751
739
219

290-NO
288-NO
292-NO
882-NO
935-NO
939-NO
287-NO
642-NO

EPDB18A

296-NO

220-NO

329-NO

EPDB21

133 212
645
320
320
240
496

772-NO
613-NO
536-NO
535-NO
328-NO
803-NO


760
207
675
290
288
753
125
125
123
123
319
265
213


310-NO
397-NO
984-NO
985-NO
898-NO
312-NO
639-NO
321-NO
322-NO
318-NO
48-NO

EPDB20A

MJ

MK

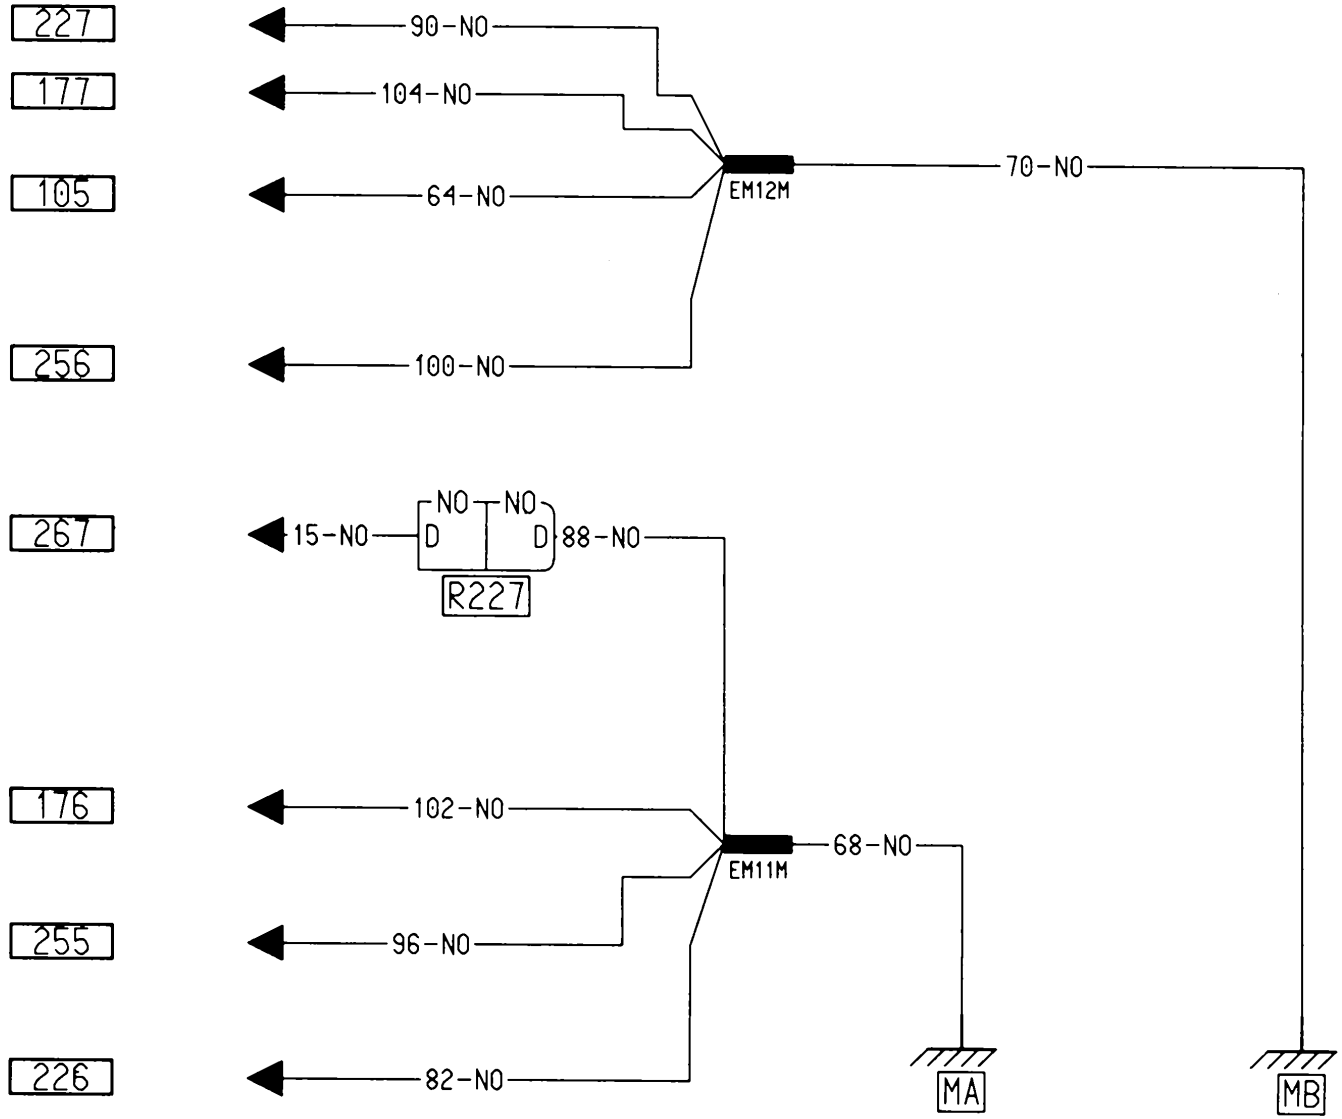

227
177
105
256
267
176
255
226
90-NO
104-NO
64-NO
100-NO
70-NO
EM12M
15-NO
NO
NO
D
D
88-NO
R227
102-NO
96-NO
82-NO
EM11M
68-NO
MA
MB

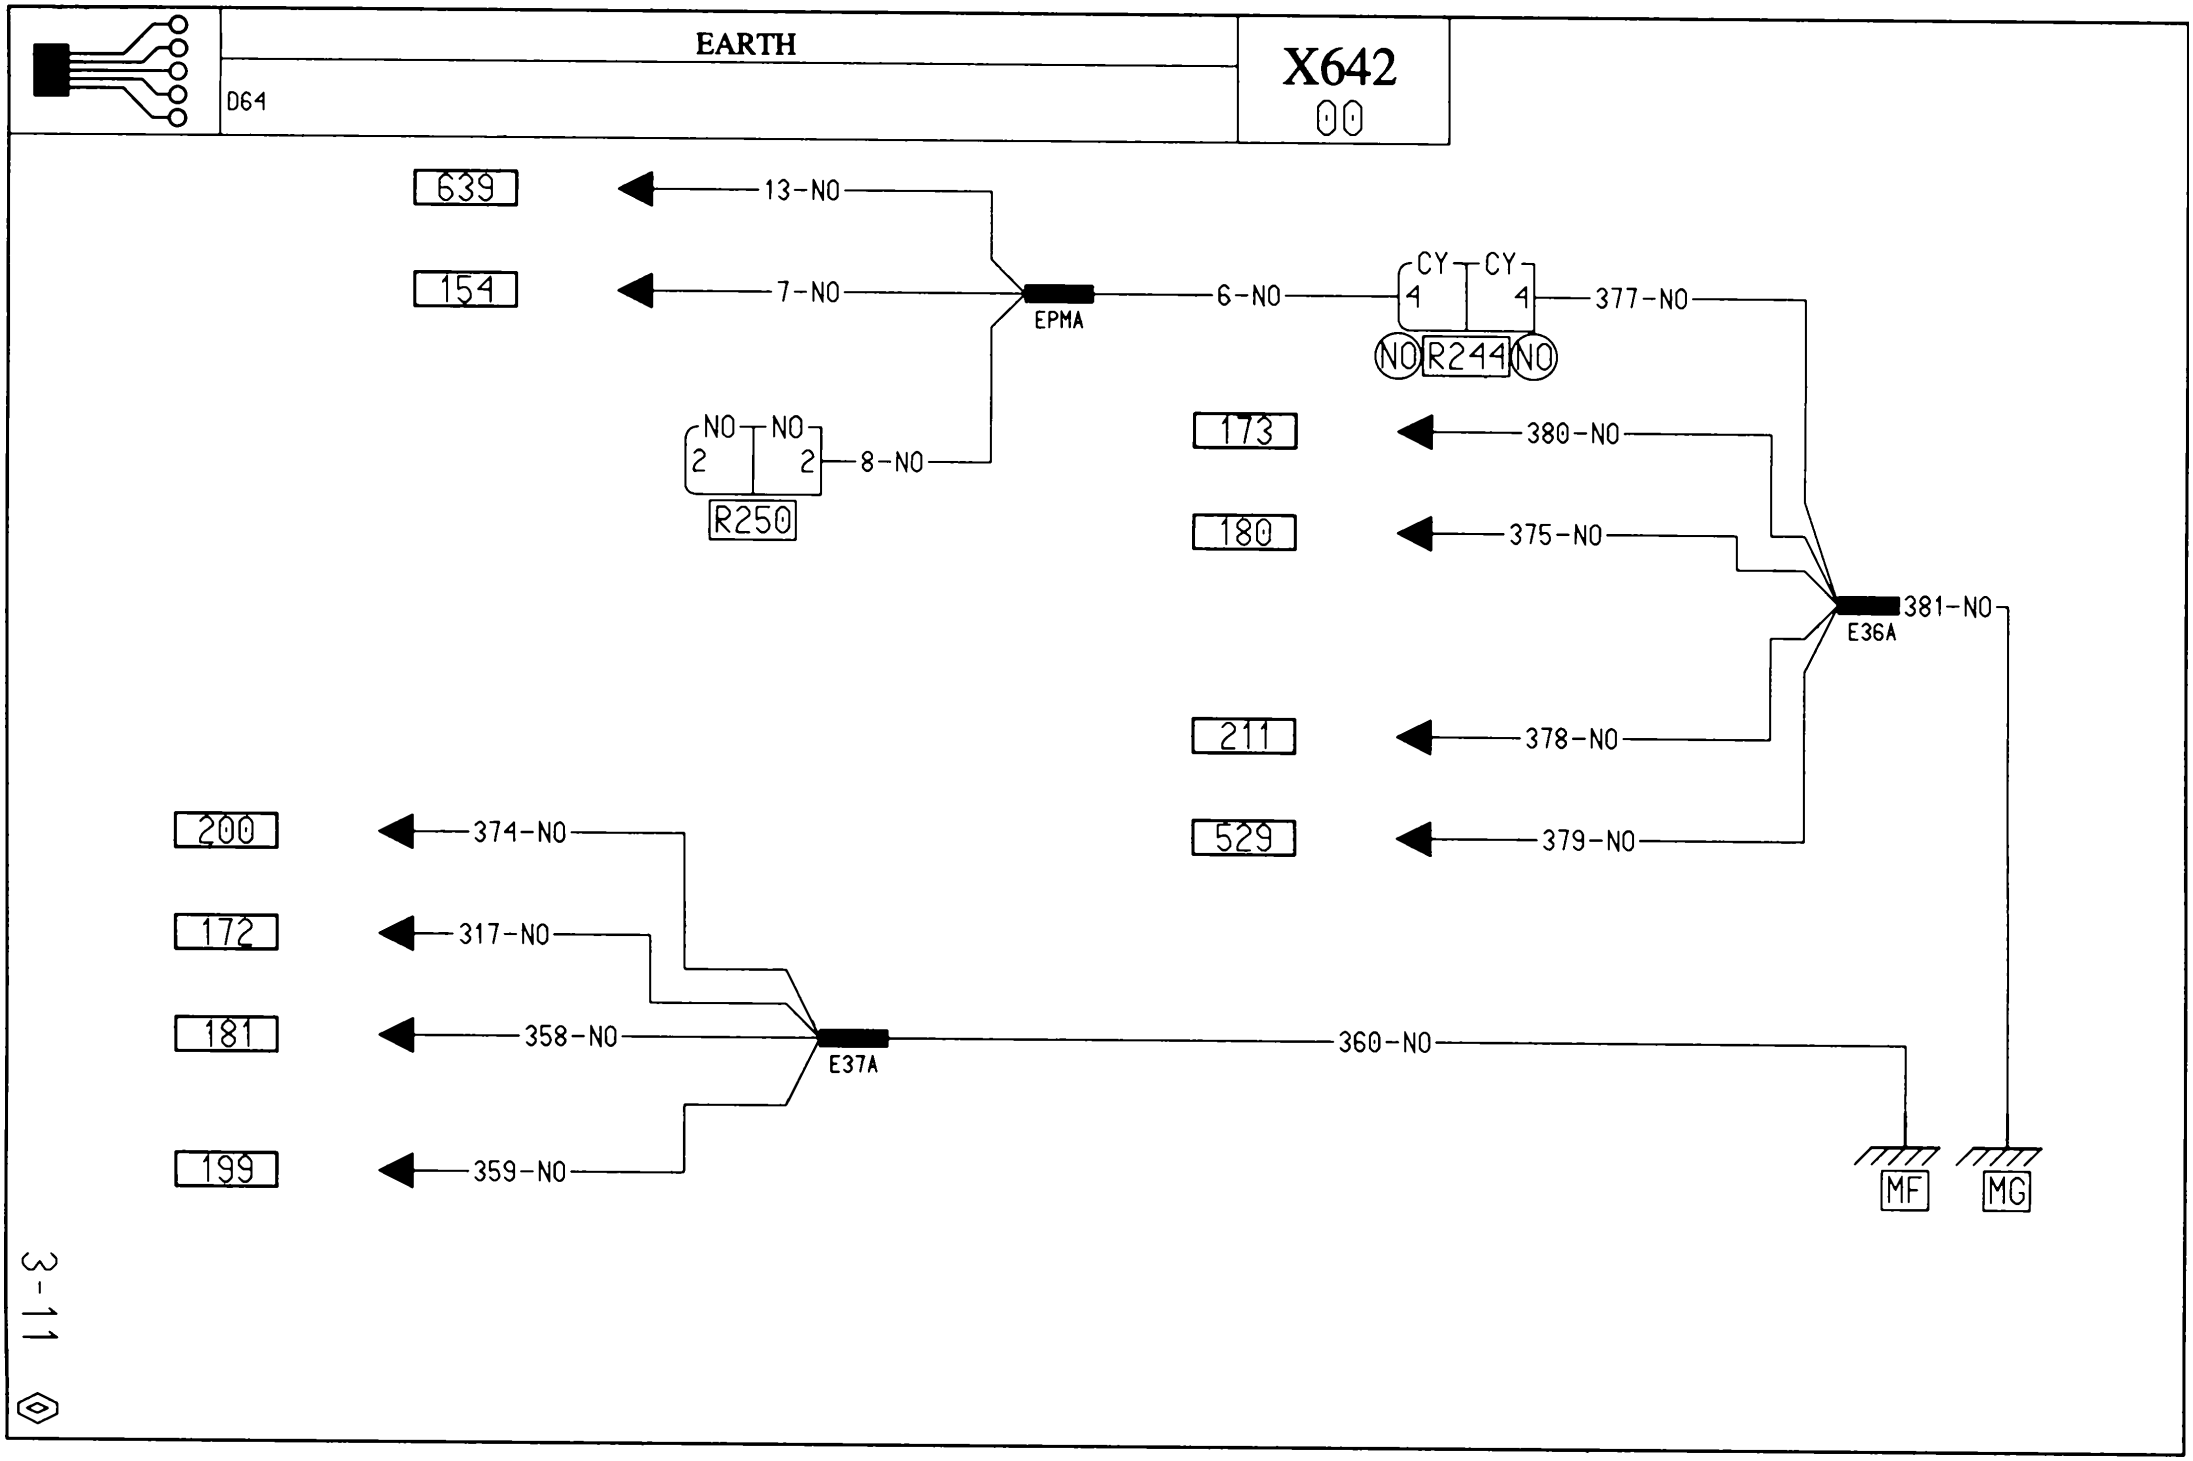

EARTH
D64
X642
00
639
13-NO
154
7-NO
EPMA
6-NO
CY 4
CY 4
377-NO
NO R244 NO
NO 2
NO 2
8-NO
R250
173
380-NO
180
375-NO
381-NO
E36A
211
378-NO
529
379-NO
200
374-NO
172
317-NO
181
358-NO
E37A
360-NO
199
359-NO
MF
MG

EARTH

F9Q733,F9Q740/CA/BVA4

X642
00

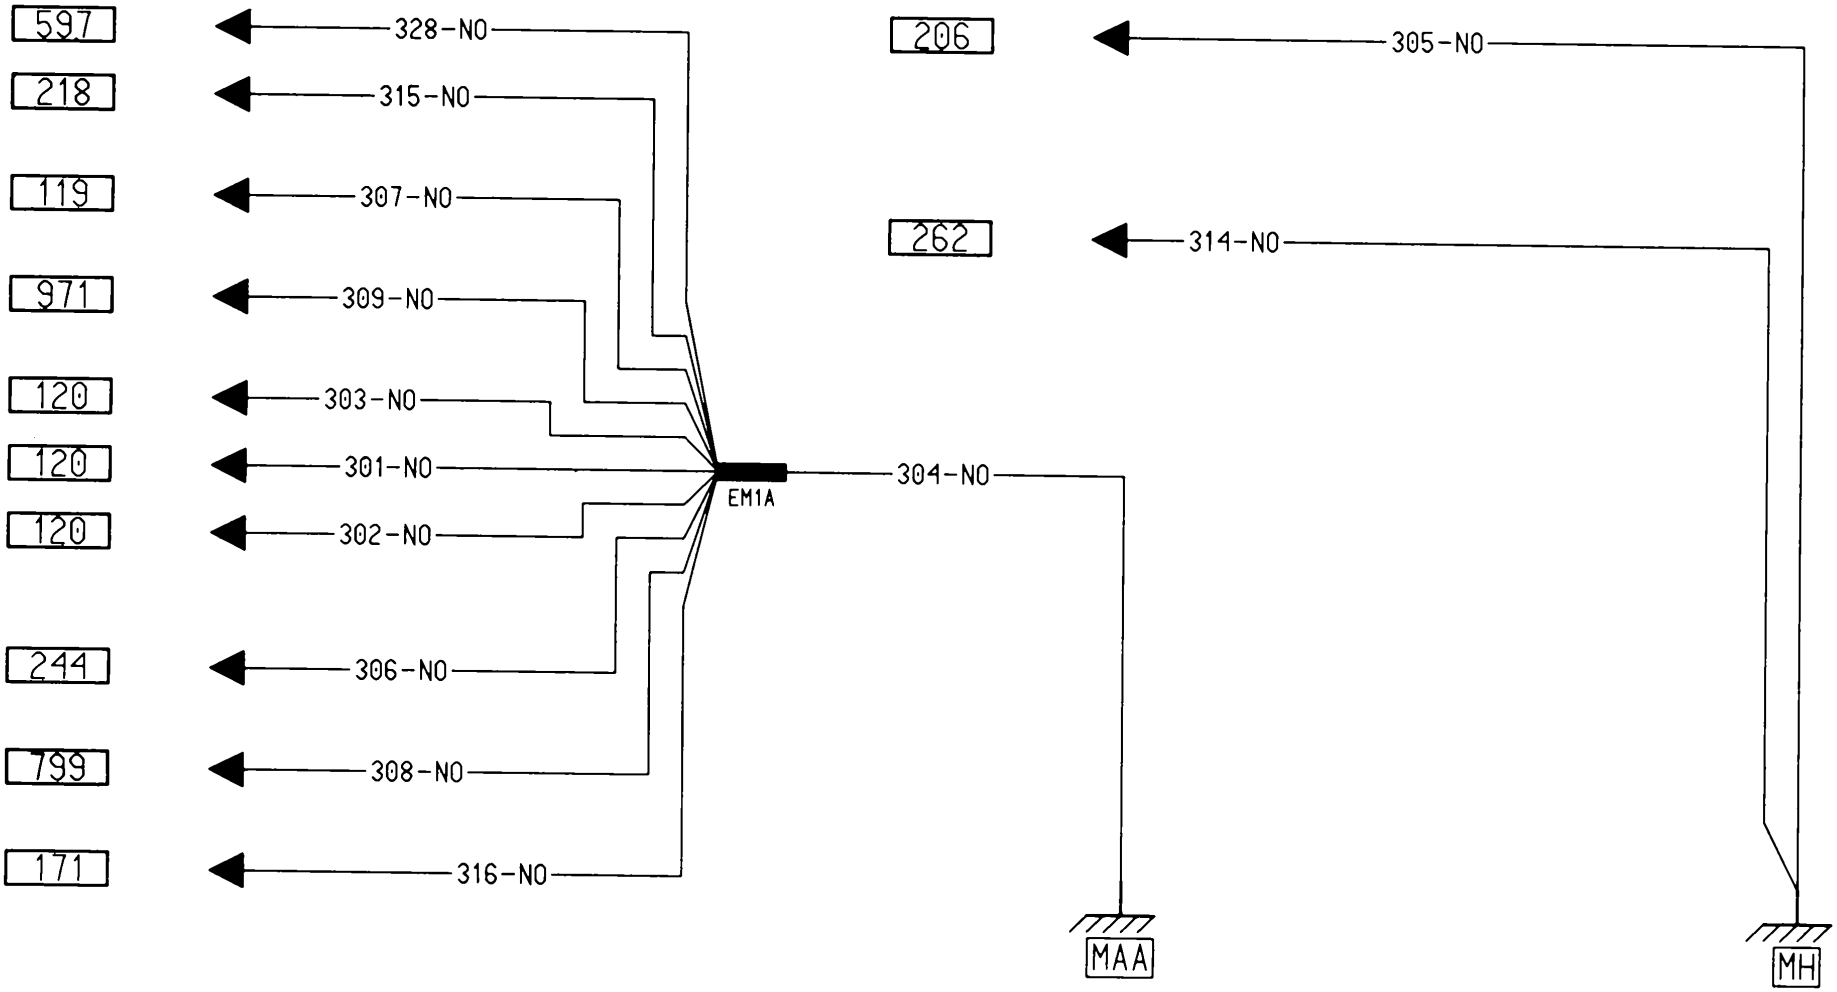

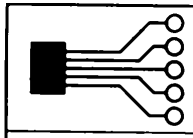



EARTH


F4P720/CA/BVM5


X642


00

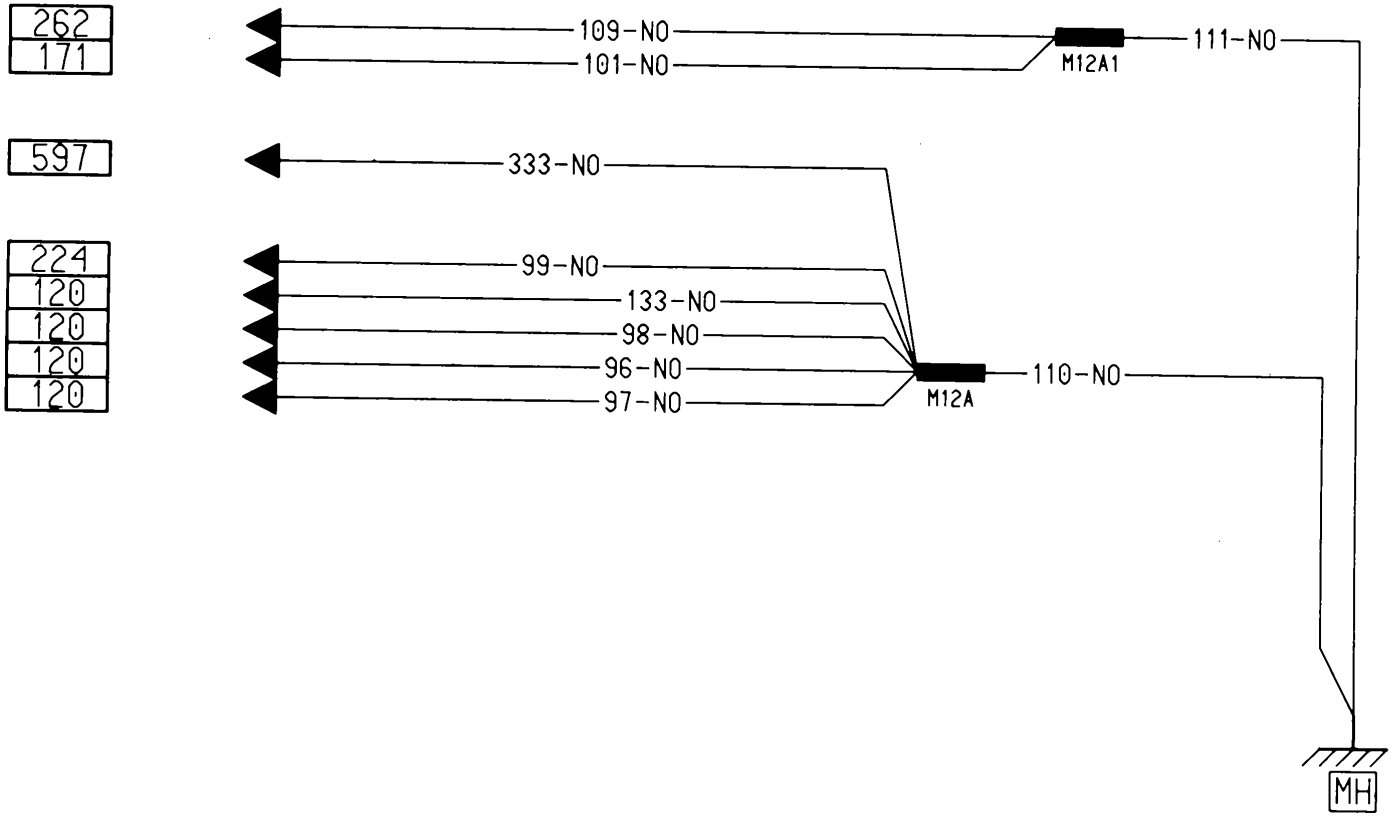

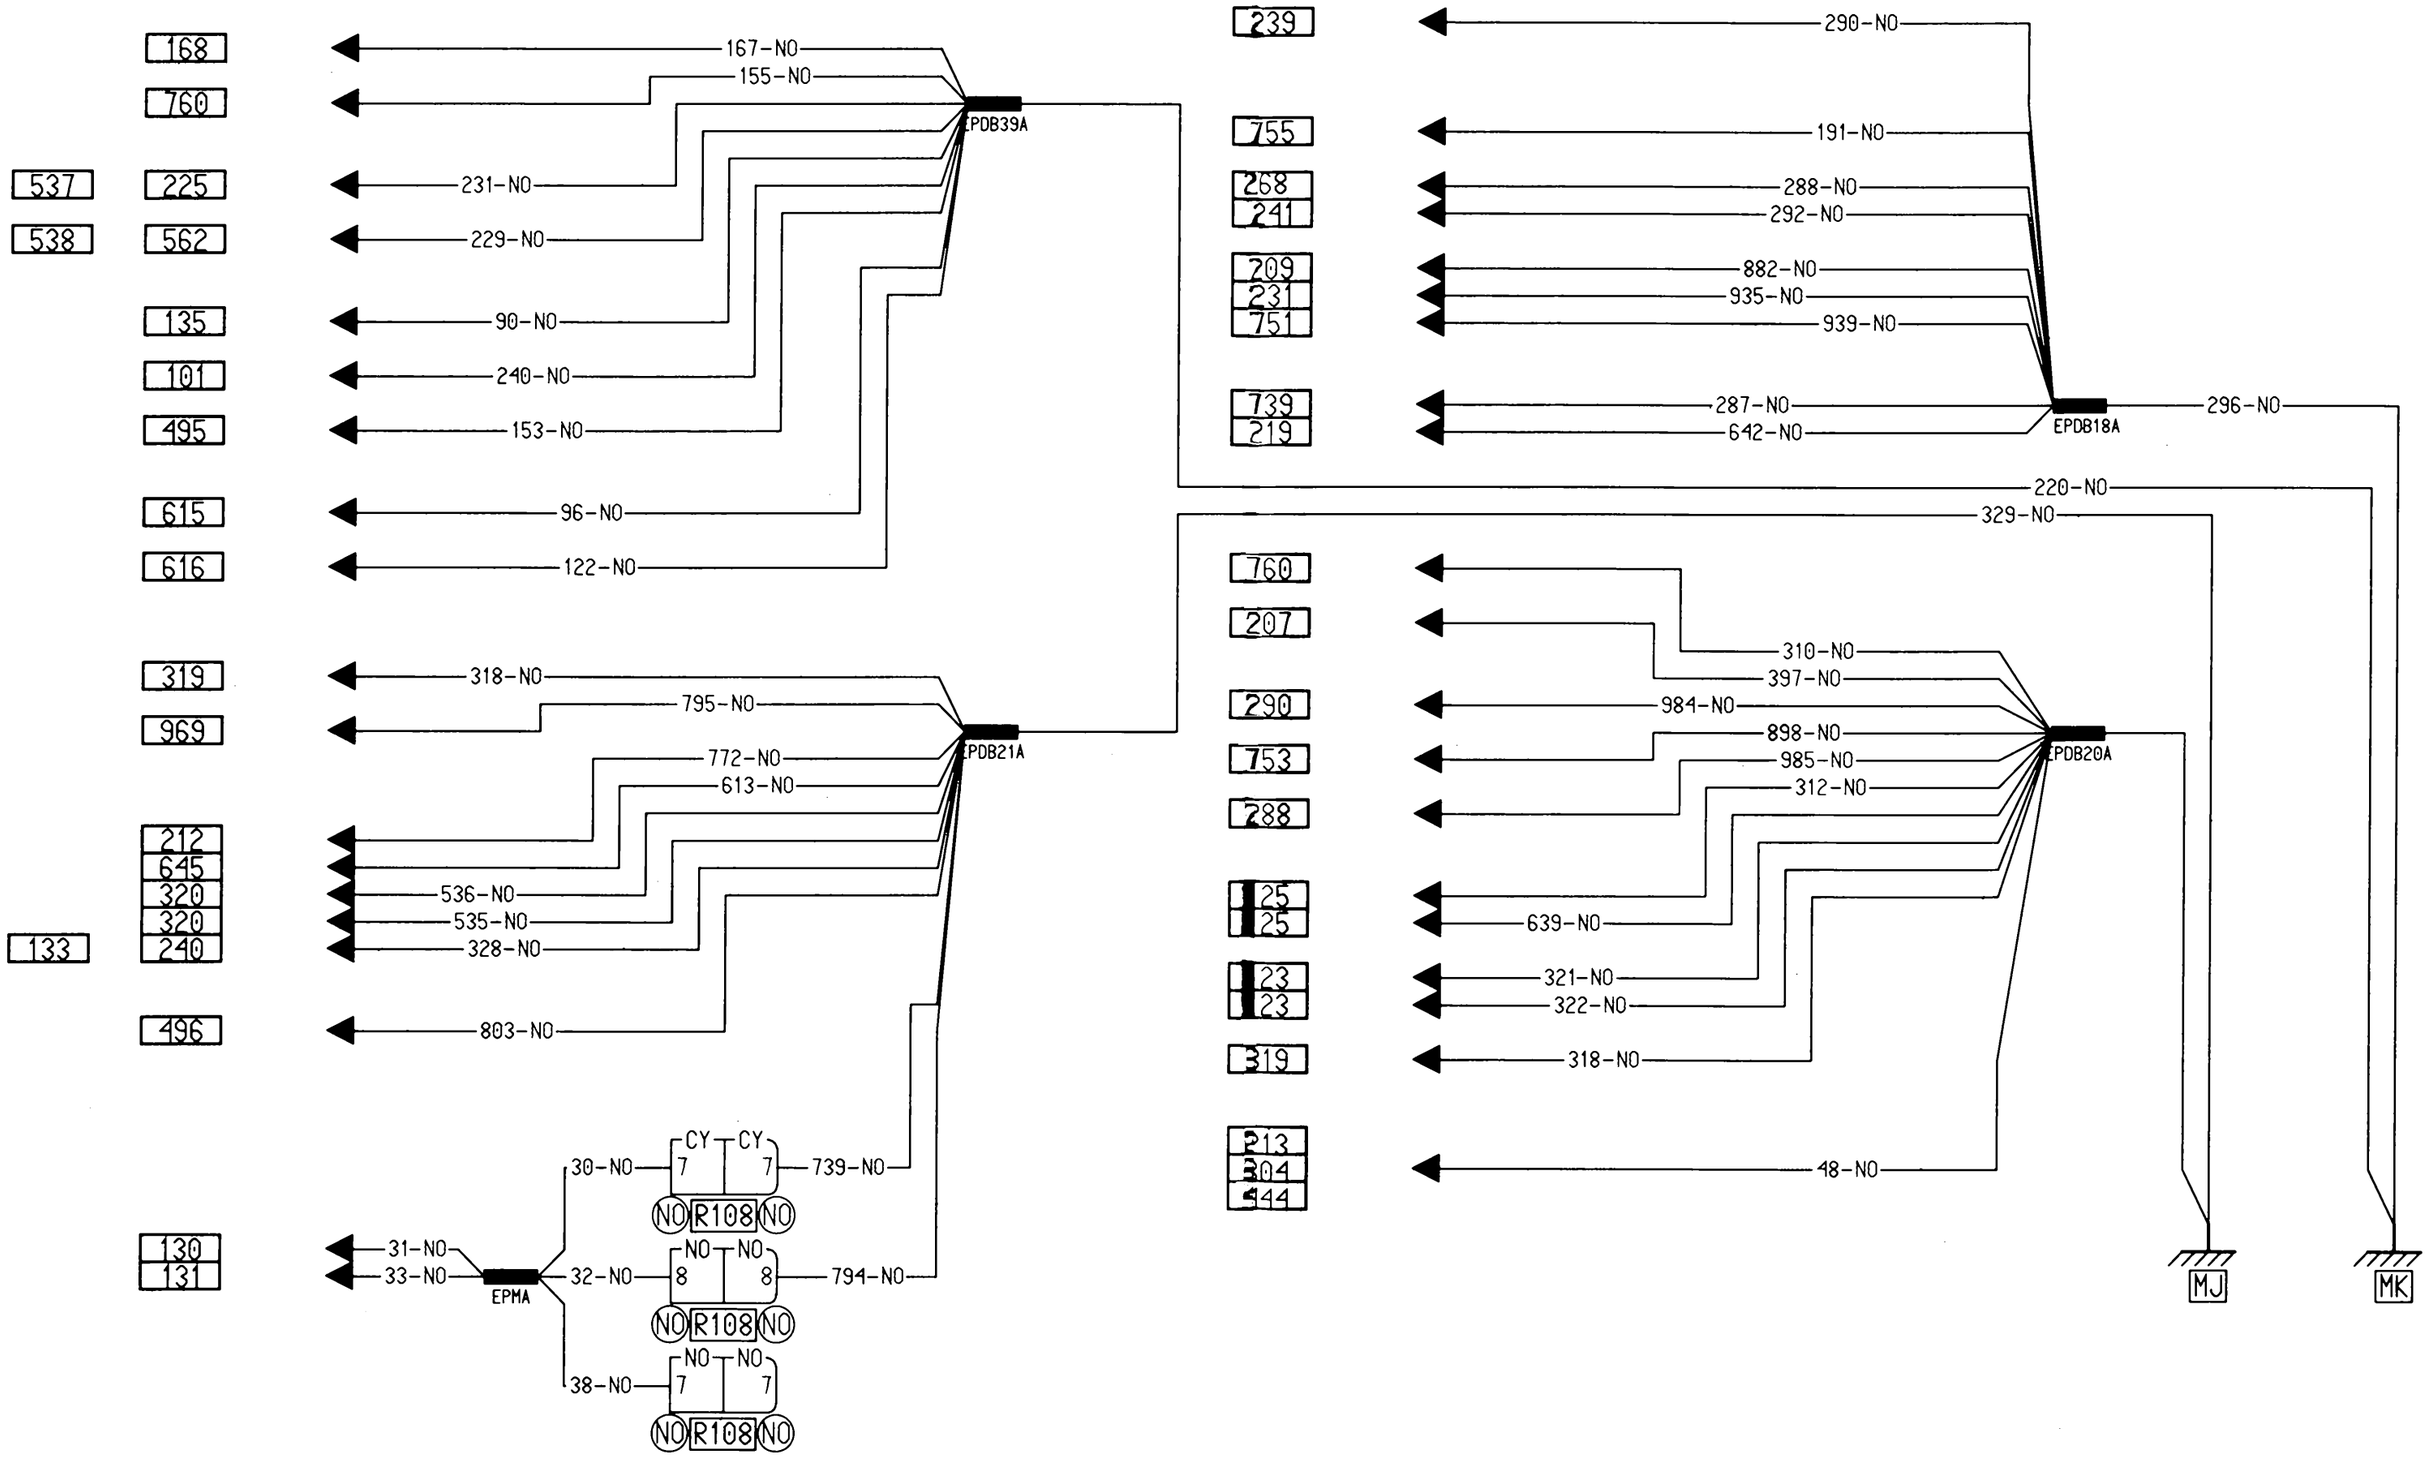
168
760
537
225
538
562
135
101
495
615
616
319
969
212
645
320
320
133
240
496
130
131
167-NO
155-NO
231-NO
229-NO
90-NO
240-NO
153-NO
96-NO
122-NO
318-NO
795-NO
772-NO
613-NO
536-NO
535-NO
328-NO
803-NO
EPDB39A
EPDB21A
EPMA
30-NO
31-NO
33-NO
32-NO
38-NO
739-NO
794-NO
CY
7
NO
R108
8
239
755
268
241
209
231
751
739
219
290-NO
191-NO
288-NO
292-NO
882-NO
935-NO
939-NO
287-NO
642-NO
296-NO
EPDB18A
220-NO
329-NO
760
207
290
753
288
125
125
123
123
319
213
304
544
310-NO
397-NO
984-NO
898-NO
985-NO
312-NO
639-NO
321-NO
322-NO
318-NO
48-NO
EPDB20A
MJ
MK

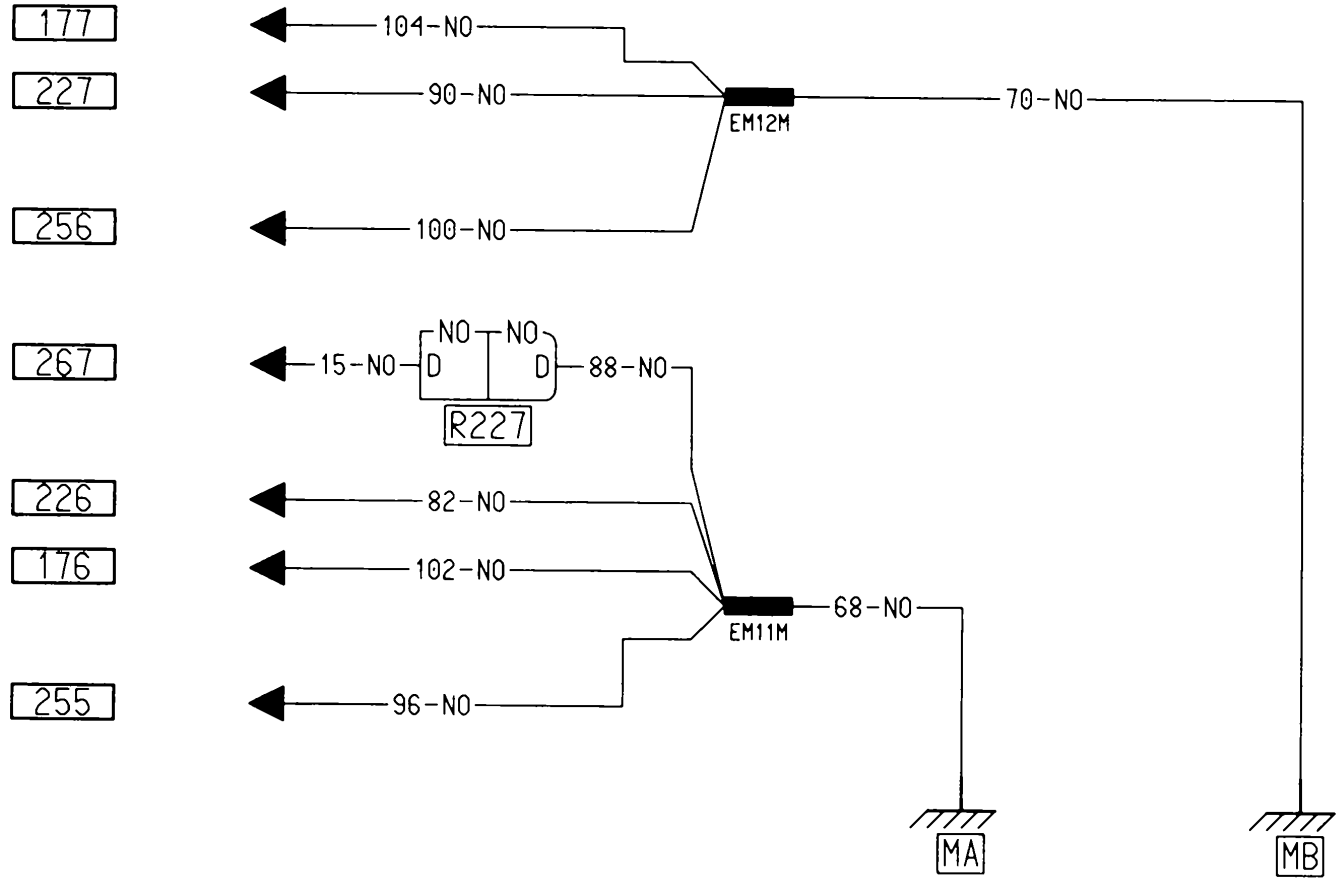
177
227
256
267
226
176
255
104-NO
90-NO
100-NO
15-NO
NO
NO
D
D
R227
88-NO
82-NO
102-NO
96-NO
EM12M
EM11M
70-NO
68-NO
MA
MB

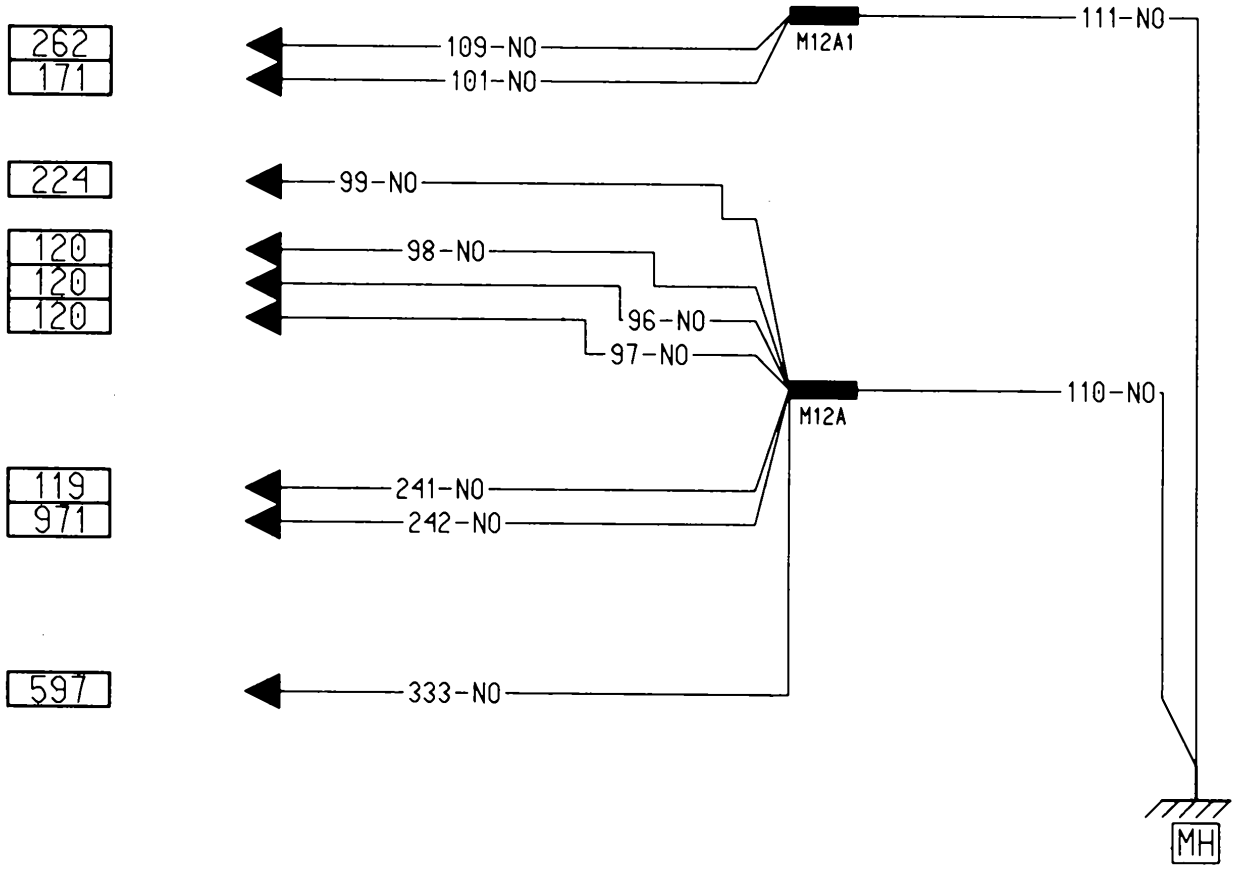
262
171
224
120
120
120
119
971
597
109-NO
101-NO
99-NO
98-NO
96-NO
97-NO
241-NO
242-NO
333-NO
M12A1
M12A
111-NO
110-NO
MH

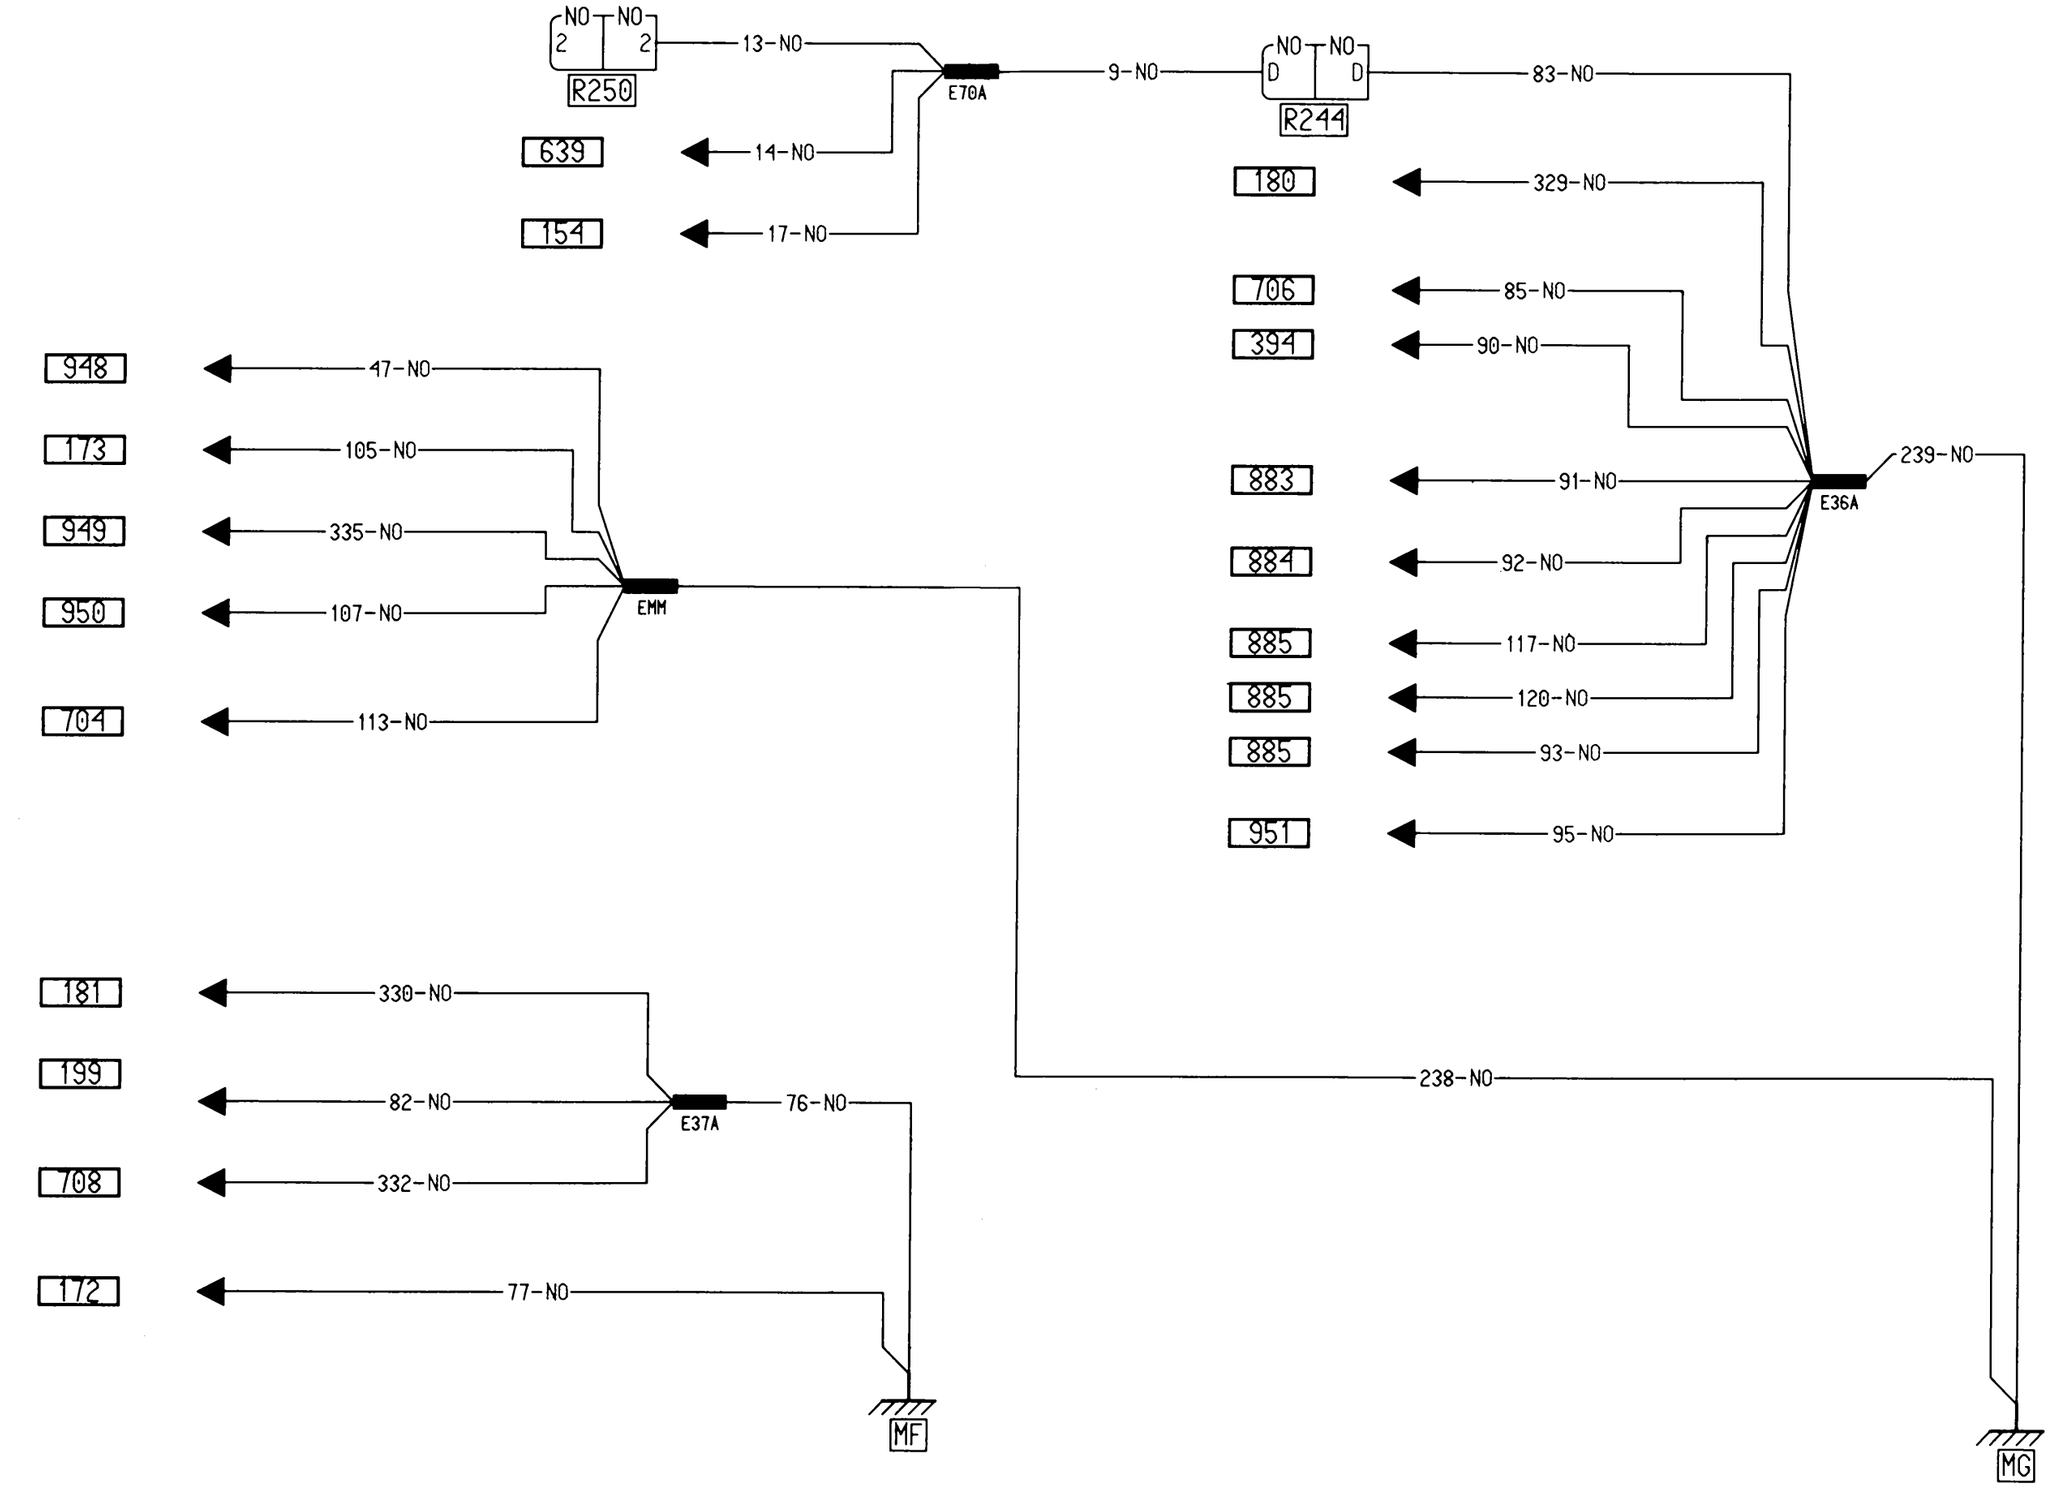
NO 2
NO 2
R250
13-NO
639
14-NO
154
17-NO
E70A
9-NO
NO D
NO D
R244
83-NO
180
329-NO
706
85-NO
394
90-NO
883
91-NO
884
92-NO
885
117-NO
885
120-NO
885
93-NO
951
95-NO
E36A
239-NO
948
47-NO
173
105-NO
949
335-NO
950
107-NO
704
113-NO
EMM
181
330-NO
199
82-NO
708
332-NO
172
77-NO
E37A
76-NO
MF
238-NO
MG

653
210
6-NO

168
760
167-NO
155-NO

225
562
537
538
231-NO
229-NO

135
101
495
98-NO
240-NO
153-NO

615
616
96-NO
122-NO

EPD839A

134
239
734
532
298-NO

268
241
288-NO
292-NO

209
231
751
882-NO
935-NO
939-NO

739
219
287-NO
642-NO

EPD818A
296-NO

220-NO
329-NO

130
131
31-NO
33-NO
EPMA
30-NO
32-NO
38-NO
CY 7 7 CY
NO R108 NO
NO 8 8 NO
NO 7 7 NO
739-NO
794-NO

EPD821A

212
645
320
328
240
133
772-NO
613-NO
536-NO
535-NO
328-NO

496
803-NO

944

213

760
207
675
298
753
288
310-NO
397-NO
984-NO
898-NO
985-NO

125
125
312-NO
639-NO

123
123
321-NO
322-NO

319
318-NO

265
213
304
48-NO


EPD820A


MJ
MK

EARTH

E7J626/CA/BVM5

X642
00

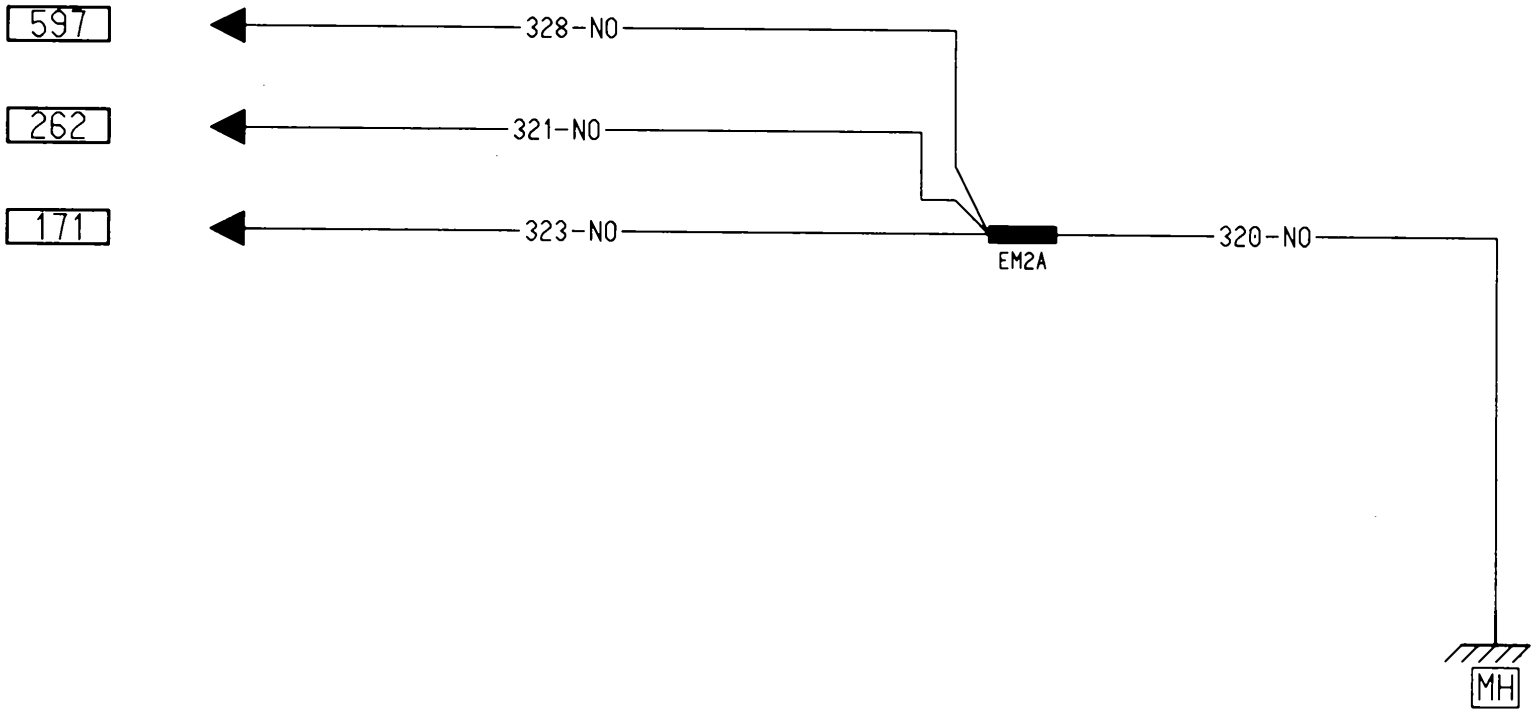


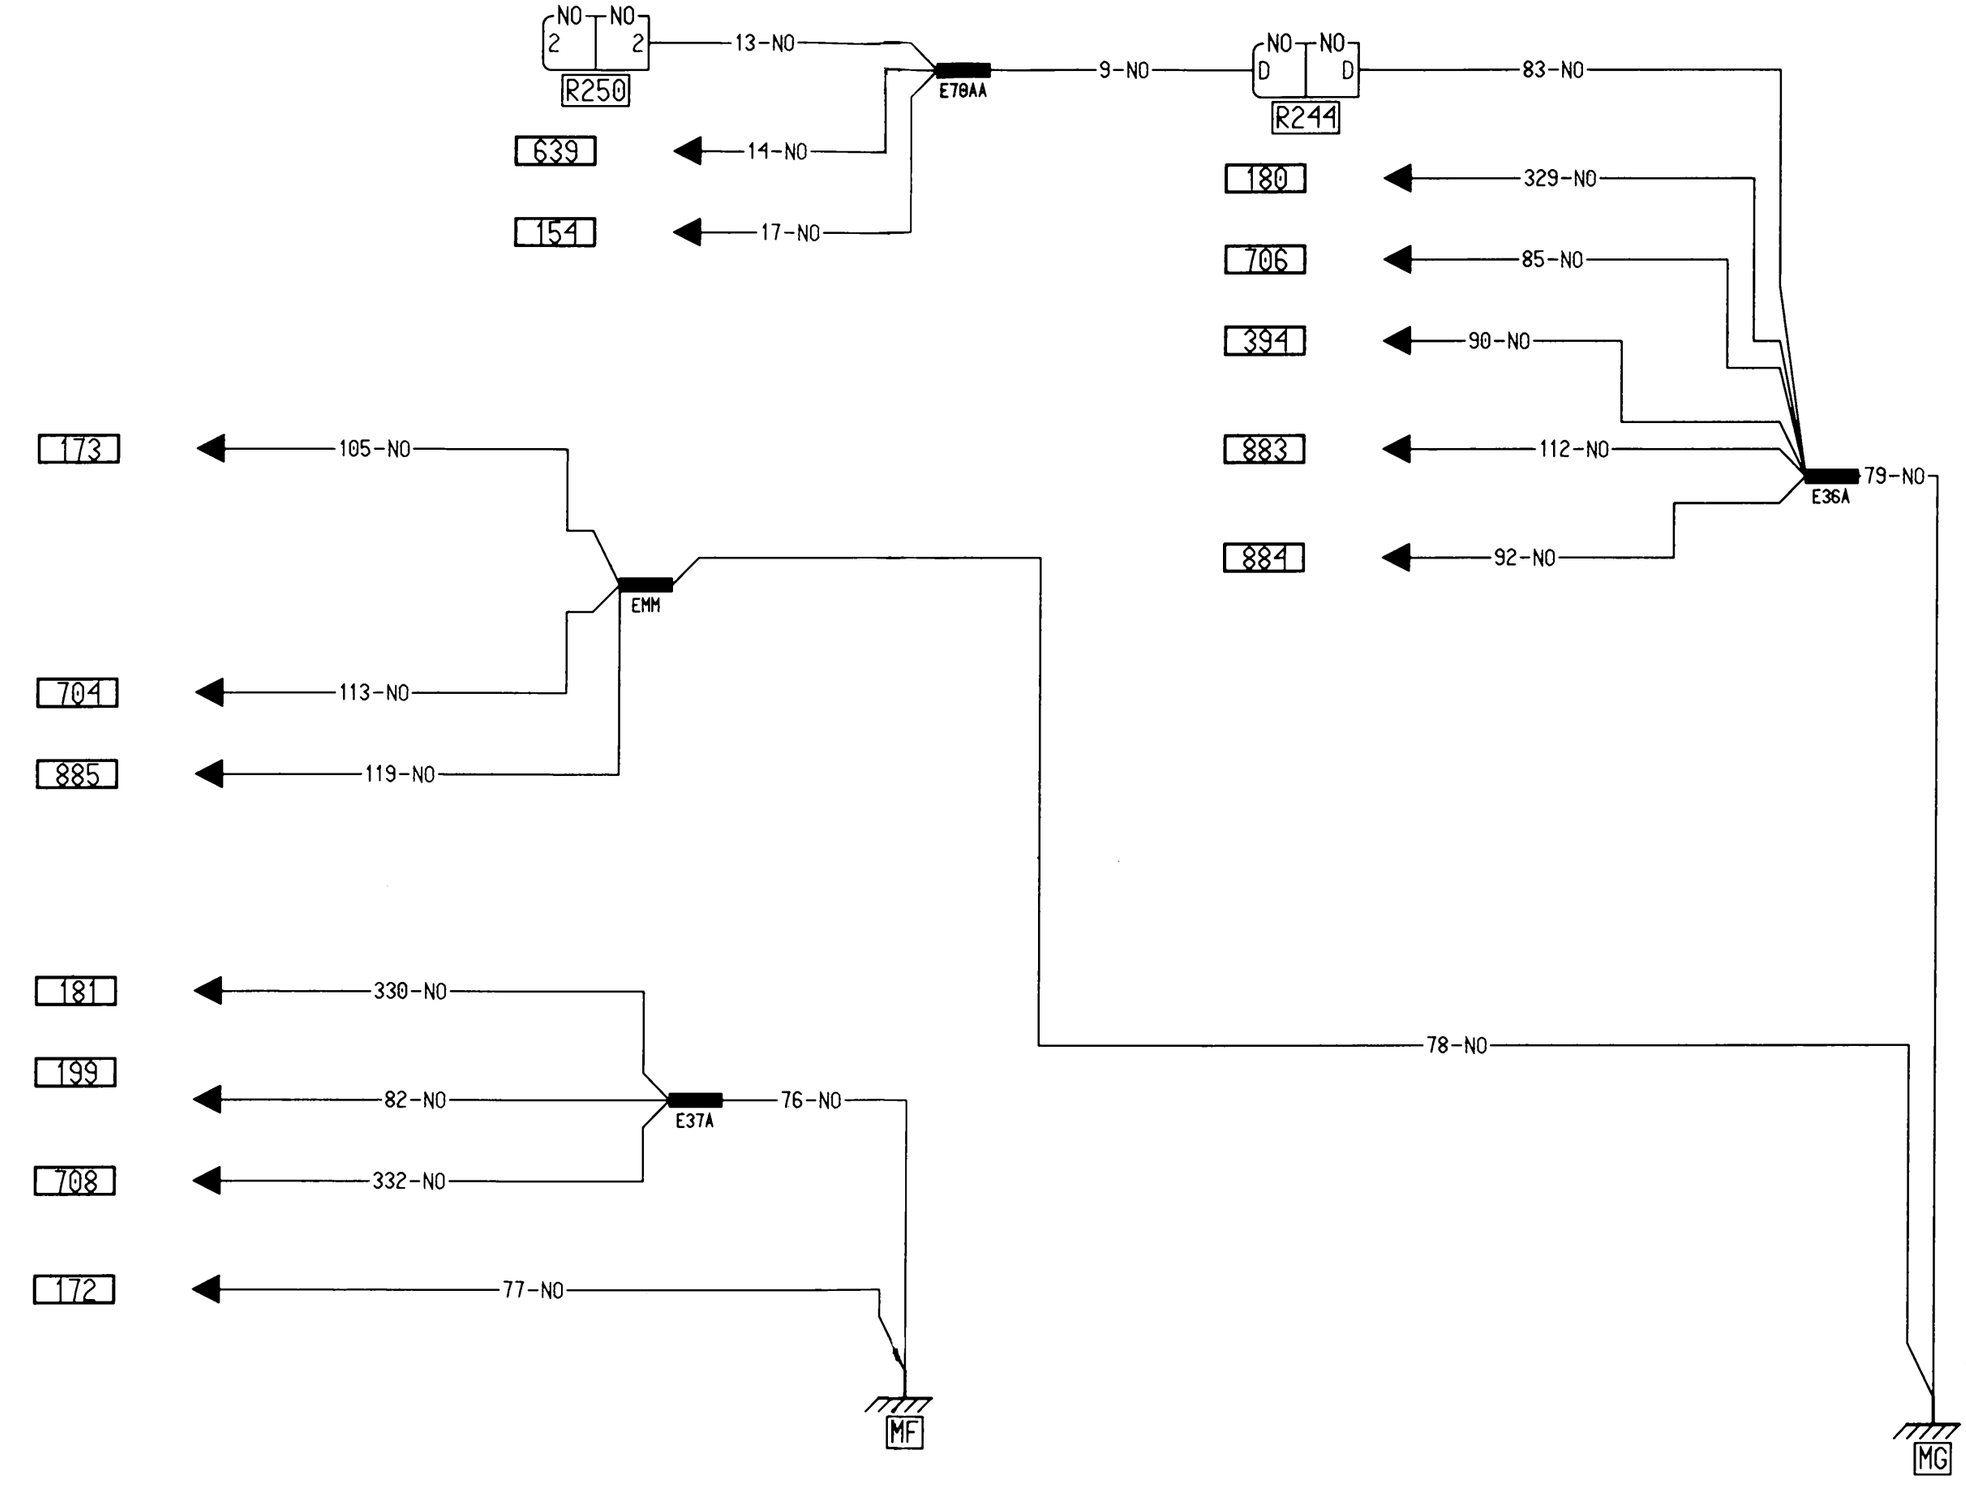
NO 2
NO 2
R250
13-NO
639
14-NO
154
17-NO
E70AA
9-NO
NO D
NO D
R244
83-NO
180
329-NO
706
85-NO
394
90-NO
883
112-NO
884
92-NO
E36A
79-NO
173
105-NO
EMM
704
113-NO
885
119-NO
181
330-NO
199
82-NO
E37A
76-NO
708
332-NO
172
77-NO
MF
78-NO
MG

EARTH

K4J714/CA/BVM5

X642
00

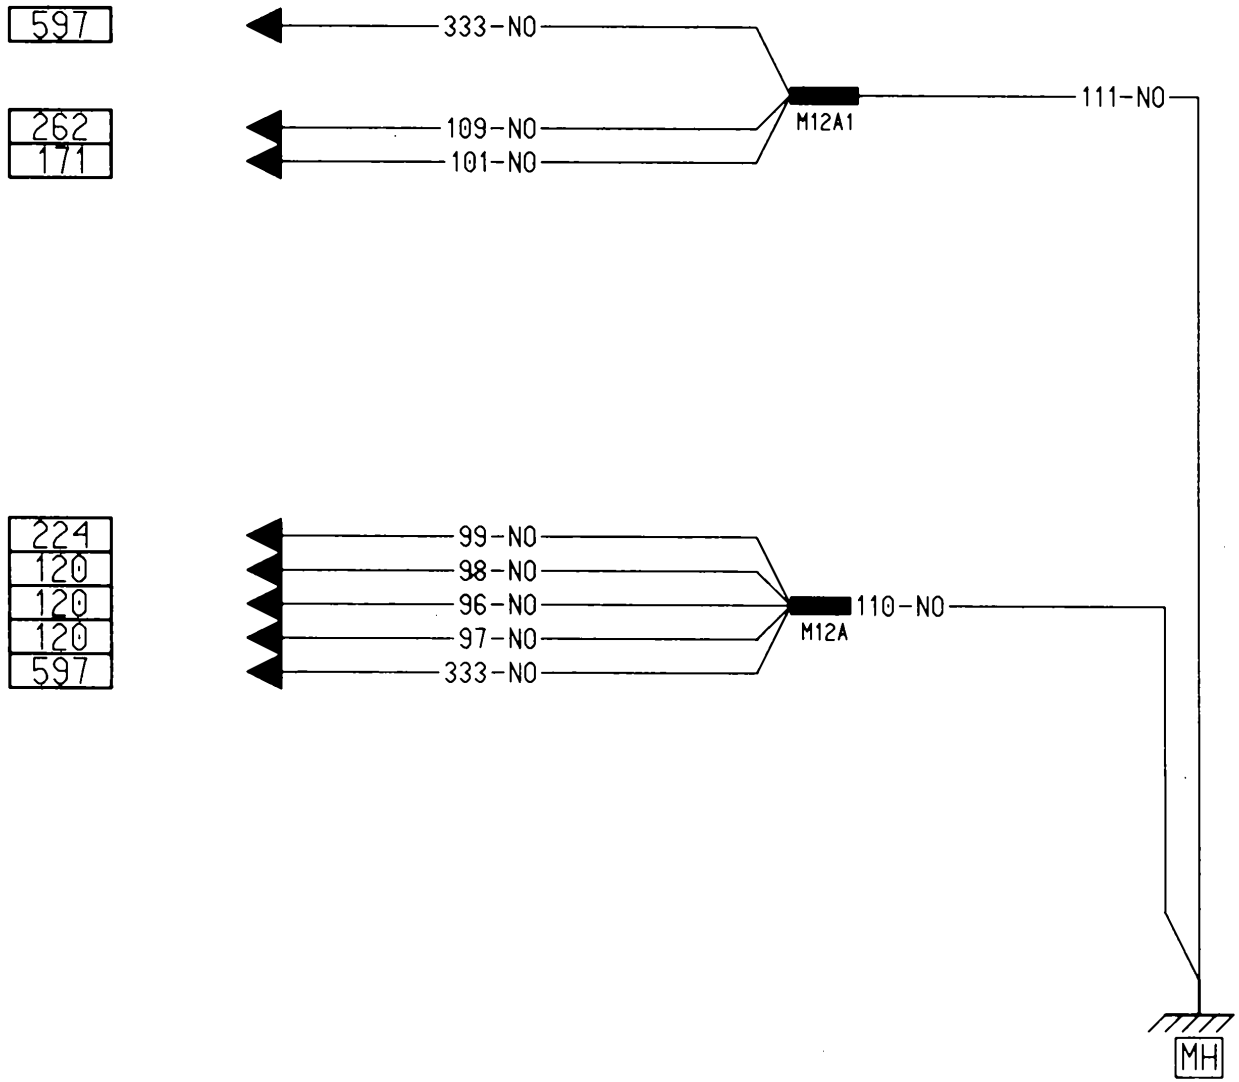



EARTH


B64/E1/DG/CA/VHECOL


X642

00

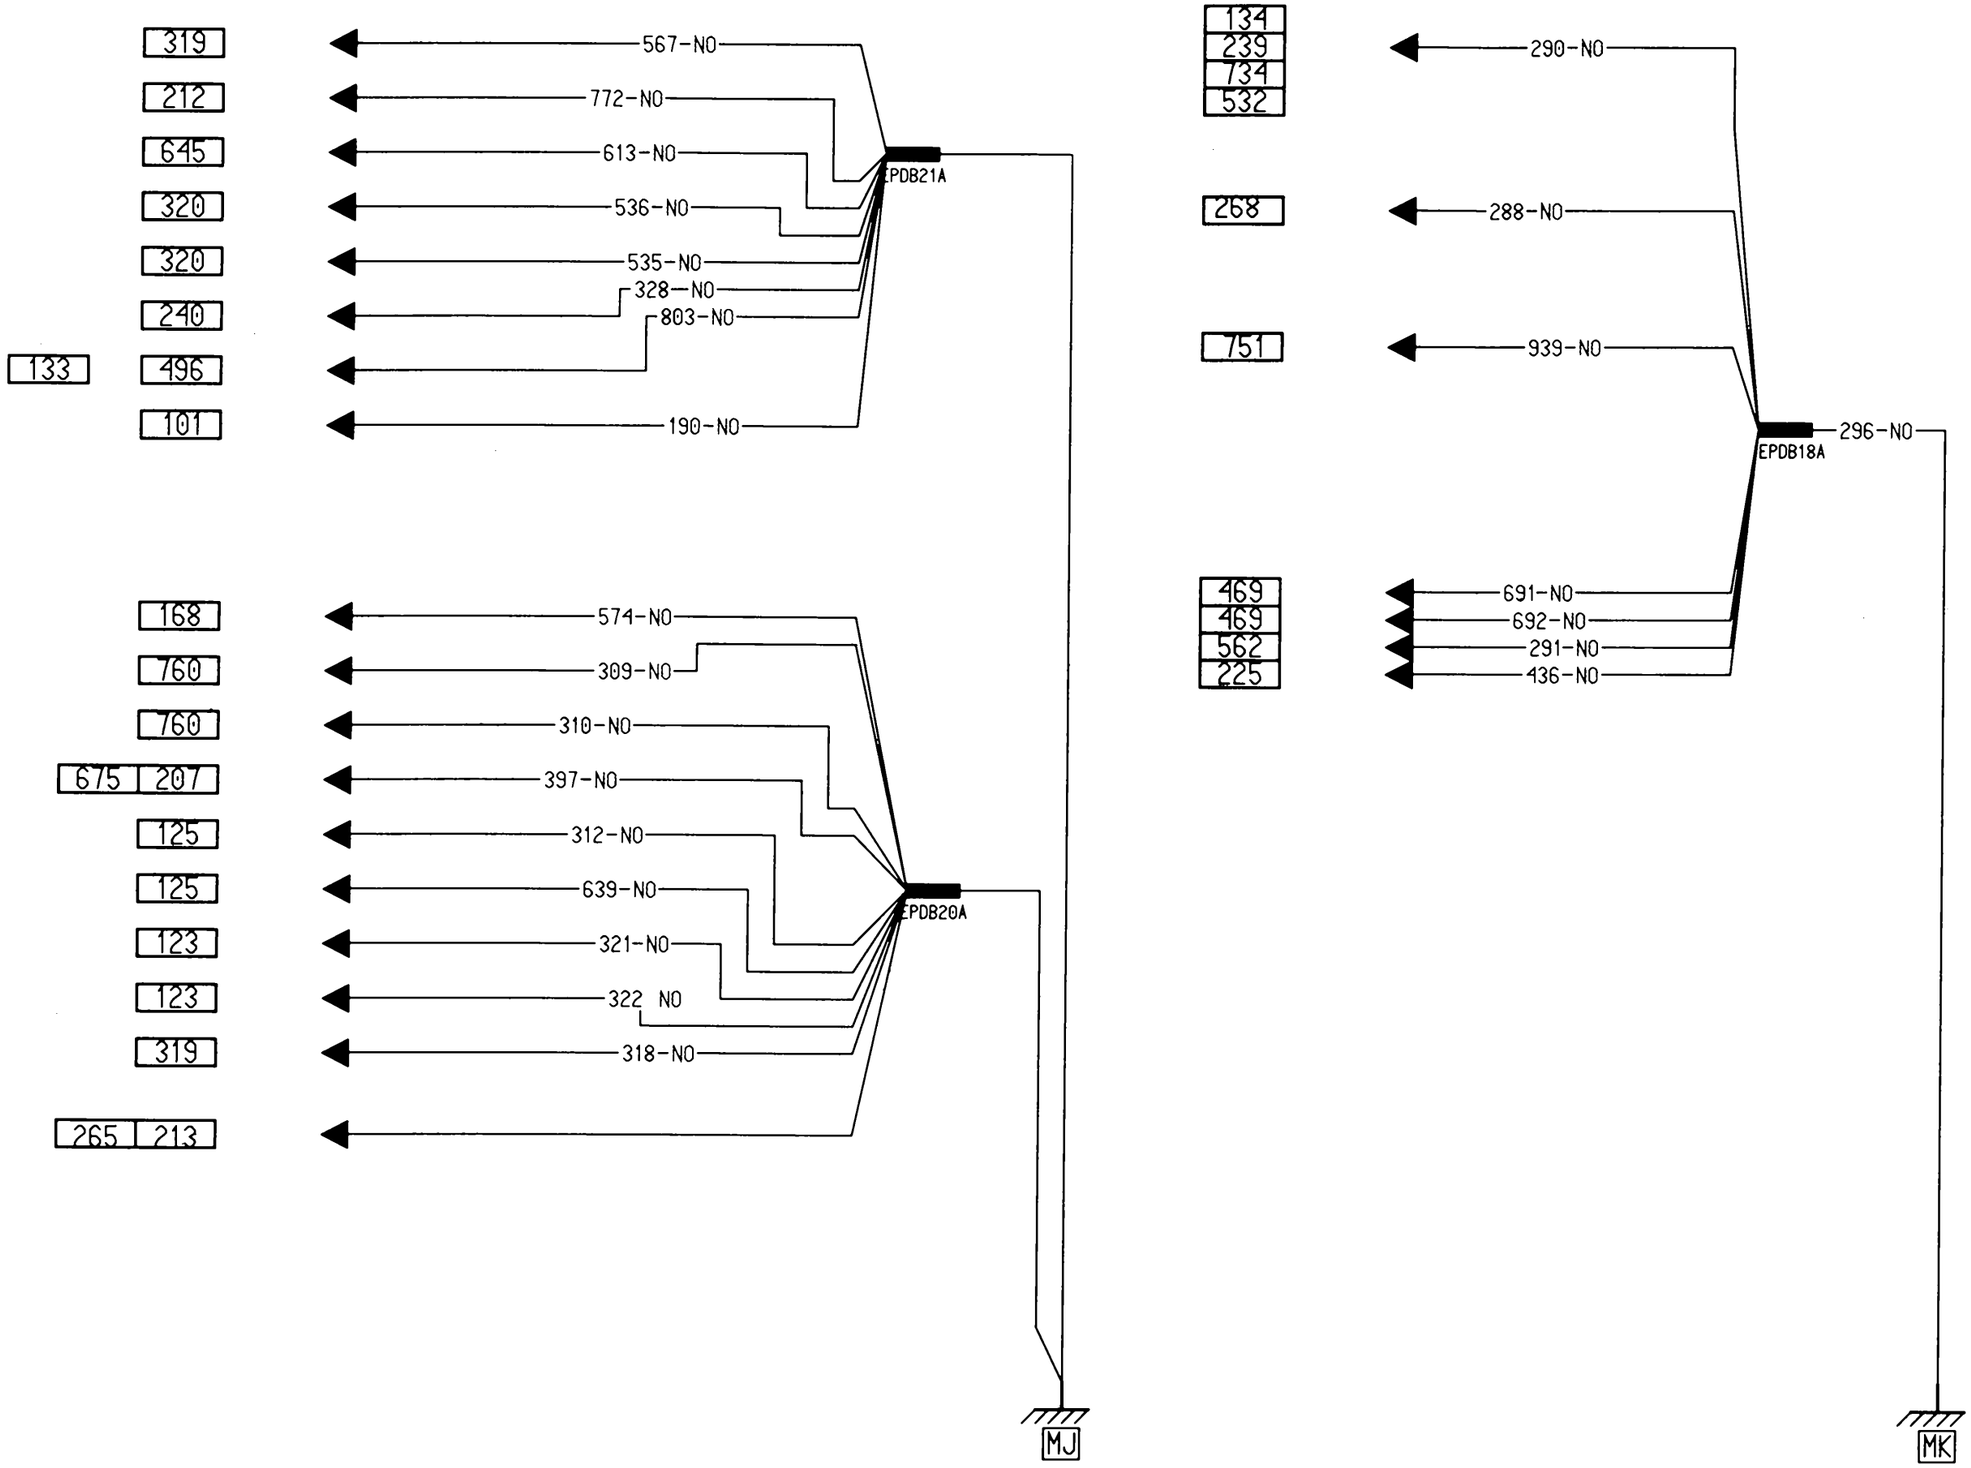

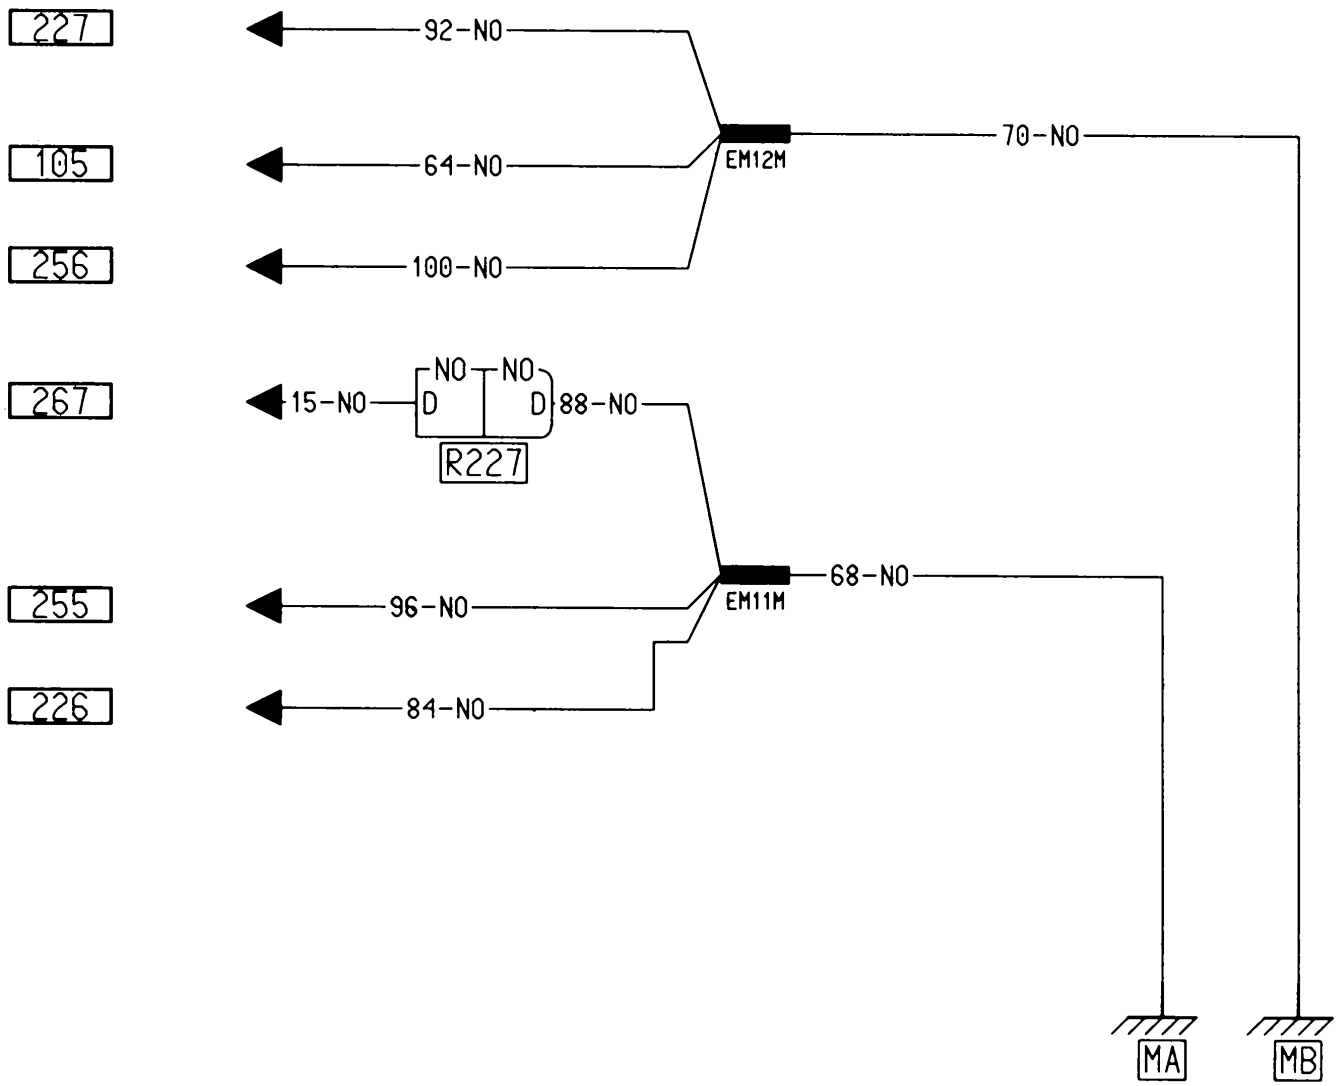
227
92-NO
105
64-NO
256
100-NO
EM12M
70-NO
267
15-NO
NO
NO
D
D
88-NO
R227
255
96-NO
EM11M
68-NO
226
84-NO
MA
MB

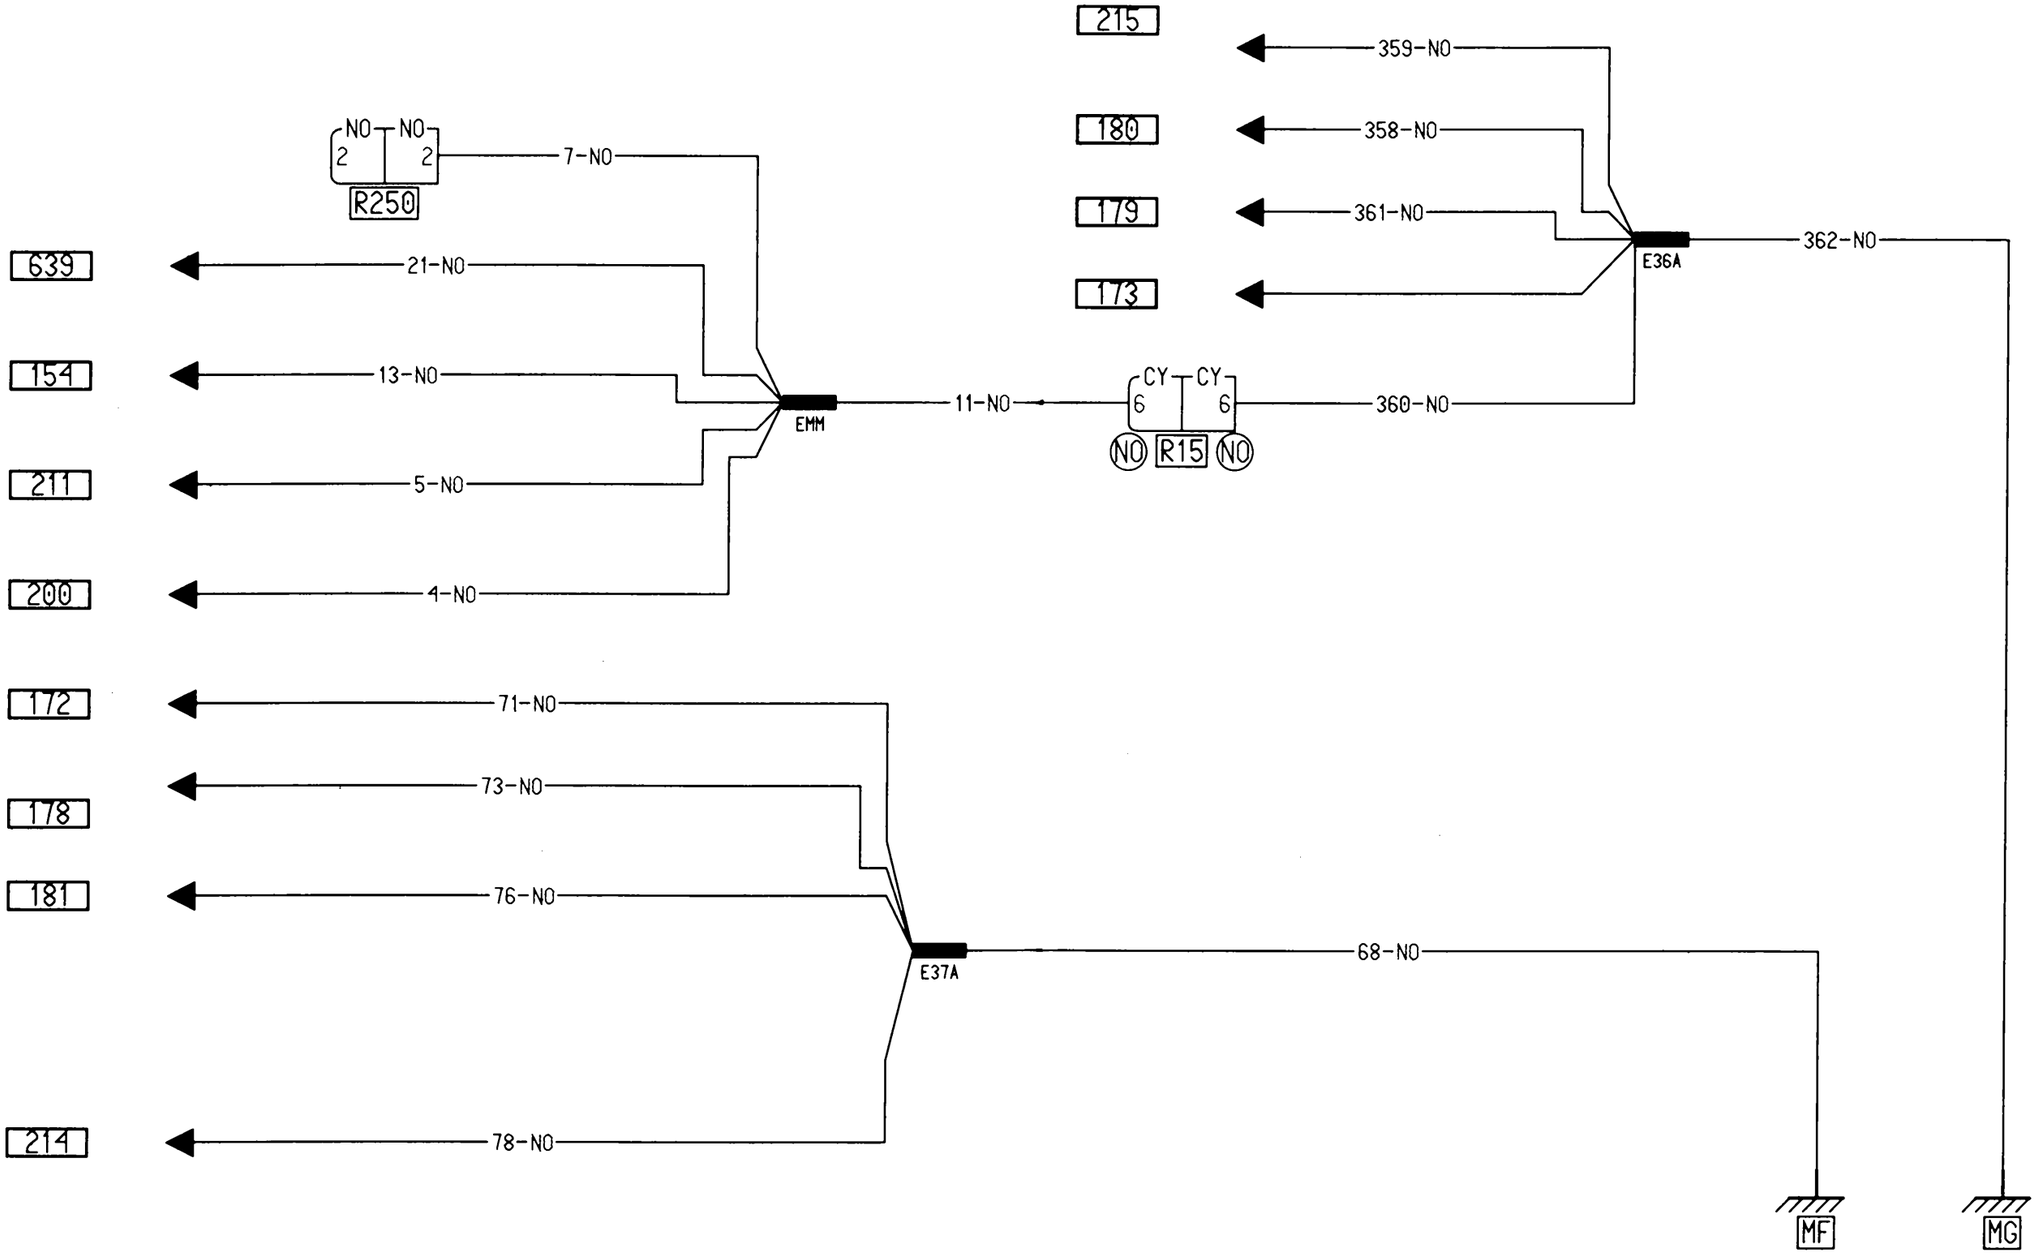
215
359-NO
180
358-NO
179
361-NO
173
NO
2
NO
2
R250
7-NO
639
21-NO
154
13-NO
211
5-NO
200
4-NO
EMM
11-NO
CY
6
CY
6
NO
R15
NO
360-NO
E36A
362-NO
172
71-NO
178
73-NO
181
76-NO
E37A
68-NO
214
78-NO
MF
MG

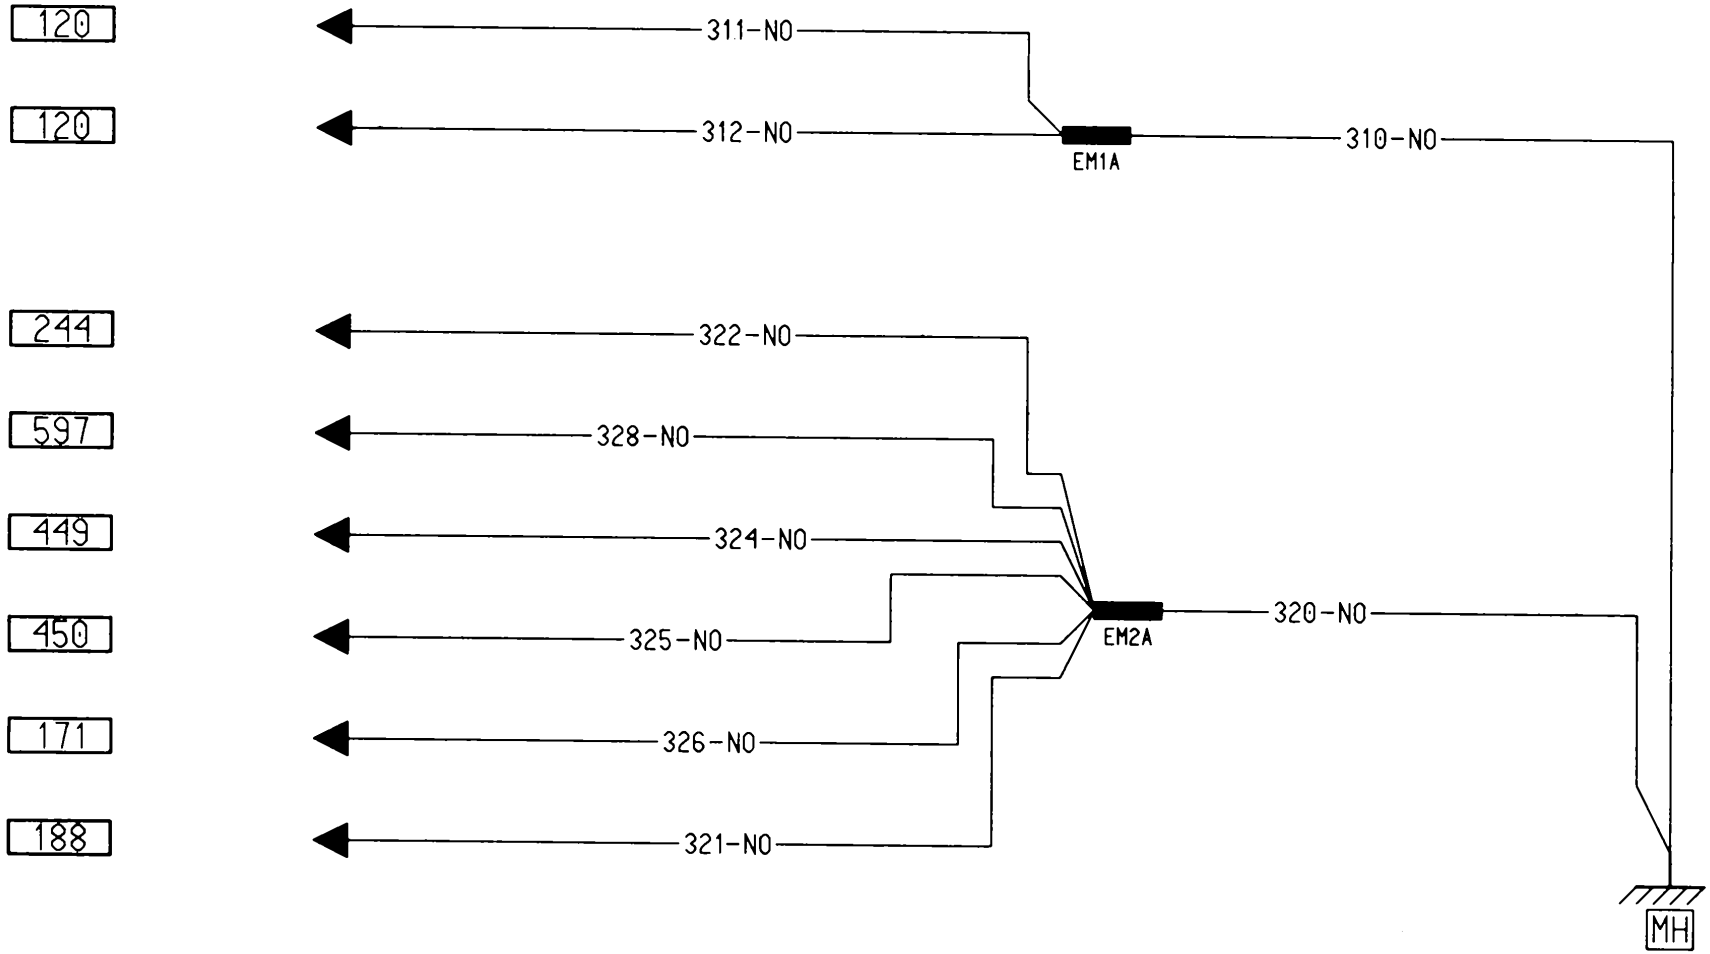
120
120
311-NO
312-NO
EM1A
310-NO
244
597
449
450
171
188
322-NO
328-NO
324-NO
325-NO
326-NO
321-NO
EM2A
320-NO
MH

EARTH

E64/E2/DG/CA/LYAREL/SGACHA/RUNLI

X642
00

653 210 — 6-NO

616 — 122-NO
615 — 96-NO
168 — 167-NO
760 — 155-NO
537 225 — 231-NO
538 562 — 229-NO
135 — 98-NO
101 — 240-NO
495 — 153-NO

EPD833A

134 239 734 532 — 298-NO
268 241 — 288-NO, 292-NO
269 231 — 882-NO, 935-NO
739 219 — 287-NO, 642-NO

EPD818A

296-NO

220-NO
329-NO

136 131 882 — 19-NO, 20-NO, 17-NO
EPHB
2-NO — CY 7 7 — NO R108 NO — 739-NO
5-NO — NO 8 8 NO — NO R108 NO — 794-NO


EPD821A


212 645 320 320 240 — 772-NO, 613-NO, 536-NO, 535-NO, 328-NO
133
496 — 883-NO


231 — 935-NO
760 — 310-NO
207 675 — 397-NO
290 — 984-NO
753 — 898-NO
288 — 985-NO
125 125 — 312-NO, 639-NO
123 123 — 321-NO, 322-NO
319 — 318-NO
213 — 48-NO
751 — 939-NO

EPD828A

MJ
MK

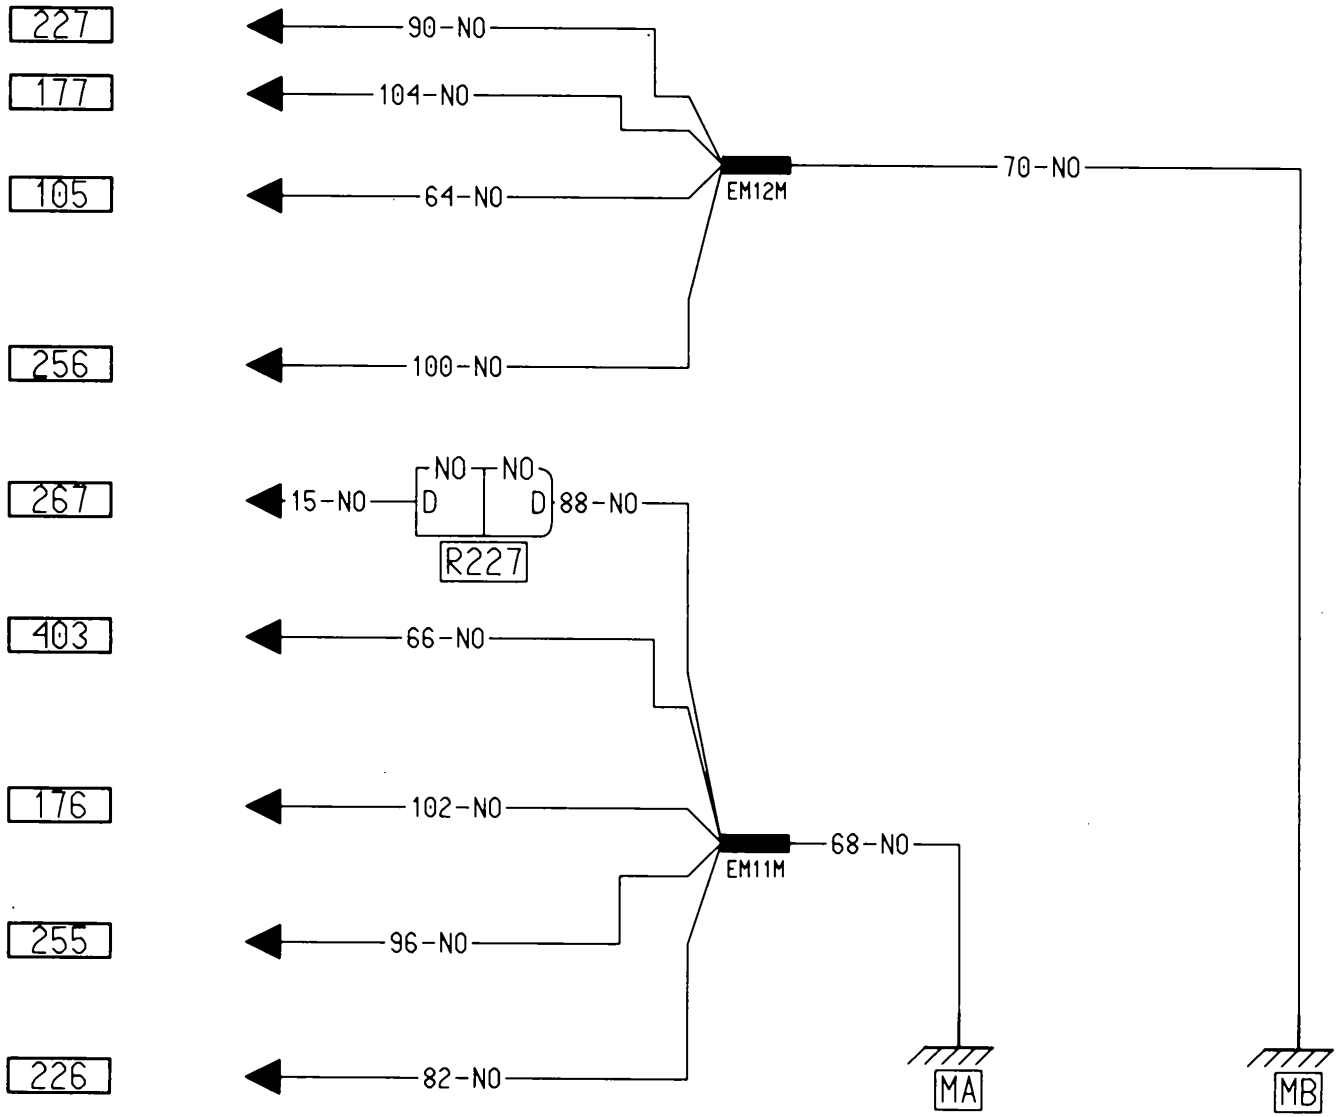
227
177
105
256
267
403
176
255
226
90-NO
104-NO
64-NO
100-NO
15-NO
NO
NO
D
D
88-NO
R227
66-NO
102-NO
96-NO
82-NO
EM12M
70-NO
EM11M
68-NO
MA
MB

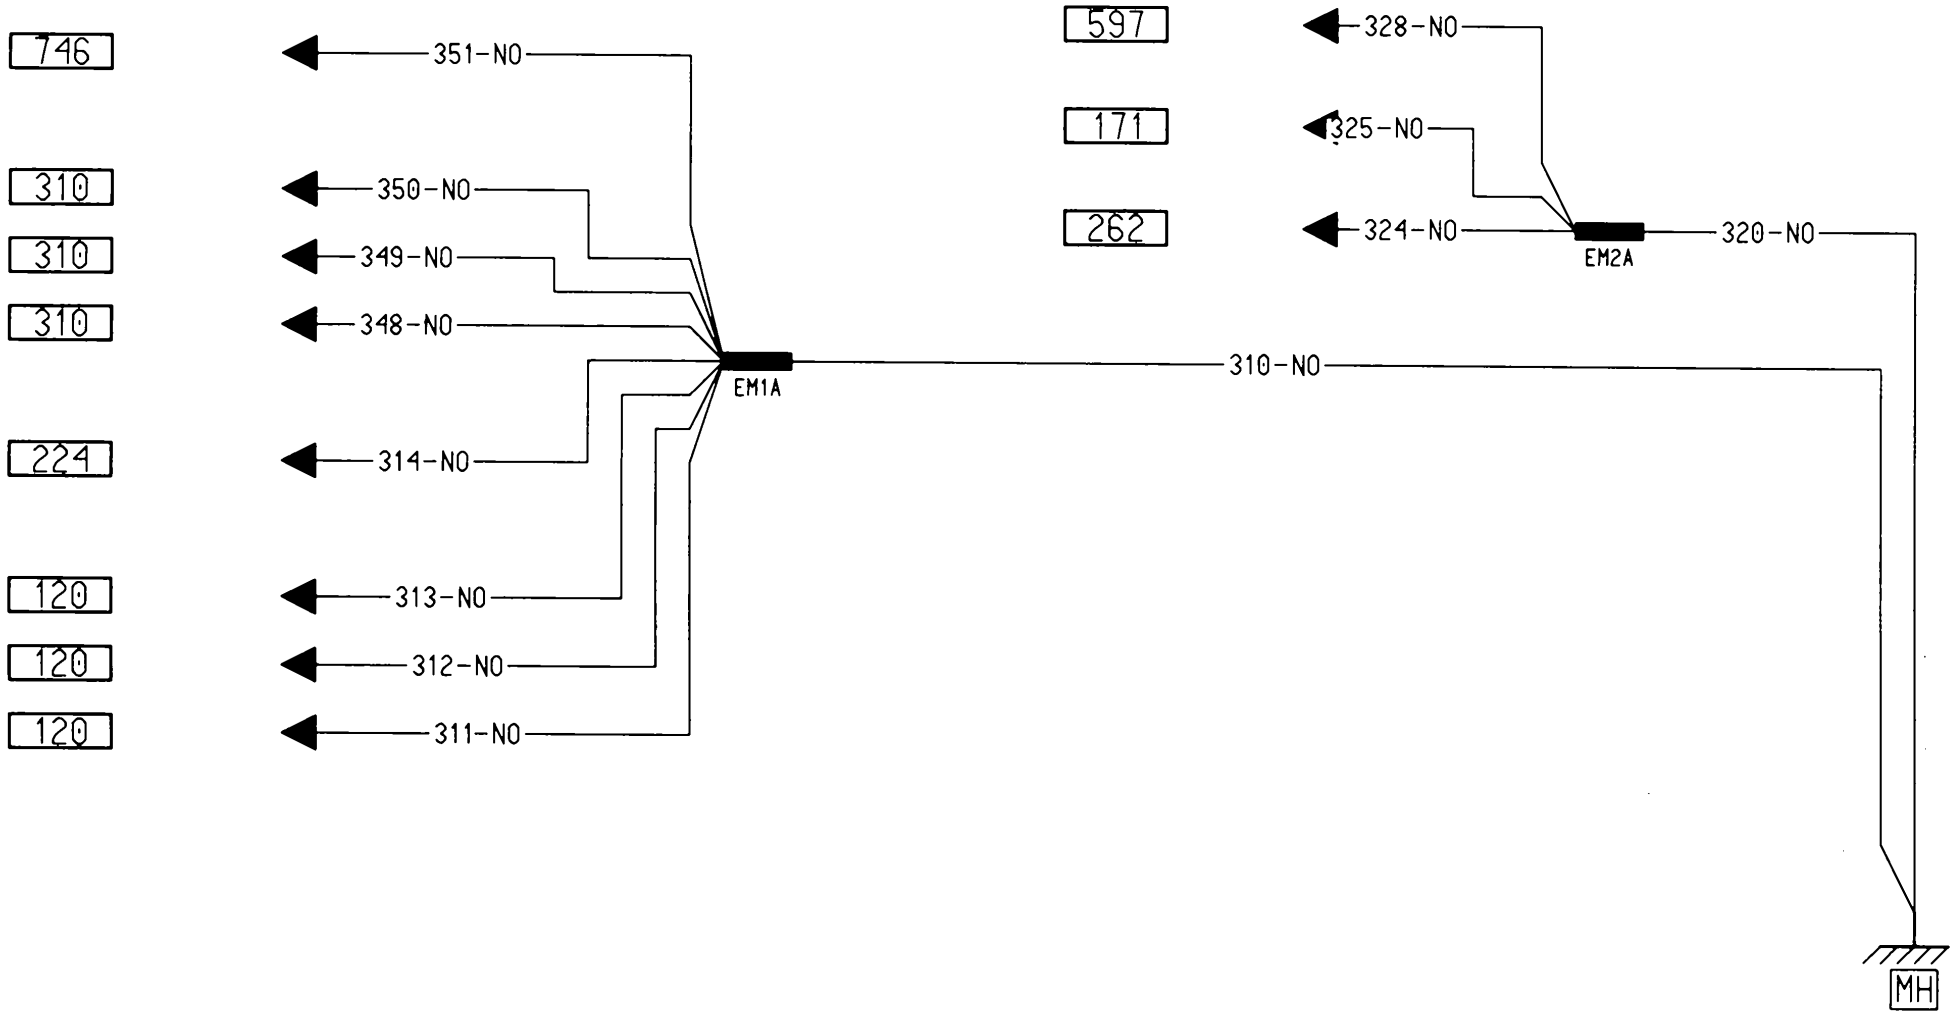
746
351-NO
310
350-NO
310
349-NO
310
348-NO
224
314-NO
120
313-NO
120
312-NO
120
311-NO
EM1A
597
328-NO
171
325-NO
262
324-NO
EM2A
320-NO
310-NO
MH

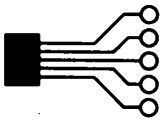


EARTH

F8Q790/CA/BVM5

X642


00

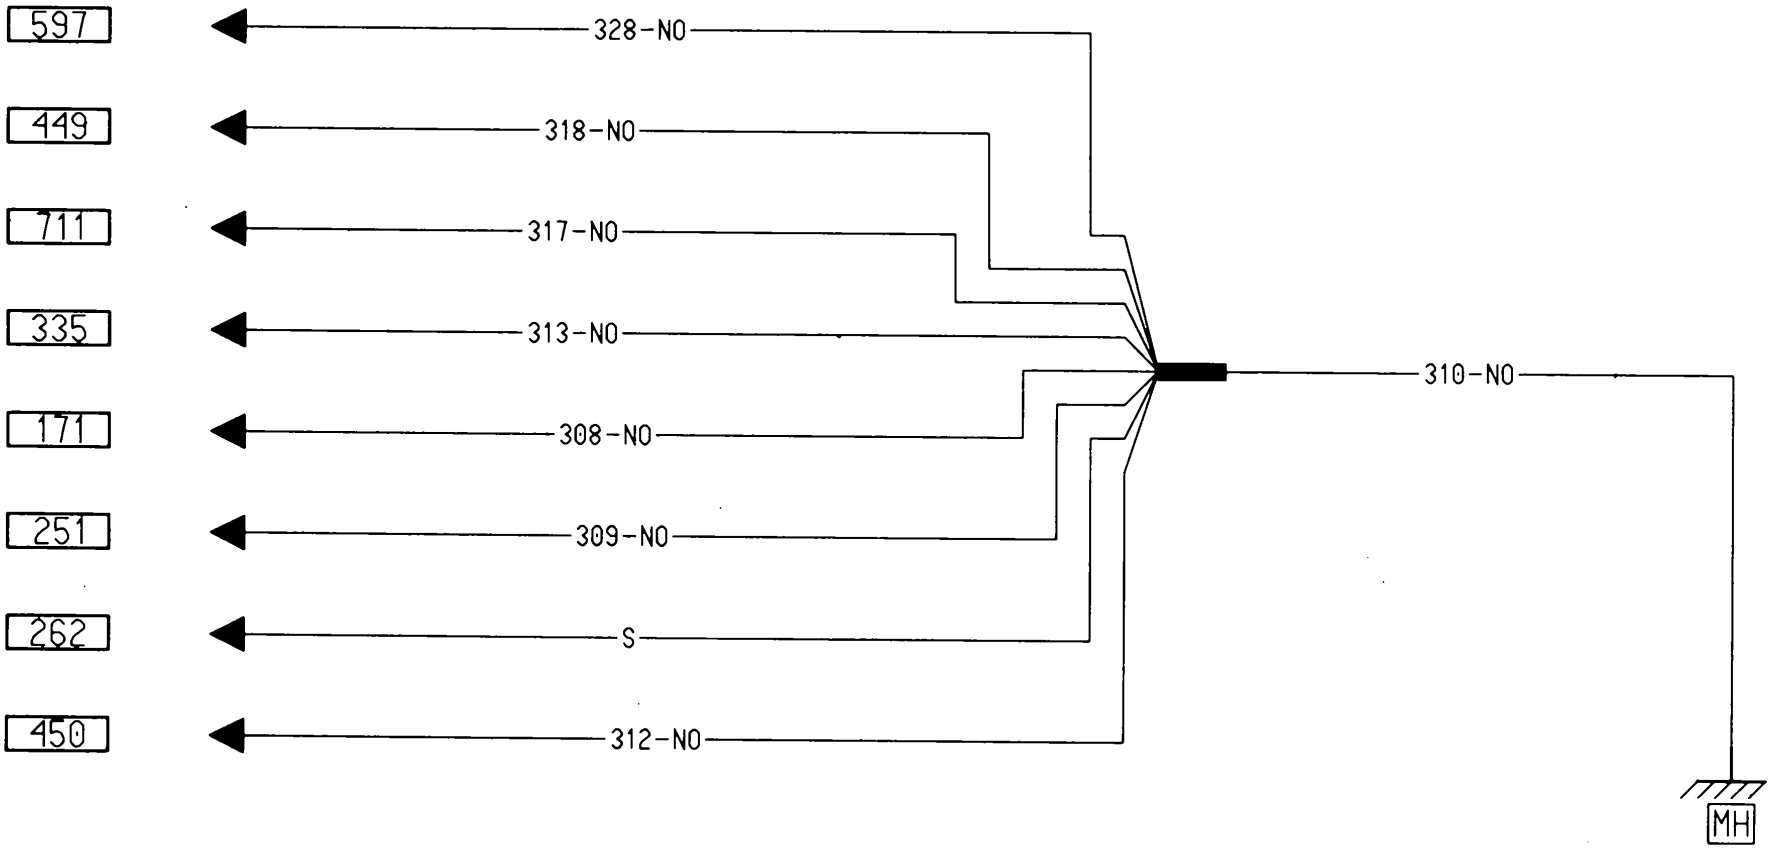



EARTH


K4M712/CA/EQGPL/BVM5

X642
00

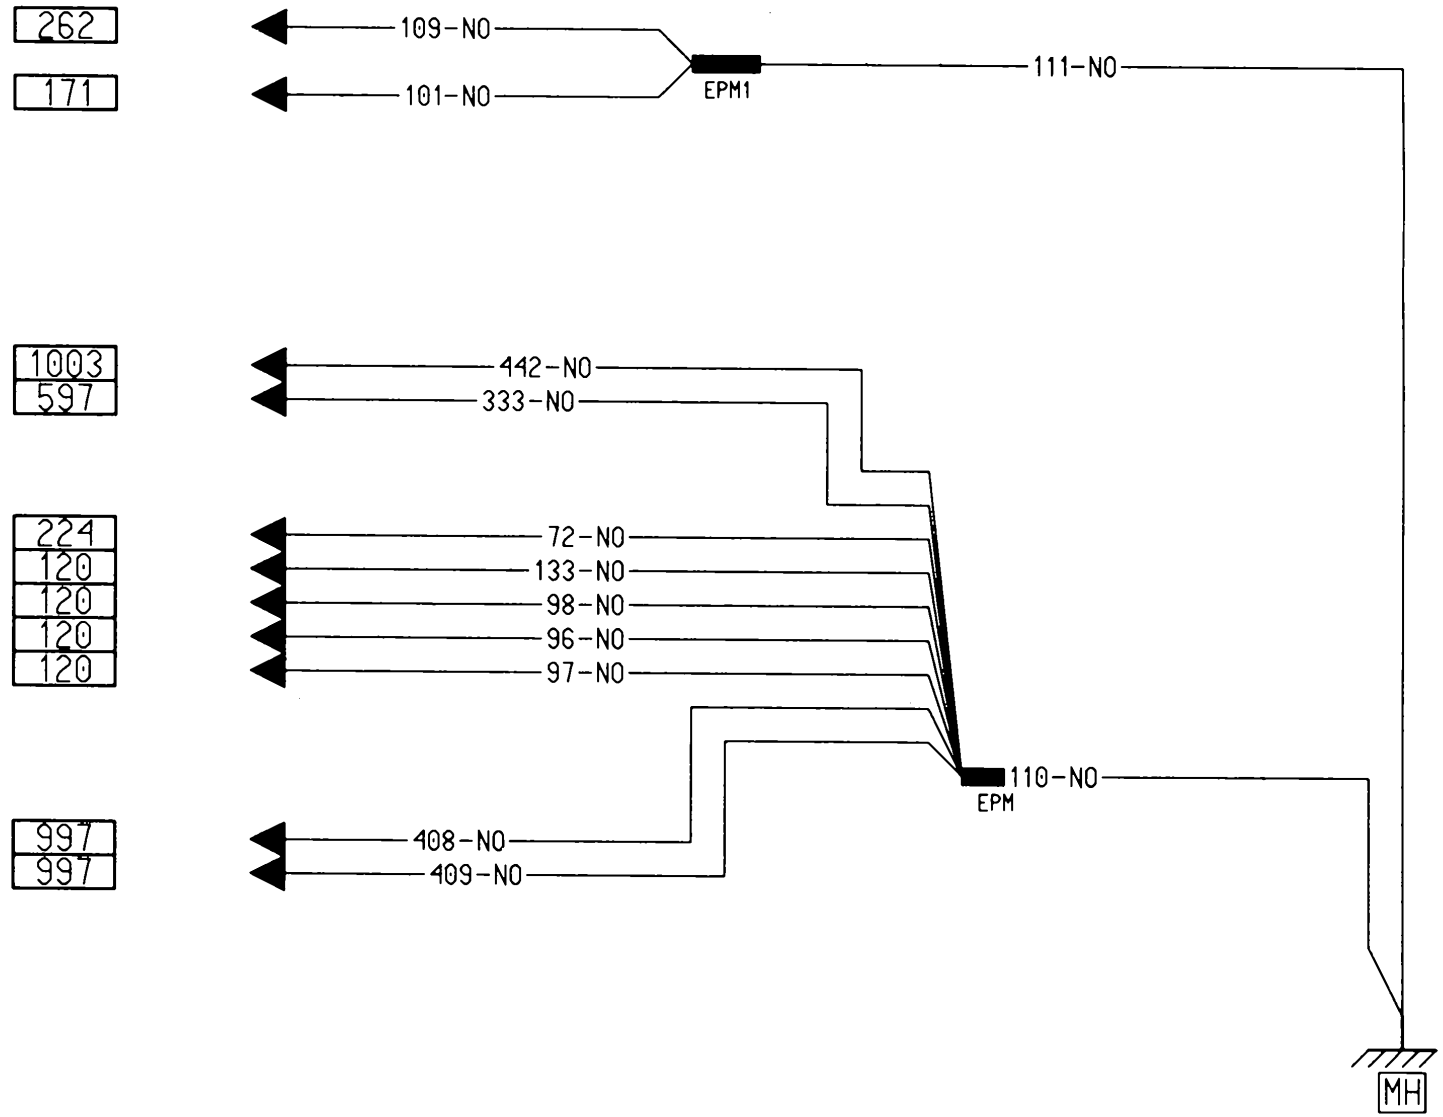

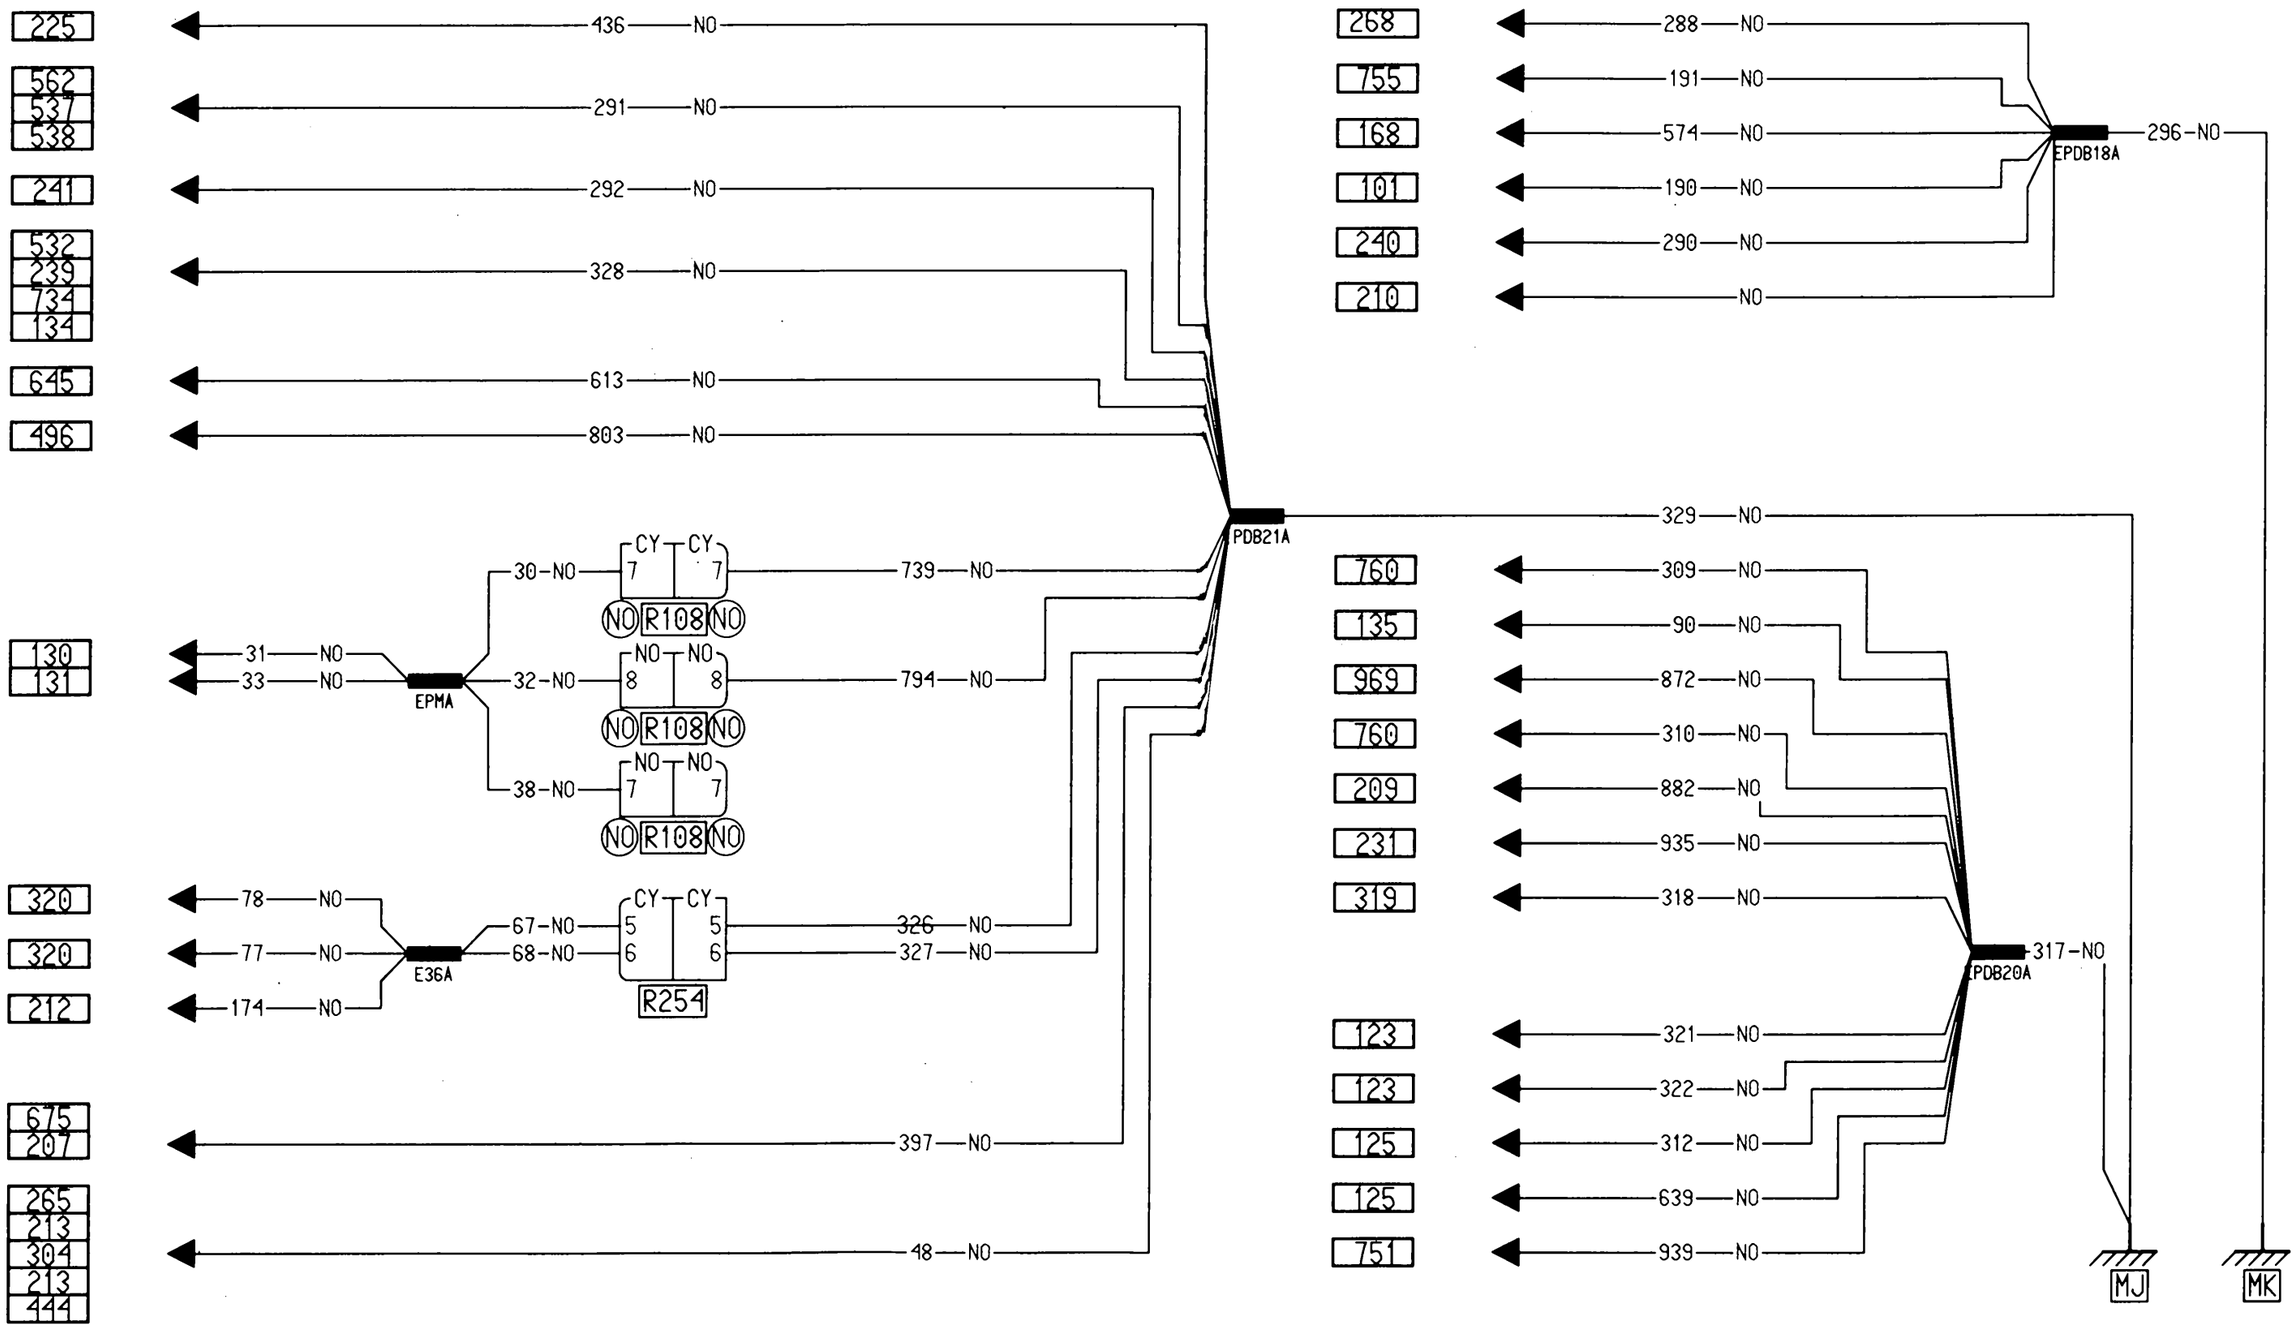
225
562
537
538
241
532
239
734
134
645
496
436 NO
291 NO
292 NO
328 NO
613 NO
803 NO
PDB21A
329 NO
268
755
168
101
240
210
288 NO
191 NO
574 NO
190 NO
290 NO
NO
EPDB18A
296-NO
30-NO
CY 7
CY 7
739 NO
NO R108 NO
130
131
31 NO
33 NO
EPMA
32-NO
NO 8
NO 8
794 NO
38-NO
NO 7
NO 7
320
320
212
78 NO
77 NO
174 NO
E36A
67-NO
68-NO
CY 5
CY 6
326 NO
327 NO
R254
675
207
397 NO
265
213
304
213
444
48 NO
760
135
969
760
209
231
319
309 NO
90 NO
872 NO
310 NO
882 NO
935 NO
318 NO
EPDB20A
317-NO
123
123
125
125
751
321 NO
322 NO
312 NO
639 NO
939 NO
MJ
MK

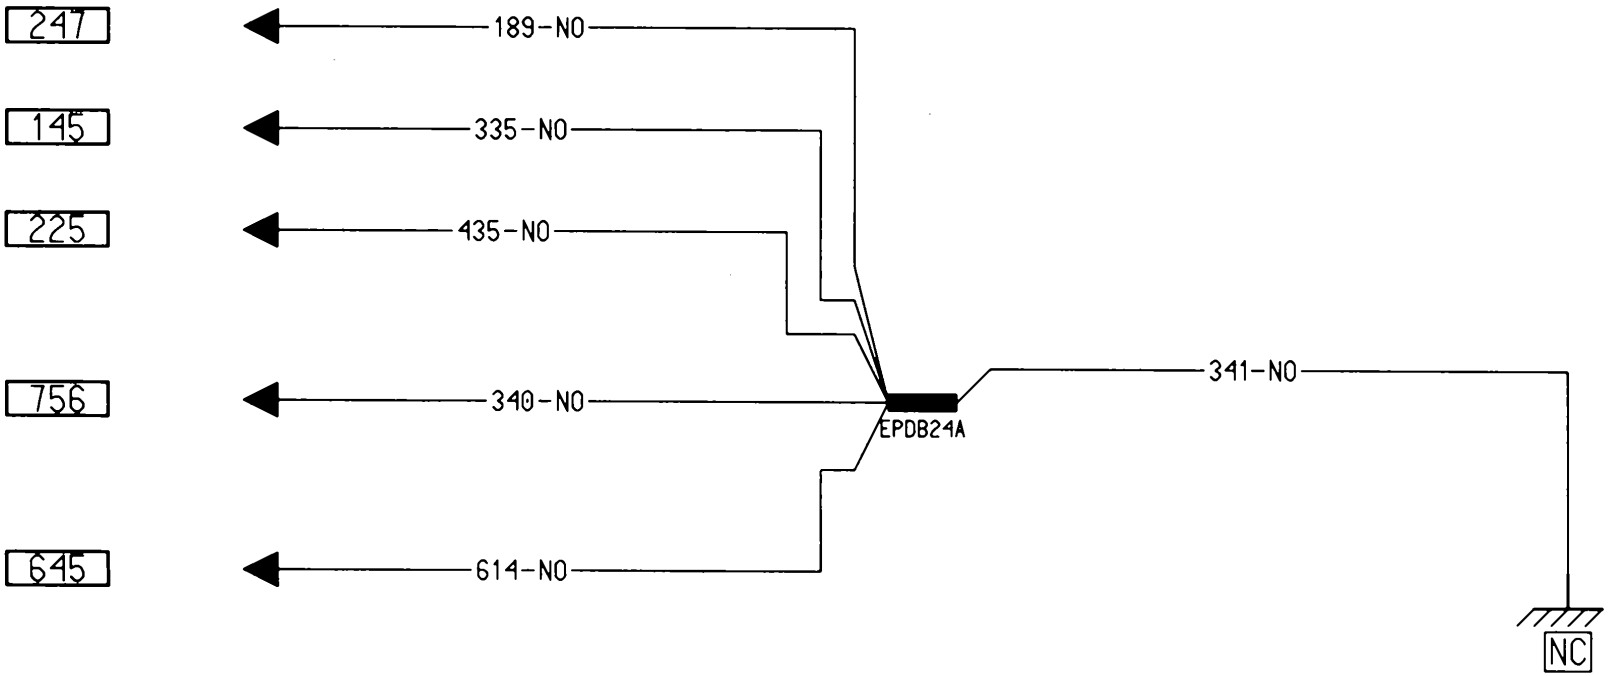
247
189-NO
145
335-NO
225
435-NO
756
340-NO
645
614-NO
341-NO
EPDB24A
NC

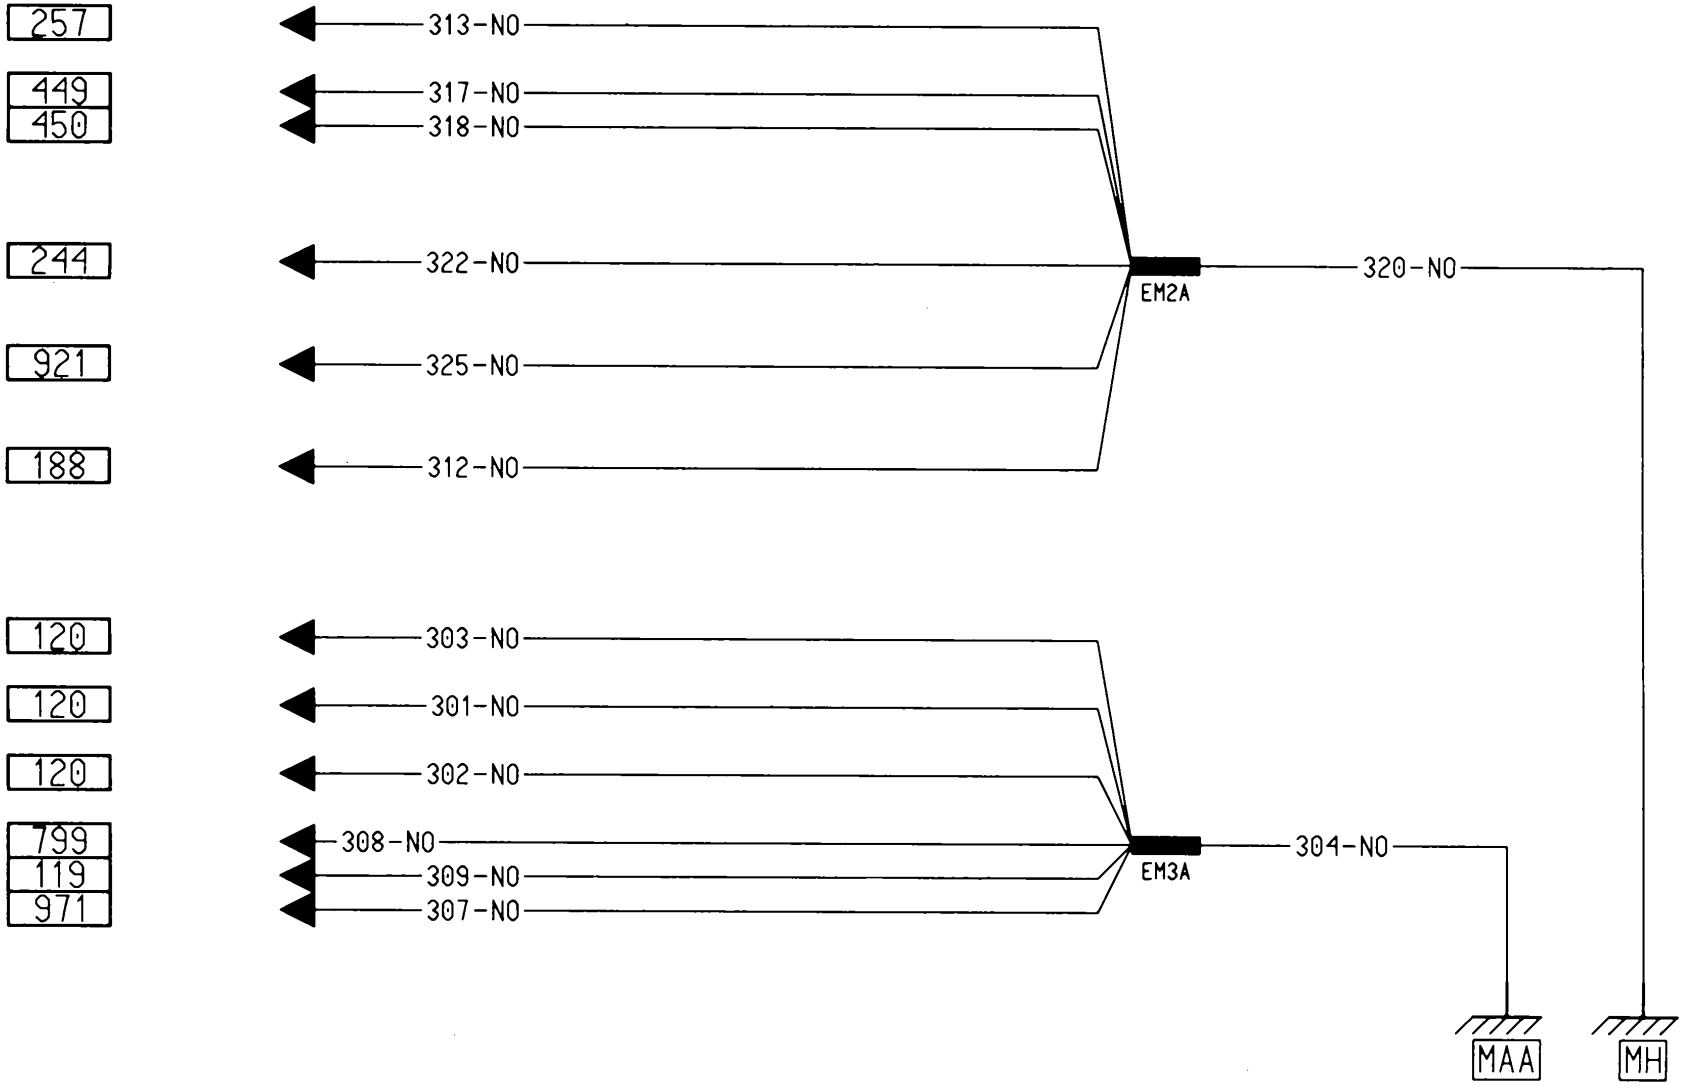

257
313-NO
449
450
317-NO
318-NO
244
322-NO
921
325-NO
188
312-NO
EM2A
320-NO
120
303-NO
120
301-NO
120
302-NO
799
119
971
308-NO
309-NO
307-NO
EM3A
304-NO
MAA
MH

653
210
6-NO
EPDB39A
168
760
225
562
537
538
135
101
495
615
616
167-NO
155-NO
231-NO
229-NO
98-NO
240-NO
153-NO
96-NO
122-NO
134
239
734
532
298-NO
1001
268
241
645-NO
288-NO
292-NO
289
231
751
1003
1003
739
219
882-NO
935-NO
939-NO
198-NO
181-NO
287-NO
642-NO
EPDB18A
296-NO
228-NO
329-NO
130
131
31-NO
33-NO
EPMA
30-NO
32-NO
38-NO
CY 7 7 CY
NO R108 NO
NO 8 8 NO
NO 7 7 NO
739-NO
794-NO
EPDB21A
212
645
320
320
240
133
772-NO
613-NO
536-NO
535-NO
328-NO
496
883-NO
444
213
760
287
675
290
753
288
125
125
123
123
319
265
213
304
318-NO
397-NO
984-NO
898-NO
985-NO
312-NO
639-NO
321-NO
322-NO
318-NO
48-NO
EPDB20A
MJ
MK

EARTH

B64,L64/K4M706/CHAUFO/MERCOS/BVM5


X642
00

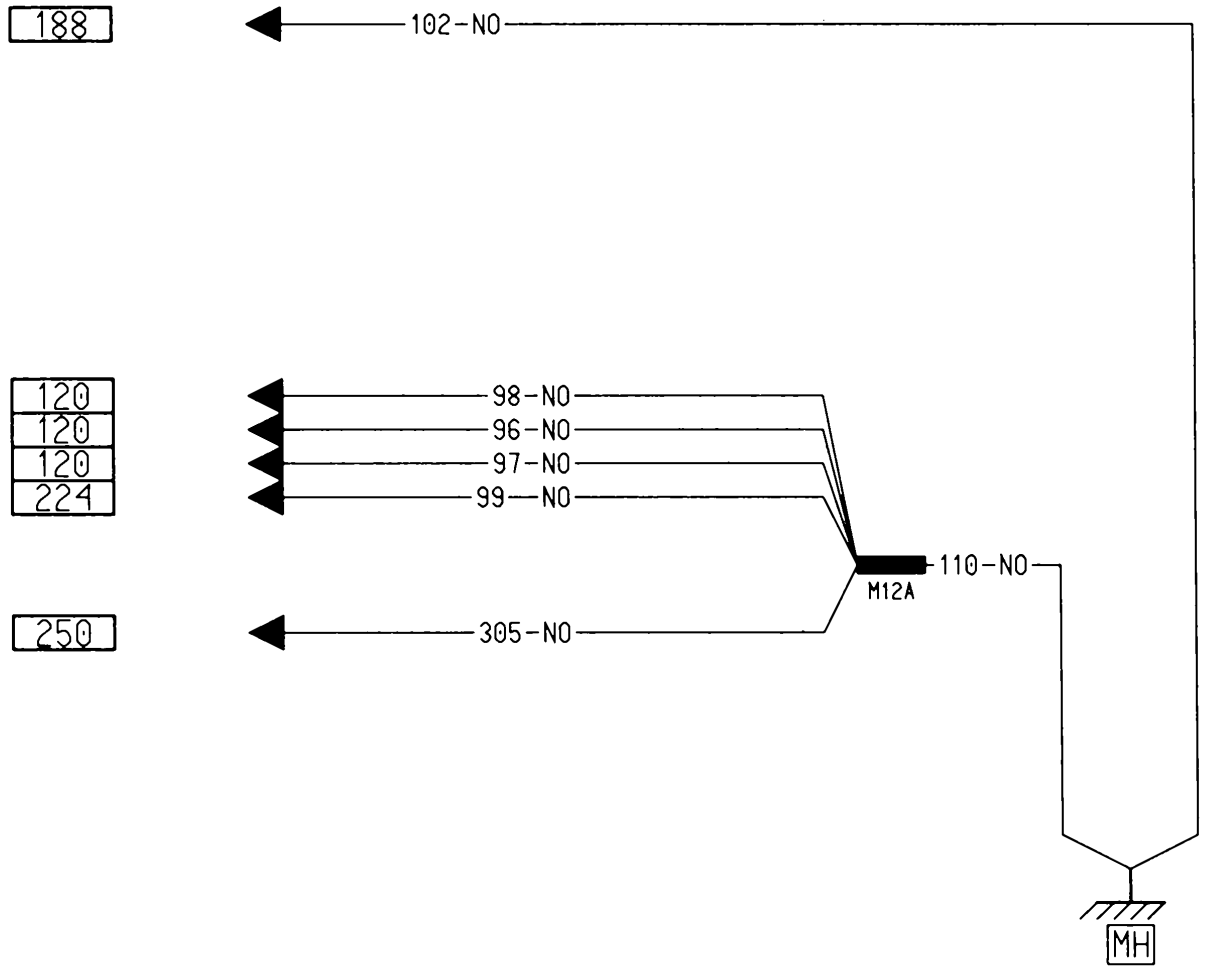

EARTH

B64,L64/K7M704/CHAUFO/MERCOS/BVM5


X642

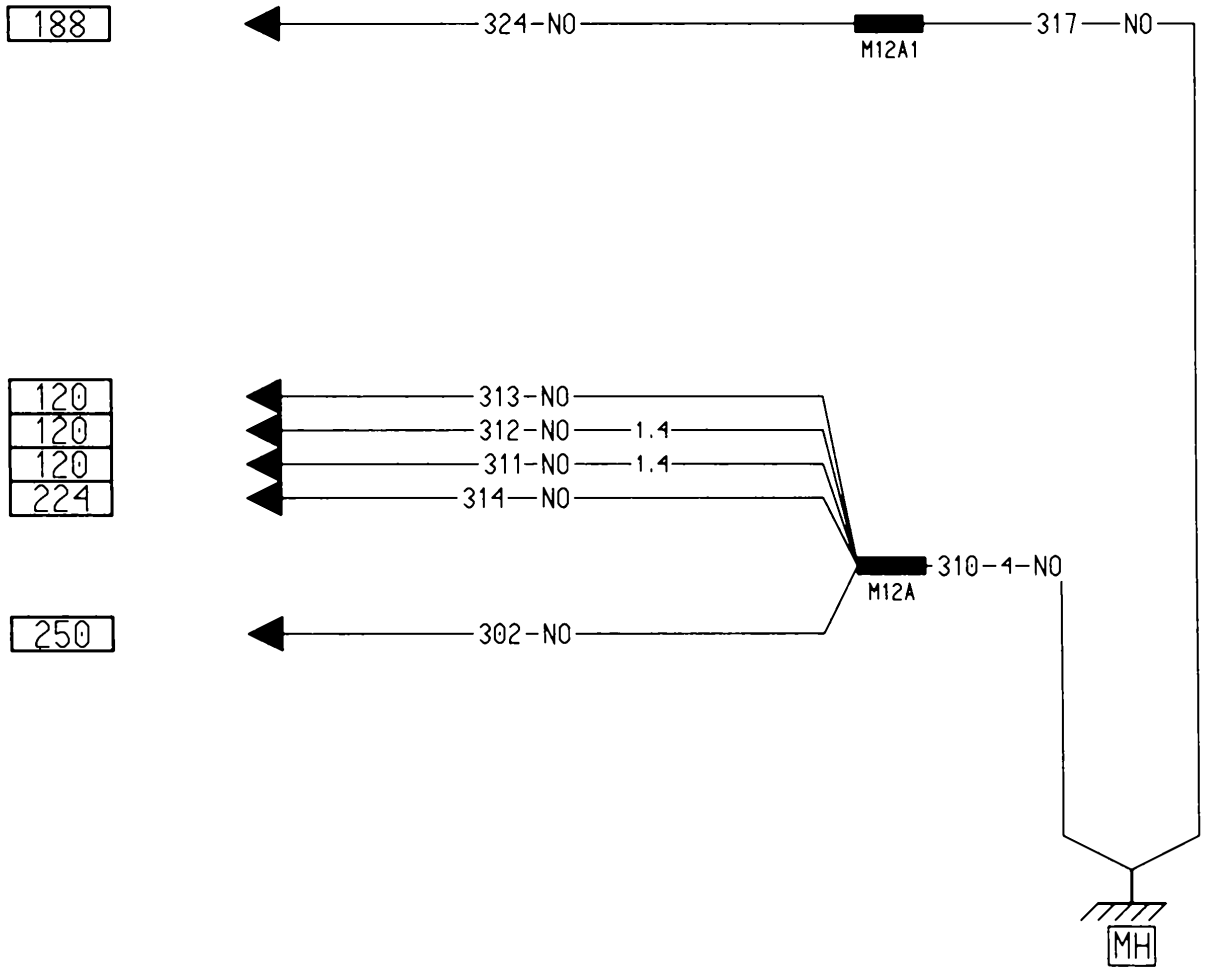



EARTH


B64,L64/K4M706/CA/MERCOS/BVM5

X642
00

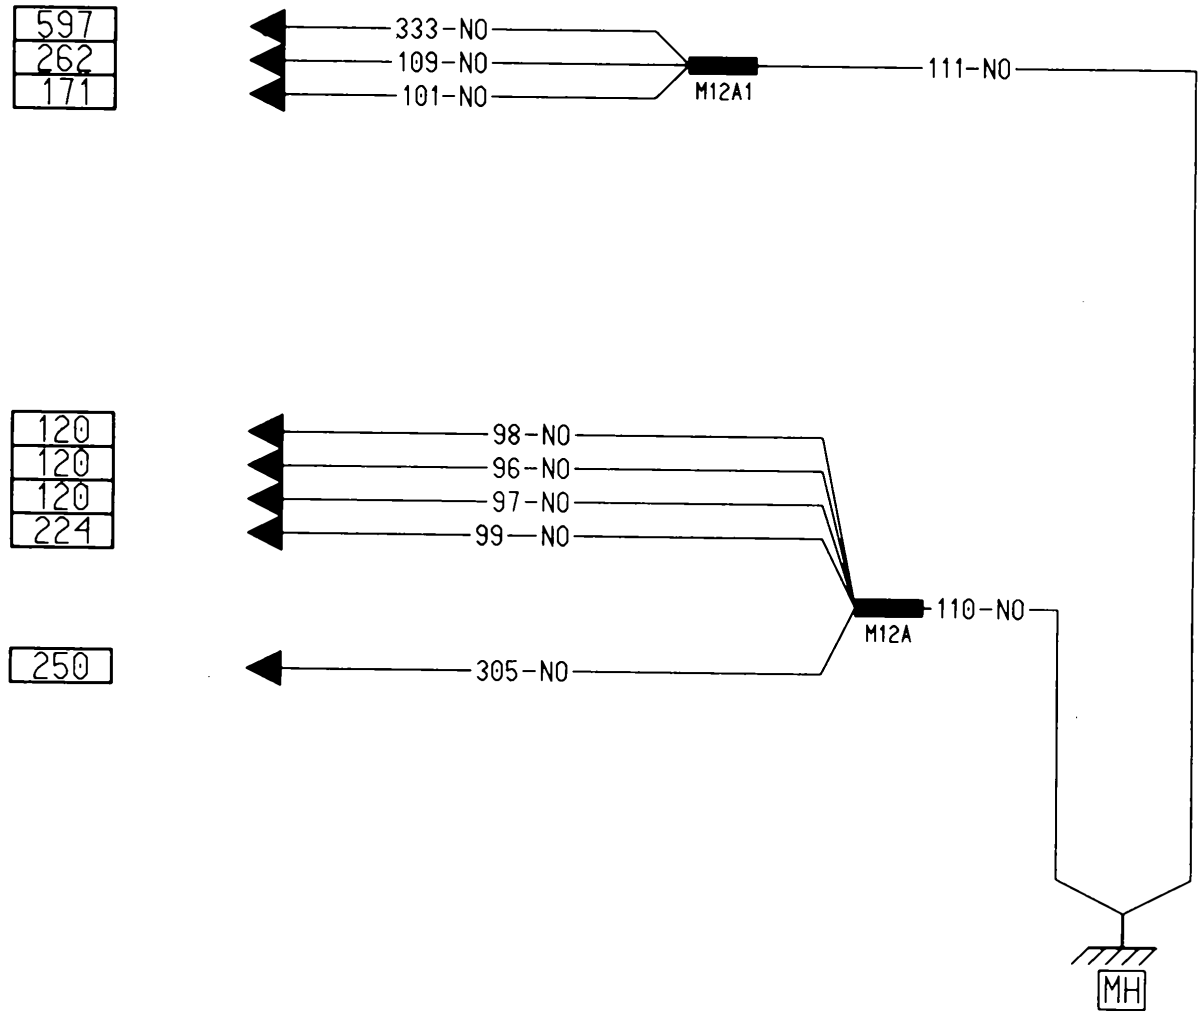

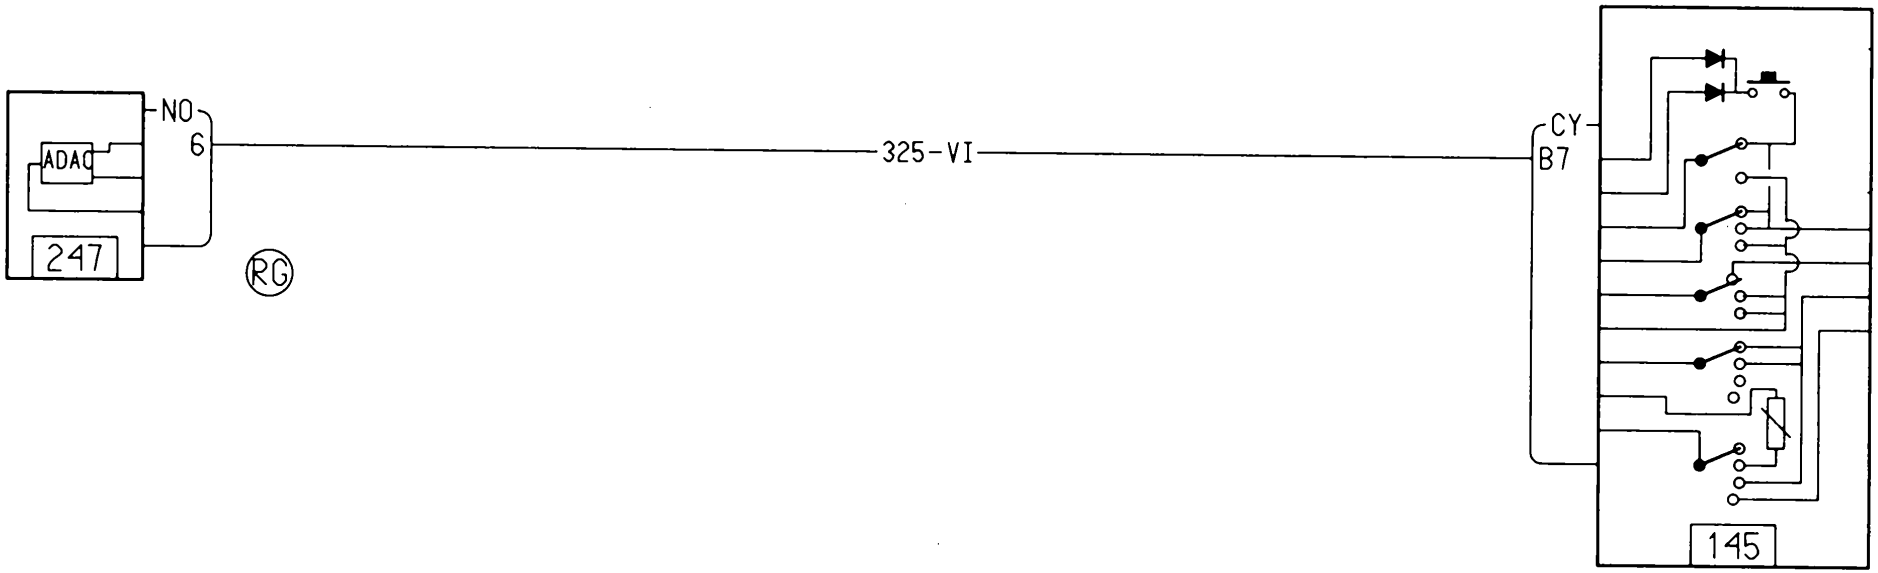

NO
6
ADAC
247
RG
325-VI
CY
B7
145

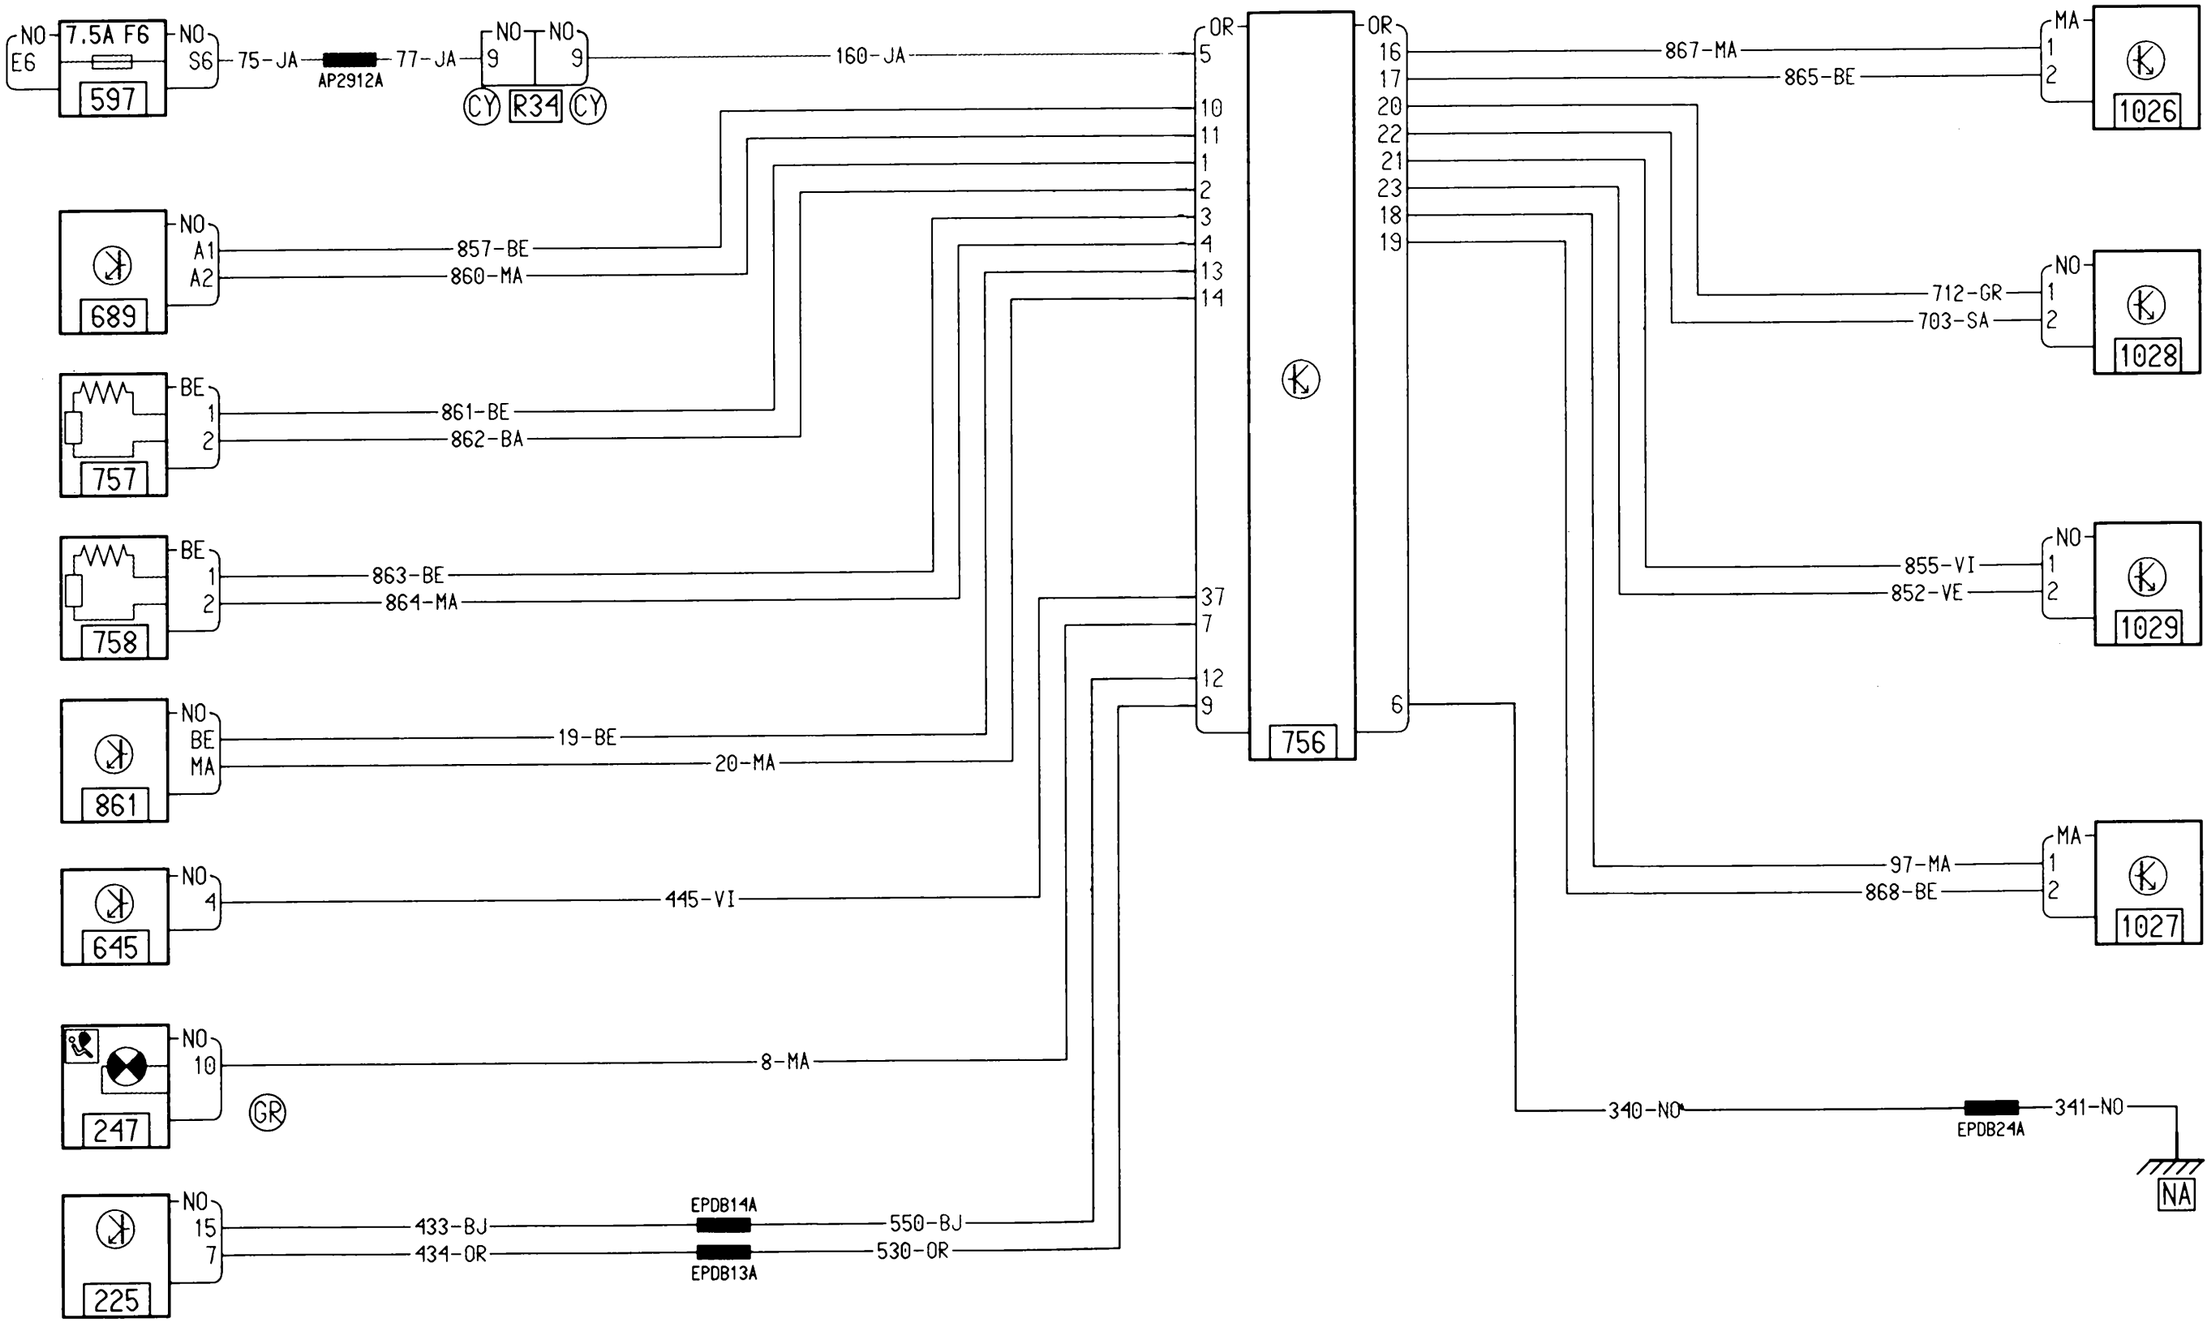

NO E6
7.5A F6
597
NO S6
75-JA
AP2912A
77-JA
NO 9
NO 9
CY R34 CY
160-JA
OR 5
10
11
1
2
3
4
13
14
37
7
12
9
OR 16
17
20
22
21
23
18
19
6
756
689
NO A1
A2
857-BE
860-MA
757
BE 1
2
861-BE
862-BA
758
BE 1
2
863-BE
864-MA
861
NO BE MA
19-BE
20-MA
645
NO 4
445-VI
247
NO 10
8-MA
GR
225
NO 15
7
433-BJ
434-OR
EPDB14A
EPDB13A
550-BJ
530-OR
867-MA
865-BE
MA 1 2
1026
712-GR
703-SA
NO 1 2
1028
855-VI
852-VE
NO 1 2
1029
97-MA
868-BE
MA 1 2
1027
340-NO
EPDB24A
341-NO
NA

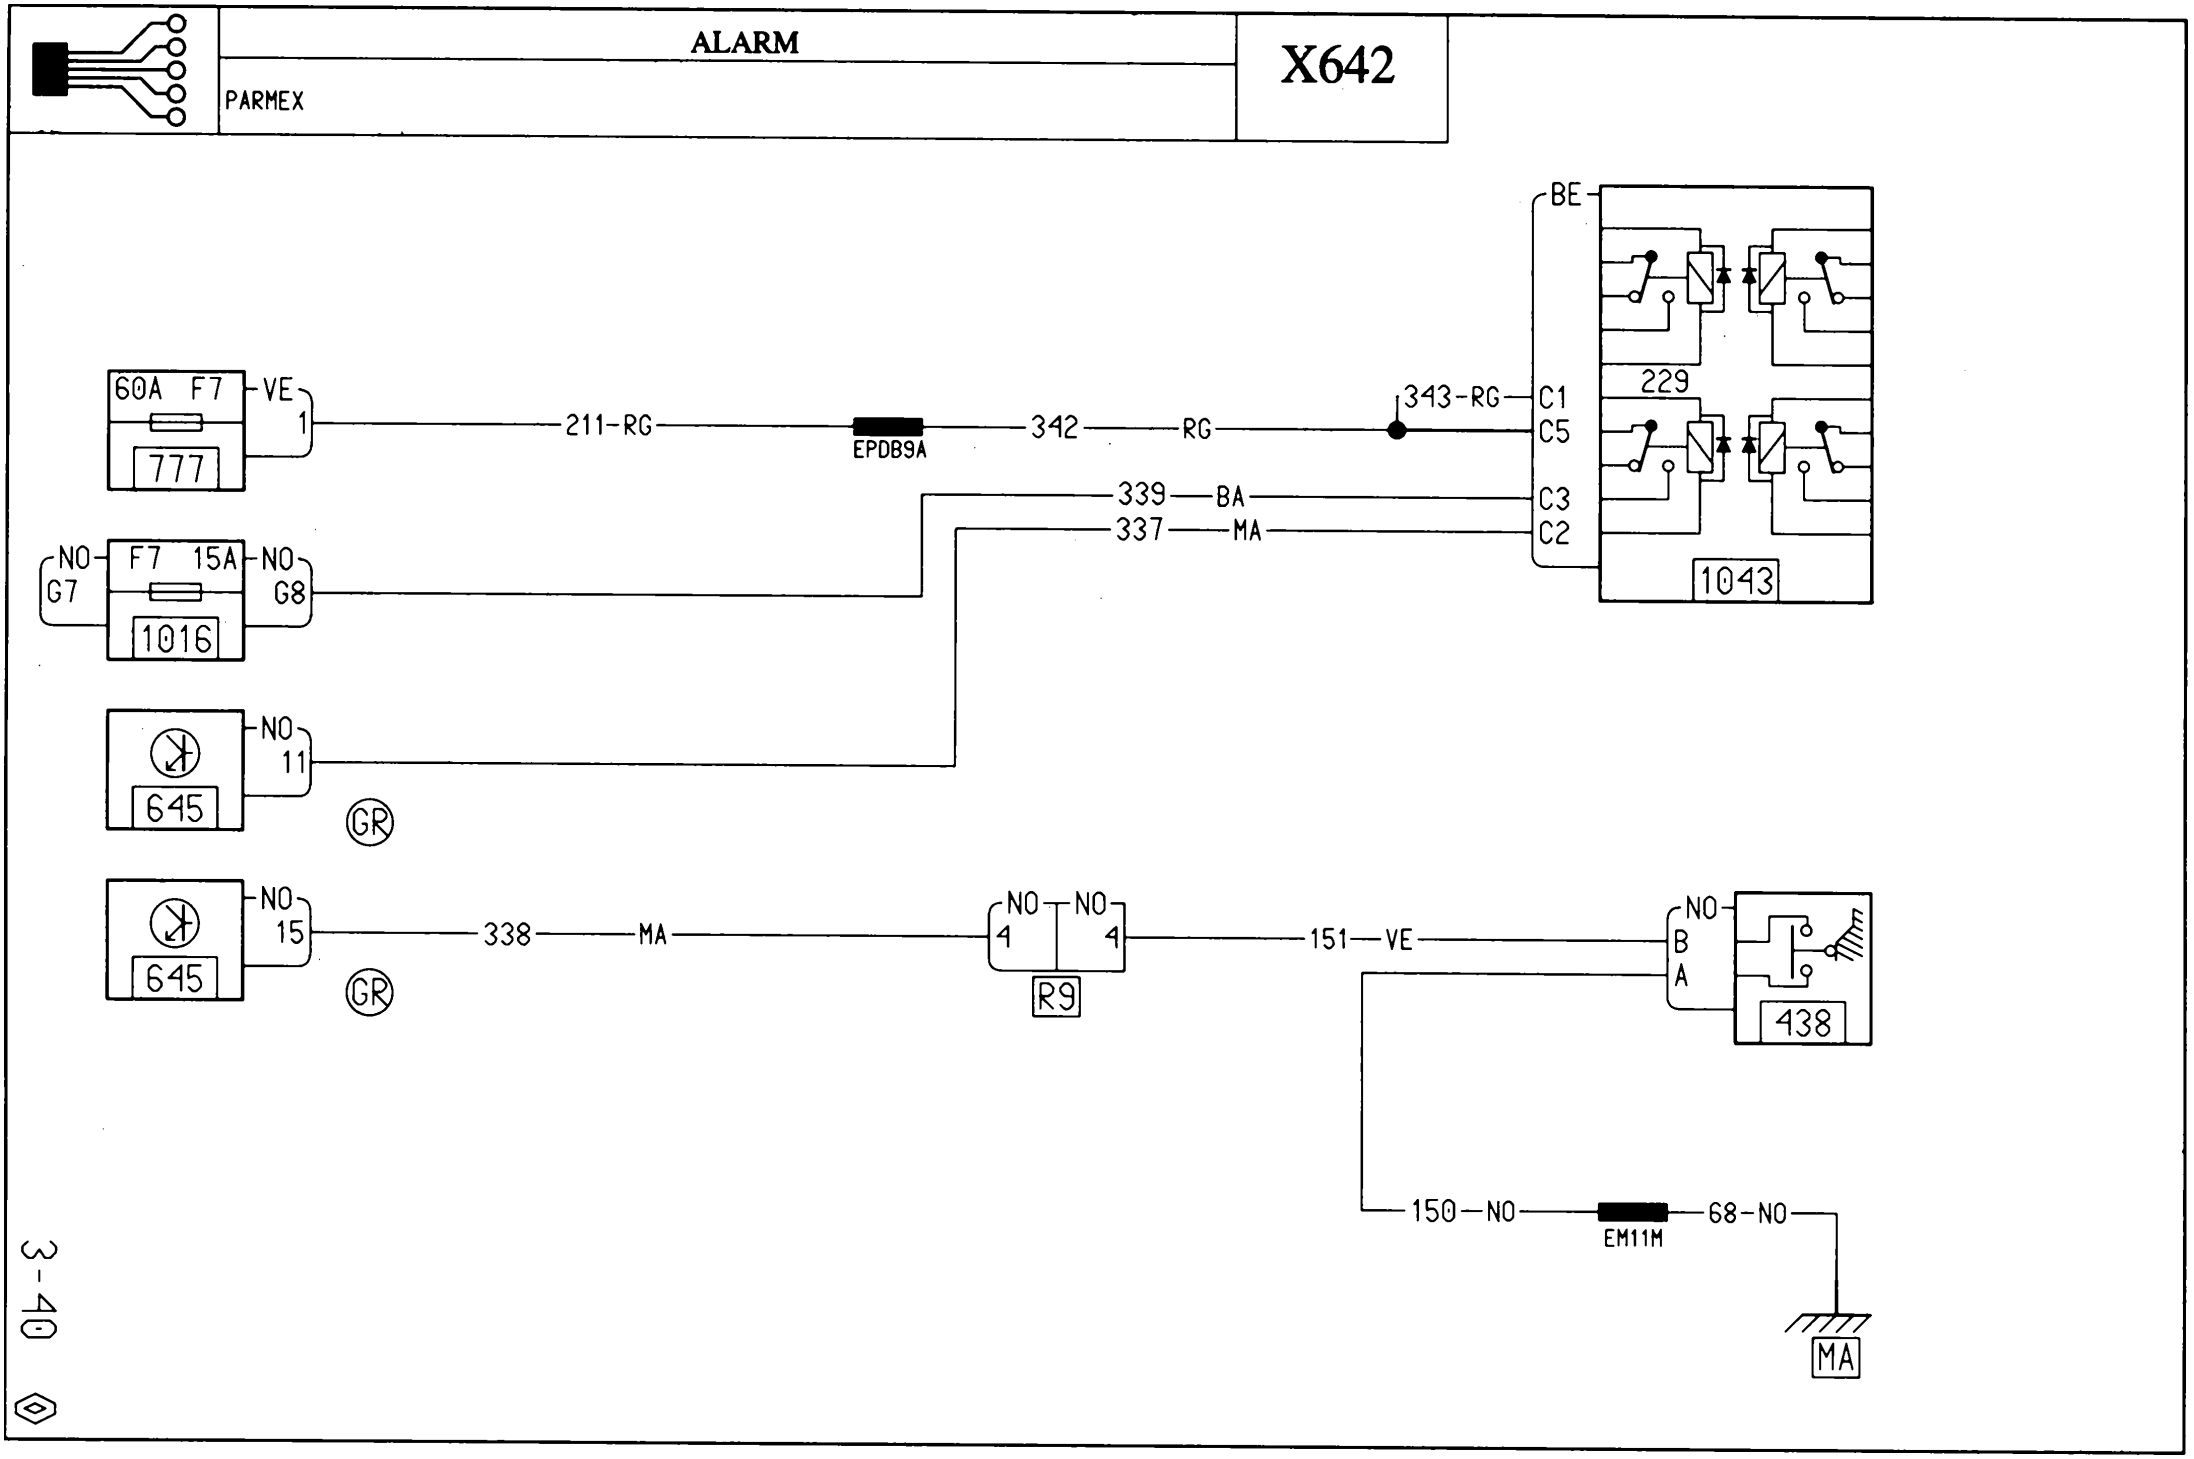

ALARM
PARMEX
X642
BE
60A F7
VE
1
777
211-RG
EPDB9A
342
RG
343-RG
C1
C5
229
339
BA
C3
337
MA
C2
1043
NO
G7
F7 15A
NO
G8
1016
NO
11
645
GR
NO
15
645
GR
338
MA
NO
4
NO
4
R9
151
VE
NO
B
A
438
150
NO
EM11M
68
NO
MA


CIGAR LIGHTER


X642
00

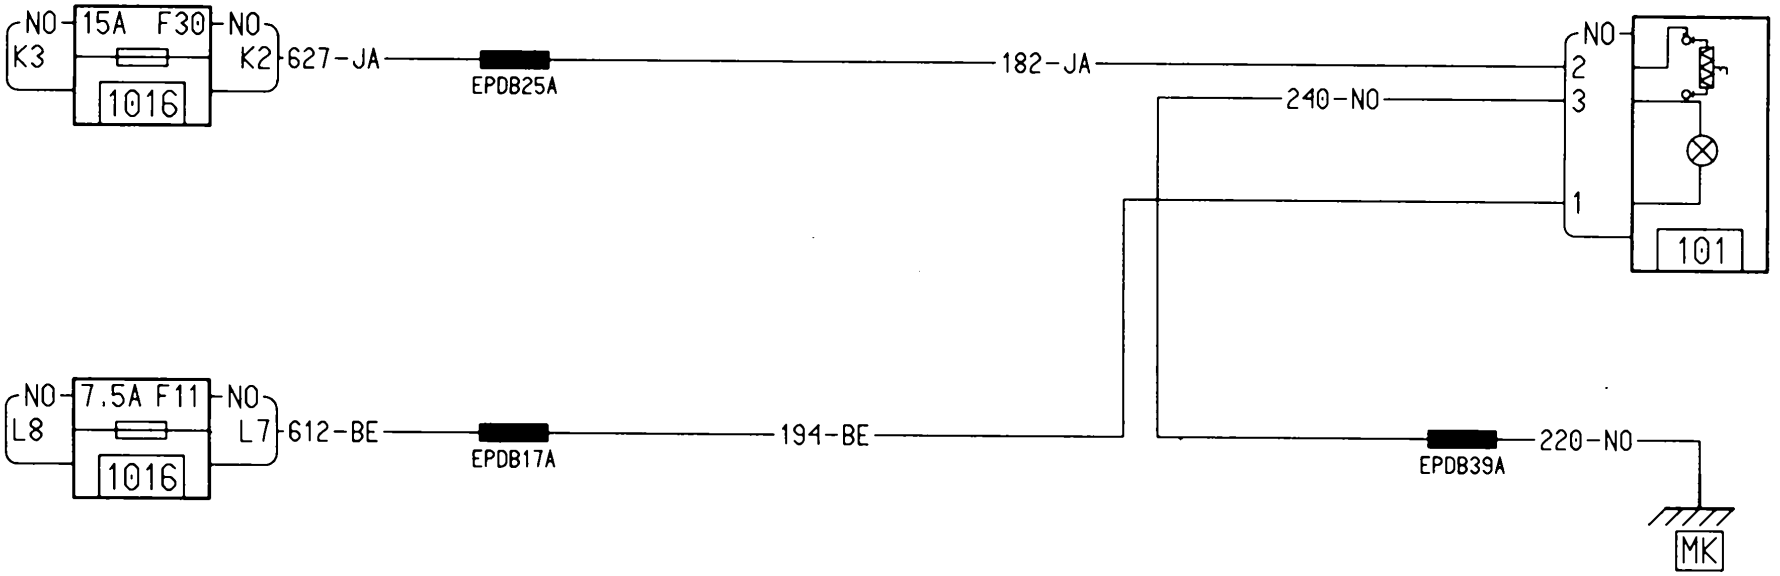


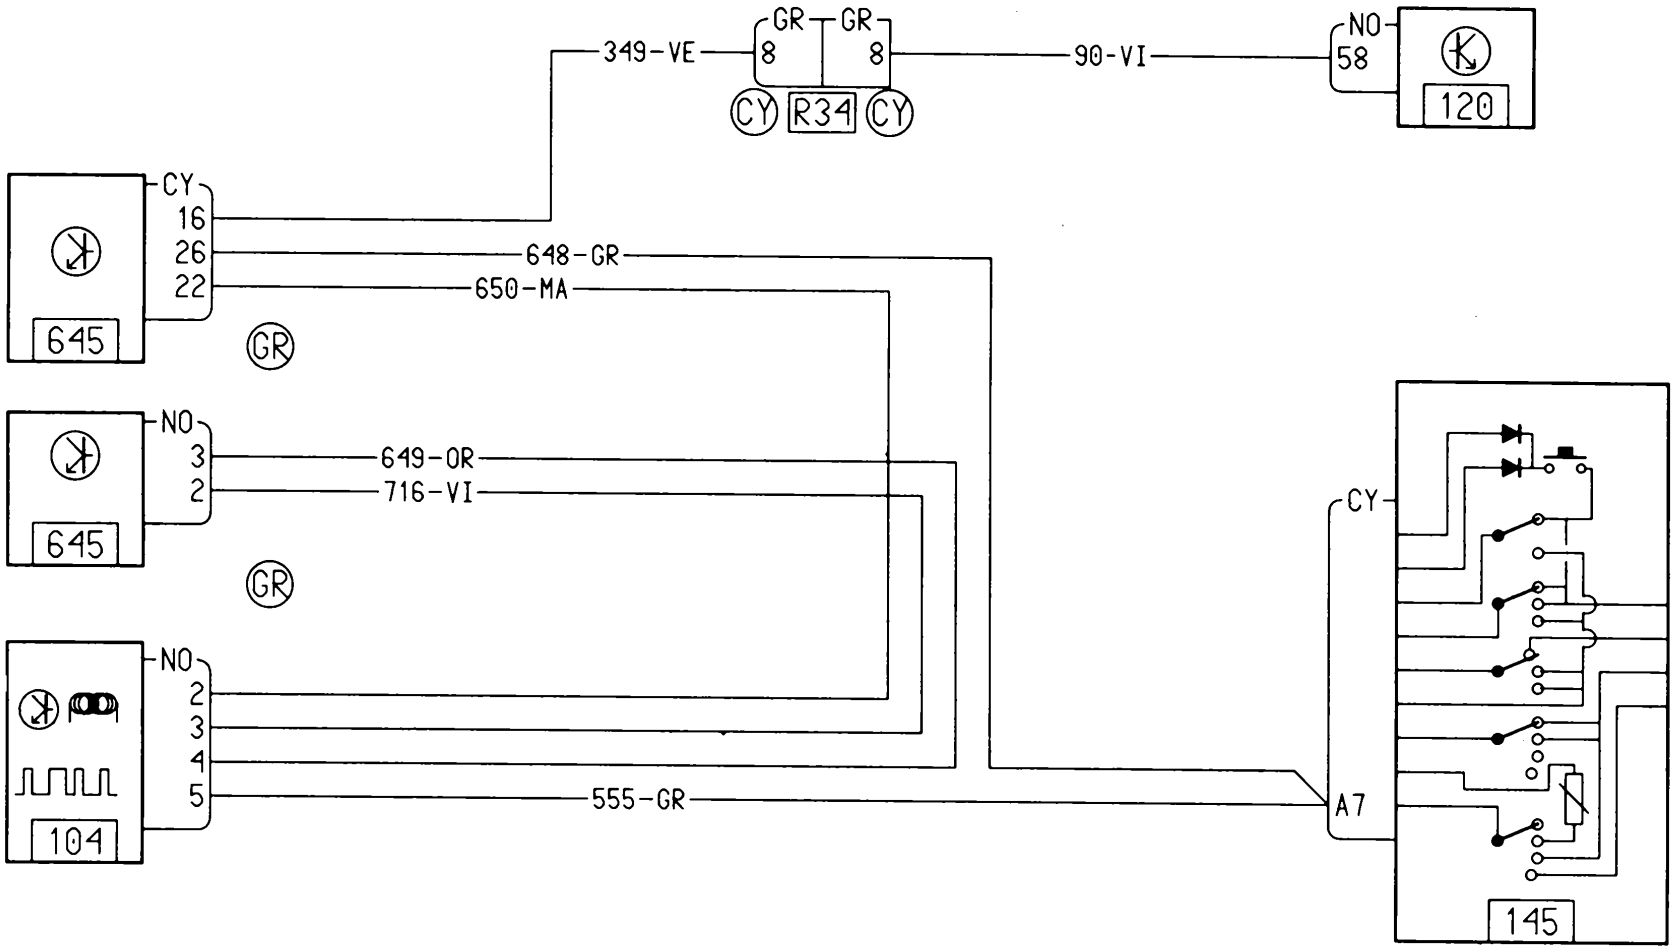

349-VE
GR
8
GR
8
CY
R34
CY
90-VI
NO
58
120
CY
16
26
22
645
GR
648-GR
650-MA
NO
3
2
645
GR
649-OR
716-VI
NO
2
3
4
5
104
555-GR
CY
A7
145

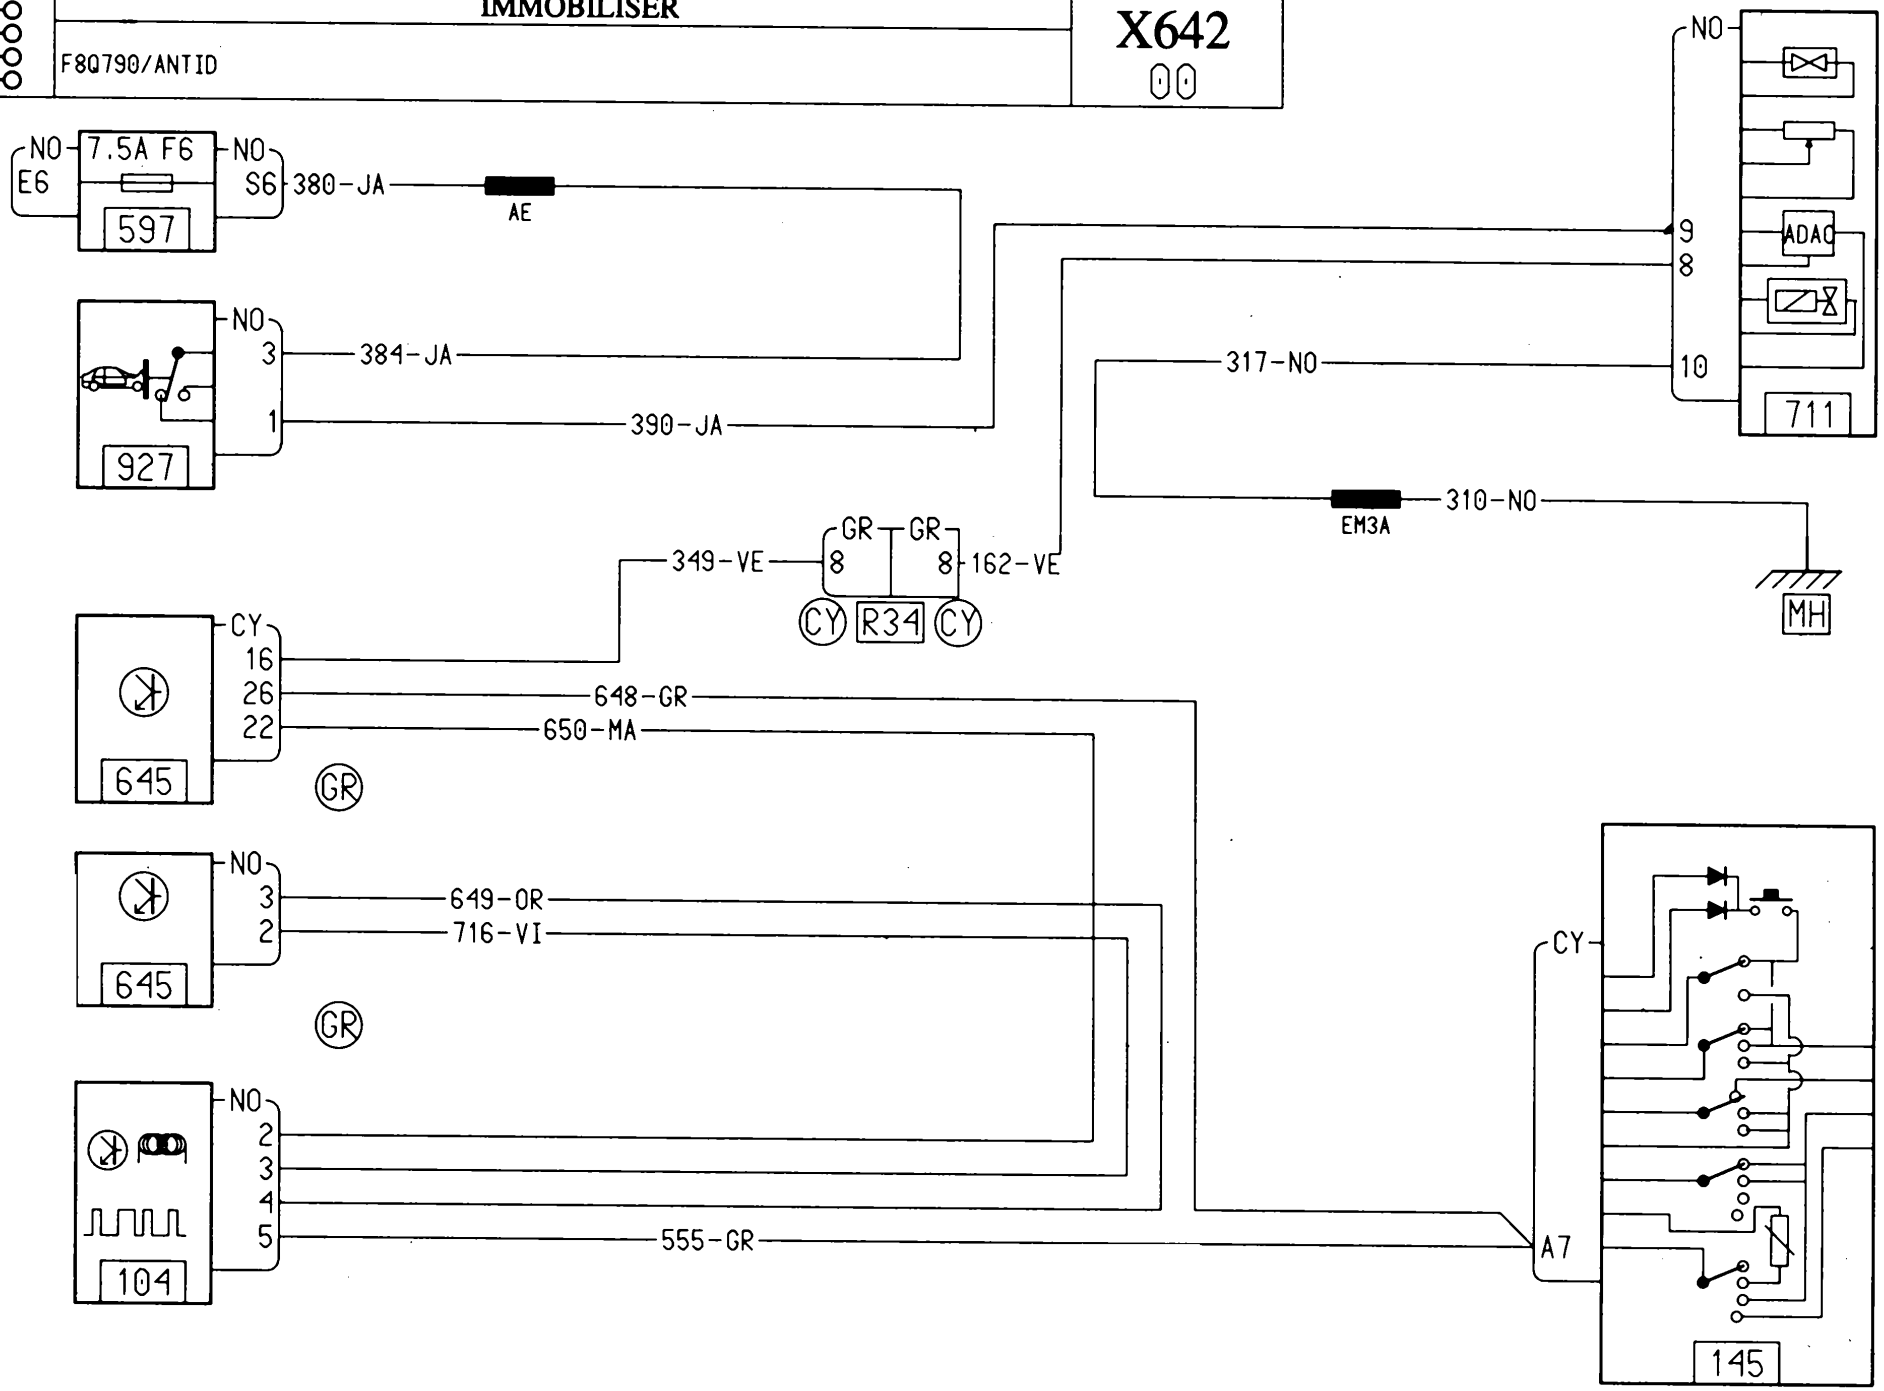

NO
7.5A F6
NO
E6
S6
380-JA
AE
597
NO
3
384-JA
1
390-JA
927
NO
9
8
ADAC
317-NO
10
711
EM3A
310-NO
MH
GR
GR
349-VE
8
8
162-VE
CY
R34
CY
CY
16
26
22
648-GR
650-MA
645
GR
NO
3
2
649-OR
716-VI
645
GR
NO
2
3
4
5
555-GR
104
CY
A7
145

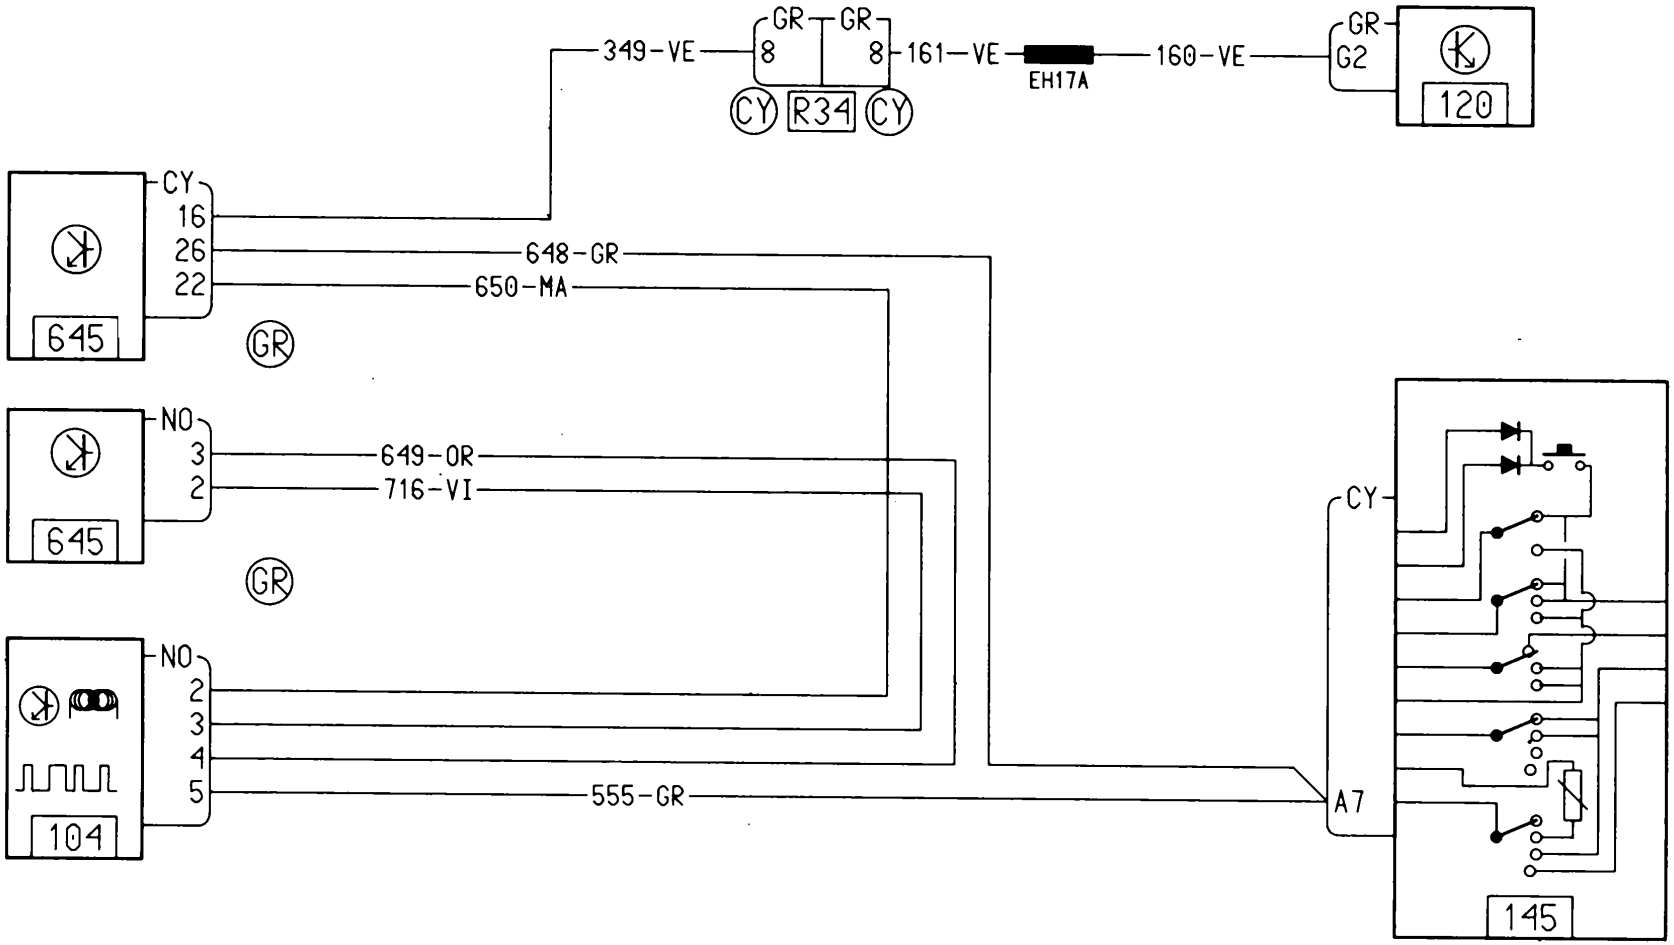

349-VE
GR
8
GR
8
CY
R34
CY
161-VE
EH17A
160-VE
GR
G2
120
CY
16
26
22
645
GR
648-GR
650-MA
NO
3
2
645
GR
649-OR
716-VI
NO
2
3
4
5
104
555-GR
CY
A7
145

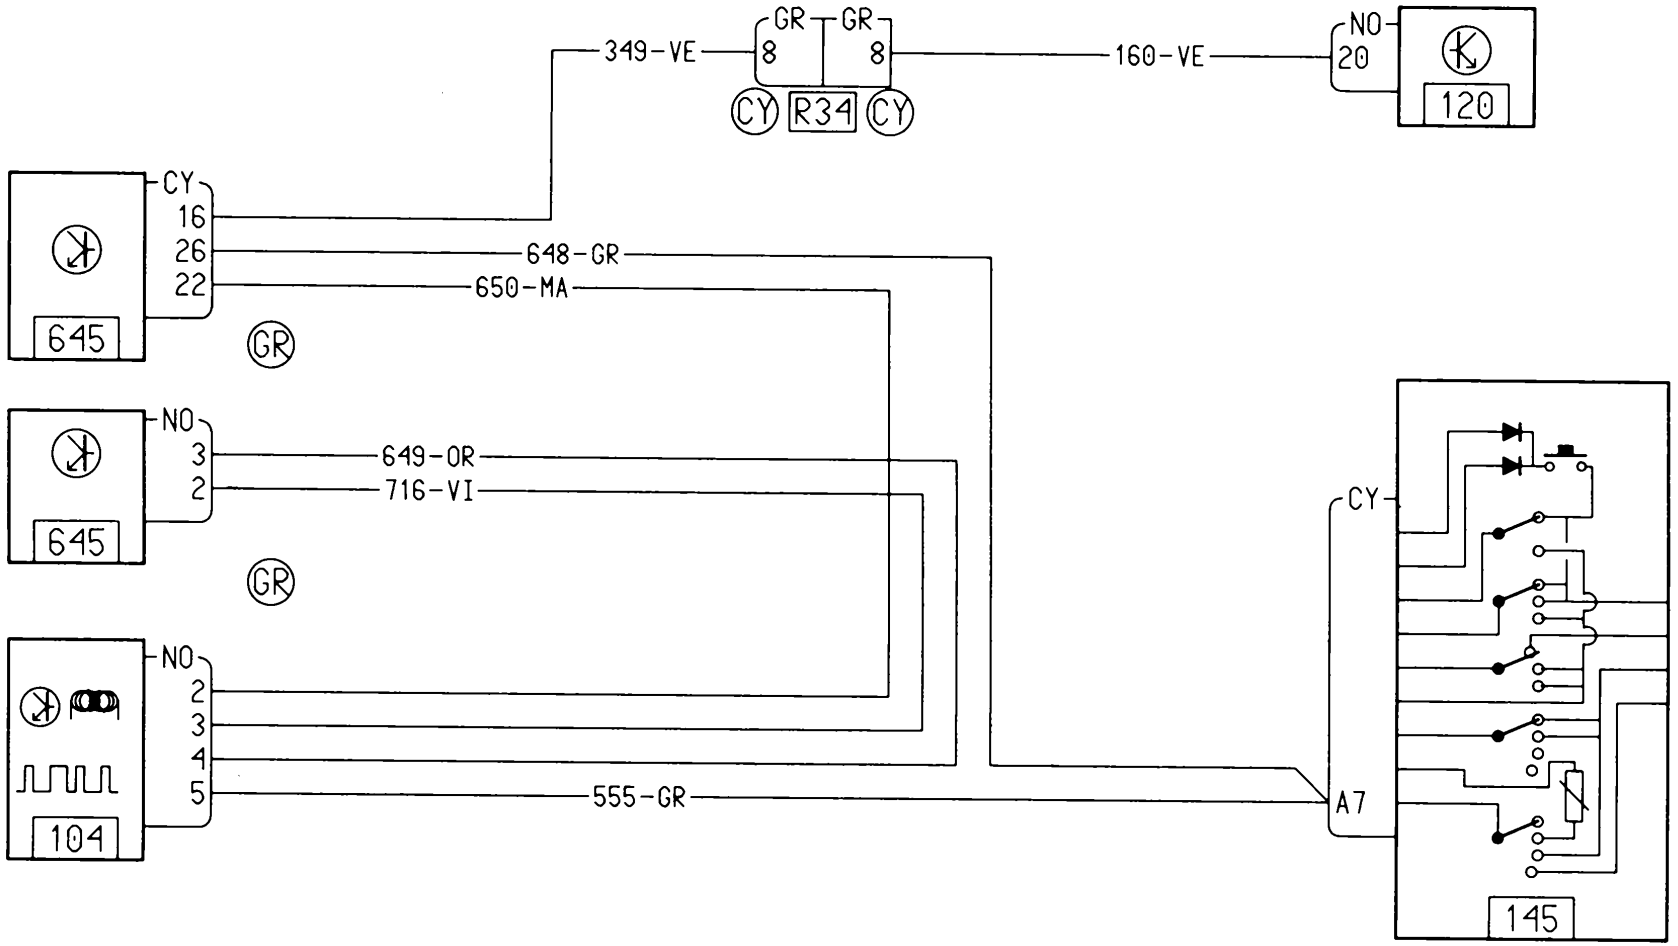
349-VE
GR
8
GR
8
CY
R34
CY
160-VE
NO
20
120
CY
16
26
22
645
GR
648-GR
650-MA
NO
3
2
645
GR
649-OR
716-VI
NO
2
3
4
5
104
555-GR
CY
A7
145

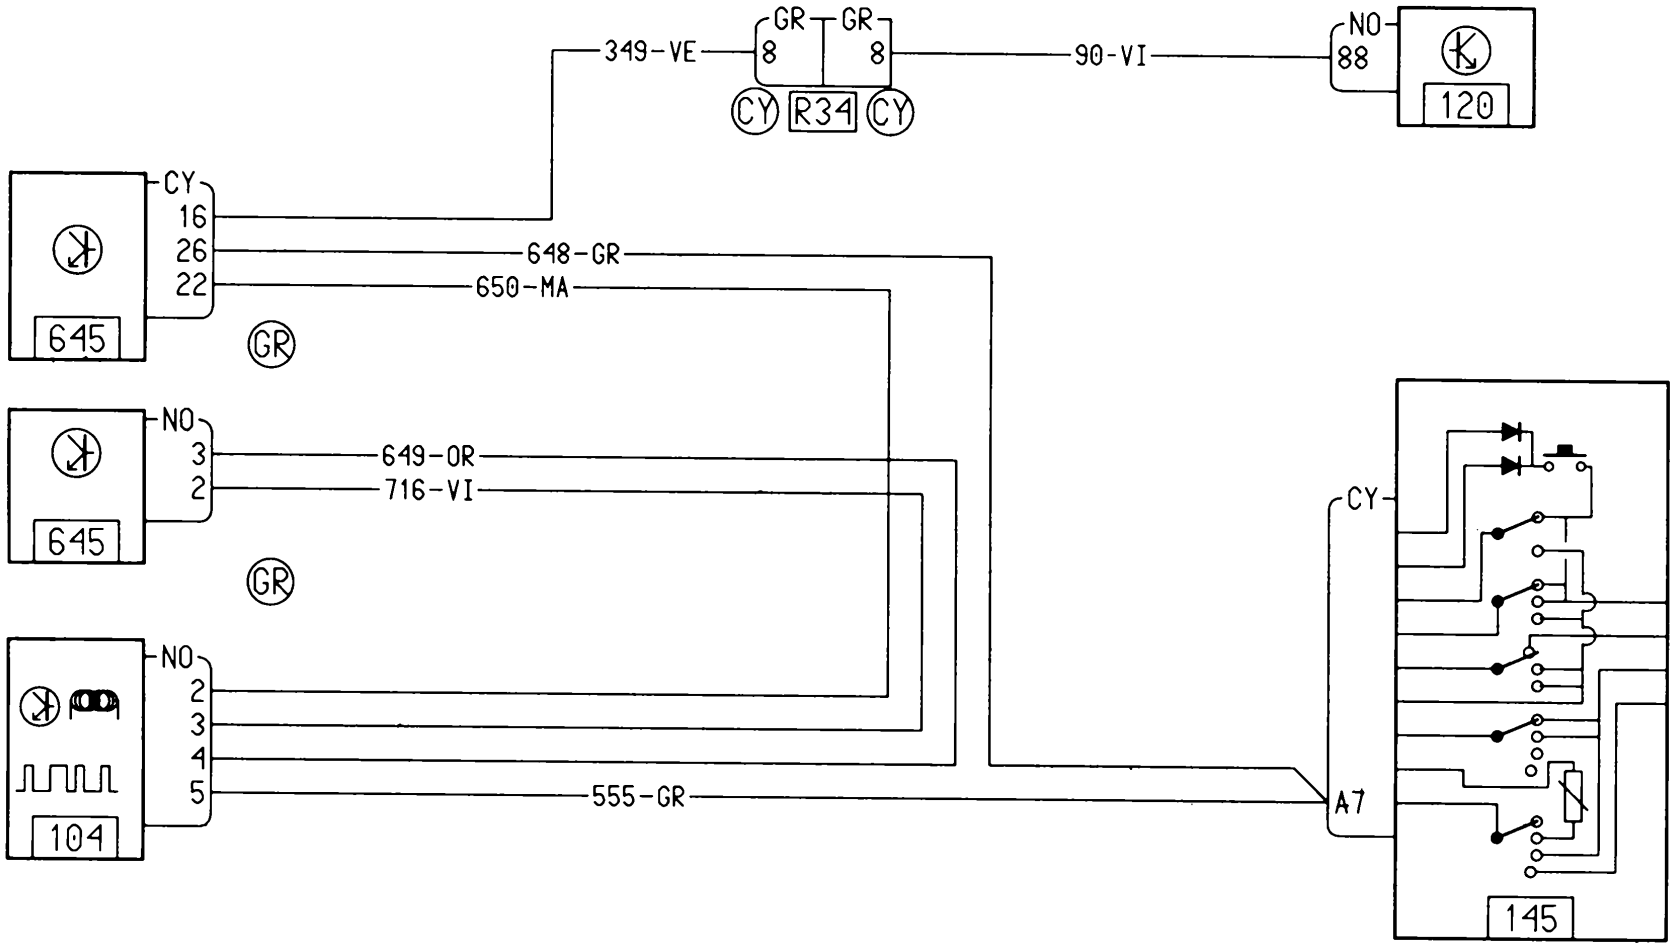
GR
GR
8
8
349-VE
90-VI
CY
R34
CY
NO
88
120
CY
16
26
22
648-GR
650-MA
645
GR
NO
3
2
649-OR
716-VI
645
GR
NO
2
3
4
5
555-GR
104
CY
A7
145

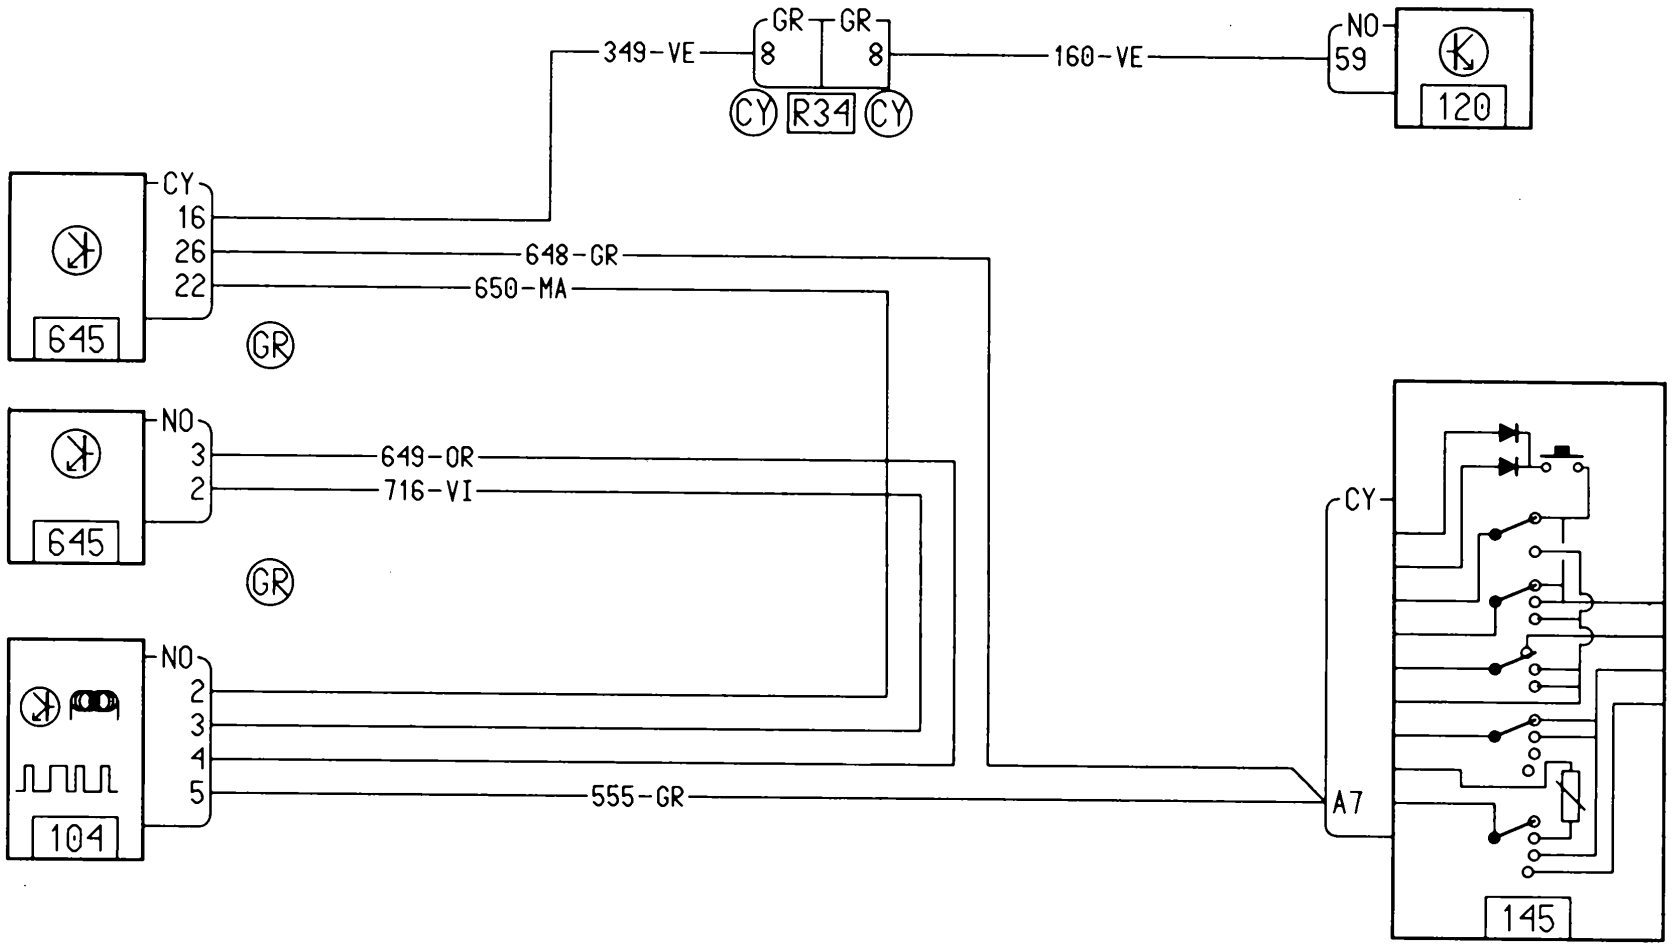
349-VE
GR
8
GR
8
CY
R34
CY
160-VE
NO
59
120
CY
16
26
22
645
GR
648-GR
650-MA
NO
3
2
645
GR
649-OR
716-VI
NO
2
3
4
5
104
555-GR
CY
A7
145

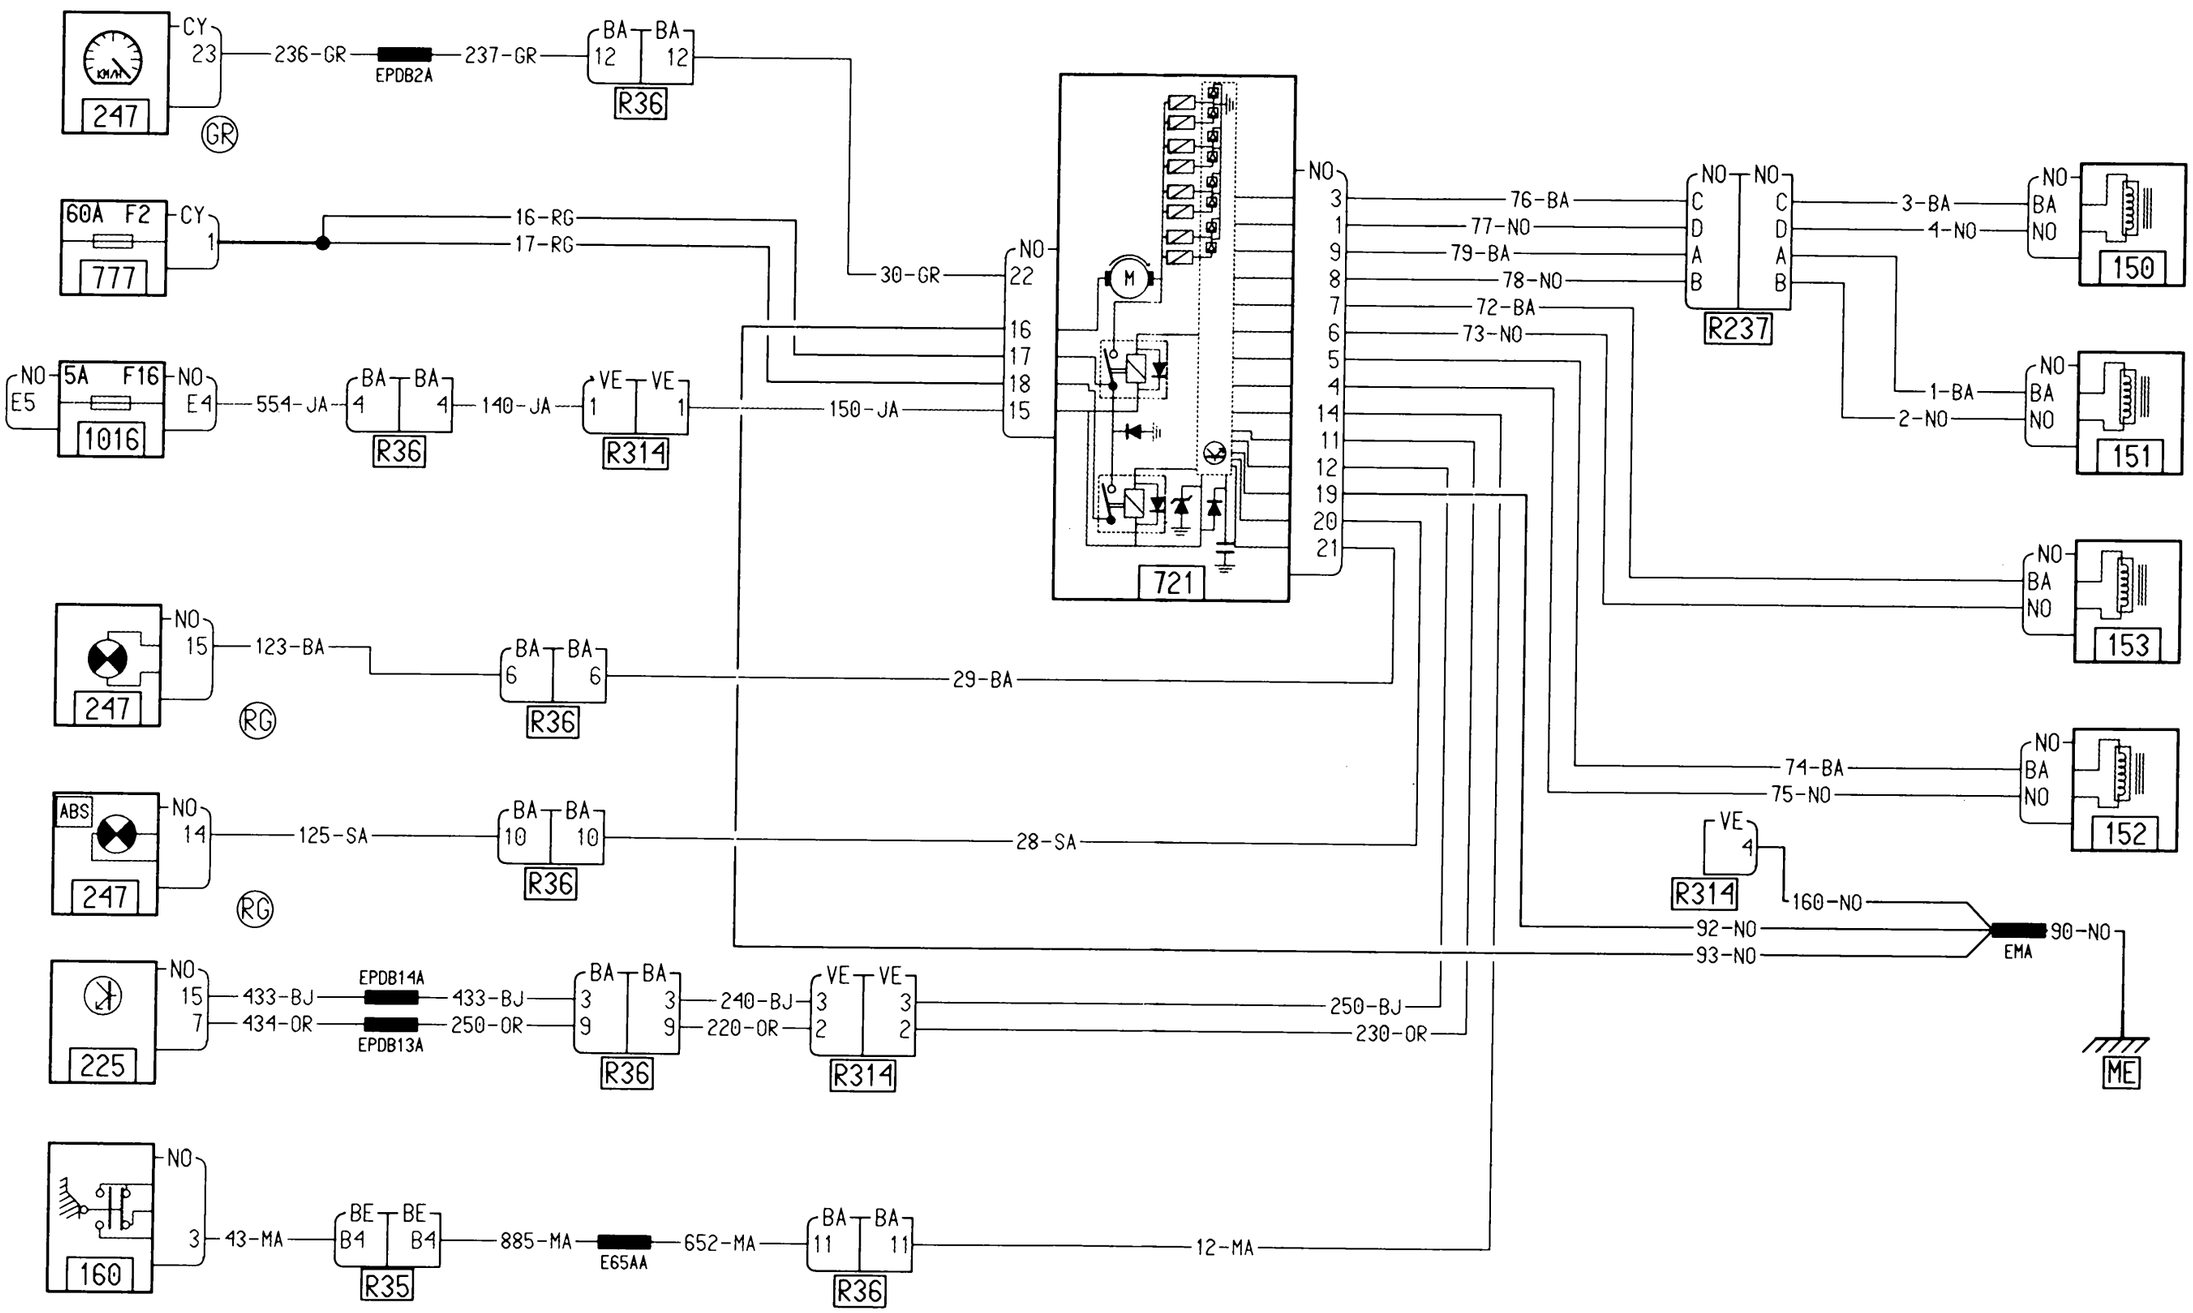

247
CY
23
236-GR
EPDB2A
237-GR
BA
12
BA
12
R36
GR
60A F2
777
CY
1
16-RG
17-RG
30-GR
NO
E5
5A F16
1016
NO
E4
554-JA
BA
4
BA
4
R36
140-JA
VE
1
VE
1
R314
150-JA
NO
22
16
17
18
15
M
721
NO
3
1
9
8
7
6
5
4
14
11
12
19
20
21
76-BA
77-NO
79-BA
78-NO
72-BA
73-NO
NO
C
D
A
B
NO
C
D
A
B
R237
3-BA
4-NO
1-BA
2-NO
NO
BA
NO
150
NO
BA
NO
151
NO
BA
NO
153
74-BA
75-NO
NO
BA
NO
152
247
NO
15
123-BA
BA
6
BA
6
R36
29-BA
RG
ABS
247
NO
14
125-SA
BA
10
BA
10
R36
28-SA
RG
VE
4
R314
160-NO
92-NO
93-NO
EMA
90-NO
ME
225
NO
15
7
433-BJ
434-OR
EPDB14A
EPDB13A
433-BJ
250-OR
BA
3
9
BA
3
9
R36
240-BJ
220-OR
VE
3
2
VE
3
2
R314
250-BJ
230-OR
160
NO
3
43-MA
BE
B4
BE
B4
R35
885-MA
E65AA
652-MA
BA
11
BA
11
R36
12-MA

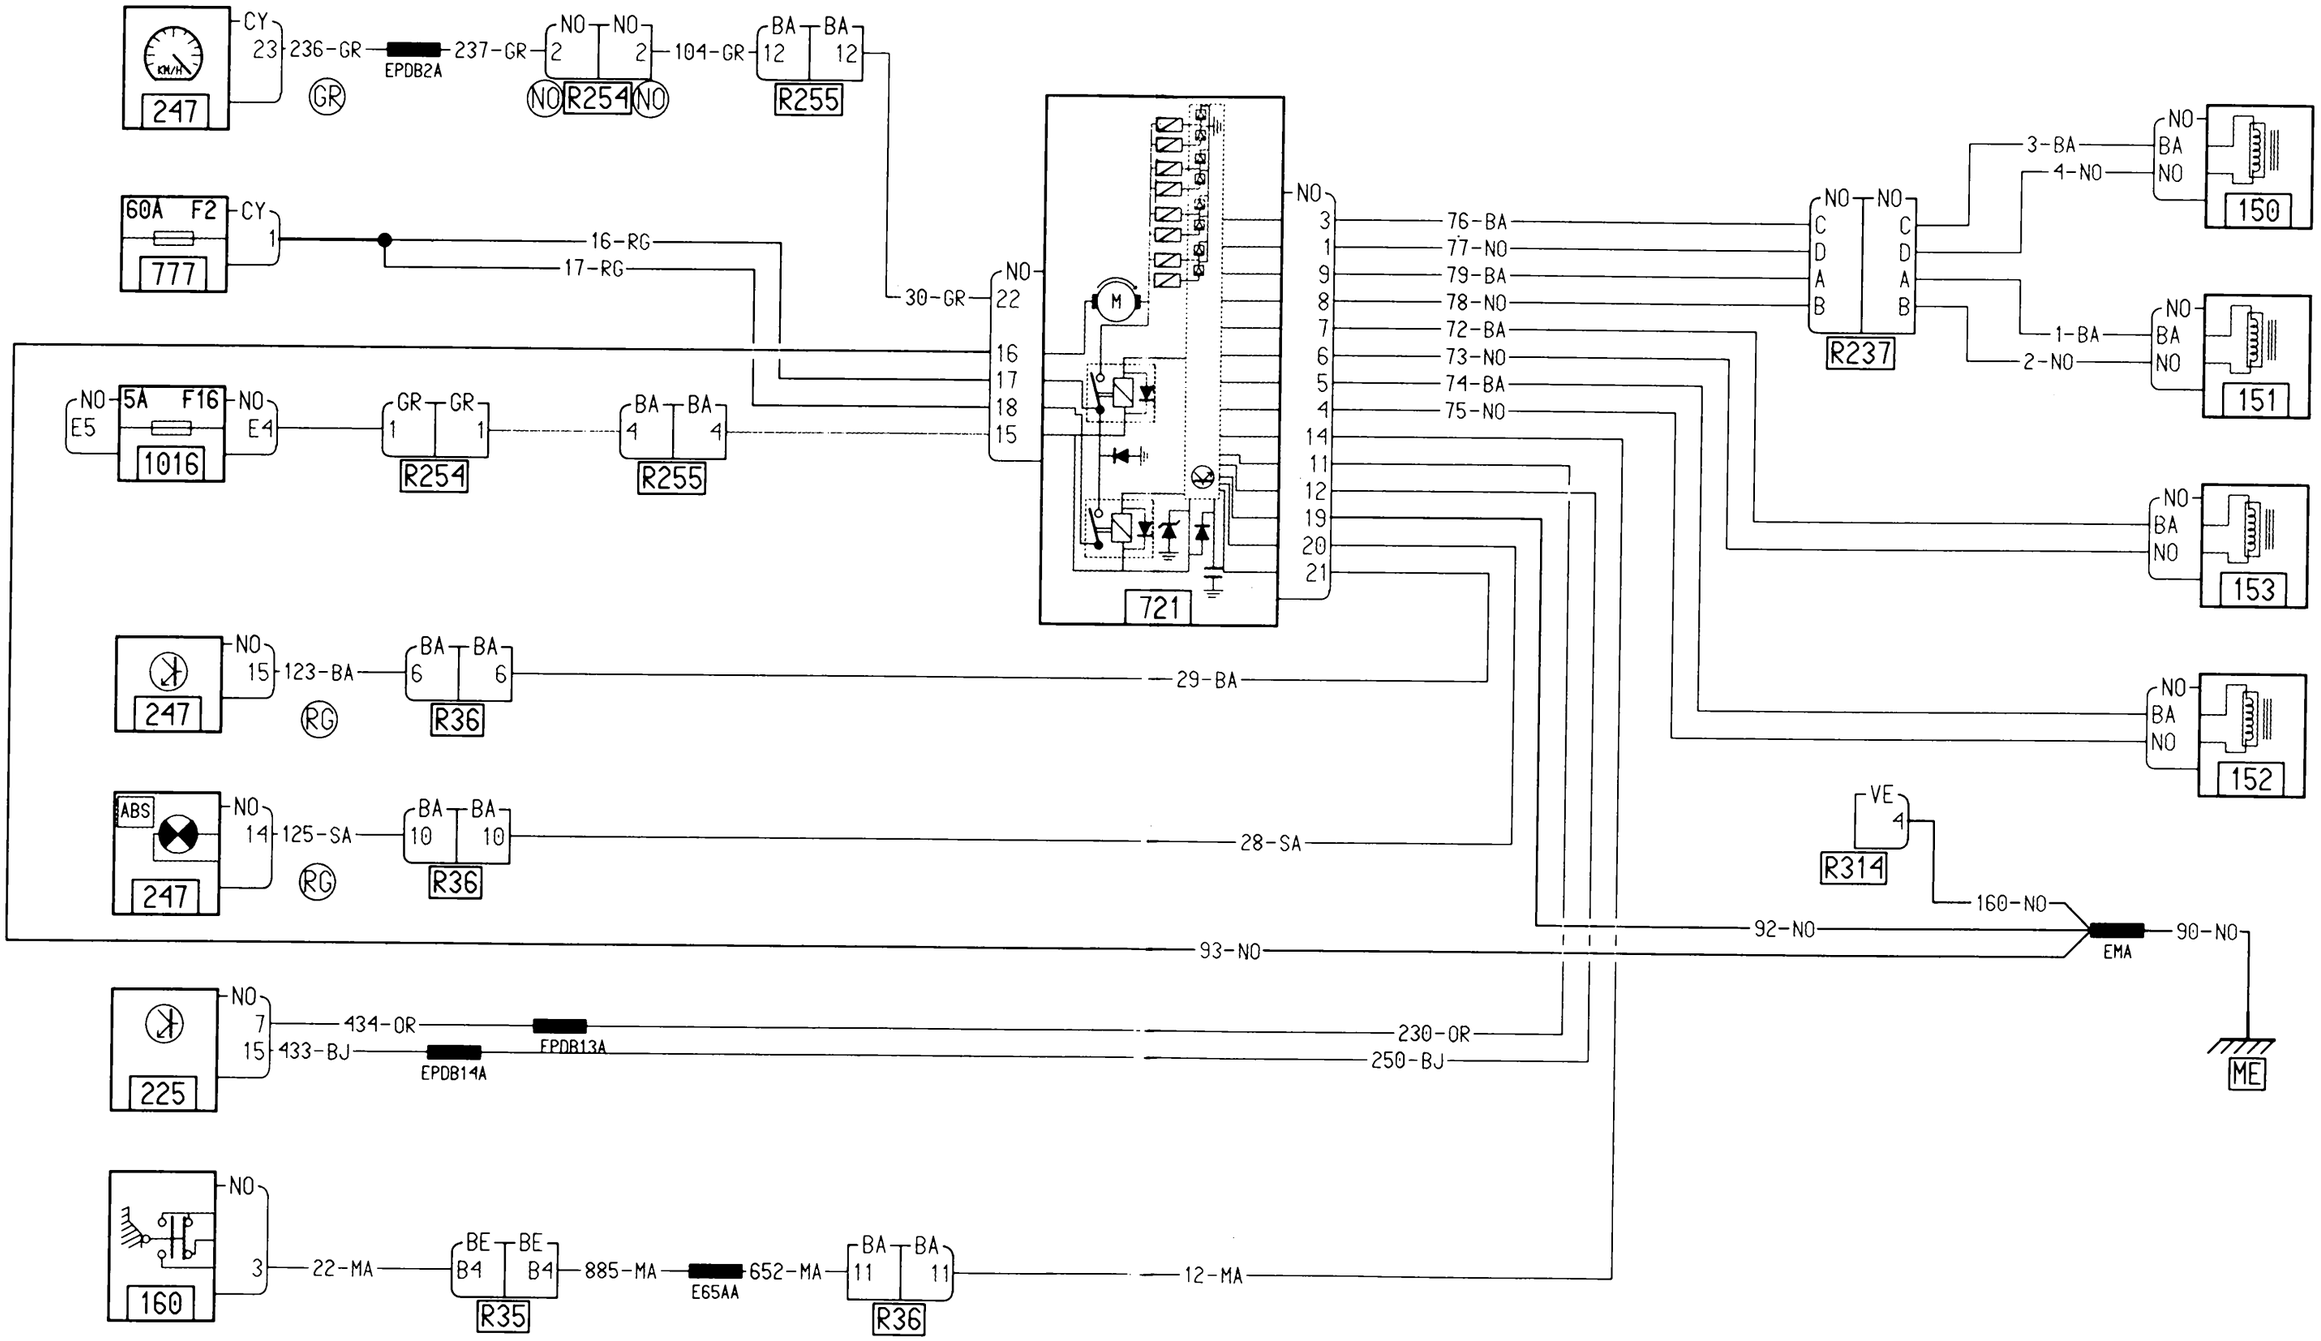
247
CY
23
236-GR
EPDB2A
237-GR
NO
2
NO
2
104-GR
BA
12
BA
12
GR
NO R254 NO
R255
60A F2
777
CY
1
16-RG
17-RG
30-GR
NO
22
16
17
18
15
721
NO
3
1
9
8
7
6
5
4
14
11
12
19
20
21
76-BA
77-NO
79-BA
78-NO
72-BA
73-NO
74-BA
75-NO
R237
3-BA
4-NO
1-BA
2-NO
150
151
153
152
NO E5
5A F16
NO E4
1016
GR
1
GR
1
R254
BA
4
BA
4
R255
247
NO
15
123-BA
BA
6
BA
6
R36
29-BA
RG
ABS
247
NO
14
125-SA
BA
10
BA
10
R36
28-SA
RG
VE
4
R314
160-NO
92-NO
EMA
90-NO
ME
93-NO
225
NO
7
15
434-OR
433-BJ
EPDB13A
EPDB14A
230-OR
250-BJ
160
NO
3
22-MA
BE
B4
BE
B4
R35
885-MA
E65AA
652-MA
BA
11
BA
11
R36
12-MA

HORN

SAUF F5R740


X642
00

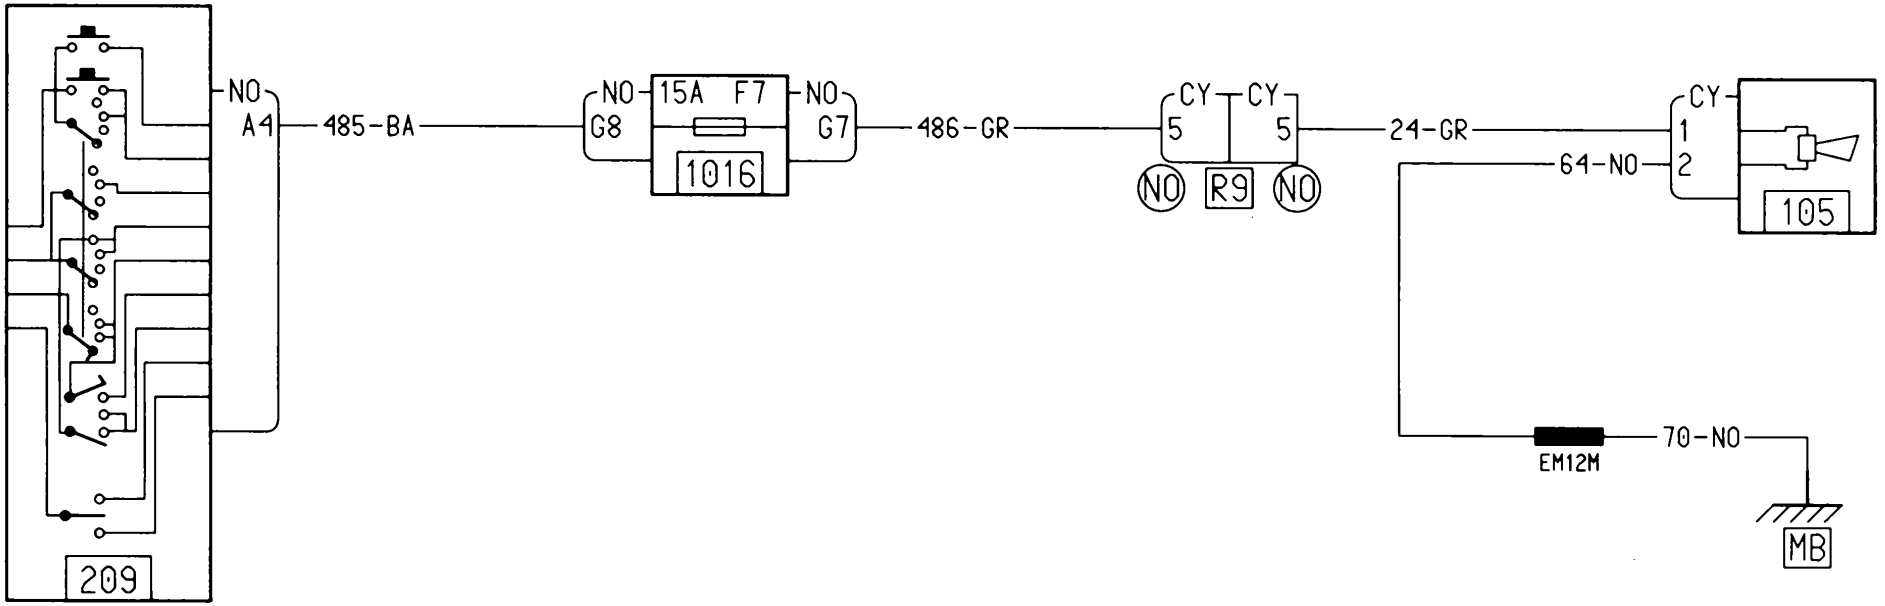


HORN

SAUF F5R740/yHECOL

X642
00

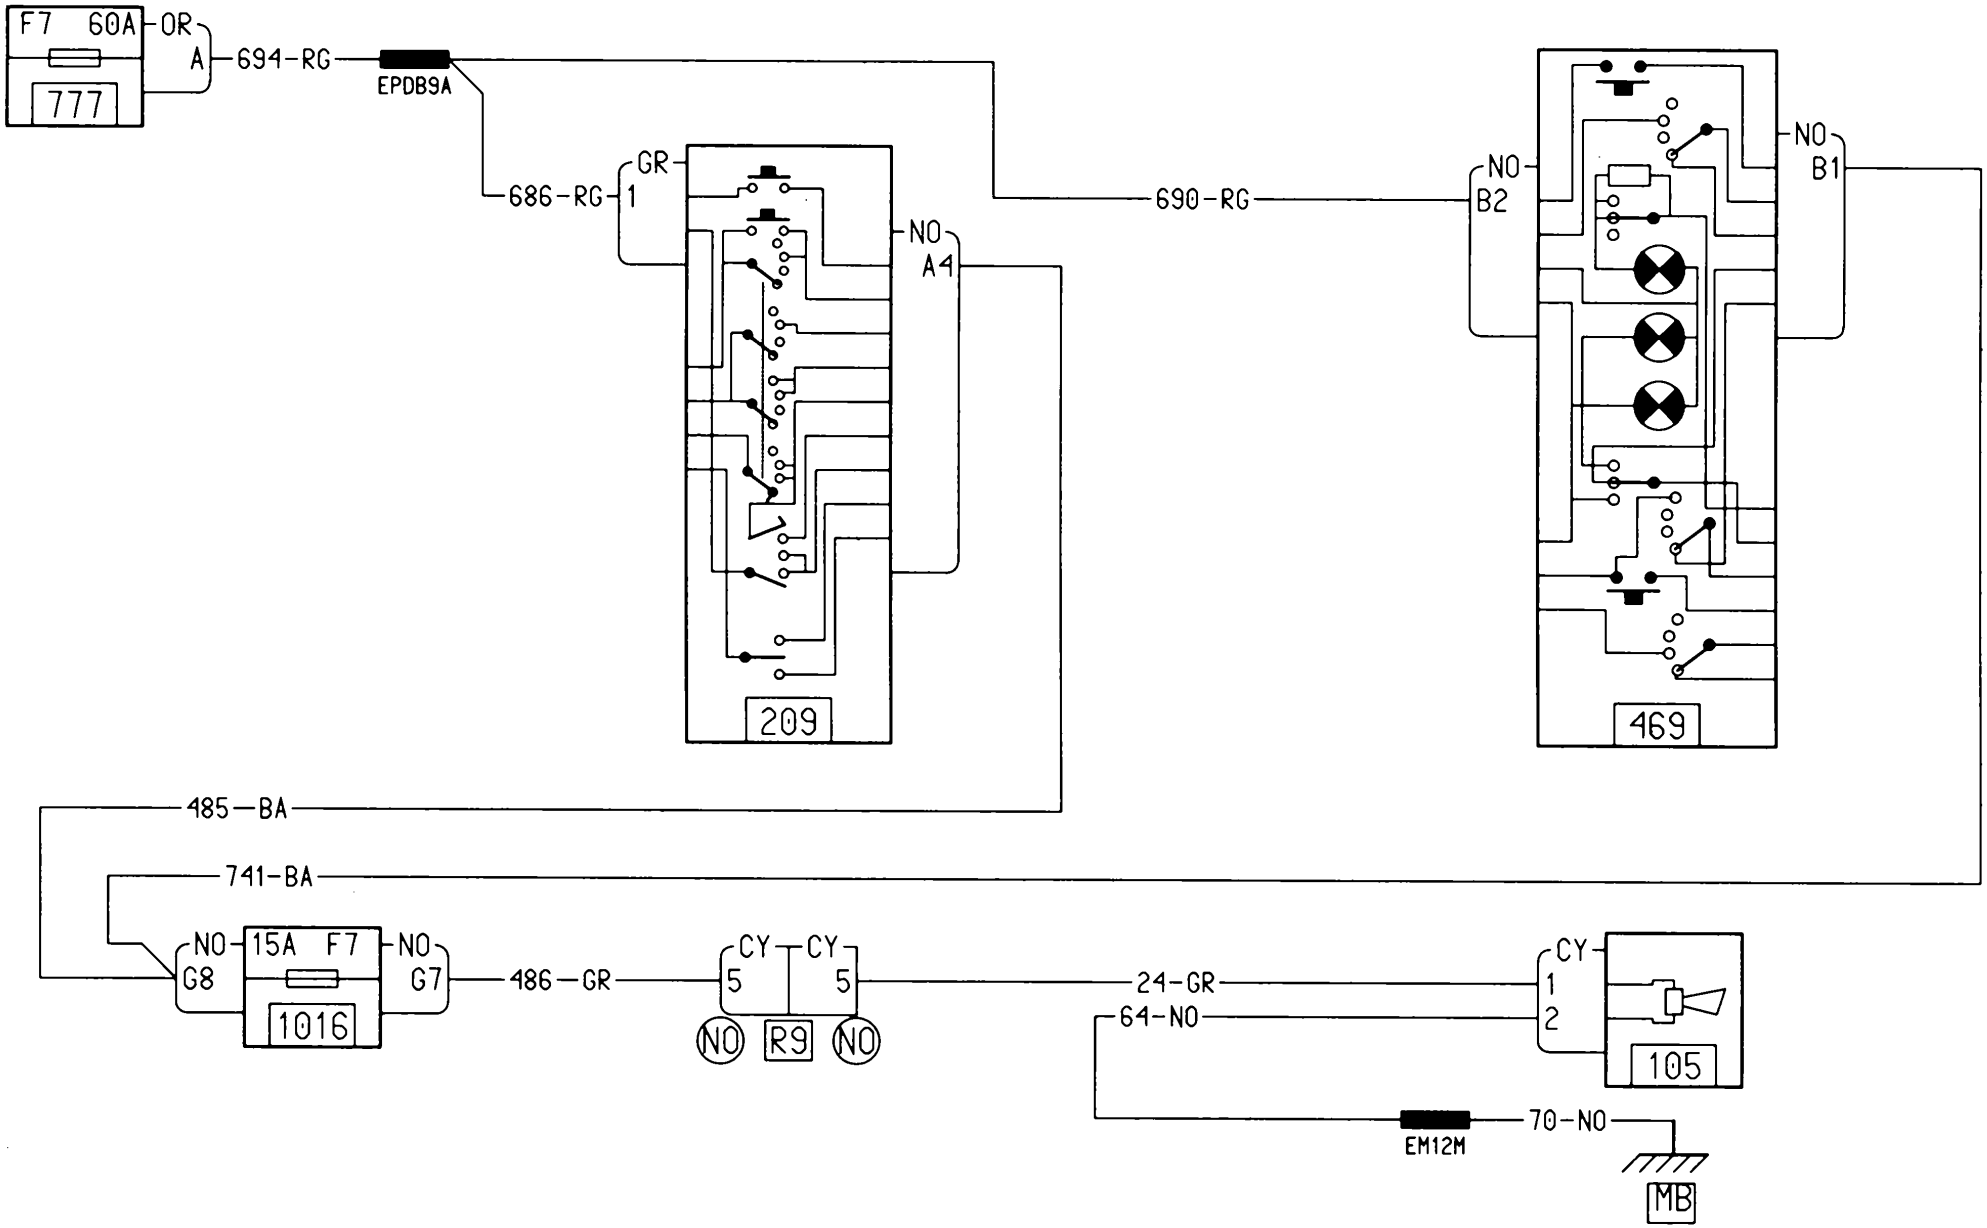

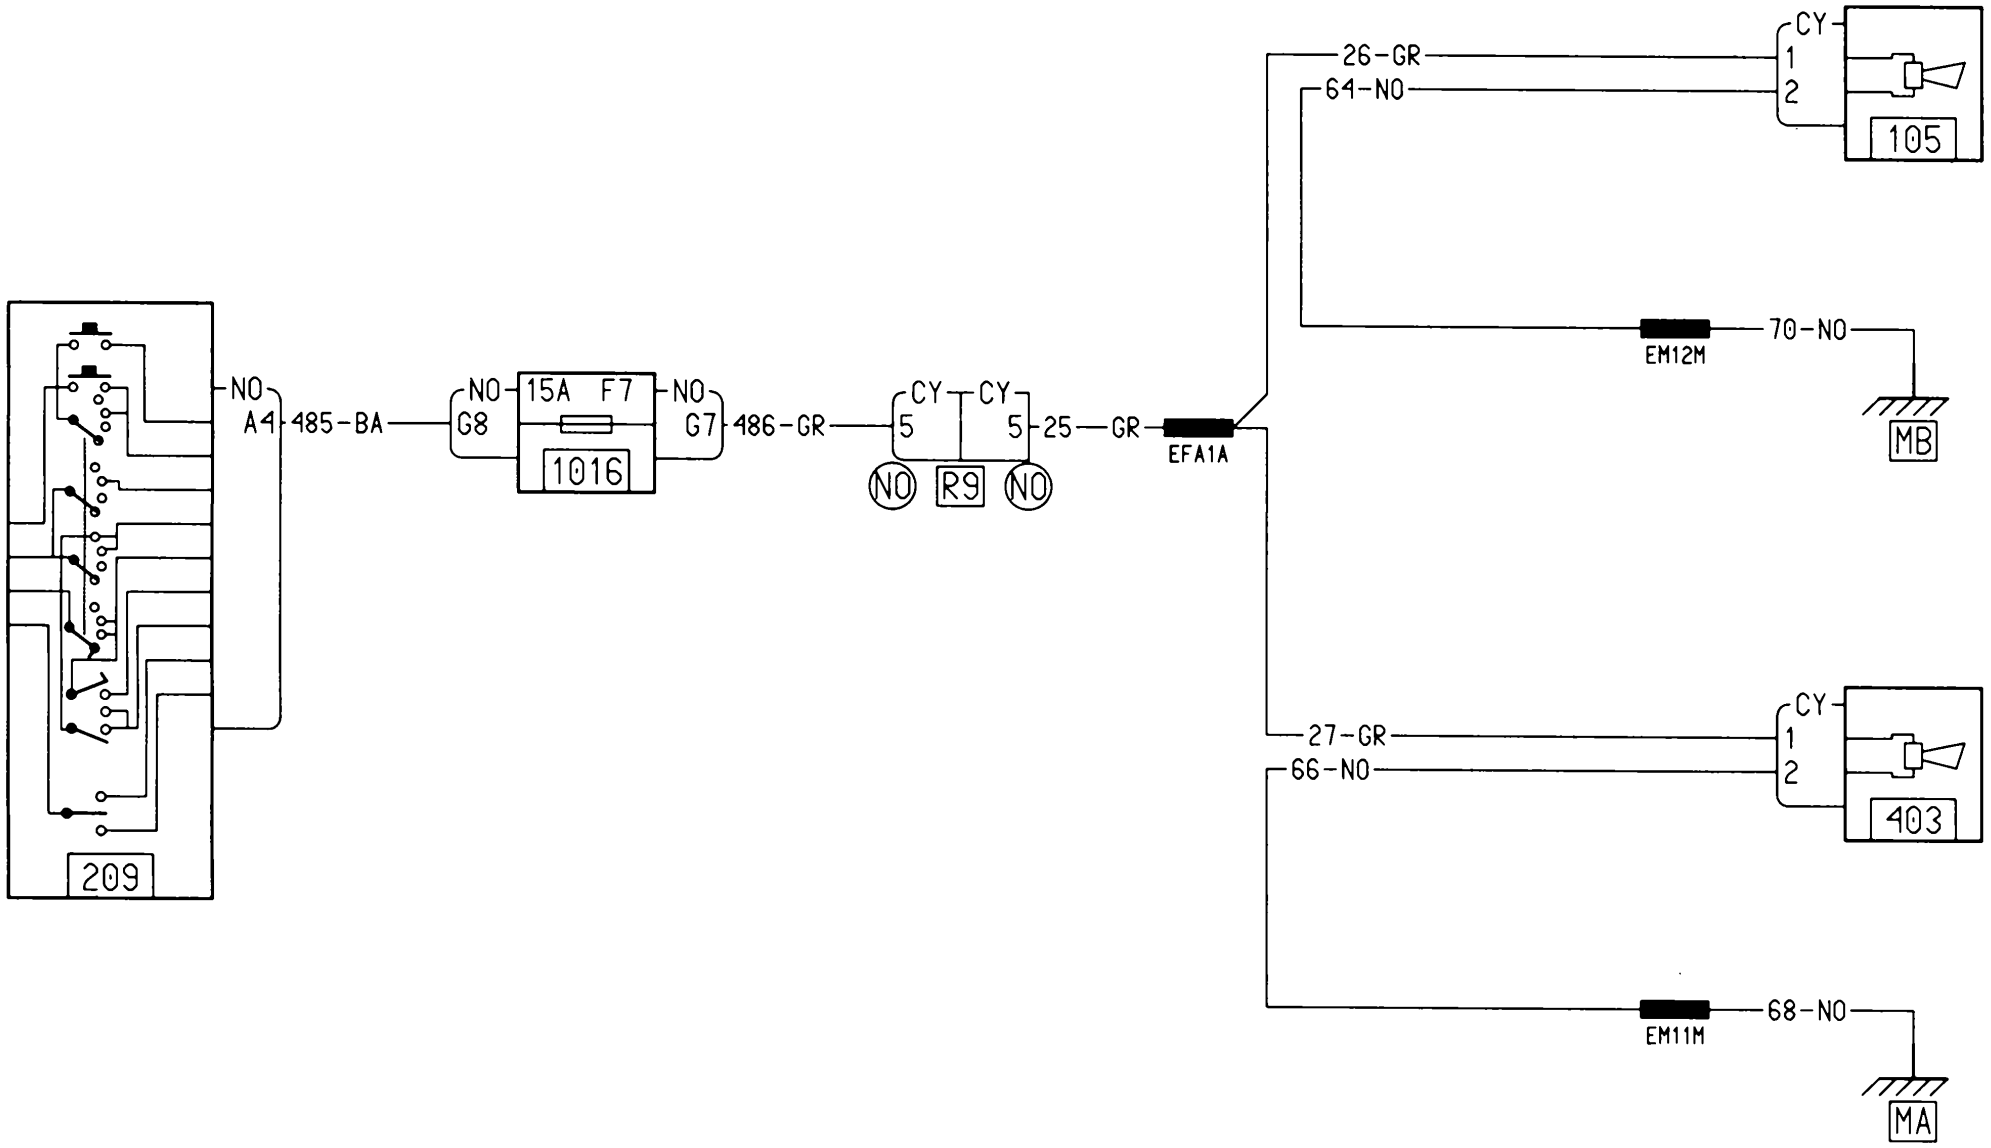

CY
1
2
105
26-GR
64-NO
EM12M
70-NO
MB
NO
A4
485-BA
209
NO
15A F7
G8
1016
NO
G7
486-GR
CY
5
CY
5
NO
R9
NO
25-GR
EFA1A
CY
1
2
403
27-GR
66-NO
EM11M
68-NO
MA


HORN


L64/F4R740,F4R741/PARMEX


X642


00

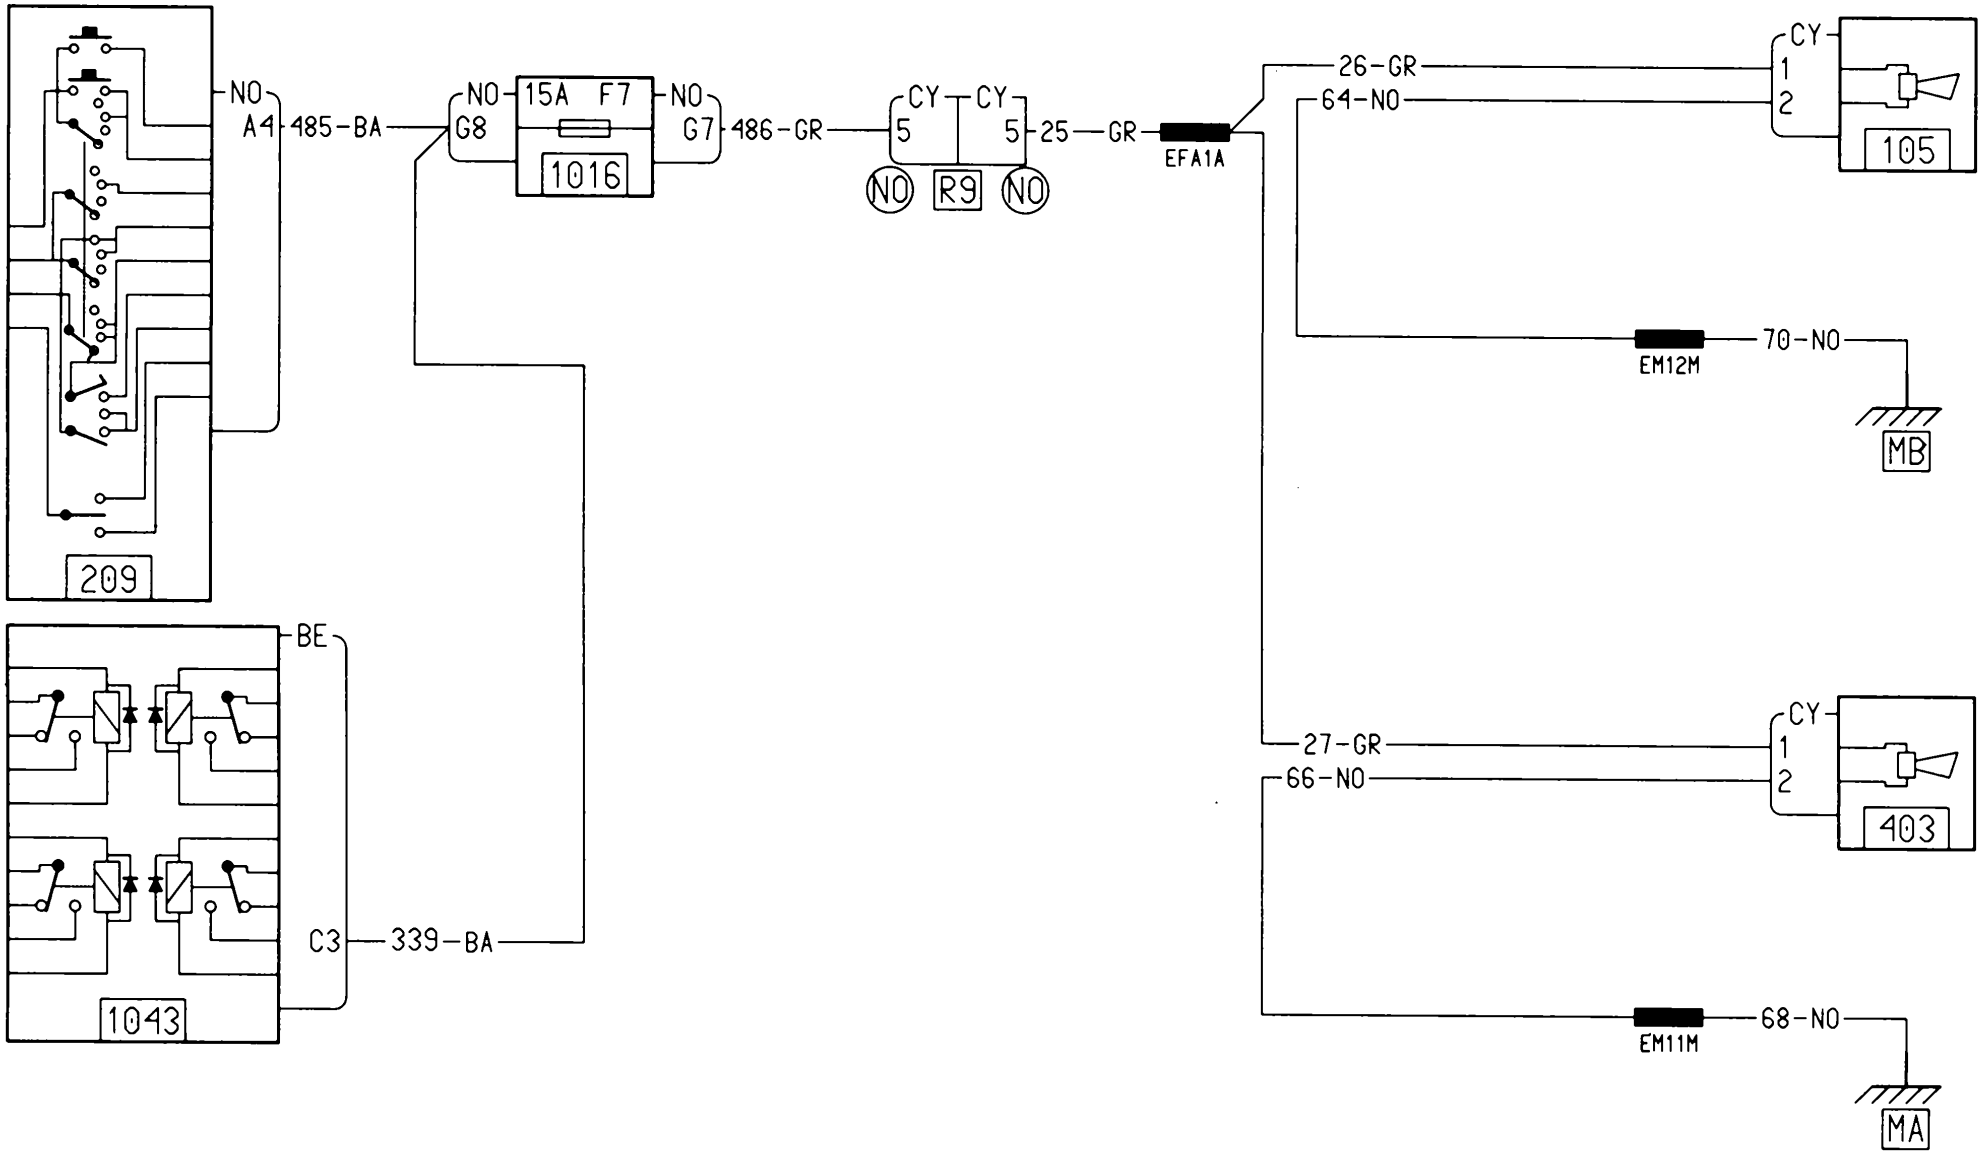


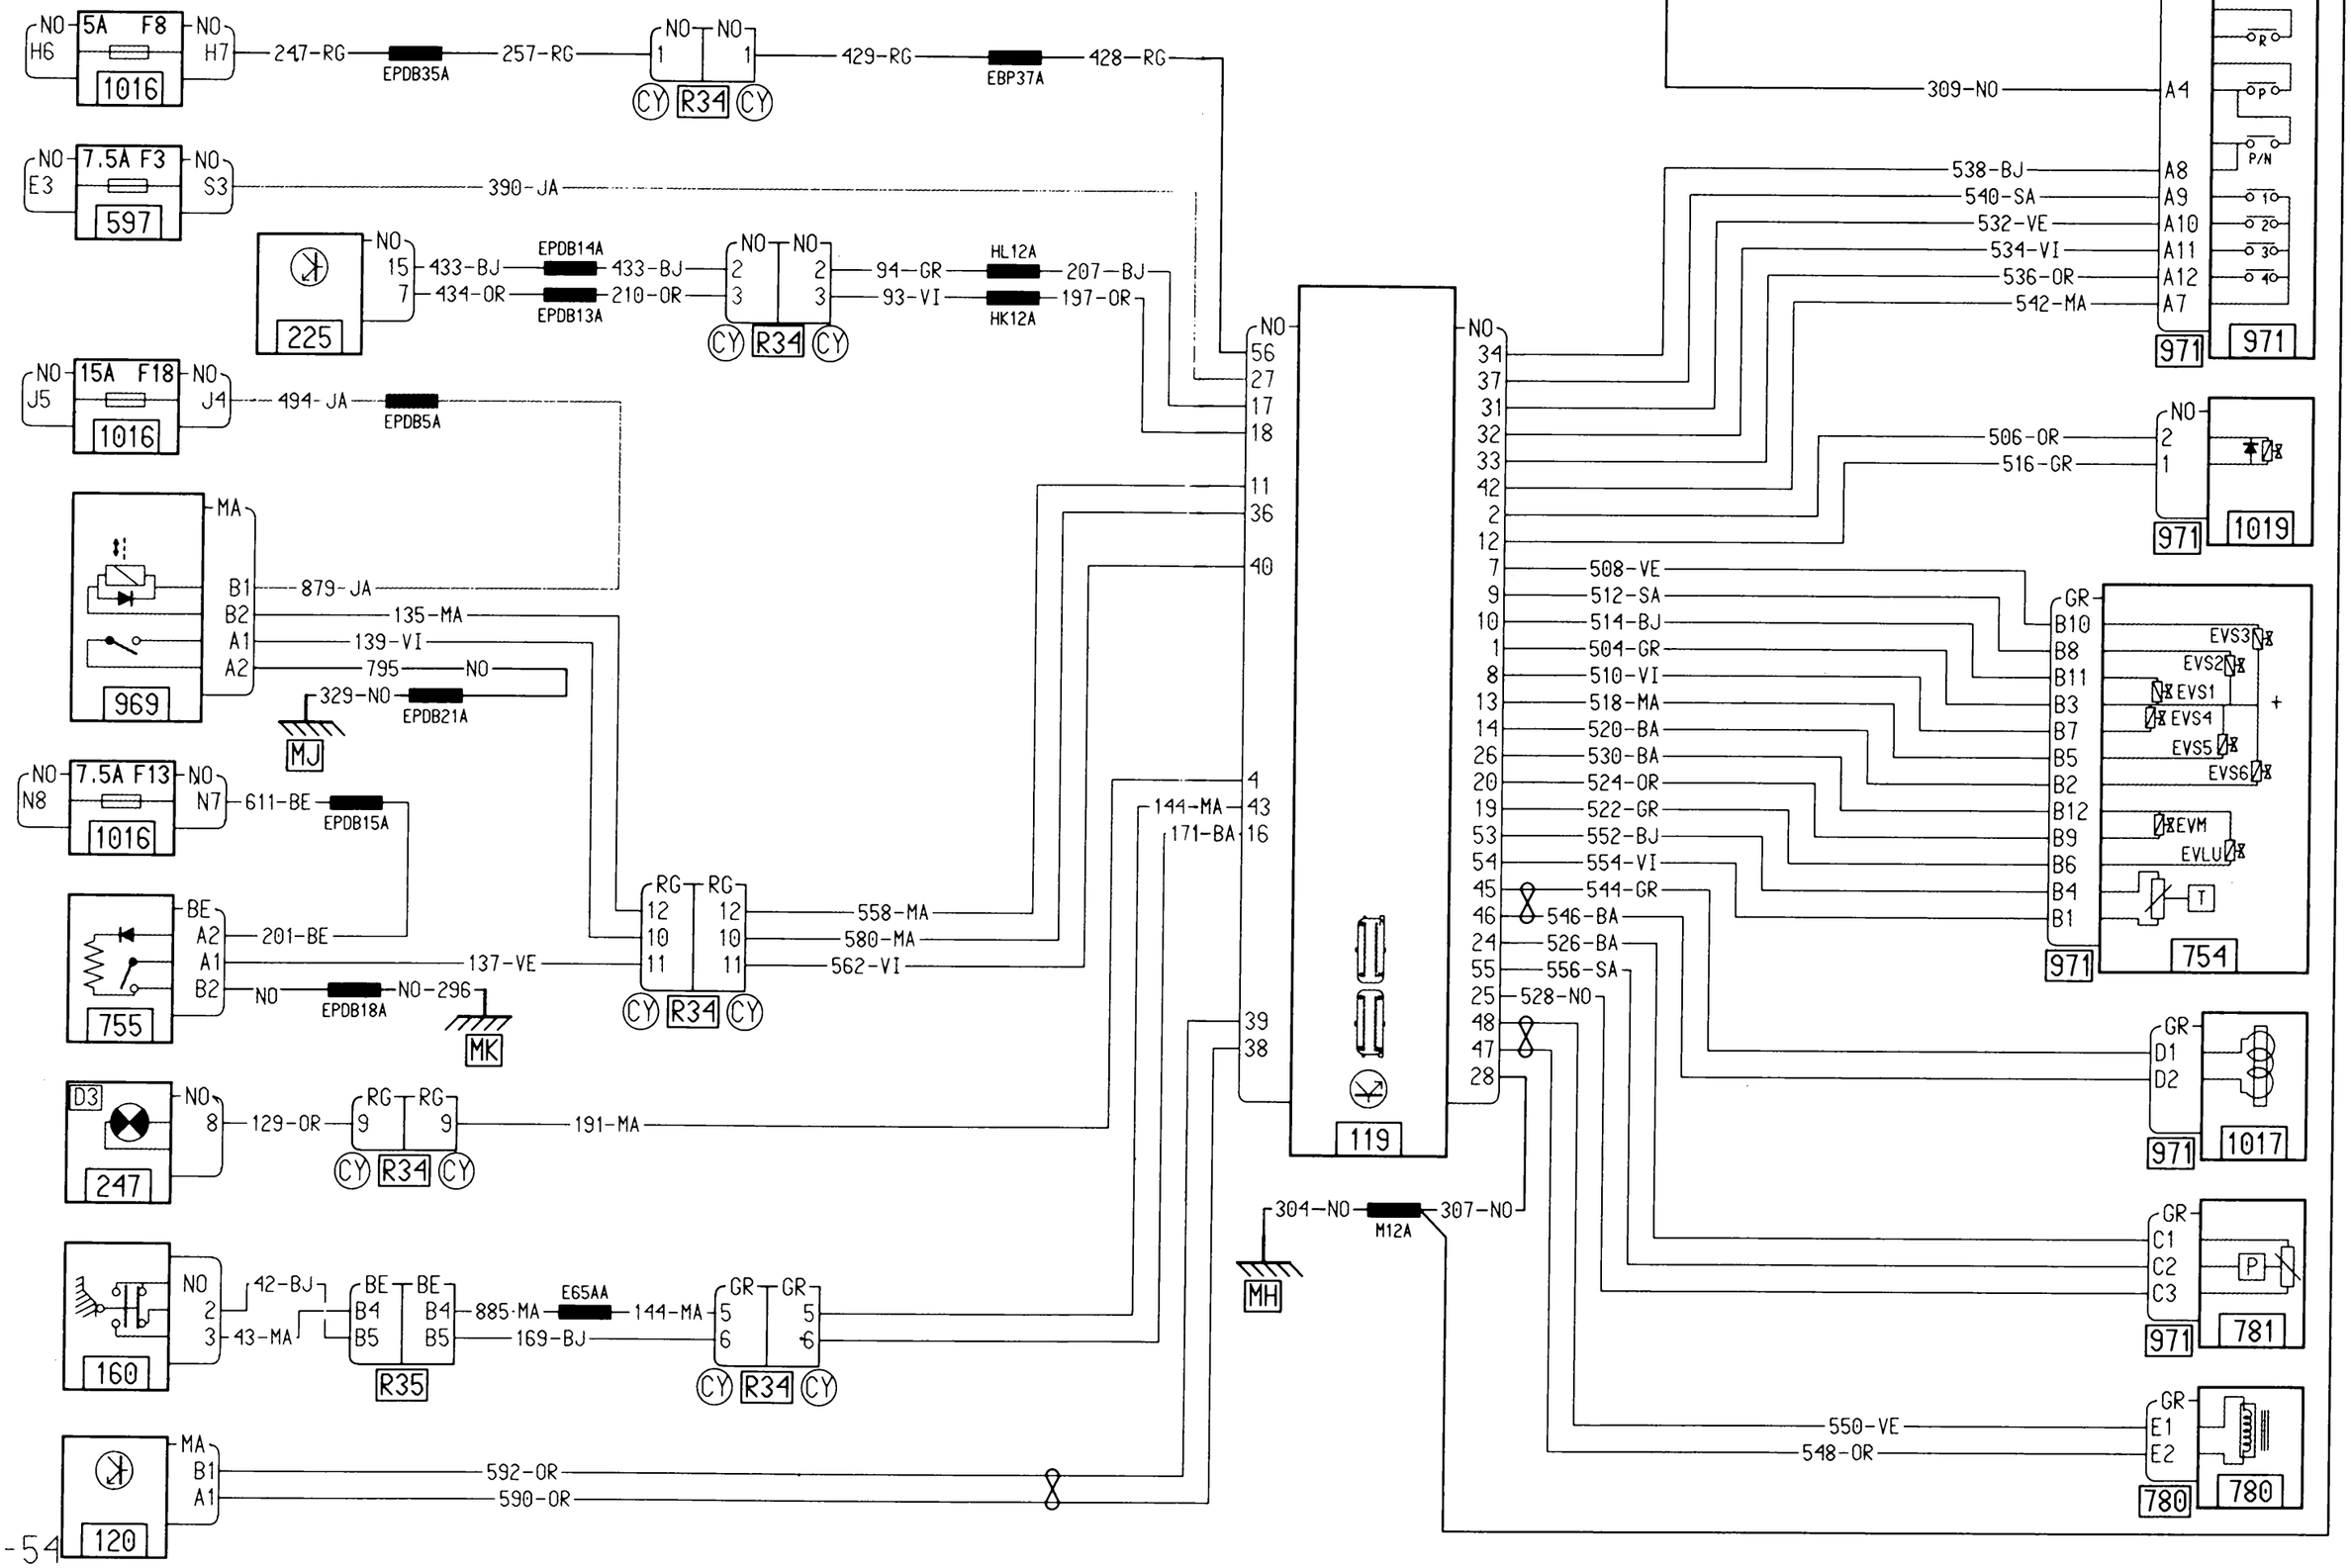

NO 5A F8 NO
H6 H7
1016
247-RG
EPDB35A
257-RG
NO NO
1 1
CY R34 CY
429-RG
EBP37A
428-RG
NO 7.5A F3 NO
E3 S3
597
390-JA
225
NO
15 433-BJ EPDB14A 433-BJ
7 434-OR EPDB13A 210-OR
NO NO
2 2
3 3
CY R34 CY
94-GR HL12A 207-BJ
93-VI HK12A 197-OR
NO 15A F18 NO
J5 J4
1016
494-JA
EPDB5A
MA
B1 879-JA
B2 135-MA
A1 139-VI
A2 795 NO
969
329-NO
EPDB21A
MJ
NO 7.5A F13 NO
N8 N7
1016
611-BE
EPDB15A
BE
A2 201-BE
A1 137-VE
B2 NO EPDB18A NO-296
755
MK
RG RG
12 12 558-MA
10 10 580-MA
11 11 562-VI
CY R34 CY
D3
NO
8 129-OR
RG RG
9 9 191-MA
CY R34 CY
247
NO
2 42-BJ
3 43-MA
BE BE
B4 B4 885-MA E65AA 144-MA
B5 B5 169-BJ
R35
GR GR
5 5
6 6
CY R34 CY
160
MA
B1 592-OR
A1 590-OR
120
NO
56
27
17
18
11
36
40
4
144-MA 43
171-BA 16
39
38
119
304-NO M12A 307-NO
MH
NO
34
37
31
32
33
42
2
12
7
9
10
1
8
13
14
26
20
19
53
54
45
46
24
55
25
48
47
28
309-NO
538-BJ
540-SA
532-VE
534-VI
536-OR
542-MA
GR
A4
A8
A9
A10
A11
A12
A7
R
P
P/N
1
2
3
4
971 971
506-OR
516-GR
NO
2
1
971 1019
508-VE
512-SA
514-BJ
504-GR
510-VI
518-MA
520-BA
530-BA
524-OR
522-GR
552-BJ
554-VI
544-GR
546-BA
526-BA
556-SA
528-NO
GR
B10
B8
B11
B3
B7
B5
B2
B12
B9
B6
B4
B1
EVS3
EVS2
EVS1
EVS4
EVS5
EVS6
+
EVM
EVLU
T
971 754
GR
D1
D2
971 1017
GR
C1
C2
C3
P
971 781
550-VE
548-OR
GR
E1
E2
780 780

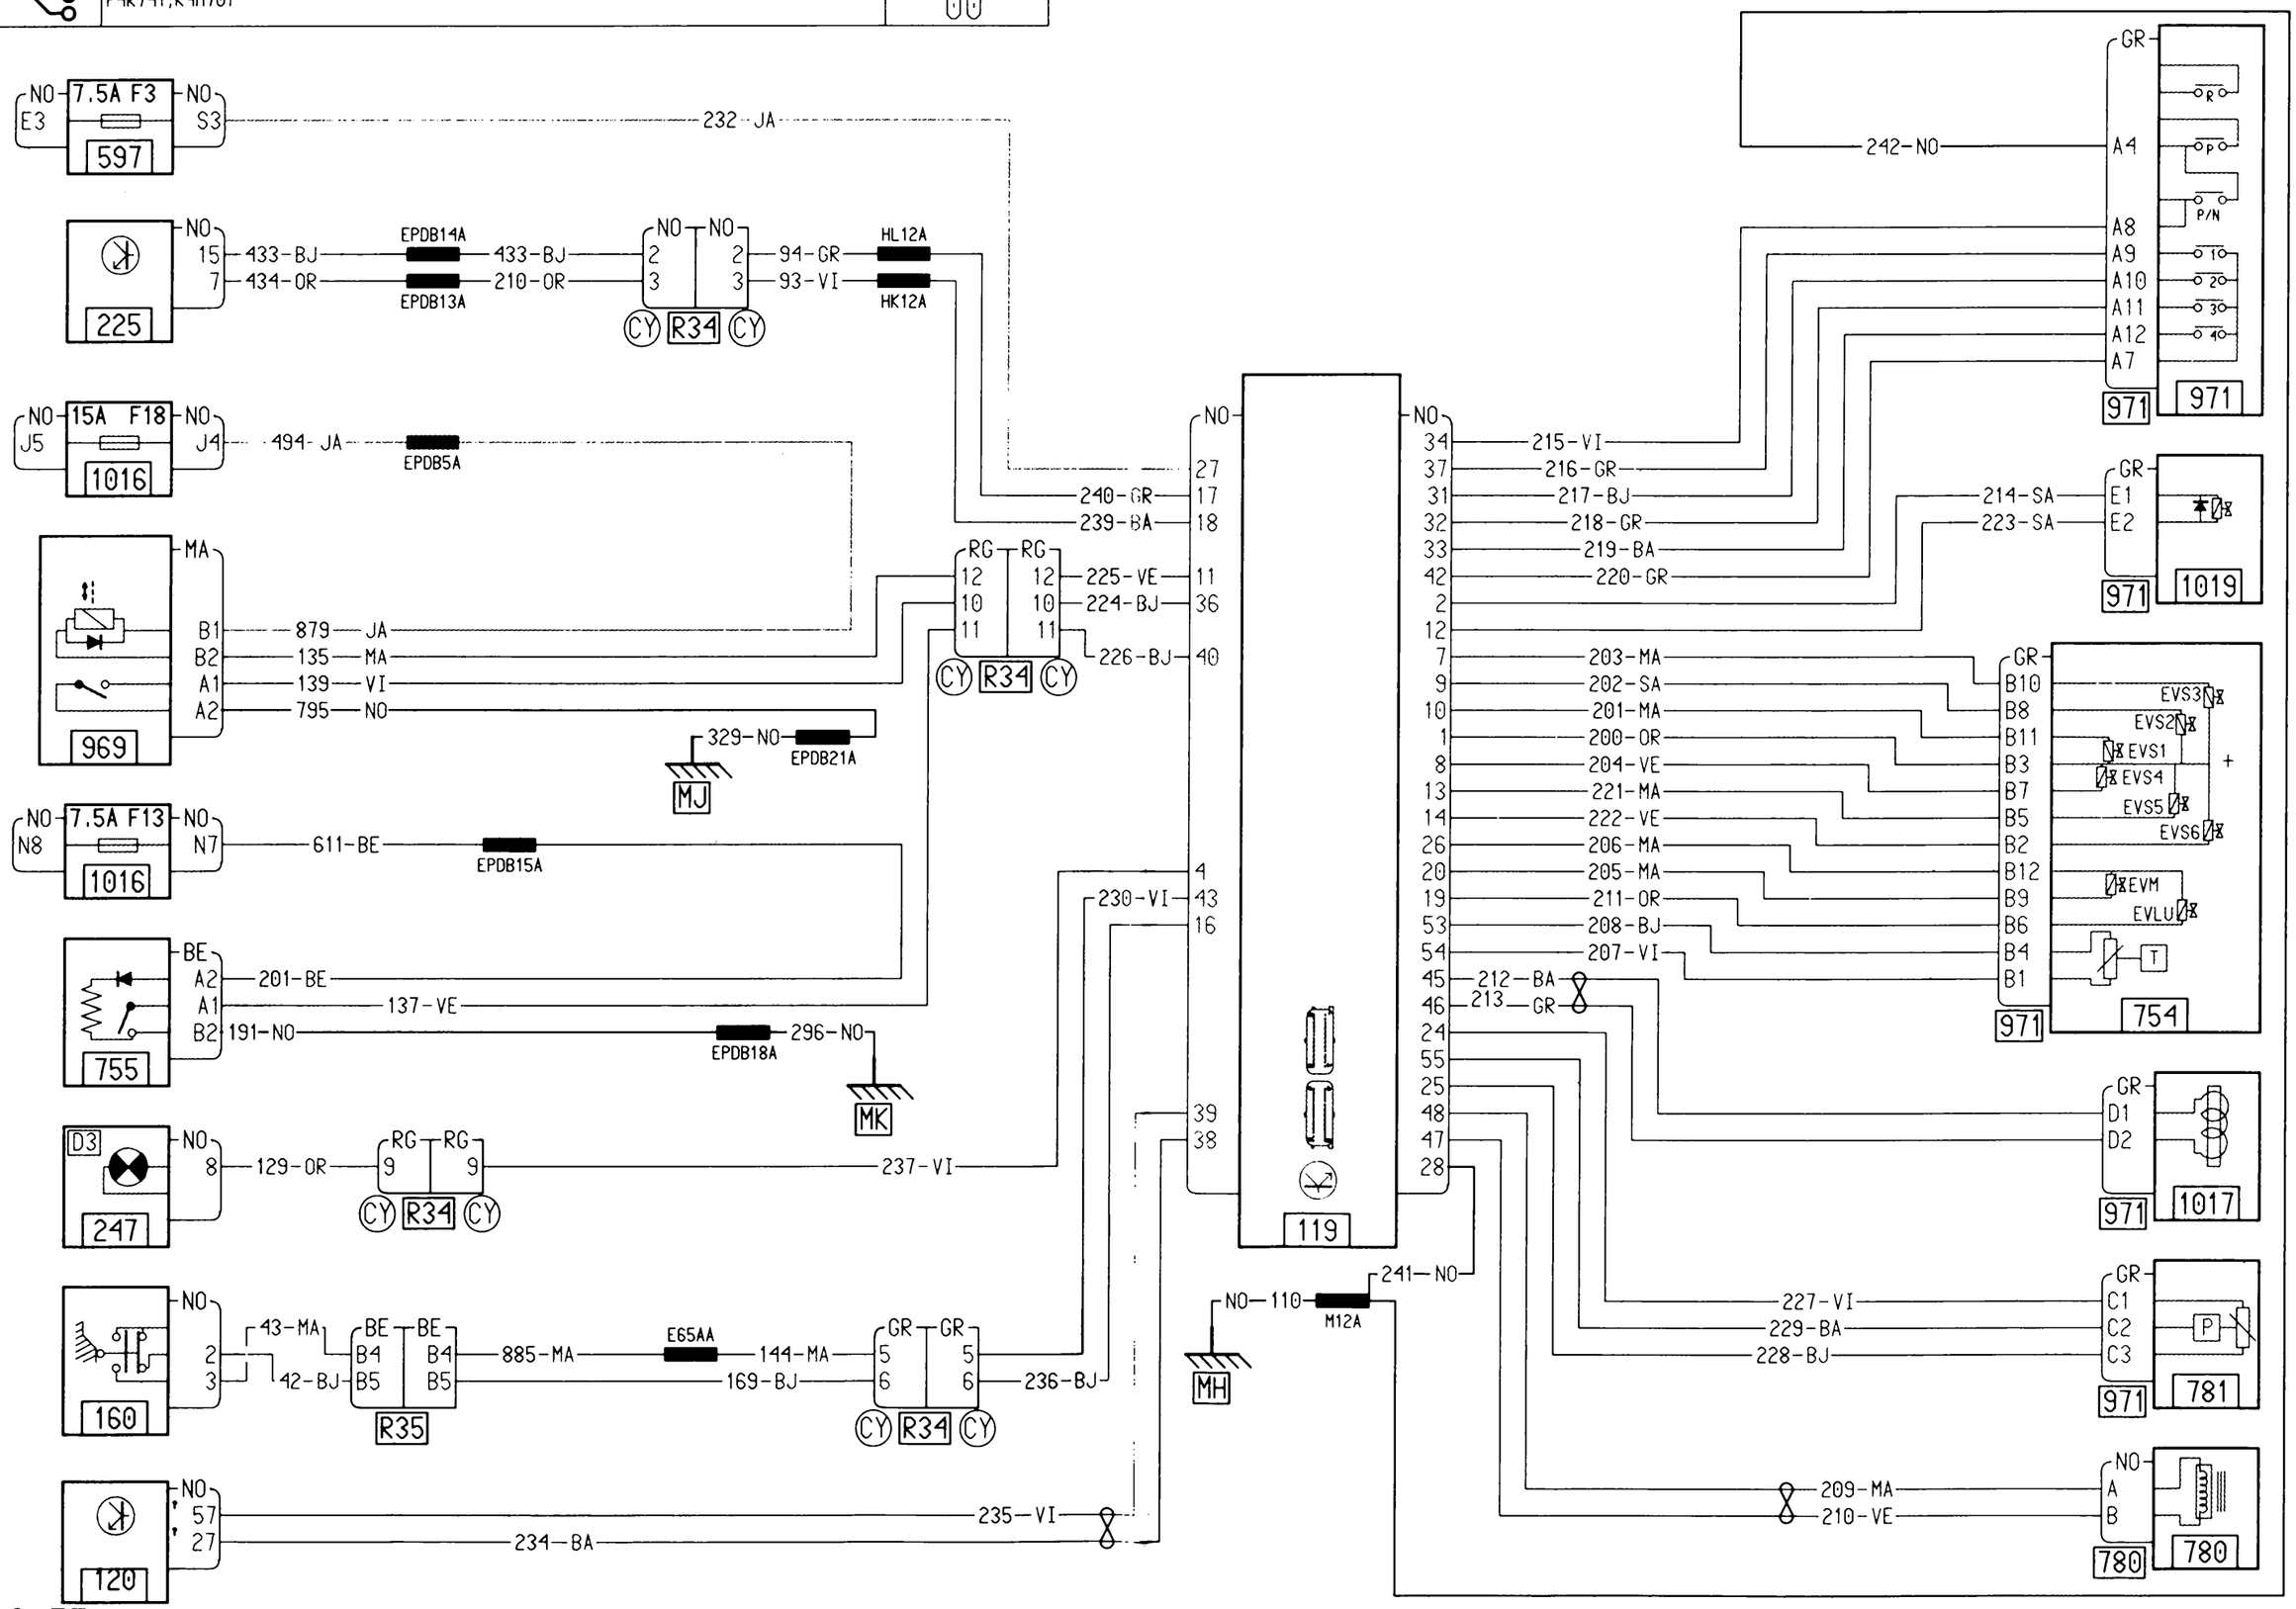

7.5A F3
597
225
15A F18
1016
969
7.5A F13
1016
755
247
160
120
R34
R35
MJ
MK
MH
EPDB14A
EPDB13A
EPDB5A
EPDB21A
EPDB15A
EPDB18A
E65AA
M12A
HL12A
HK12A
232-JA
433-BJ
434-OR
433-BJ
210-OR
94-GR
93-VI
494-JA
879-JA
135-MA
139-VI
795-NO
611-BE
201-BE
137-VE
191-NO
296-NO
129-OR
237-VI
43-MA
42-BJ
885-MA
144-MA
169-BJ
236-BJ
235-VI
234-BA
240-GR
239-BA
225-VE
224-BJ
226-BJ
230-VI
329-NO
241-NO
NO-110
119
971
1019
754
1017
781
780
242-NO
215-VI
216-GR
217-BJ
218-GR
219-BA
220-GR
214-SA
223-SA
203-MA
202-SA
201-MA
200-OR
204-VE
221-MA
222-VE
206-MA
205-MA
211-OR
208-BJ
207-VI
212-BA
213-GR
227-VI
229-BA
228-BJ
209-MA
210-VE
EVS1
EVS2
EVS3
EVS4
EVS5
EVS6
EVM
EVLU

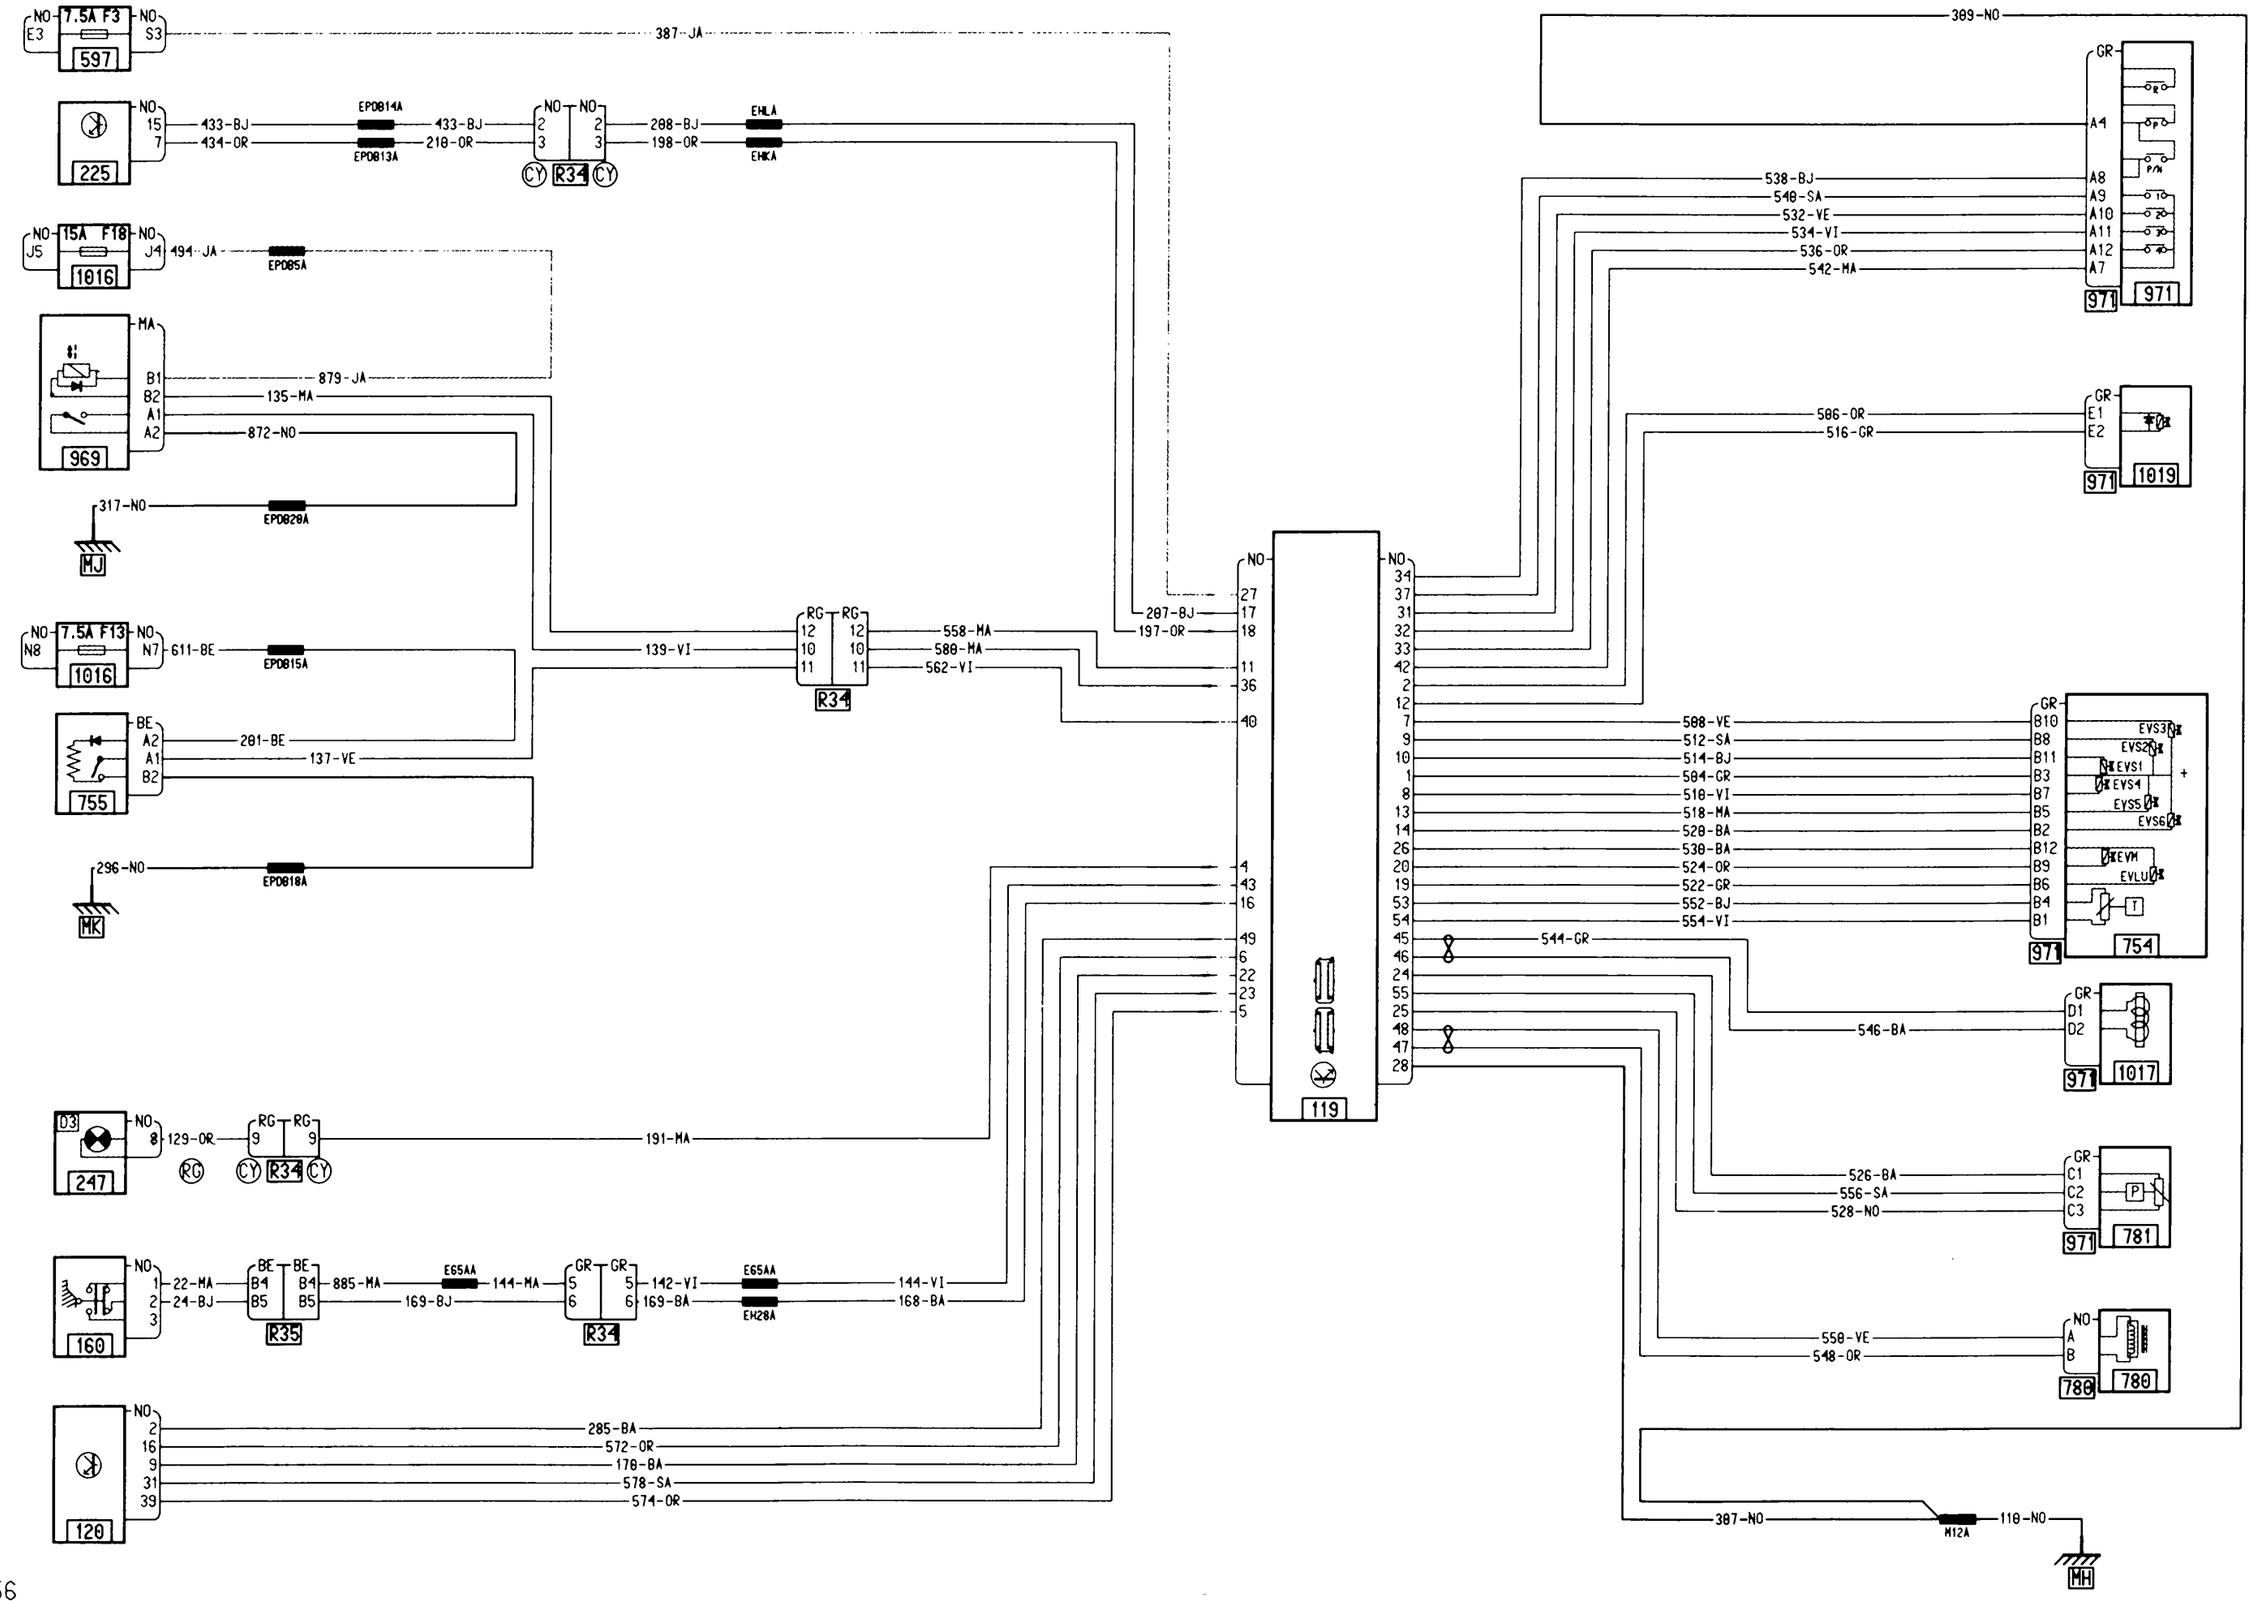

NO E3 7.5A F3 NO S3
597
387-JA
225
EPD814A
EPD813A
433-BJ
434-OR
210-OR
R34
208-BJ
198-OR
EHLA
EHKA
15A F18
1016
494-JA
EPD85A
969
879-JA
135-MA
872-NO
317-NO
EPD820A
MJ
7.5A F13
611-BE
EPD815A
139-VI
755
281-BE
137-VE
296-NO
EPD810A
MK
207-BJ
197-OR
558-MA
588-MA
562-VI
119
389-NO
538-BJ
540-SA
532-VE
534-VI
536-OR
542-MA
971
586-OR
516-GR
1019
508-VE
512-SA
514-BJ
504-GR
510-VI
518-MA
528-BA
530-BA
524-OR
522-GR
552-BJ
554-VI
754
544-GR
546-BA
1017
526-BA
556-SA
528-NO
781
550-VE
548-OR
780
387-NO
M12A
110-NO
MH
D3
247
129-OR
191-MA
160
22-MA
24-BJ
885-MA
169-BJ
144-MA
142-VI
169-BA
144-VI
168-BA
EG5AA
EH28A
R35
120
285-BA
572-OR
178-BA
578-SA
574-OR

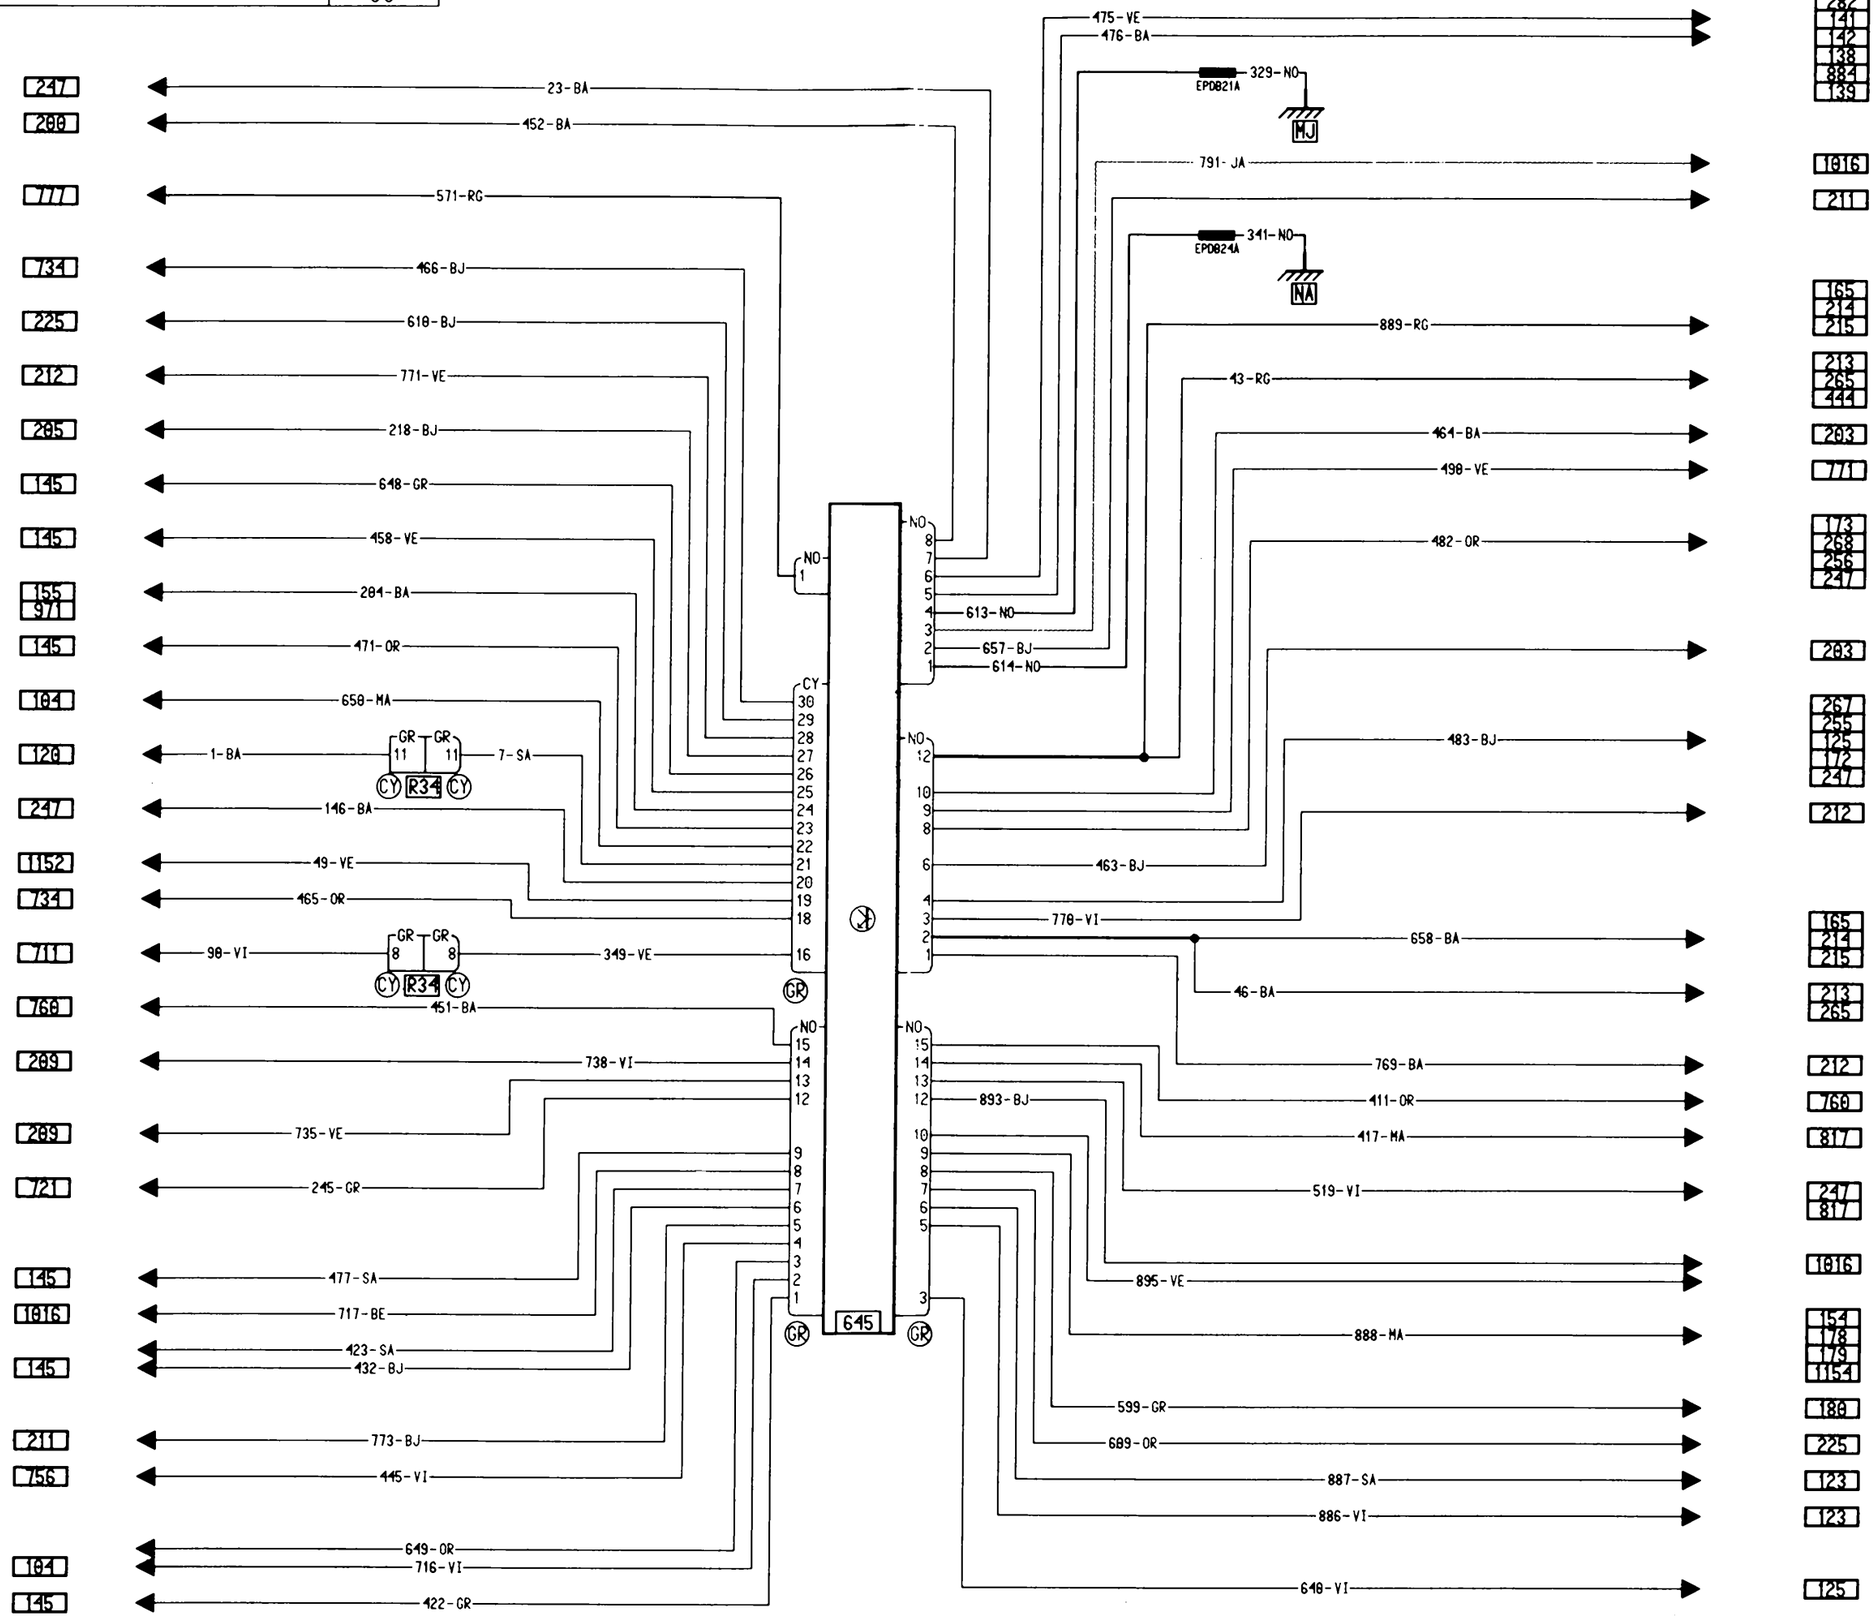

247
200
777
734
225
212
205
145
145
155
971
145
104
120
247
1152
734
711
760
209
209
721
145
1016
145
211
756
104
145
23-BA
452-BA
571-RG
466-BJ
618-BJ
771-VE
218-BJ
648-GR
458-VE
284-BA
471-OR
658-MA
1-BA
7-SA
146-BA
49-VE
465-OR
98-VI
349-VE
451-BA
738-VI
735-VE
245-GR
477-SA
717-BE
423-SA
432-BJ
773-BJ
445-VI
649-OR
716-VI
422-GR
GR 11
GR 11
CY R34 CY
GR 8
GR 8
CY R34 CY
NO 1
CY 30 29 28 27 26 25 24 23 22 21 20 19 18 16
GR
NO 15 14 13 12 9 8 7 6 5 4 3 2 1
GR
645
NO 8 7 6 5 4 3 2 1
NO 12 10 9 8 6 4 3 2 1
NO 15 14 13 12 10 9 8 7 6 5 3
GR
175-VE
476-BA
329-NO
EPD821A
MJ
791-JA
341-NO
EPD824A
NA
613-NO
657-BJ
614-NO
463-BJ
770-VI
46-BA
769-BA
893-BJ
411-OR
417-MA
519-VI
895-VE
888-MA
599-GR
689-OR
887-SA
886-VI
648-VI
889-RG
43-RG
464-BA
498-VE
482-OR
483-BJ
658-BA
140 282 141 142 138 884 139
1016
211
165 214 215
213 265 444
203
771
173 268 256 247
203
267 255 125 172 247
212
165 214 215
213 265
212
760
817
247 817
1016
154 178 179 1154
188
225
123
123
125

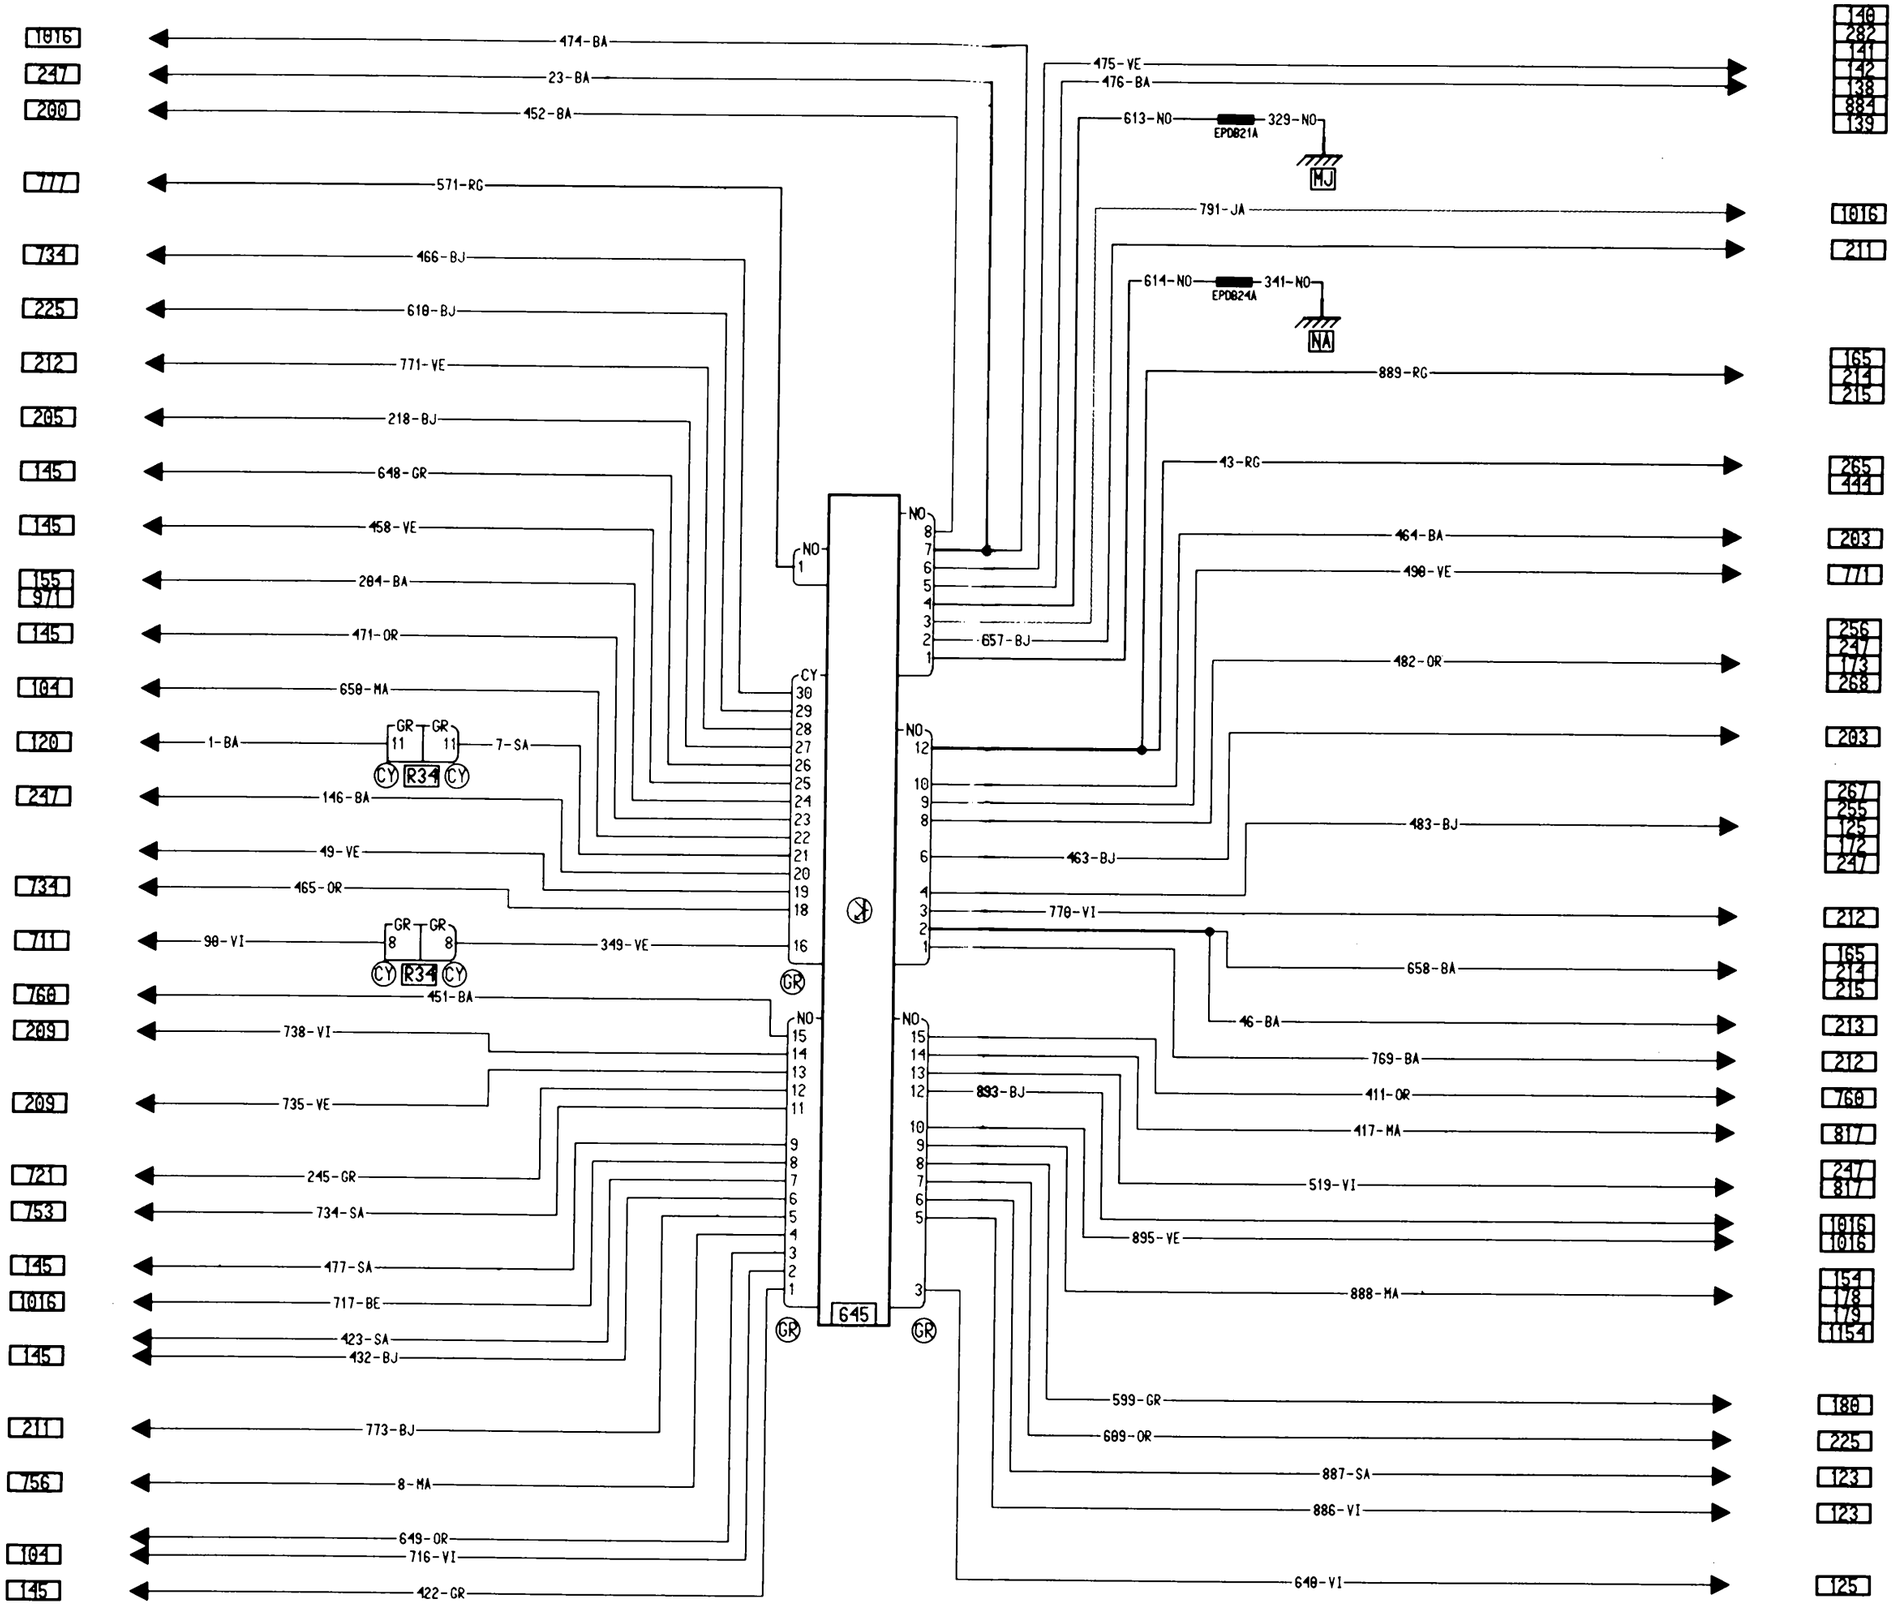

1016
247
200
777
734
225
212
205
145
145
155
971
145
104
120
247
734
711
760
209
209
721
753
145
1016
145
211
756
104
145
474-BA
23-BA
452-BA
571-RG
466-BJ
618-BJ
771-VE
218-BJ
648-GR
458-VE
284-BA
471-OR
658-MA
1-BA
GR 11
GR 11
7-SA
CY R34 CY
146-BA
49-VE
465-OR
98-VI
GR 8
8
349-VE
CY R34 CY
451-BA
738-VI
735-VE
245-GR
734-SA
477-SA
717-BE
423-SA
432-BJ
773-BJ
8-MA
649-OR
716-VI
422-GR
NO 1
CY 30 29 28 27 26 25 24 23 22 21 20 19 18 16
GR
NO 15 14 13 12 11 9 8 7 6 5 4 3 2 1
GR
645
NO 8 7 6 5 4 3 2 1
657-BJ
NO 12 10 9 8 6 4 3 2 1
463-BJ
778-VI
NO 15 14 13 12 10 9 8 7 6 5 3
893-BJ
GR
475-VE
476-BA
613-NO
EPD821A
329-NO
MJ
791-JA
614-NO
EPD824A
341-NO
NA
889-RG
43-RG
464-BA
498-VE
482-OR
483-BJ
658-BA
46-BA
769-BA
411-OR
417-MA
519-VI
895-VE
888-MA
599-GR
689-OR
887-SA
886-VI
648-VI
140
282
141
142
138
884
139
1016
211
165
214
215
265
444
203
771
256
247
173
268
203
267
255
125
172
247
212
165
214
215
213
212
760
817
247
817
1016
1016
154
178
179
1154
180
225
123
123
125

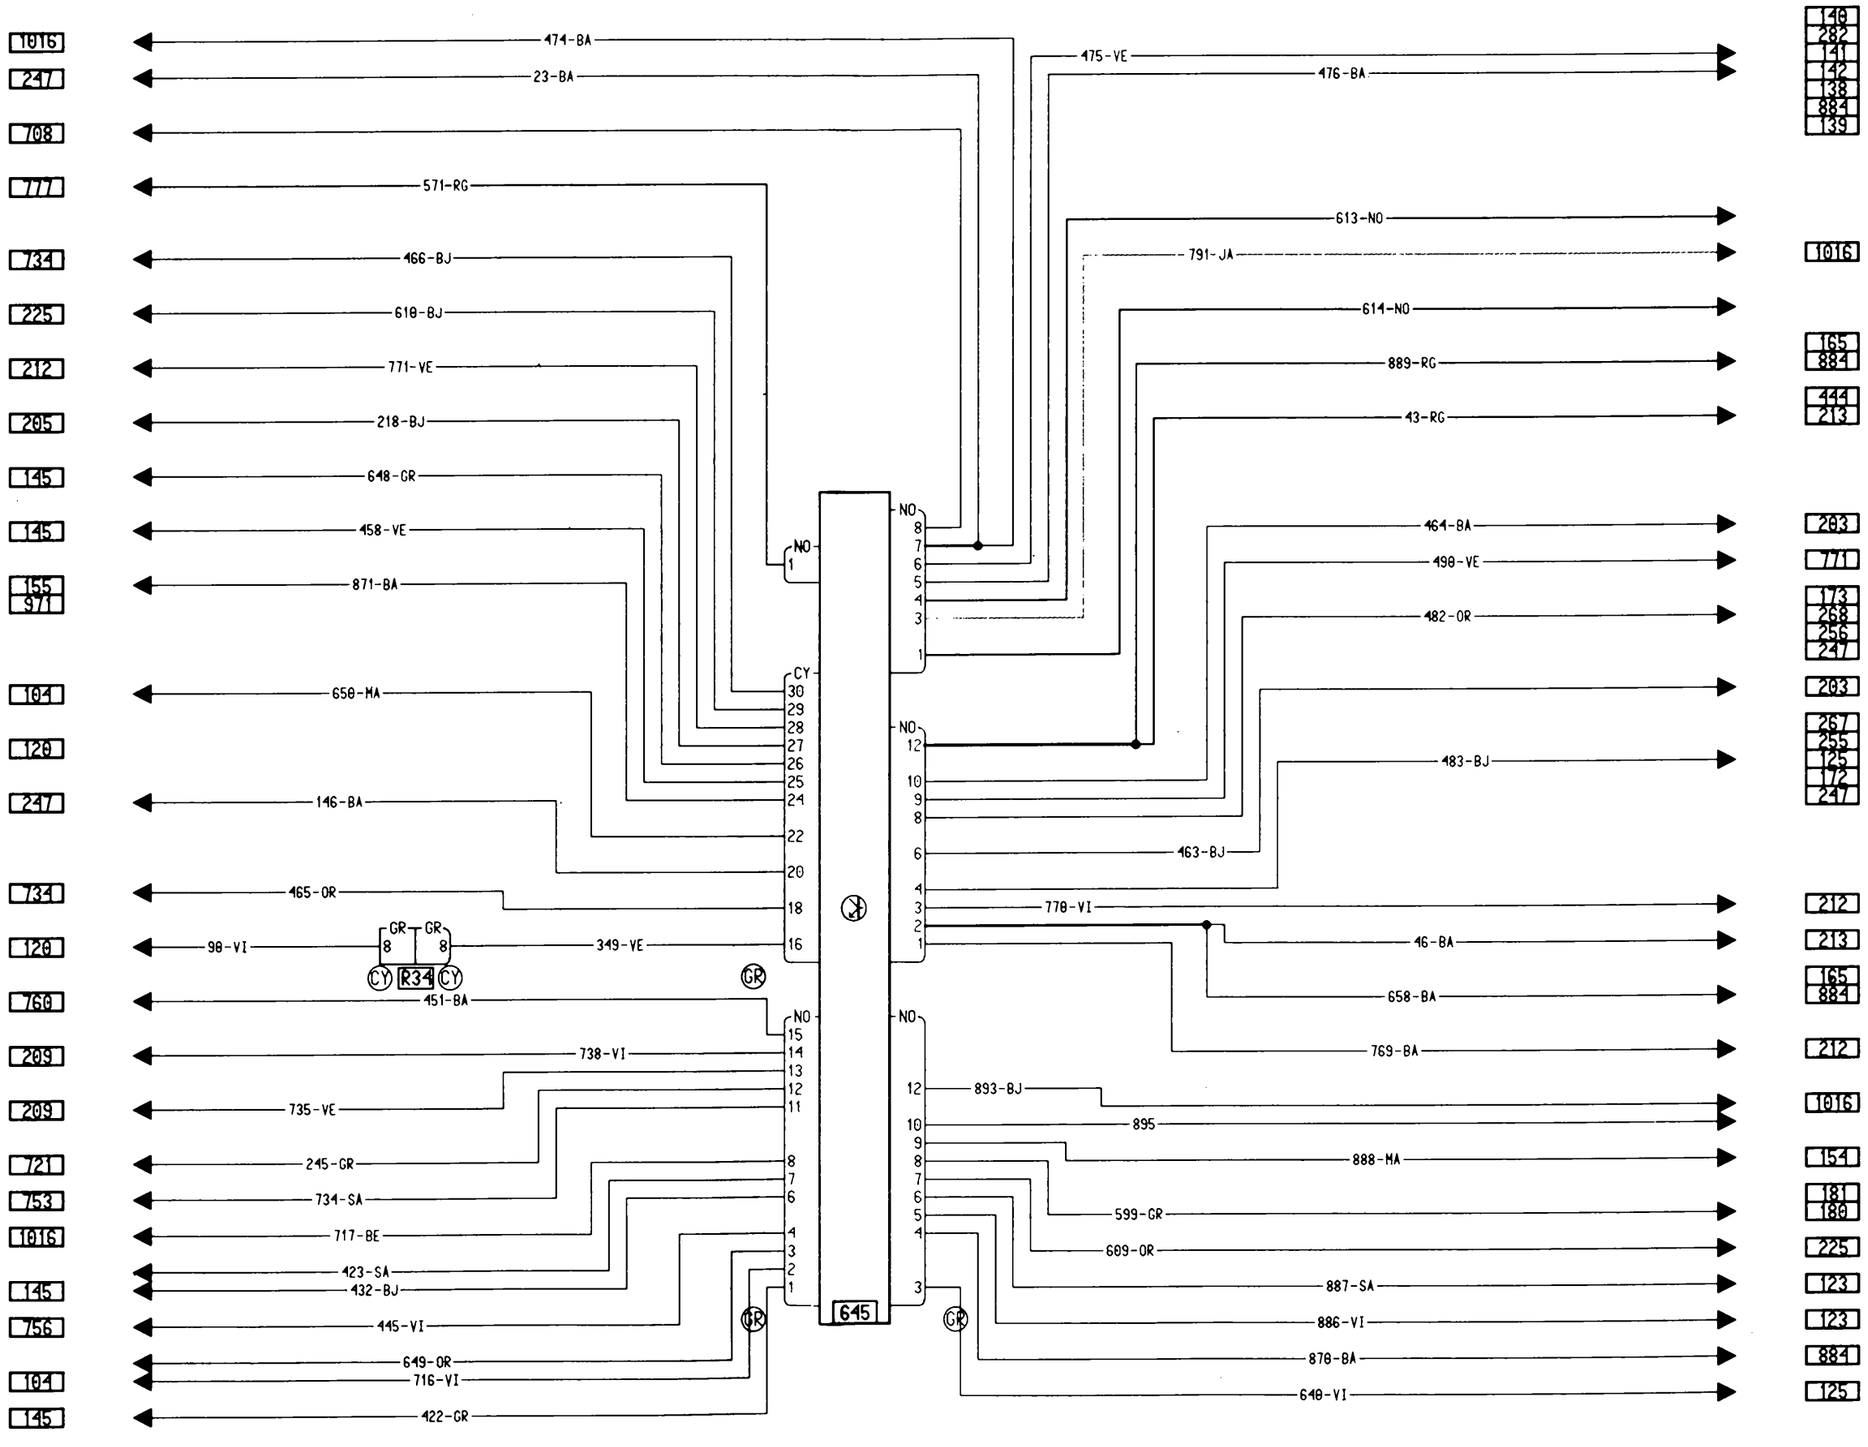

1016
247
708
777
734
225
212
205
145
145
155
971
104
120
247
734
120
760
209
209
721
753
1016
145
756
104
145
474-BA
23-BA
571-RG
466-BJ
618-BJ
771-VE
218-BJ
648-GR
458-VE
871-BA
650-MA
146-BA
465-OR
98-VI
349-VE
451-BA
738-VI
735-VE
245-GR
734-SA
717-BE
423-SA
432-BJ
445-VI
649-OR
716-VI
422-GR
GR
8
8
CY
R34
CY
NO
1
CY
30
29
28
27
26
25
24
22
20
18
16
NO
15
14
13
12
11
8
7
6
4
3
2
1
645
NO
8
7
6
5
4
3
1
NO
12
10
9
8
6
4
3
2
1
NO
12
10
9
8
7
6
5
4
3
475-VE
476-BA
613-NO
791-JA
614-NO
889-RG
43-RG
464-BA
498-VE
482-OR
483-BJ
463-BJ
778-VI
46-BA
658-BA
769-BA
893-BJ
895
888-MA
599-GR
609-OR
887-SA
886-VI
878-BA
640-VI
140
282
141
142
138
884
139
1016
165
884
444
213
203
771
173
268
256
247
203
267
255
125
172
247
212
213
165
884
212
1016
154
181
180
225
123
123
884
125

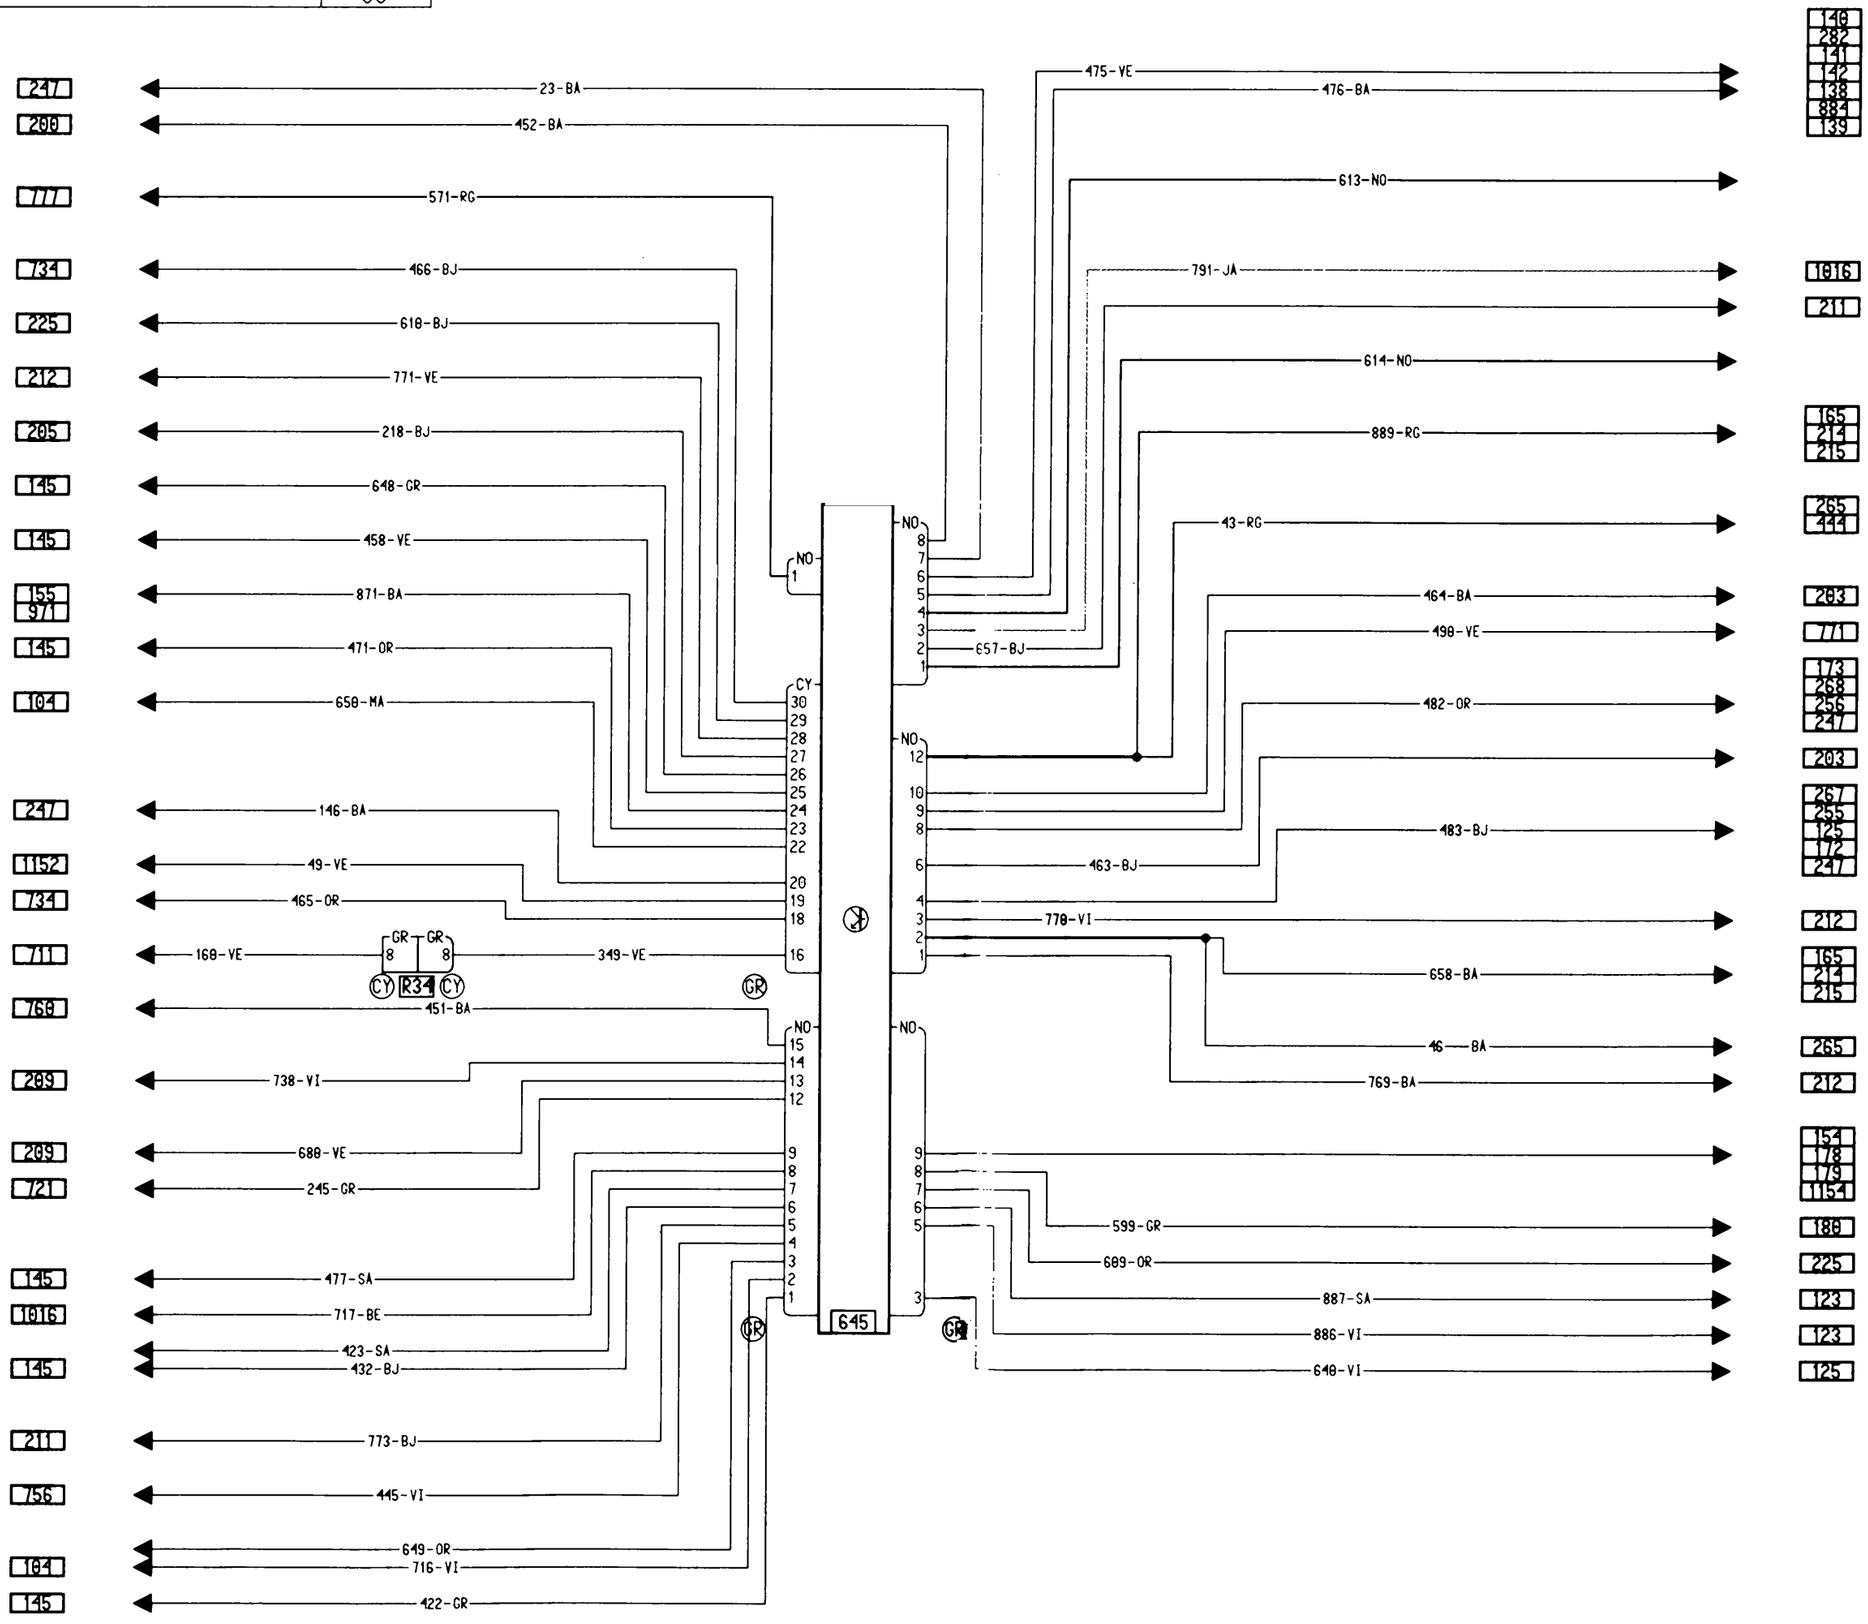
247
200
777
734
225
212
205
145
145
155
971
145
104
247
1152
734
711
768
209
209
721
145
1016
145
211
756
104
145
23-BA
452-BA
571-RG
466-BJ
618-BJ
771-VE
218-BJ
648-GR
458-VE
871-BA
471-OR
650-MA
146-BA
49-VE
465-OR
168-VE
GR 8
GR 8
CY R34 CY
349-VE
451-BA
738-VI
688-VE
245-GR
477-SA
717-BE
423-SA
432-BJ
773-BJ
445-VI
649-OR
716-VI
422-GR
NO 1
CY 30 29 28 27 26 25 24 23 22 20 19 18 16
GR
NO 15 14 13 12 9 8 7 6 5 4 3 2 1
645
NO 8 7 6 5 4 3 2 1
NO 12 10 9 8 6 4 3 2 1
NO 9 8 7 6 5 3
GR
475-VE
476-BA
613-NO
791-JA
614-NO
889-RG
43-RG
464-BA
498-VE
657-BJ
482-OR
483-BJ
463-BJ
778-VI
658-BA
46-BA
769-BA
599-GR
689-OR
887-SA
886-VI
648-VI
140
282
141
142
138
884
139
1016
211
165
214
215
265
444
203
771
173
268
256
247
203
267
255
125
172
247
212
165
214
215
265
212
154
178
179
1154
180
225
123
123
125

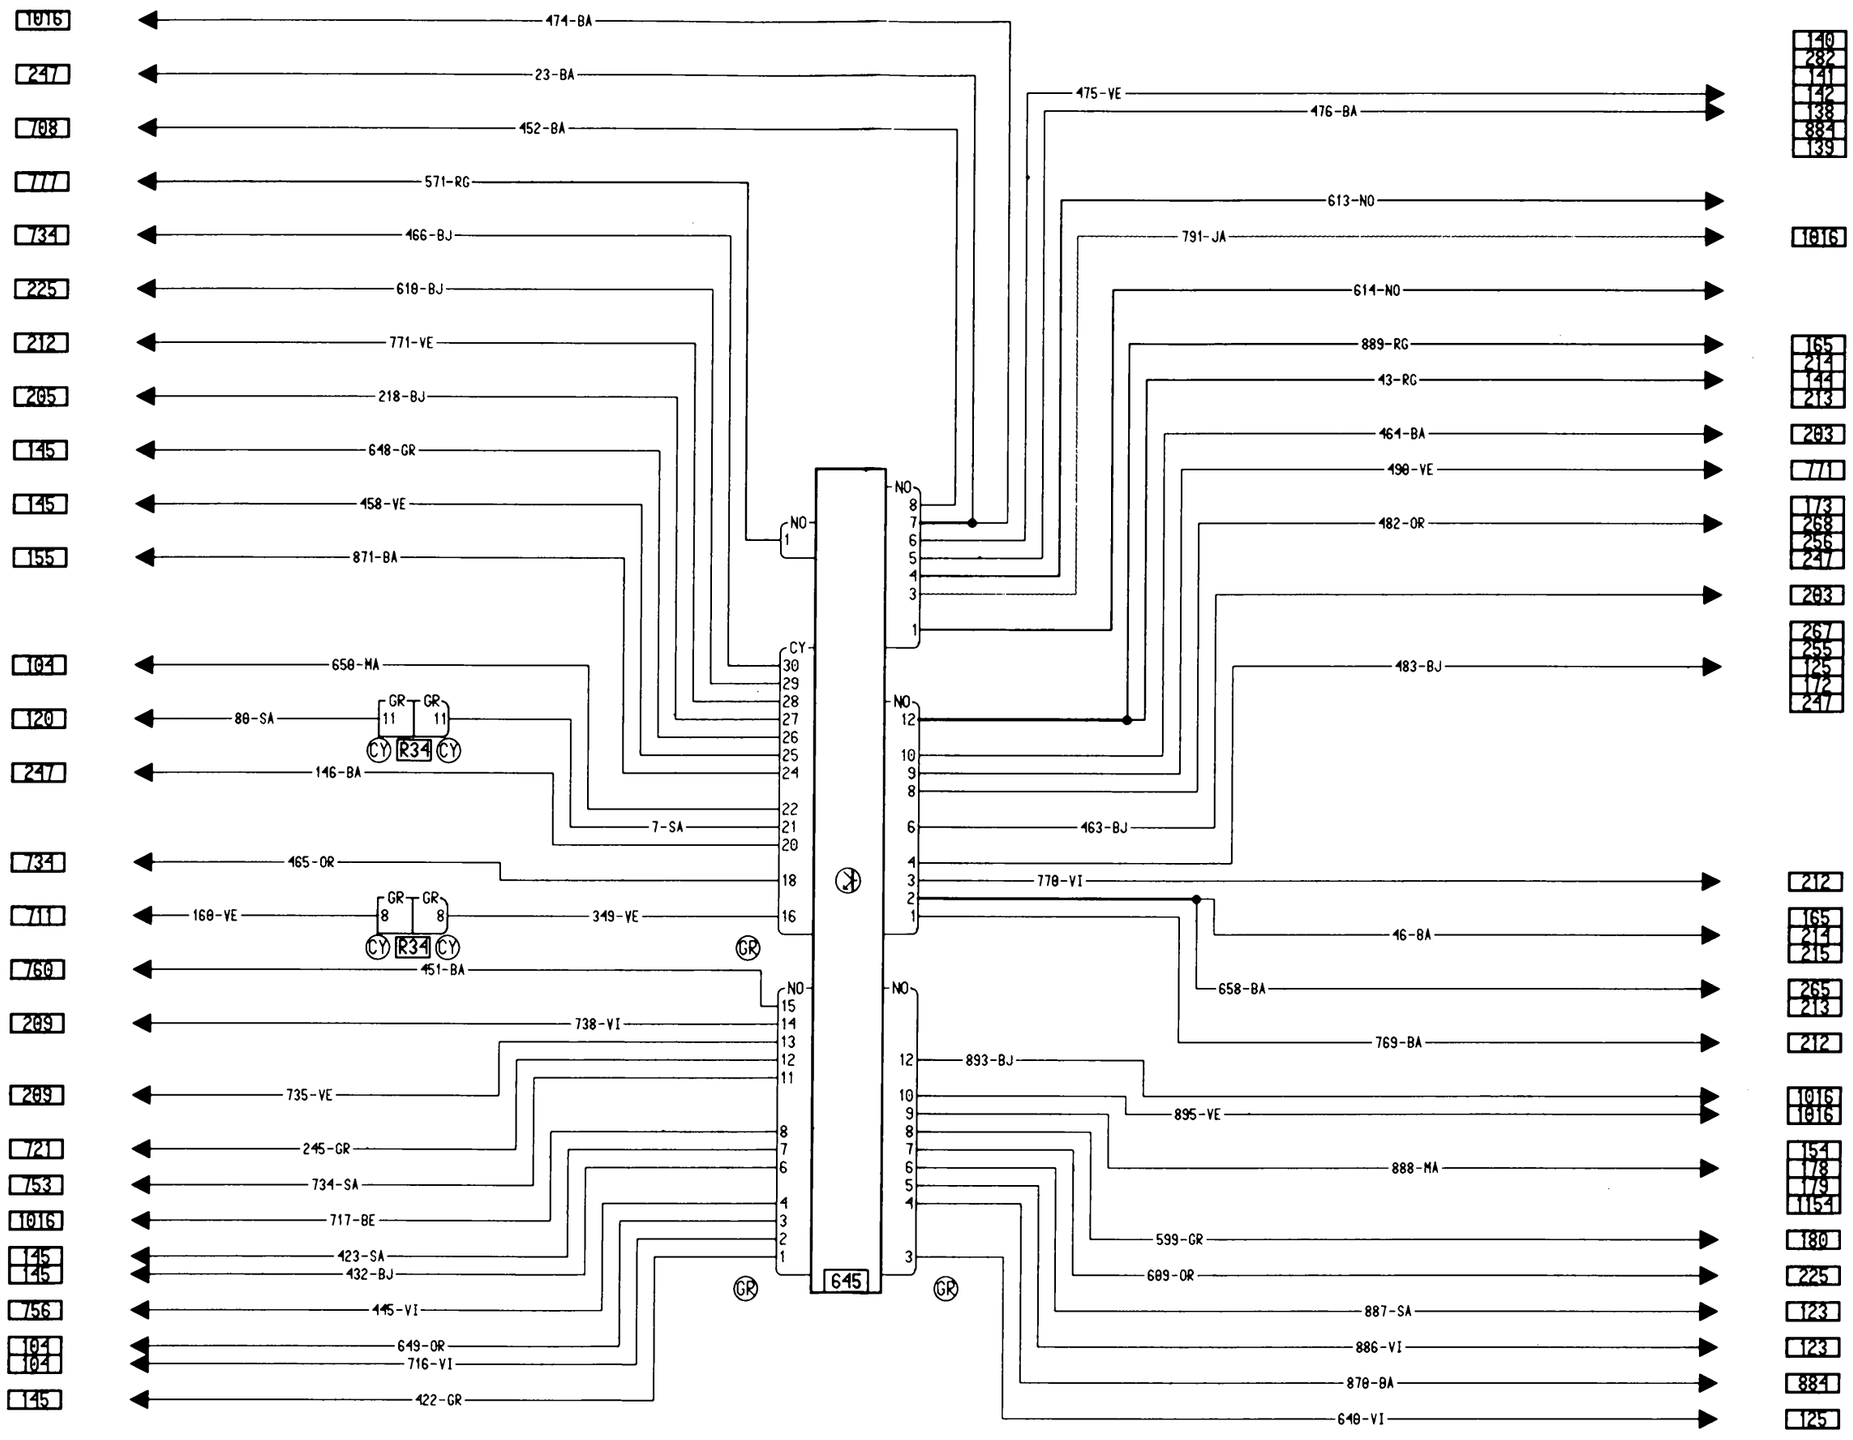
1016
247
708
777
734
225
212
205
145
145
155
104
120
247
734
711
760
209
209
721
753
1016
145
145
756
104
104
145
474-BA
23-BA
452-BA
571-RG
166-BJ
618-BJ
771-VE
218-BJ
648-GR
158-VE
871-BA
658-MA
80-SA
146-BA
165-OR
160-VE
451-BA
738-VI
735-VE
245-GR
734-SA
717-BE
423-SA
432-BJ
445-VI
649-OR
716-VI
422-GR
GR 11
GR 11
CY R34 CY
7-SA
GR 8
GR 8
349-VE
NO 1
CY 30 29 28 27 26 25 24 22 21 20 18 16
GR
NO 15 14 13 12 11 8 7 6 4 3 2 1
645
GR
NO 8 7 6 5 4 3 1
NO 12 10 9 8 6 4 3 2 1
NO 12 10 9 8 7 6 5 4 3
GR
475-VE
476-BA
613-NO
791-JA
614-NO
889-RG
43-RG
461-BA
190-VE
482-OR
483-BJ
463-BJ
770-VI
16-BA
658-BA
769-BA
893-BJ
895-VE
888-MA
599-GR
609-OR
887-SA
886-VI
870-BA
640-VI
140
282
141
142
138
884
139
1016
165
214
144
213
203
771
173
268
256
247
203
267
255
125
172
247
212
165
214
215
265
213
212
1016
1016
154
178
179
1154
180
225
123
123
884
125

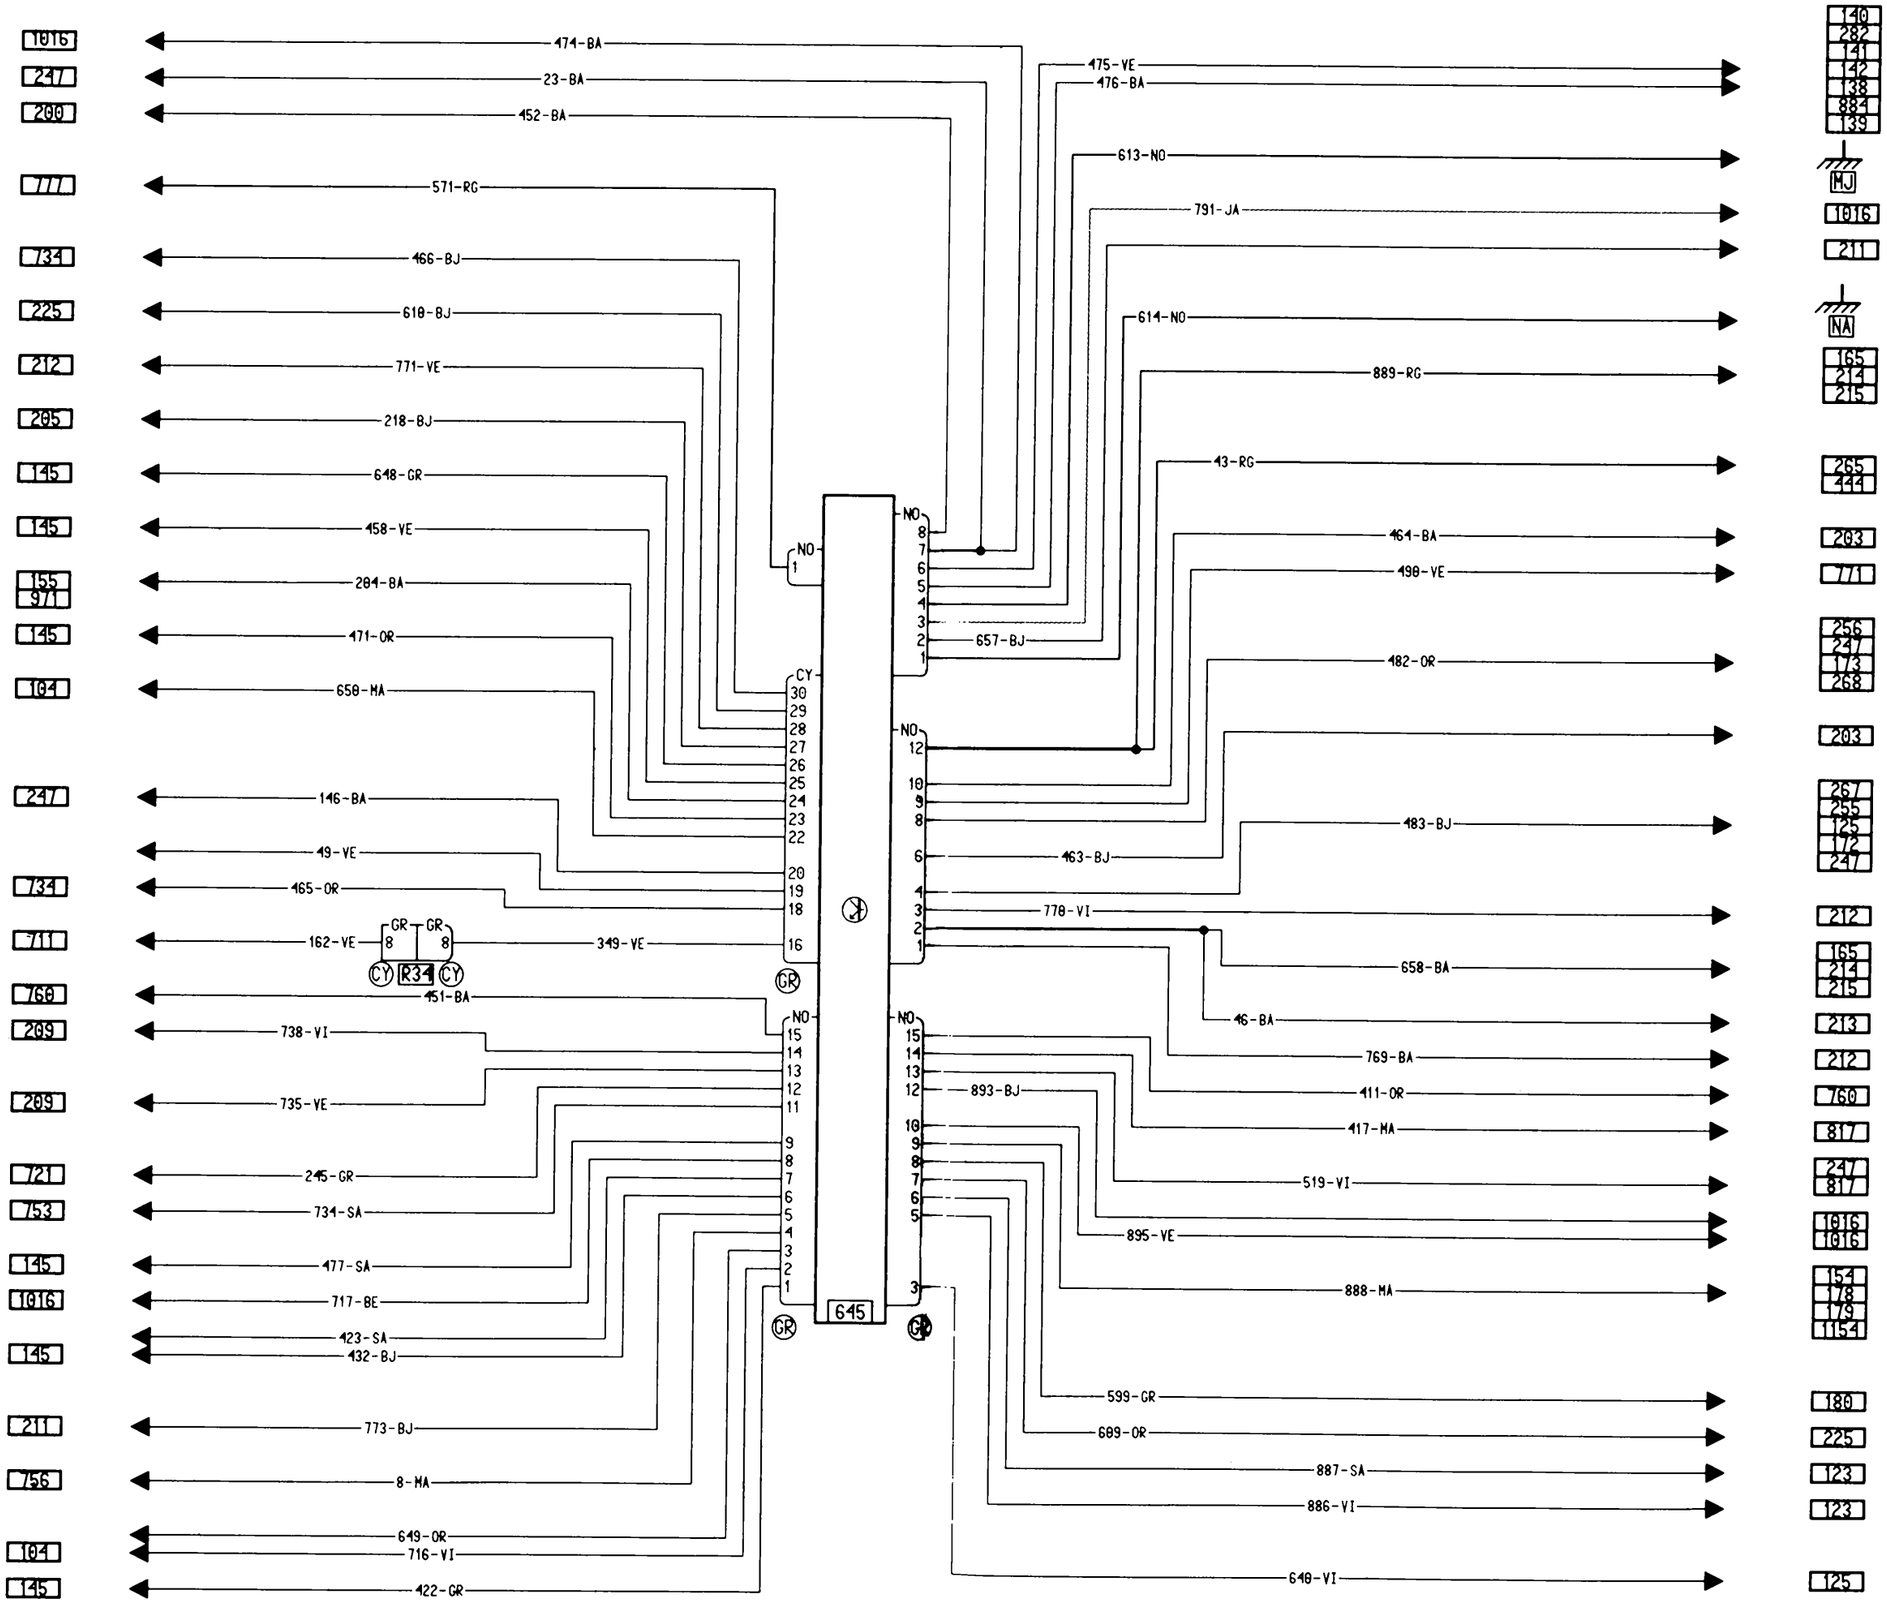
1016
247
200
777
734
225
212
205
145
145
155
971
145
104
247
734
711
760
209
209
721
753
145
1016
145
211
756
104
145
474-BA
23-BA
452-BA
571-RG
466-BJ
610-BJ
771-VE
218-BJ
648-GR
458-VE
284-BA
471-OR
650-MA
146-BA
49-VE
165-OR
162-VE
GR 8
GR 8
CY R34 CY
349-VE
451-BA
738-VI
735-VE
245-GR
734-SA
477-SA
717-BE
423-SA
432-BJ
773-BJ
8-MA
649-OR
716-VI
422-GR
NO 1
CY 30 29 28 27 26 25 24 23 22 20 19 18 16
GR
NO 15 14 13 12 11 9 8 7 6 5 4 3 2 1
645
GR
NO 8 7 6 5 4 3 2 1
NO 12 10 9 8 6 4 3 2 1
NO 15 14 13 12 10 9 8 7 6 5 3
GR
475-VE
476-BA
613-NO
791-JA
614-NO
889-RG
43-RG
464-BA
498-VE
657-BJ
482-OR
483-BJ
463-BJ
778-VI
658-BA
46-BA
769-BA
411-OR
893-BJ
417-MA
519-VI
895-VE
888-MA
599-GR
609-OR
887-SA
886-VI
640-VI
140 282 141 142 138 884 139
MJ
1016
211
NA
165 214 215
265 444
203
771
256 247 173 268
203
267 255 125 172 247
212
165 214 215
213
212
760
817
247 817
1016 1016
154 178 179 1154
180
225
123
123
125

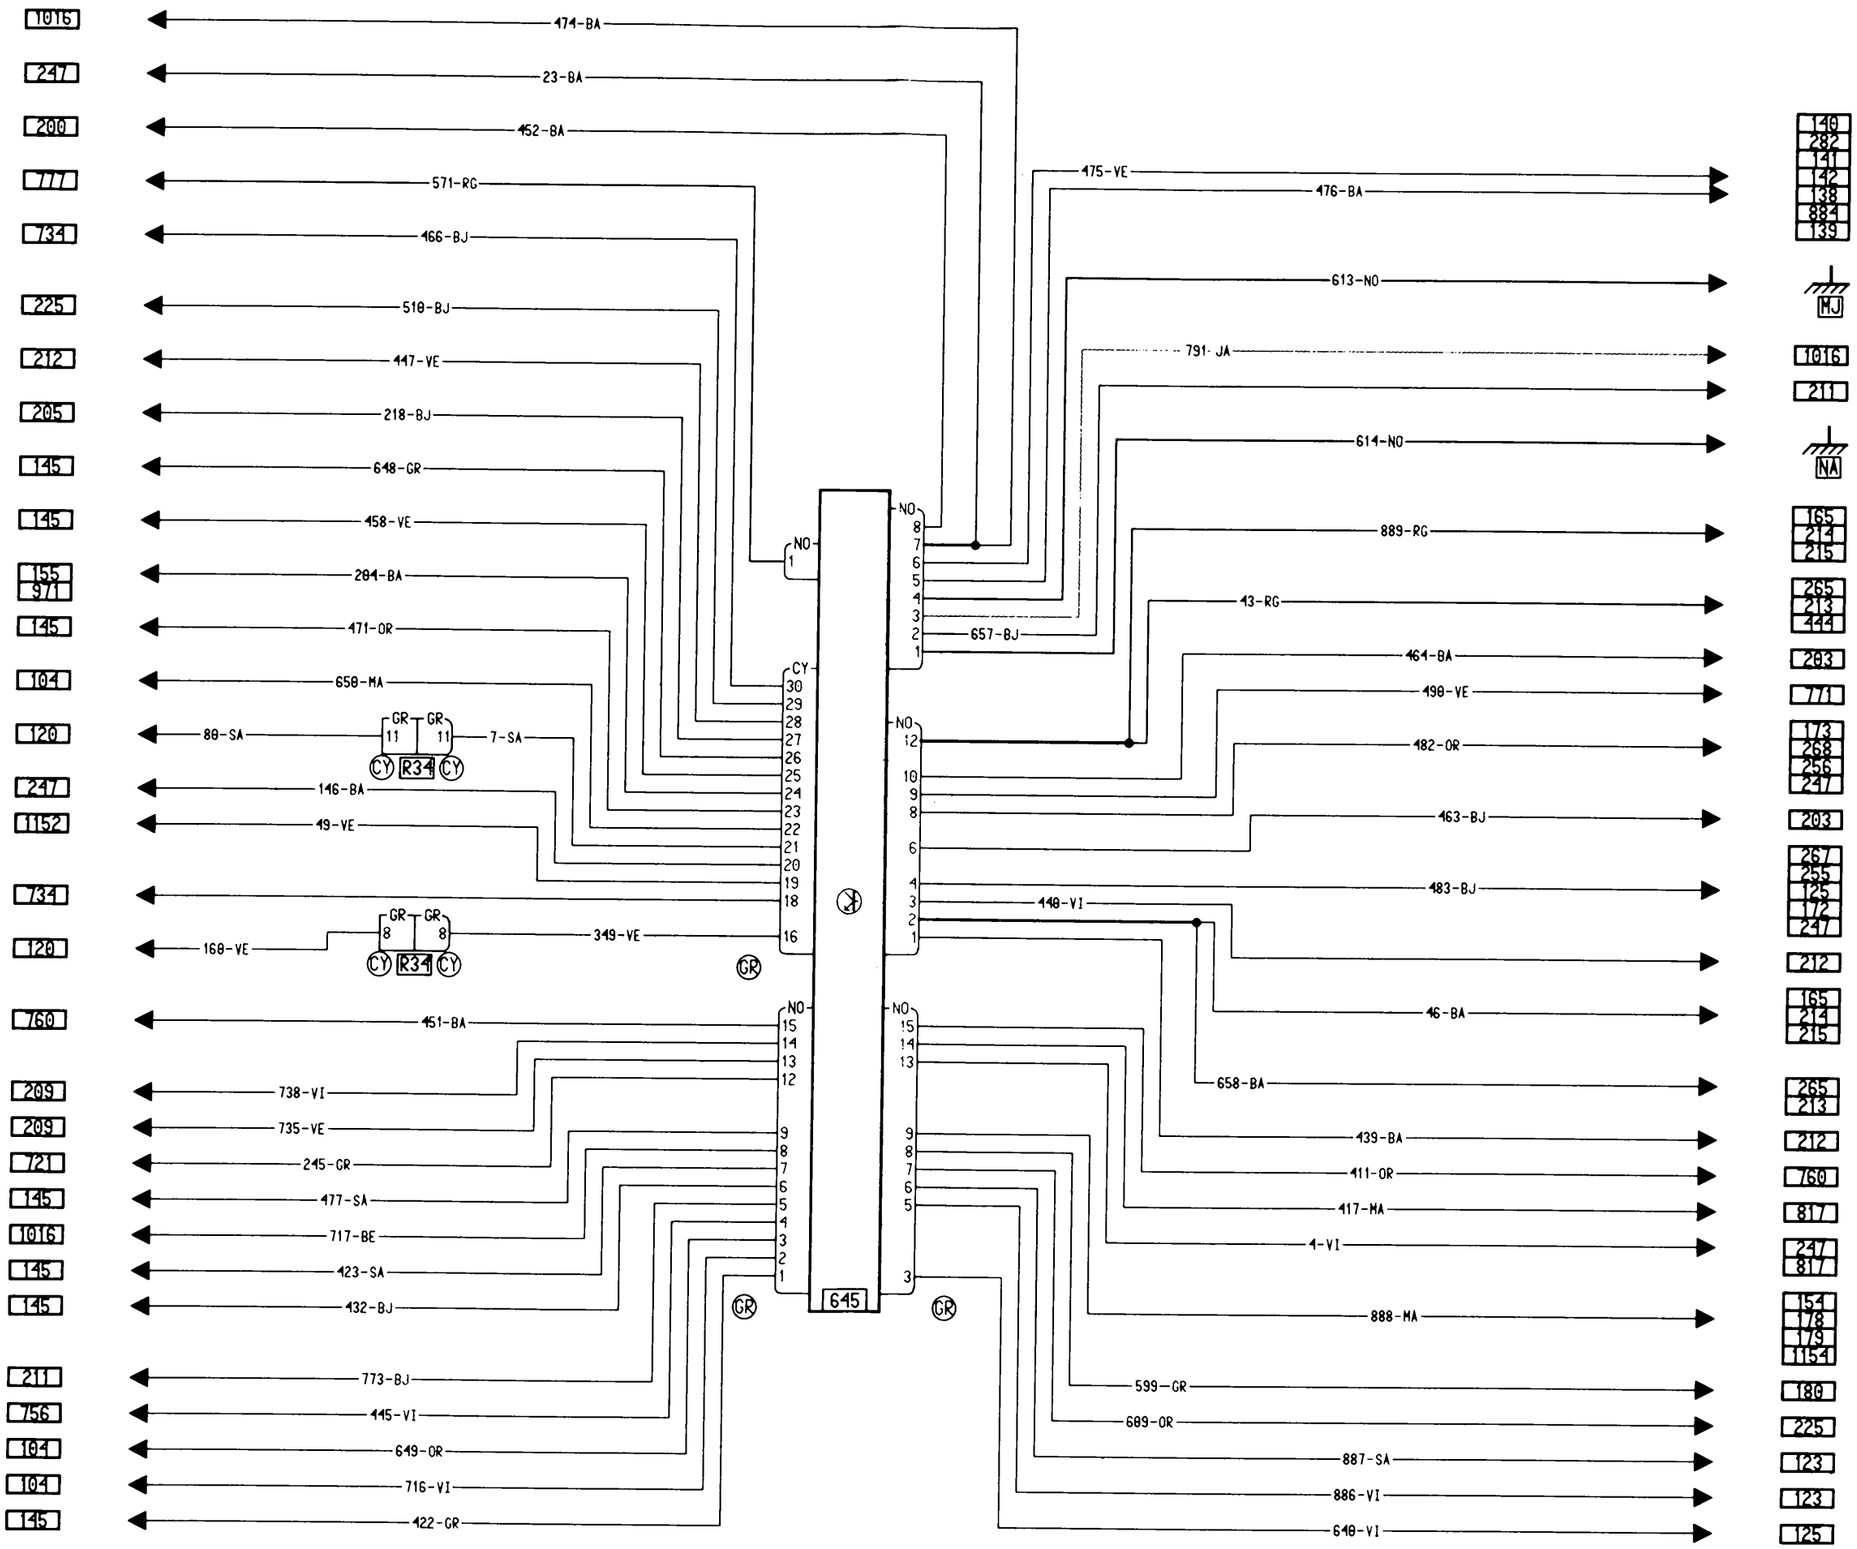

1016
247
200
777
734
225
212
205
145
145
155
971
145
104
120
247
1152
734
120
760
209
209
721
145
1016
145
145
211
756
104
104
145
474-BA
23-BA
452-BA
571-RG
466-BJ
518-BJ
447-VE
218-BJ
648-GR
458-VE
284-BA
471-OR
658-MA
88-SA
7-SA
146-BA
19-VE
168-VE
349-VE
451-BA
738-VI
735-VE
245-GR
477-SA
717-BE
423-SA
432-BJ
773-BJ
445-VI
649-OR
716-VI
422-GR
GR
11
11
CY
R34
CY
GR
8
8
CY
R34
CY
NO
1
CY
30
29
28
27
26
25
24
23
22
21
20
19
18
16
GR
NO
15
14
13
12
9
8
7
6
5
4
3
2
1
GR
645
NO
8
7
6
5
4
3
2
1
NO
12
10
9
8
6
4
3
2
1
NO
15
14
13
9
8
7
6
5
3
GR
475-VE
476-BA
613-NO
791-JA
614-NO
889-RG
13-RG
657-BJ
464-BA
498-VE
482-OR
463-BJ
483-BJ
448-VI
46-BA
658-BA
439-BA
411-OR
417-MA
1-VI
888-MA
599-GR
689-OR
887-SA
886-VI
648-VI
140
282
141
142
138
884
139
MJ
1016
211
NA
165
214
215
265
213
444
203
771
173
268
256
247
203
267
255
125
172
247
212
165
214
215
265
213
212
760
817
247
817
154
178
178
1154
180
225
123
123
125

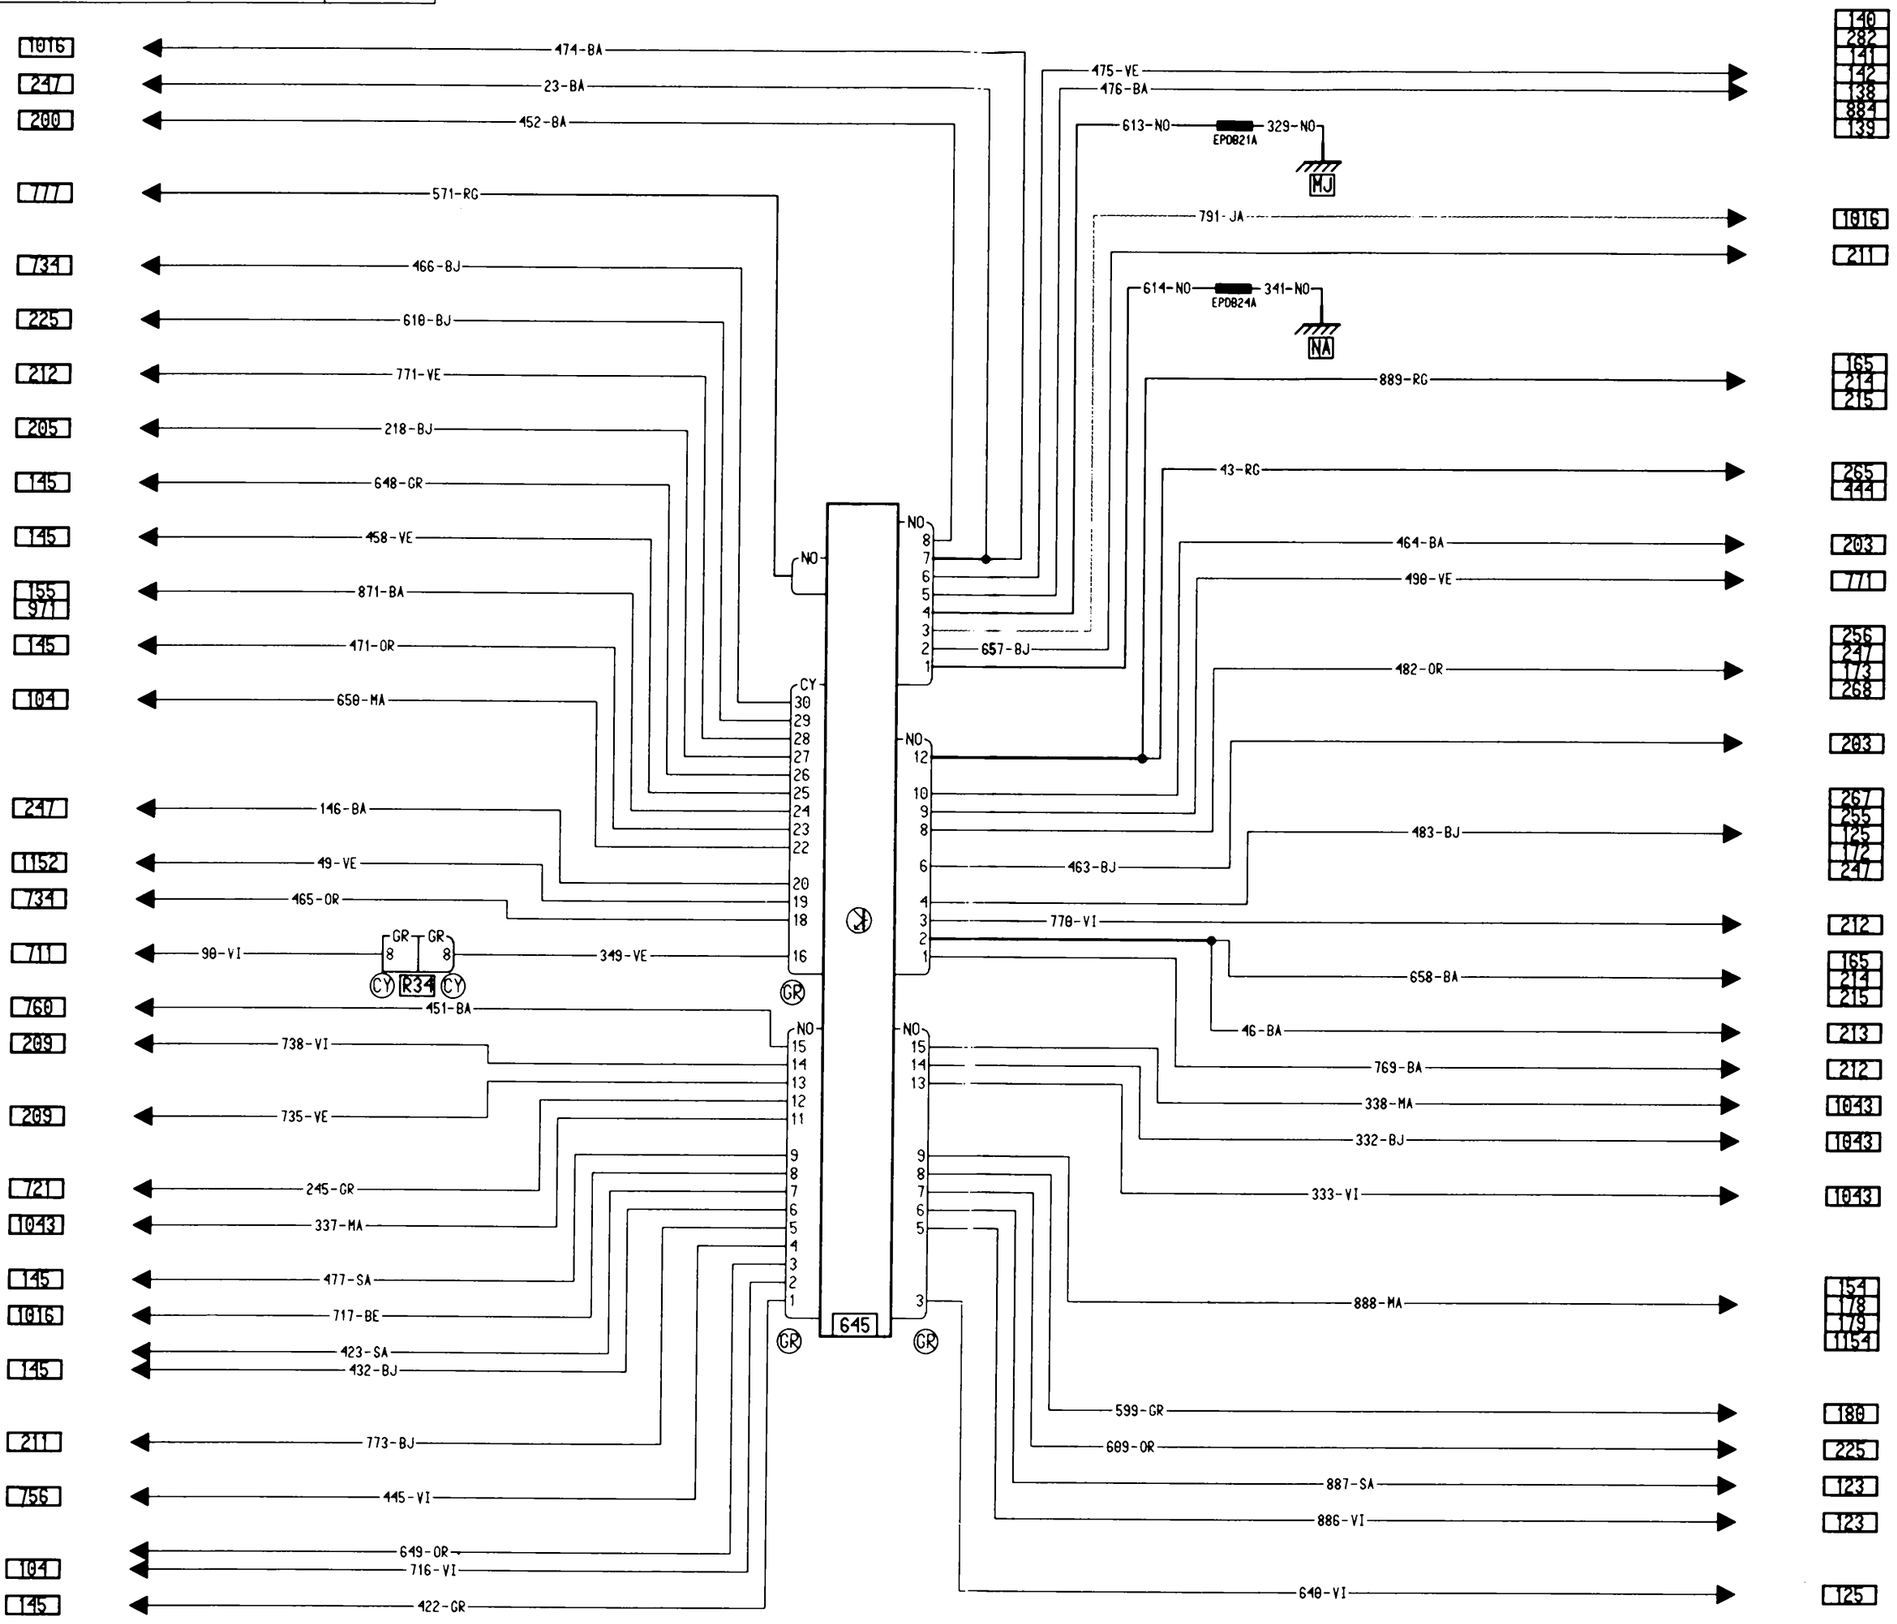
1016
247
200
777
734
225
212
205
145
145
155
971
145
104
247
1152
734
711
760
209
209
721
1043
145
1016
145
211
756
104
145
474-BA
23-BA
452-BA
571-RG
466-BJ
610-BJ
771-VE
218-BJ
648-GR
458-VE
871-BA
471-OR
650-MA
146-BA
49-VE
465-OR
90-VI
451-BA
738-VI
735-VE
245-GR
337-MA
477-SA
717-BE
423-SA
432-BJ
773-BJ
445-VI
649-OR
716-VI
422-GR
GR
8
8
GR
CY
R34
CY
NO
CY
NO
NO
NO
645
GR
GR
175-VE
176-BA
613-NO
EPD821A
329-NO
MJ
791-JA
614-NO
EPD824A
341-NO
NA
889-RG
43-RG
464-BA
490-VE
657-BJ
482-OR
463-BJ
483-BJ
770-VI
658-BA
46-BA
769-BA
338-MA
332-BJ
333-VI
888-MA
599-GR
609-OR
887-SA
886-VI
640-VI
140
282
141
142
138
884
139
1016
211
165
214
215
265
444
203
771
256
247
173
268
203
267
255
125
172
247
212
165
214
215
213
212
1043
1043
1043
154
178
179
1154
180
225
123
123
125

BATTERY CHARGE CIRCUIT

F4P720,F4P722,F4R740,F4R741,F9Q733,K4J714,K4J750,K4M701,K4M712


X642
00

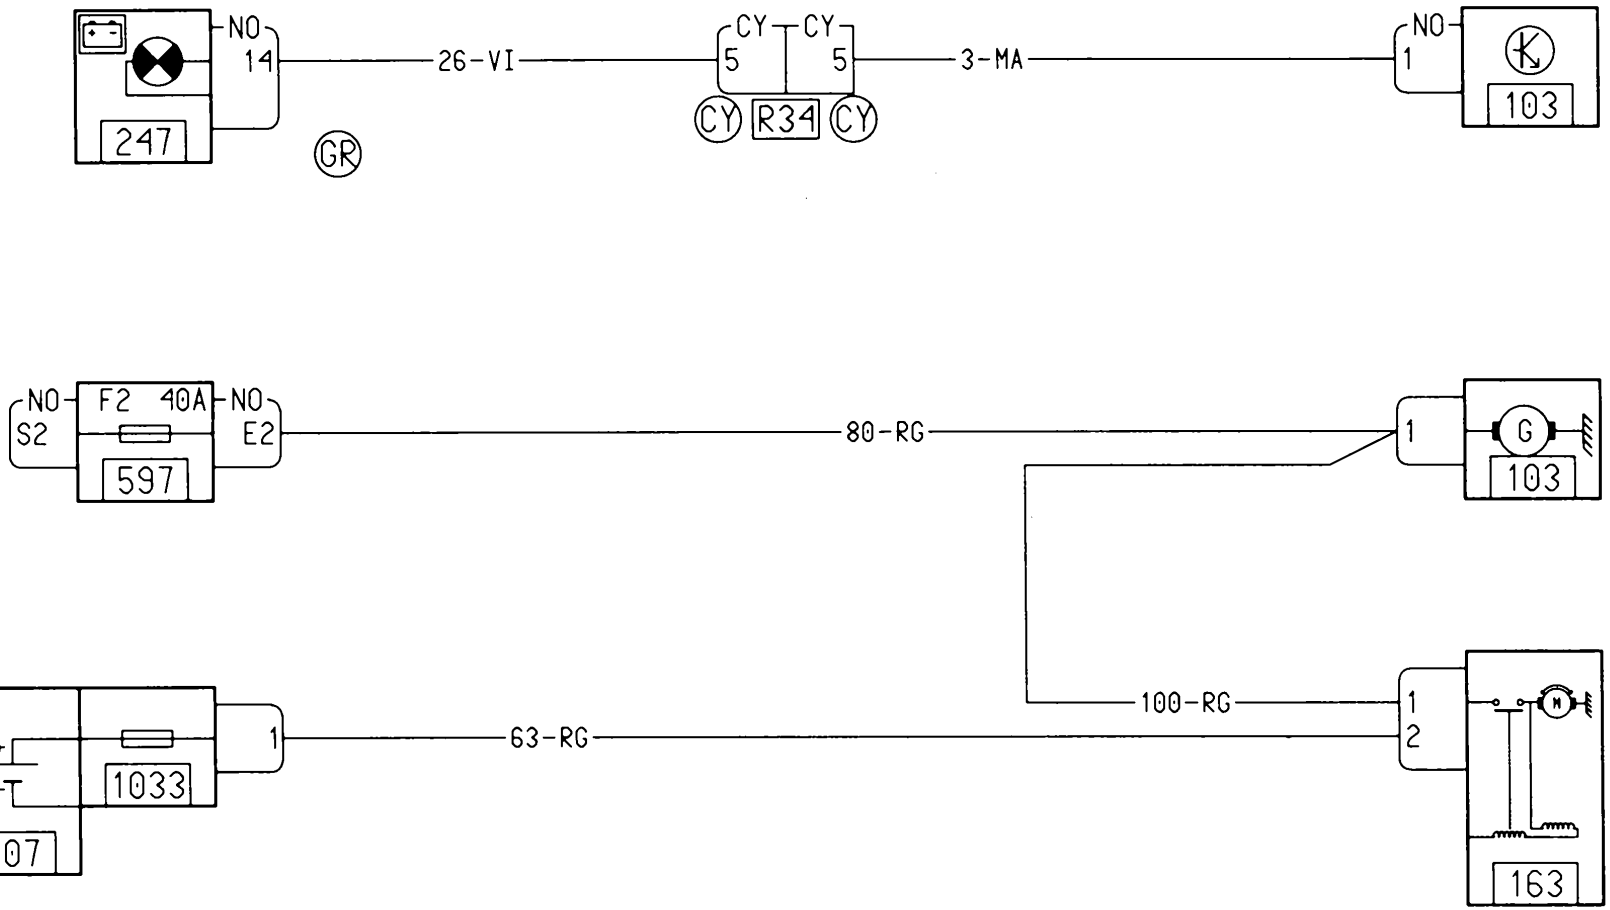

BATTERY CHARGE CIRCUIT

F8Q622,F8Q790,F9Q733,F9Q740


X642
00

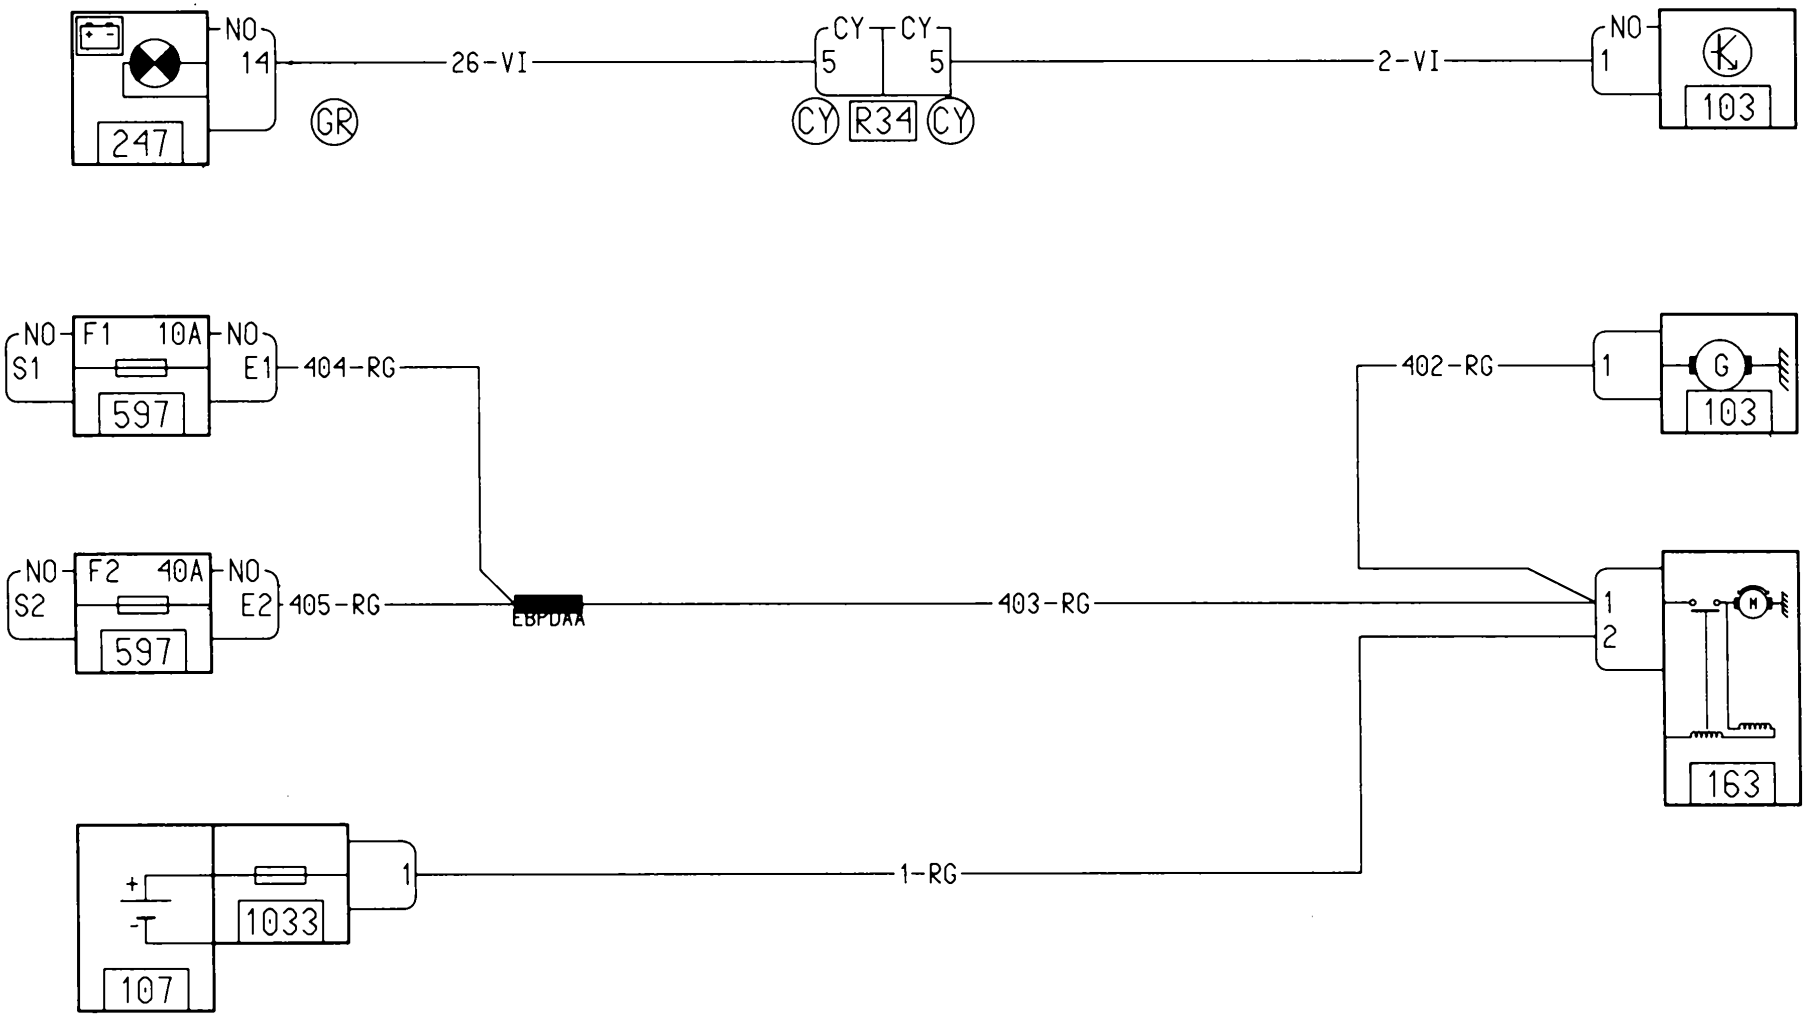

BATTERY CHARGE CIRCUIT

E7J626,F5R740


X642
00

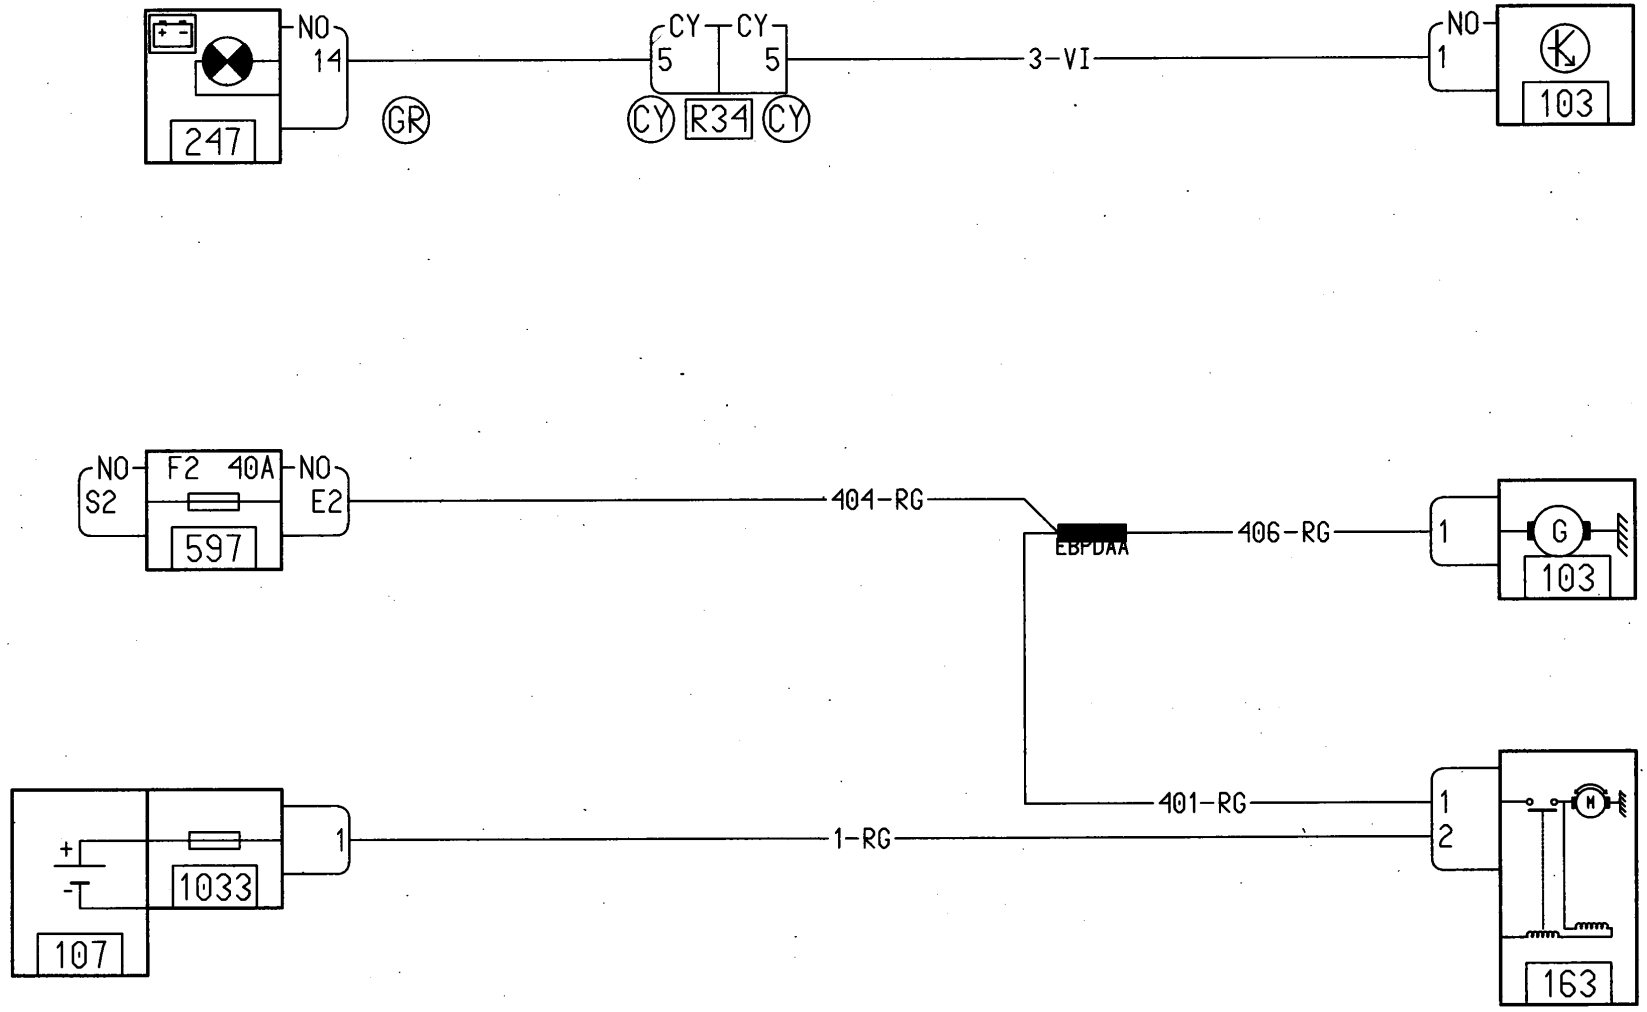

BATTERY CHARGE CIRCUIT

F9Q731


X642
00

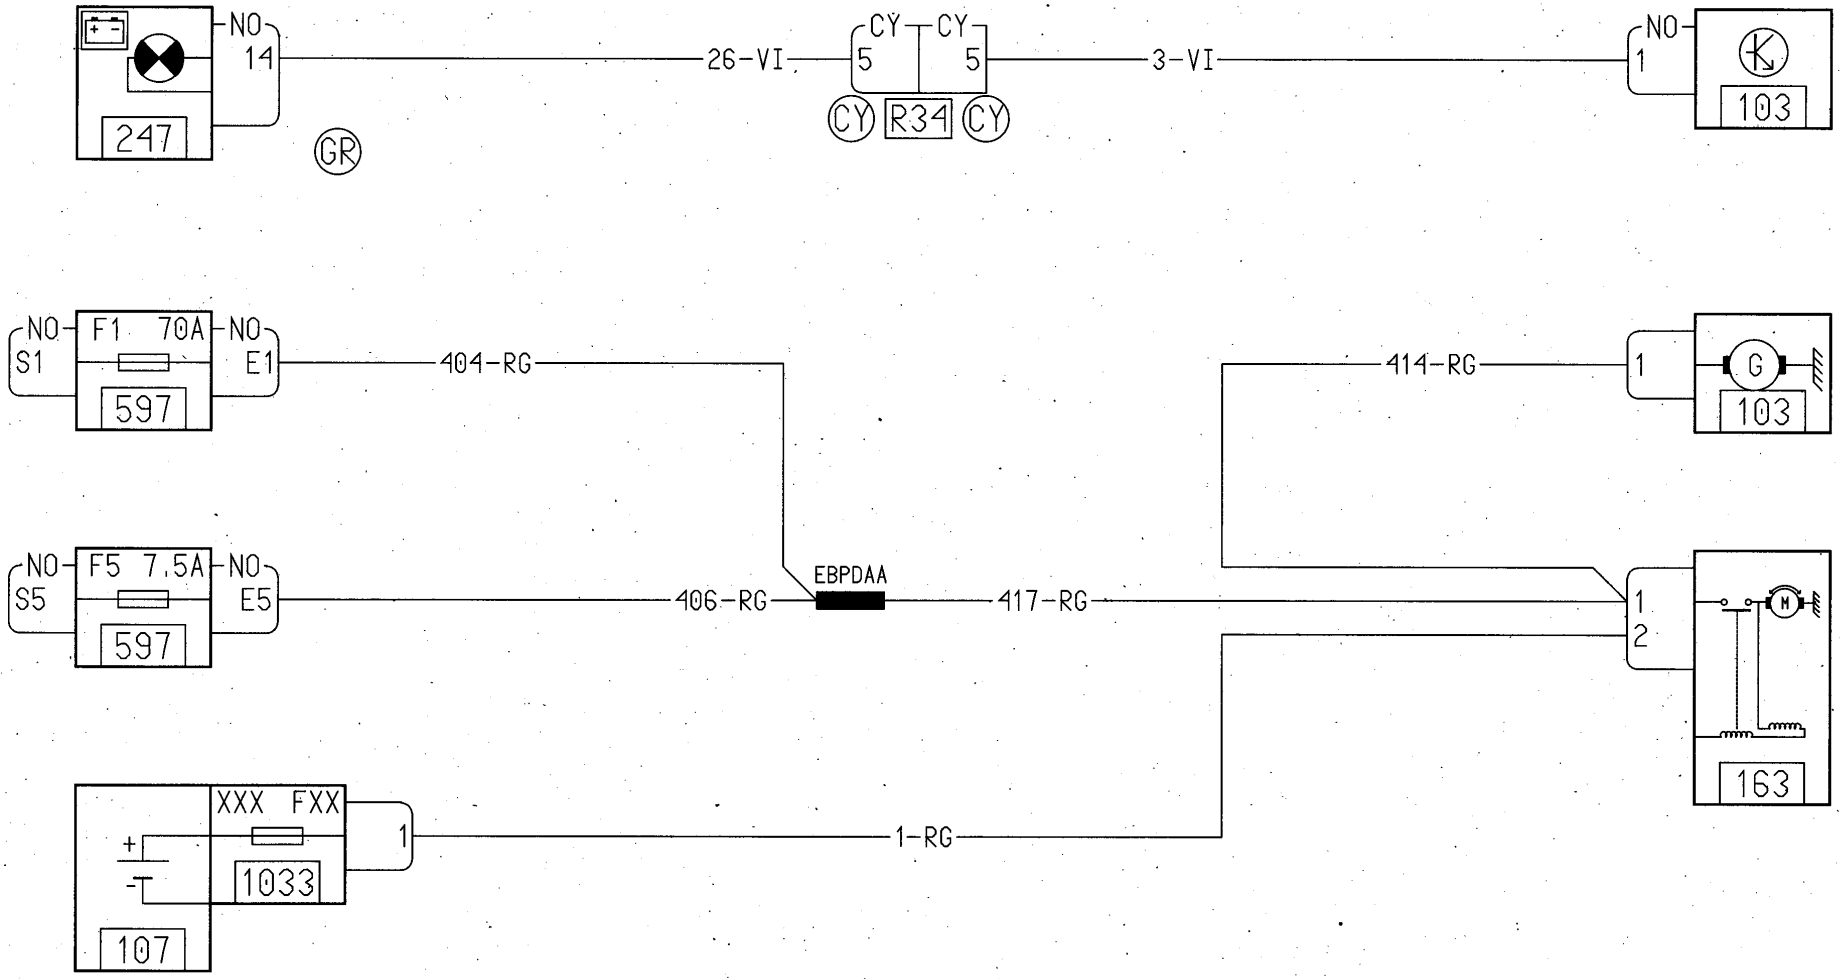

BATTERY CHARGE CIRCUIT

B64,L64/K4M706/CA/MERCOS/BVM5

X642
00

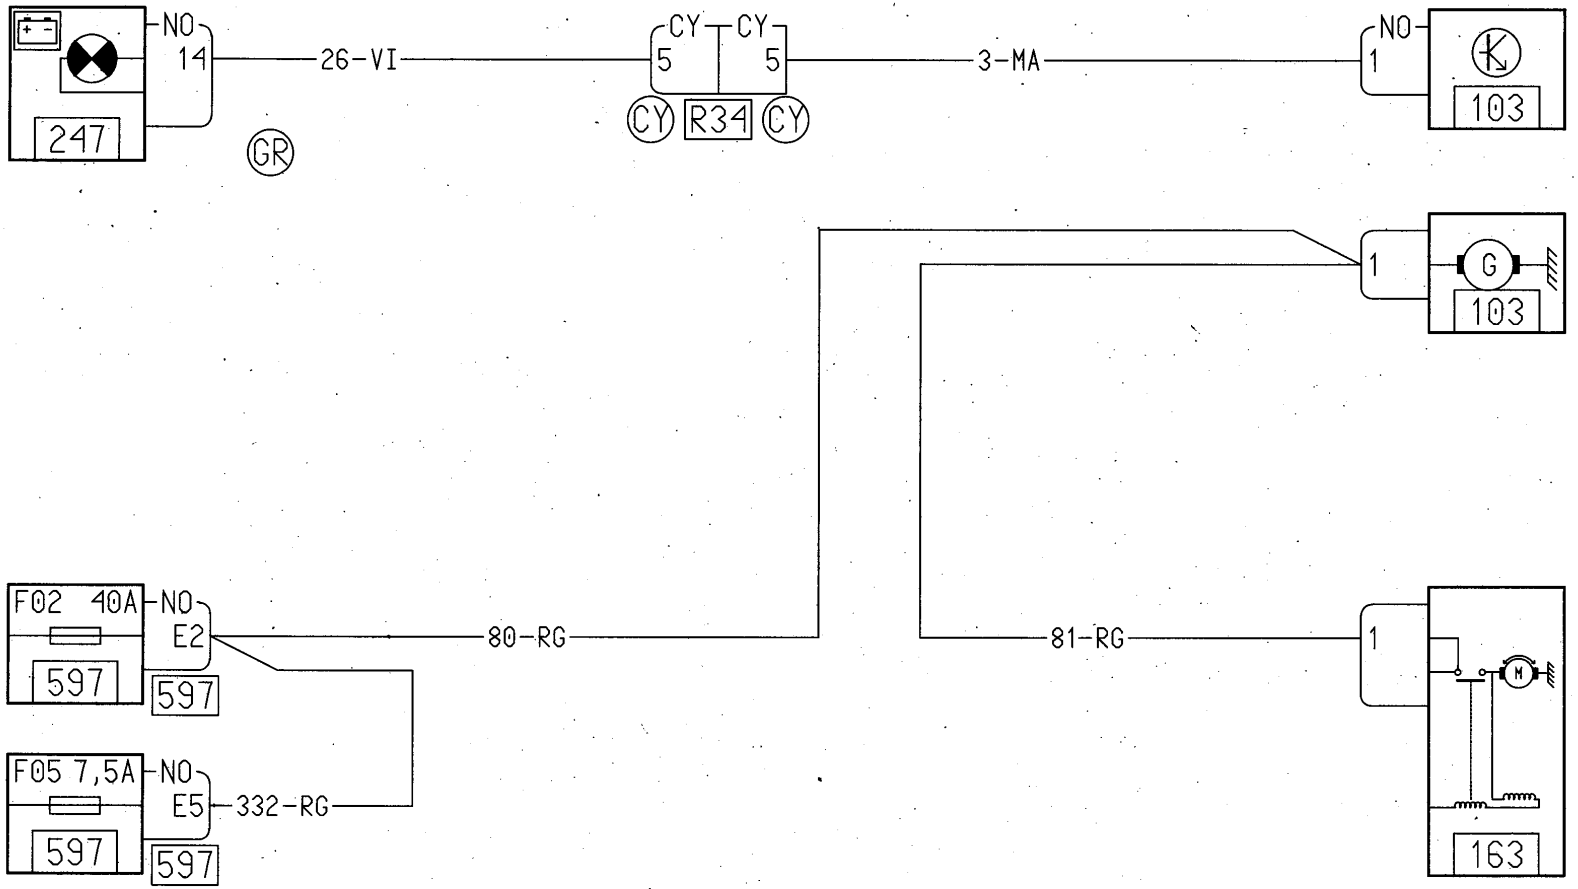


BATTERY CHARGE CIRCUIT

B64,L64/K4M706/CHAUFO/MERCOS/BVM5

X642


00

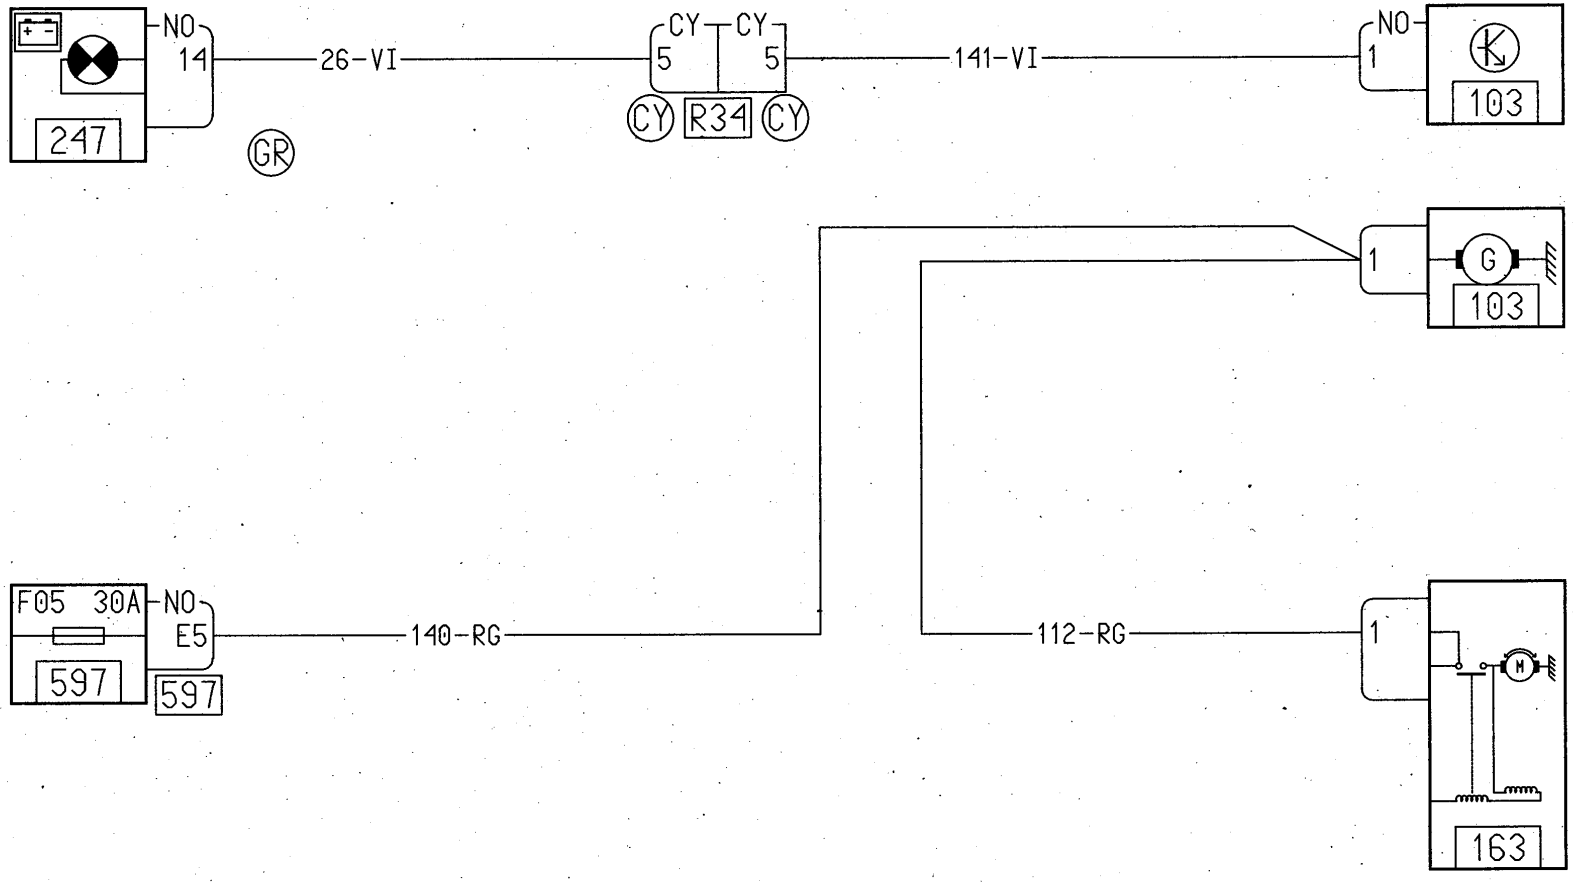

BATTERY CHARGE CIRCUIT

B64,L64/K7M704/CHAUFO/MERCOS/BVM5

X642
01

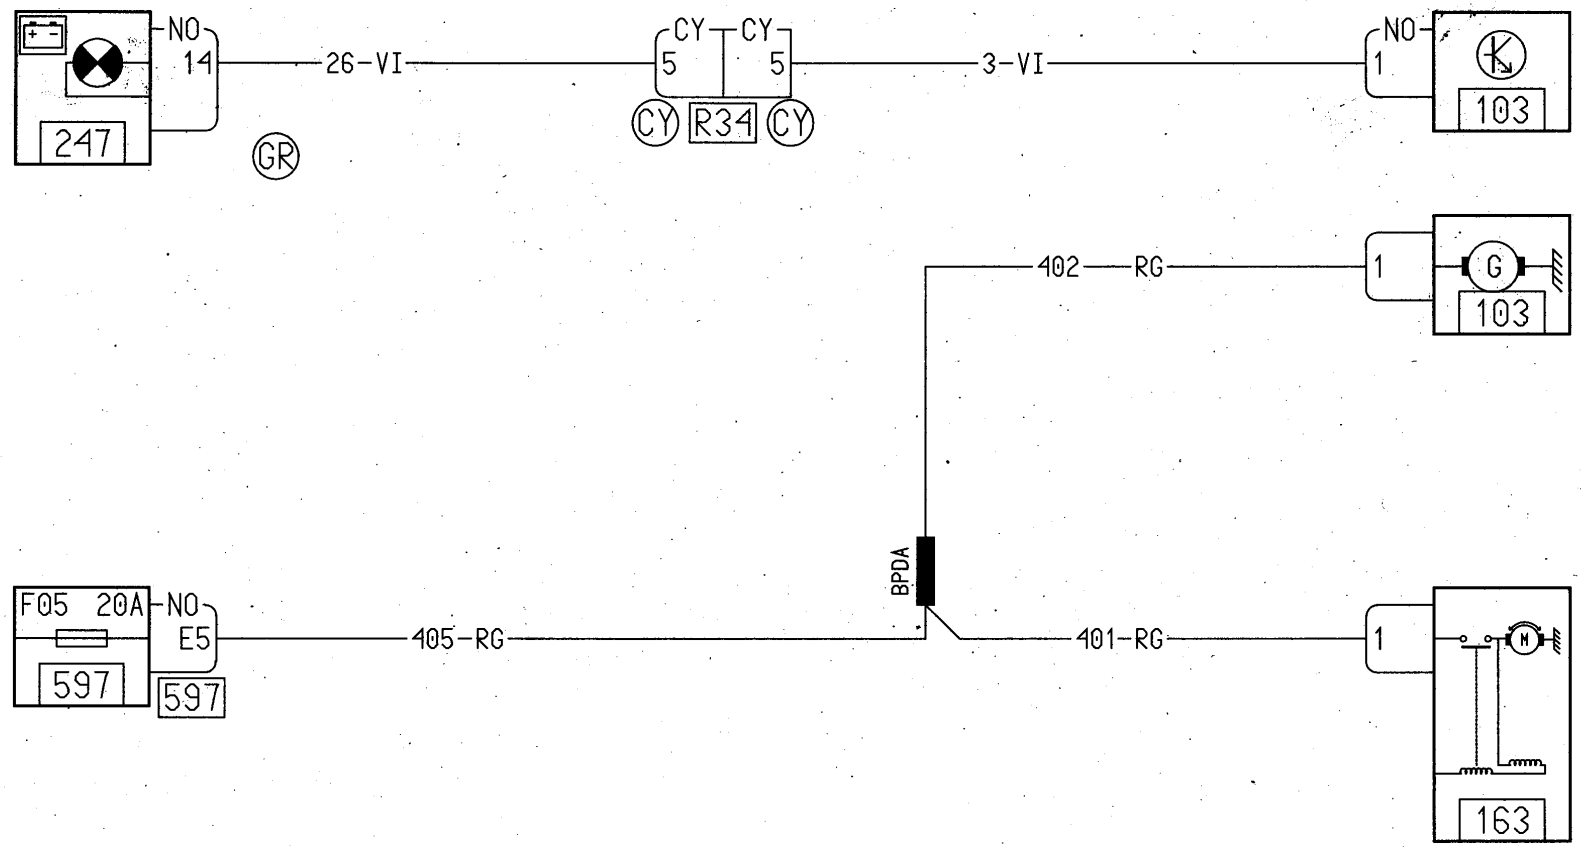


STARTING CIRCUIT

F4P720,F4P722,F4R740,F4R741,F5R740,K4J714,K4J750,K4M712

X642


00

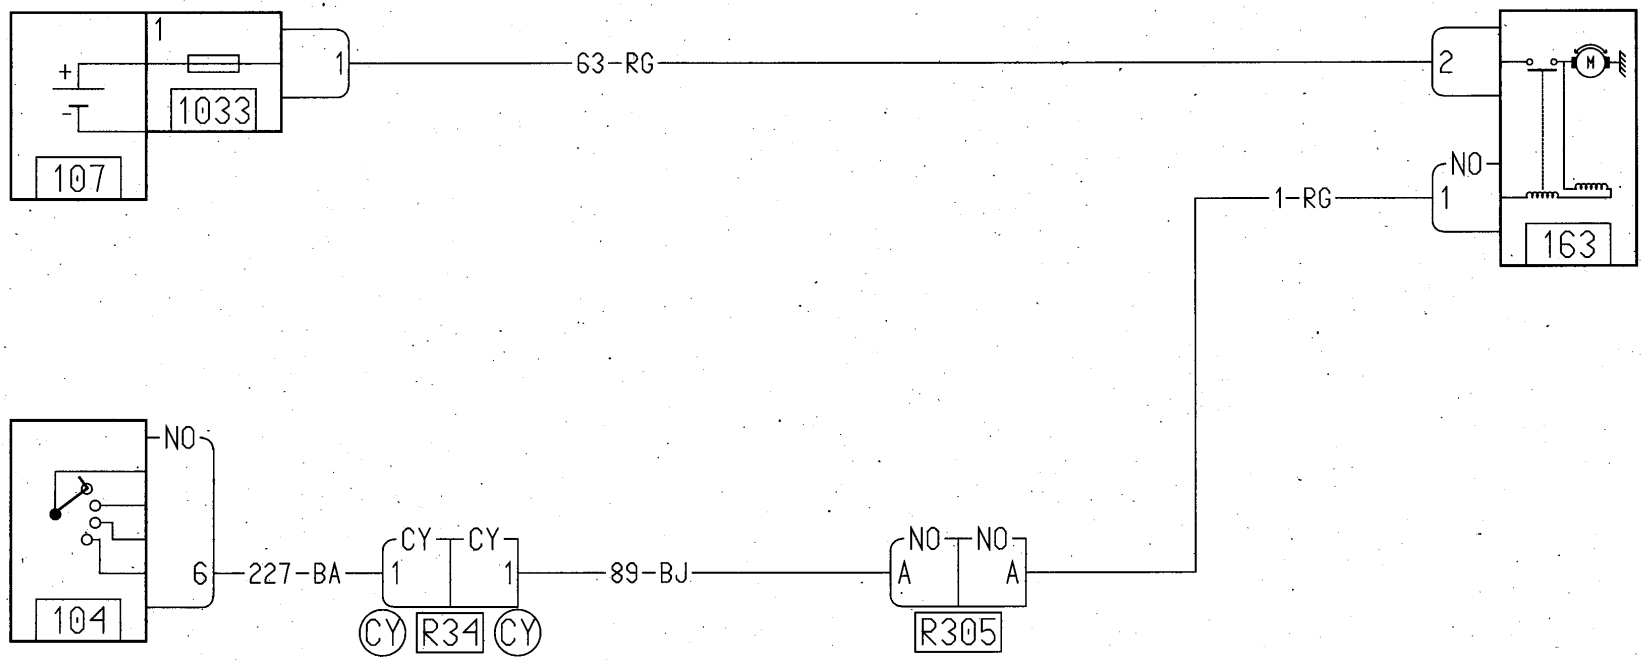


STARTING CIRCUIT

(F9Q733),(F9Q731)

X642
00

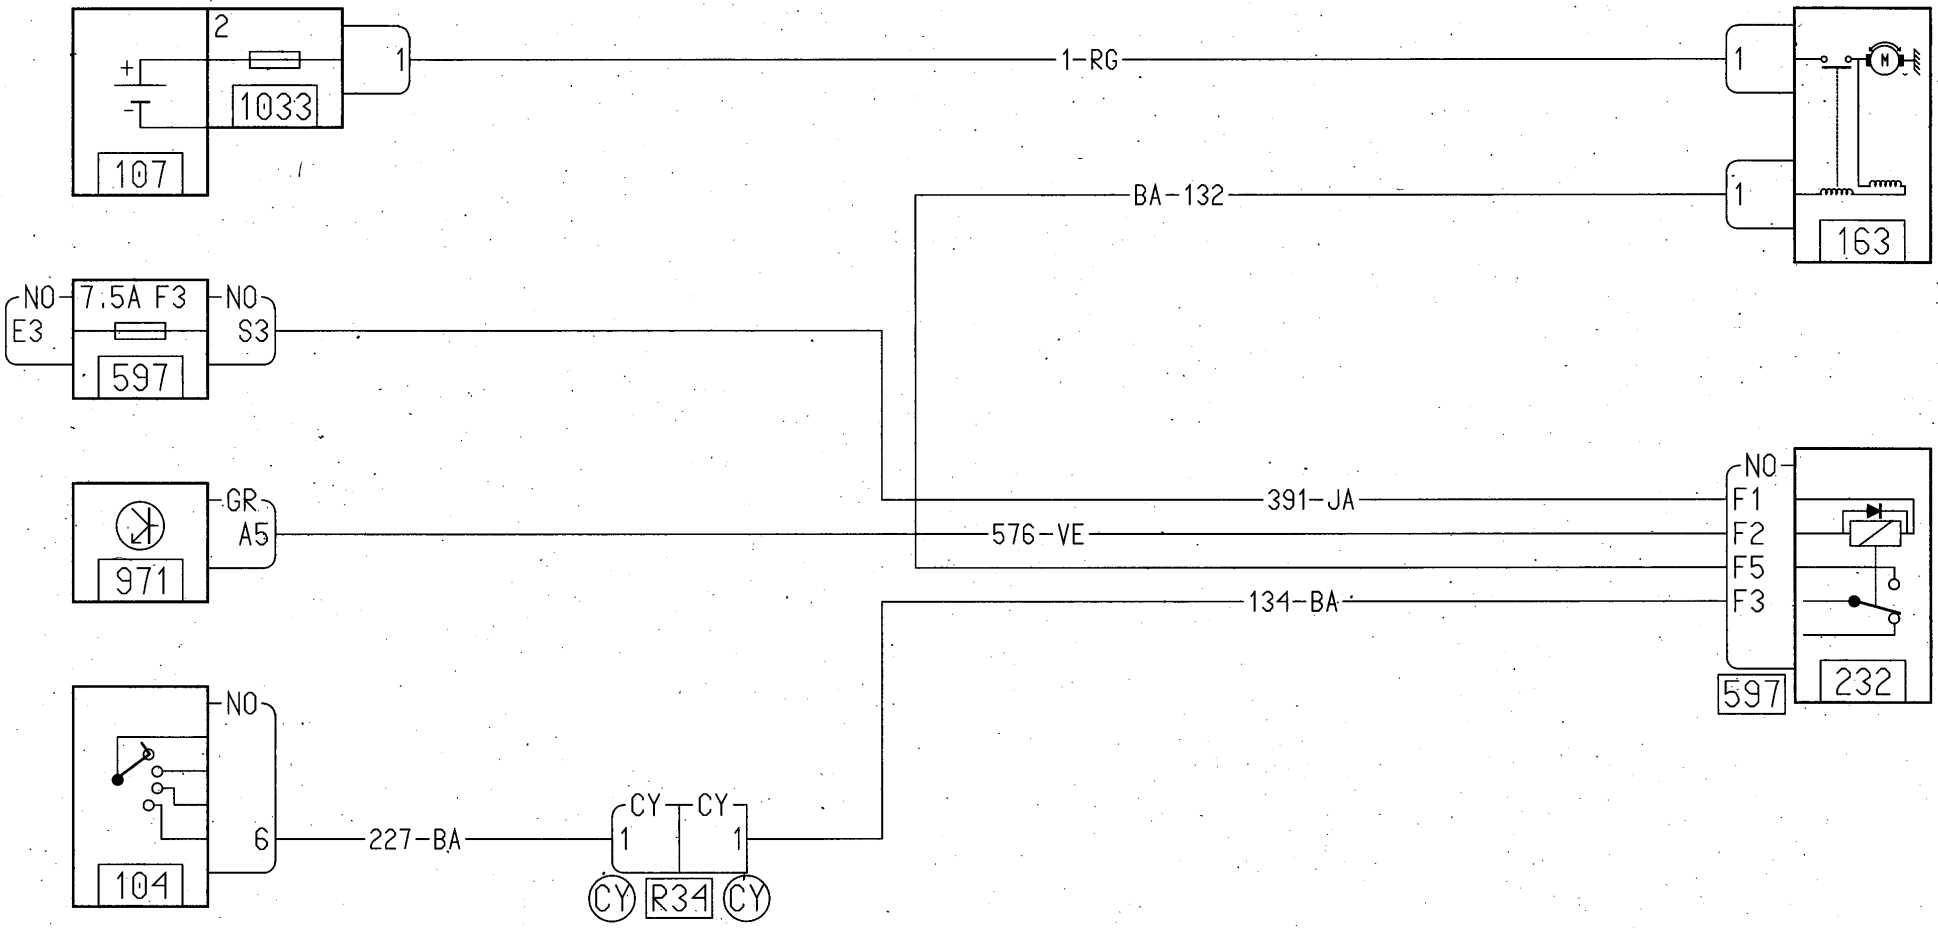


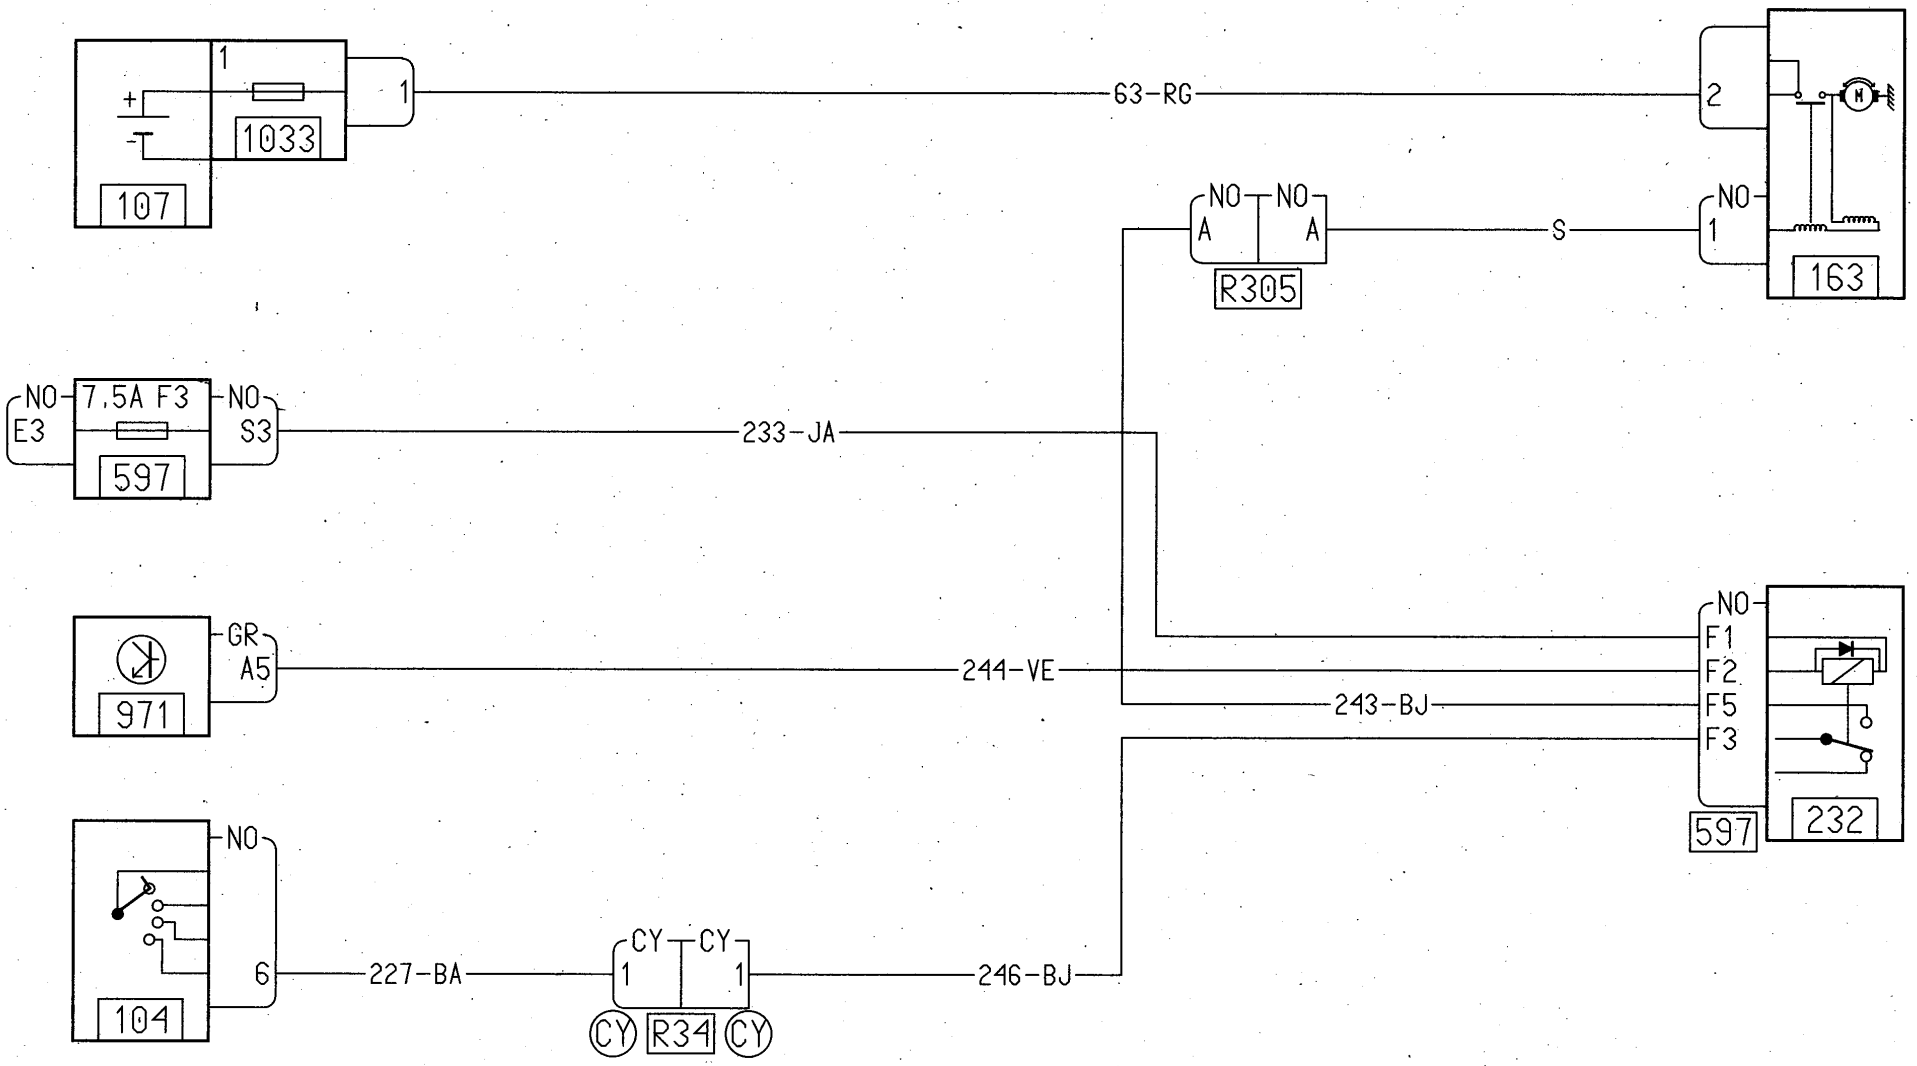
1
+
-
1033
107
1
63-RG
2
M
NO
A
NO
A
R305
S
NO
1
163
NO
E3
7.5A F3
NO
S3
597
233-JA
GR
A5
971
244-VE
243-BJ
NO
F1
F2
F5
F3
597
232
NO
6
104
227-BA
CY
1
CY
1
CY
R34
CY
246-BJ

STARTING CIRCUIT

E7J626,F8Q622,F8Q790


X642
00

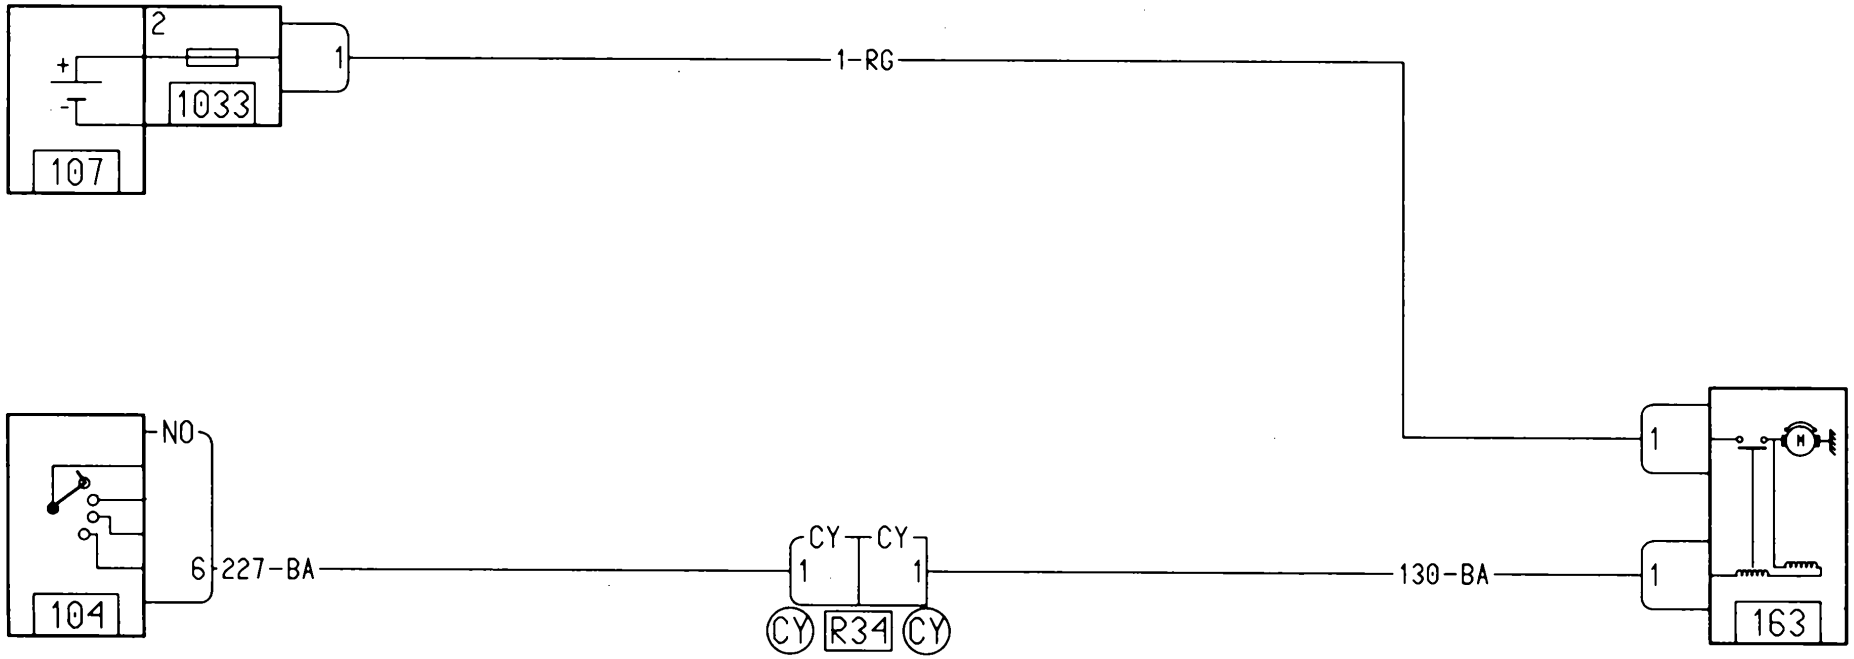



STARTING CIRCUIT


B64,L64/K4M706,K7M704/MERCOS/BVM5

X642
00

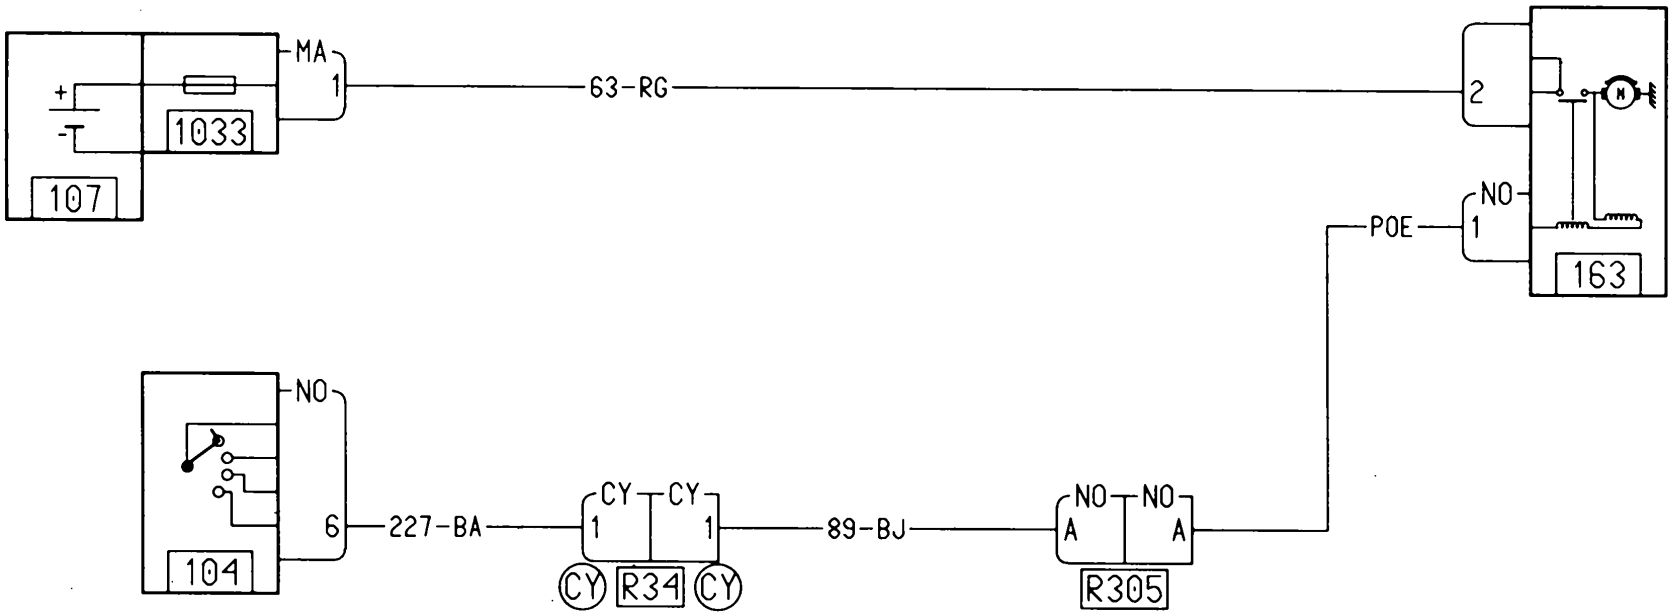

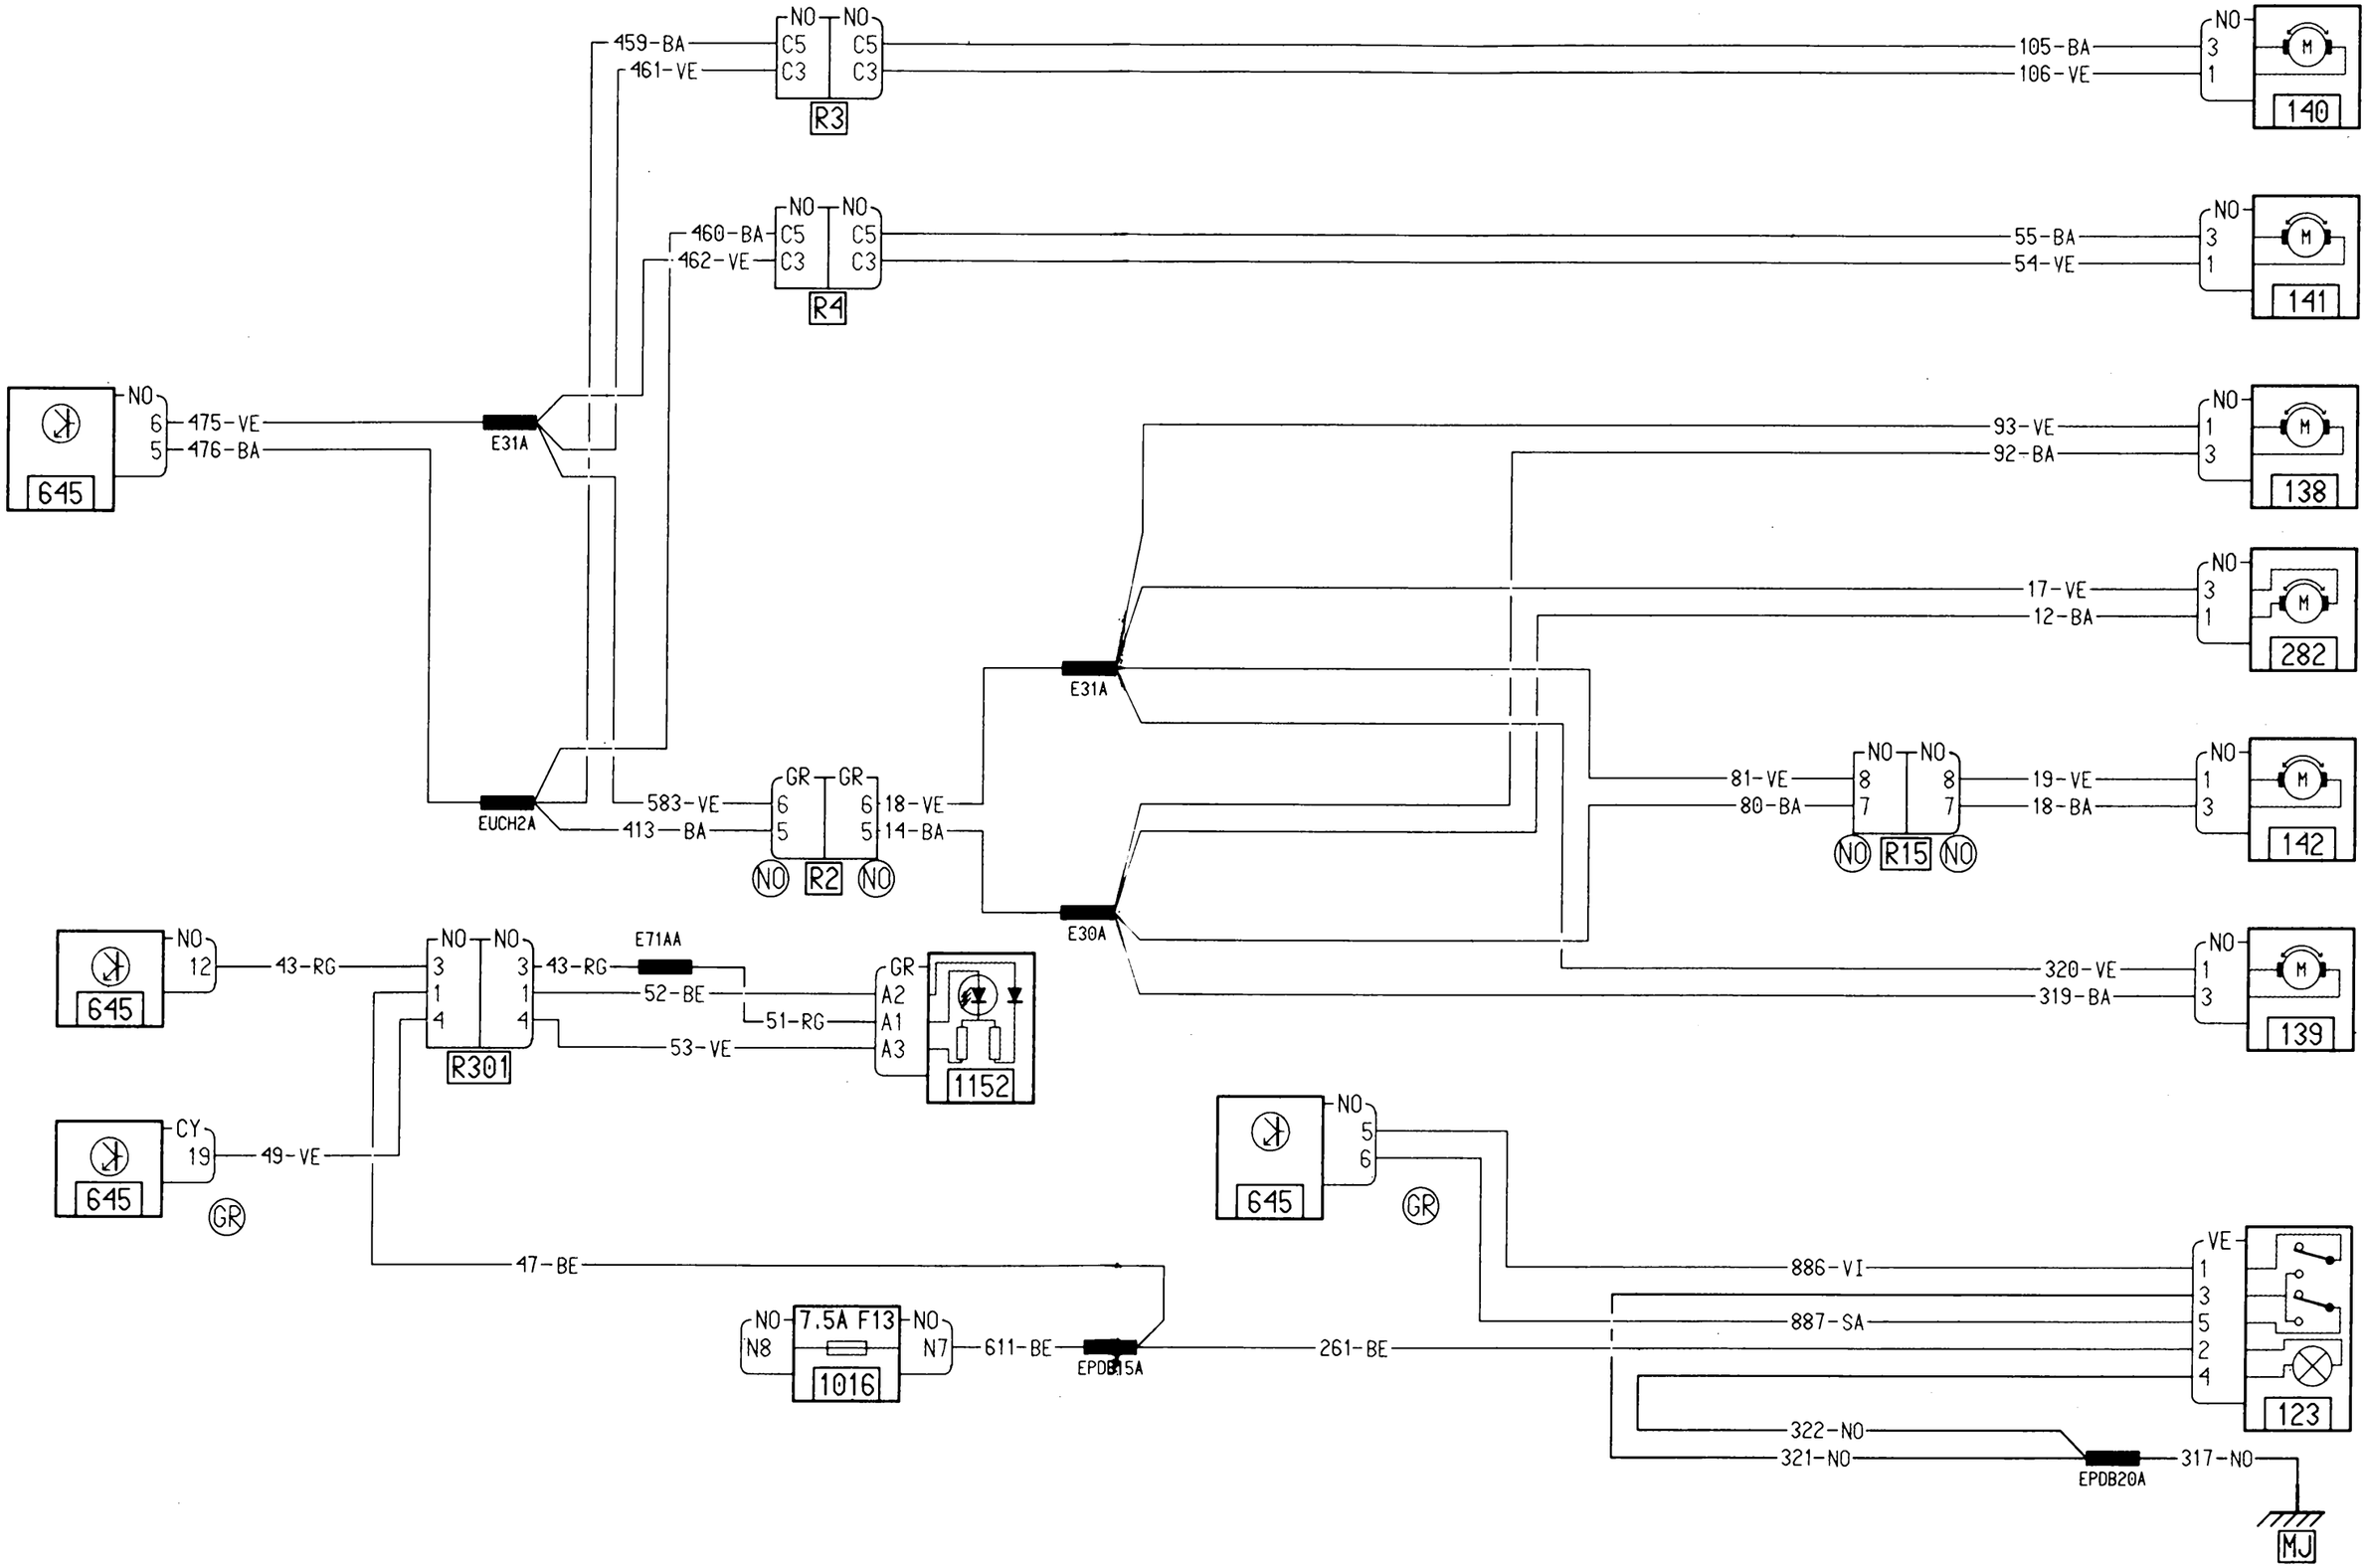
459-BA
461-VE
NO C5 C3 NO C5 C3
R3
105-BA
106-VE
NO 3 1
140
460-BA
462-VE
NO C5 C3 NO C5 C3
R4
55-BA
54-VE
NO 3 1
141
645
NO 6 5
475-VE
476-BA
E31A
93-VE
92-BA
NO 1 3
138
17-VE
12-BA
NO 3 1
282
E31A
583-VE
413-BA
GR 6 5 GR 6 5
18-VE
14-BA
EUCH2A
NO R2 NO
81-VE
80-BA
NO 8 7 NO 8 7
19-VE
18-BA
NO 1 3
142
NO R15 NO
E30A
645
NO 12
43-RG
NO 3 1 4 NO 3 1 4
R301
E71AA
43-RG
52-BE
51-RG
53-VE
GR A2 A1 A3
1152
320-VE
319-BA
NO 1 3
139
645
CY 19
49-VE
GR
645
NO 5 6
GR
47-BE
NO N8 7.5A F13 NO N7
1016
611-BE
EPDB15A
261-BE
886-VI
887-SA
322-NO
321-NO
EPDB20A
317-NO
VE 1 3 5 2 4
123
MJ

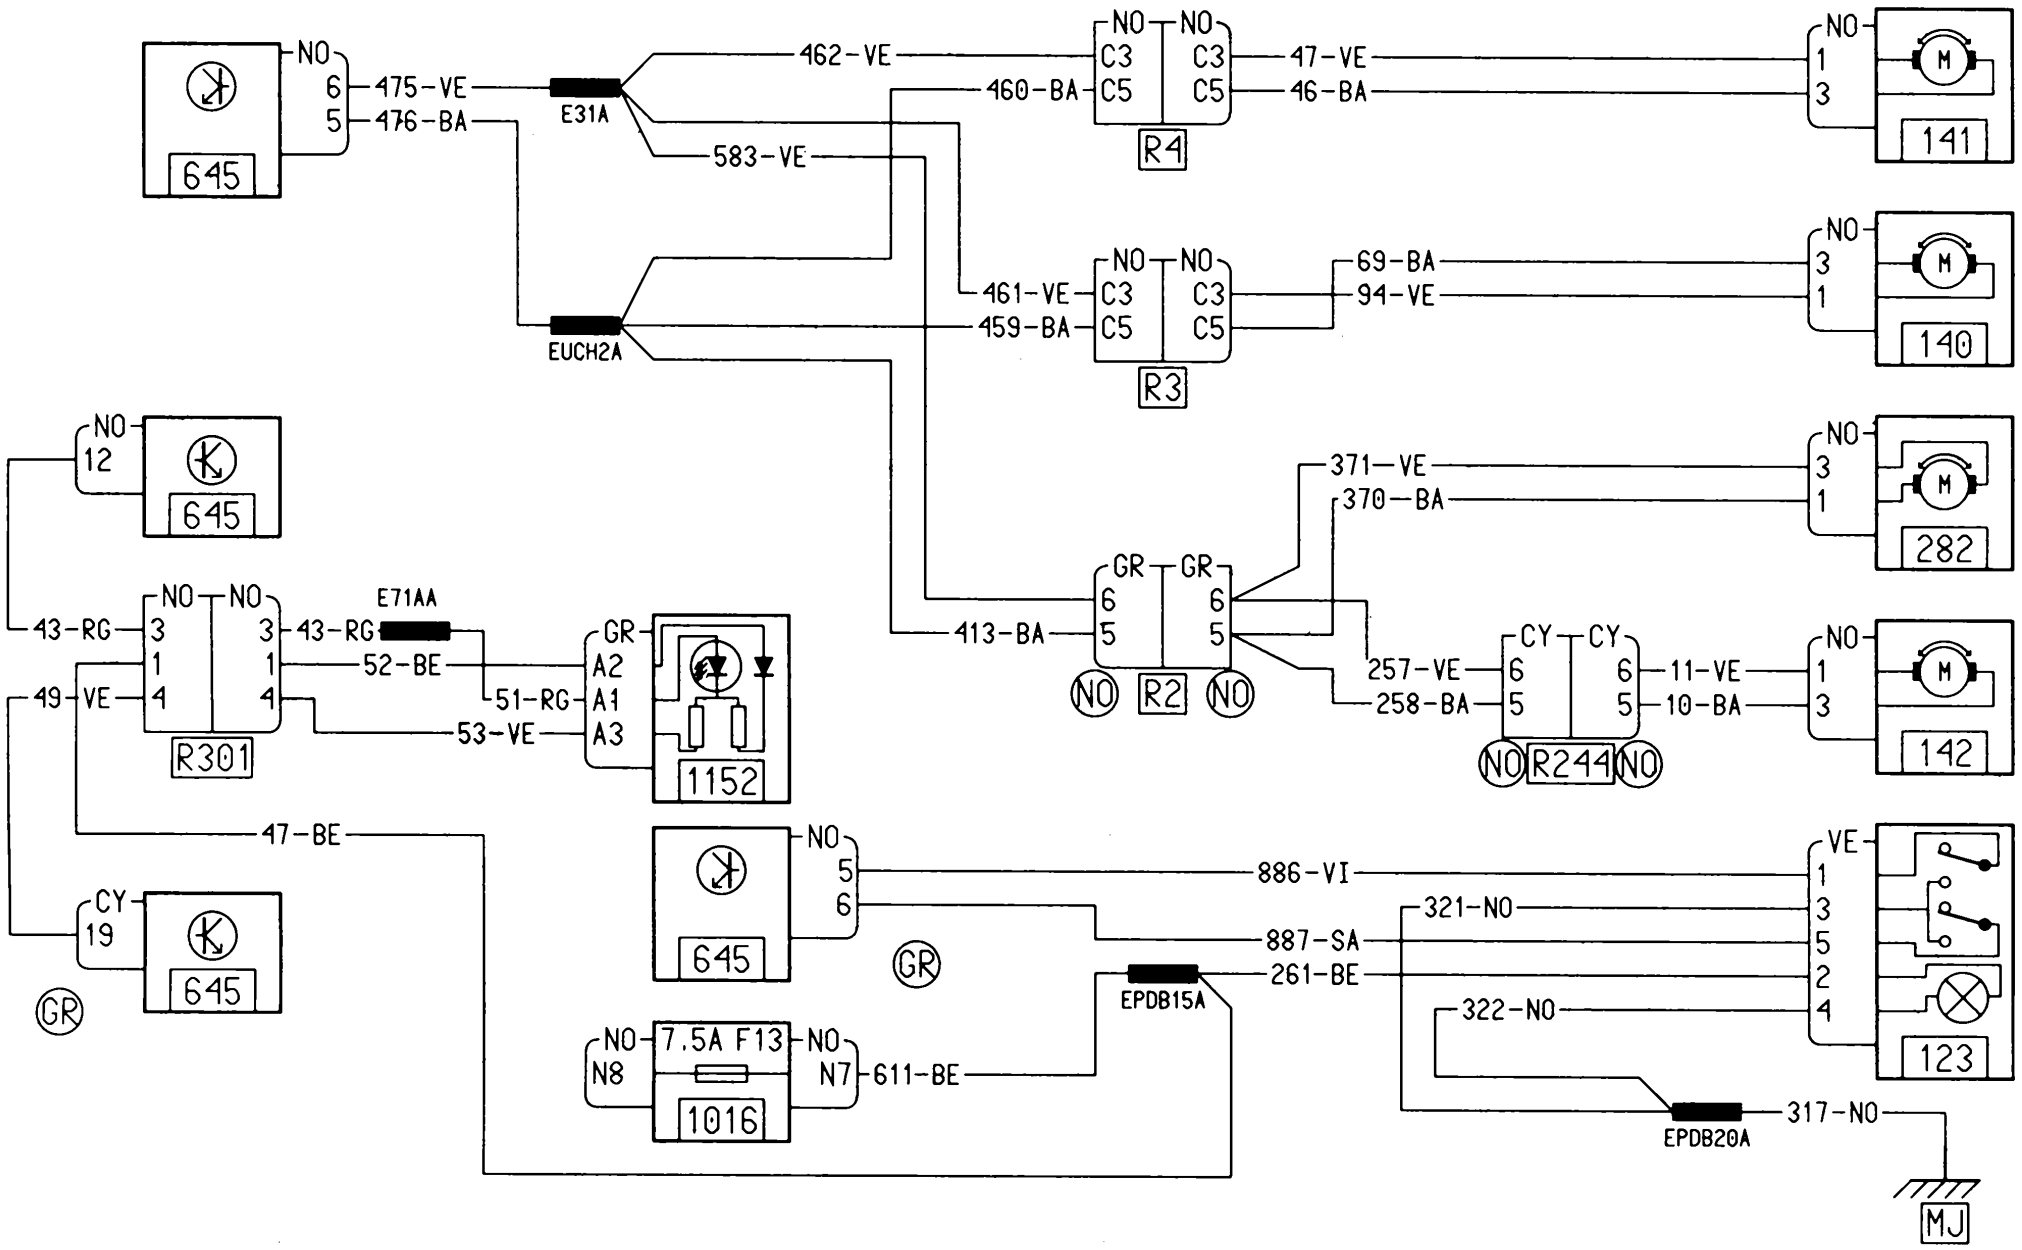
645
NO
6
5
475-VE
476-BA
E31A
462-VE
460-BA
583-VE
NO
C3
C5
R4
47-VE
46-BA
141
EUCH2A
461-VE
459-BA
R3
69-BA
94-VE
140
12
371-VE
370-BA
282
43-RG
49
VE
R301
E71AA
52-BE
53-VE
GR
A2
A1
A3
1152
413-BA
R2
257-VE
258-BA
CY
R244
11-VE
10-BA
142
47-BE
19
886-VI
887-SA
261-BE
EPDB15A
321-NO
322-NO
VE
123
EPDB20A
317-NO
7.5A F13
N8
N7
611-BE
1016
MJ

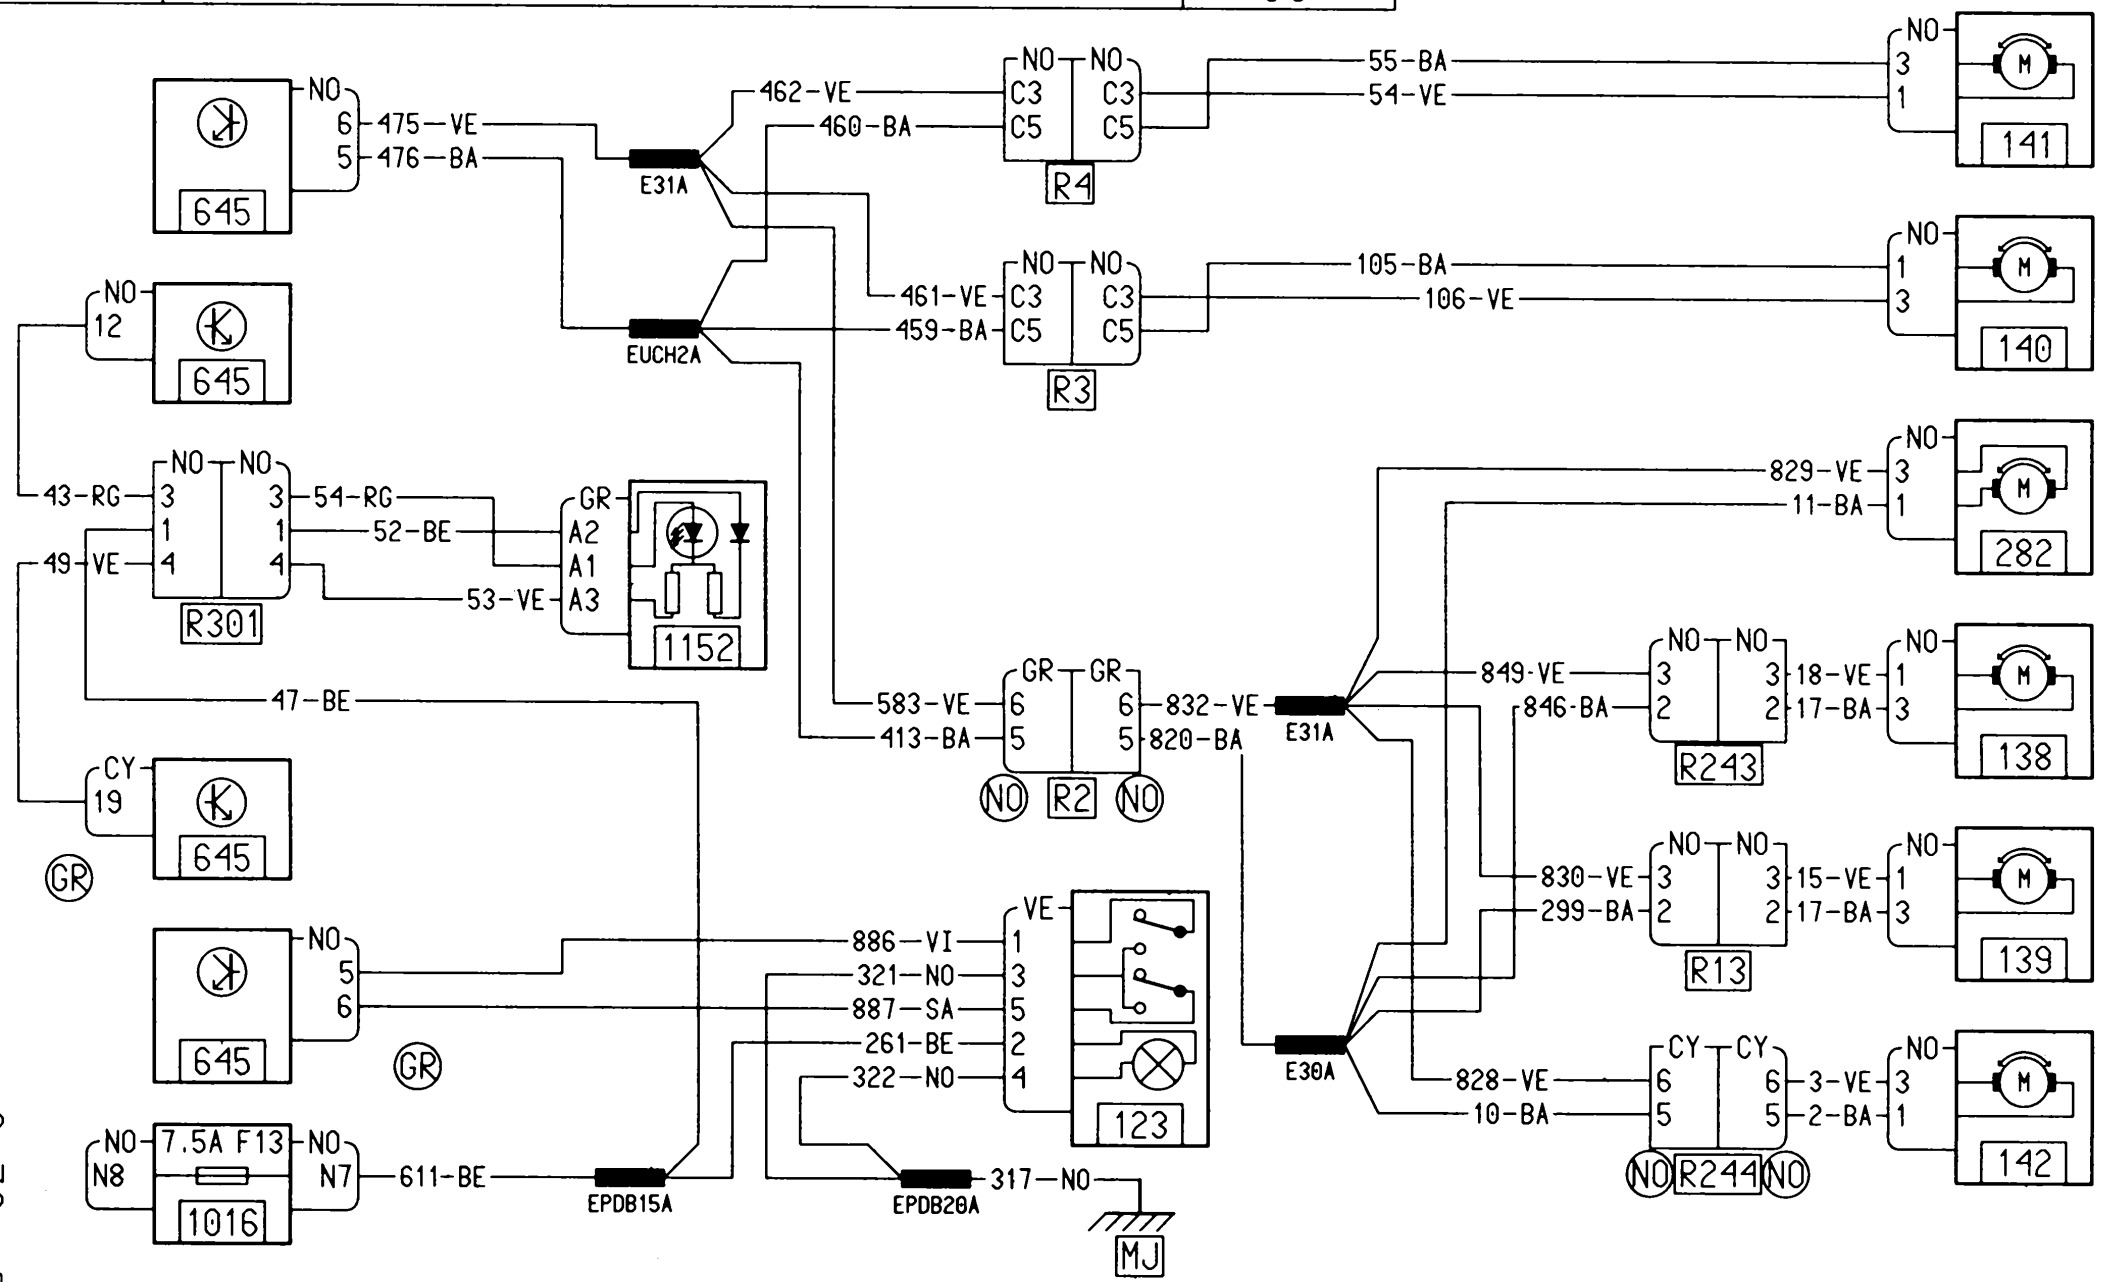

645
NO
6
5
475-VE
476-BA
E31A
462-VE
460-BA
NO
C3
C5
R4
55-BA
54-VE
141
12
EUCH2A
461-VE
459-BA
R3
105-BA
106-VE
140
43-RG
49-VE
3
1
4
54-RG
52-BE
53-VE
R301
GR
A2
A1
A3
1152
829-VE
11-BA
282
47-BE
583-VE
413-BA
6
5
832-VE
820-BA
R2
849-VE
846-BA
2
18-VE
17-BA
138
CY
19
830-VE
299-BA
R13
15-VE
139
886-VI
321-NO
887-SA
261-BE
322-NO
VE
1
3
5
2
123
828-VE
10-BA
CY
3-VE
2-BA
142
7.5A F13
N8
N7
611-BE
1016
EPDB15A
EPDB20A
317-NO
MJ

DOOR LOCKING

B64/E1/DG

X642


00

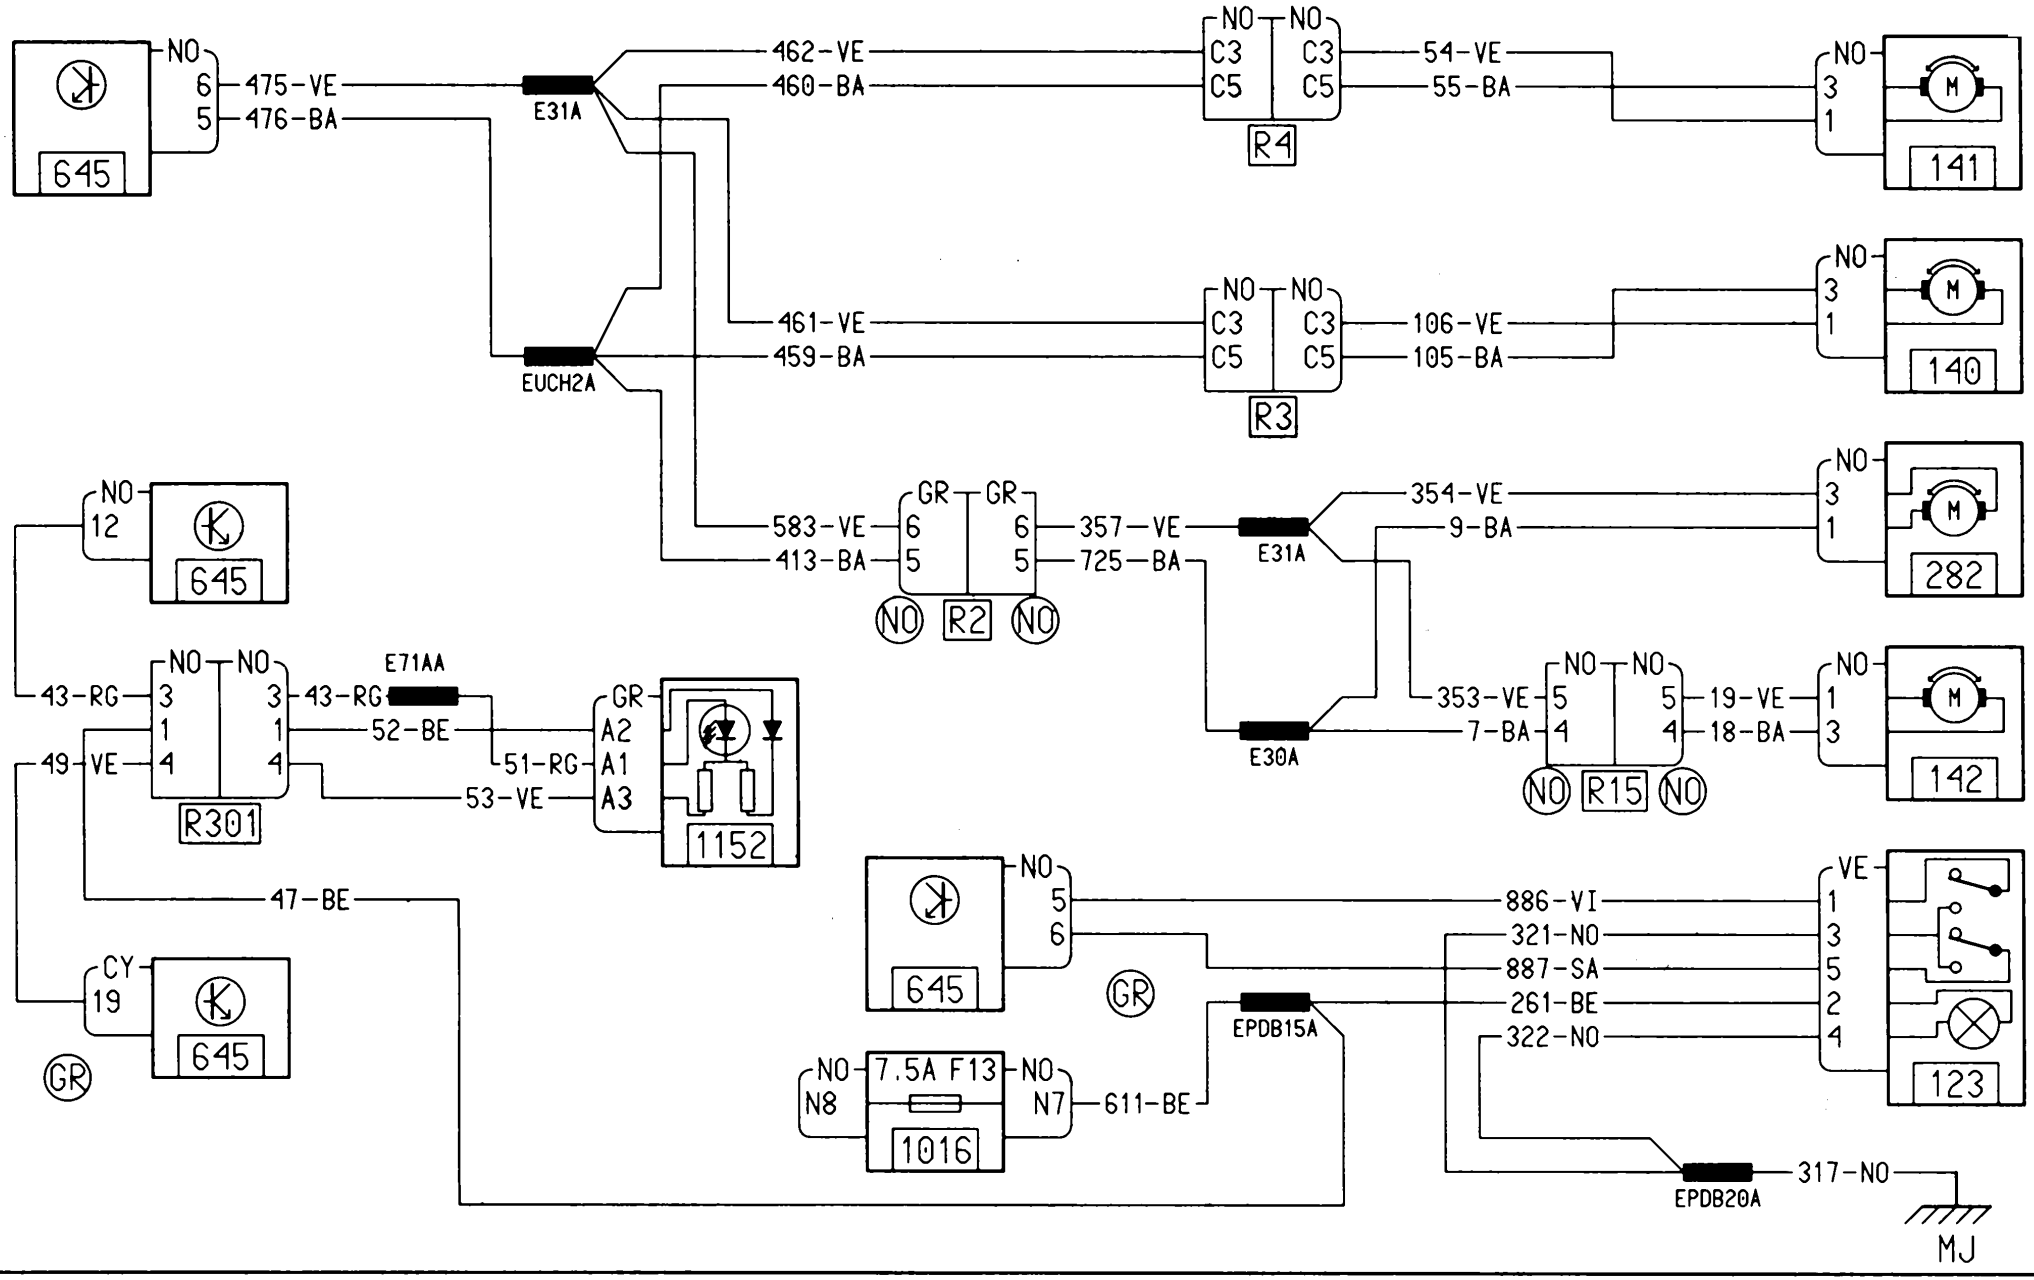



DOOR LOCKING


L64/E1/DG


X642
00

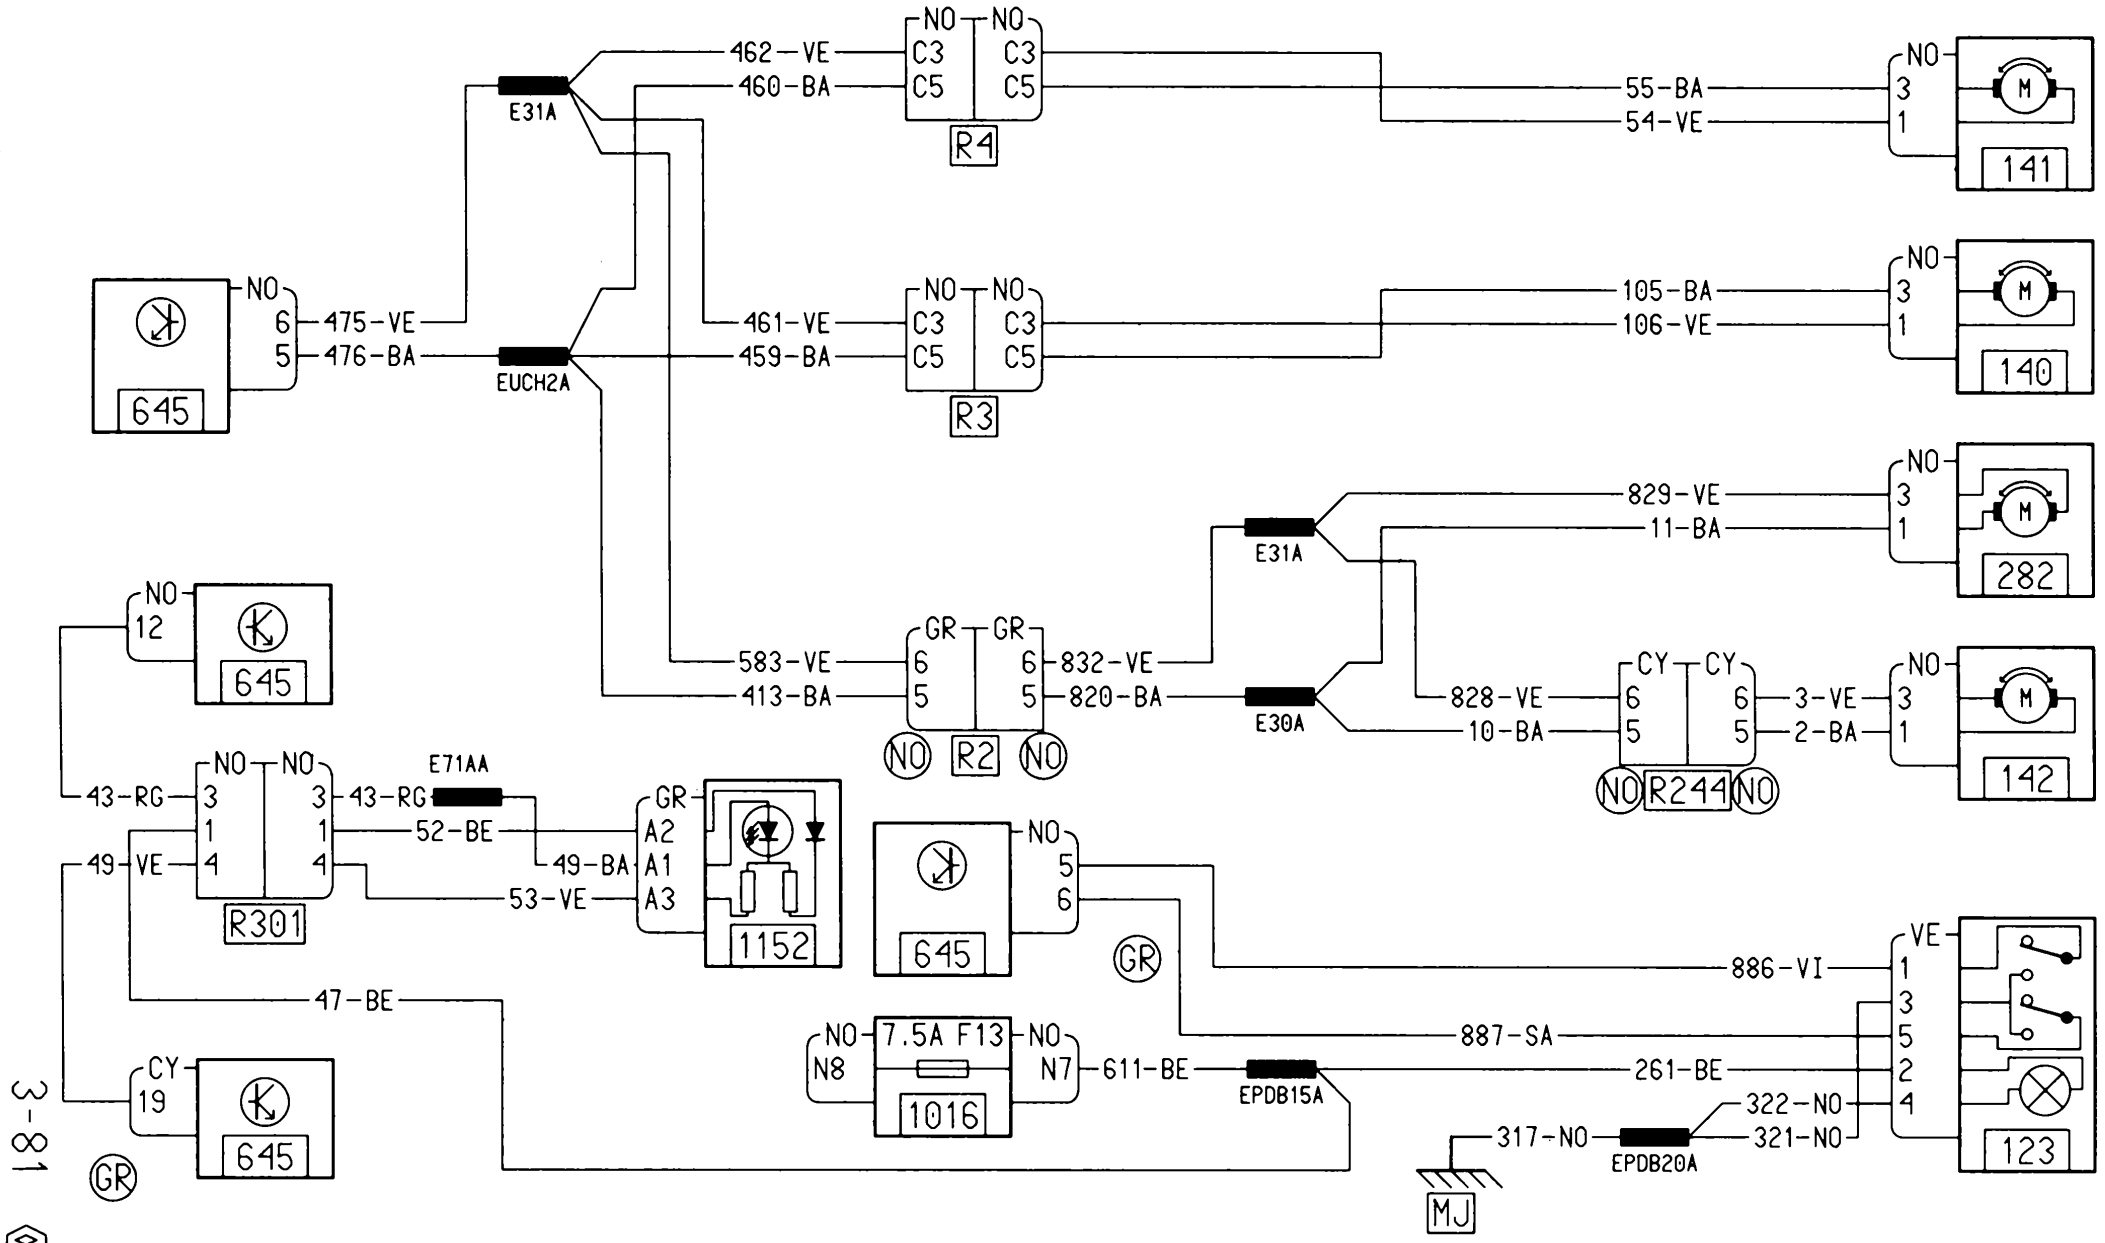


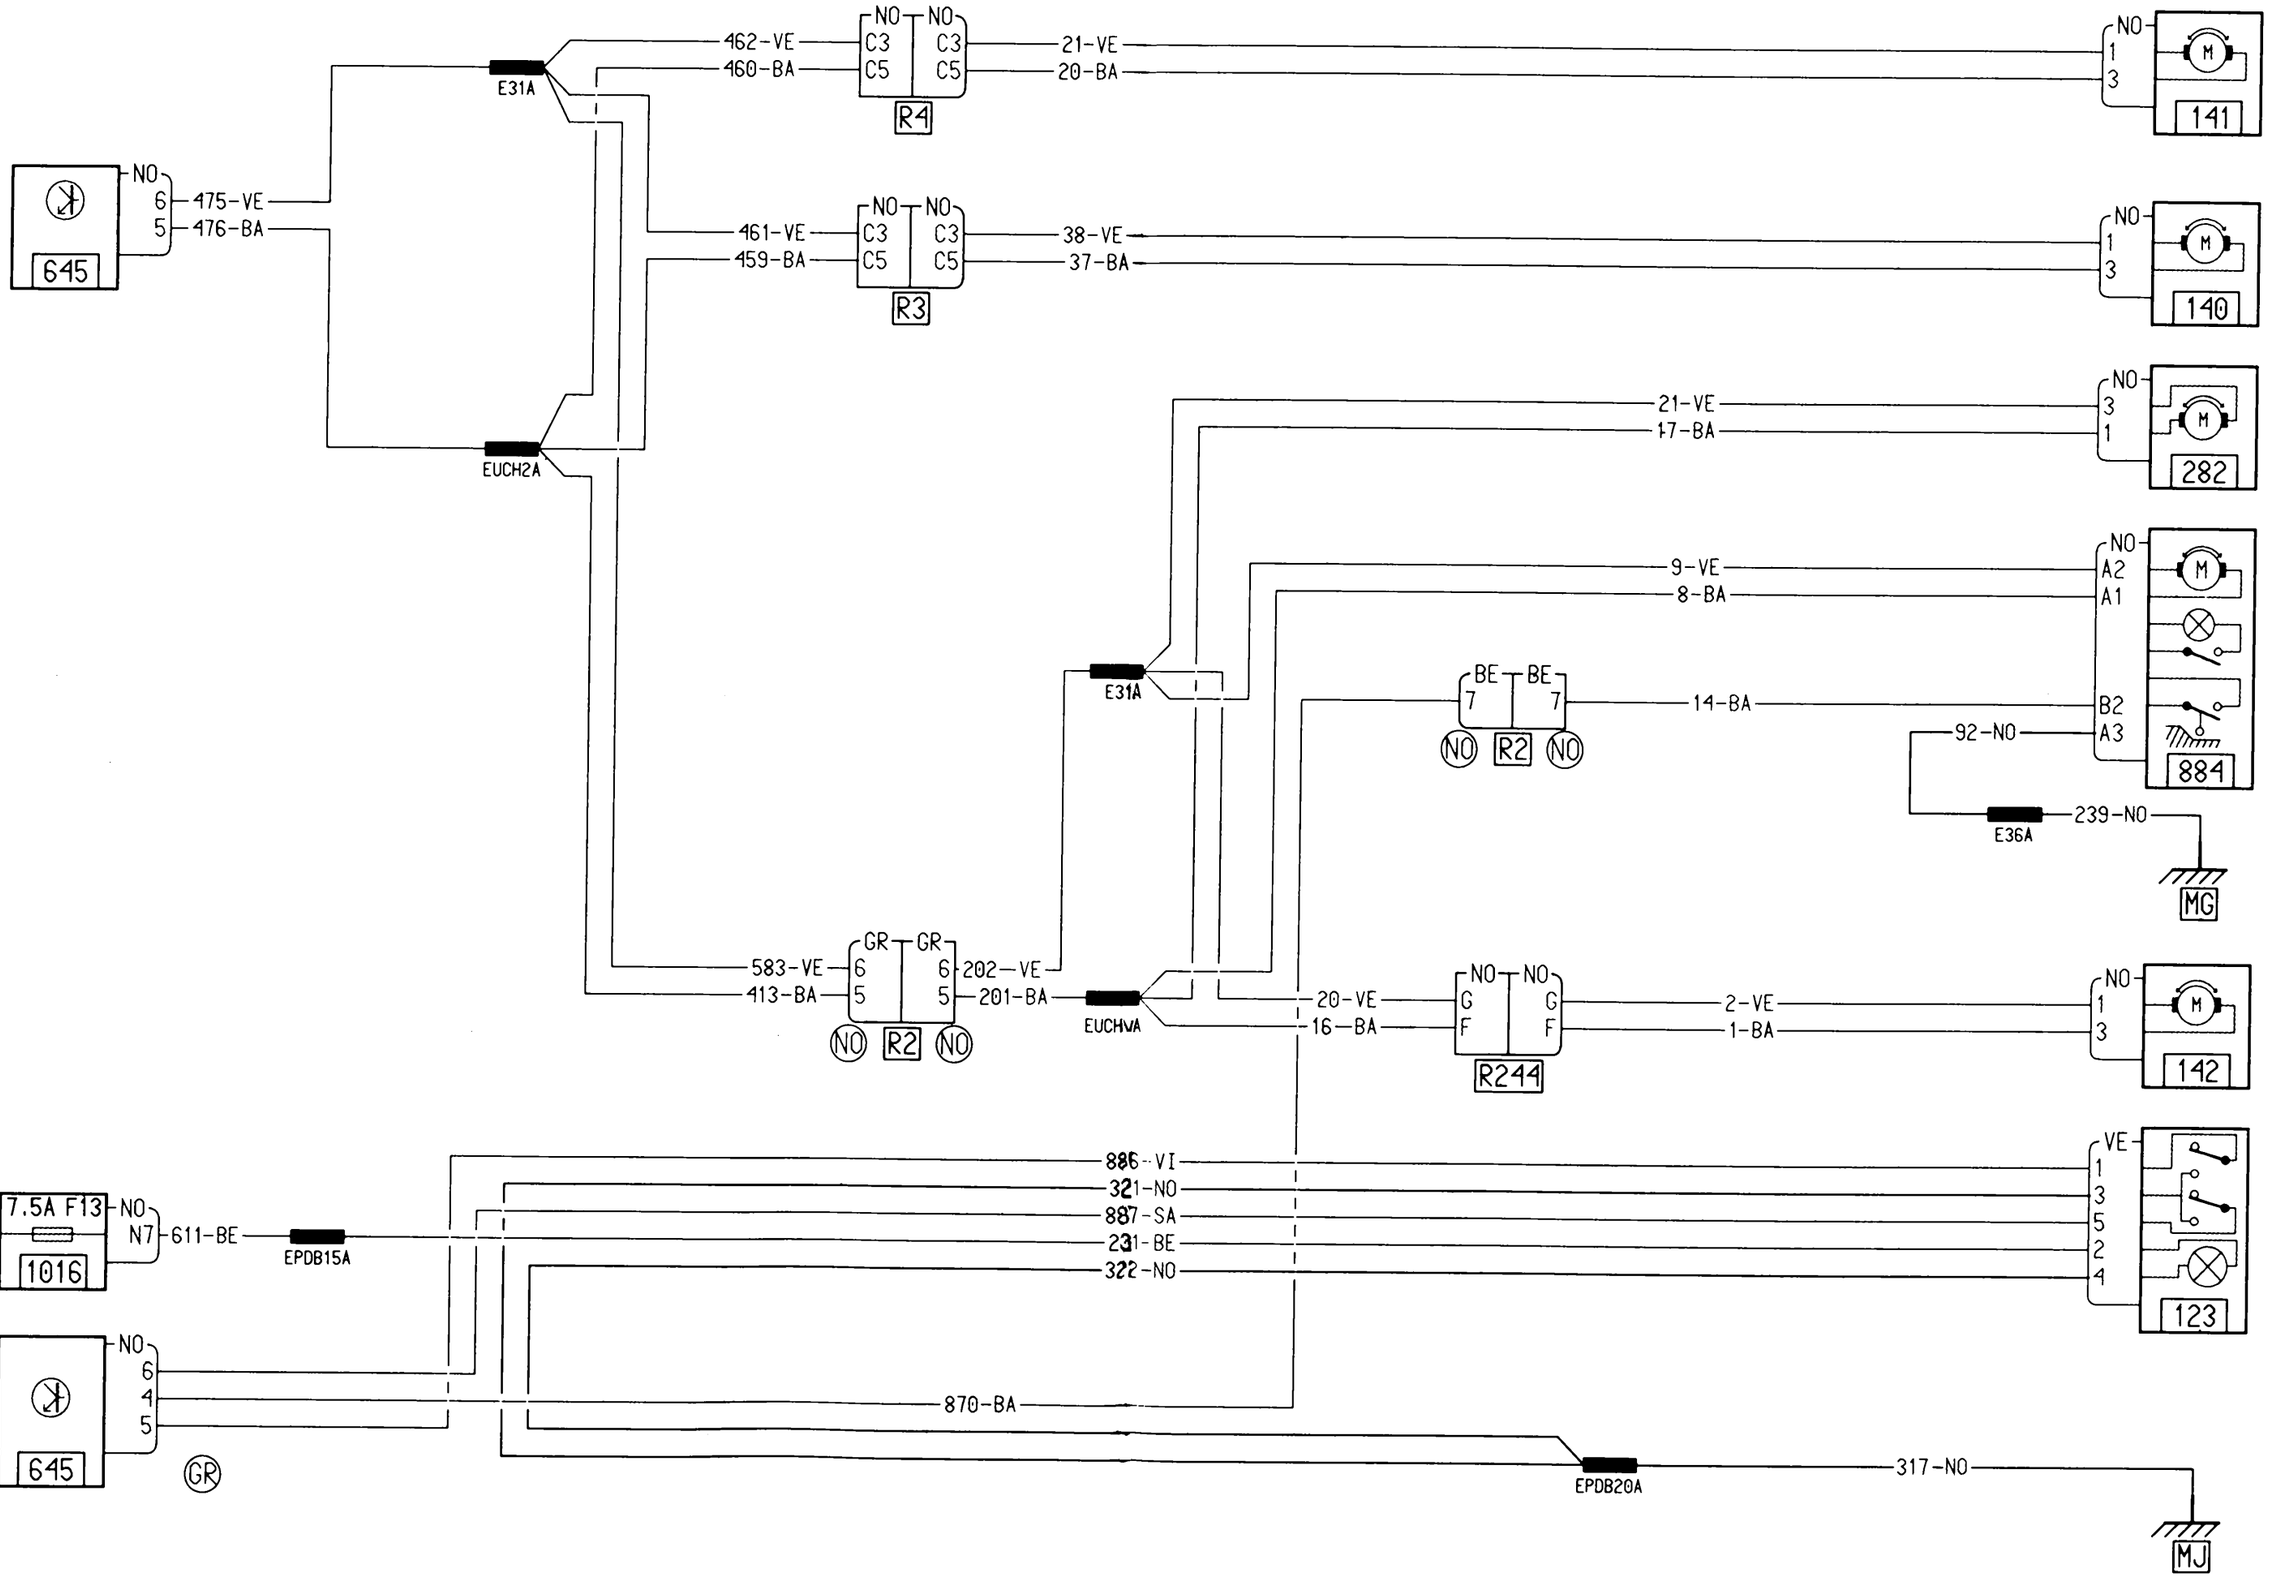

645
NO
6
5
475-VE
476-BA
E31A
462-VE
460-BA
NO
C3
C5
R4
NO
C3
C5
21-VE
20-BA
NO
1
3
M
141
461-VE
459-BA
R3
38-VE
37-BA
140
EUCH2A
21-VE
17-BA
3
1
282
E31A
9-VE
8-BA
A2
A1
BE
7
R2
14-BA
B2
A3
884
92-NO
239-NO
E36A
MG
583-VE
413-BA
GR
6
5
202-VE
201-BA
EUCHVA
20-VE
16-BA
G
F
R244
2-VE
1-BA
142
886-VI
321-NO
887-SA
231-BE
322-NO
VE
123
7.5A F13
N8
N7
1016
611-BE
EPDB15A
870-BA
EPDB20A
317-NO
MJ
GR

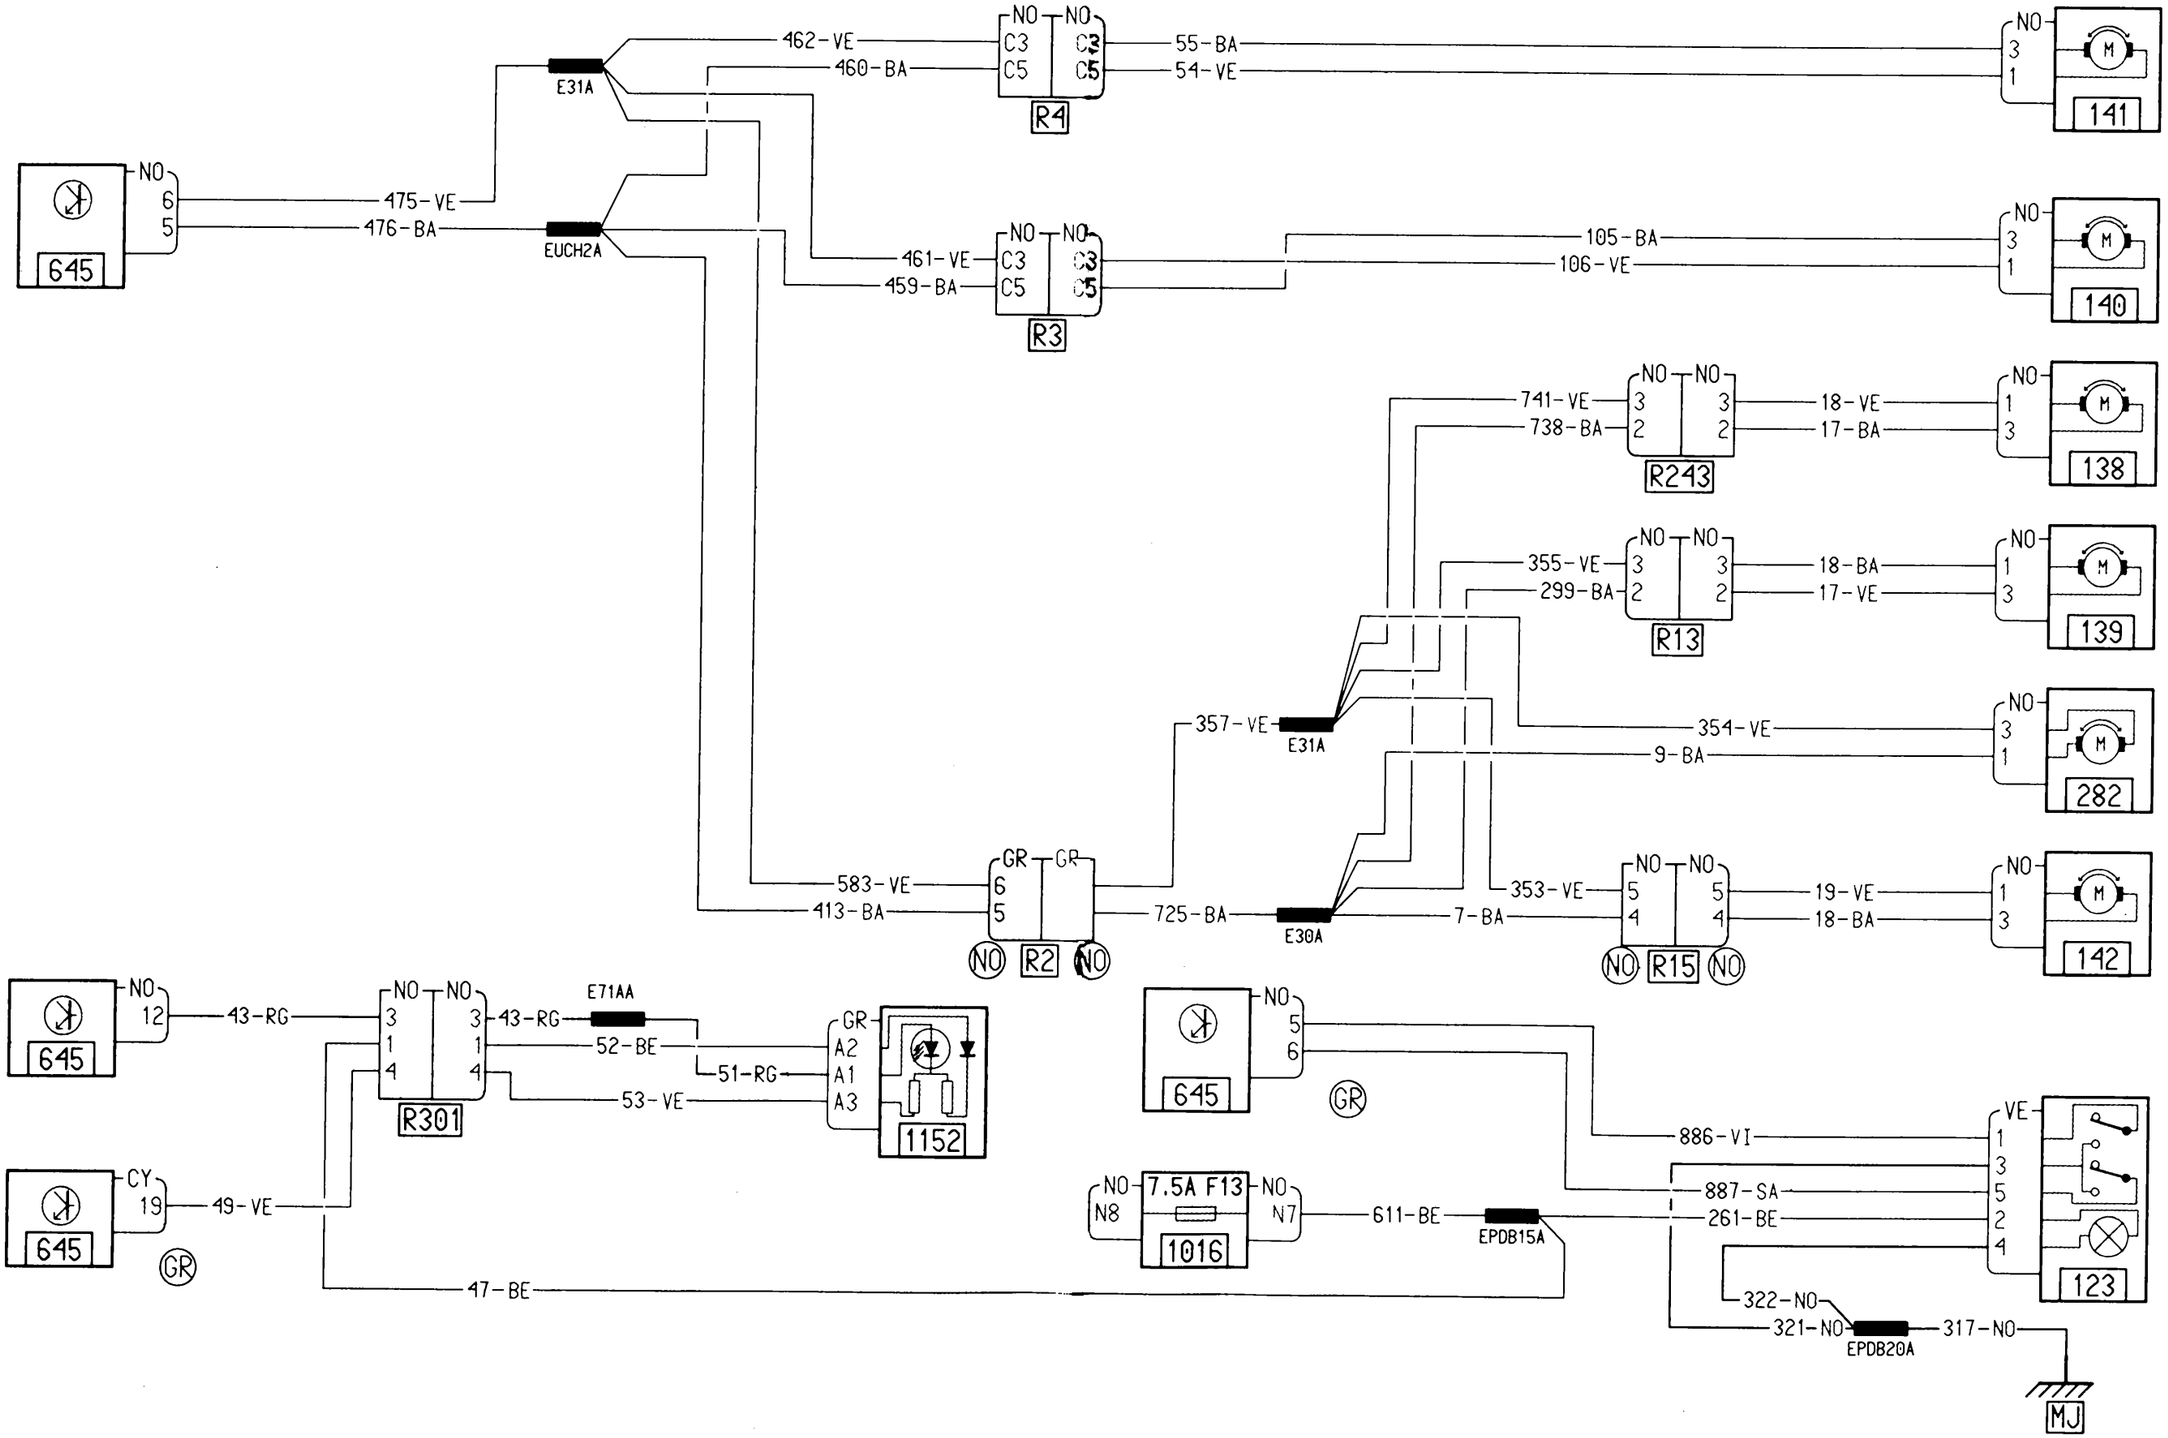

645
NO
6
5
475-VE
476-BA
E31A
EUCH2A
462-VE
460-BA
461-VE
459-BA
R4
R3
55-BA
54-VE
105-BA
106-VE
141
140
741-VE
738-BA
R243
18-VE
17-BA
138
355-VE
299-BA
R13
18-BA
17-VE
139
357-VE
E31A
354-VE
9-BA
282
583-VE
413-BA
GR
R2
725-BA
E30A
353-VE
7-BA
R15
19-VE
18-BA
142
E71AA
43-RG
52-BE
51-RG
53-VE
R301
1152
CY
19
49-VE
GR
47-BE
7.5A F13
N8
N7
1016
611-BE
EPDB15A
886-VI
887-SA
261-BE
322-NO
321-NO
EPDB20A
317-NO
MJ
VE
123

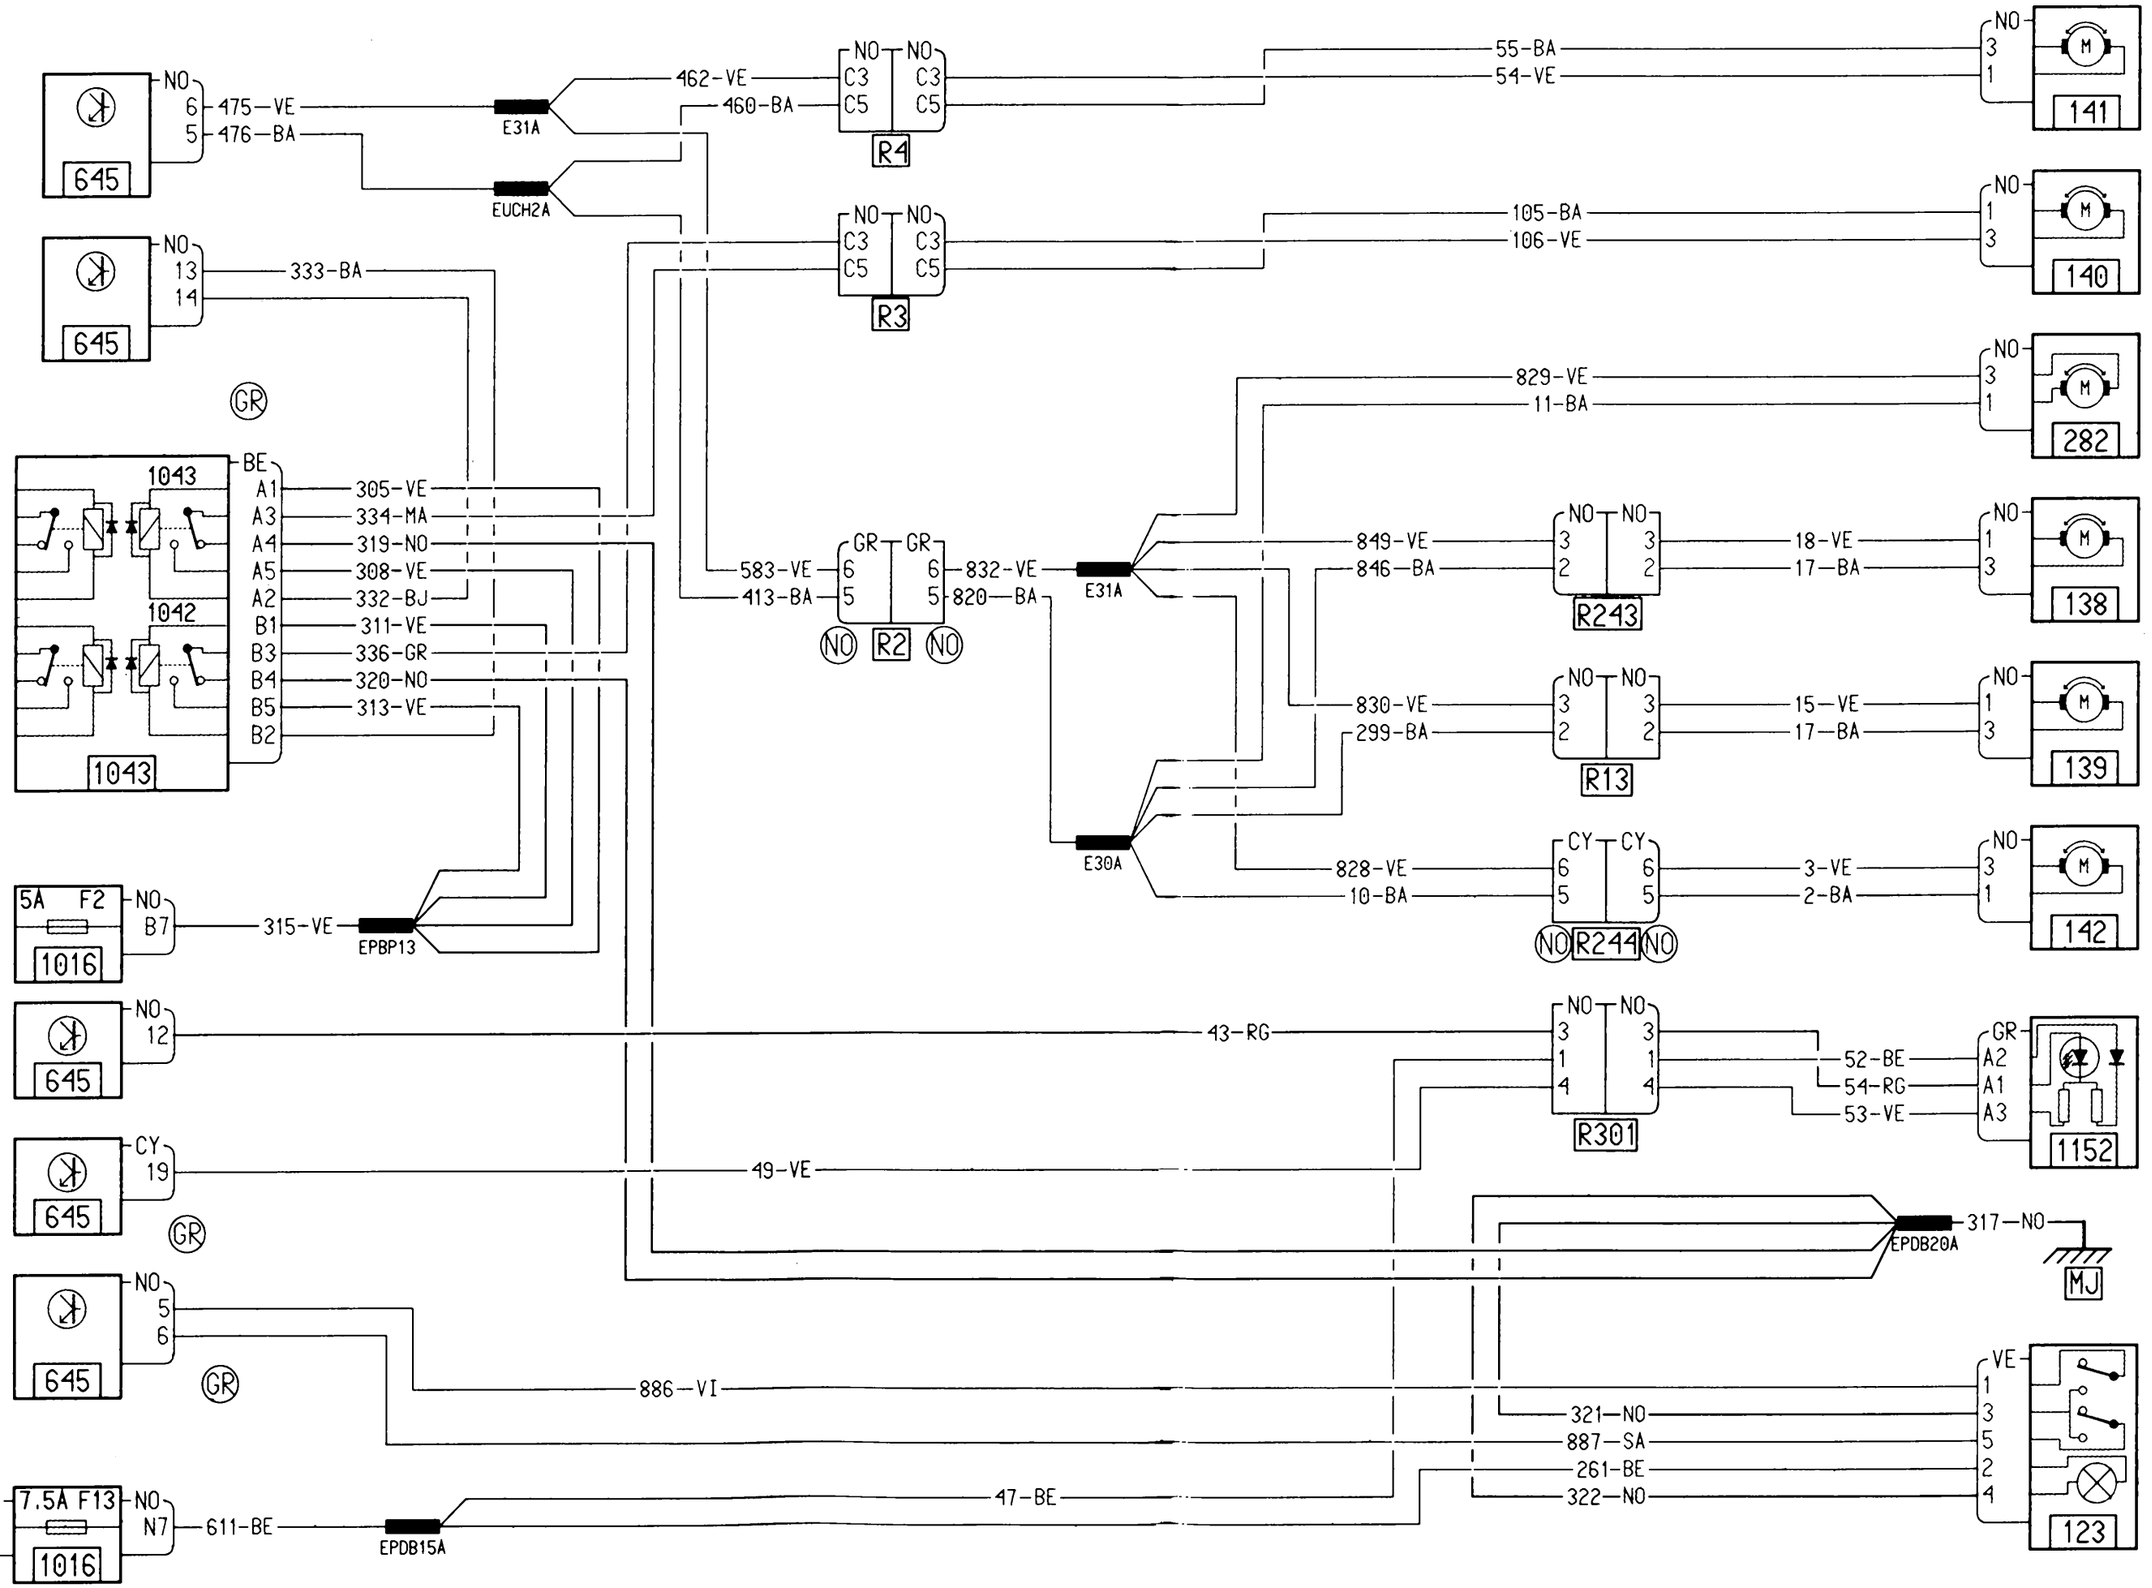

645
NO
6
5
475-VE
476-BA
E31A
EUCH2A
462-VE
460-BA
NO C3 C5
R4
55-BA
54-VE
141
645
NO
13
14
333-BA
R3
105-BA
106-VE
140
GR
1043
1042
BE
A1 305-VE
A3 334-MA
A4 319-NO
A5 308-VE
A2 332-BJ
B1 311-VE
B3 336-GR
B4 320-NO
B5 313-VE
B2
583-VE
413-BA
GR 6 5
R2
832-VE
820-BA
829-VE
11-BA
282
849-VE
846-BA
R243
18-VE
17-BA
138
830-VE
299-BA
R13
15-VE
17-BA
139
E31A
E30A
828-VE
10-BA
CY 6 5
R244
3-VE
2-BA
142
5A F2
1016
B7
315-VE
EPBP13
43-RG
R301
52-BE
54-RG
53-VE
1152
19
49-VE
EPDB20A
317-NO
MJ
886-VI
321-NO
887-SA
261-BE
322-NO
123
N8
7.5A F13
N7
611-BE
47-BE
EPDB15A

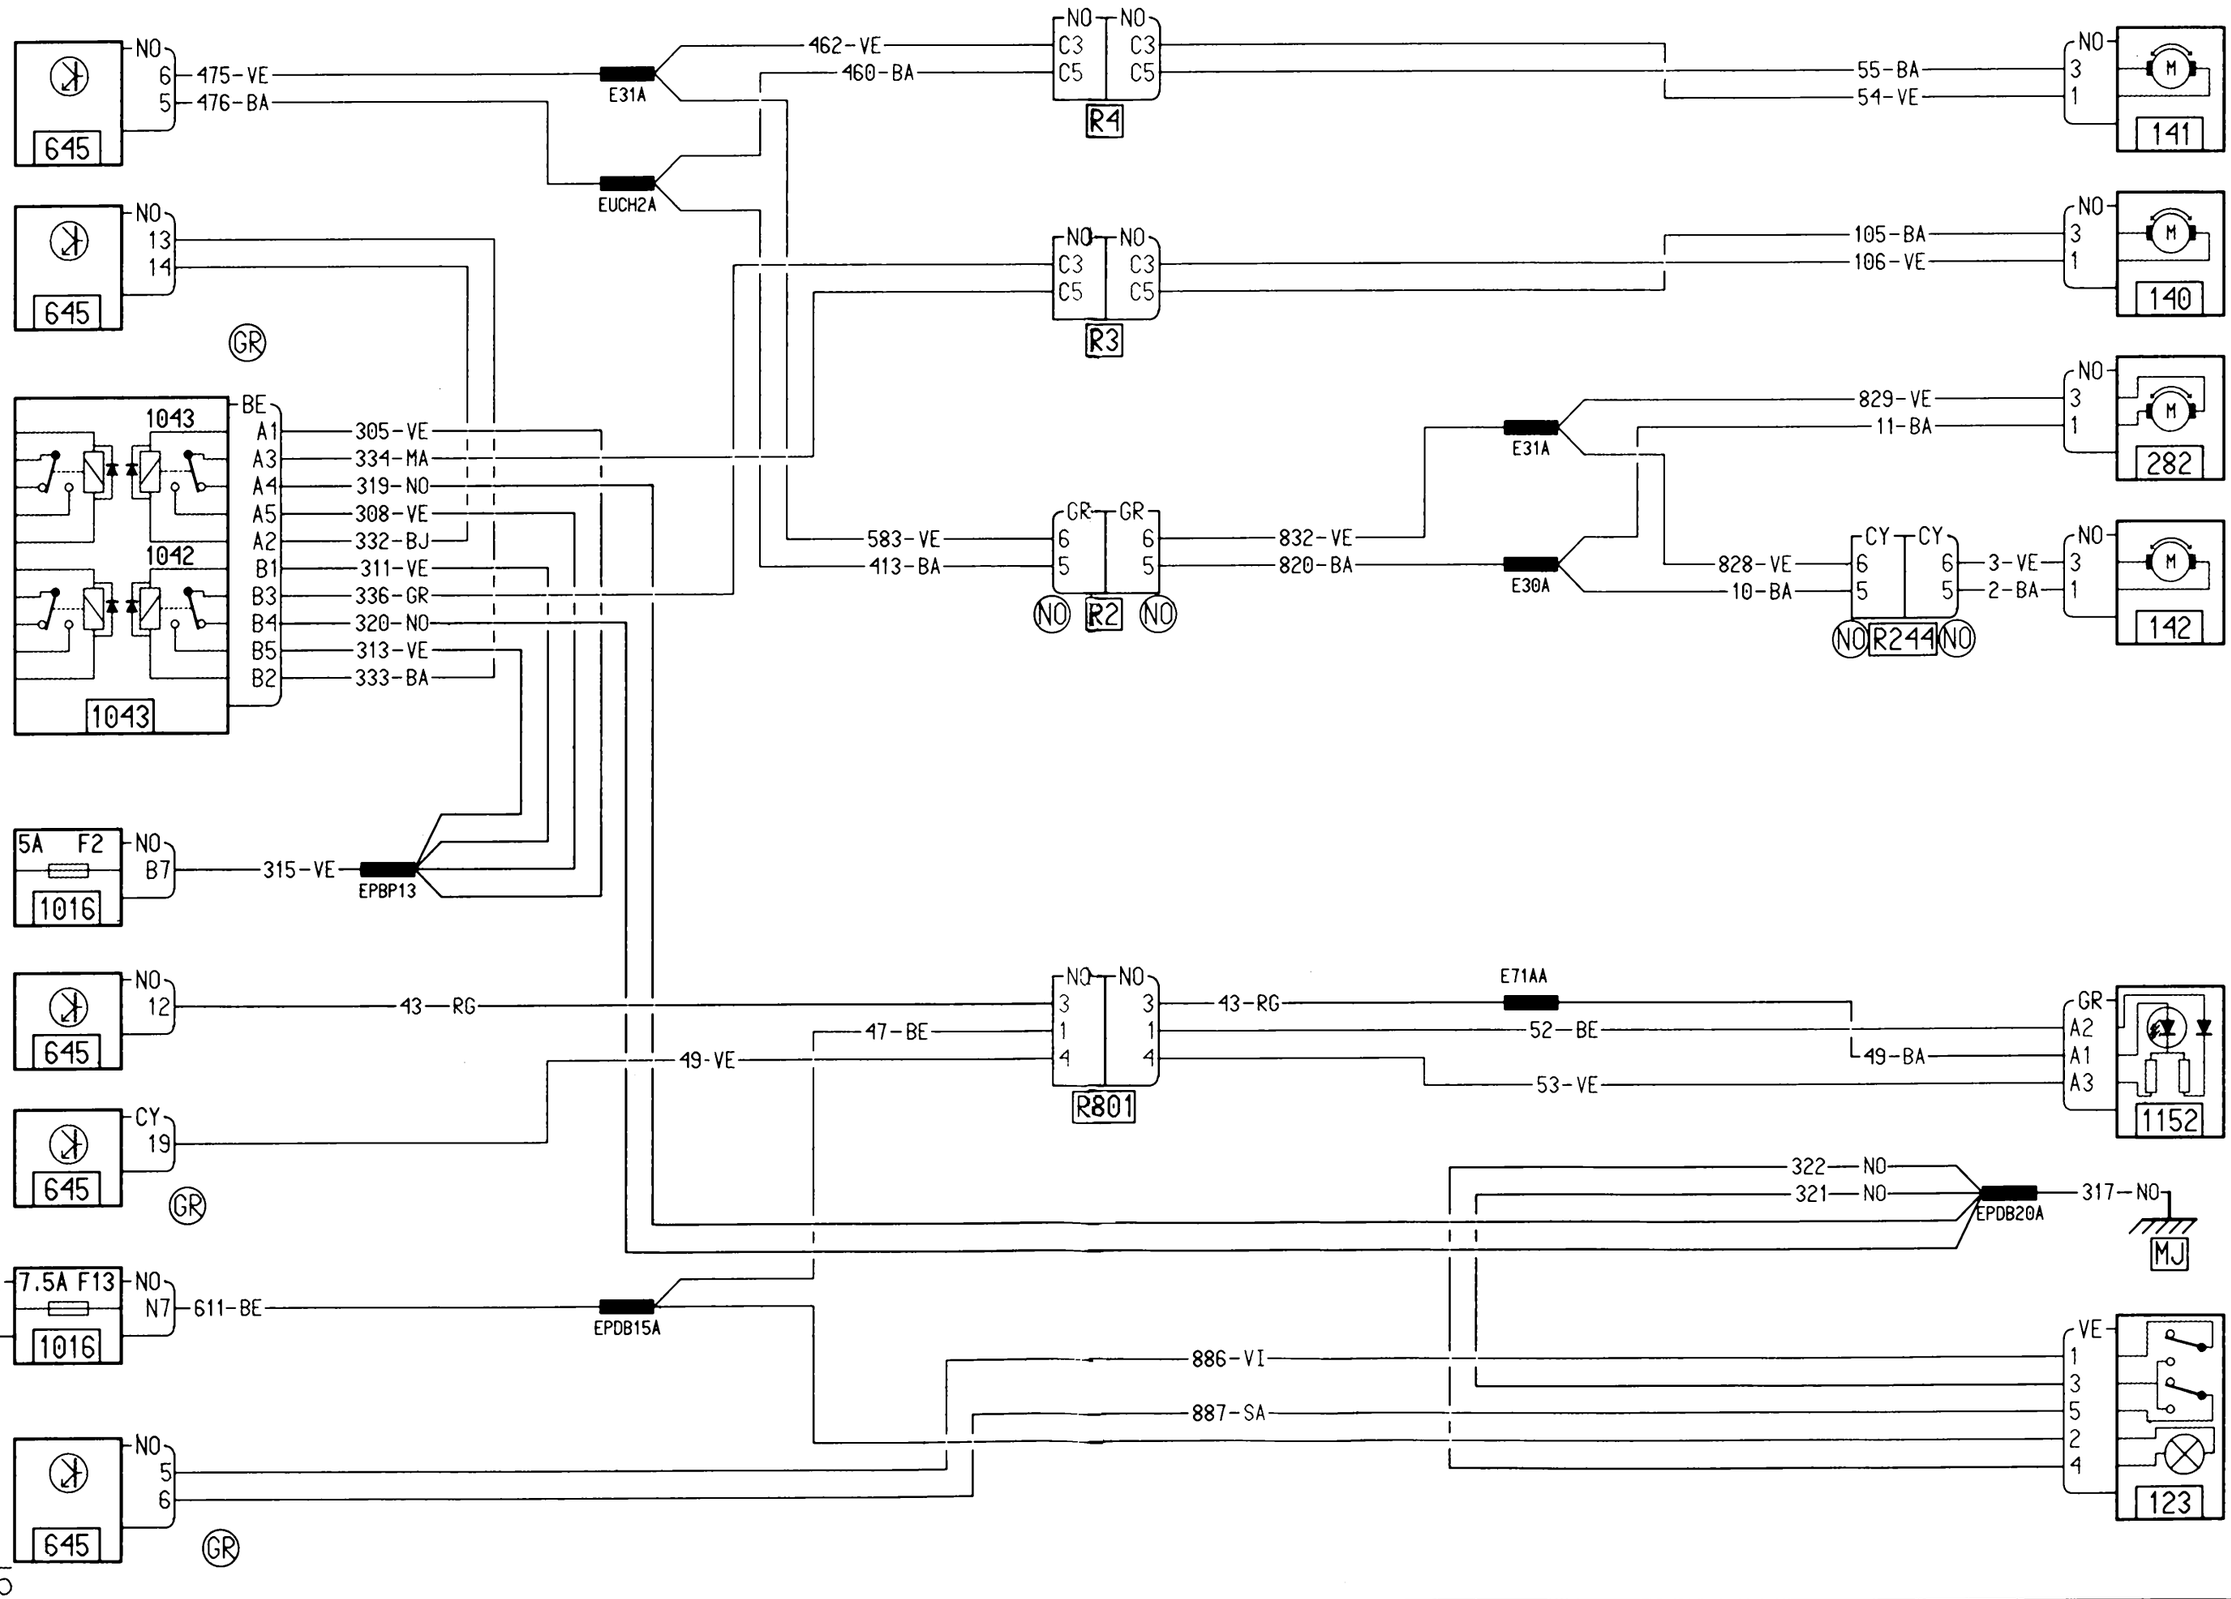

645
NO
6
5
475-VE
476-BA
E31A
EUCH2A
462-VE
460-BA
R4
55-BA
54-VE
141
13
14
R3
105-BA
106-VE
140
GR
1043
BE
A1
A3
A4
A5
A2
B1
B3
B4
B5
B2
305-VE
334-MA
319-NO
308-VE
332-BJ
311-VE
336-GR
320-NO
313-VE
333-BA
1042
583-VE
413-BA
R2
832-VE
820-BA
829-VE
11-BA
282
828-VE
10-BA
R244
3-VE
2-BA
142
5A F2
1016
315-VE
EPBP13
12
43-RG
R801
47-BE
49-VE
E71AA
52-BE
53-VE
49-BA
1152
CY
19
322-NO
321-NO
EPDB20A
317-NO
MJ
7.5A F13
N8
N7
611-BE
EPDB15A
886-VI
887-SA
VE
1
3
5
2
4
123

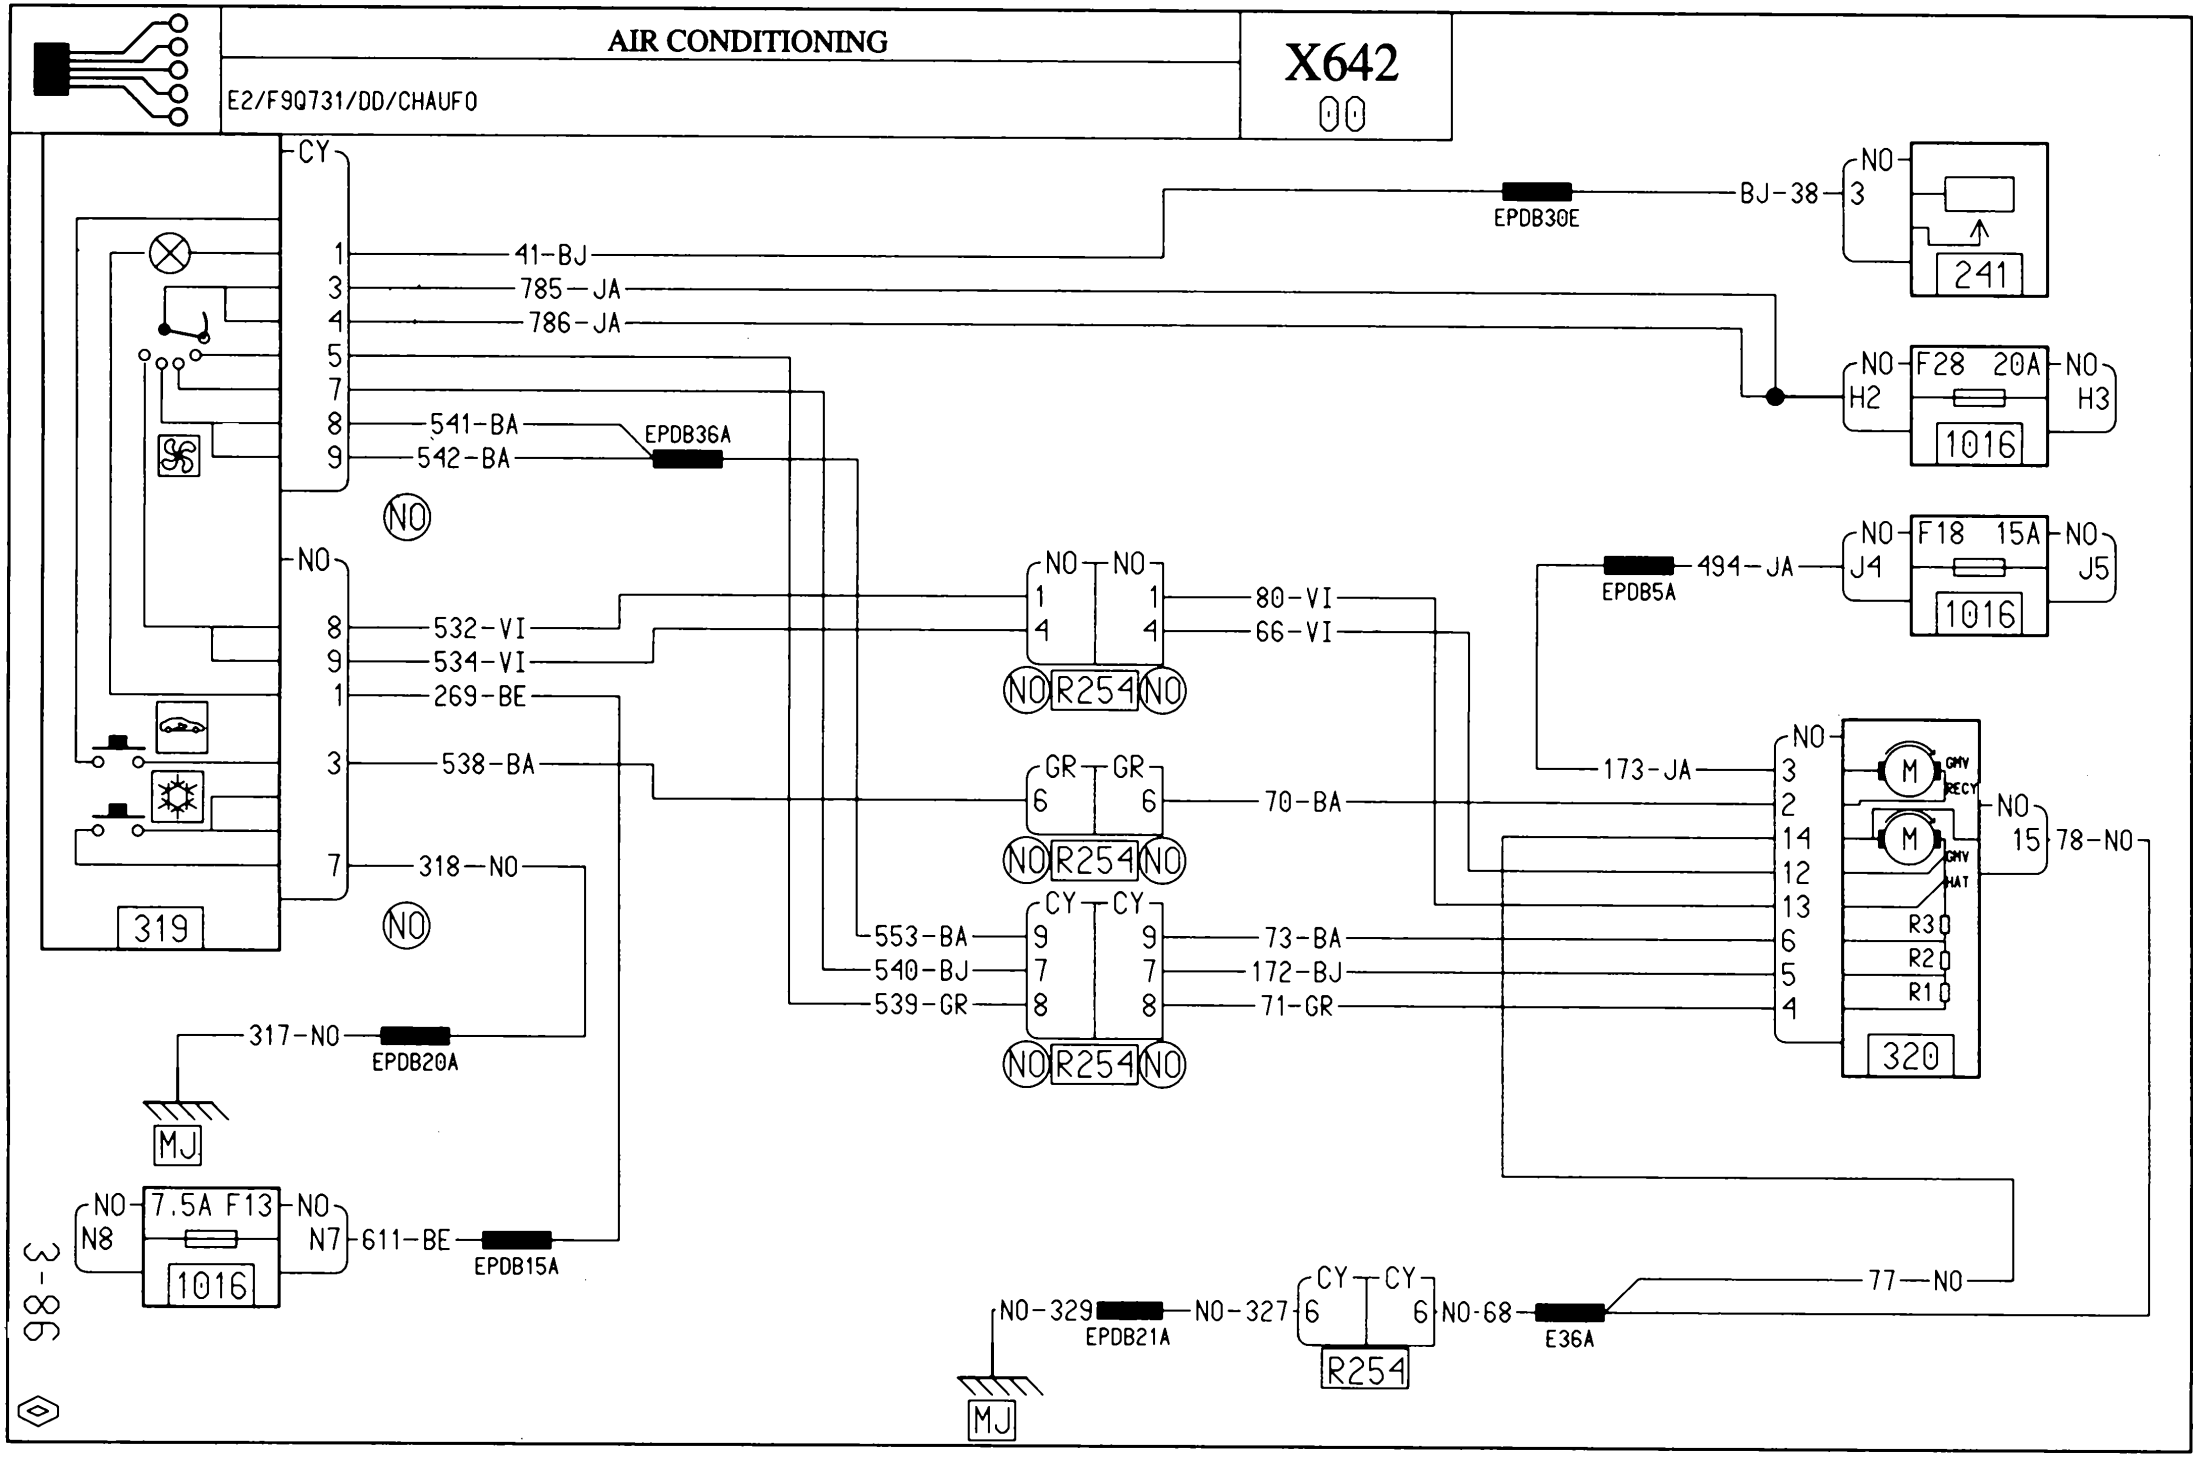

AIR CONDITIONING
E2/F9Q731/DD/CHAUFO
X642
00
CY
1
3
4
5
7
8
9
41-BJ
785-JA
786-JA
541-BA
542-BA
EPDB36A
NO
NO
8
9
1
3
7
532-VI
534-VI
269-BE
538-BA
318-NO
319
317-NO
EPDB20A
MJ
NO
7.5A F13
NO
N8
N7
1016
611-BE
EPDB15A
EPDB30E
BJ-38
NO
3
241
NO
F28 20A
NO
H2
H3
1016
EPDB5A
494-JA
NO
F18 15A
NO
J4
J5
1016
NO
NO
1
4
1
4
NO R254 NO
80-VI
66-VI
GR
GR
6
6
NO R254 NO
70-BA
CY
CY
9
7
8
9
7
8
NO R254 NO
553-BA
540-BJ
539-GR
73-BA
172-BJ
71-GR
173-JA
NO
3
2
14
12
13
6
5
4
M
GMV RECY
M
GMV HAT
R3
R2
R1
320
NO
15
78-NO
77-NO
NO-329
EPDB21A
NO-327
CY
CY
6
6
R254
NO-68
E36A
MJ

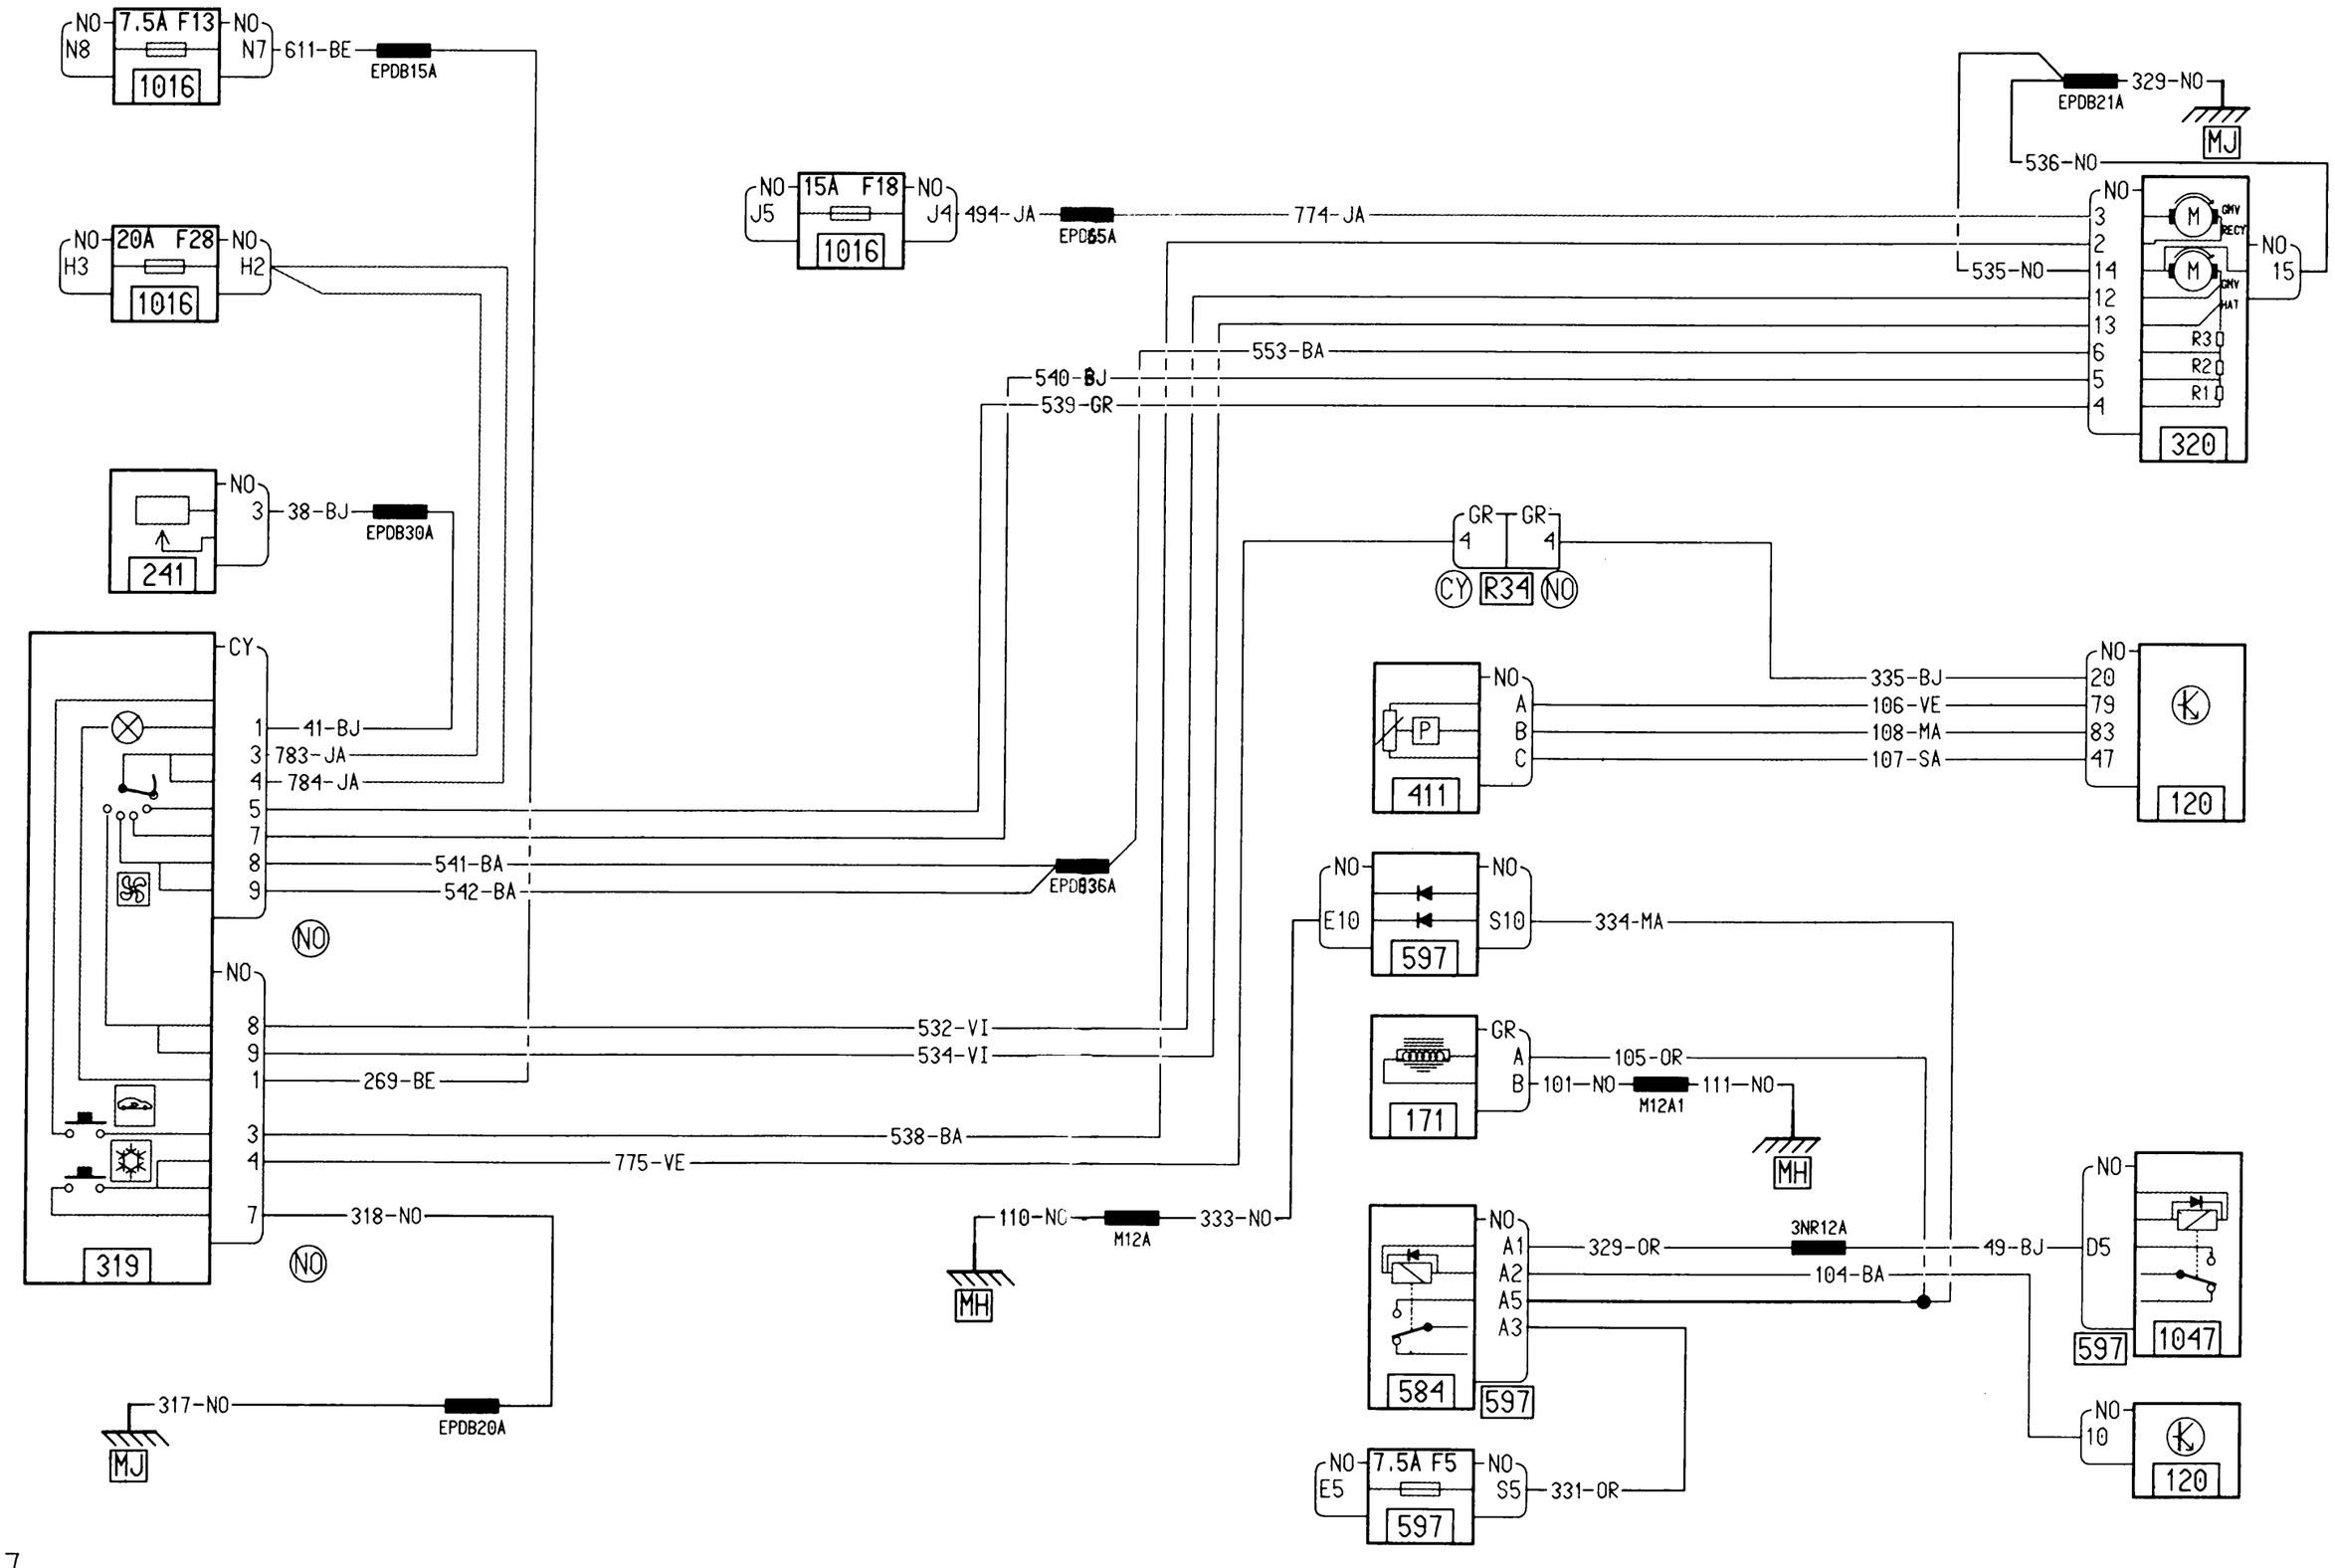

NO 7.5A F13 NO
N8 N7 611-BE
1016
EPDB15A
NO 20A F28 NO
H3 H2
1016
NO
3 38-BJ
241
EPDB30A
CY
1 41-BJ
3 783-JA
4 784-JA
5
7
8 541-BA
9 542-BA
NO
NO
8 532-VI
9 534-VI
1 269-BE
3 538-BA
4 775-VE
7 318-NO
NO
319
317-NO
MJ
EPDB20A
NO 15A F18 NO
J5 J4
1016
494-JA
EPDB35A
774-JA
EPDB21A
329-NO
MJ
536-NO
NO
3
2
14 535-NO
12
13
6 553-BA
5 540-BJ
4 539-GR
M
CMV RECY
M
CMV HAT
R3
R2
R1
NO 15
320
GR GR
4 4
CY R34 NO
335-BJ
NO
20
79
83
47
120
NO
A
B
C
P
411
106-VE
108-MA
107-SA
NO E10 NO S10
597
334-MA
GR
A
B 101-NO M12A1 111-NO
171
105-OR
MH
110-NC M12A 333-NO
MH
NO
A1
A2
A5
A3
584
597
329-OR
3NR12A
104-BA
49-BJ
NO
D5
597
1047
NO 7.5A F5 NO
E5 S5
597
331-OR
NO
10
120

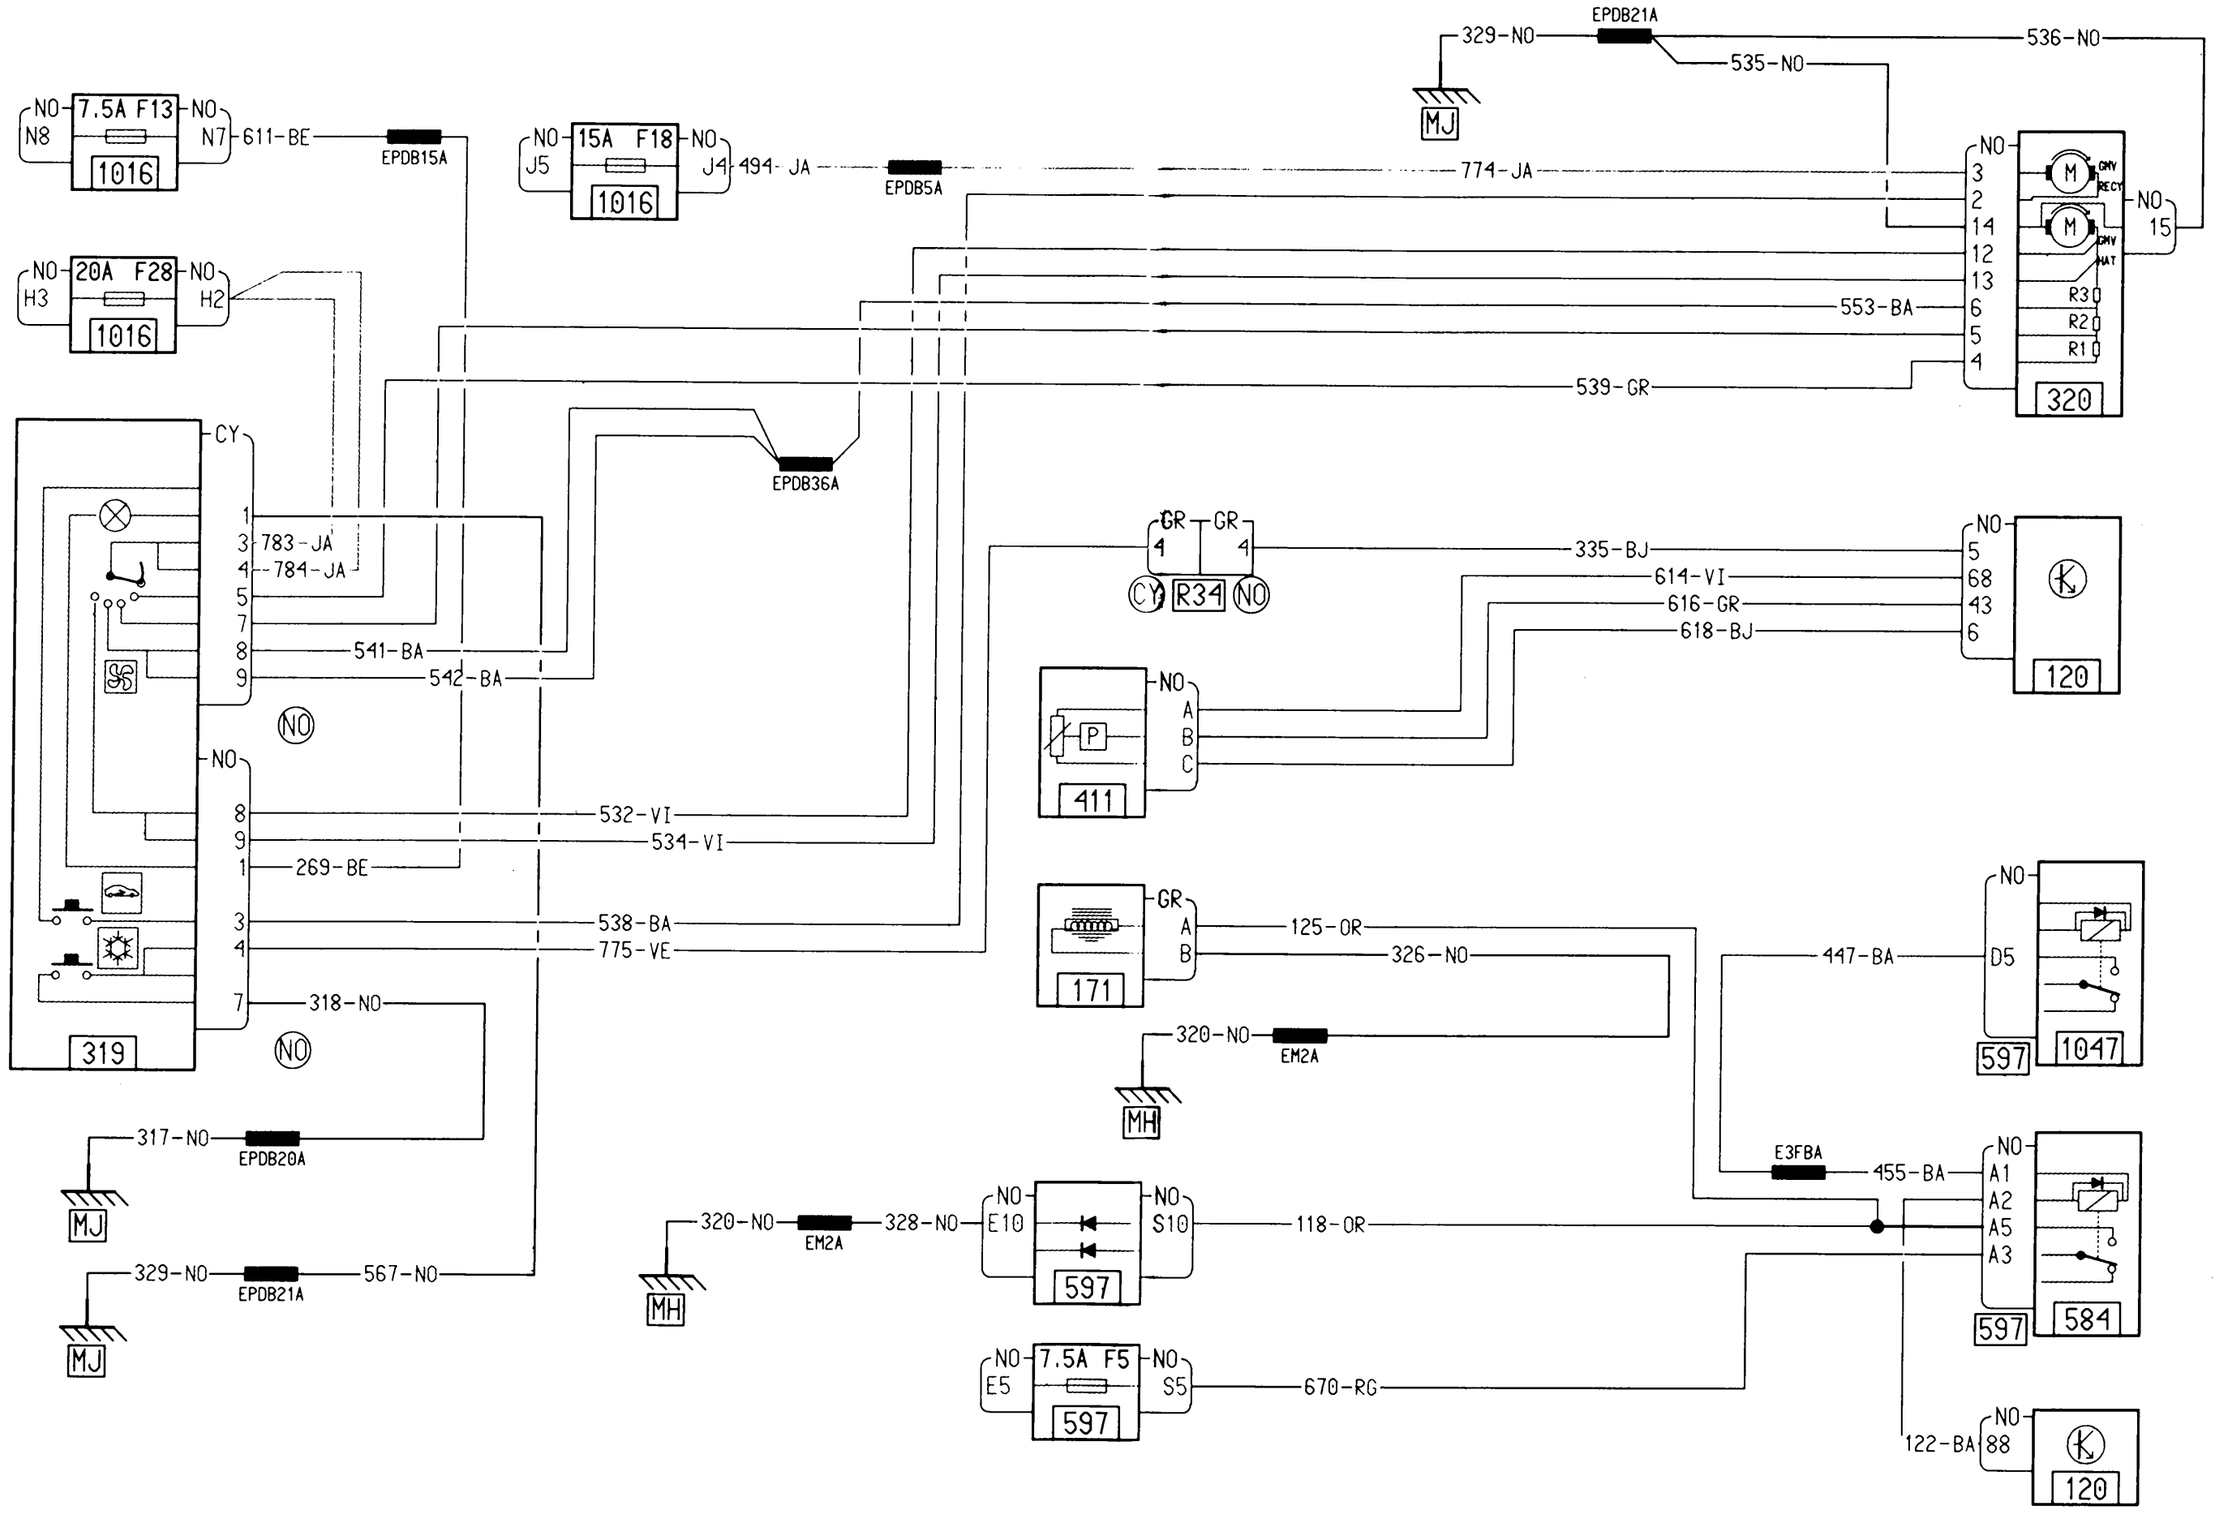

NO
7.5A F13
N8
N7
1016
611-BE
EPDB15A
NO
15A F18
J5
J4
1016
494-JA
EPDB5A
329-NO
EPDB21A
536-NO
535-NO
MJ
774-JA
NO
20A F28
H3
H2
1016
553-BA
539-GR
320
R3
R2
R1
15
CY
EPDB36A
783-JA
784-JA
541-BA
542-BA
532-VI
534-VI
269-BE
538-BA
775-VE
318-NO
319
317-NO
EPDB20A
329-NO
EPDB21A
567-NO
GR
R34
335-BJ
614-VI
616-GR
618-BJ
120
411
171
125-OR
326-NO
320-NO
EM2A
MH
447-BA
D5
597
1047
E3FBA
455-BA
584
320-NO
EM2A
328-NO
E10
S10
118-OR
7.5A F5
E5
S5
670-RG
122-BA
88

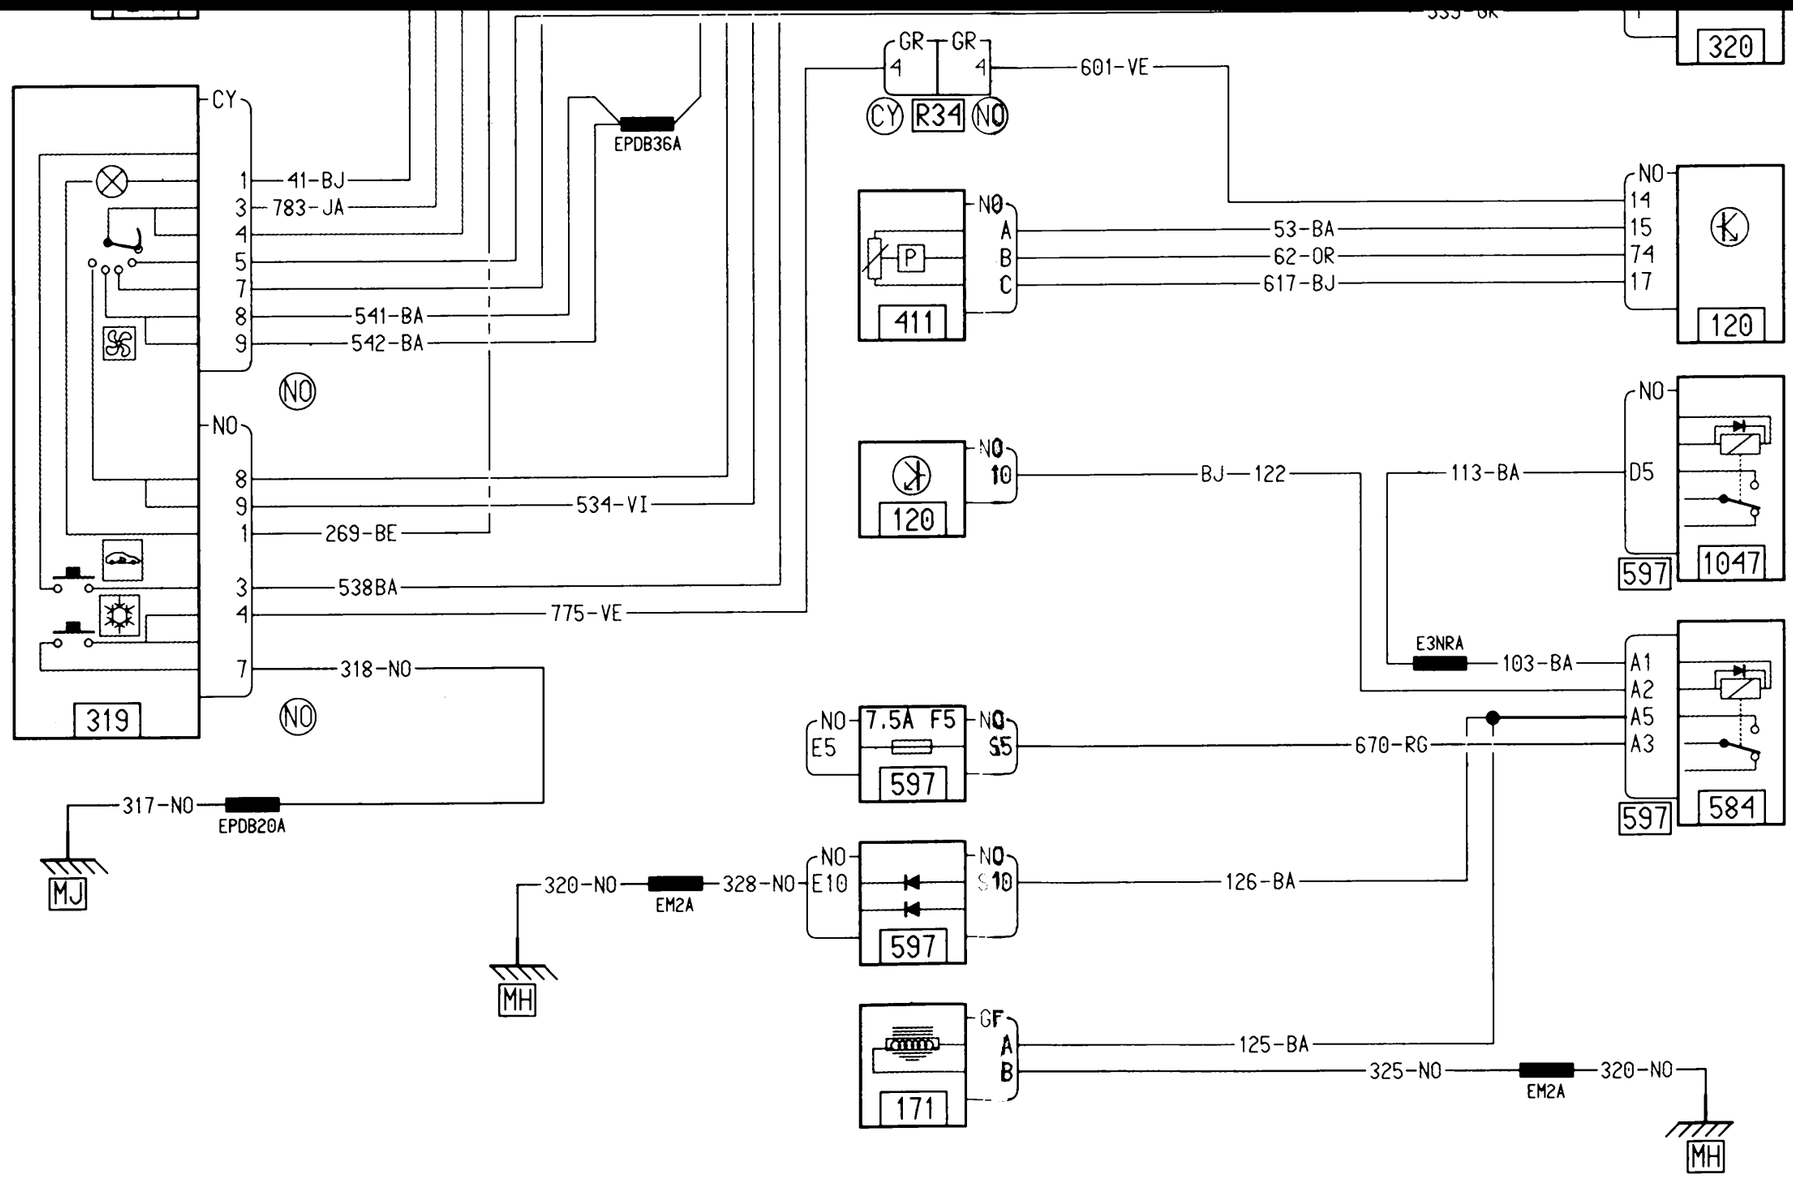

CY
1 41-BJ
3 783-JA
4
5
7
8 541-BA
9 542-BA
NO
8
9 534-VI
1 269-BE
3 538BA
4 775-VE
7 318-NO
319
317-NO
EPDB20A
MJ
EPDB36A
GR GR
4 4
601-VE
CY R34 NO
NO
A 53-BA
B 62-OR
C 617-BJ
P
411
120
10 BJ 122
113-BA
D5
597
1047
E3NRA
103-BA
A1
A2
A5
A3
597
584
NO E5 7.5A F5 NO S5
597
670-RG
320-NO
EM2A
328-NO
NO E10 NO S10
597
126-BA
MH
CF
A 125-BA
B 325-NO
EM2A
320-NO
171
MH
320
NO
14
15
74
17
120

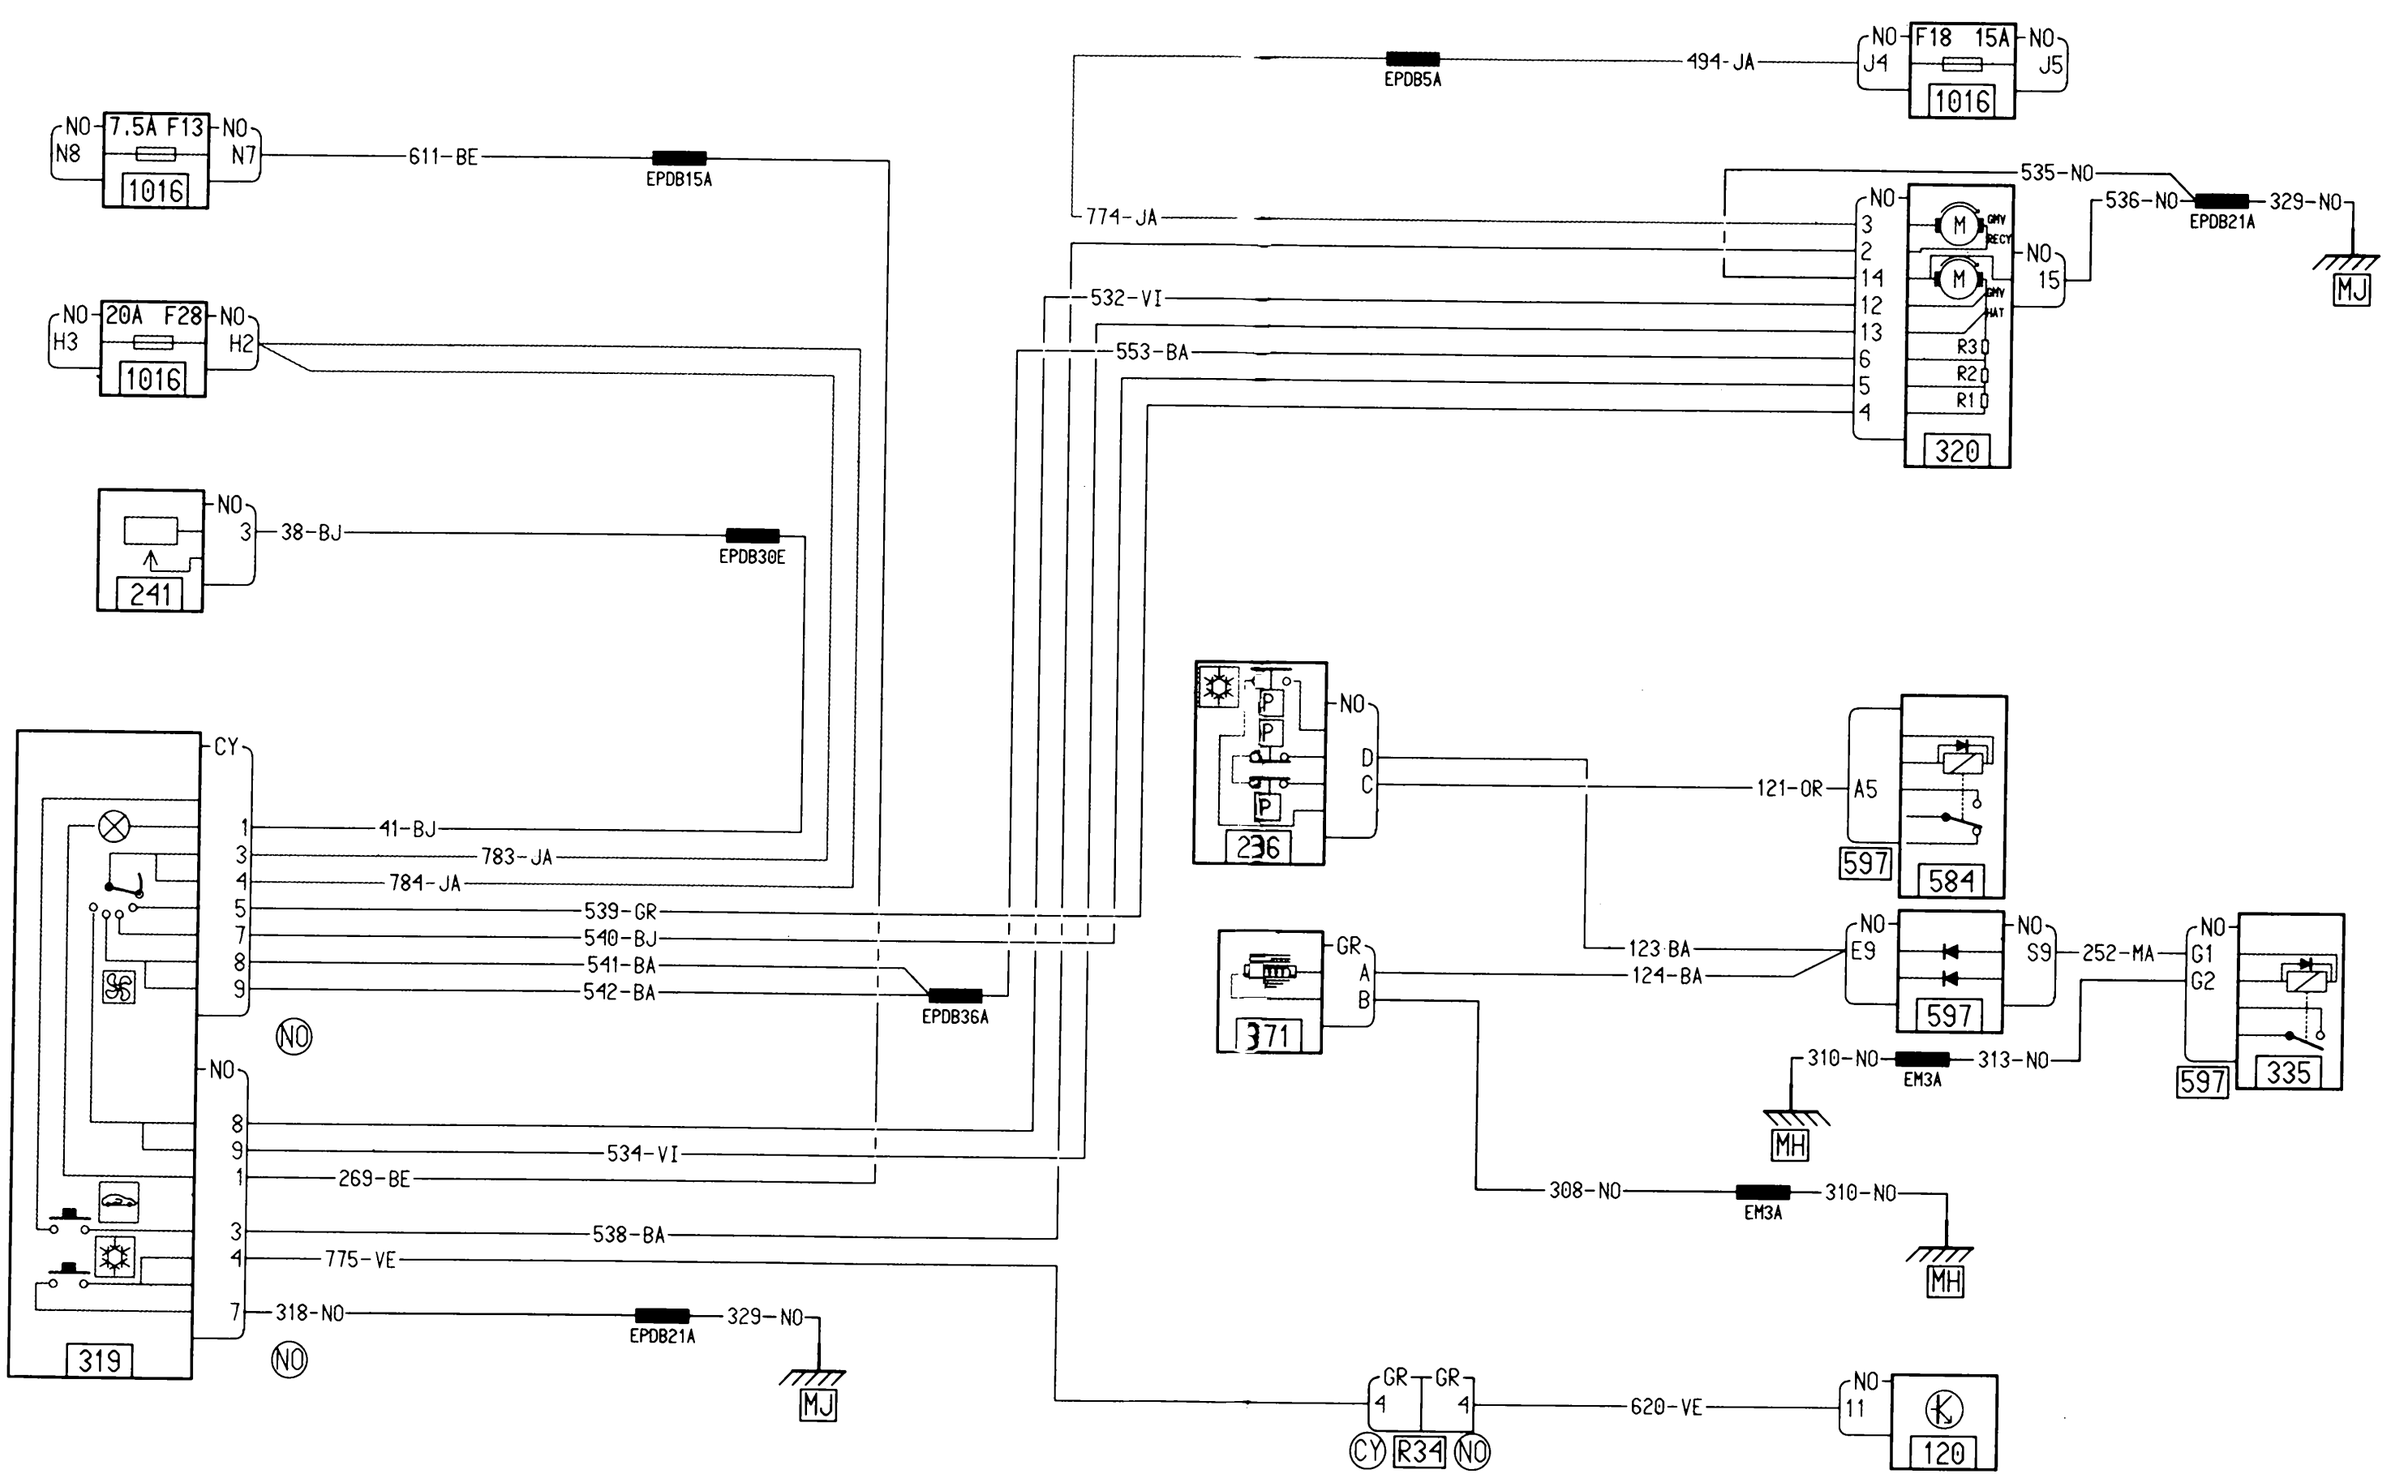
NO N8 7.5A F13 NO N7
1016
611-BE
EPDB15A
NO H3 20A F28 NO H2
1016
NO 3
38-BJ
EPDB30E
241
CY
1 41-BJ
3 783-JA
4 784-JA
5 539-GR
7 540-BJ
8 541-BA
9 542-BA
EPDB36A
NO
NO
8
9 534-VI
1 269-BE
3 538-BA
4 775-VE
7 318-NO
EPDB21A
329-NO
MJ
319
EPDB5A
494-JA
NO J4 F18 15A NO J5
1016
774-JA
532-VI
553-BA
535-NO
536-NO
EPDB21A
329-NO
MJ
NO 3 2 14 12 13 6 5 4
M GMV RECY
M GMV HAT
R3
R2
R1
NO 15
320
NO D C
236
121-OR
A5
597
584
GR A B
371
123-BA
124-BA
NO E9
NO S9
597
252-MA
NO G1 G2
597
335
310-NO
EM3A
313-NO
MH
308-NO
EM3A
310-NO
MH
GR 4 GR 4
CY R34 NO
620-VE
NO 11
120

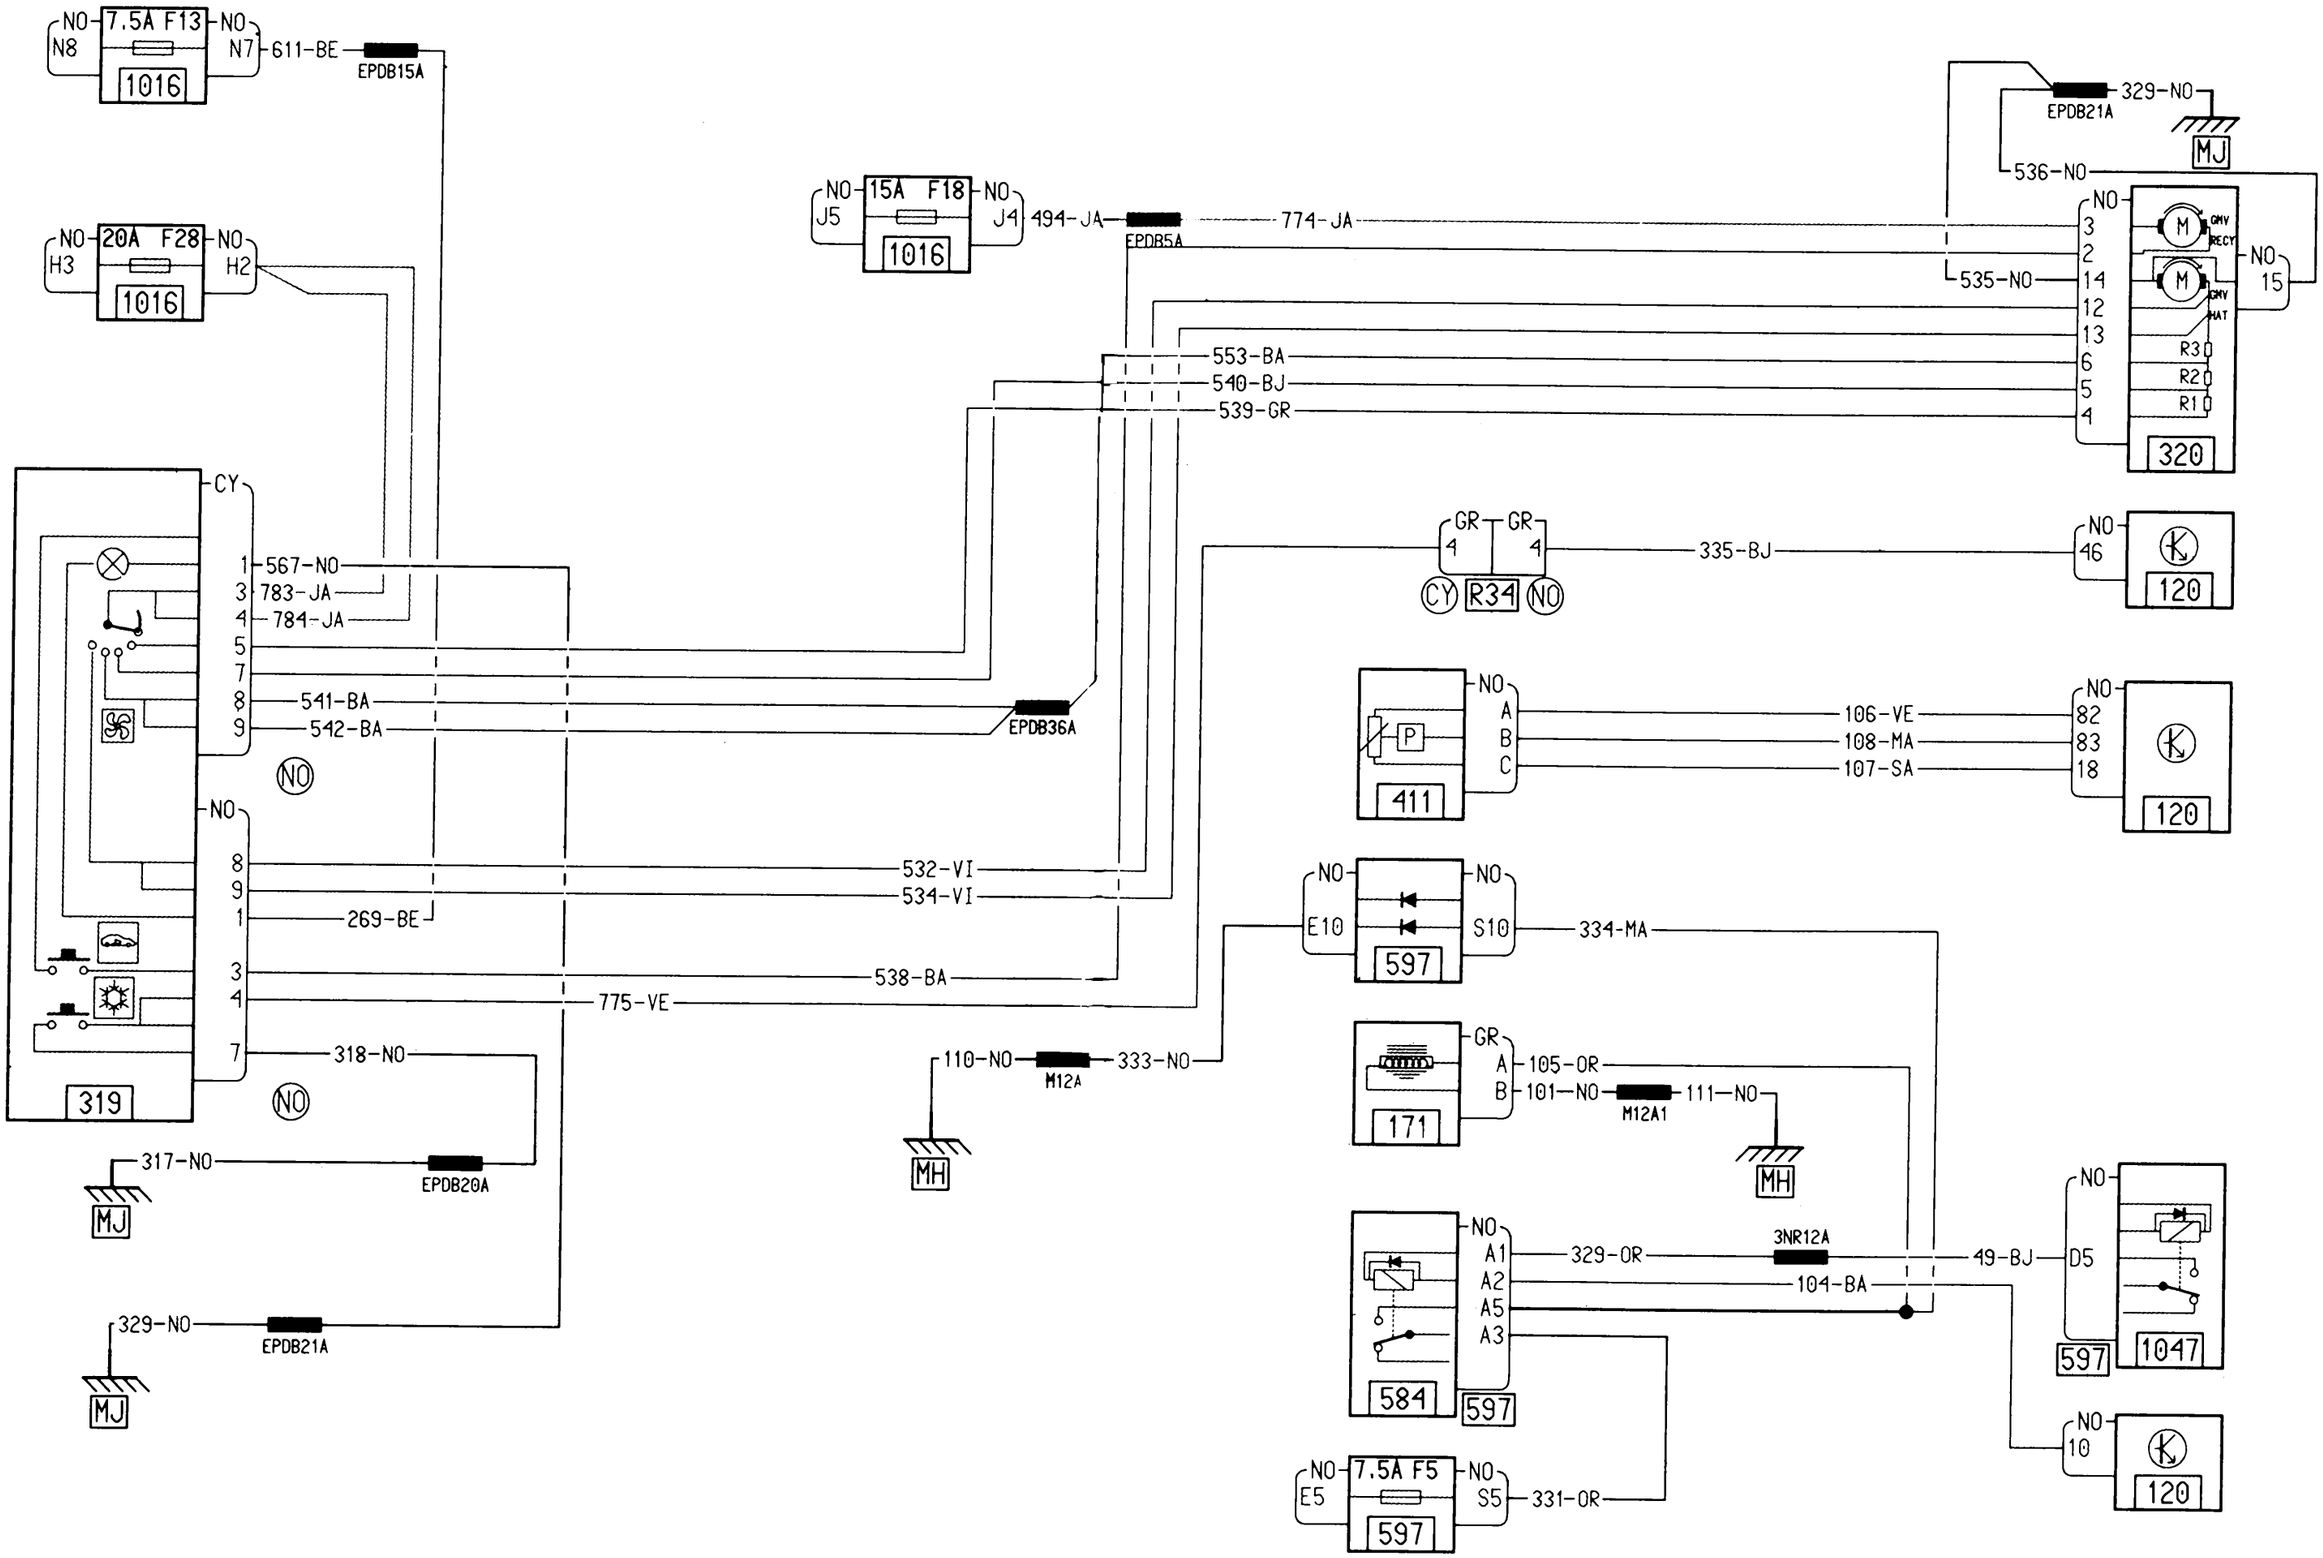
NO N8 7.5A F13 NO N7 1016
611-BE
EPDB15A
NO H3 20A F28 NO H2 1016
NO J5 15A F18 NO J4 1016
494-JA
EPDB5A
774-JA
EPDB21A
329-NO
MJ
536-NO
535-NO
NO 3 2 14 12 13 6 5 4 320
M CMV RECY
M CMV AIR
R3 R2 R1
NO 15
553-BA
540-BJ
539-GR
CY
1 567-NO
3 783-JA
4 784-JA
5
7
8 541-BA
9 542-BA
EPDB36A
NO
NO 8 9 1 3 4 7 319
532-VI
534-VI
269-BE
538-BA
775-VE
318-NO
317-NO
EPDB20A
MJ
329-NO
EPDB21A
MJ
110-NO
M12A
333-NO
MH
GR 4 GR 4
CY R34 NO
335-BJ
NO 46 120
NO A B C P 411
106-VE
108-MA
107-SA
NO 82 83 18 120
NO E10 597 NO S10
334-MA
GR A 105-OR B 101-NO 111-NO 171
M12A1
MH
NO A1 A2 A5 A3 584 597
329-OR
3NR12A
49-BJ
104-BA
NO D5 597 1047
NO E5 7.5A F5 NO S5 597
331-OR
NO 10 120

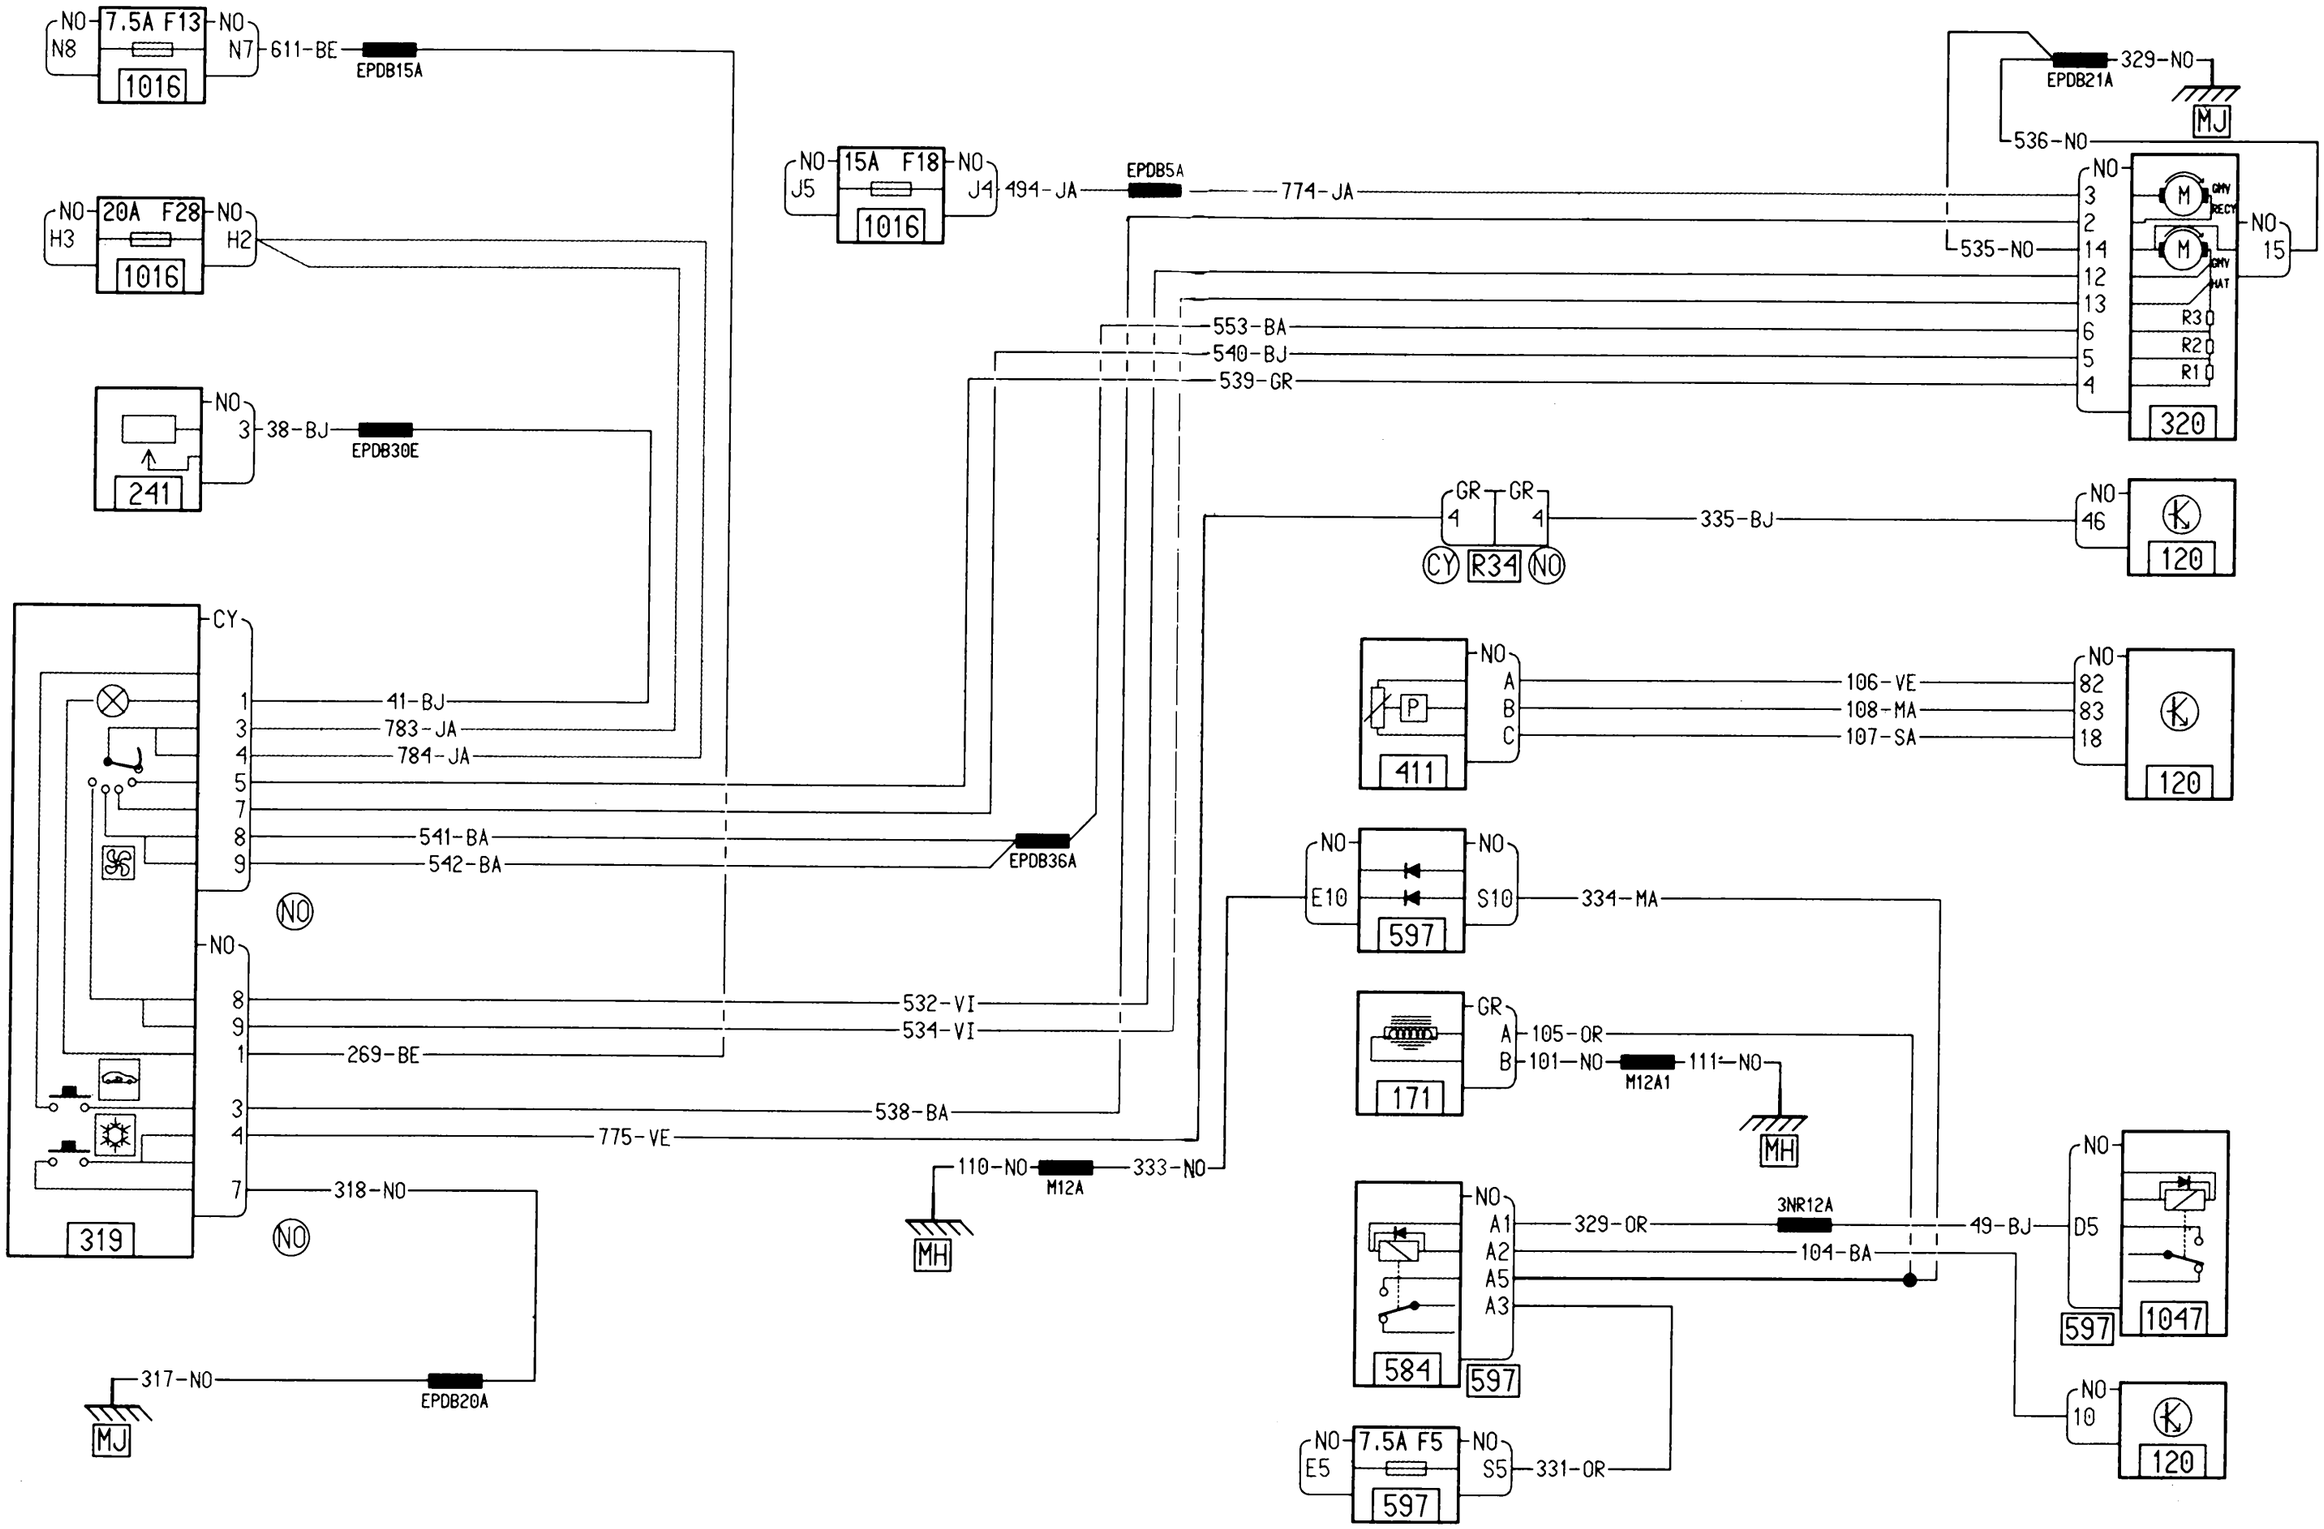
NO 7.5A F13 NO
N8 N7 611-BE
1016
EPDB15A
NO 20A F28 NO
H3 H2
1016
NO
3 38-BJ
241
EPDB30E
CY
1 41-BJ
3 783-JA
4 784-JA
5
7
8 541-BA
9 542-BA
EPDB36A
NO
NO
8 532-VI
9 534-VI
1 269-BE
3 538-BA
4 775-VE
7 318-NO
319
NO
317-NO
EPDB20A
MJ
NO 15A F18 NO
J5 J4 494-JA
1016
EPDB5A
774-JA
110-NO
M12A
333-NO
MH
EPDB21A
329-NO
MJ
536-NO
535-NO
NO
3
2
14
12
13
6
5
4
M
GMV RECY
M
GMV HAT
R3
R2
R1
NO
15
320
GR GR
4 4
CY R34 NO
335-BJ
NO
46
120
NO
P
411
A
B
C
106-VE
108-MA
107-SA
NO
82
83
18
120
NO
E10
597
S10
334-MA
GR
171
A 105-OR
B 101-NO
M12A1
111-NO
MH
NO
A1
A2
A5
A3
584
597
329-OR
3NR12A
104-BA
49-BJ
NO
D5
597
1047
NO 7.5A F5 NO
E5 S5
597
331-OR
NO
10
120

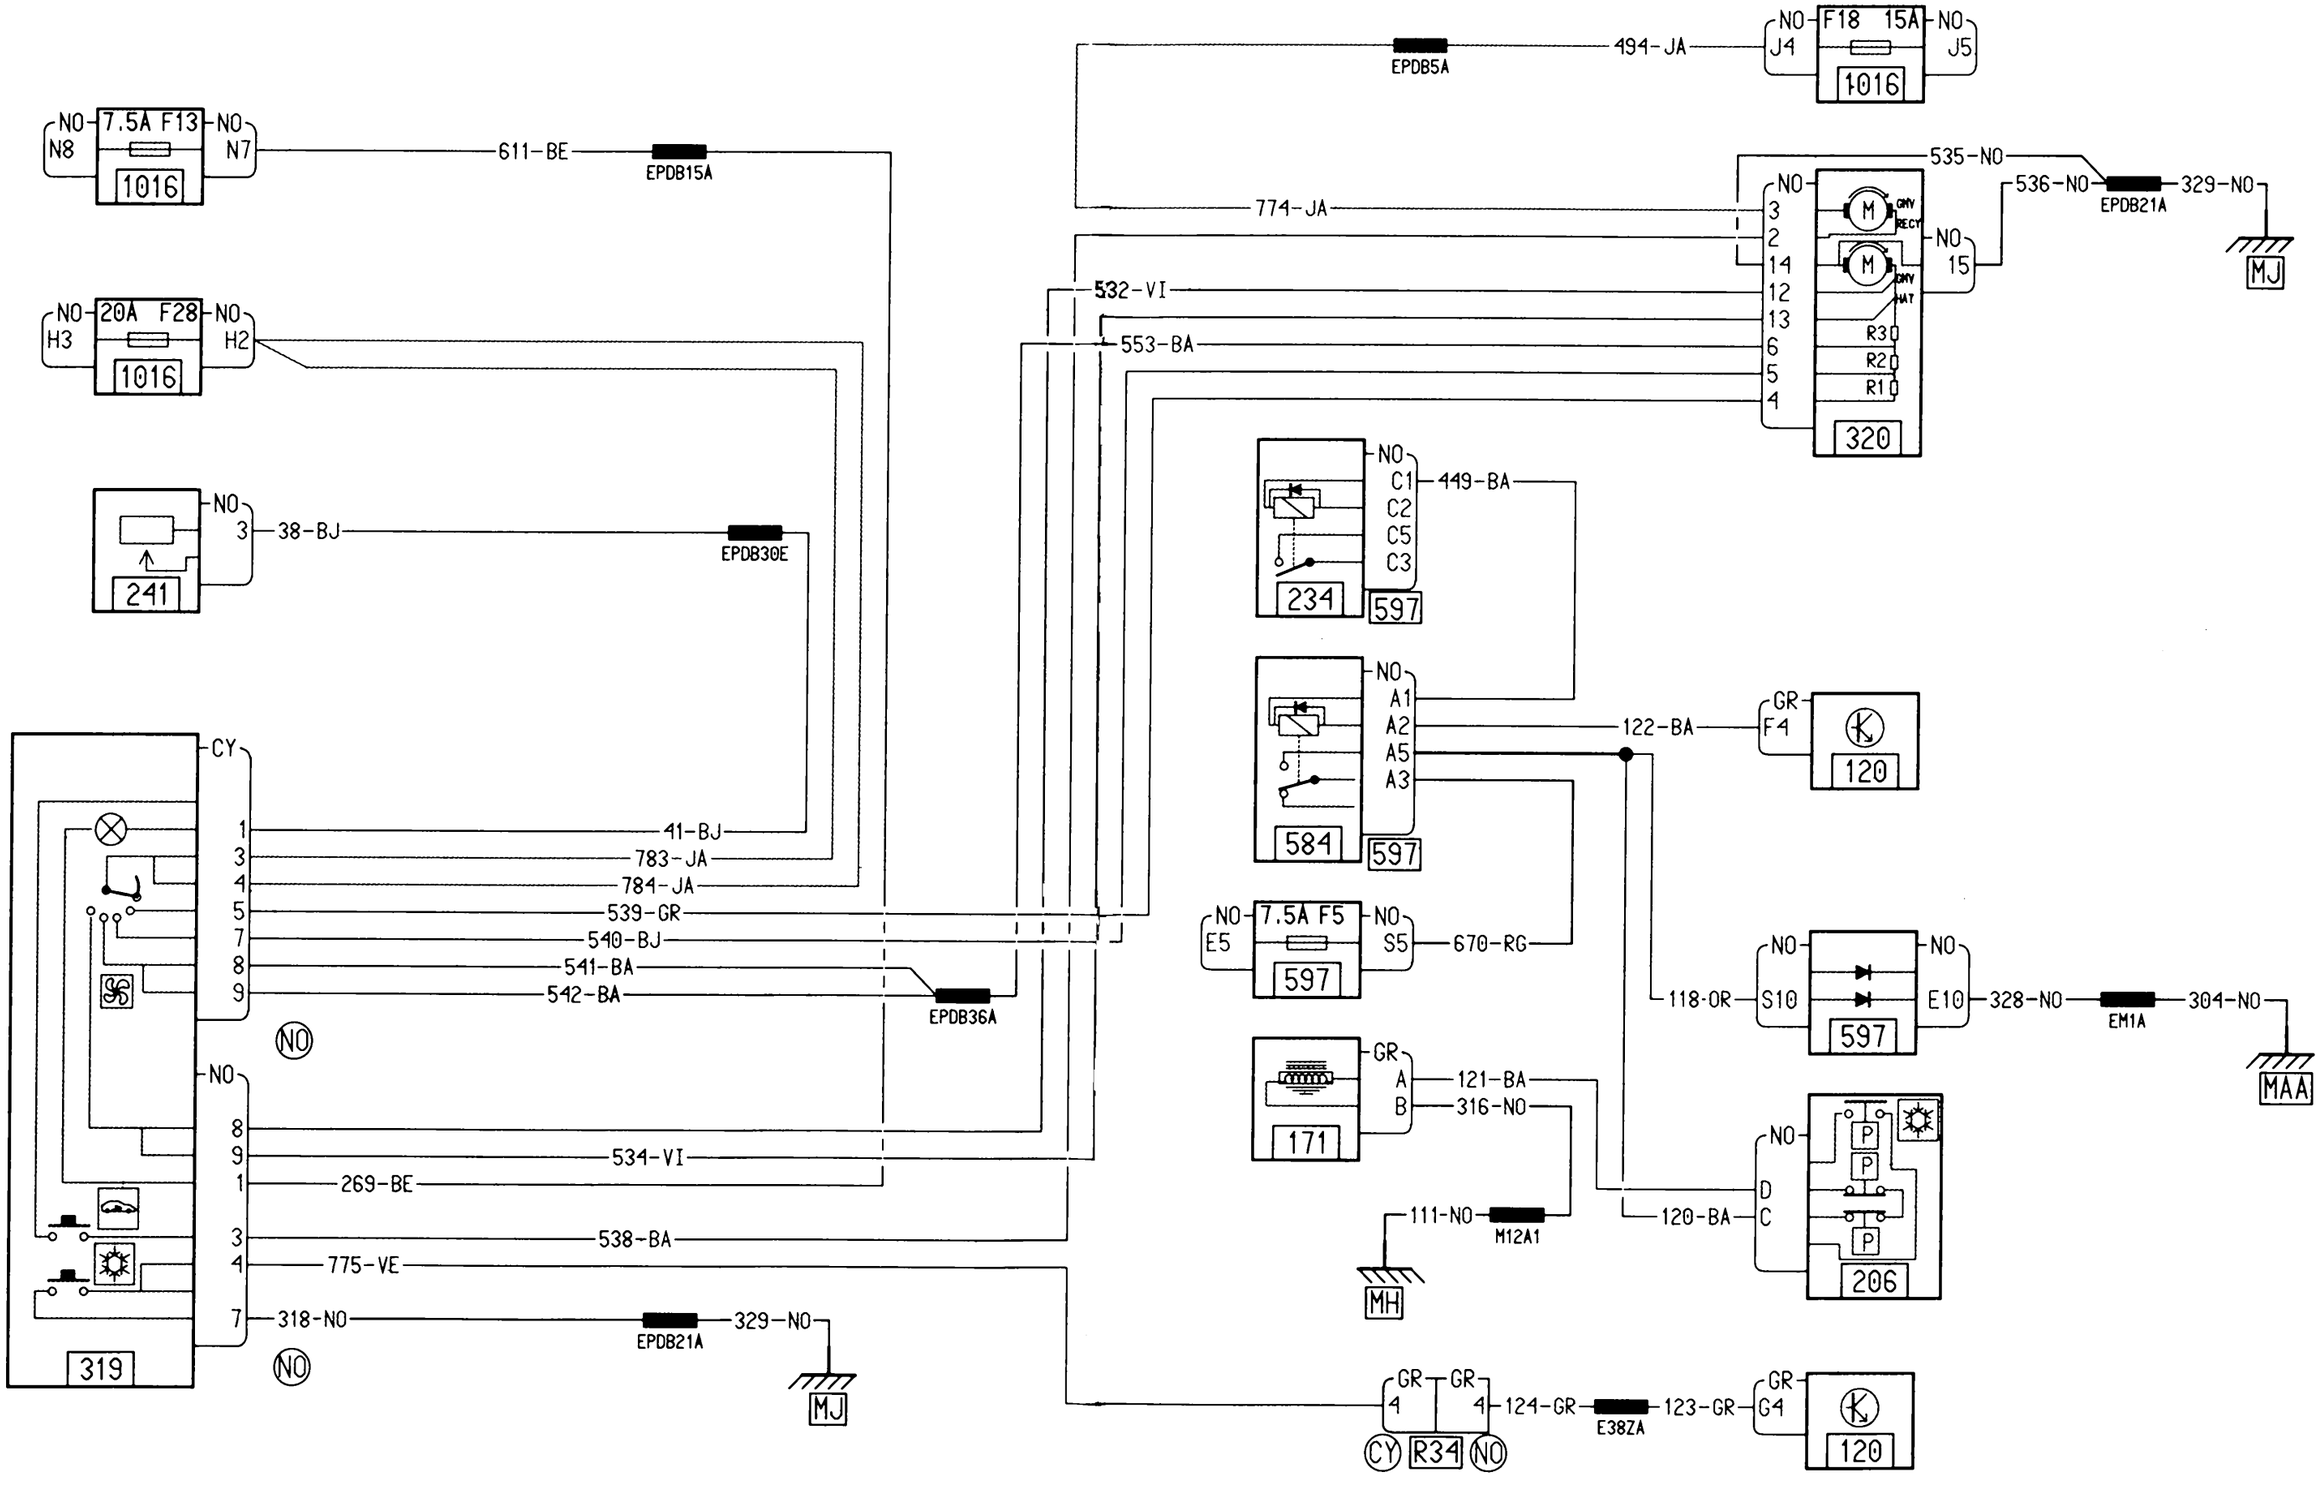

NO 7.5A F13 NO
N8
N7
1016
611-BE
EPDB15A
NO 20A F28 NO
H3
H2
1016
NO
3
38-BJ
EPDB30E
241
CY
1
3
4
5
7
8
9
41-BJ
783-JA
784-JA
539-GR
540-BJ
541-BA
542-BA
EPDB36A
NO
NO
8
9
1
3
4
7
534-VI
269-BE
538-BA
775-VE
318-NO
EPDB21A
329-NO
MJ
319
NO
EPDB5A
494-JA
NO F18 15A NO
J4
J5
1016
774-JA
532-VI
553-BA
535-NO
NO
3
2
14
12
13
6
5
4
M
GNY RECY
M
GNY HAT
R3
R2
R1
320
NO
15
536-NO
EPDB21A
329-NO
MJ
NO
C1
C2
C5
C3
449-BA
234
597
NO
A1
A2
A5
A3
584
597
122-BA
GR
F4
120
NO 7.5A F5 NO
E5
S5
597
670-RG
NO
S10
E10
597
118-OR
328-NO
EM1A
304-NO
MAA
GR
A
B
171
121-BA
316-NO
111-NO
M12A1
MH
NO
D
C
120-BA
P
P
P
206
GR
4
GR
4
CY
R34
NO
124-GR
E38ZA
123-GR
GR
G4
120

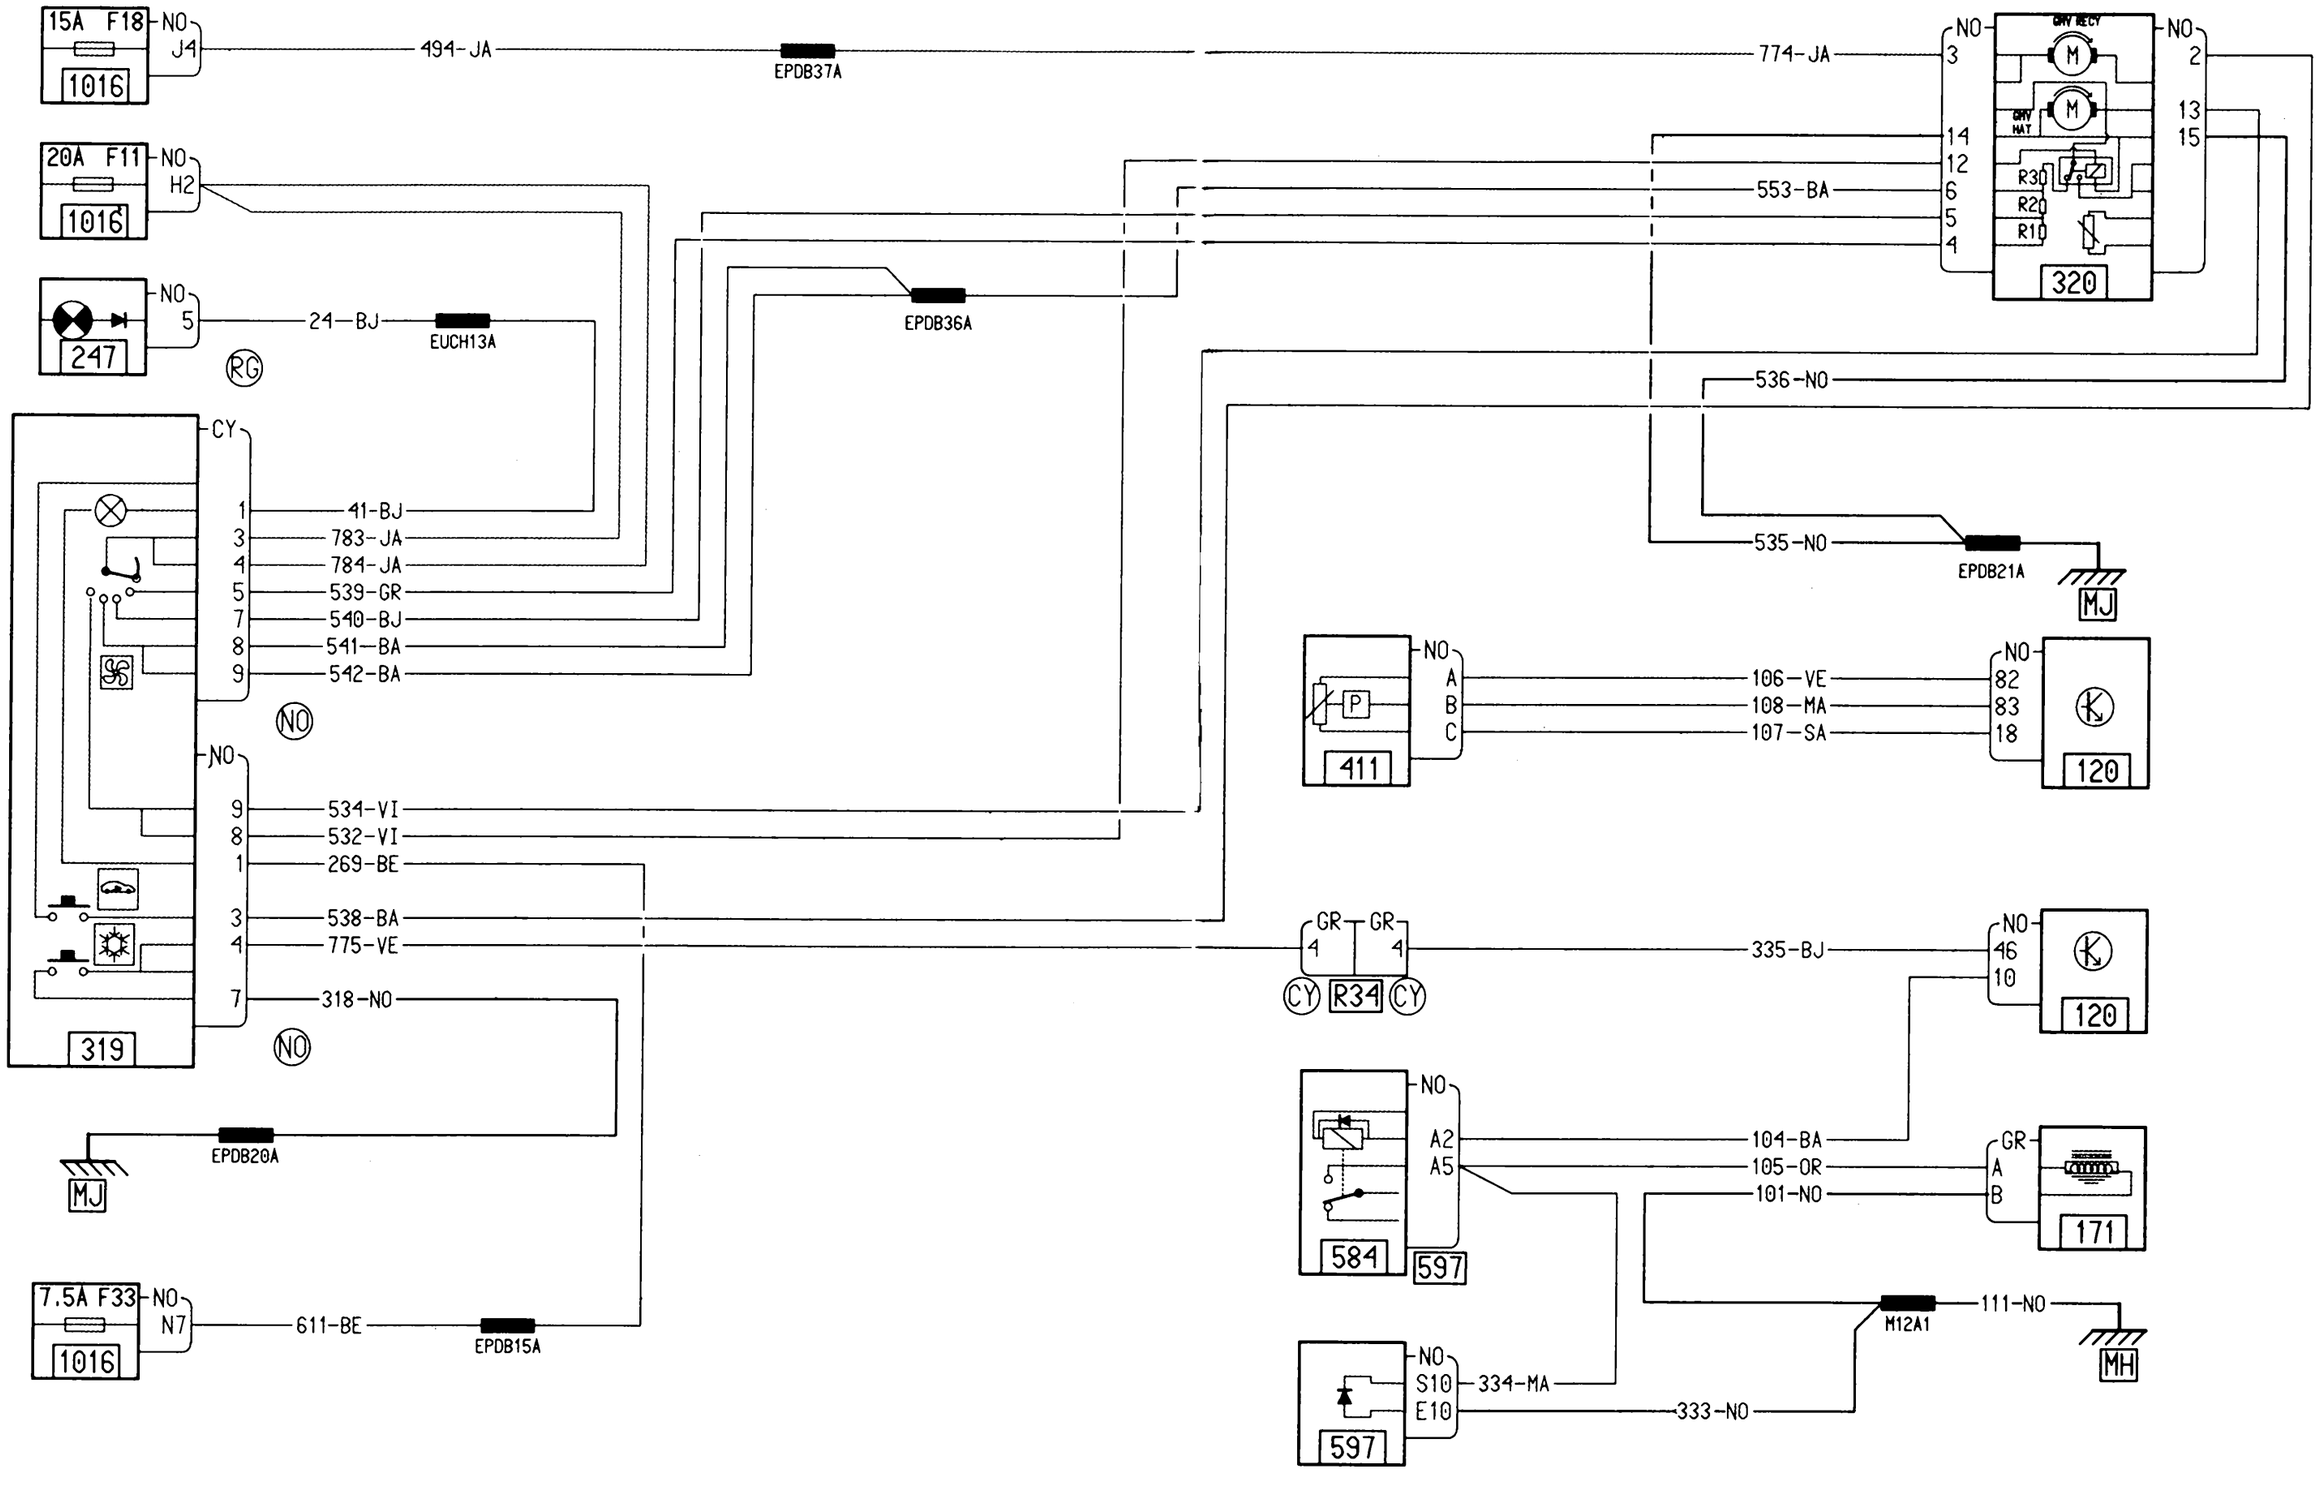
15A F18
1016
NO
J4
494-JA
EPDB37A
774-JA
20A F11
1016
NO
H2
247
NO
5
24-BJ
EUCH13A
RG
EPDB36A
553-BA
536-NO
535-NO
EPDB21A
MJ
CY
1 41-BJ
3 783-JA
4 784-JA
5 539-GR
7 540-BJ
8 541-BA
9 542-BA
NO
NO
9 534-VI
8 532-VI
1 269-BE
3 538-BA
4 775-VE
7 318-NO
NO
319
EPDB20A
MJ
7.5A F33
1016
NO
N7
611-BE
EPDB15A
NO
411
A 106-VE
B 108-MA
C 107-SA
NO
82
83
18
120
GR
4
GR
4
CY
R34
CY
335-BJ
NO
46
10
120
NO
584
597
A2 104-BA
A5 105-OR
101-NO
GR
A
B
171
M12A1
111-NO
MH
NO
597
S10 334-MA
E10 333-NO
NO
3
14
12
6
5
4
GRY RECY
GRY HAT
R3
R2
R1
320
NO
2
13
15

ELECTRICAL HEADLIGHT CORRECTOR

E1/DG/REGSIT/PROJSO


X642
00

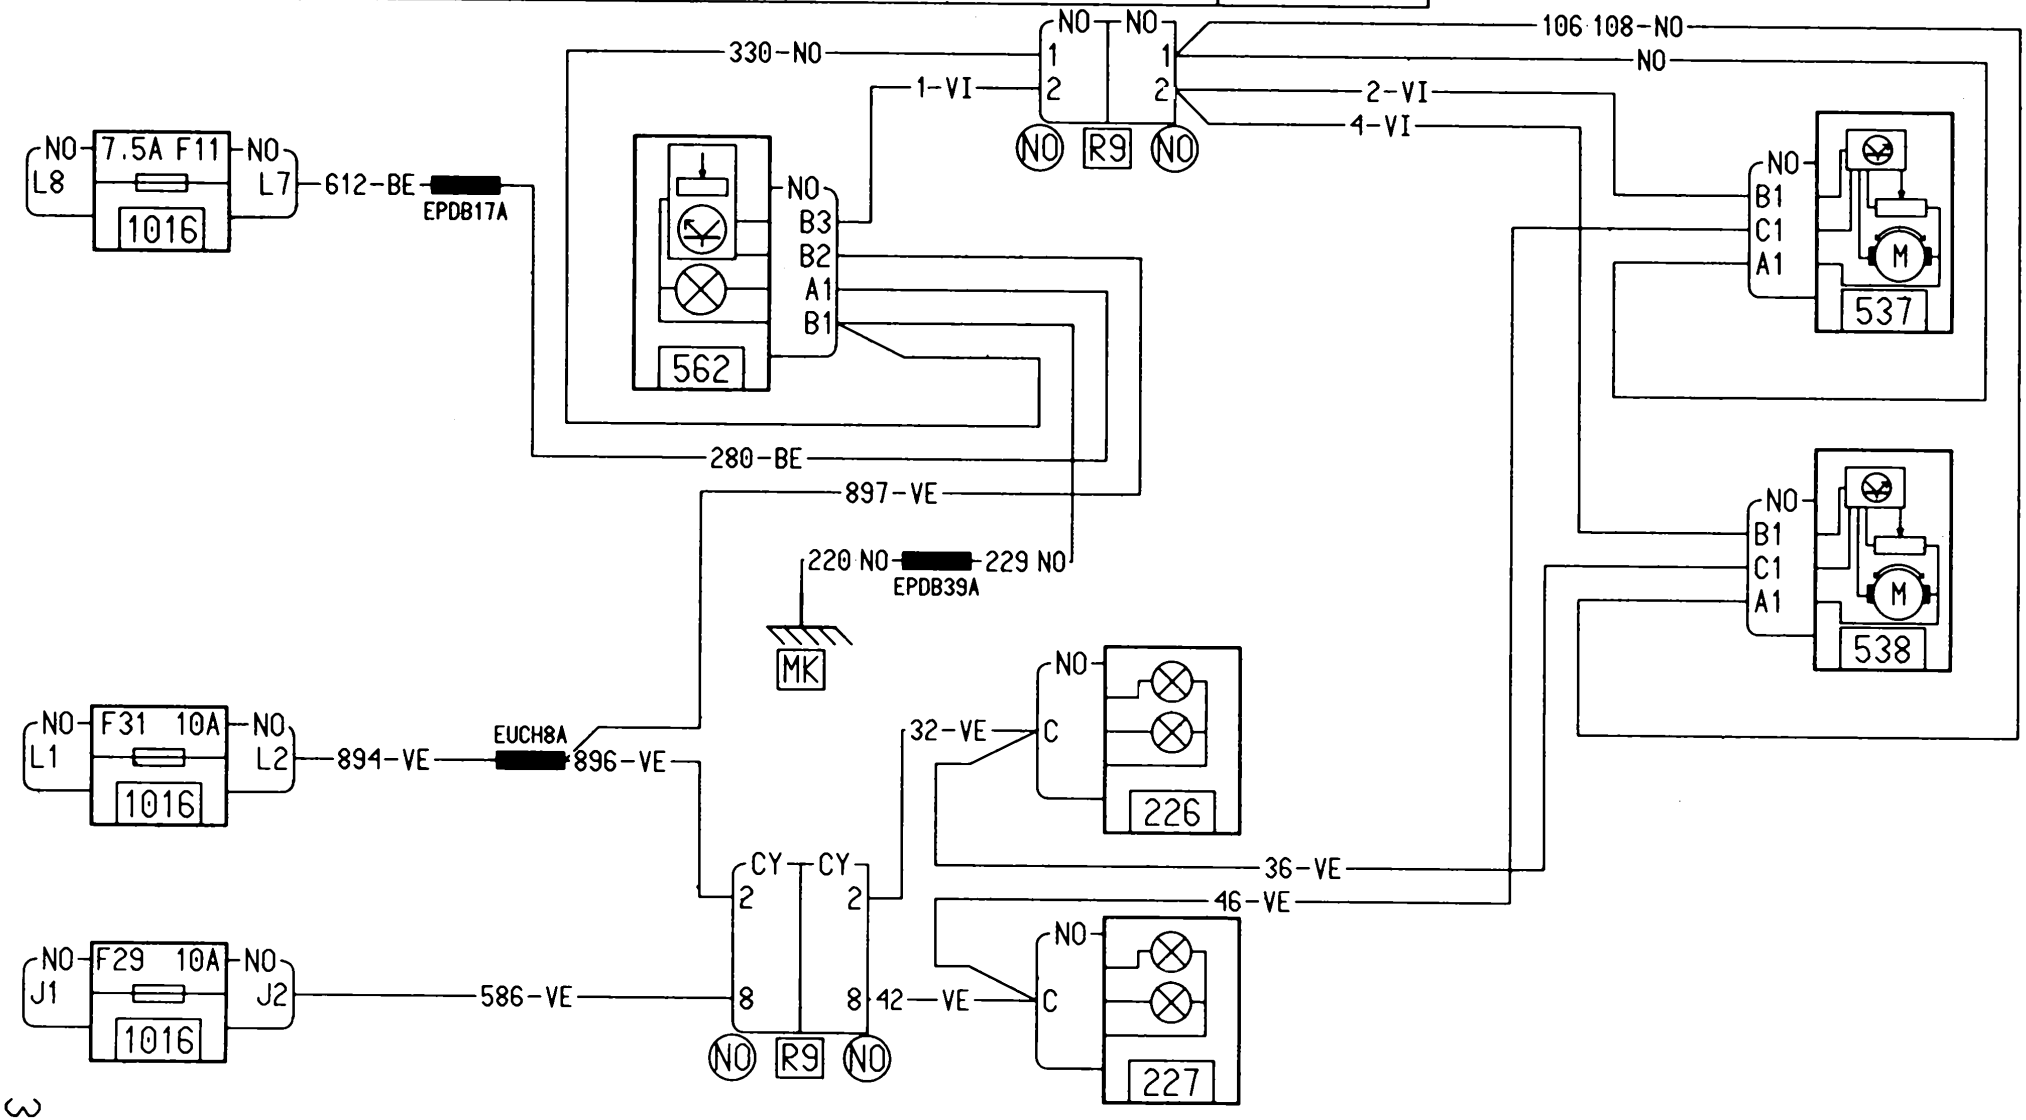

ELECTRICAL HEADLIGHT CORRECTOR

E2/DG/REGSIT/PROJDO

X642
00

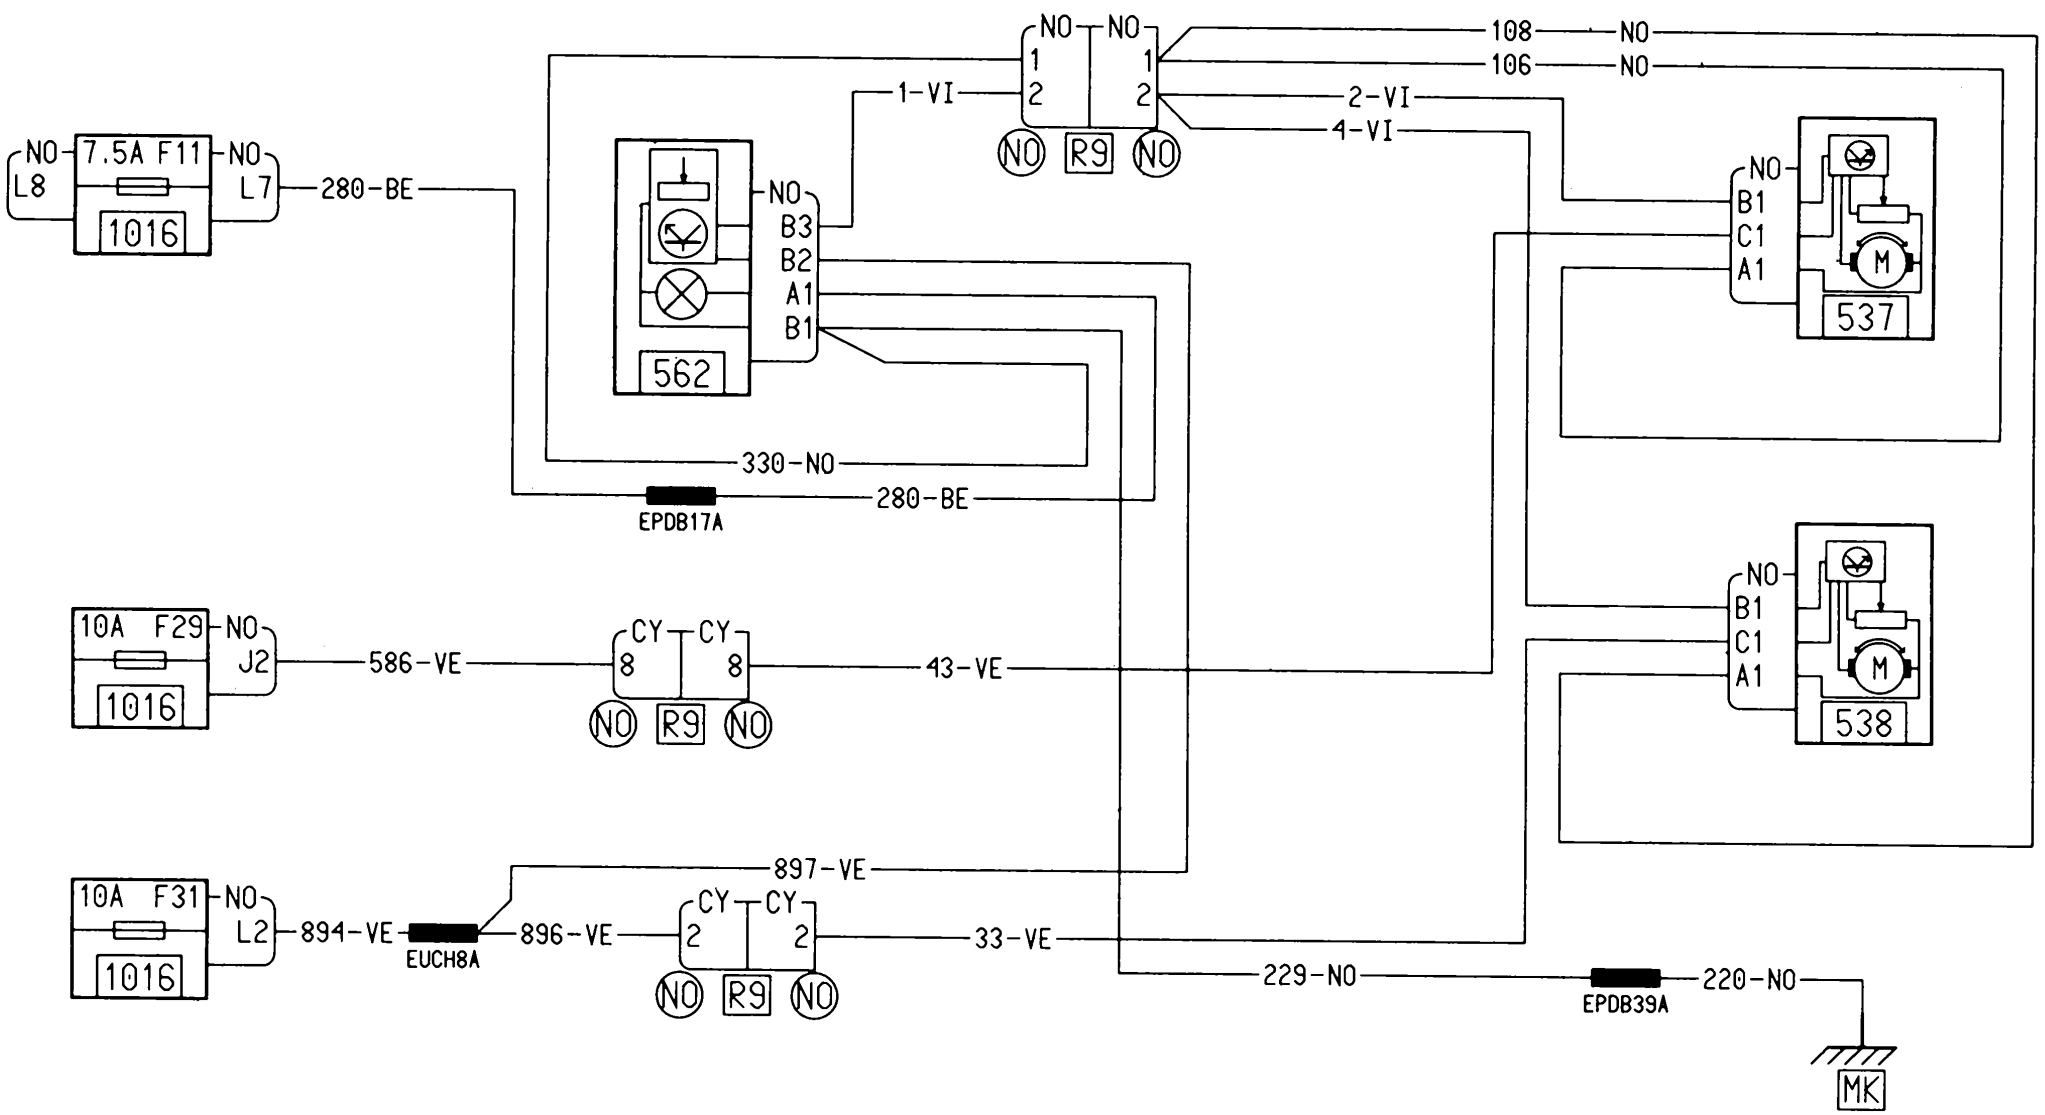


ELECTRICAL HEADLIGHT CORRECTOR

E1/DG/REGSIT/PROJSO/VHECOL

X642


00

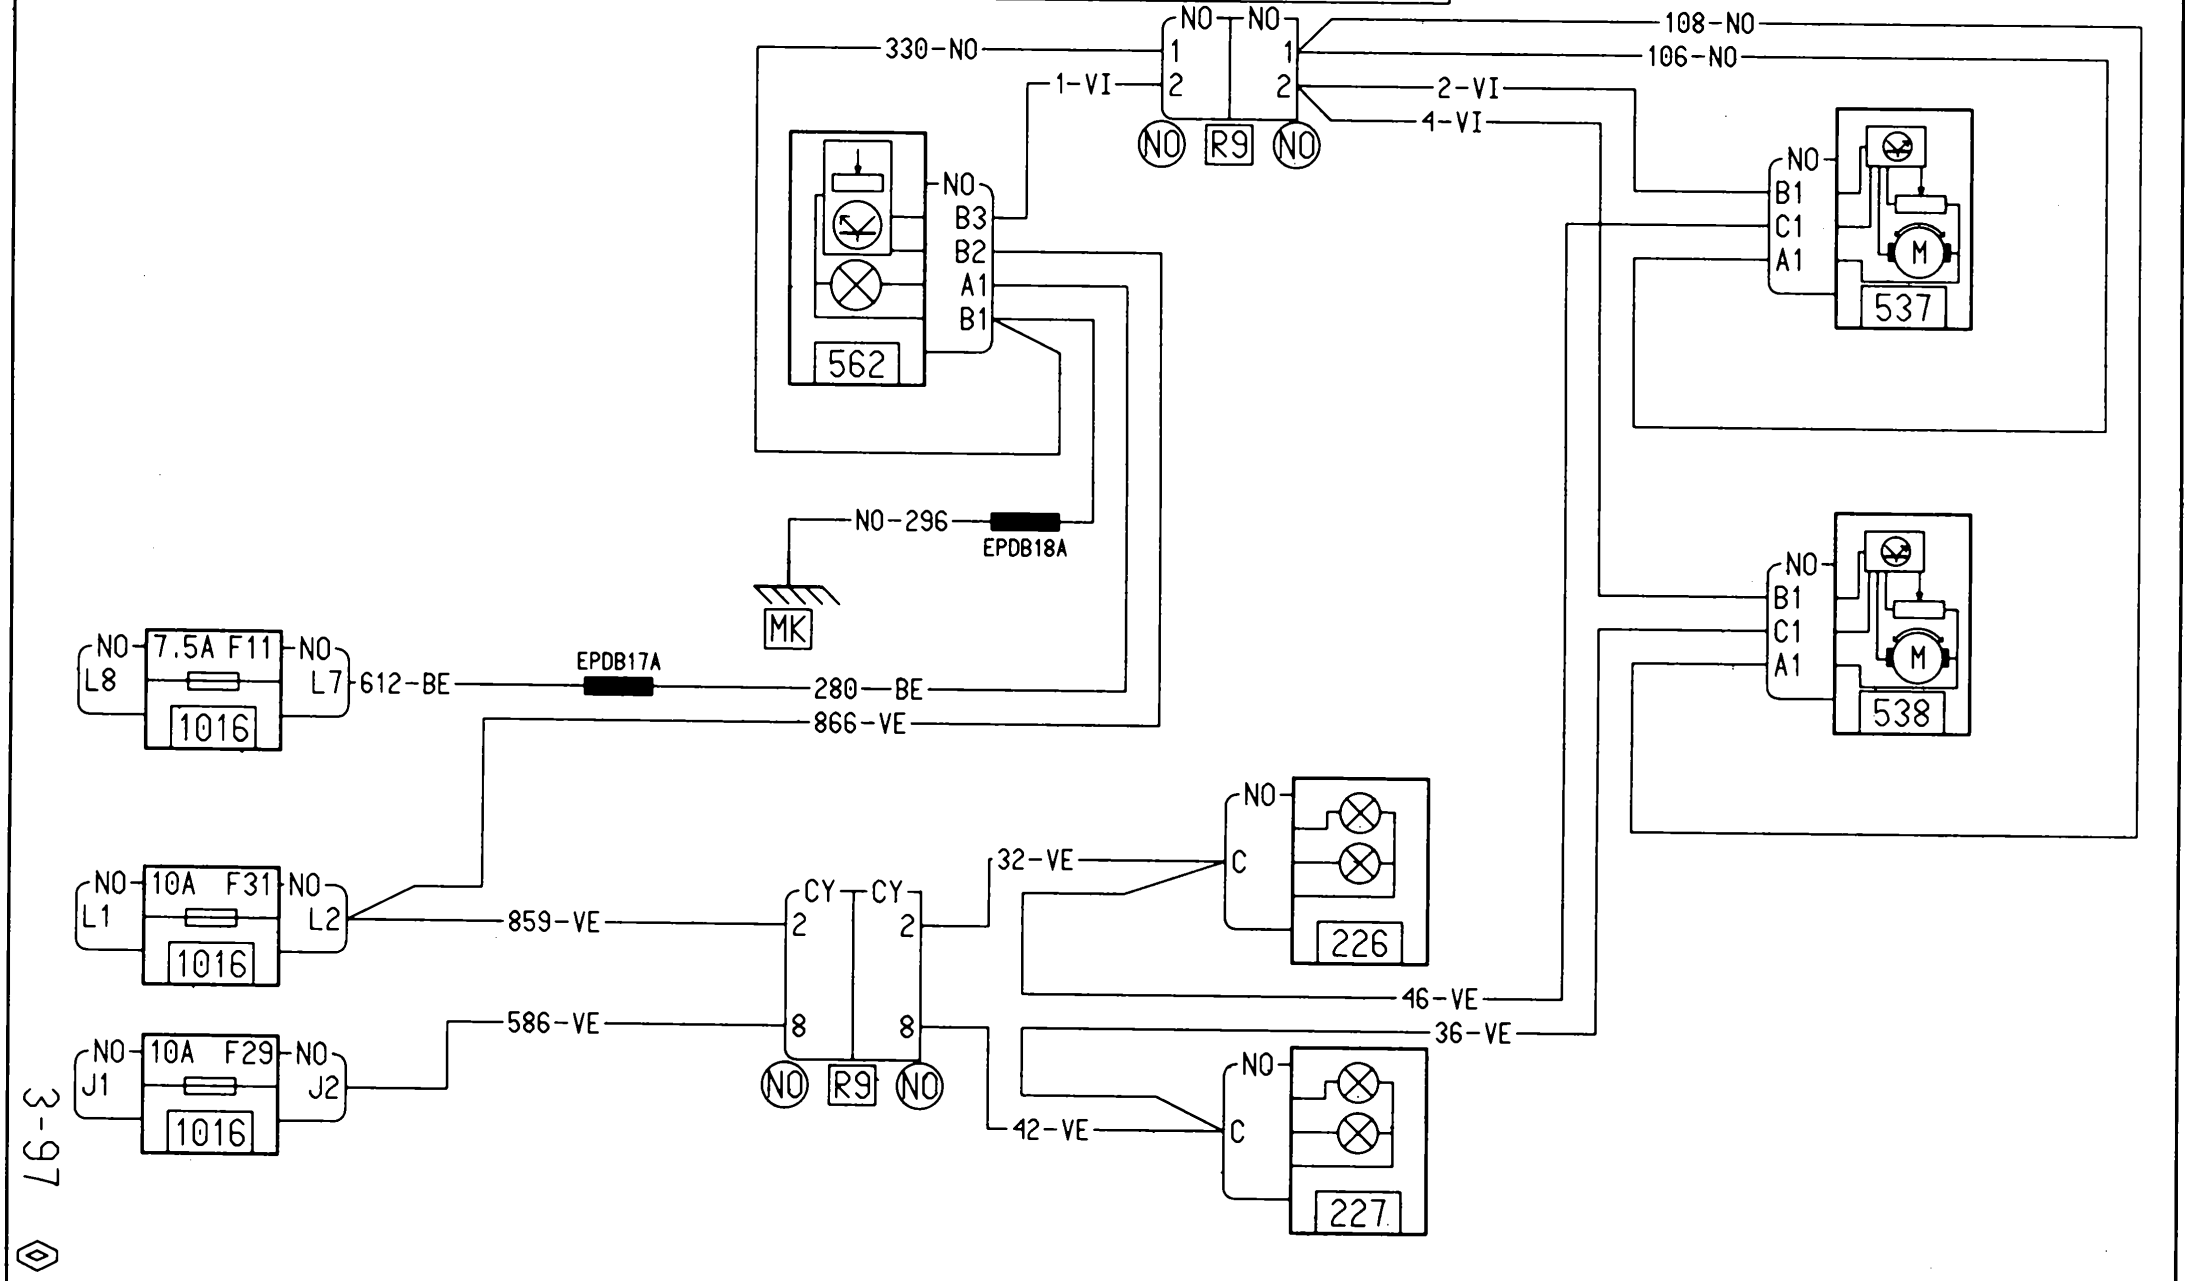

ELECTRICAL HEADLIGHT CORRECTOR

E2/DD/REGSIT/PROJDO


X642
00

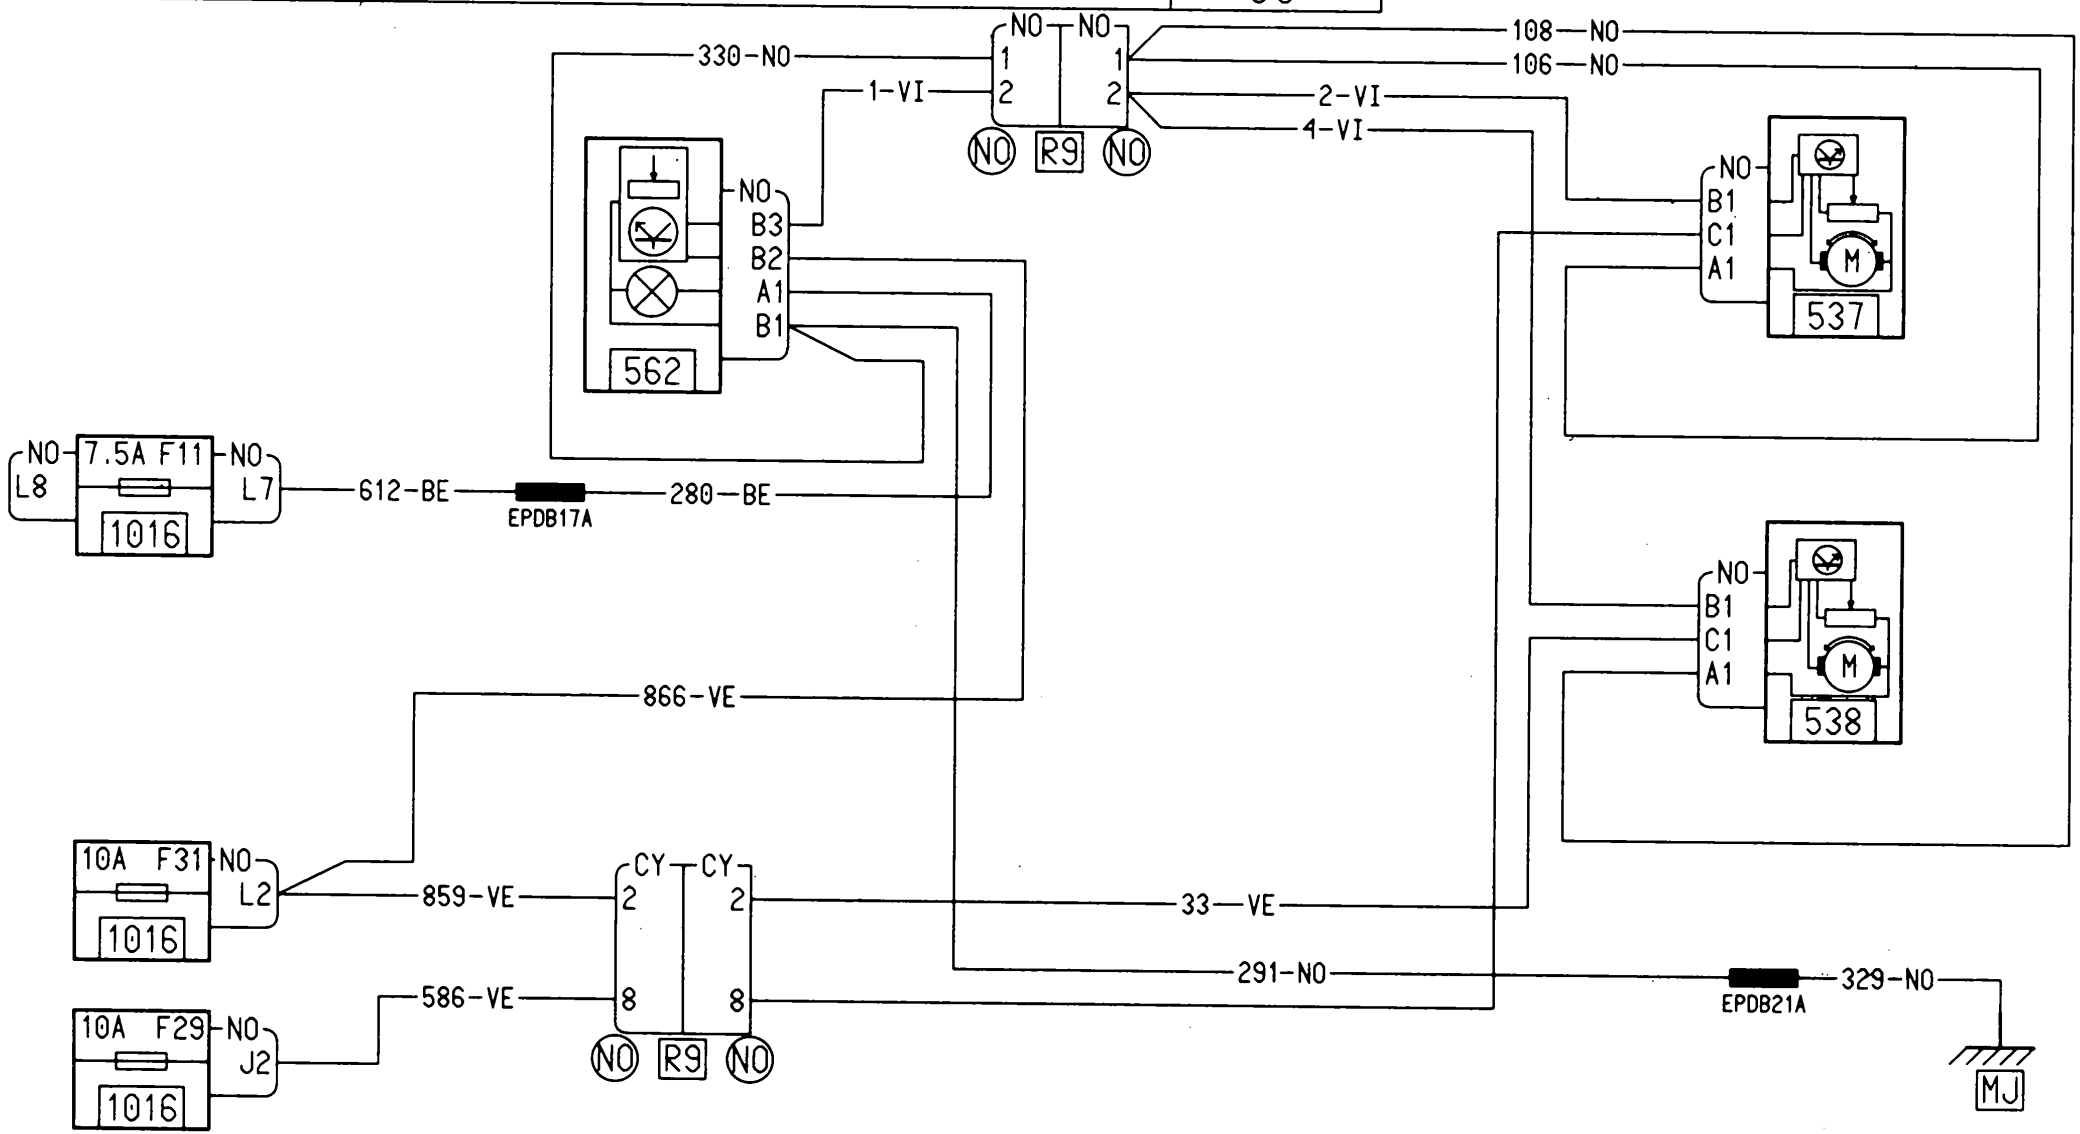

REAR SCREEN DE-ICING

B64/E1

X642
00

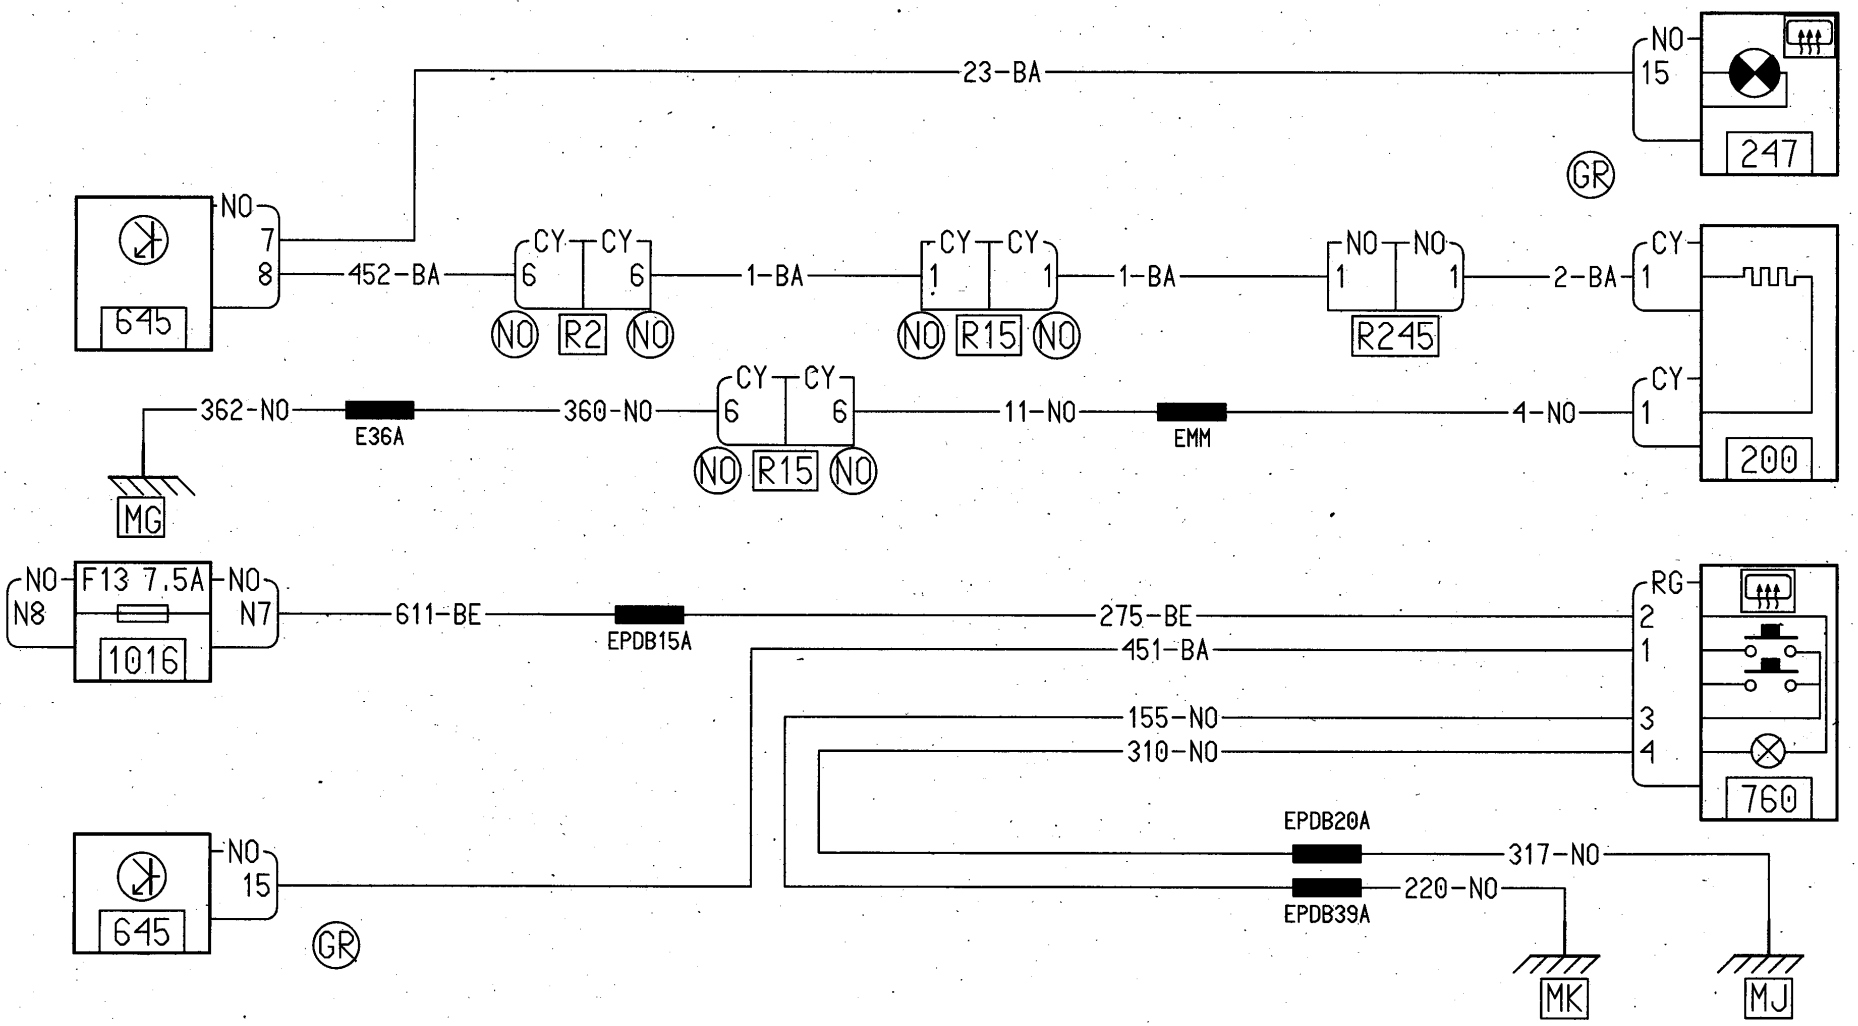


REAR SCREEN DE-ICING

L64/E1

X642


00

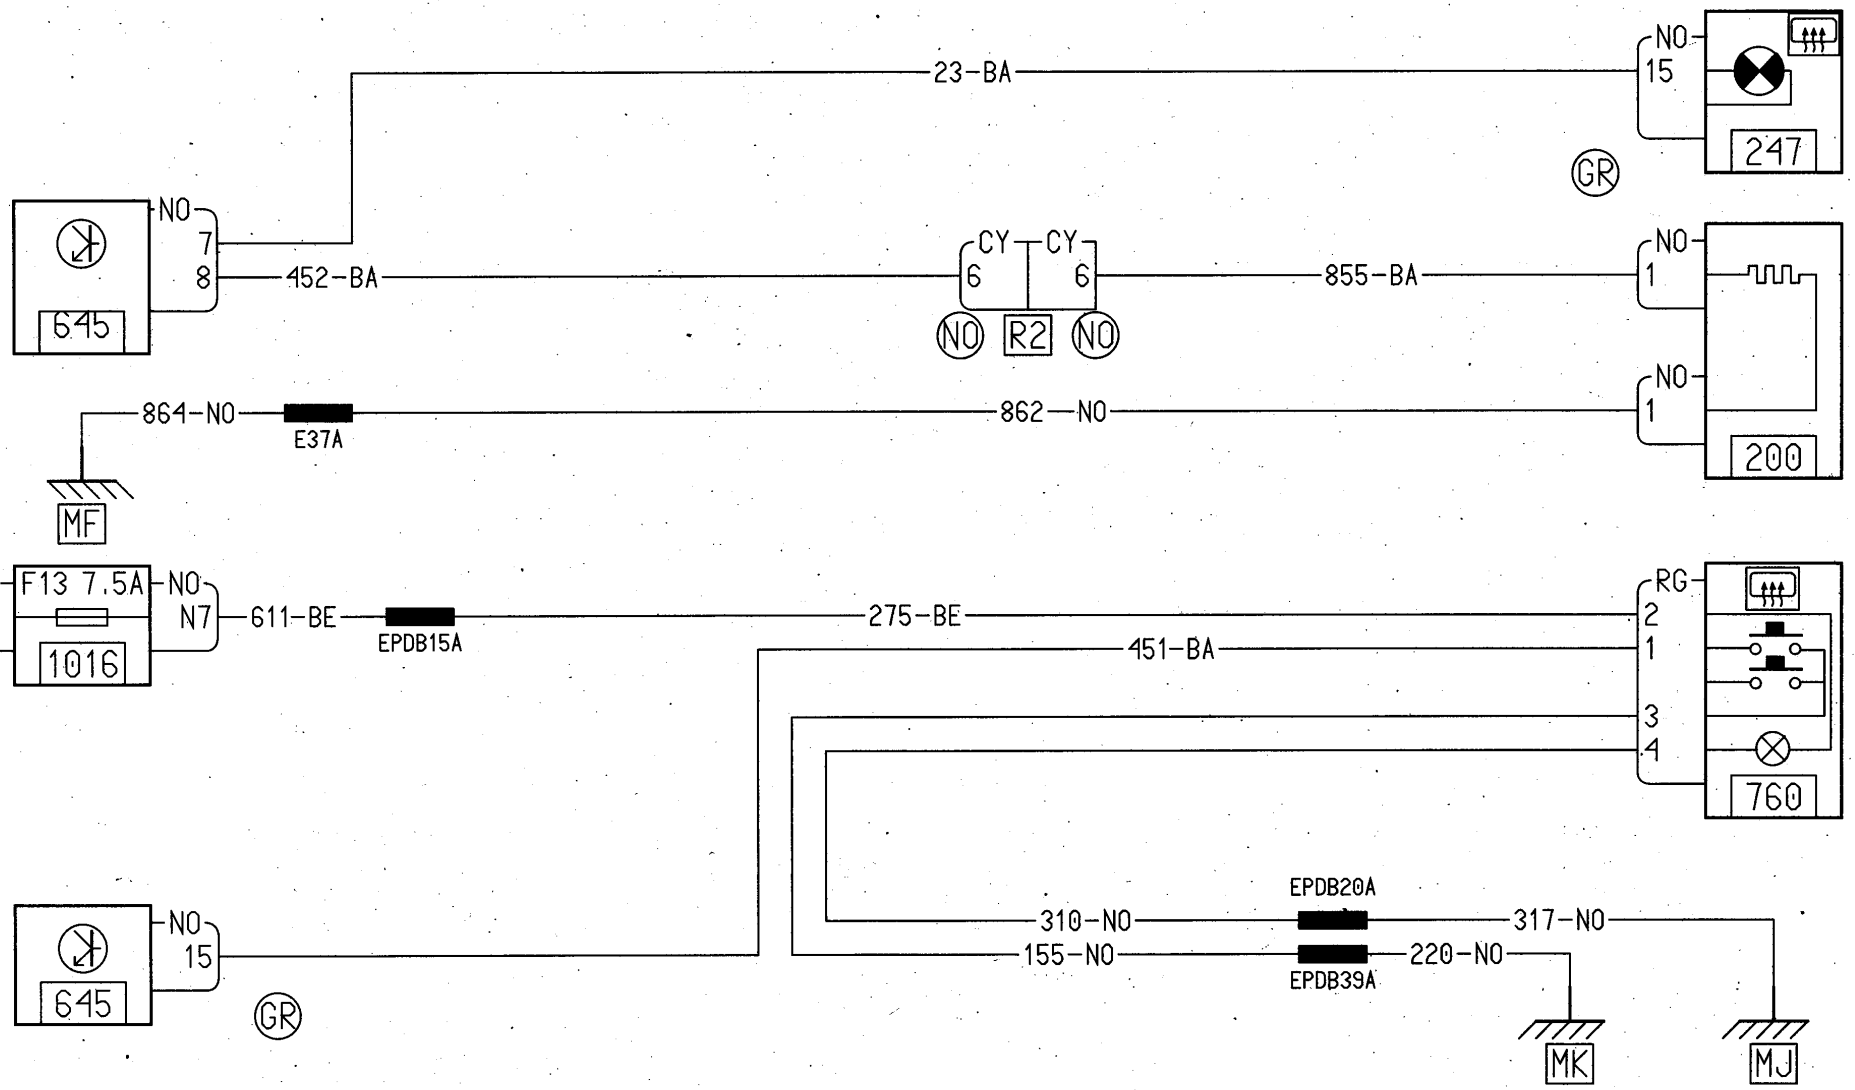

REAR SCREEN DE-ICING

K25


X642
00

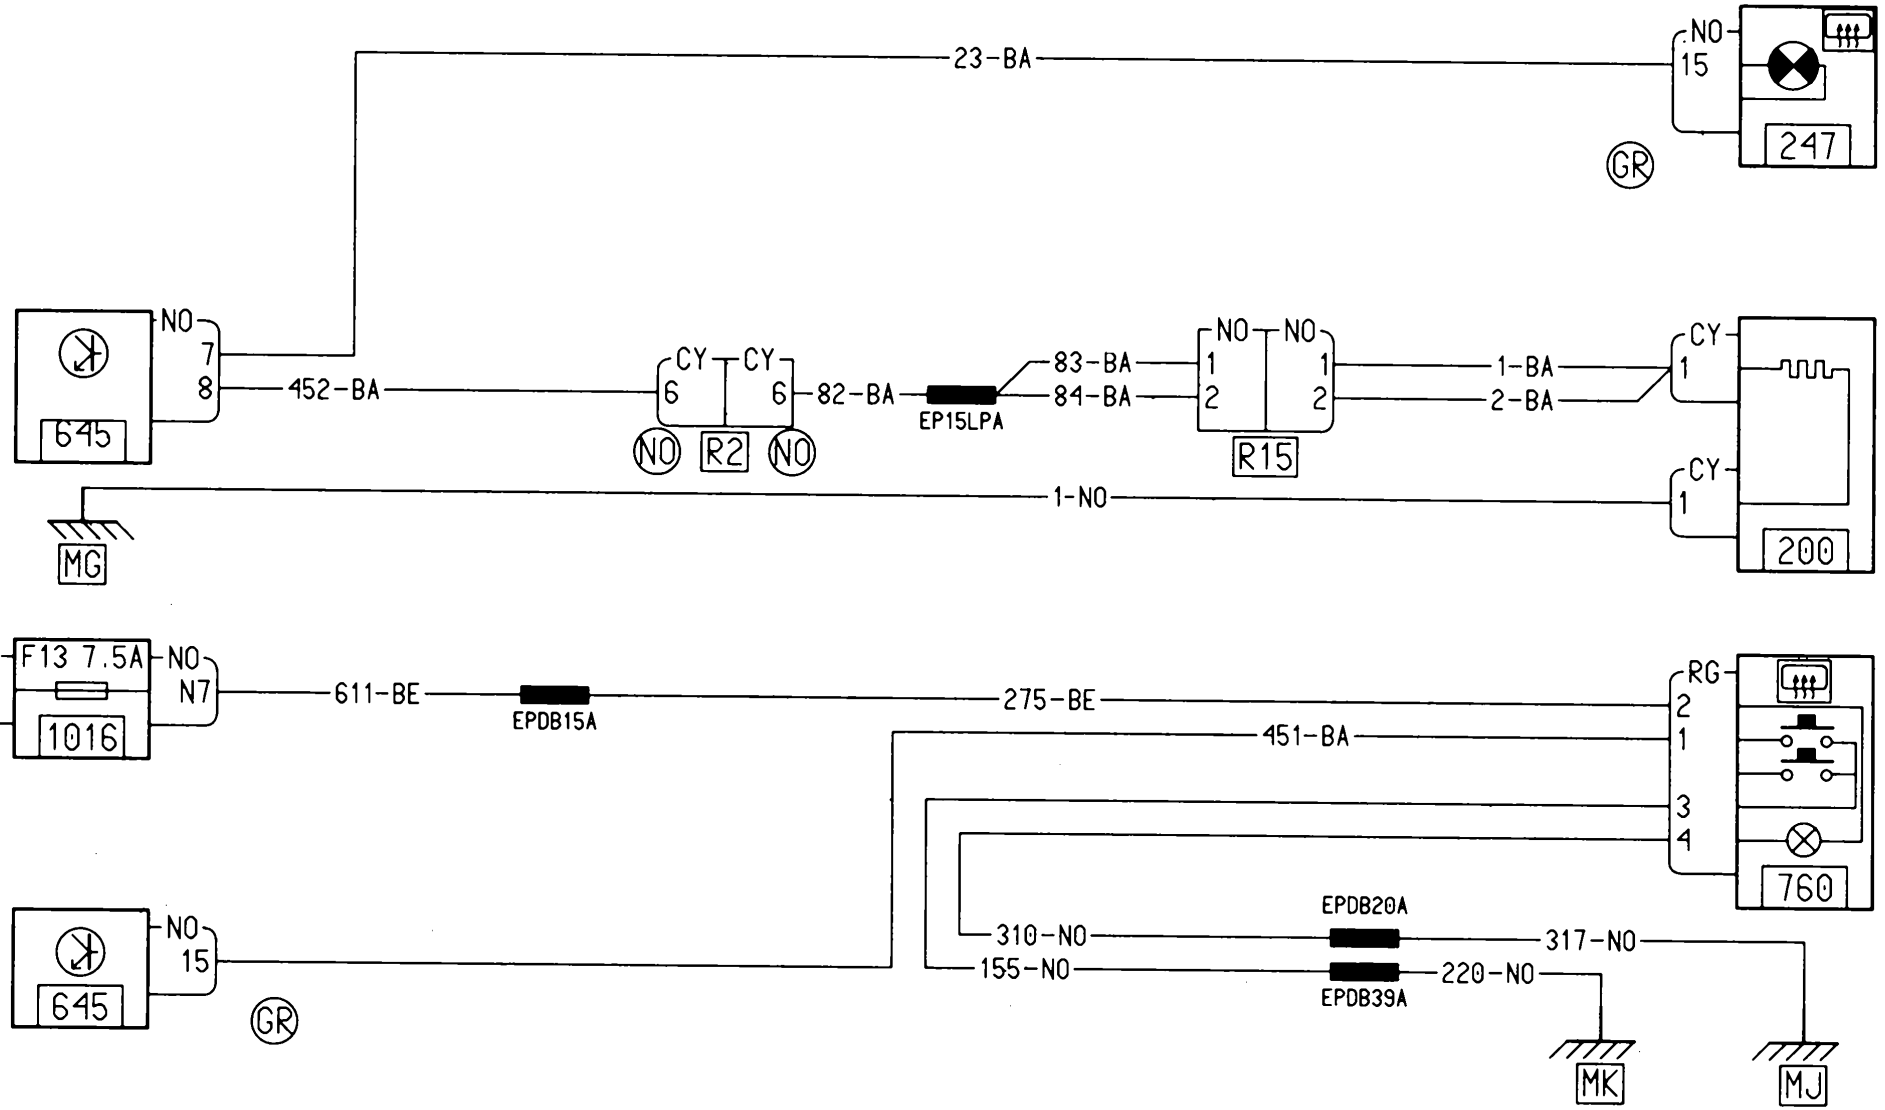

REAR SCREEN DE-ICING

B64/E1/DG/VHECOL


X642
00

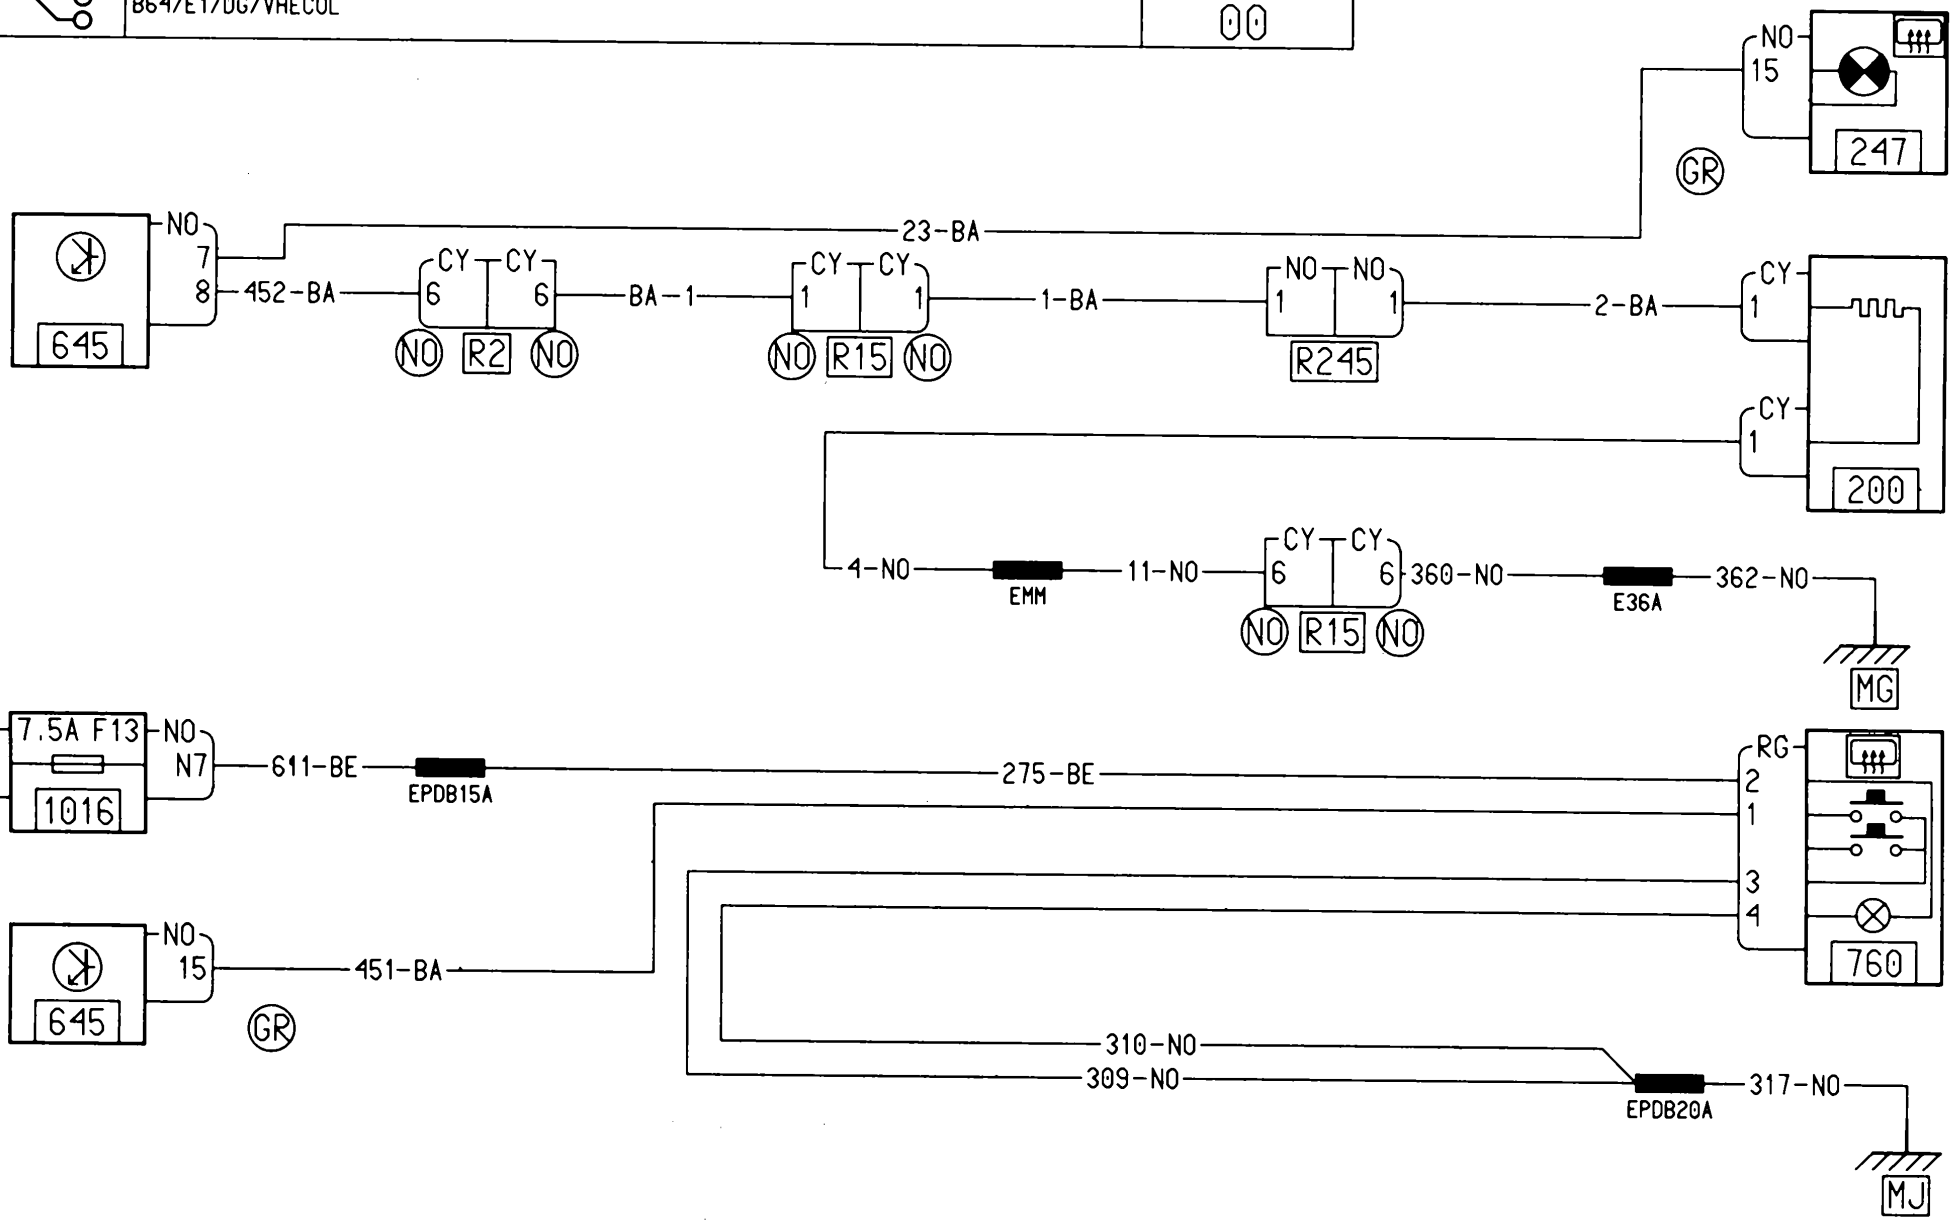

HEATED REAR WINDOW AND REAR-VIEW MIRRORS

E64/E2/DG/RETROE


X642
00

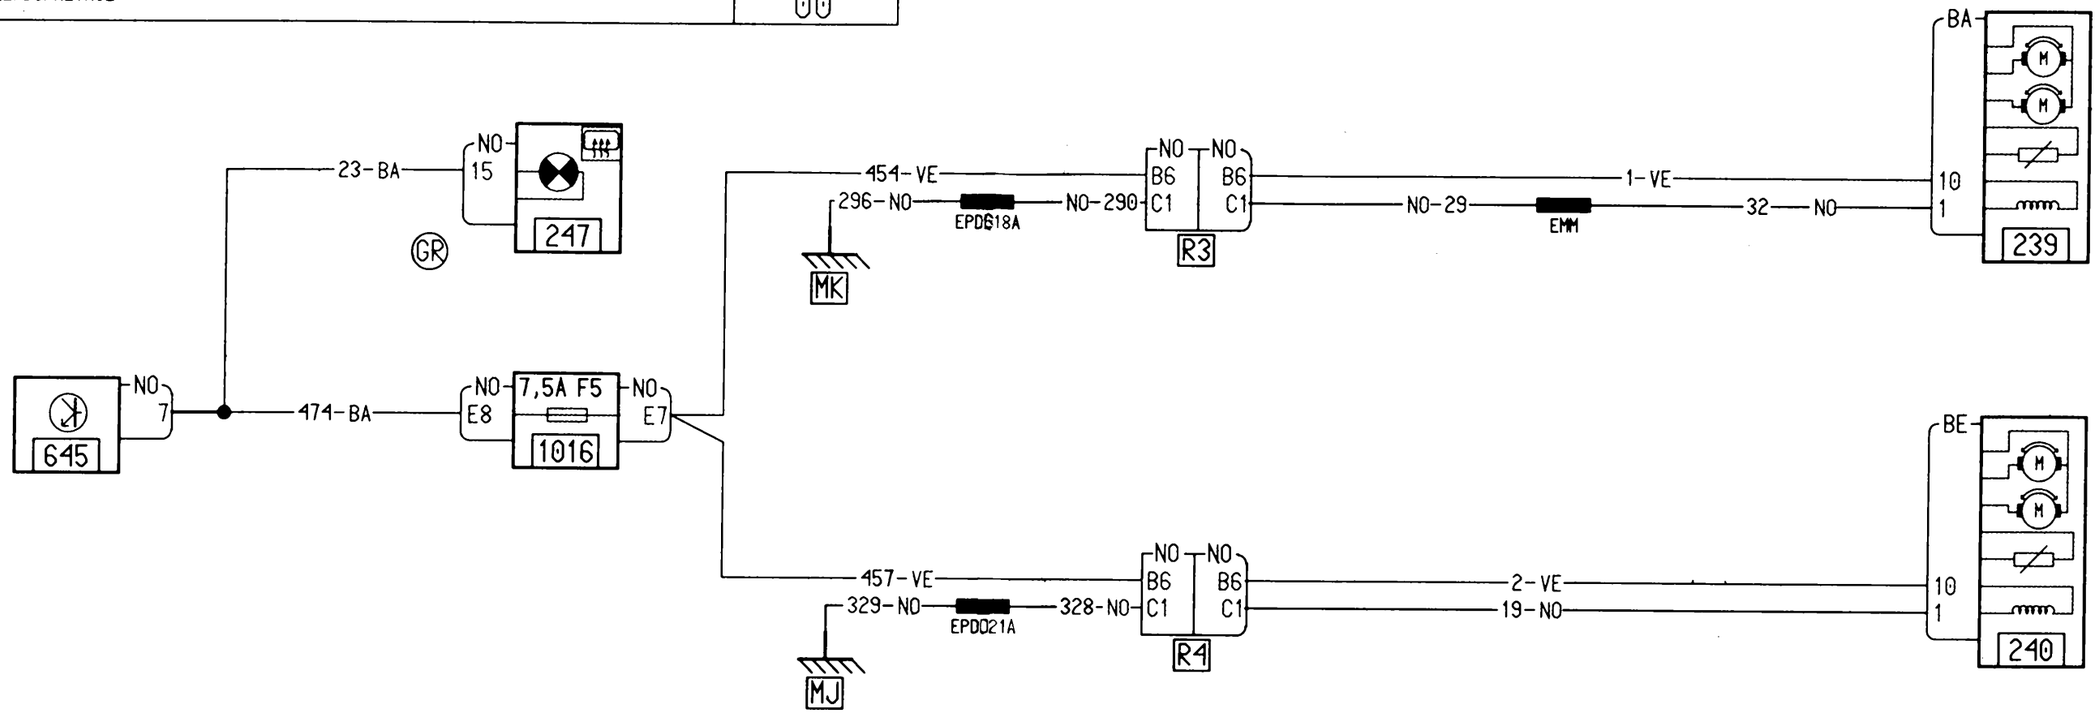



HEATED REAR WINDOW AND REAR-VIEW MIRRORS

D64,L64/E2/RETROE

X642
00

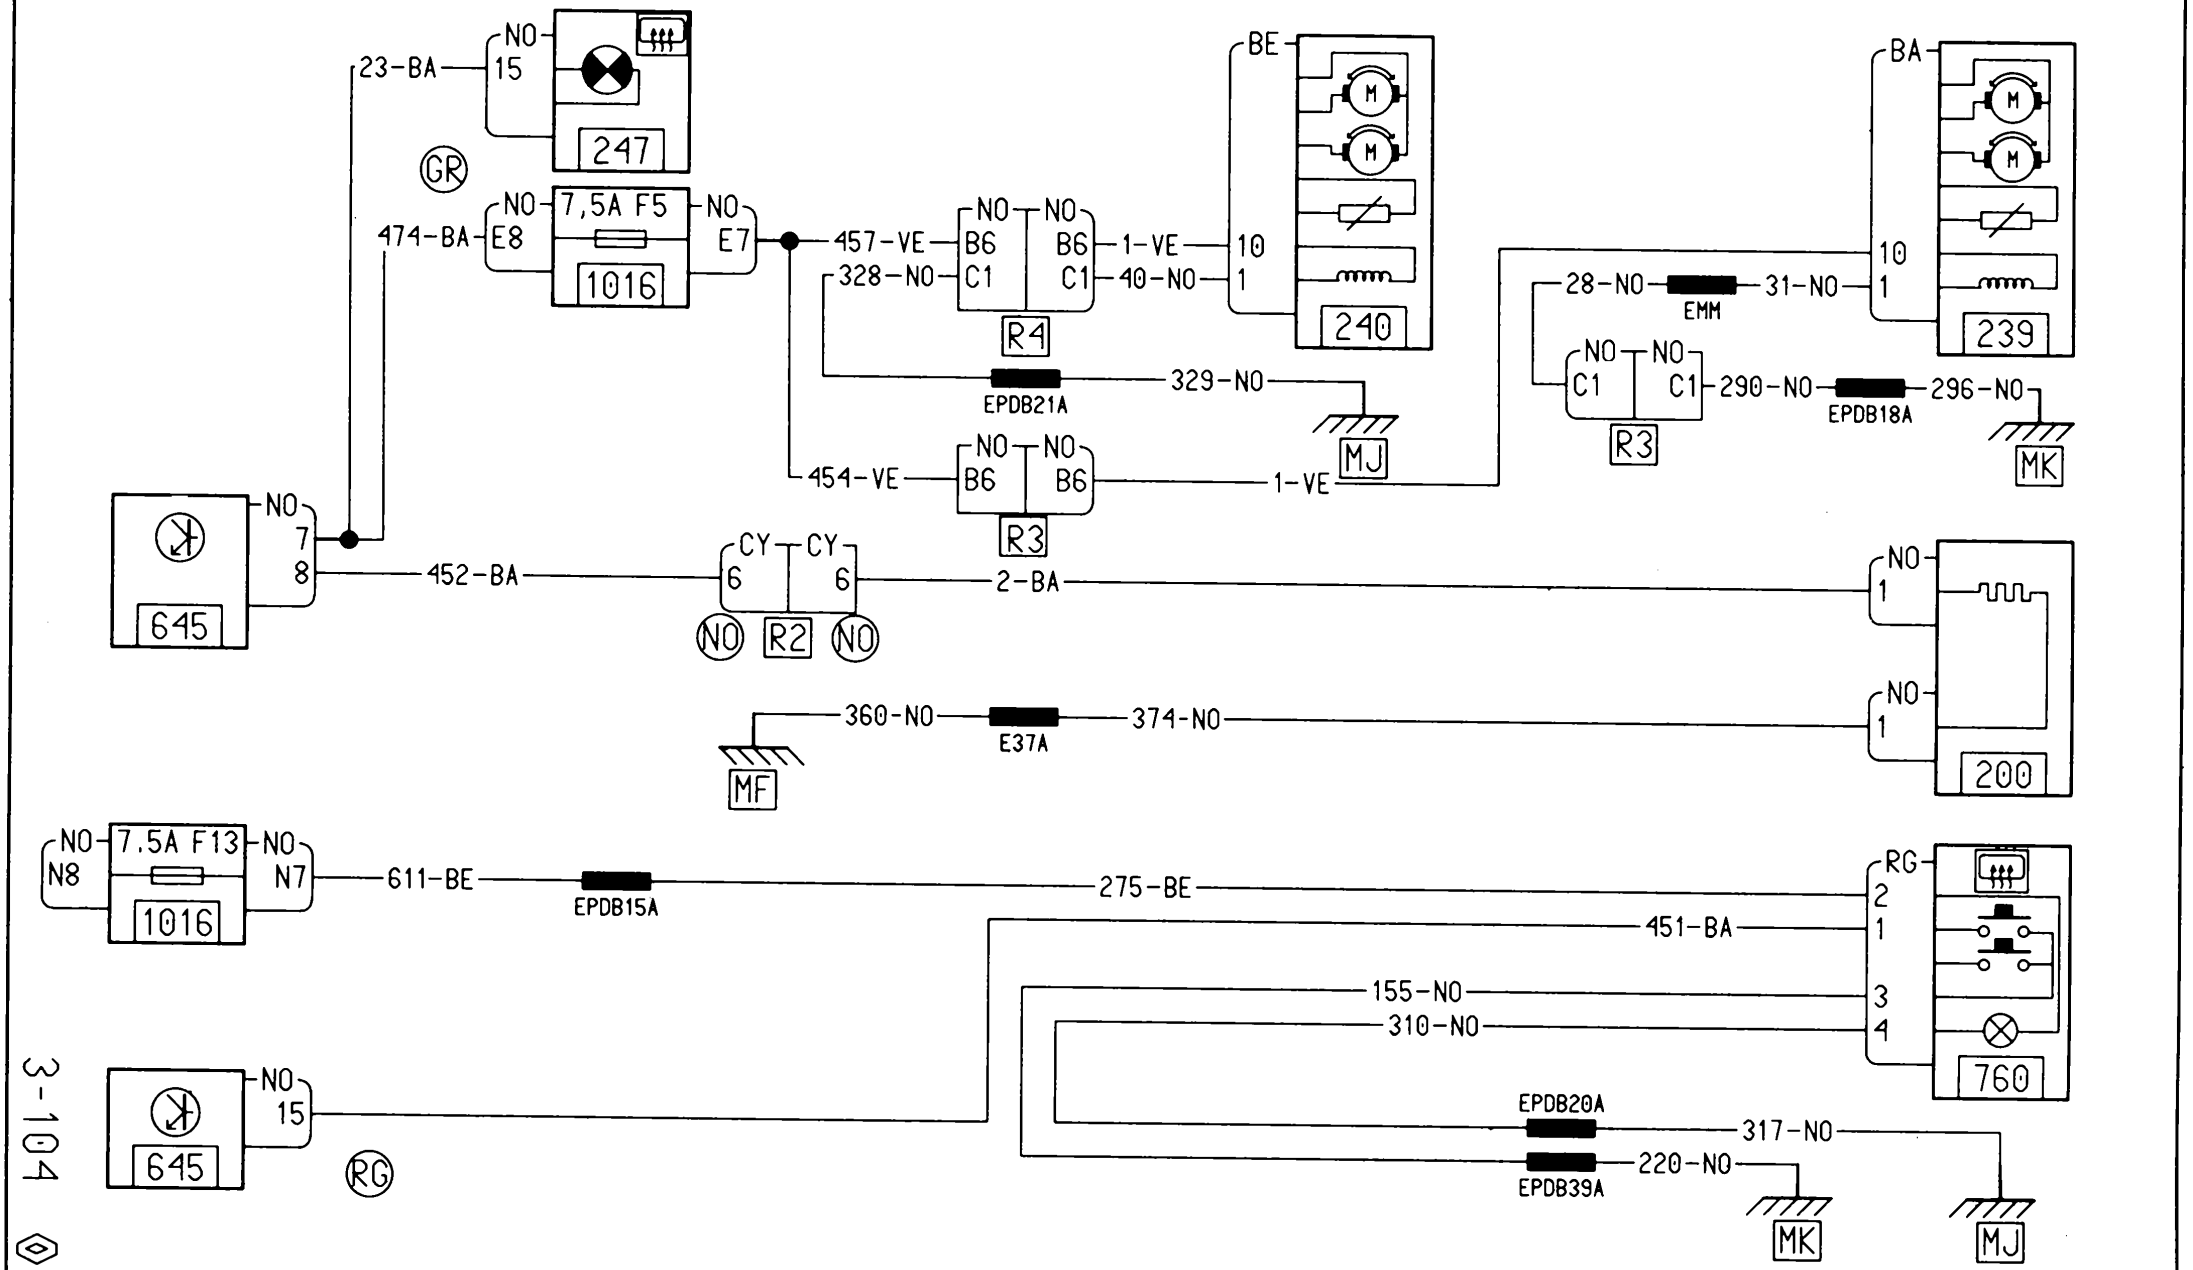

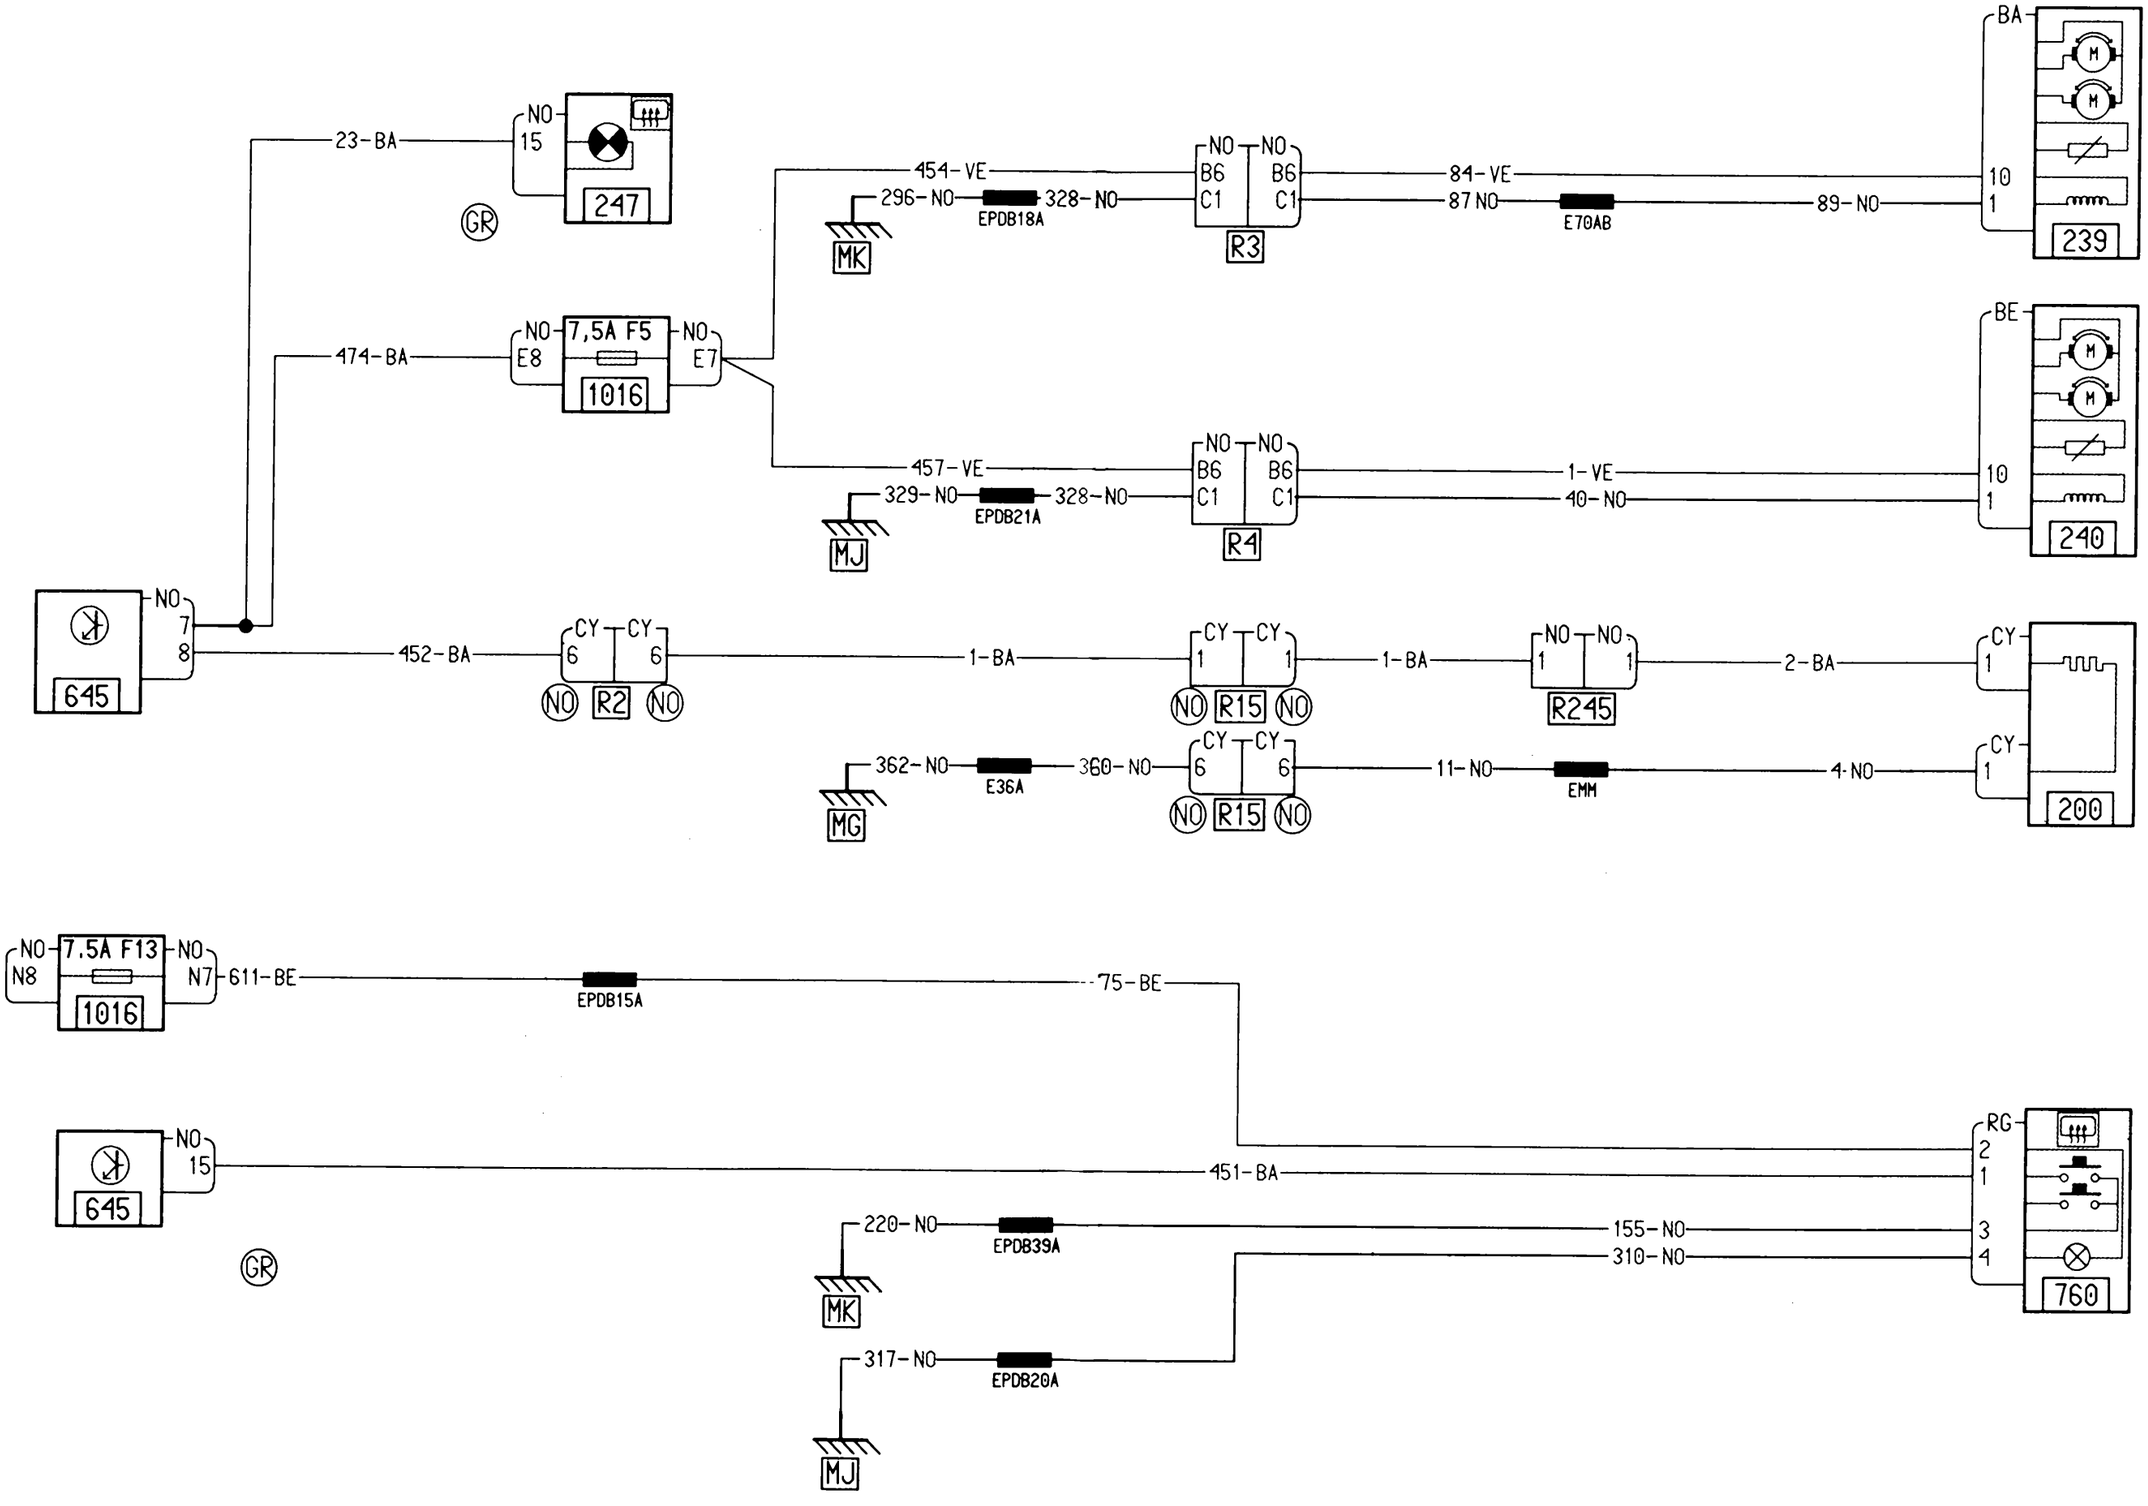

23-BA
NO
15
247
GR
454-VE
296-NO
328-NO
EPDB18A
MK
NO
B6
C1
R3
84-VE
87 NO
E70AB
89-NO
BA
10
1
239
474-BA
NO
E8
7,5A F5
1016
NO
E7
457-VE
329-NO
328-NO
EPDB21A
MJ
1-VE
40-NO
BE
240
645
452-BA
CY
6
NO
R2
1-BA
1
R15
R245
2-BA
362-NO
360-NO
E36A
11-NO
EMM
4-NO
200
7,5A F13
N8
N7
611-BE
EPDB15A
75-BE
451-BA
RG
2
3
4
760
220-NO
EPDB39A
155-NO
310-NO
317-NO
EPDB20A

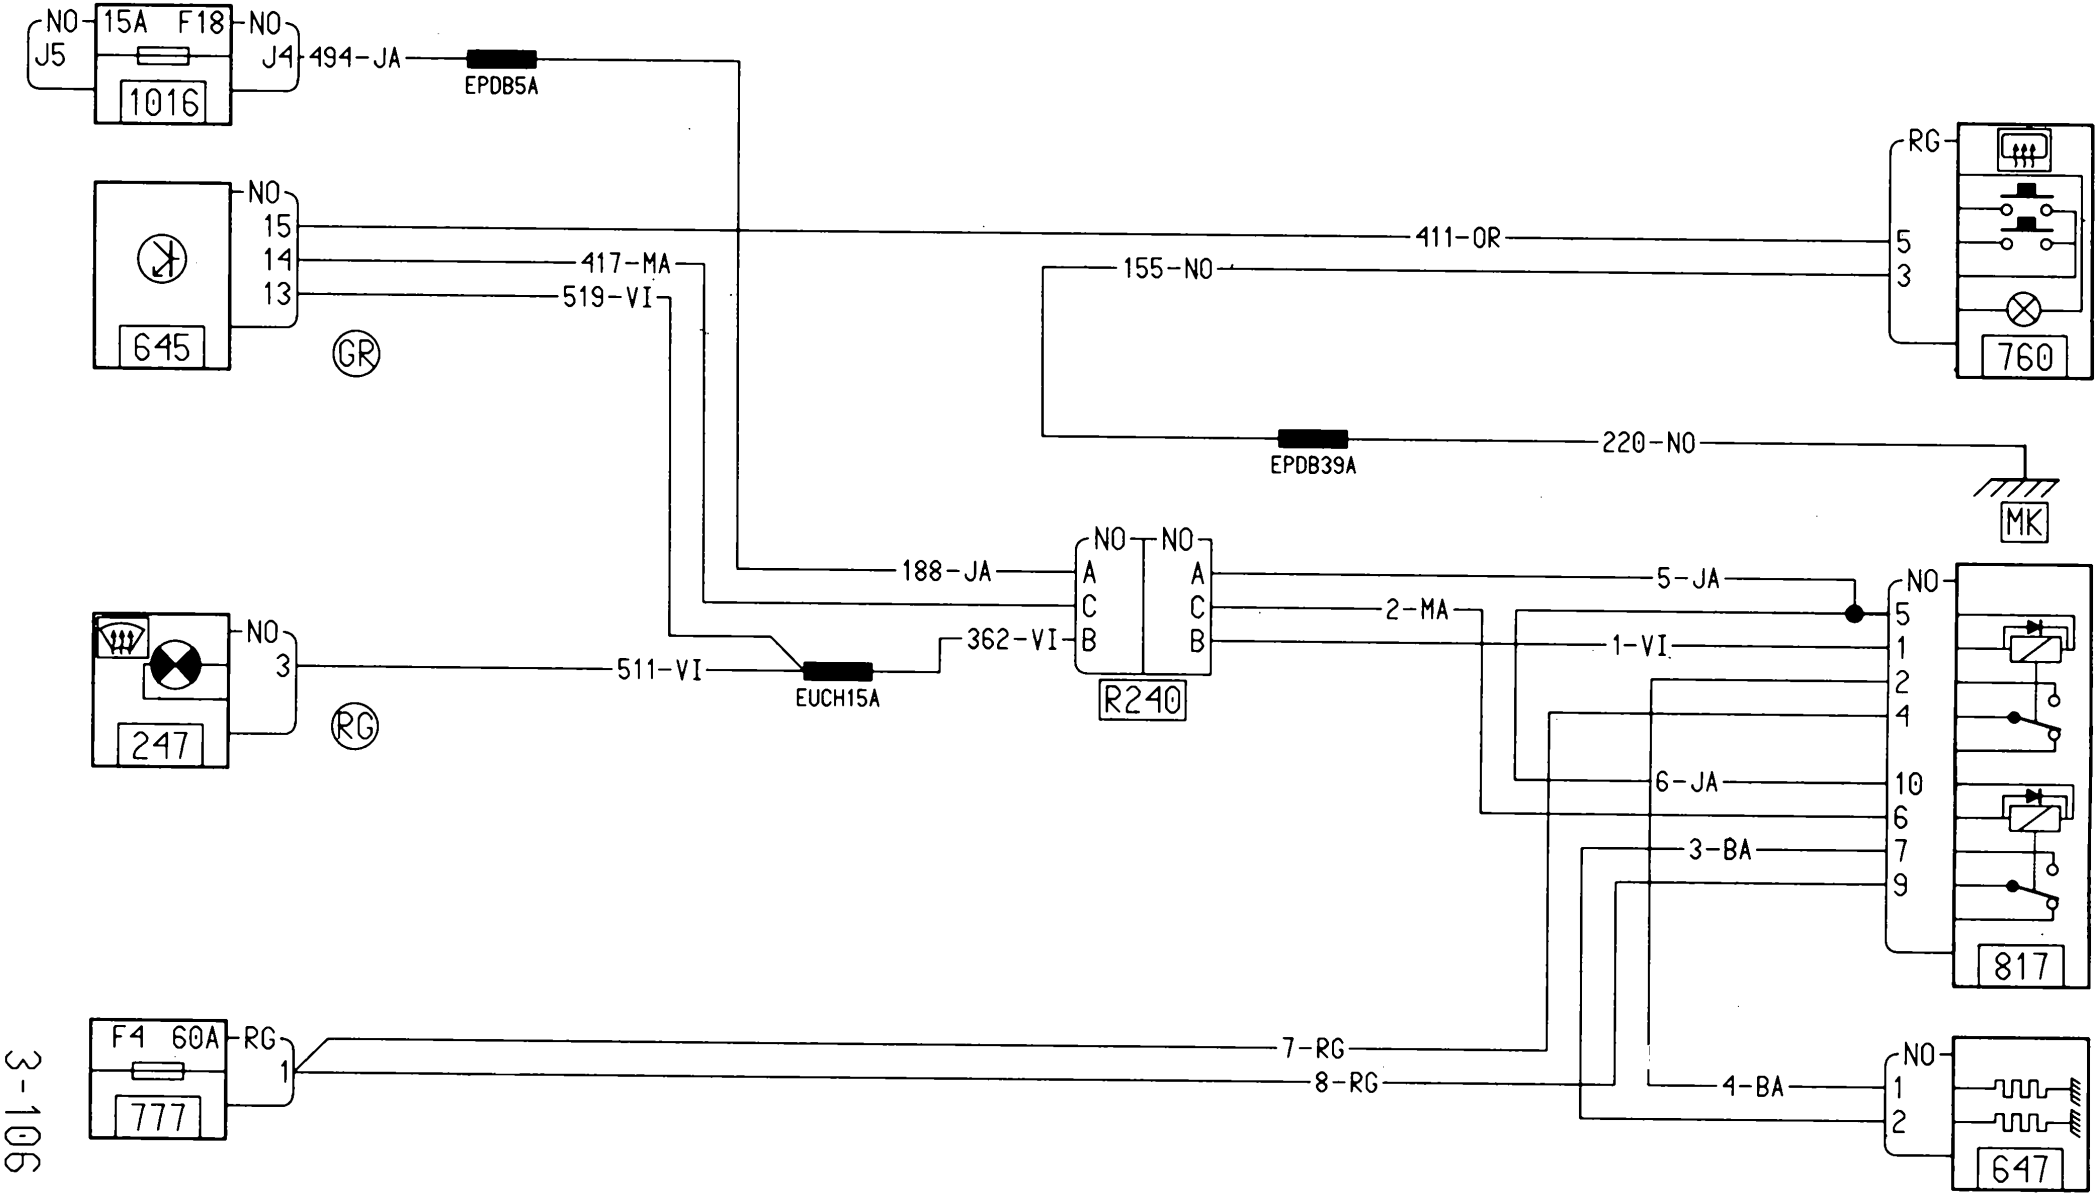
NO
15A F18
NO
J5
J4
1016
494-JA
EPDB5A
645
15
14
13
417-MA
519-VI
GR
411-OR
155-NO
RG
5
3
760
EPDB39A
220-NO
MK
188-JA
NO
A
C
B
NO
A
C
B
R240
362-VI
247
3
511-VI
EUCH15A
RG
5-JA
2-MA
1-VI
6-JA
3-BA
NO
5
1
2
4
10
6
7
9
817
F4 60A
RG
1
777
7-RG
8-RG
4-BA
NO
1
2
647

WINDSCREEN DE-ICING

B64/E2/DD


X642
00

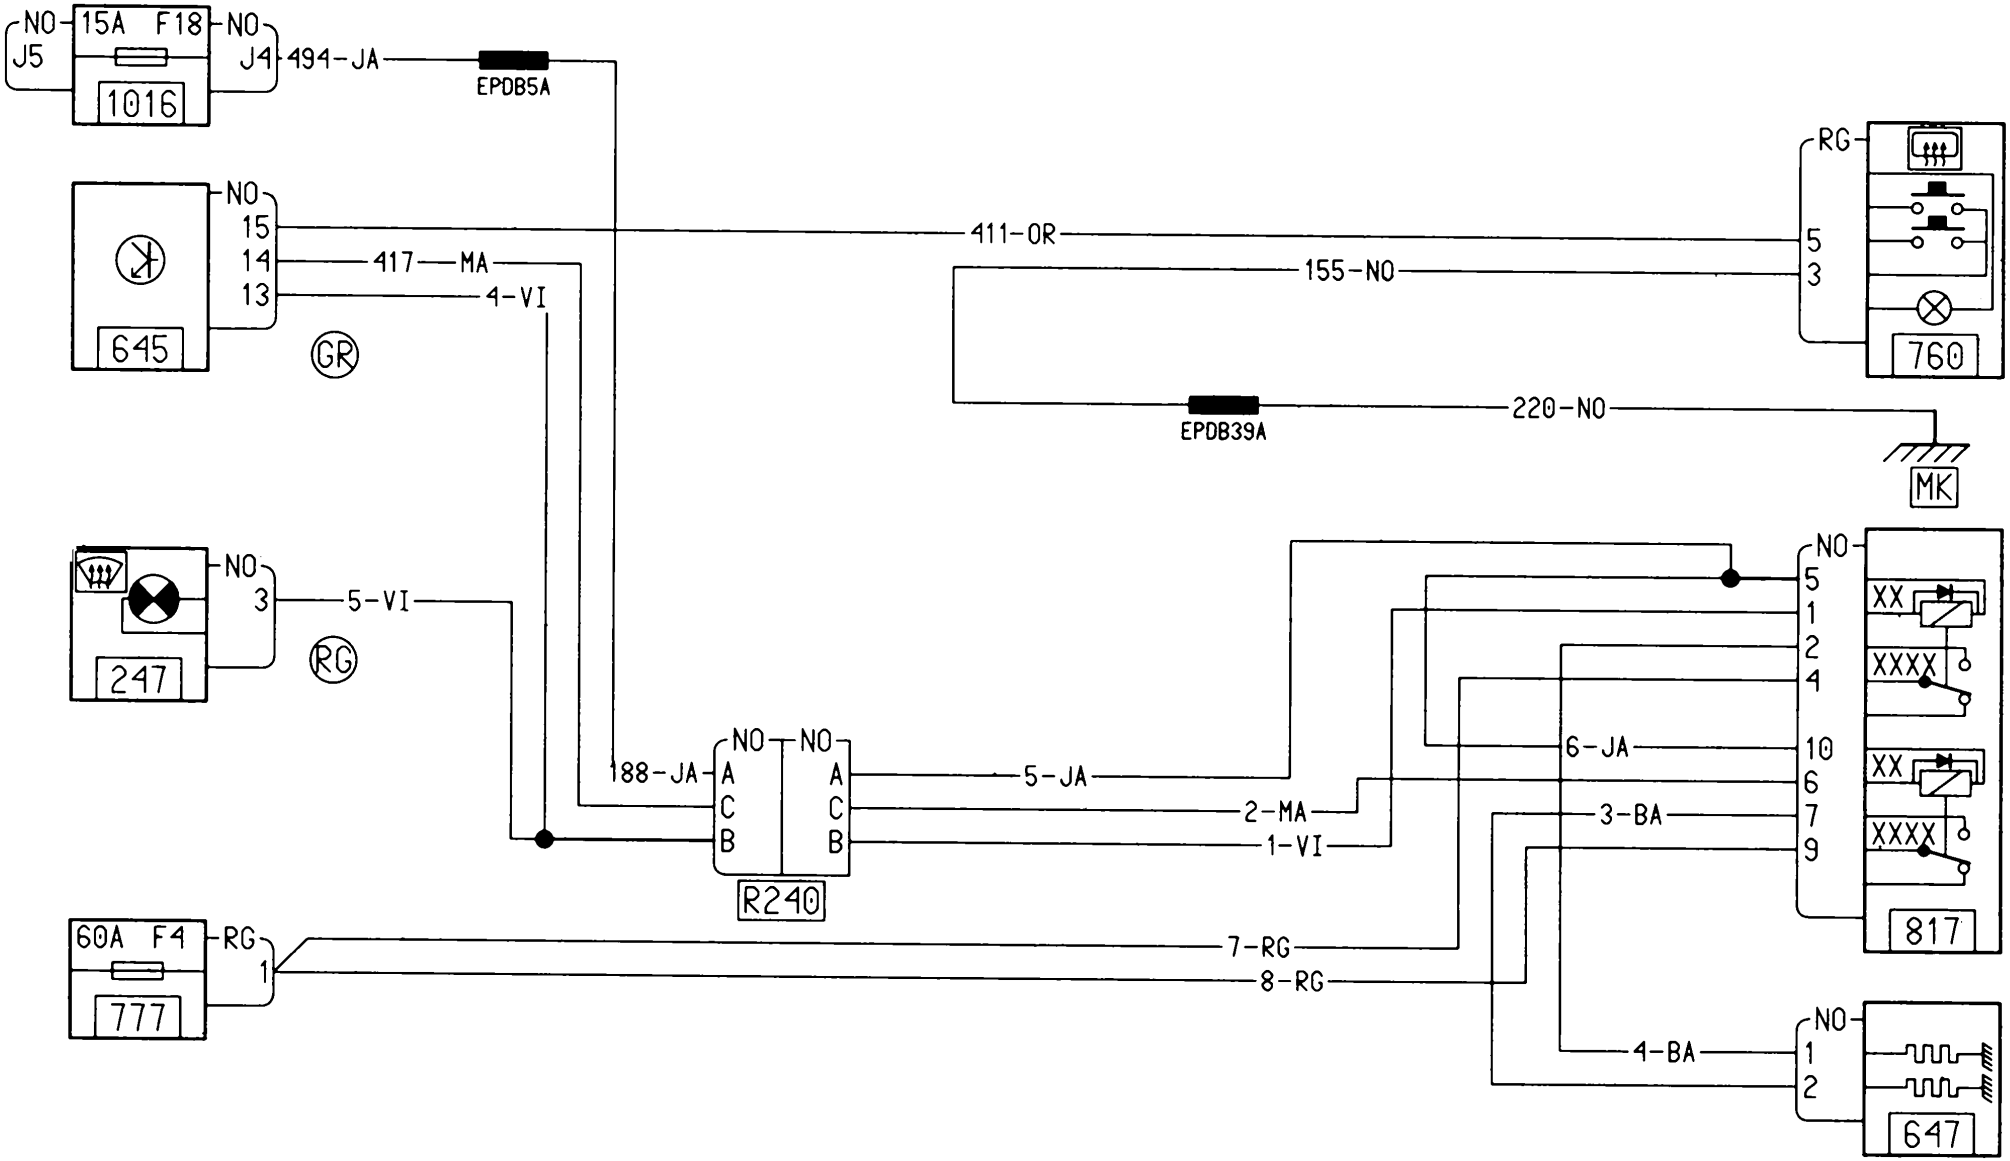


ENGINE SUPPLY DISTRIBUTION

B64,L64/K4M706/CA/MERCOS/BVM5

X642
00

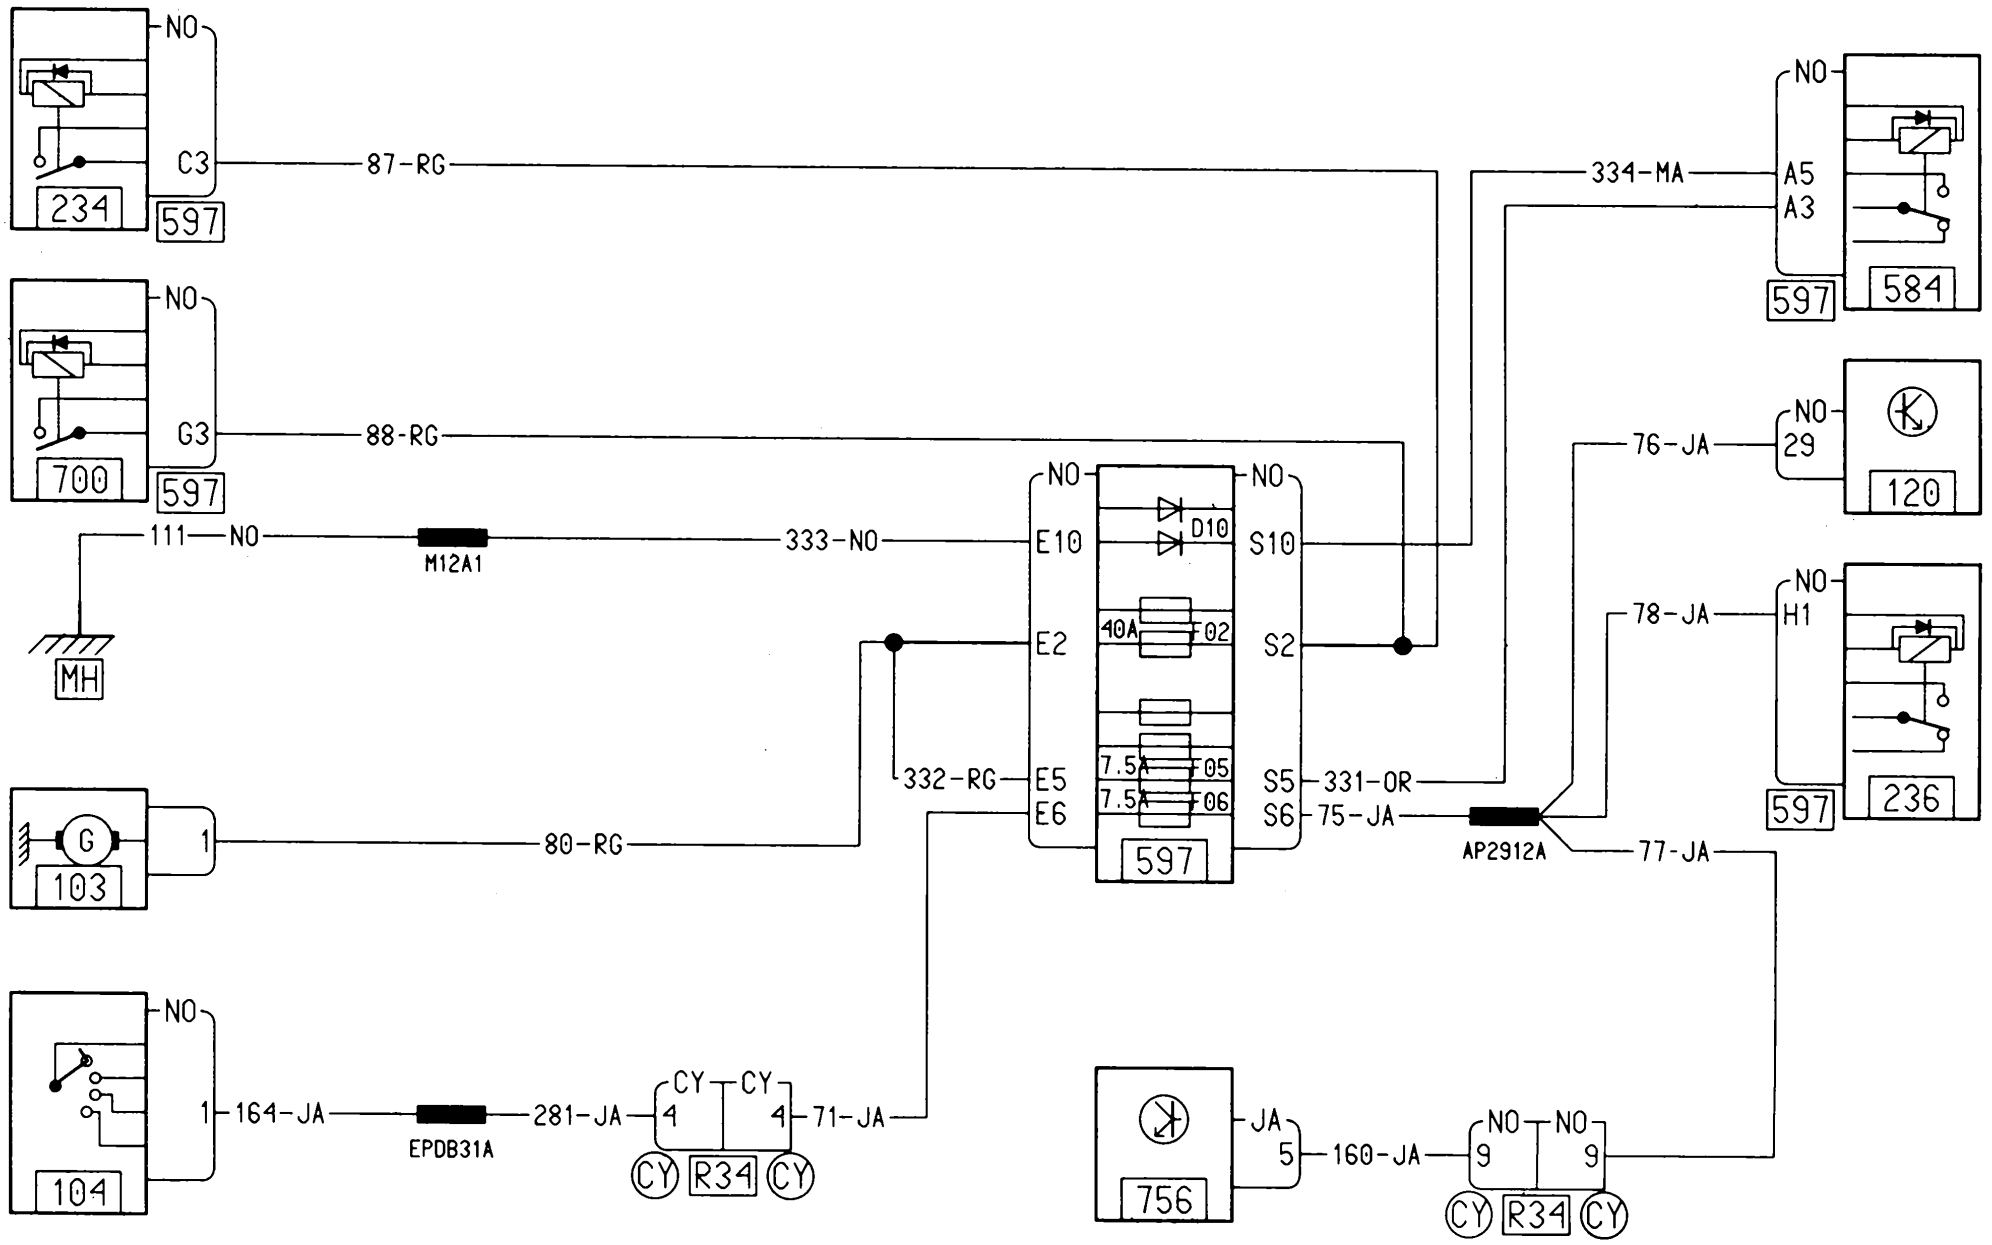


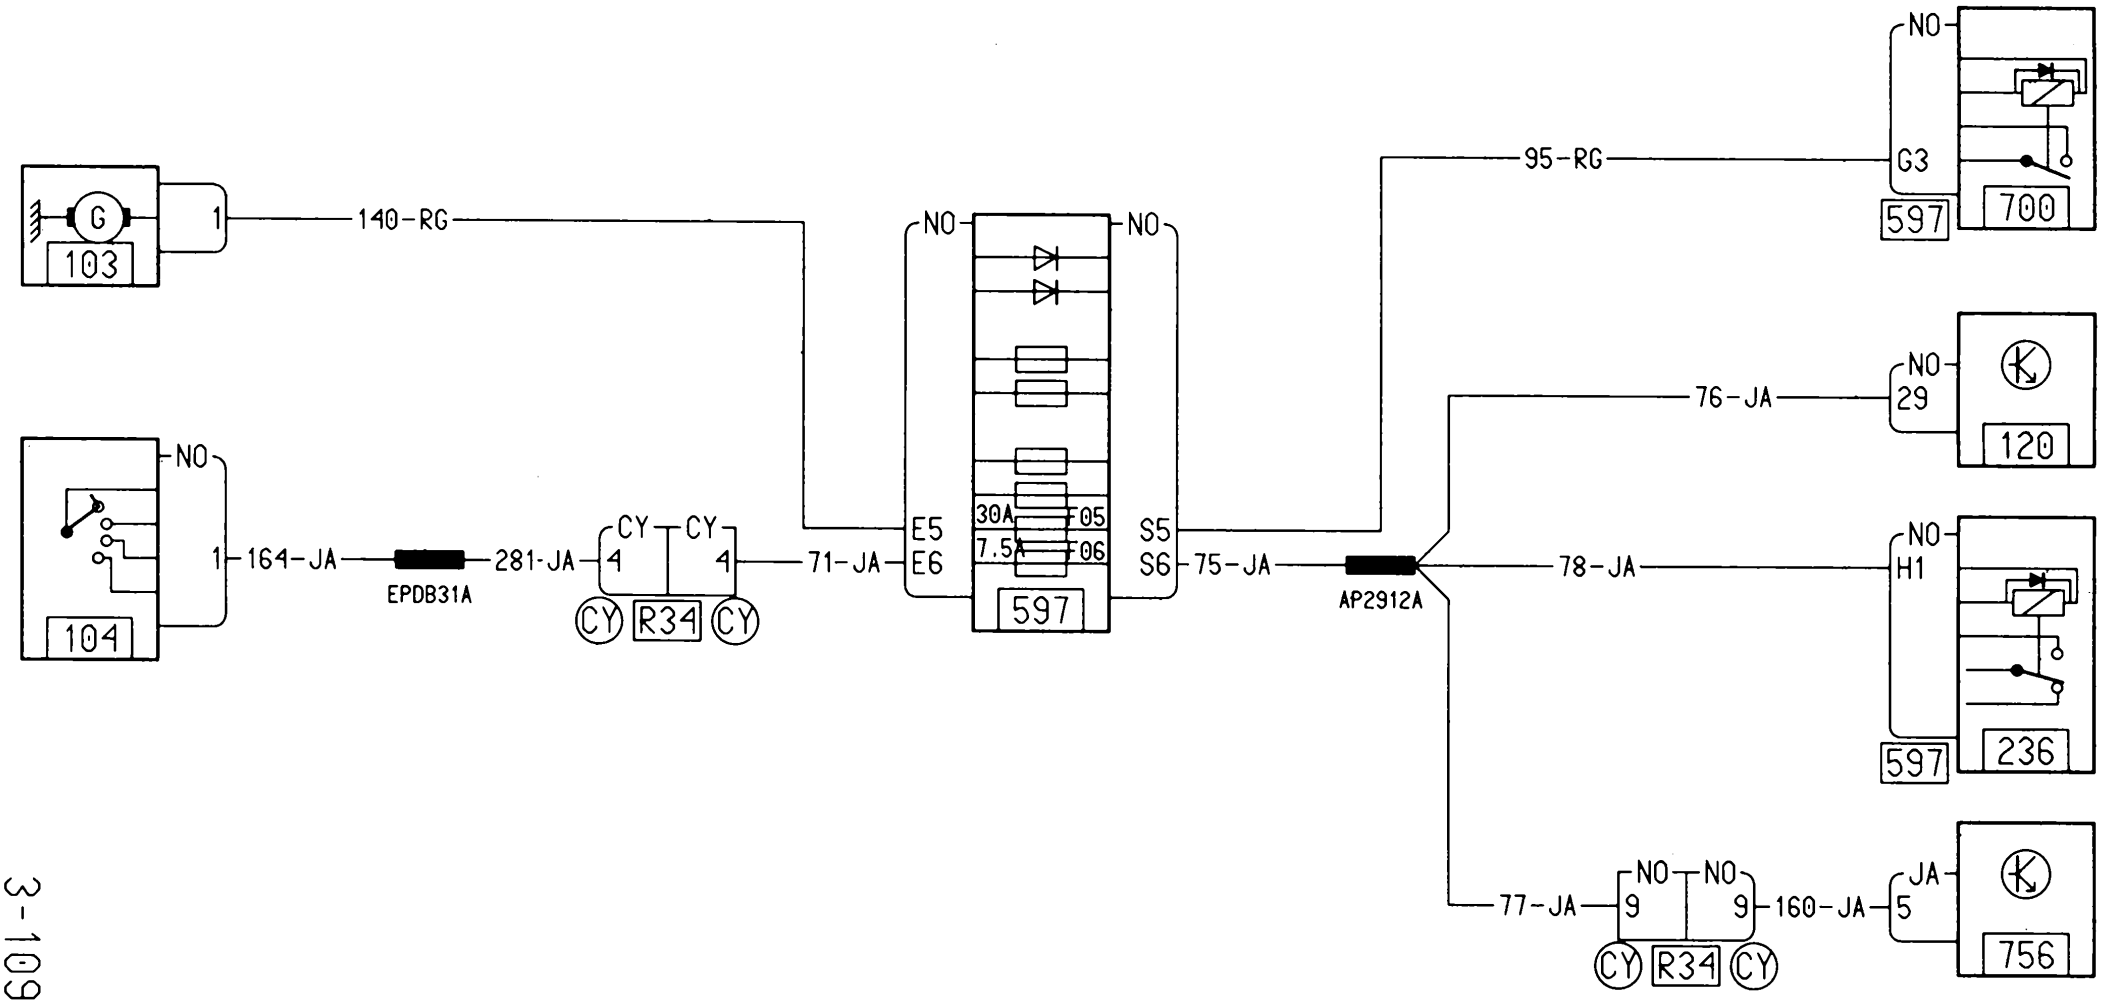

G
103
1
140-RG
NO
104
1
164-JA
EPDB31A
281-JA
CY
4
CY
4
CY
R34
CY
71-JA
NO
NO
E5
E6
30A
F05
7.5A
F06
597
S5
S6
75-JA
AP2912A
95-RG
NO
G3
597
700
76-JA
NO
29
120
78-JA
NO
H1
597
236
77-JA
NO
9
NO
9
CY
R34
CY
160-JA
JA
5
756


ENGINE SUPPLY DISTRIBUTION

B64,L64/K7M704/CHAUFO/MERCOS/BVM5

X642
00

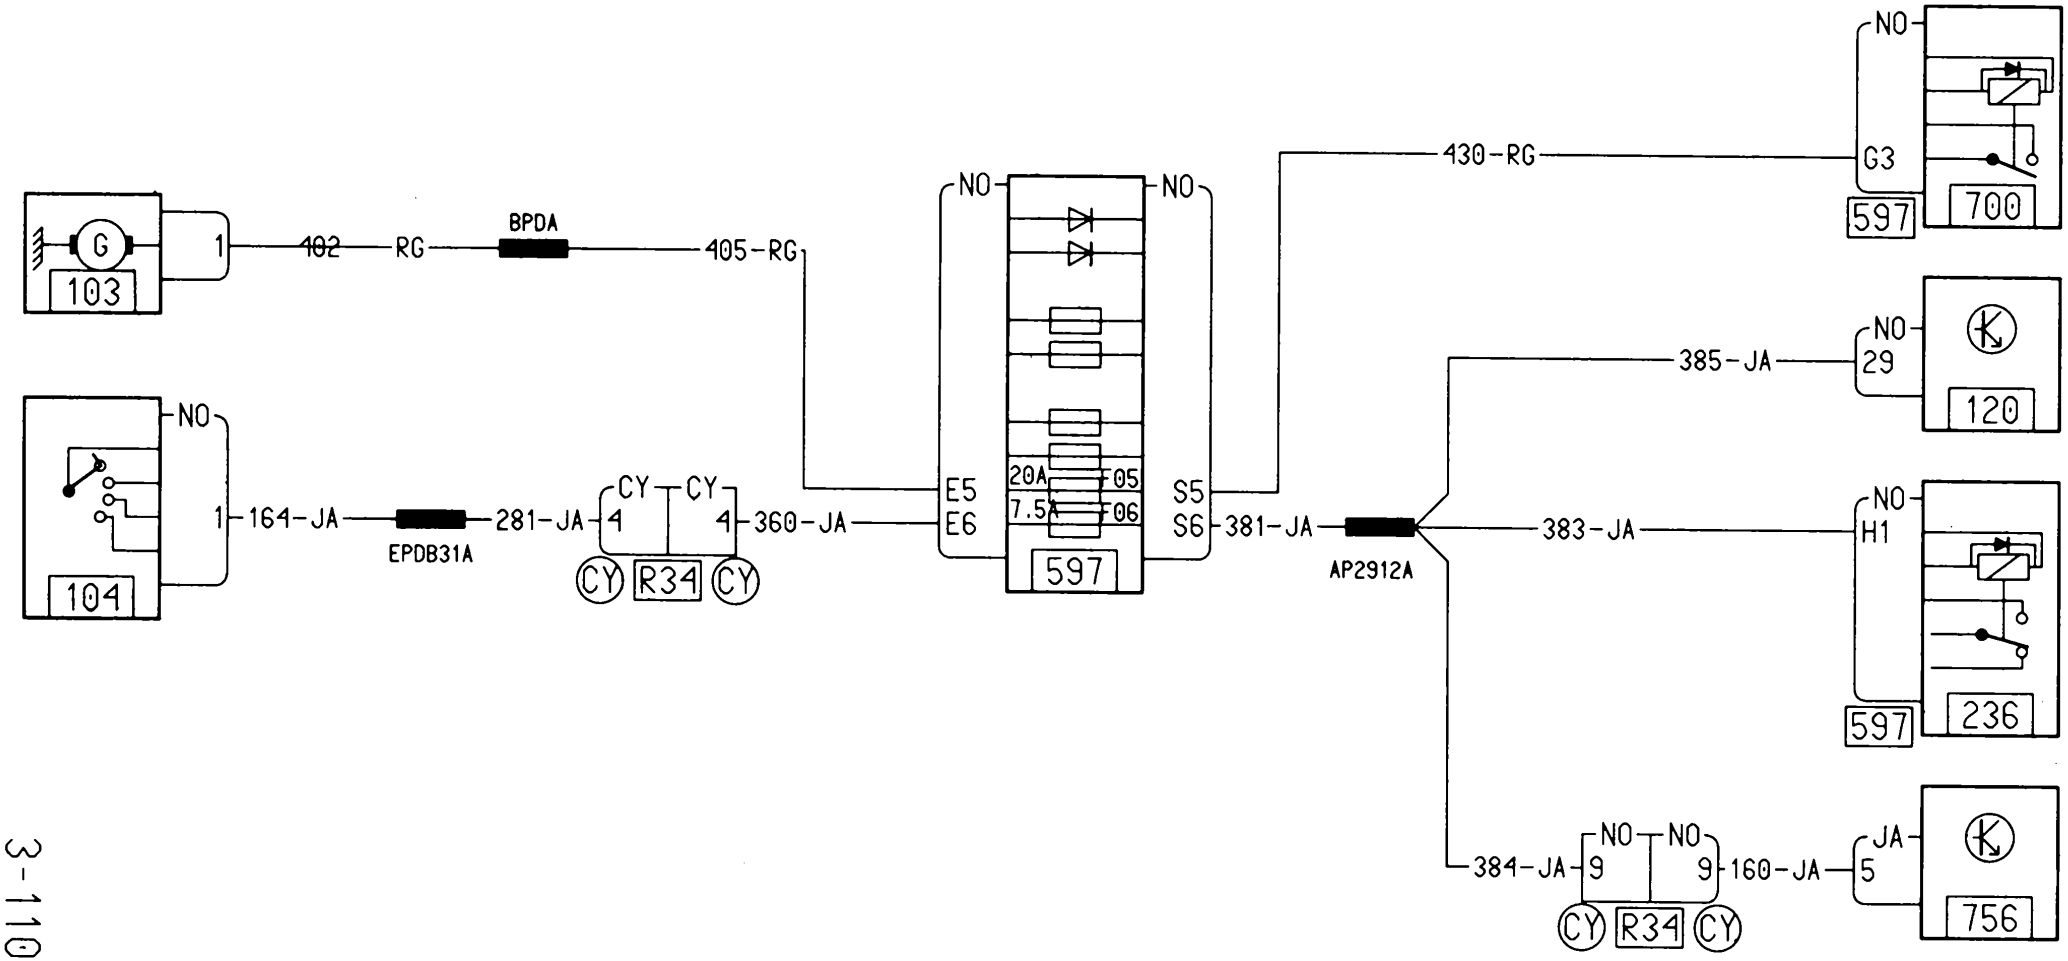

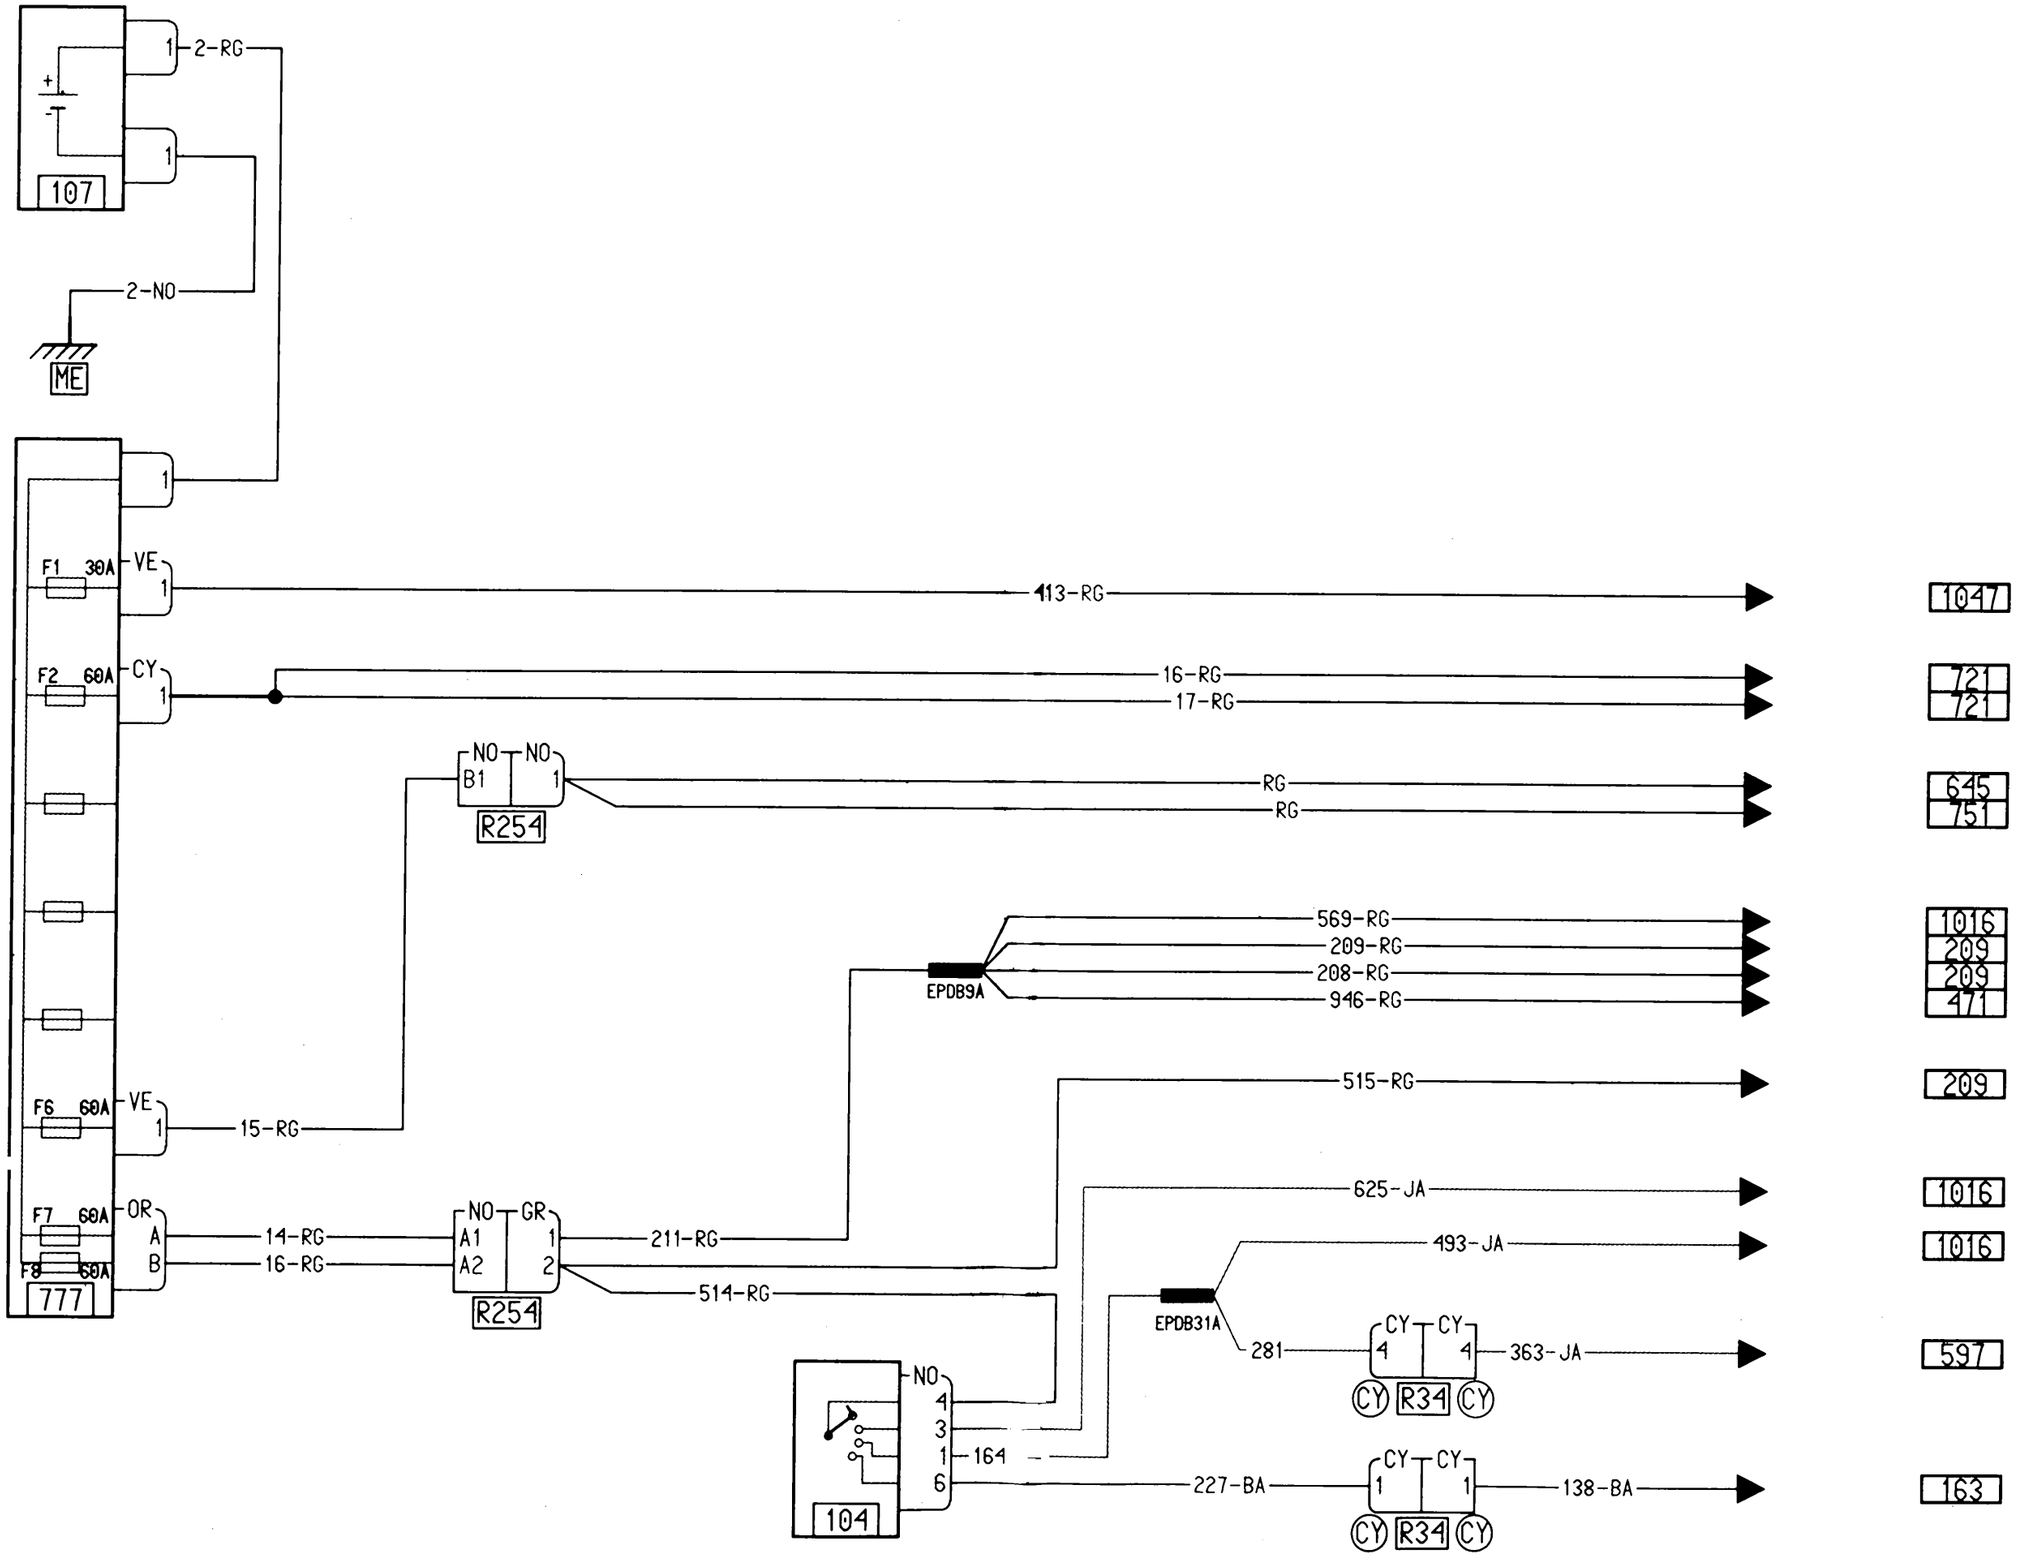

1
2-RG
+
-
1
107
2-NO
ME
1
F1 30A
VE
1
113-RG
1047
F2 60A
CY
1
16-RG
17-RG
721
721
NO
B1
NO
1
R254
RG
RG
645
751
569-RG
209-RG
208-RG
946-RG
EPDB9A
1016
209
209
471
515-RG
209
F6 60A
VE
1
15-RG
625-JA
1016
F7 60A
OR
A
14-RG
NO
A1
GR
1
211-RG
493-JA
1016
F8 60A
B
16-RG
A2
2
514-RG
777
R254
EPDB31A
281
CY
4
CY
4
363-JA
597
CY
R34
CY
NO
4
3
1
164
6
227-BA
CY
1
CY
1
138-BA
163
CY
R34
CY
104

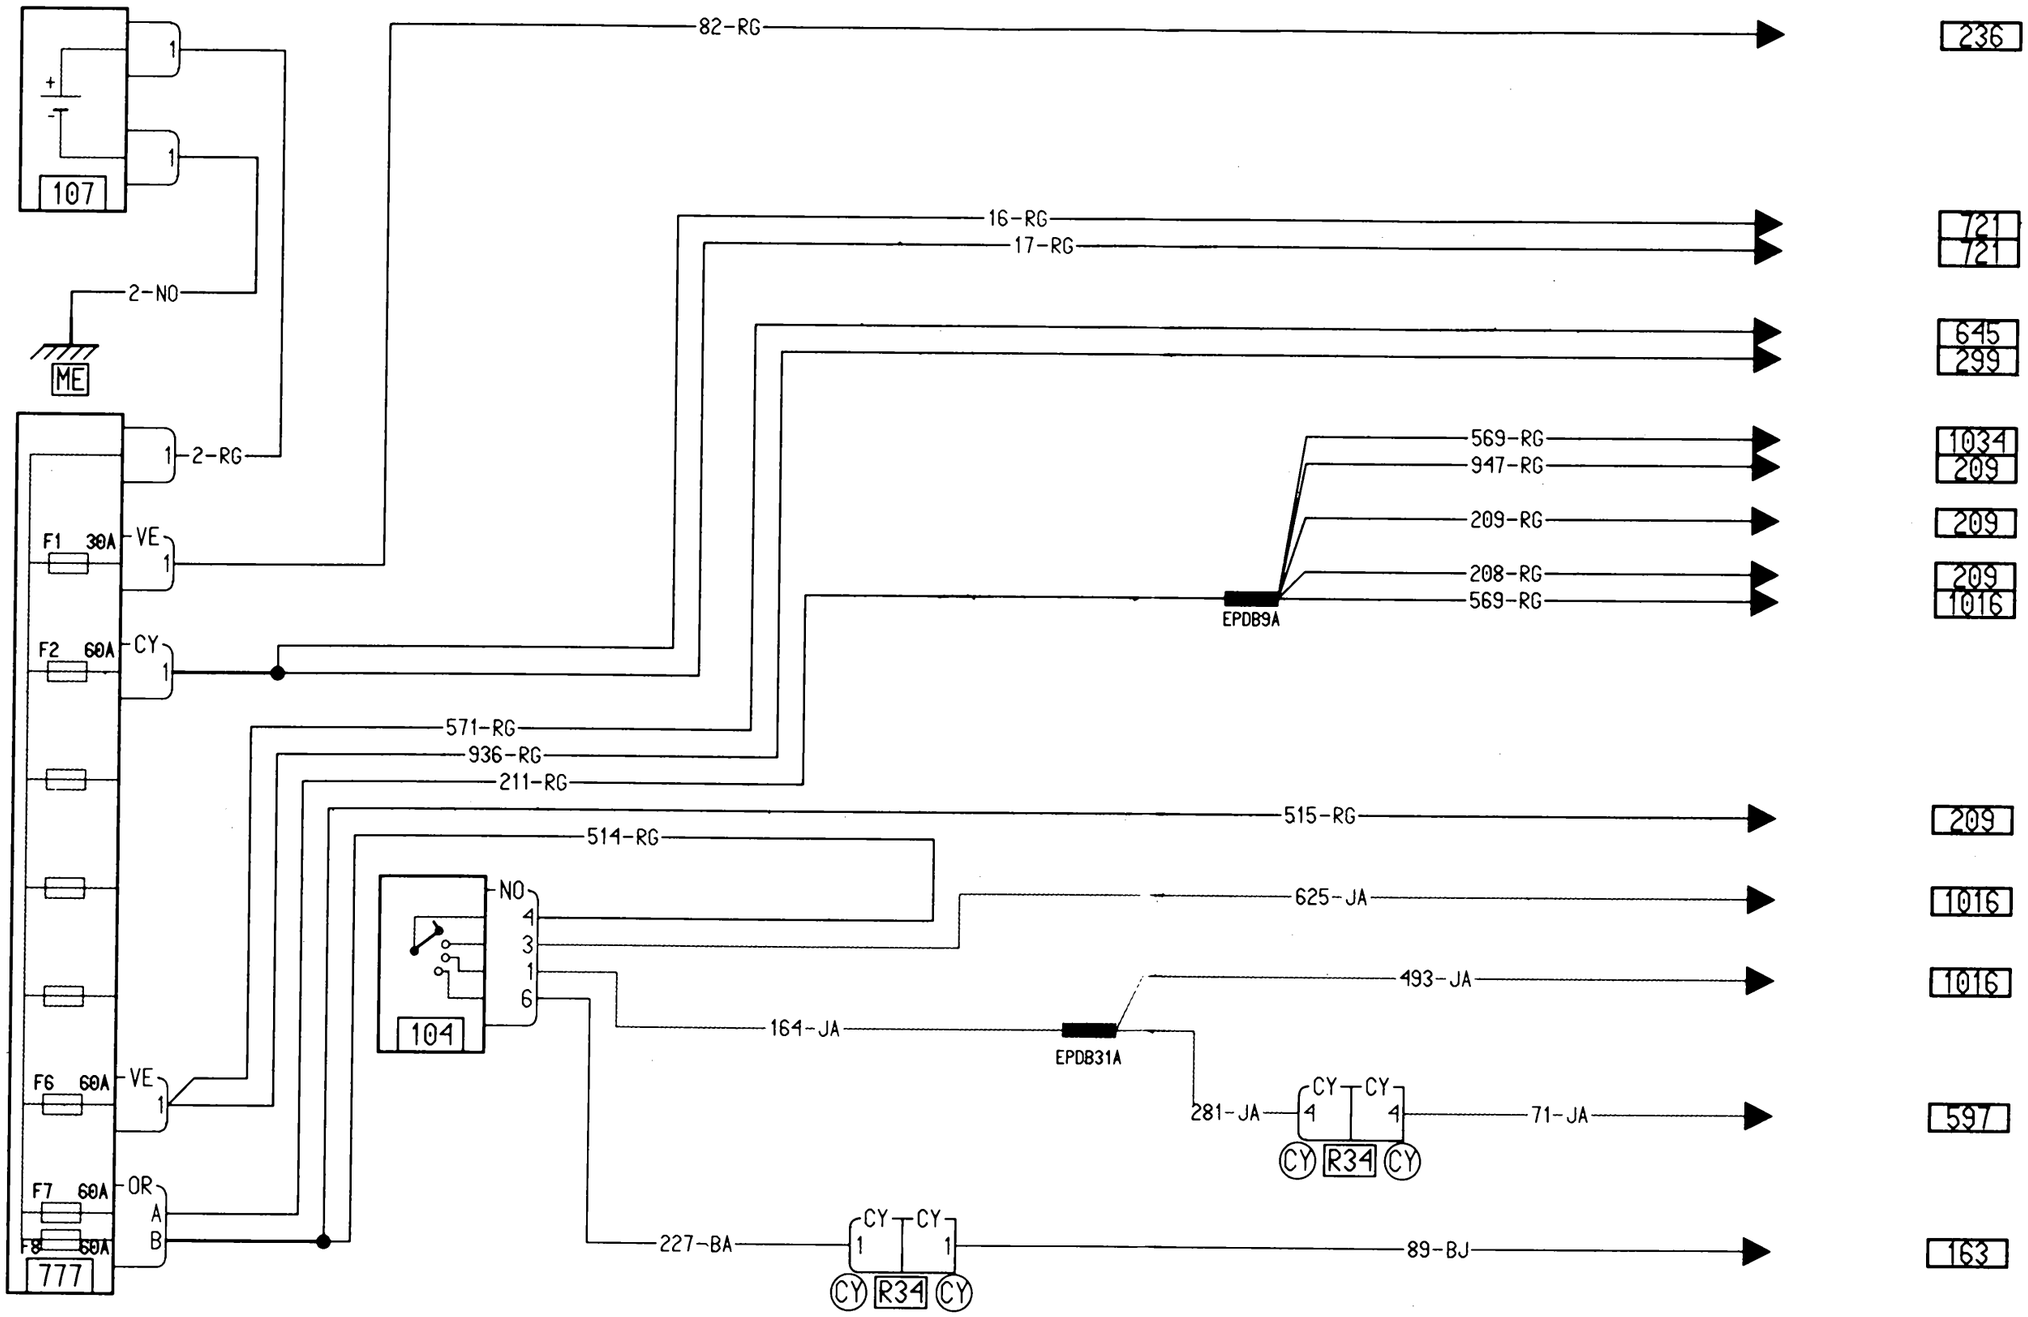
107
1
1
2-NO
ME
1
2-RG
F1 30A
VE
1
F2 60A
CY
1
F6 60A
VE
1
F7 60A
OR
A
B
F8 60A
777
82-RG
16-RG
17-RG
571-RG
936-RG
211-RG
514-RG
NO
4
3
1
6
104
164-JA
EPDB31A
227-BA
CY
1
CY
1
CY
R34
CY
569-RG
947-RG
209-RG
208-RG
569-RG
EPDB9A
515-RG
625-JA
493-JA
281-JA
CY
4
CY
4
CY
R34
CY
71-JA
89-BJ
236
721
721
645
299
1034
209
209
209
1016
209
1016
1016
597
163

MAX DISTRIBUTION FUSE

E64/F5R740,K4J750/DG/ABS/CA/CATOEL/LVAREL/RUNLI/BVM5


X642
00

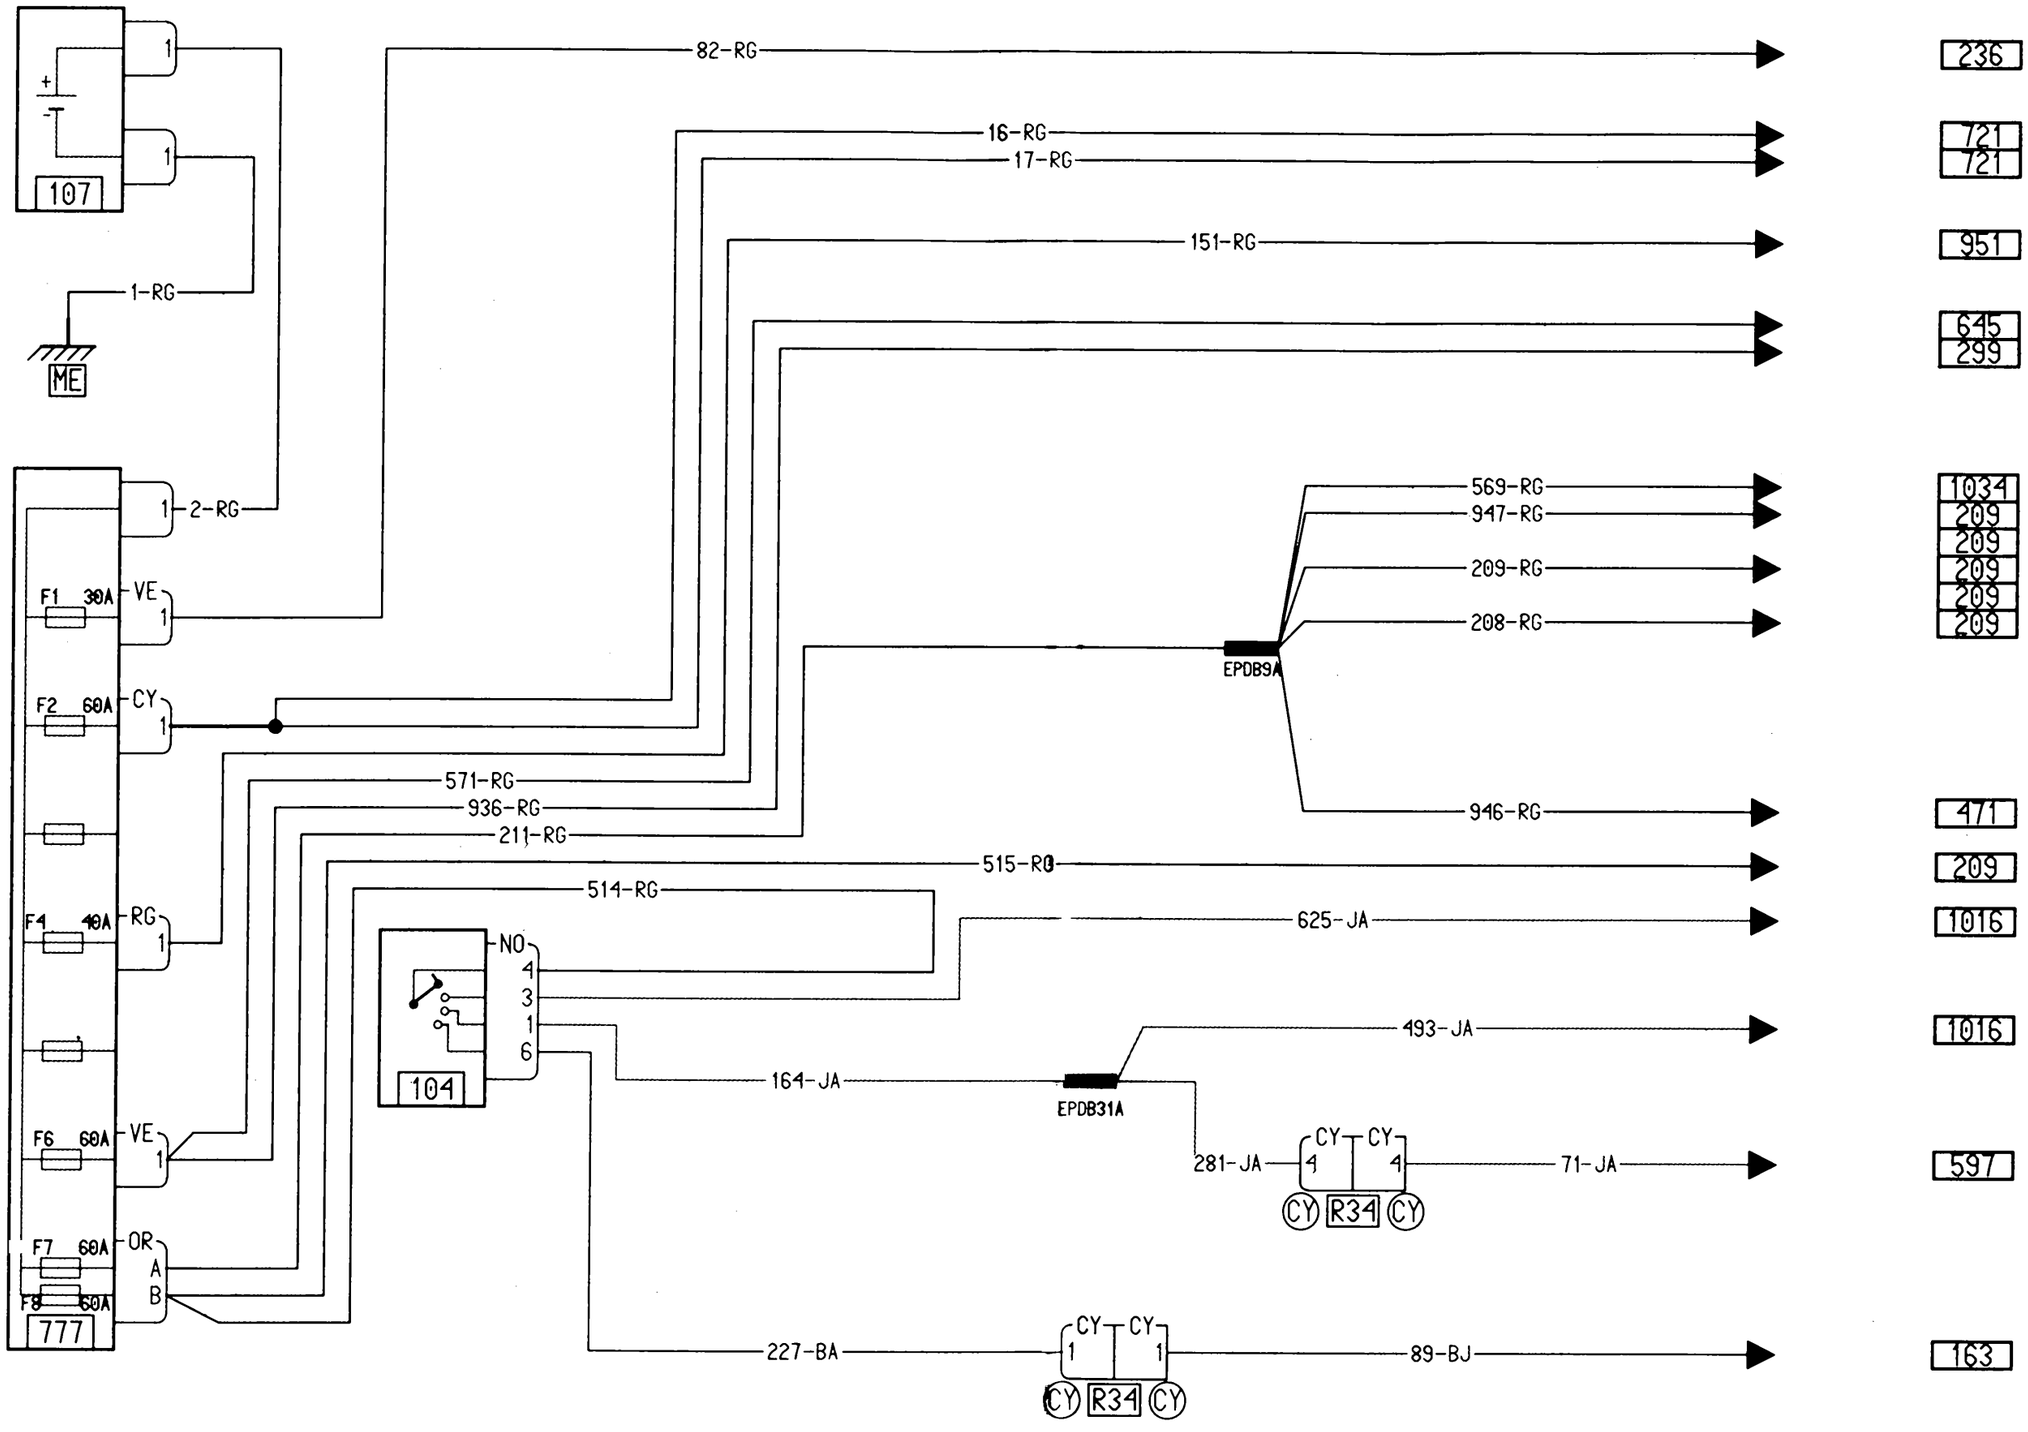



MAX DISTRIBUTION FUSE


B64/E1/F8Q622/BVM5/VHECOL


X642
00

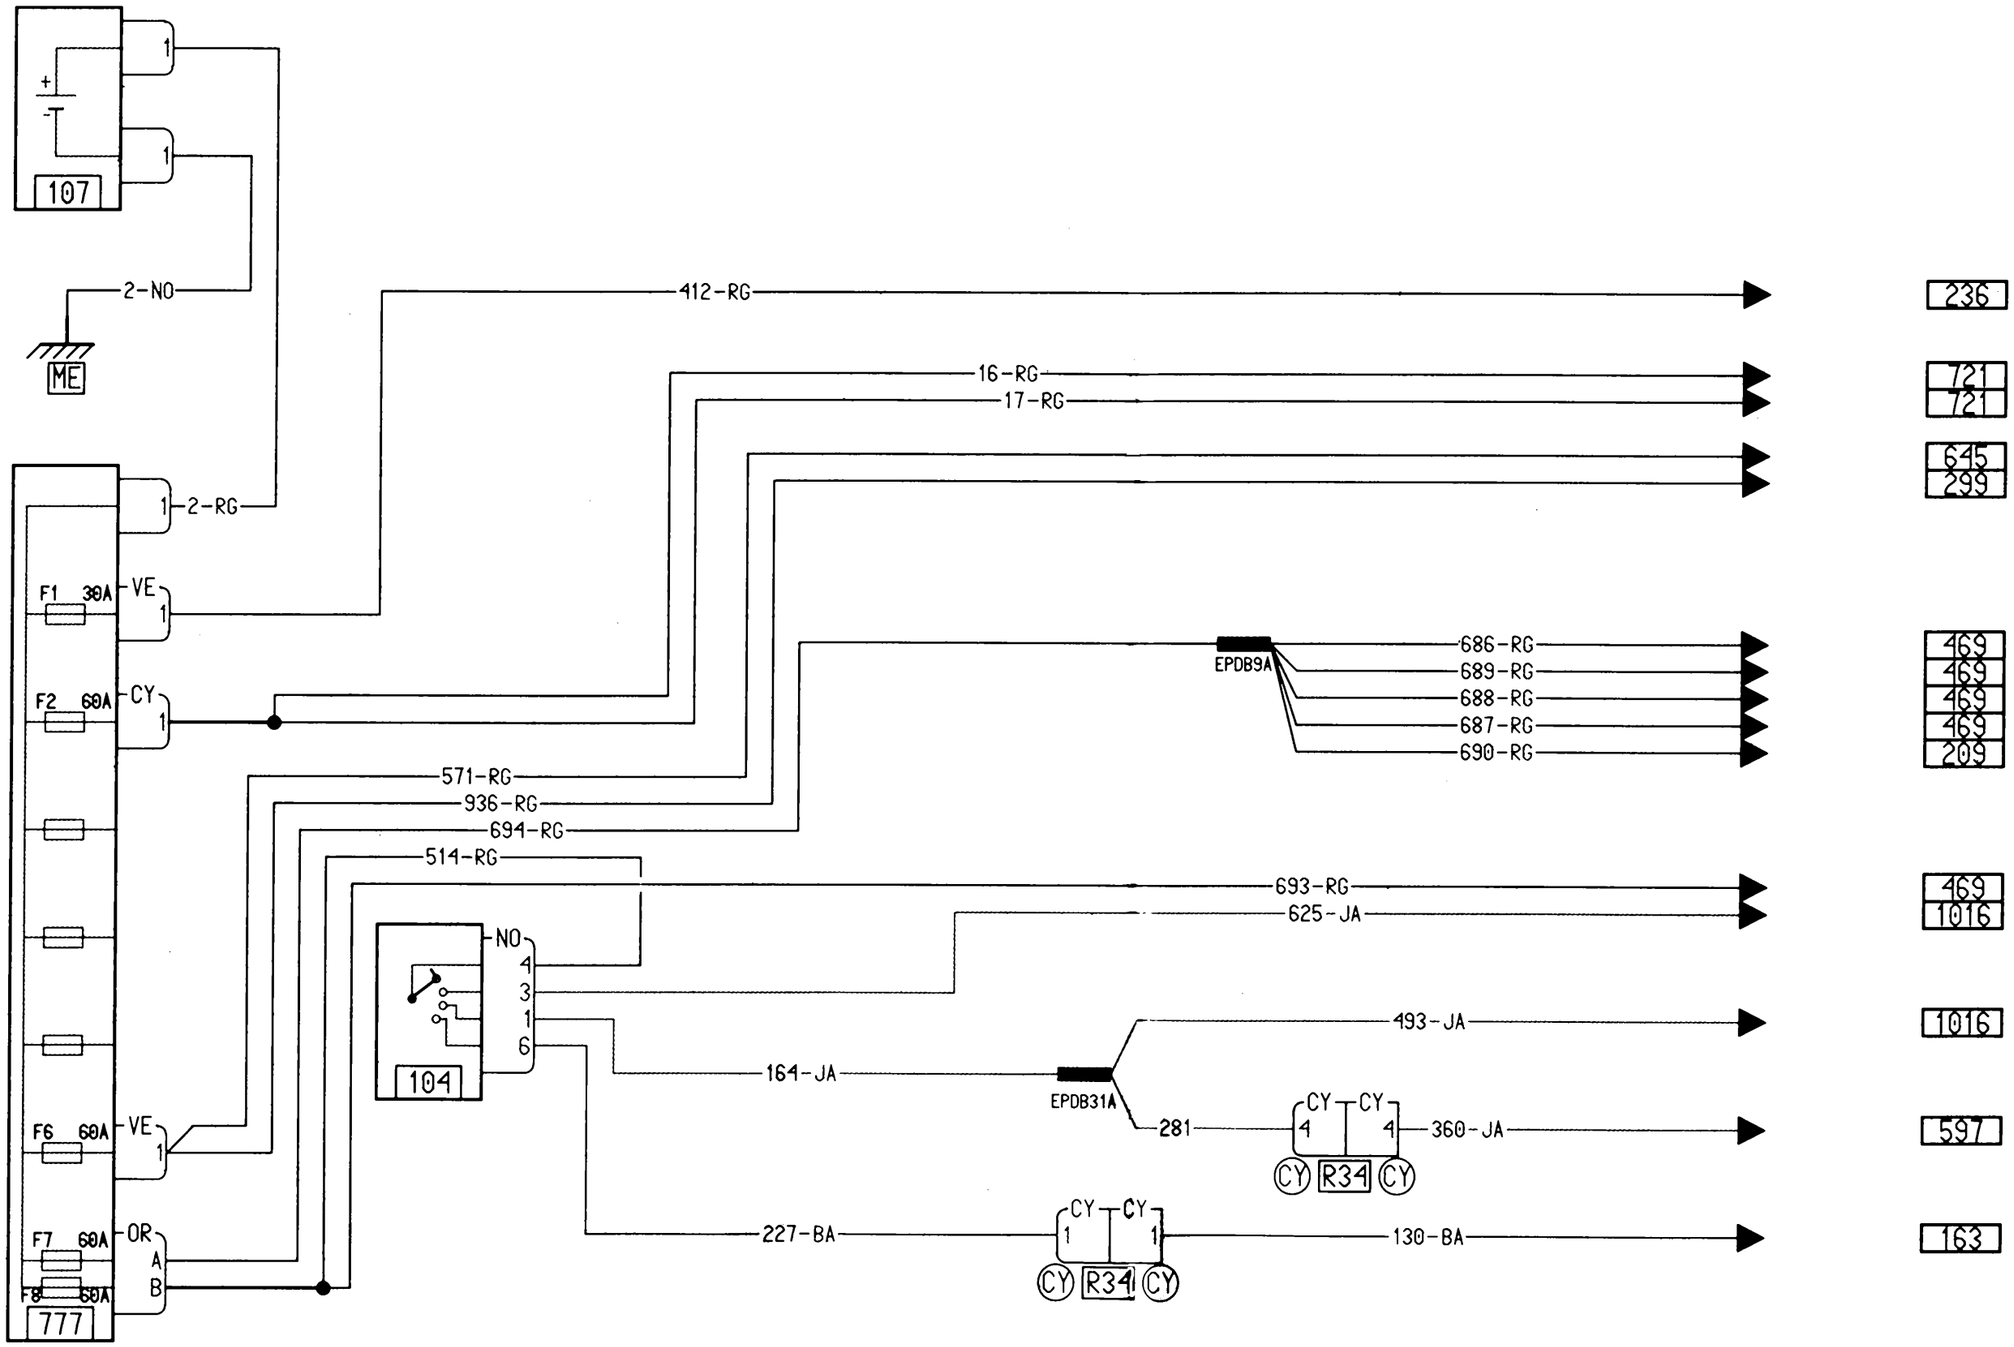


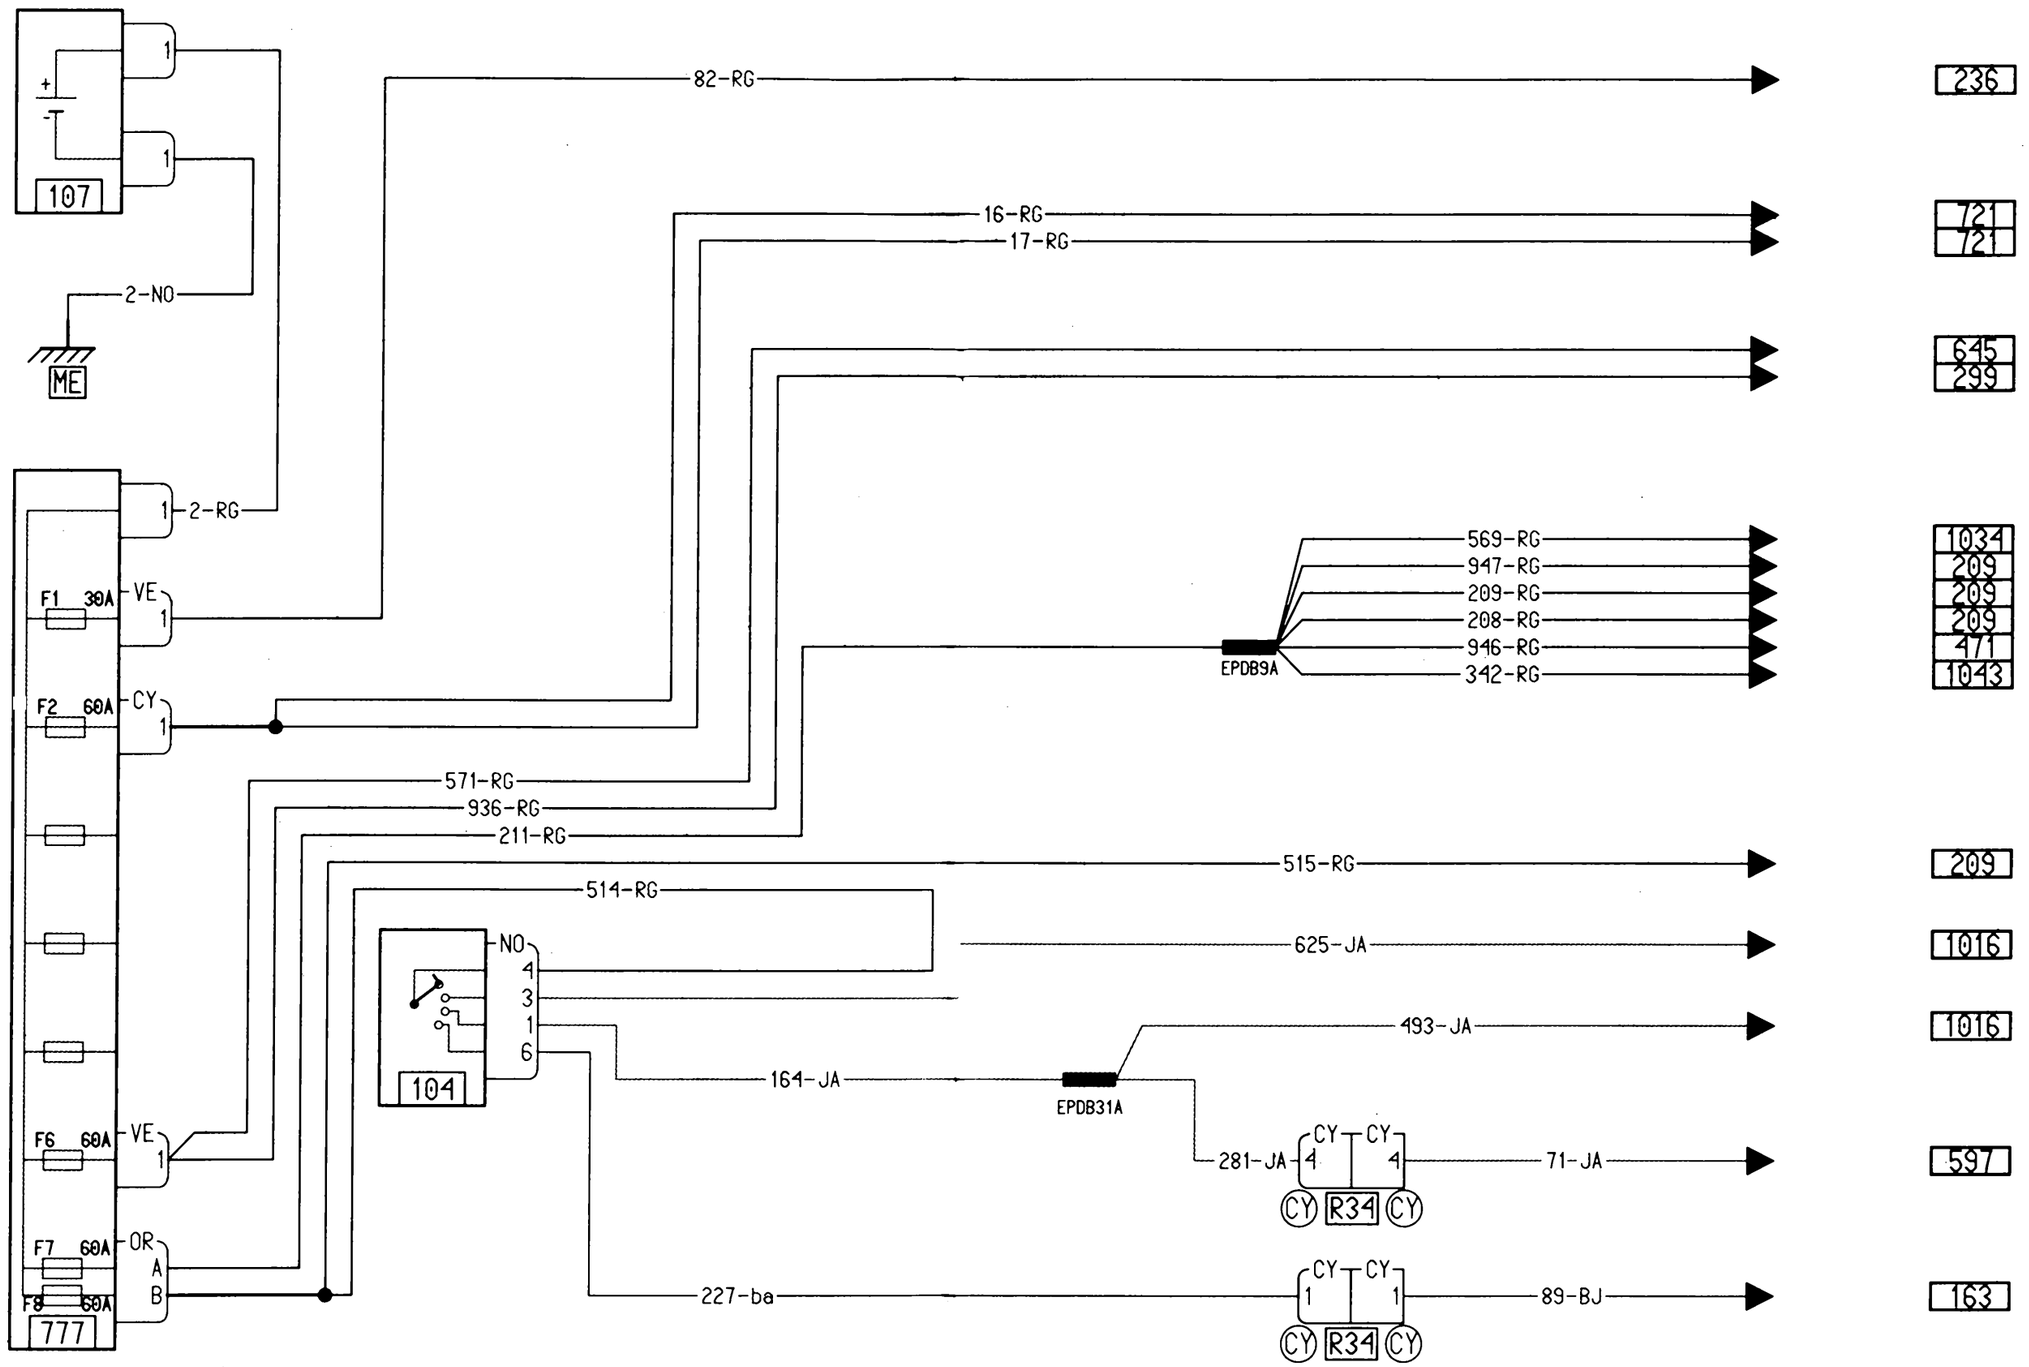

107
1
1
2-NO
ME
777
1
2-RG
F1 30A
VE
1
F2 60A
CY
1
F6 60A
VE
1
F7 60A
F8 60A
OR
A
B
82-RG
16-RG
17-RG
571-RG
936-RG
211-RG
514-RG
104
NO
4
3
1
6
164-JA
EPDB31A
227-ba
569-RG
947-RG
209-RG
208-RG
946-RG
342-RG
EPDB9A
515-RG
625-JA
493-JA
281-JA
CY
4
CY
4
CY
R34
CY
71-JA
89-BJ
CY
1
CY
1
CY
R34
CY
236
721
721
645
299
1034
209
209
209
471
1043
209
1016
1016
597
163

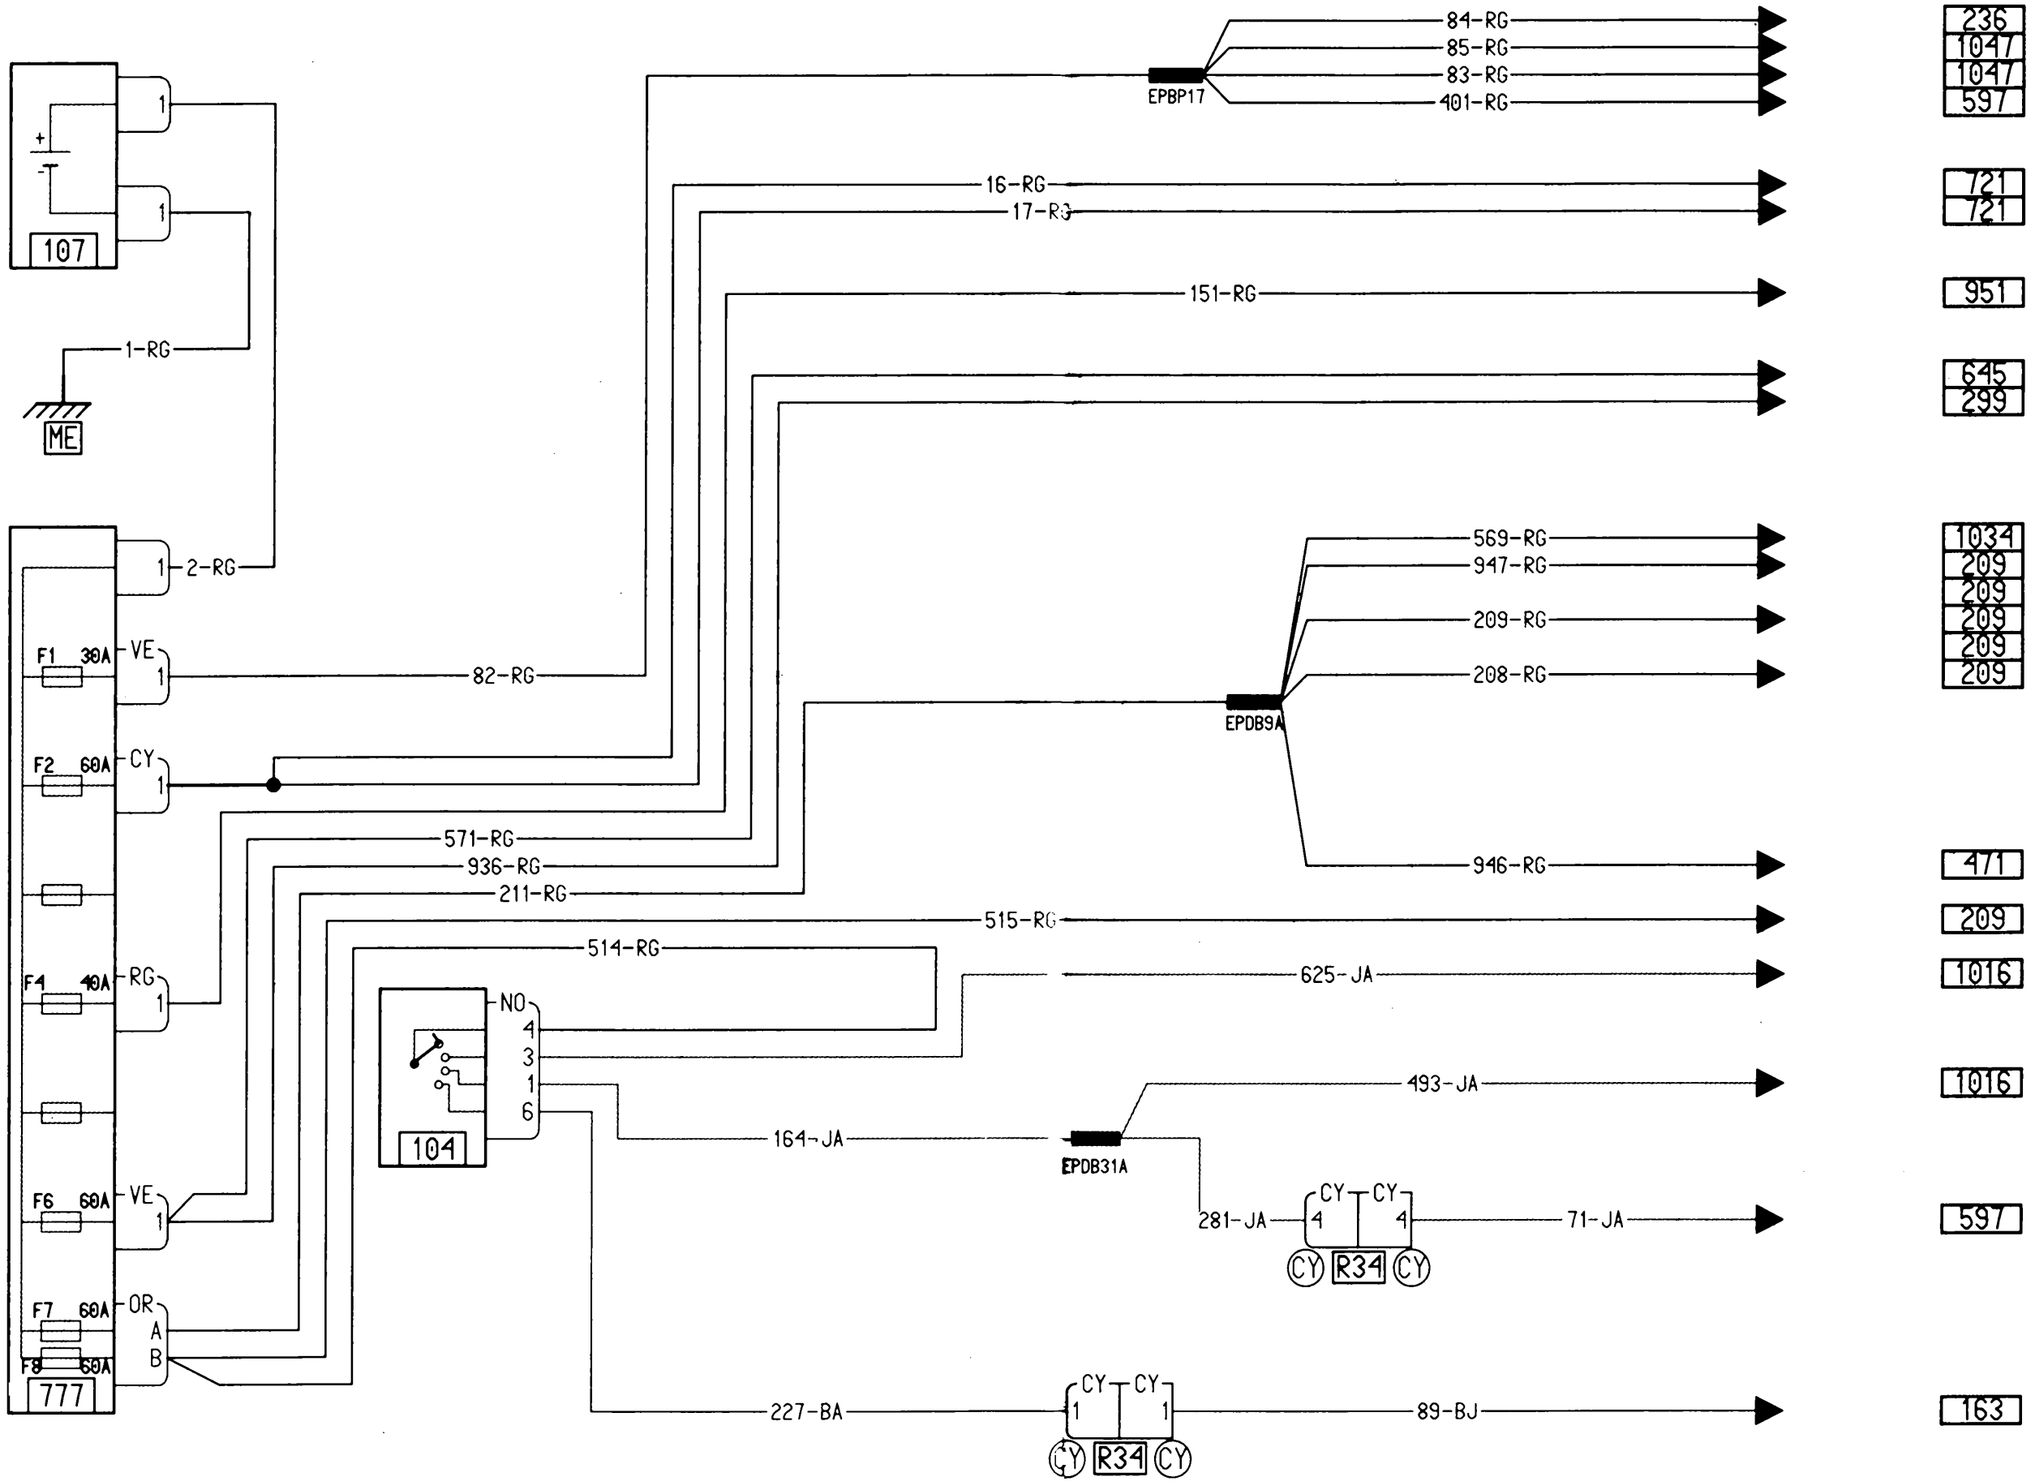

107
1
1
+
-
1-RG
ME
1
2-RG
F1 30A
VE
1
82-RG
F2 60A
CY
1
F4 40A
RG
1
F6 60A
VE
1
F7 60A
OR
A
B
F8 60A
777
EPBP17
84-RG
85-RG
83-RG
401-RG
236
1047
1047
597
16-RG
17-RG
721
721
151-RG
951
645
299
EPDB9A
569-RG
947-RG
209-RG
208-RG
1034
209
209
209
209
946-RG
471
571-RG
936-RG
211-RG
515-RG
209
514-RG
625-JA
1016
104
NO
4
3
1
6
493-JA
1016
164-JA
EPDB31A
281-JA
CY
4
CY
4
CY
R34
CY
71-JA
597
227-BA
CY
1
CY
1
CY
R34
CY
89-BJ
163

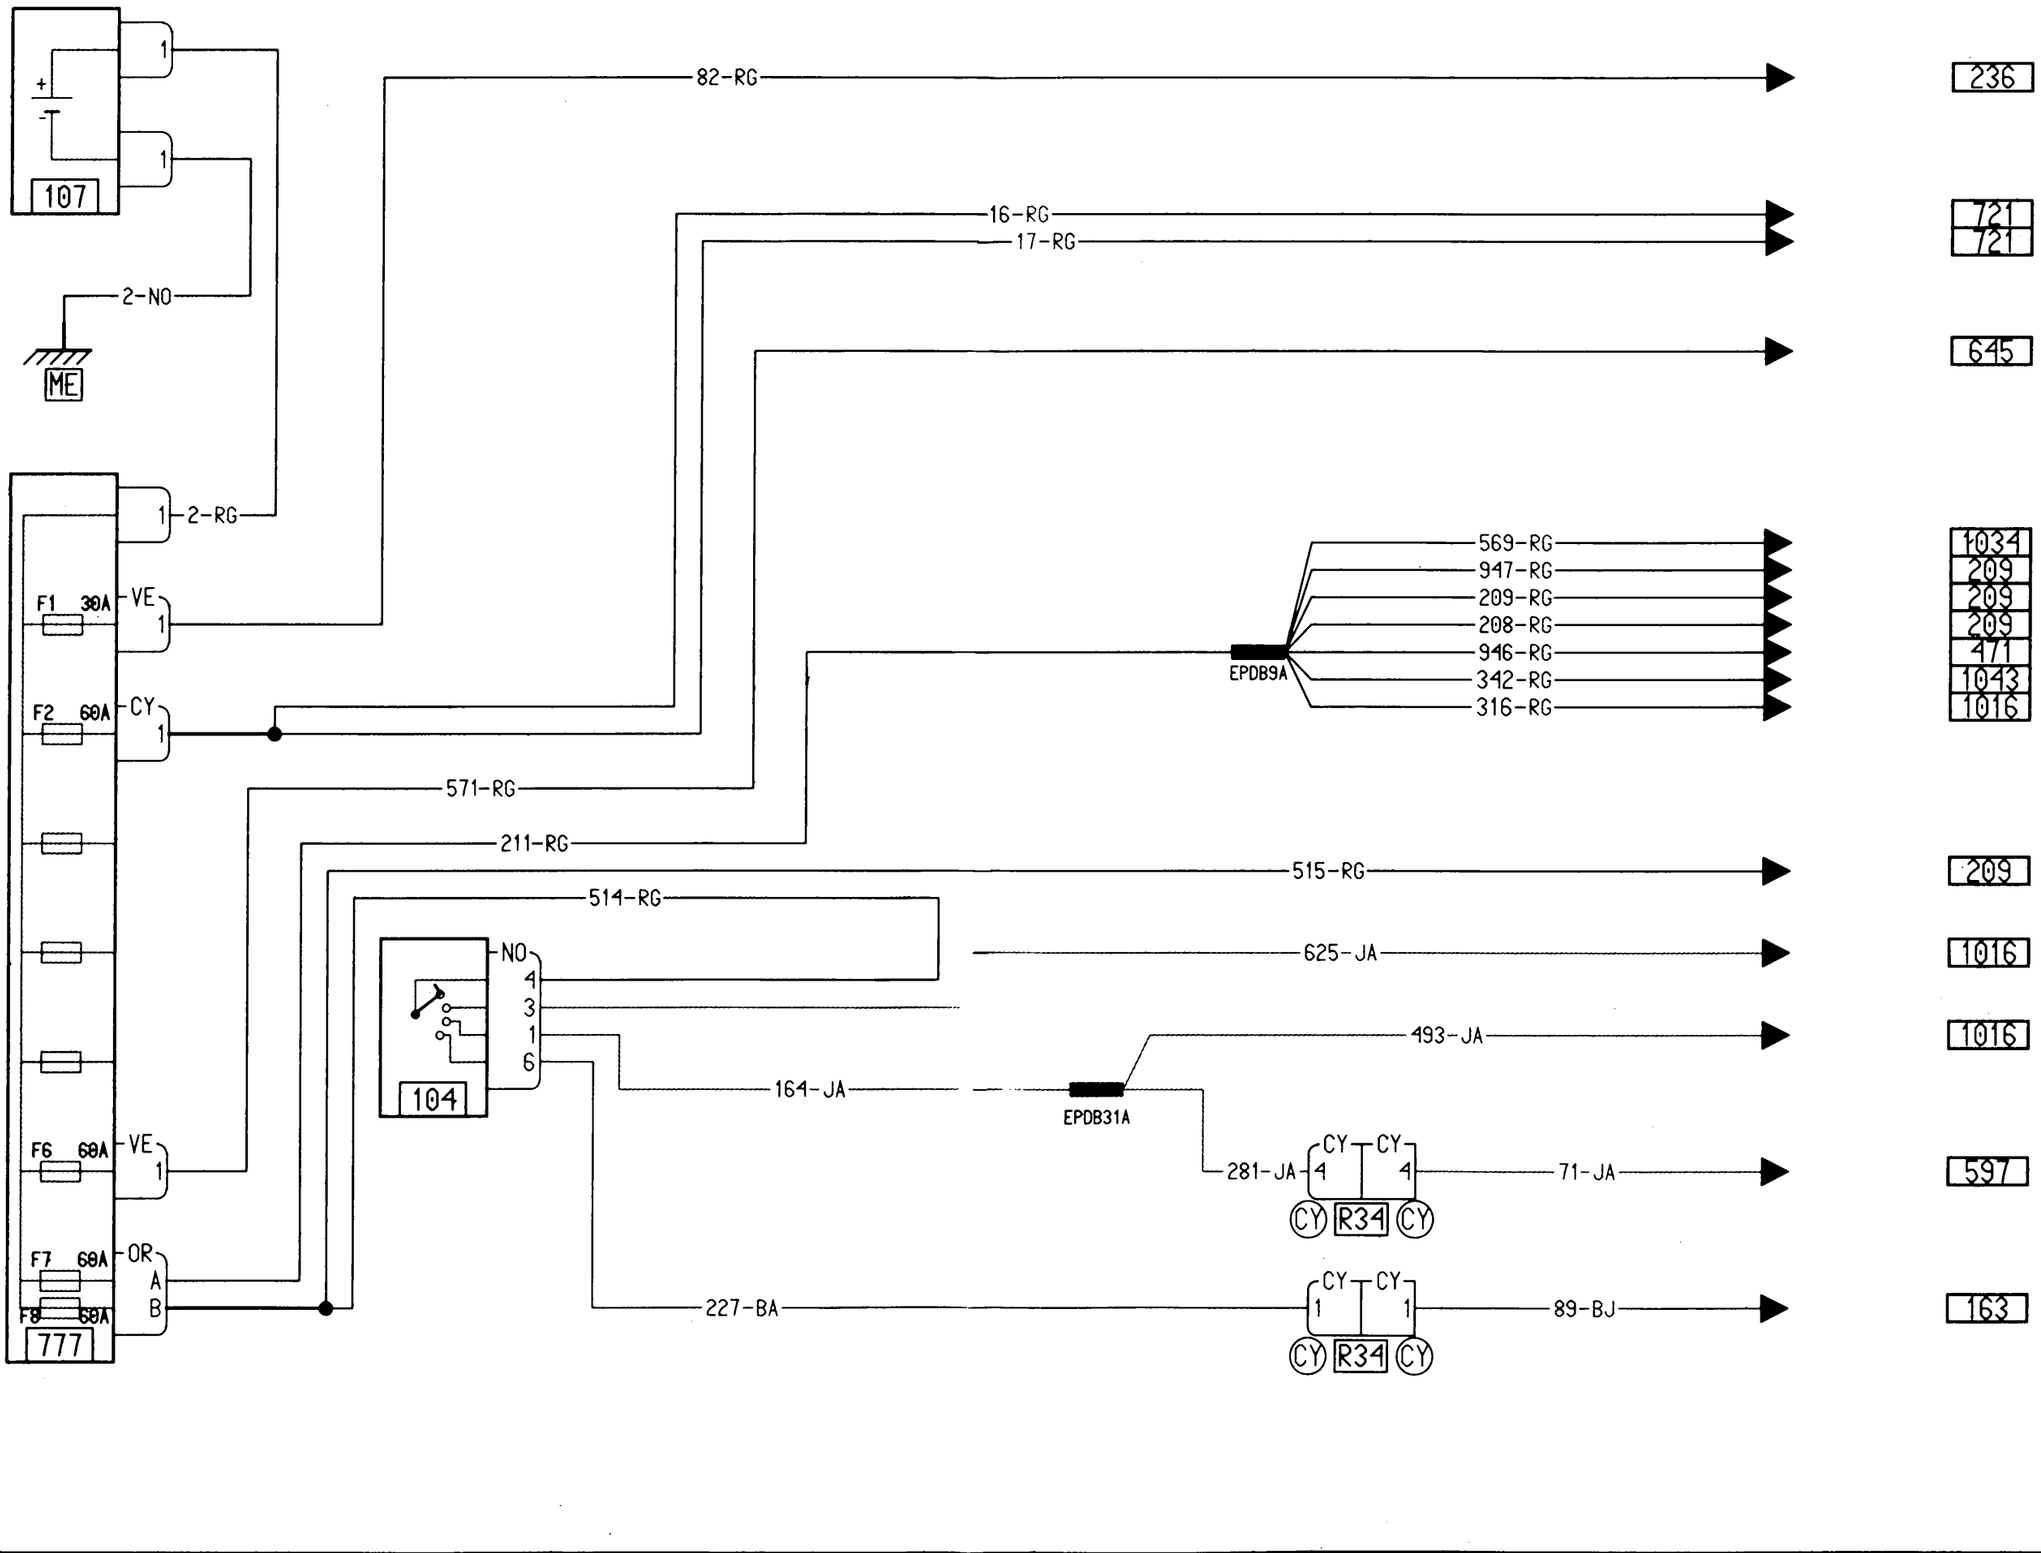

107
1
1
+
-
2-NO
ME
82-RG
236
16-RG
17-RG
721
721
645
1
2-RG
F1 30A
VE
1
F2 60A
CY
1
569-RG
947-RG
209-RG
208-RG
946-RG
342-RG
316-RG
EPDB9A
1034
209
209
209
471
1043
1016
571-RG
211-RG
515-RG
209
514-RG
NO
4
3
1
6
104
625-JA
1016
493-JA
1016
164-JA
EPDB31A
F6 60A
VE
1
281-JA
CY
4
CY
4
71-JA
597
CY
R34
CY
F7 60A
OR
A
B
F8 60A
777
227-BA
CY
1
CY
1
89-BJ
163
CY
R34
CY

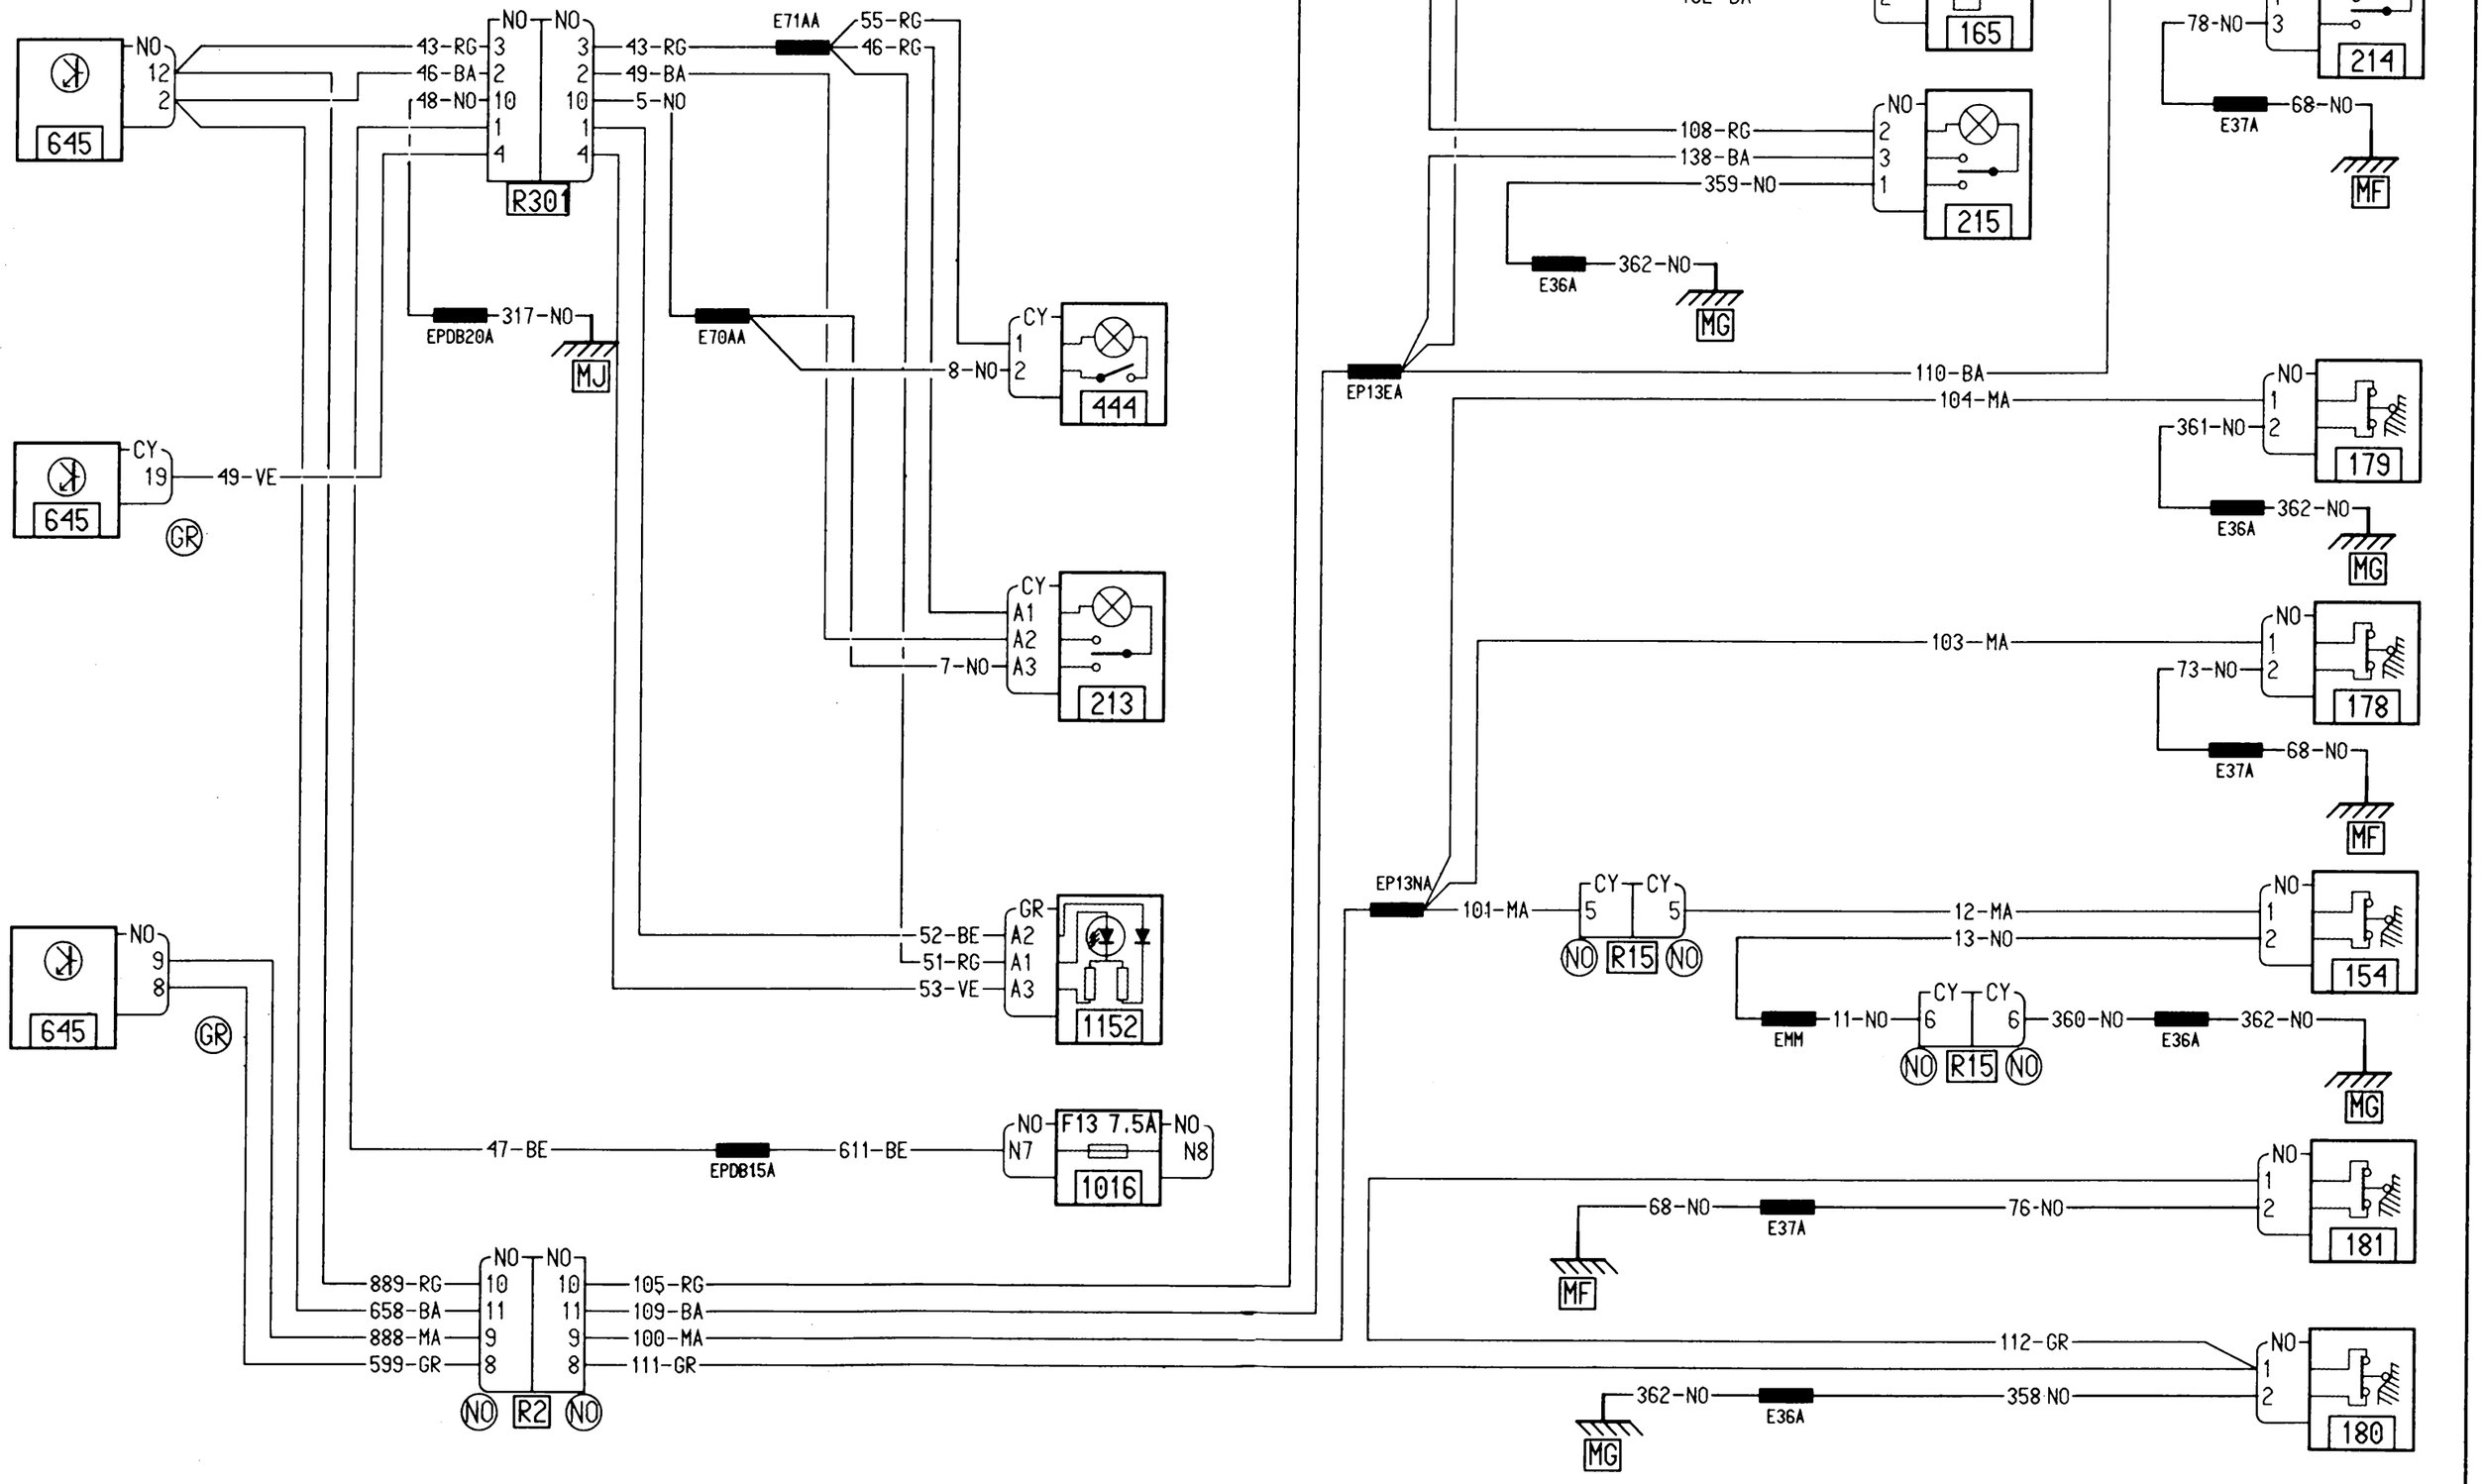

645
NO
12
2
43-RG
46-BA
48-NO
NO
3
2
10
1
4
R301
NO
3
2
10
1
4
43-RG
49-BA
5-NO
E71AA
55-RG
46-RG
EPDB20A
317-NO
MJ
E70AA
8-NO
CY
1
2
444
645
CY
19
49-VE
GR
CY
A1
A2
A3
7-NO
213
645
NO
9
8
GR
52-BE
51-RG
53-VE
GR
A2
A1
A3
1152
47-BE
EPDB15A
611-BE
NO
N7
F13 7.5A
NO
N8
1016
NO
10
11
9
8
889-RG
658-BA
888-MA
599-GR
NO
10
11
9
8
105-RG
109-BA
100-MA
111-GR
NO
R2
NO
EPBPTA
107-RG
106-RG
102-BA
NO
1
2
165
108-RG
138-BA
359-NO
NO
2
3
1
215
E36A
362-NO
MG
78-NO
NO
2
1
3
214
E37A
68-NO
MF
EP13EA
110-BA
104-MA
361-NO
NO
1
2
179
E36A
362-NO
MG
103-MA
73-NO
NO
1
2
178
E37A
68-NO
MF
EP13NA
101-MA
CY
5
CY
5
NO
R15
NO
12-MA
13-NO
NO
1
2
154
EMM
11-NO
CY
6
CY
6
NO
R15
NO
360-NO
E36A
362-NO
MG
68-NO
E37A
76-NO
NO
1
2
181
MF
112-GR
362-NO
E36A
358-NO
NO
1
2
180
MG

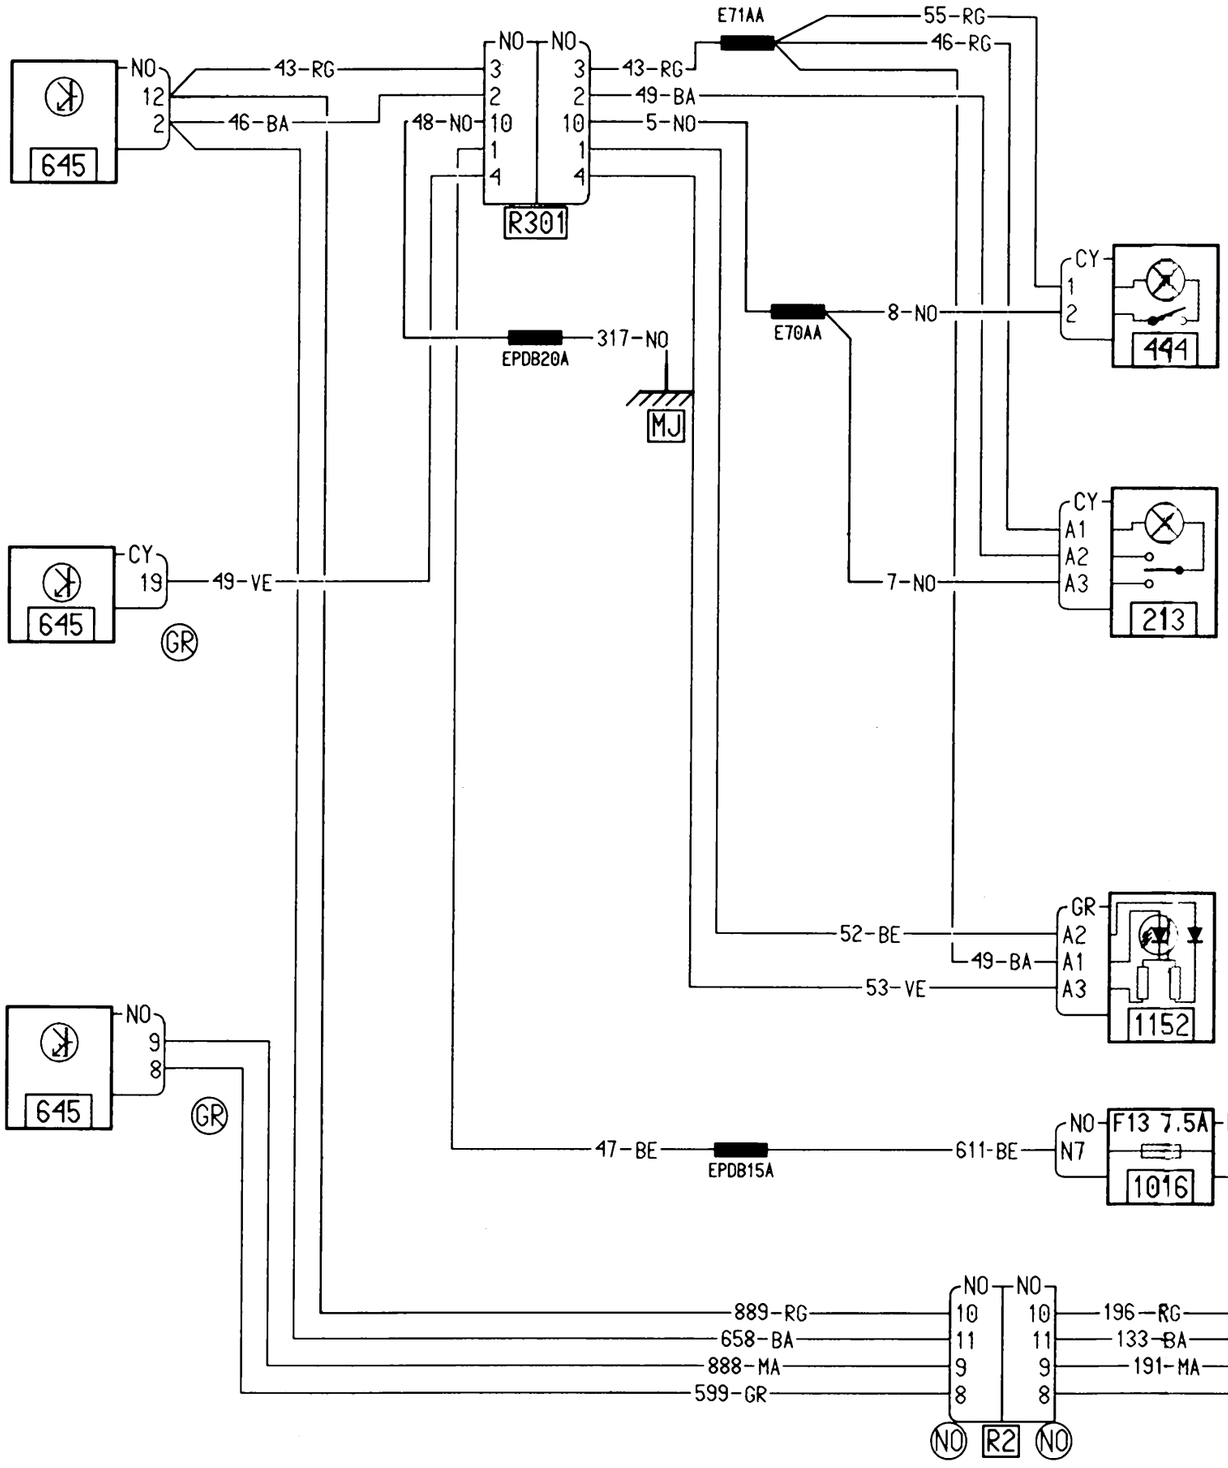

645
NO
12
2
43-RG
46-BA
48-NO
NO
3
2
10
1
4
R301
NO
3
2
10
1
4
43-RG
49-BA
5-NO
E71AA
55-RG
46-RG
E70AA
8-NO
7-NO
CY
1
2
444
CY
A1
A2
A3
213
EPDB20A
317-NO
MJ
645
CY
19
49-VE
GR
52-BE
49-BA
53-VE
GR
A2
A1
A3
1152
645
NO
9
8
GR
47-BE
EPDB15A
611-BE
NO
N7
F13 7.5A
NO
N8
1016
889-RG
658-BA
888-MA
599-GR
NO
10
11
9
8
NO
R2
NO
10
11
9
8
NO
196-RG
133-BA
191-MA
189-GR

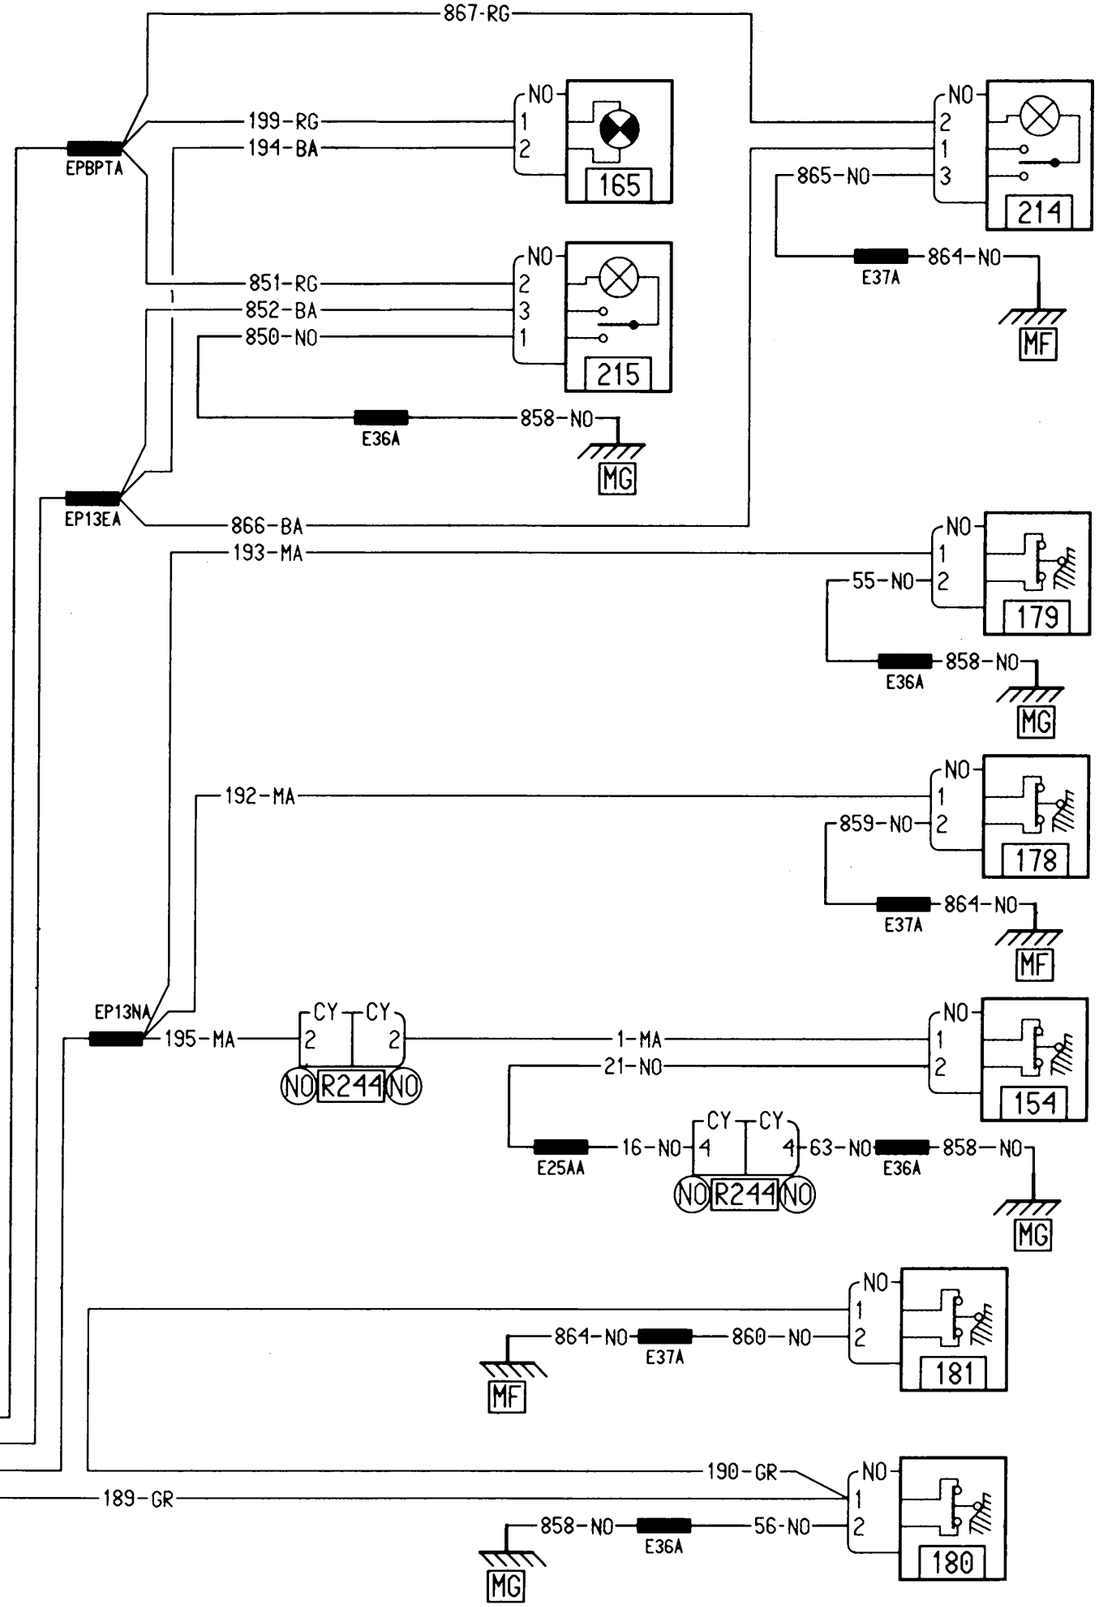

867-RG
EPBPTA
199-RG
194-BA
NO
1
2
165
865-NO
NO
2
1
3
214
E37A
864-NO
MF
851-RG
852-BA
850-NO
NO
2
3
1
215
E36A
858-NO
MG
EP13EA
866-BA
193-MA
55-NO
NO
1
2
179
E36A
858-NO
MG
192-MA
859-NO
NO
1
2
178
E37A
864-NO
MF
EP13NA
195-MA
CY
2
CY
2
NO
R244
NO
1-MA
21-NO
NO
1
2
154
E25AA
16-NO
CY
4
CY
4
NO
R244
NO
63-NO
E36A
858-NO
MG
MF
864-NO
E37A
860-NO
NO
1
2
181
190-GR
858-NO
E36A
56-NO
NO
1
2
180
MG

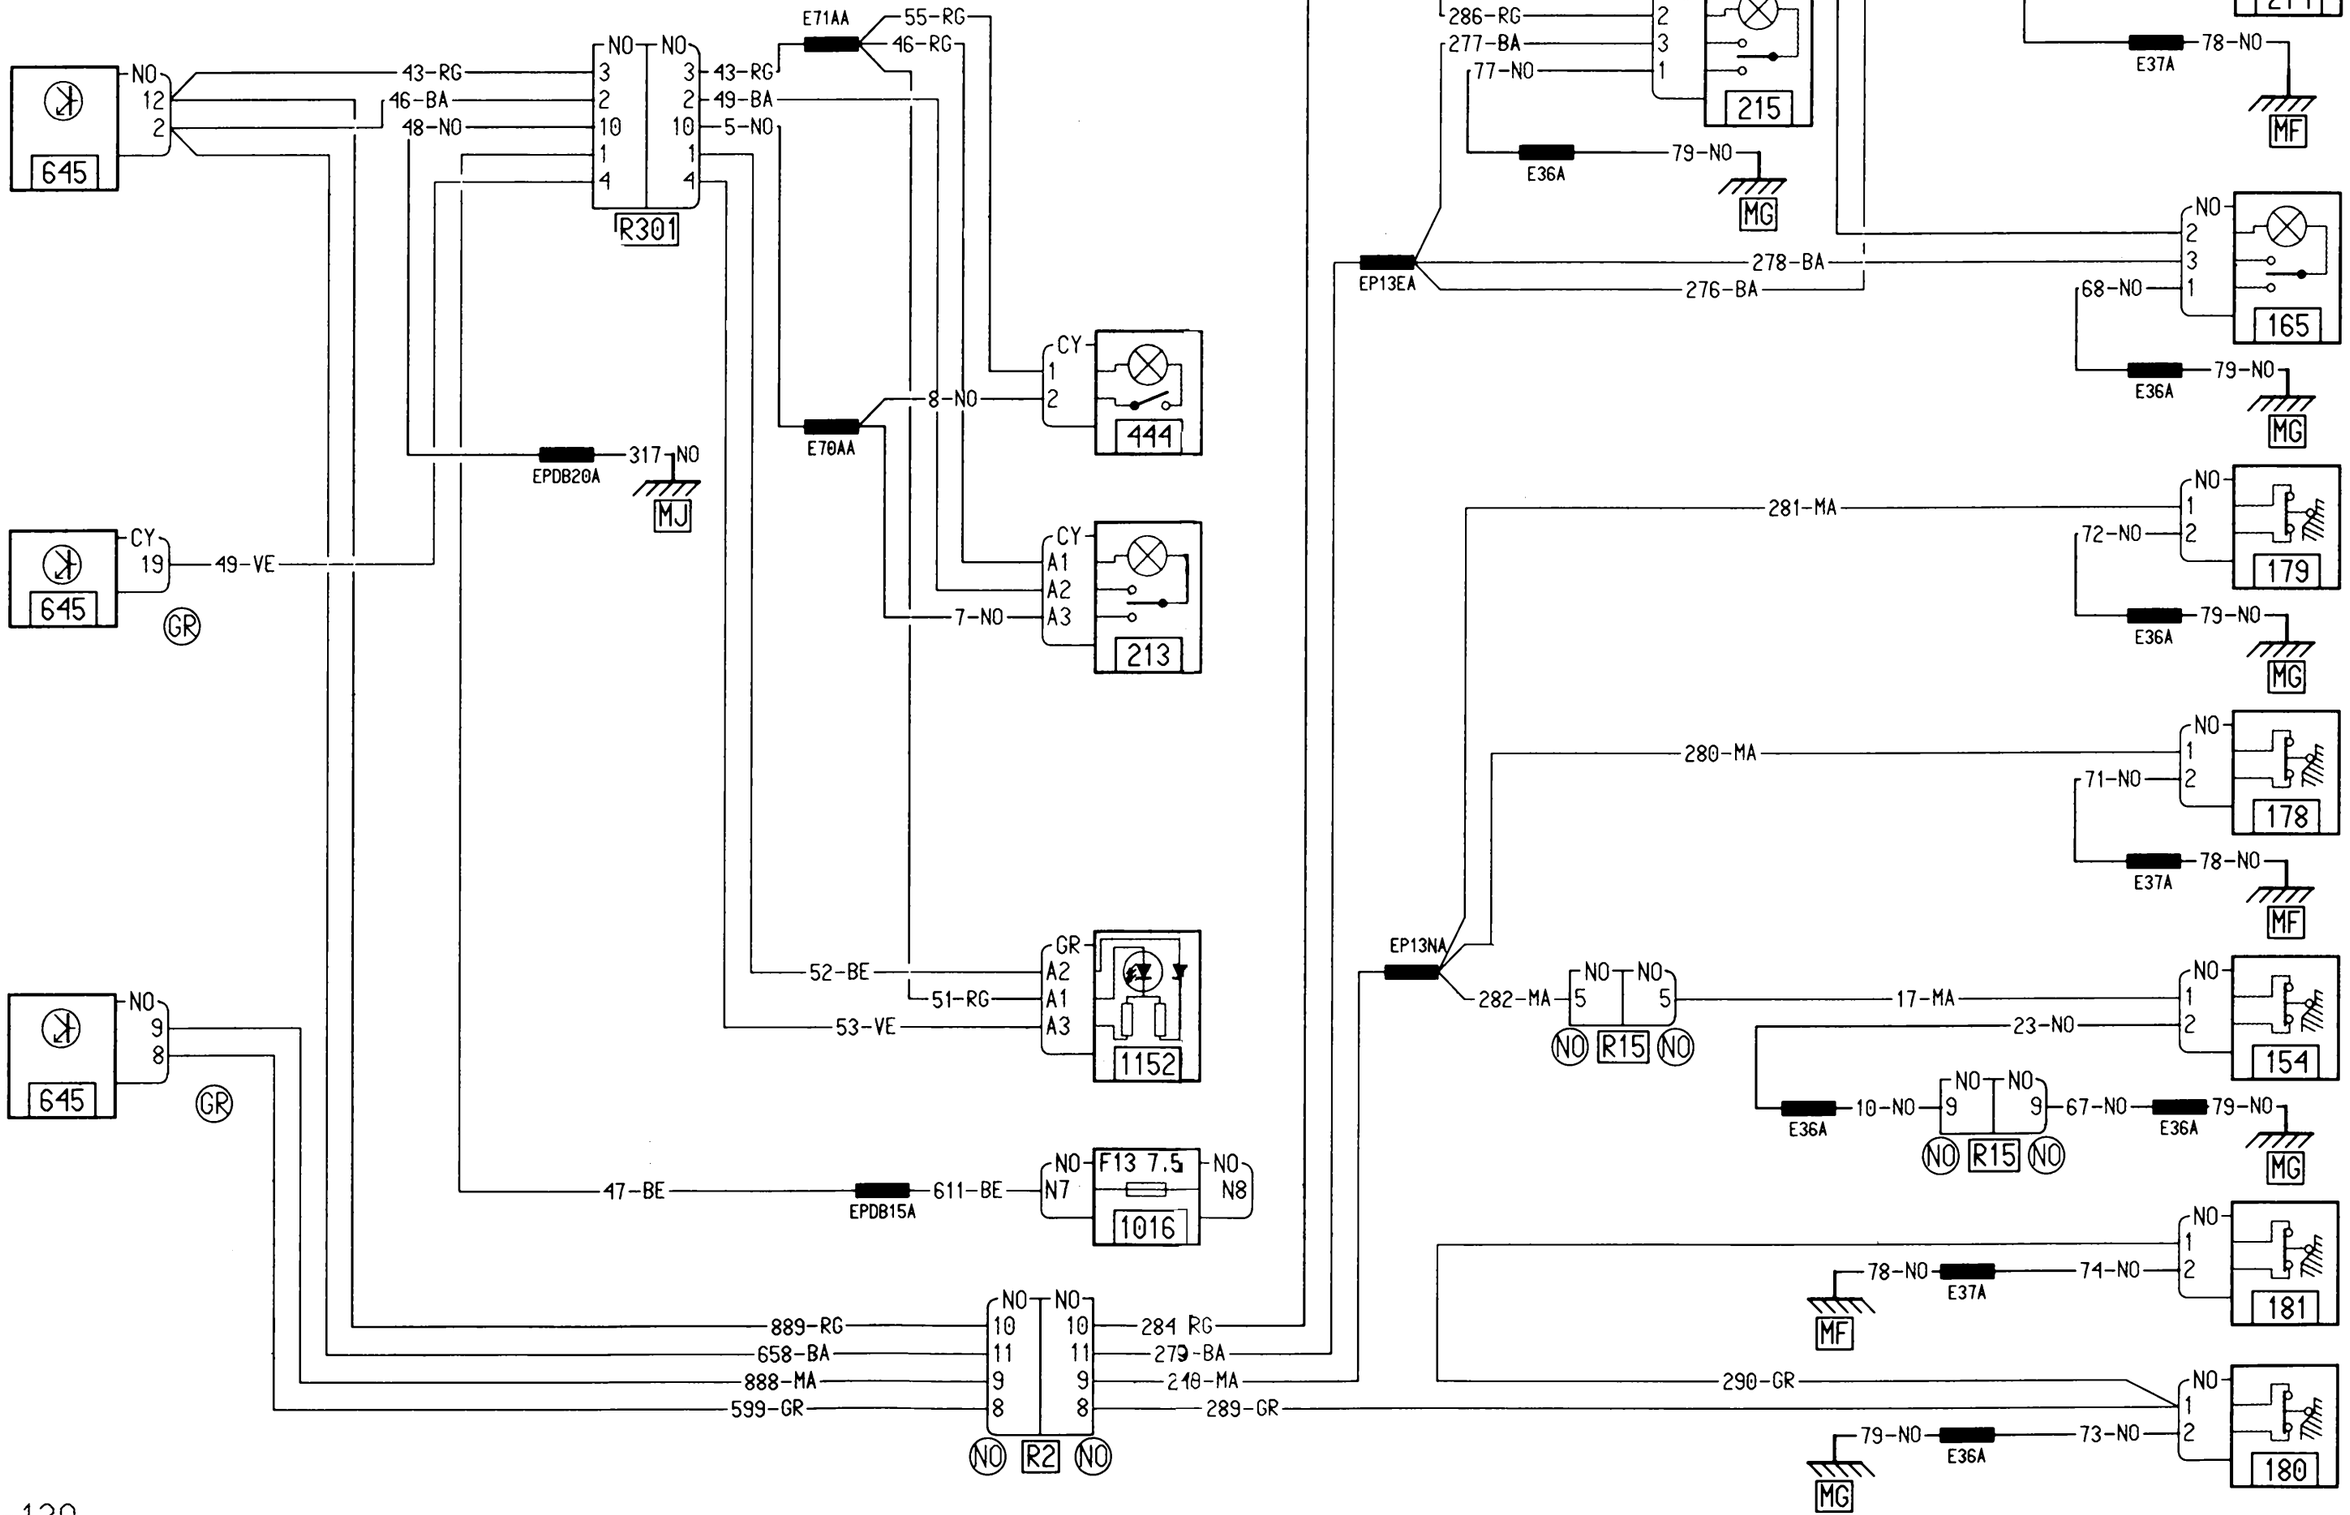

645
NO
12
2
43-RG
46-BA
48-NO
R301
3
2
10
1
4
E71AA
55-RG
46-RG
8-NO
E70AA
CY
1
2
444
317-NO
EPDB20A
MJ
645
CY
19
49-VE
GR
A1
A2
A3
213
7-NO
52-BE
51-RG
53-VE
GR
1152
645
9
8
GR
47-BE
611-BE
EPDB15A
F13 7.5
N7
N8
1016
889-RG
658-BA
888-MA
599-GR
284-RG
279-BA
210-MA
289-GR
R2
285-RG
287-RG
EPBPTA
286-RG
277-BA
77-NO
215
E36A
79-NO
MG
76-NO
214
E37A
78-NO
MF
EP13EA
278-BA
276-BA
68-NO
165
281-MA
72-NO
179
71-NO
178
280-MA
EP13NA
282-MA
R15
17-MA
23-NO
154
10-NO
67-NO
74-NO
181
290-GR
73-NO
180

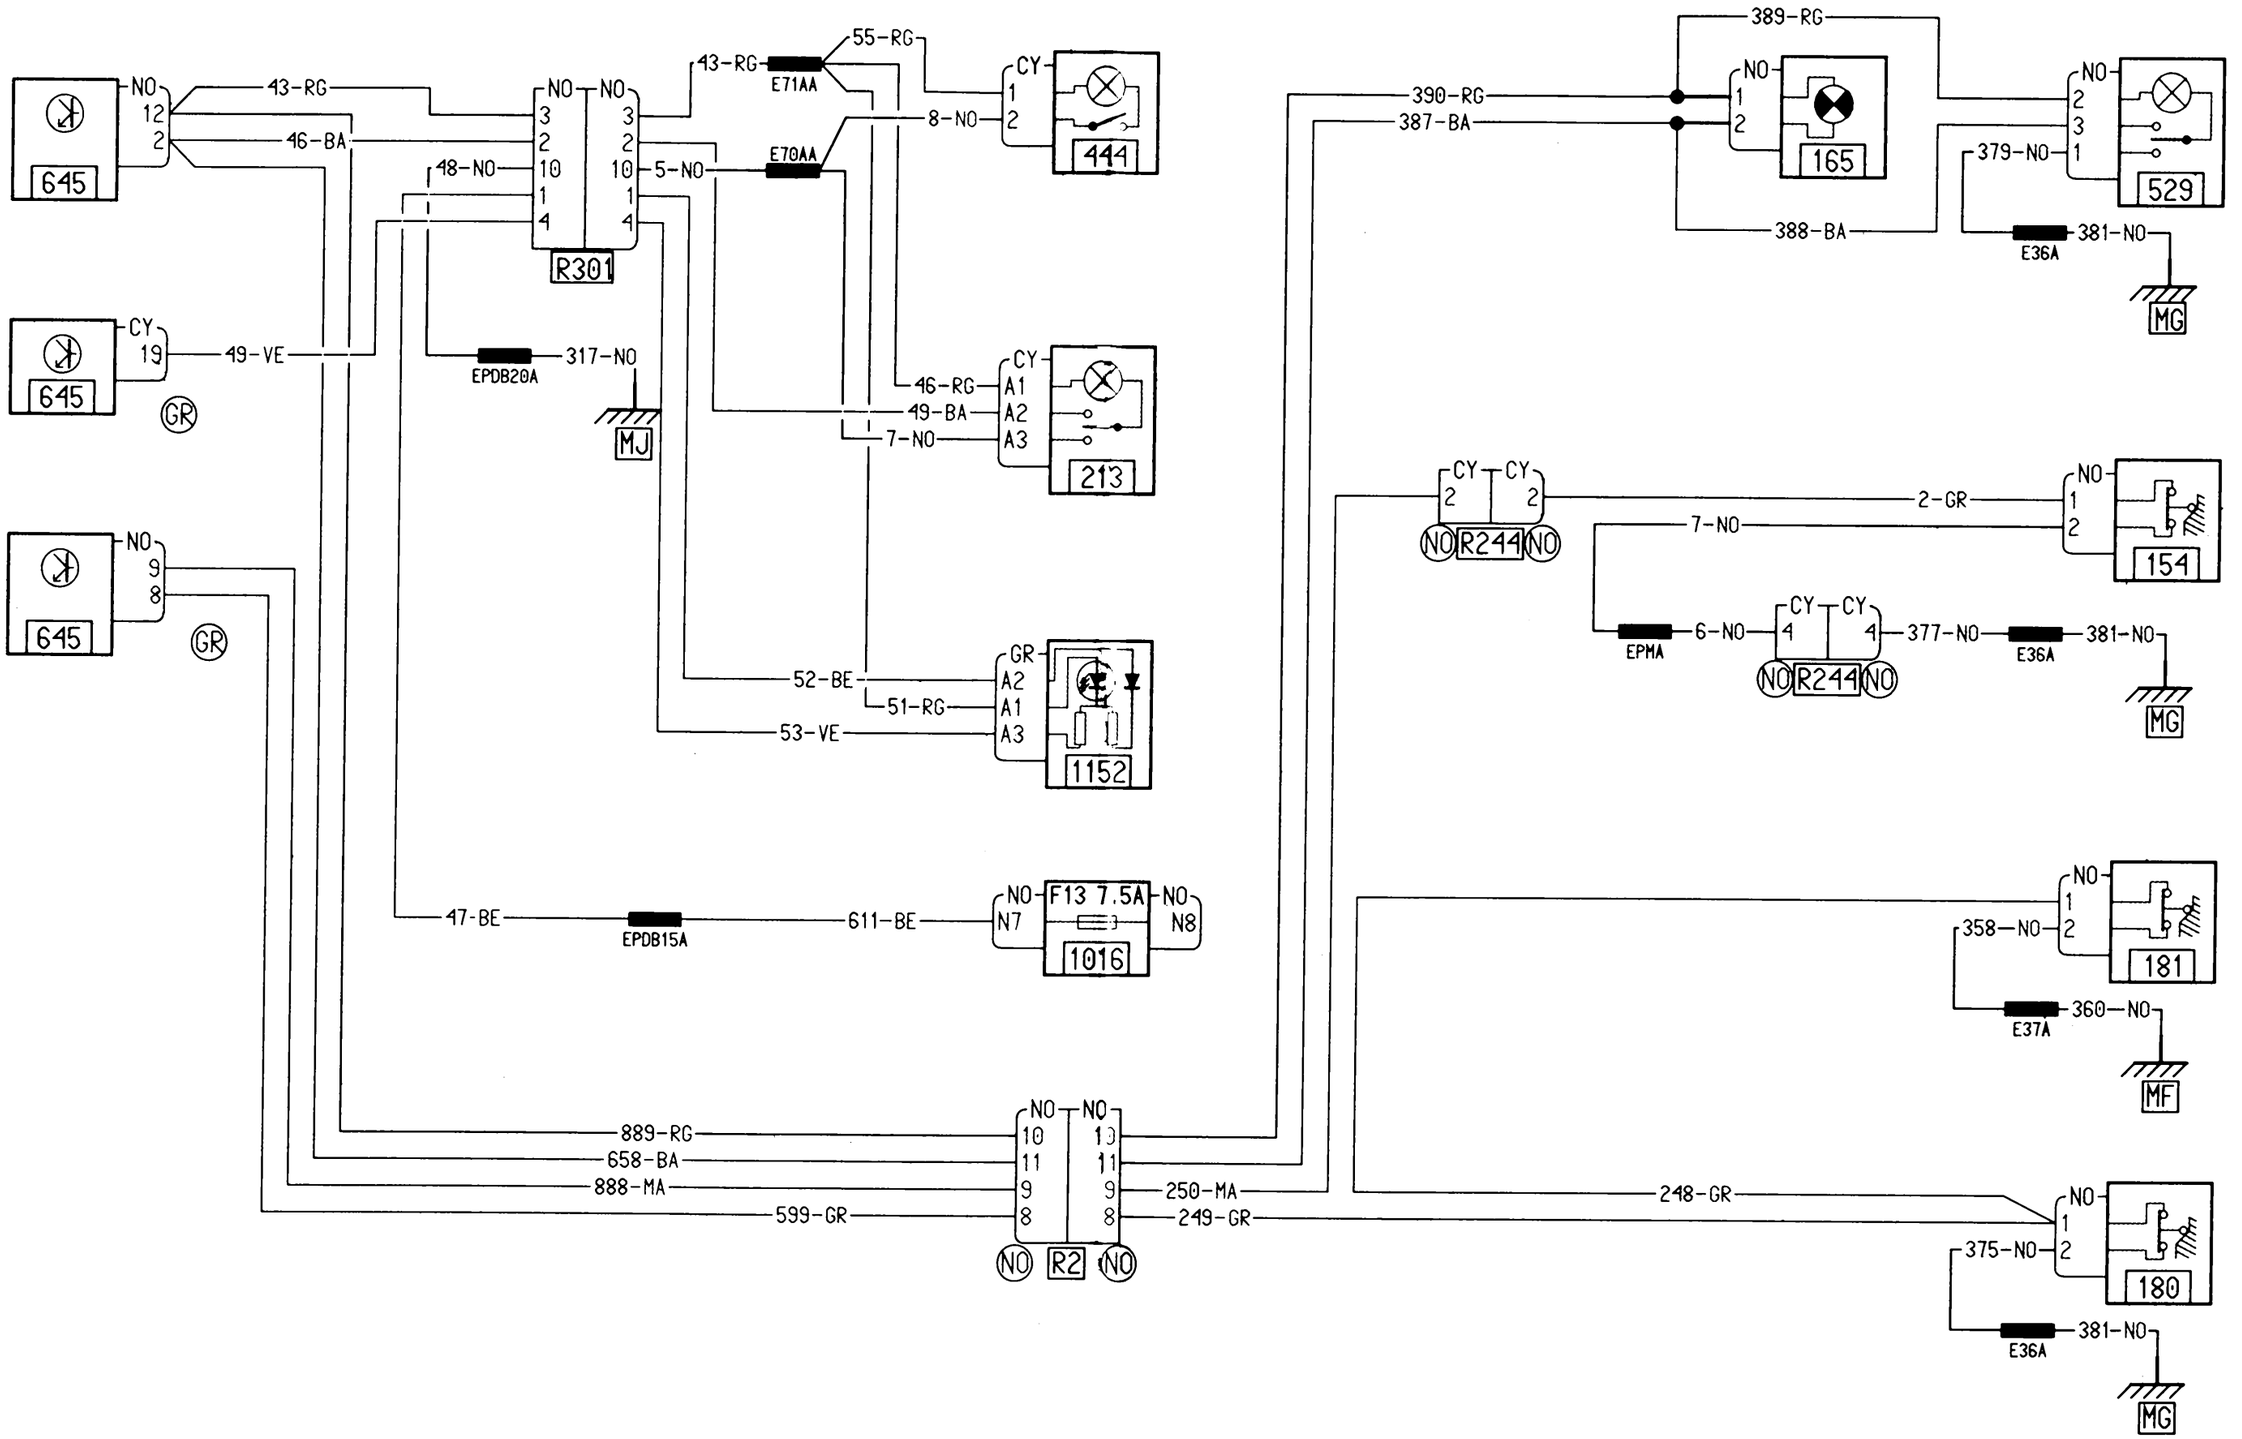

645
NO
12
2
43-RG
46-BA
R301
NO
3
2
10
1
4
43-RG
E71AA
55-RG
8-NO
CY
1
2
444
48-NO
5-NO
E70AA
645
CY
19
49-VE
GR
EPDB20A
317-NO
MJ
46-RG
49-BA
7-NO
CY
A1
A2
A3
213
645
NO
9
8
GR
52-BE
51-RG
53-VE
GR
A2
A1
A3
1152
47-BE
EPDB15A
611-BE
NO
N7
F13 7.5A
NO
N8
1016
889-RG
658-BA
888-MA
599-GR
NO
10
11
9
8
R2
NO
250-MA
249-GR
389-RG
390-RG
387-BA
NO
1
2
165
379-NO
388-BA
NO
2
3
1
529
E36A
381-NO
MG
CY
2
NO
R244
NO
2-GR
7-NO
NO
1
2
154
EPMA
6-NO
CY
4
NO
R244
NO
377-NO
E36A
381-NO
MG
358-NO
NO
1
2
181
E37A
360-NO
MF
248-GR
375-NO
NO
1
2
180
E36A
381-NO
MG

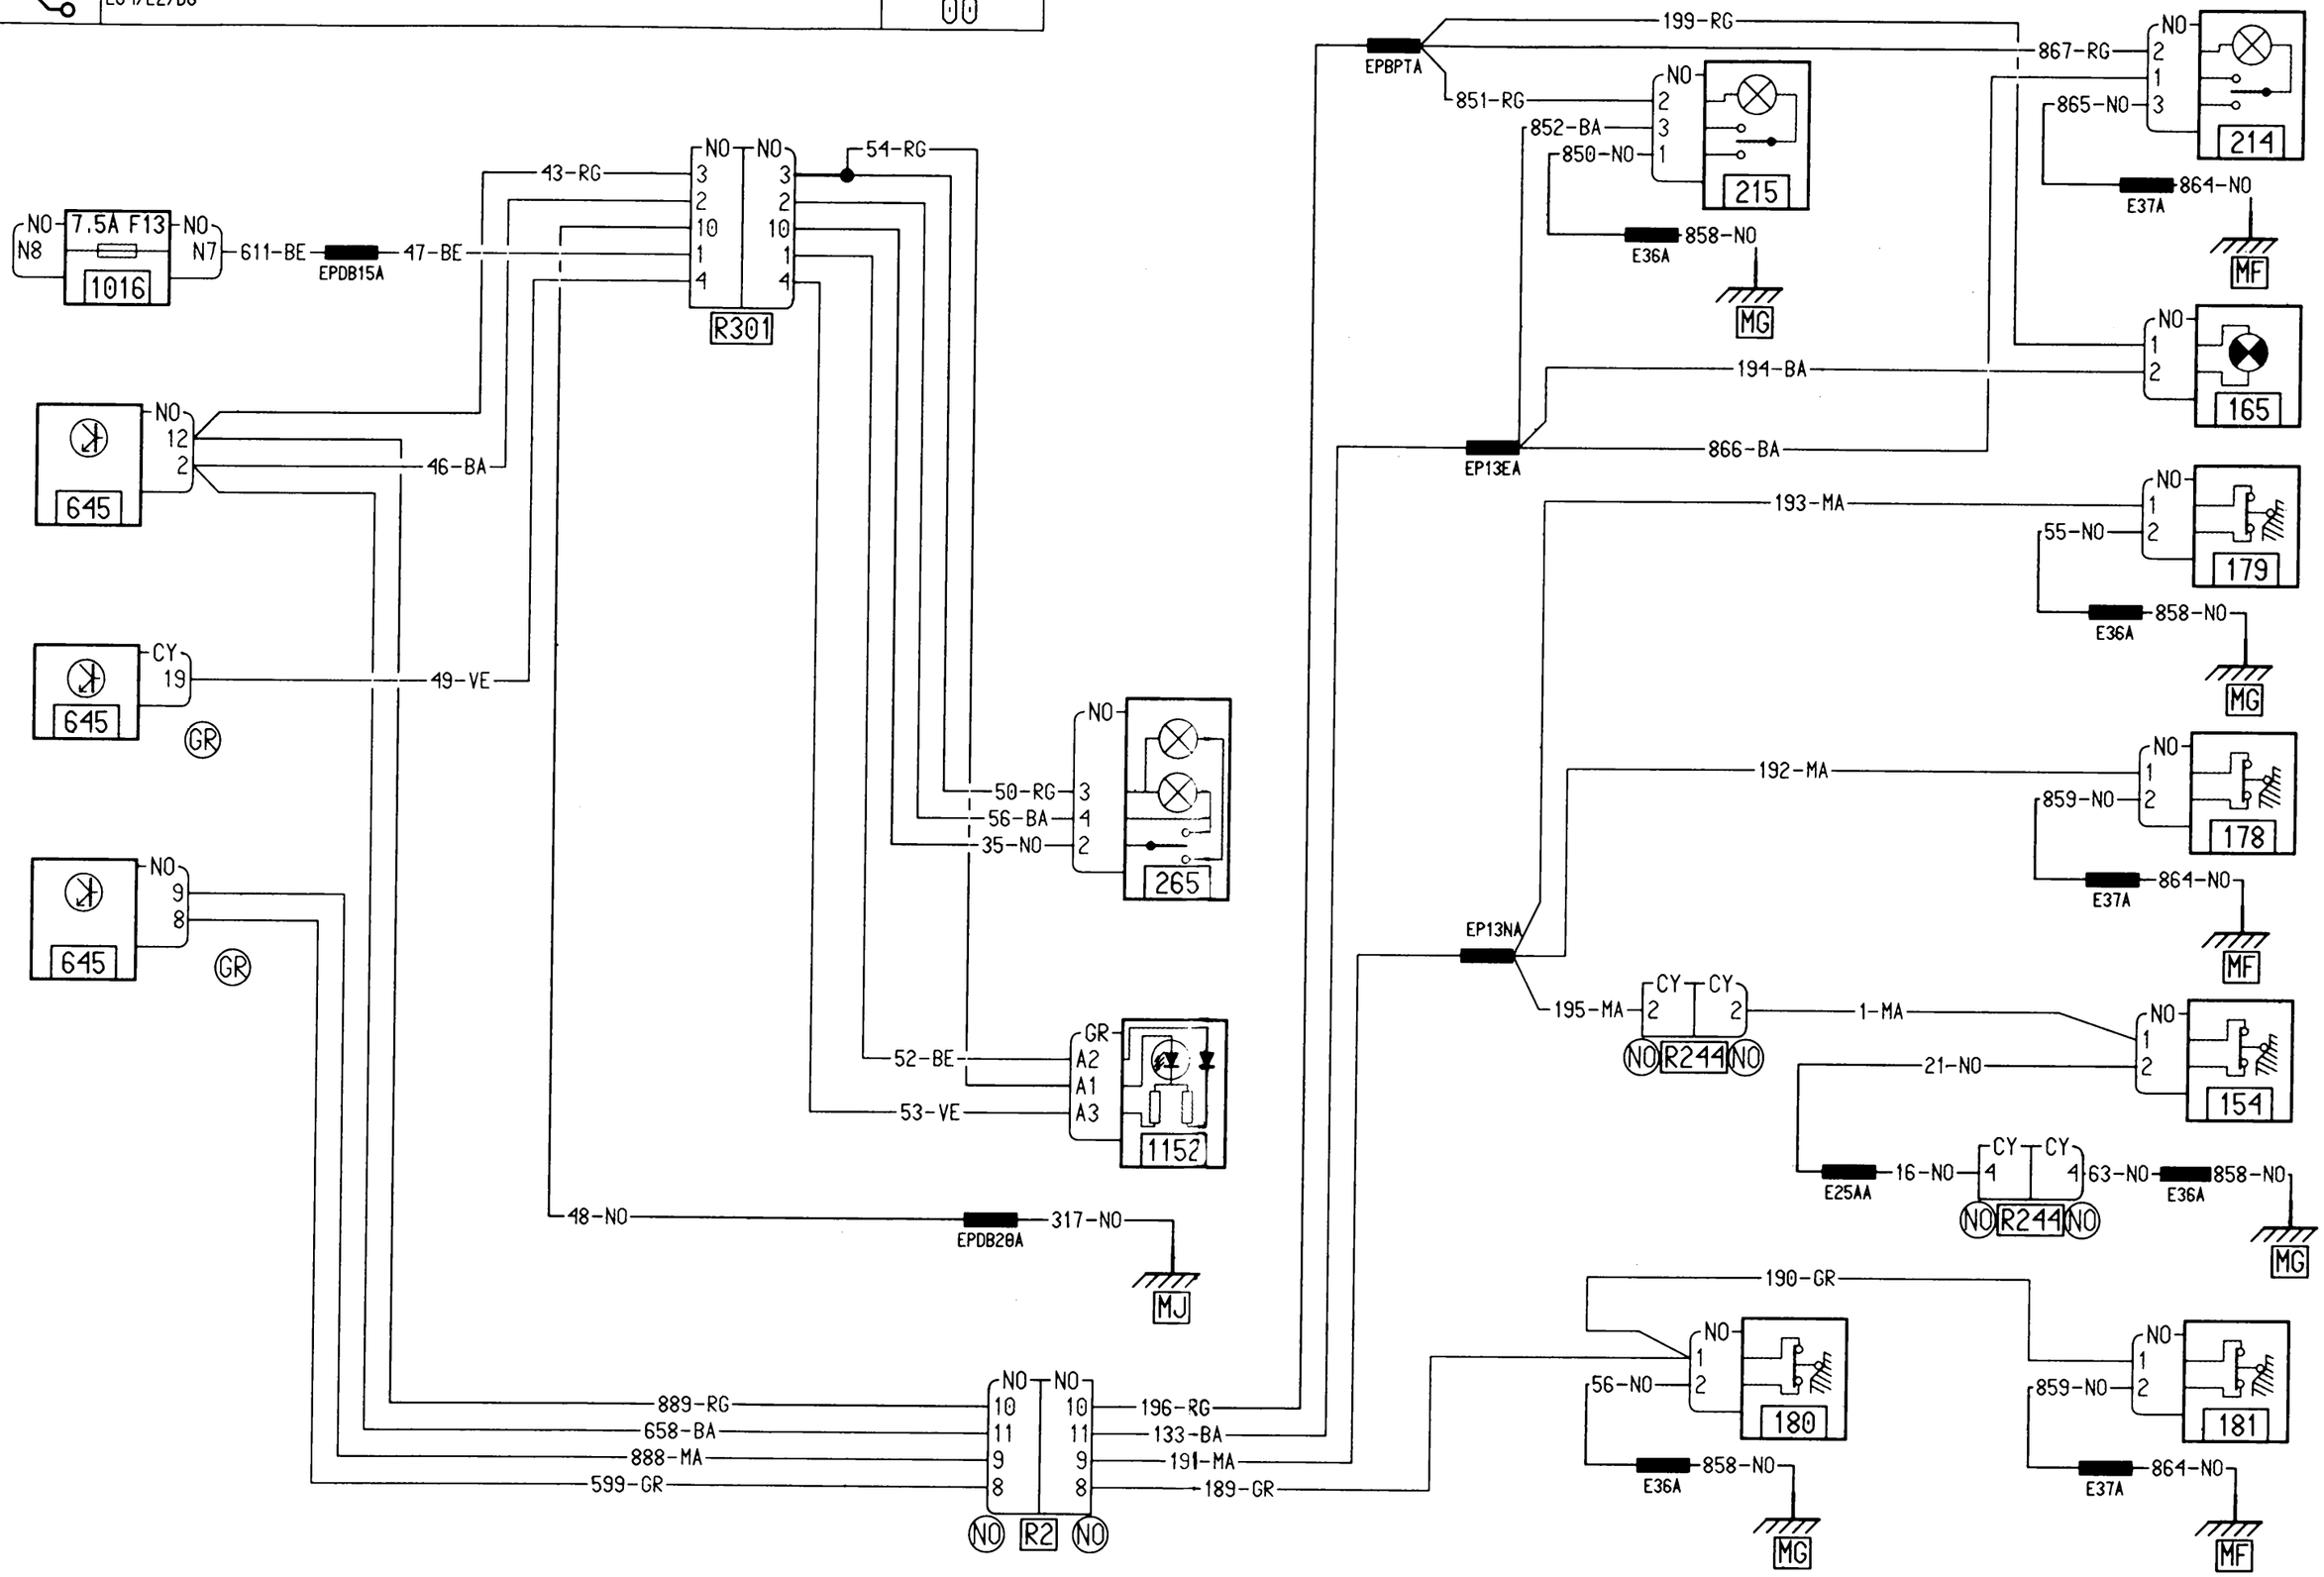
NO N8
7.5A F13
NO N7
1016
611-BE
EPDB15A
47-BE
43-RG
NO 3 2 10 1 4
NO 3 2 10 1 4
R301
54-RG
645
NO 12 2
46-BA
645
CY 19
49-VE
GR
645
NO 9 8
GR
50-RG 3
56-BA 4
35-NO 2
265
52-BE
53-VE
GR A2 A1 A3
1152
48-NO
EPDB20A
317-NO
MJ
889-RG
658-BA
888-MA
599-GR
NO 10 11 9 8
NO 10 11 9 8
196-RG
133-BA
191-MA
189-GR
NO R2 NO
EPBPTA
199-RG
867-RG
851-RG
852-BA
850-NO
NO 2 3 1
215
858-NO
E36A
MG
NO 2 1 3
214
865-NO
E37A
864-NO
MF
NO 1 2
165
194-BA
866-BA
EP13EA
193-MA
NO 1 2
179
55-NO
E36A
858-NO
MG
192-MA
NO 1 2
178
859-NO
E37A
864-NO
MF
EP13NA
195-MA
CY 2
CY 2
NO R244 NO
1-MA
21-NO
NO 1 2
154
E25AA
16-NO
CY 4
CY 4
63-NO
NO R244 NO
858-NO
E36A
MG
190-GR
NO 1 2
180
56-NO
E36A
858-NO
MG
NO 1 2
181
859-NO
E37A
864-NO
MF

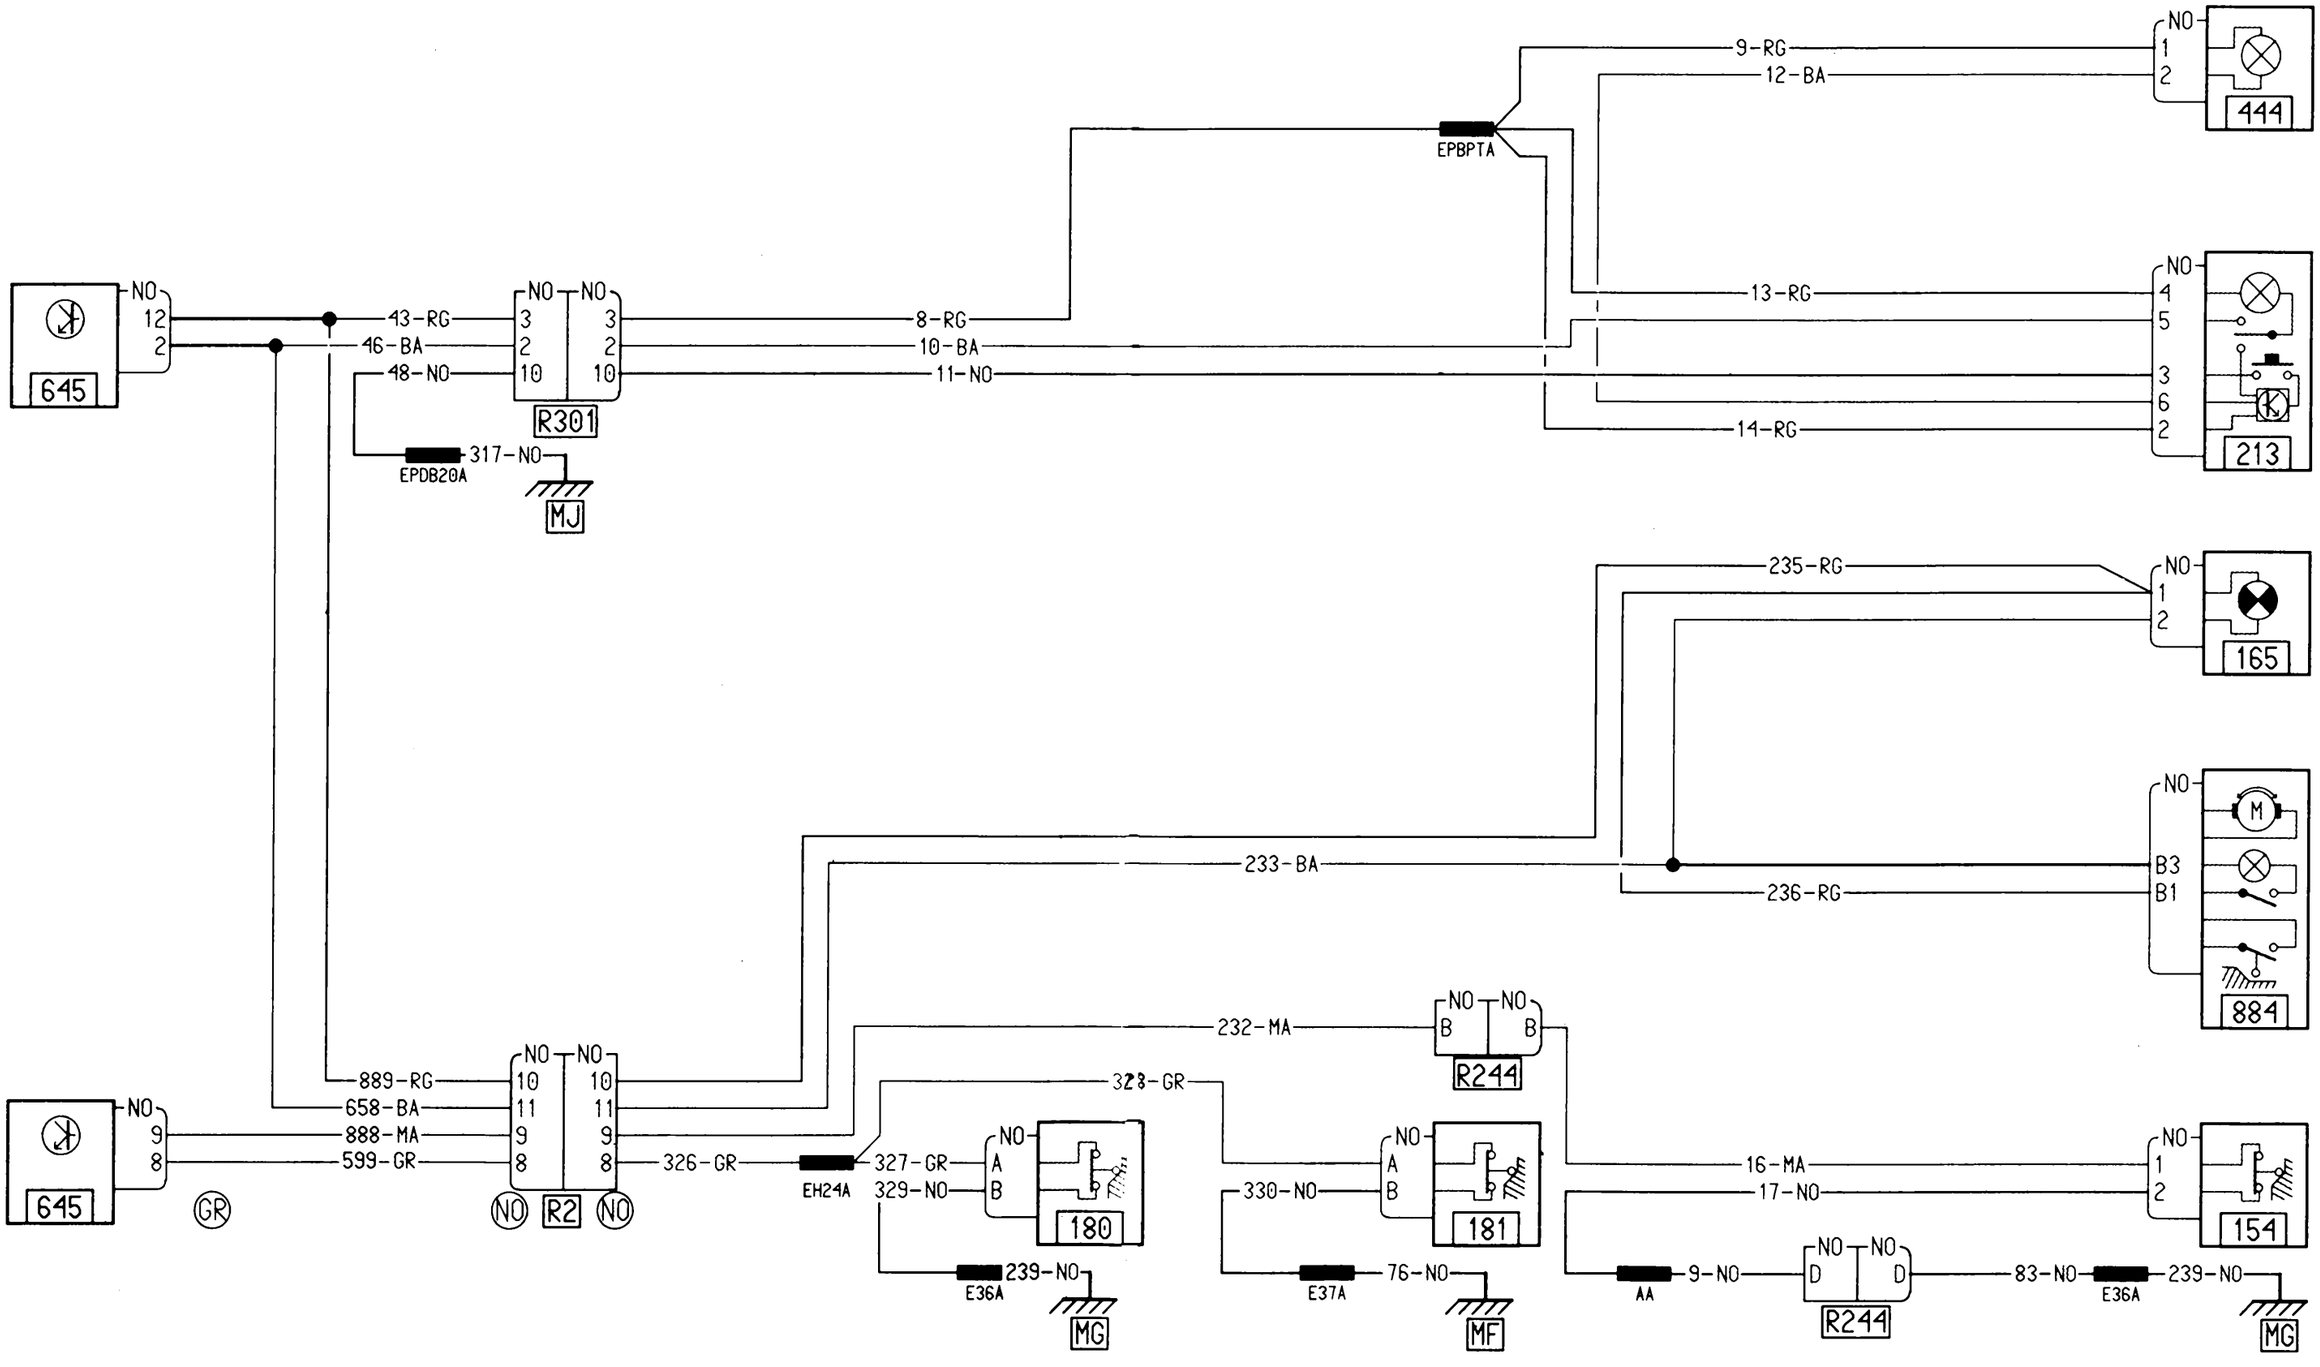
645
NO
12
2
43-RG
46-BA
48-NO
NO
3
2
10
NO
3
2
10
R301
8-RG
10-BA
11-NO
EPBPTA
9-RG
12-BA
444
13-RG
14-RG
213
EPDB20A
317-NO
MJ
235-RG
165
233-BA
236-RG
884
889-RG
658-BA
888-MA
599-GR
9
8
GR
R2
326-GR
EH24A
327-GR
329-NO
A
B
180
239-NO
E36A
MG
232-MA
R244
328-GR
330-NO
181
E37A
76-NO
MF
16-MA
17-NO
154
AA
9-NO
D
83-NO
239-NO

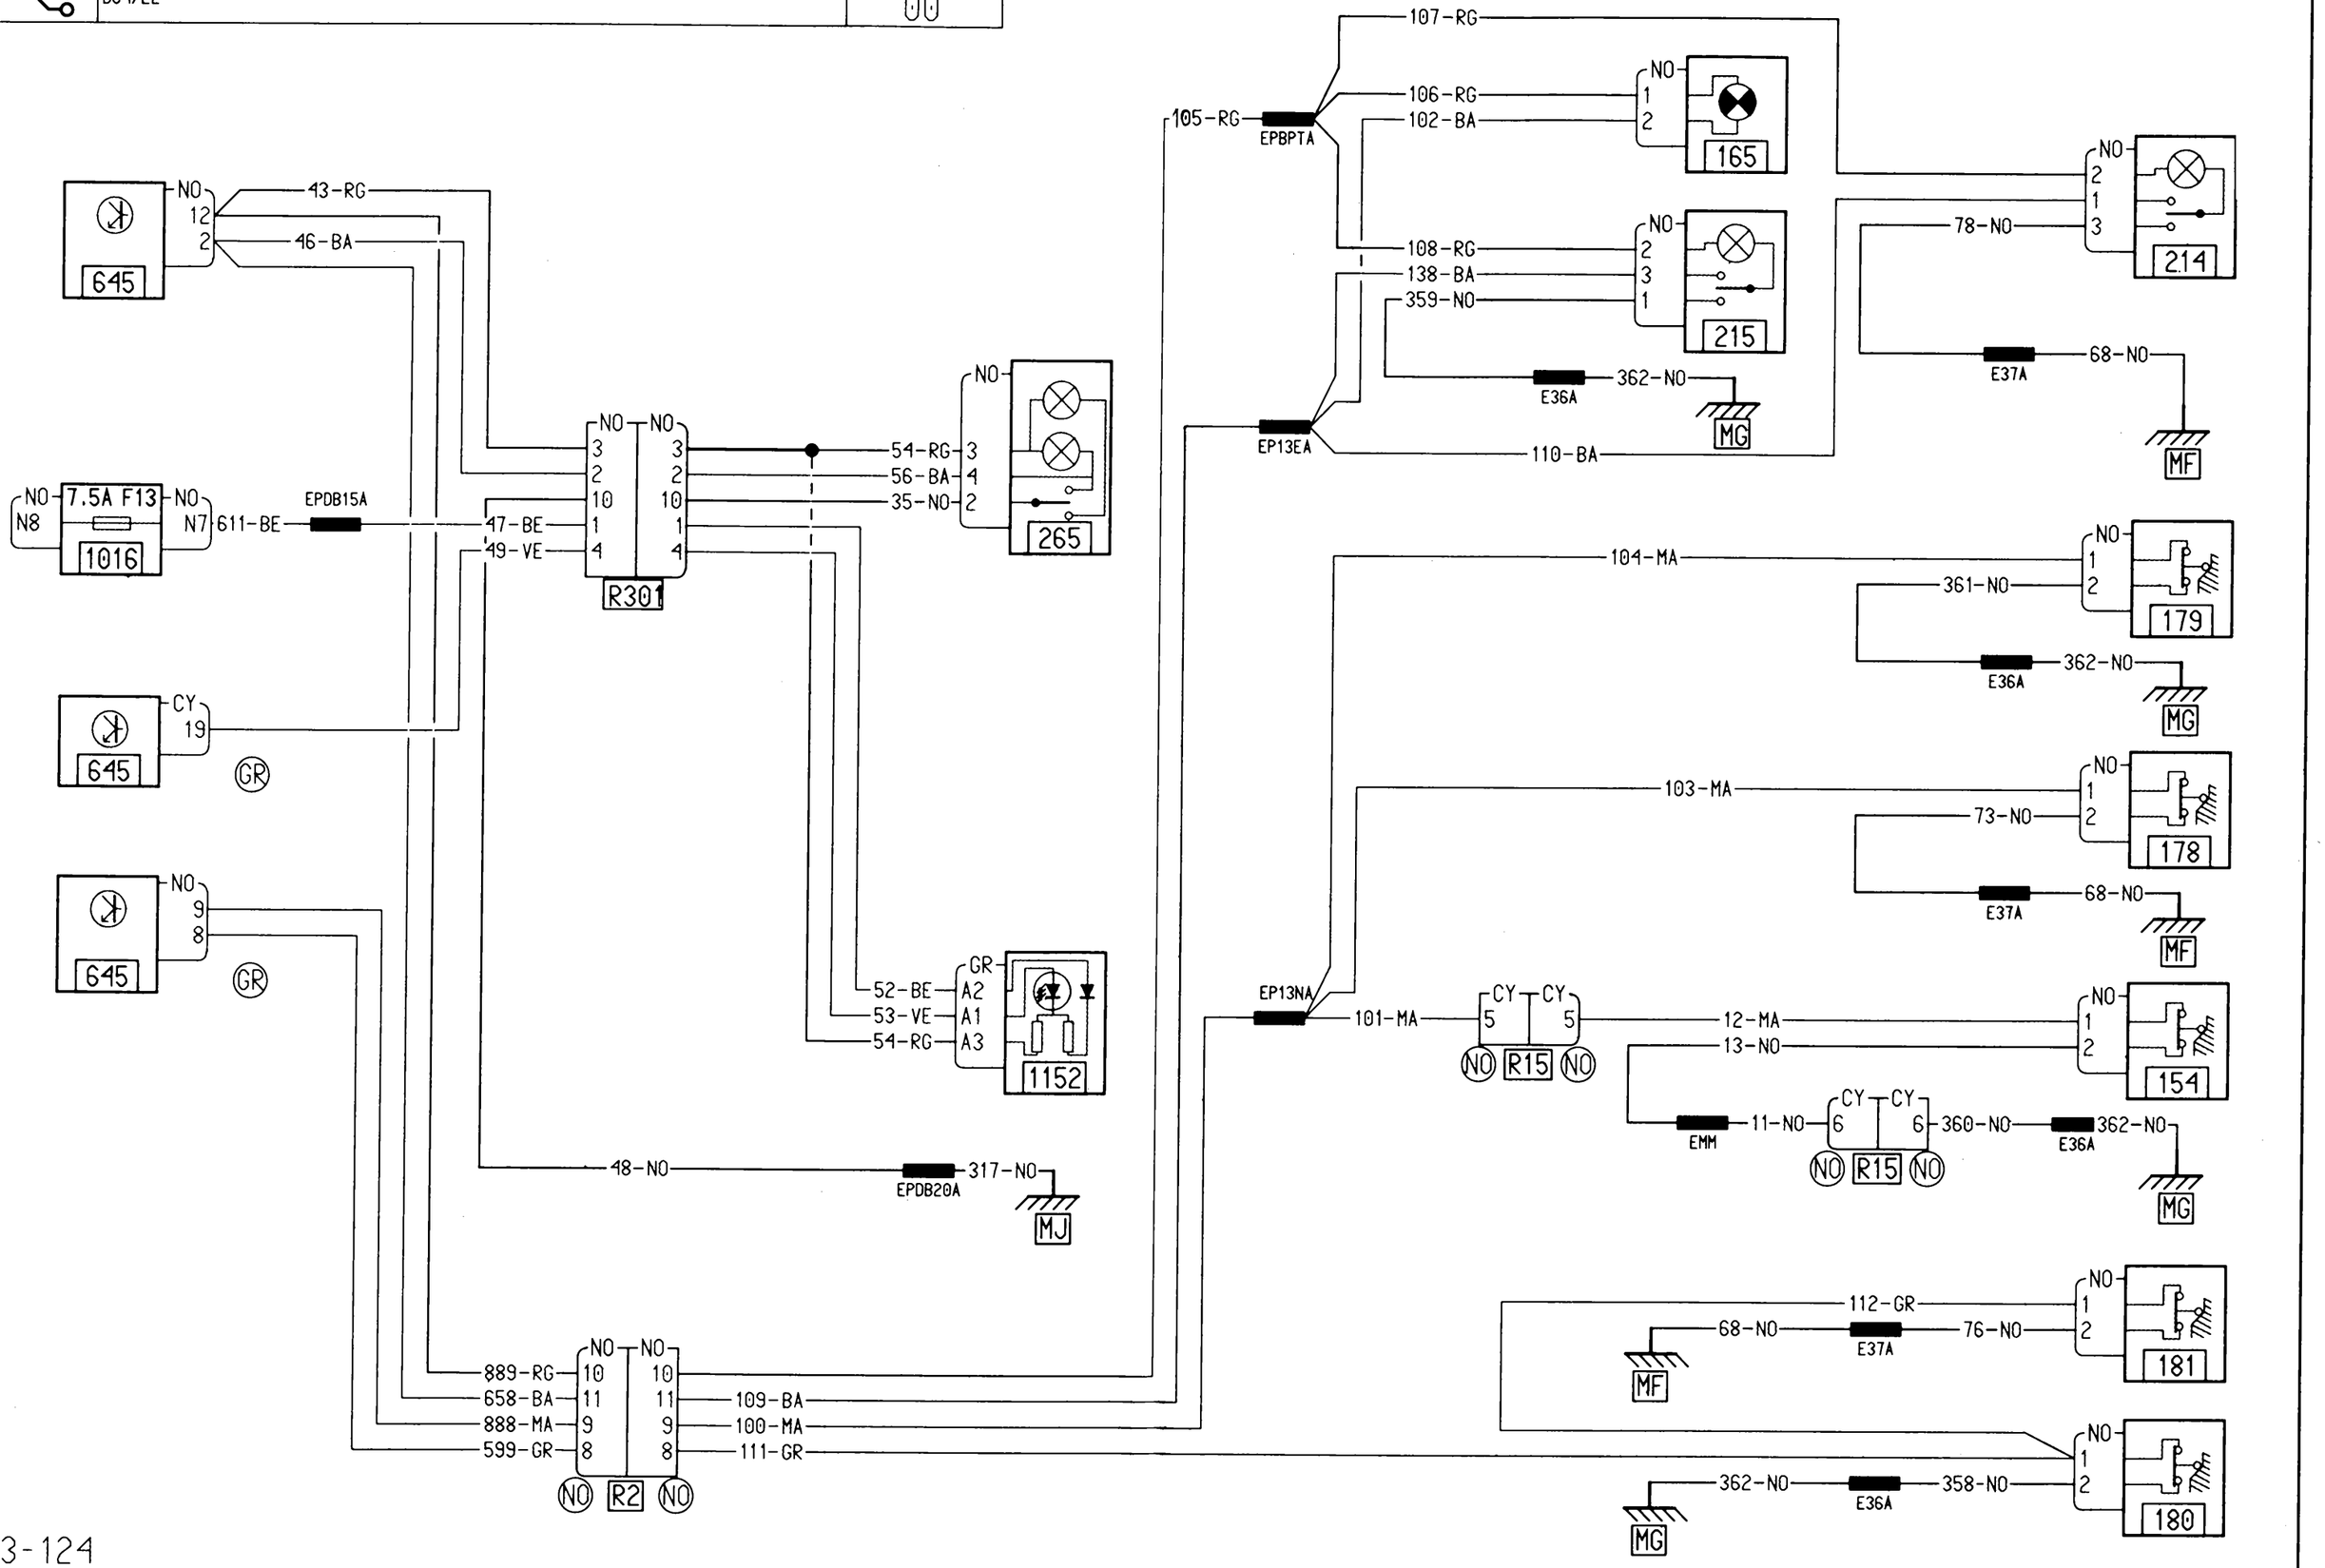

645
NO
12
2
43-RG
46-BA
645
CY
19
GR
645
NO
9
8
GR
NO
7.5A F13
NO
N8
N7
1016
611-BE
EPDB15A
NO NO
3 3
2 2
10 10
1 1
4 4
R301
47-BE
49-VE
NO
54-RG 3
56-BA 4
35-NO 2
265
GR
52-BE A2
53-VE A1
54-RG A3
1152
48-NO
EPDB20A
317-NO
MJ
NO NO
889-RG 10 10
658-BA 11 11 109-BA
888-MA 9 9 100-MA
599-GR 8 8 111-GR
NO R2 NO
105-RG
EPBPTA
107-RG
106-RG
102-BA
NO
1
2
165
108-RG
138-BA
359-NO
NO
2
3
1
215
E36A
362-NO
MG
EP13EA
110-BA
NO
2
1
3
214
78-NO
E37A
68-NO
MF
104-MA
NO
1
2
179
361-NO
E36A
362-NO
MG
103-MA
NO
1
2
178
73-NO
E37A
68-NO
MF
EP13NA
101-MA
CY CY
5 5
NO R15 NO
NO
1
2
154
12-MA
13-NO
EMM
11-NO
CY CY
6 6
NO R15 NO
360-NO
E36A
362-NO
MG
112-GR
NO
1
2
181
68-NO
E37A
76-NO
MF
362-NO
E36A
358-NO
NO
1
2
180
MG

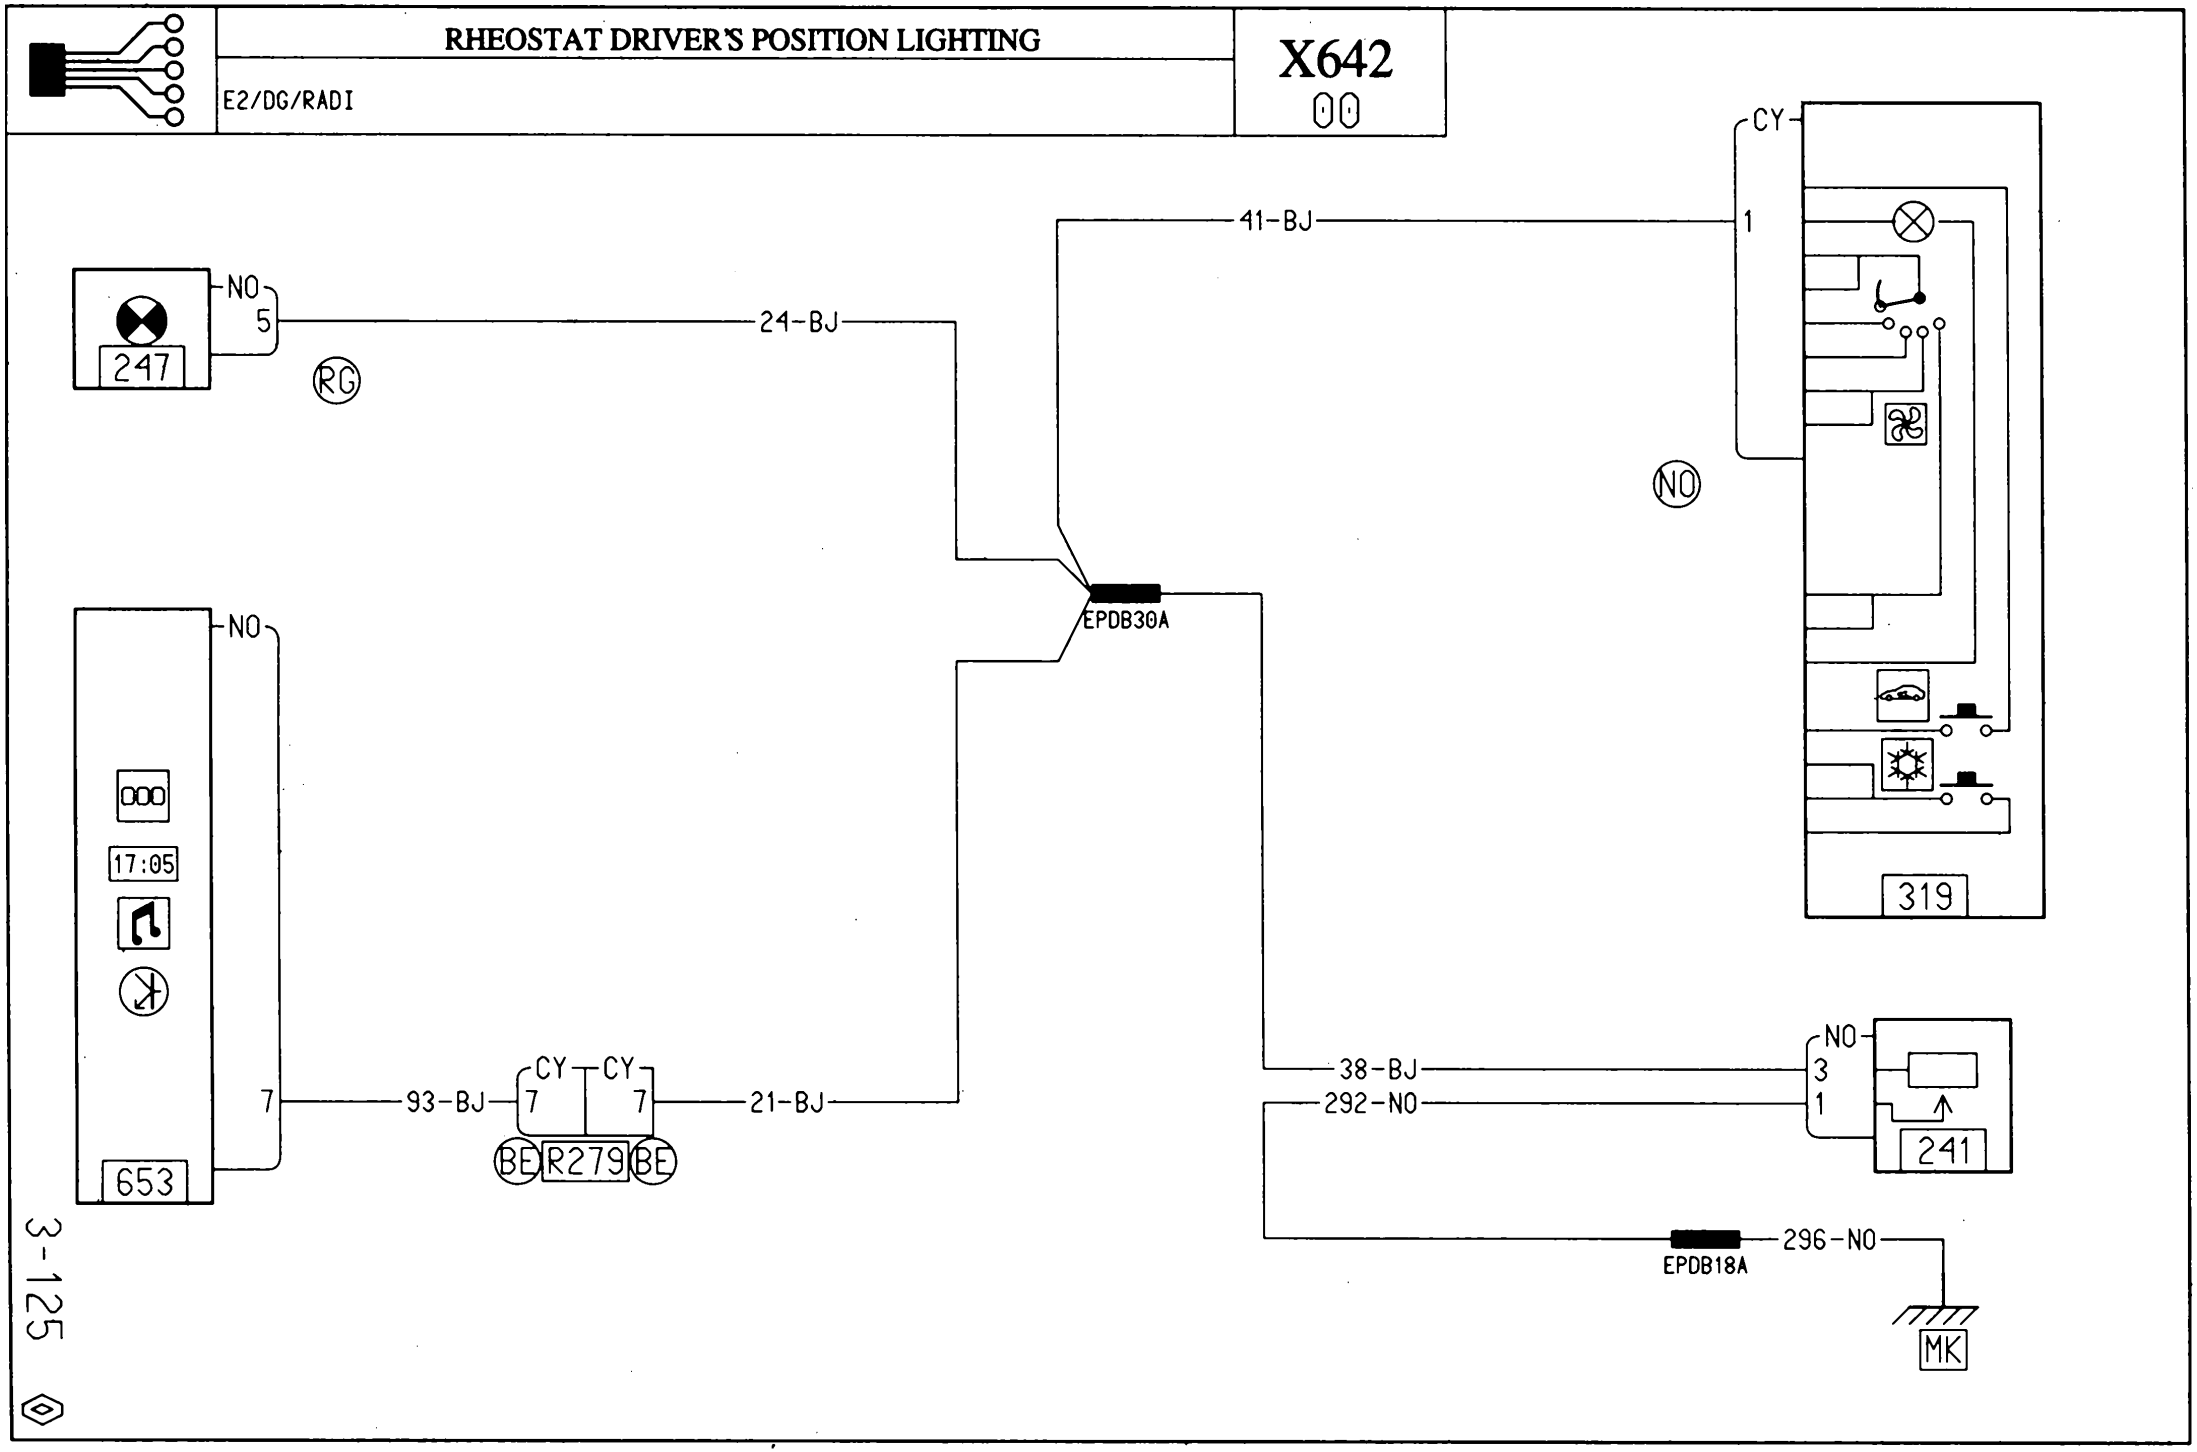

RHEOSTAT DRIVER'S POSITION LIGHTING
E2/DG/RADI
X642
00
CY
1
41-BJ
NO
5
24-BJ
247
RG
NO
319
EPDB30A
NO
17:05
653
7
93-BJ
CY
7
CY
7
21-BJ
BE
R279
BE
38-BJ
292-NO
NO
3
1
241
EPDB18A
296-NO
MK
3-125

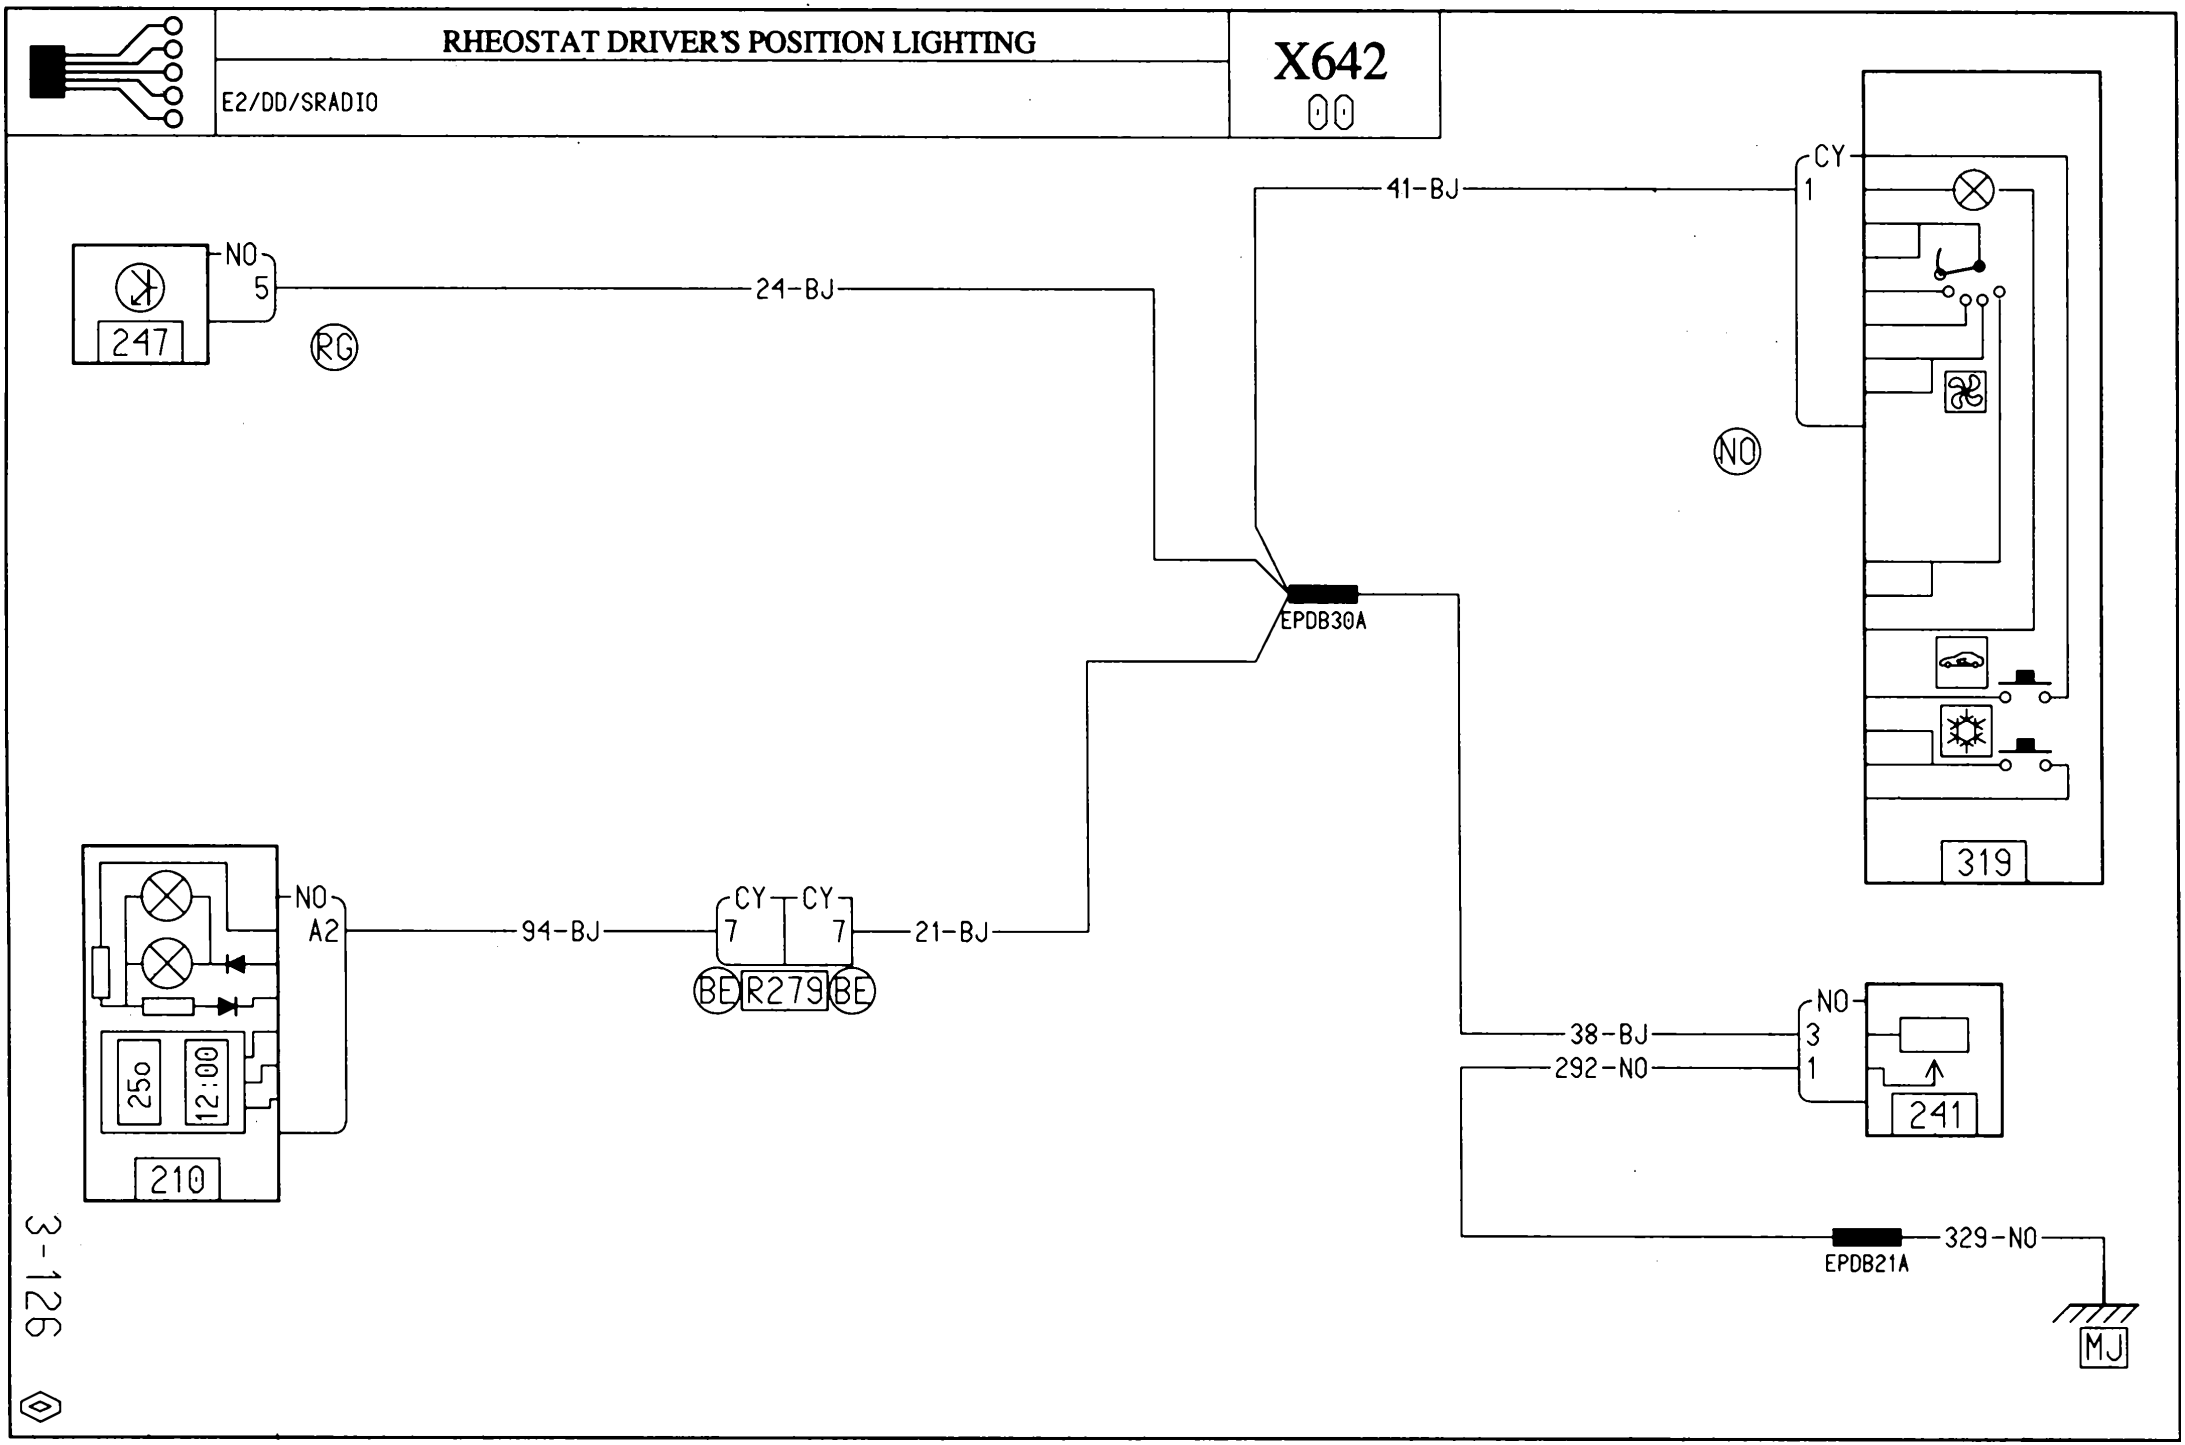

RHEOSTAT DRIVER'S POSITION LIGHTING
E2/DD/SRADIO
X642
00
247
NO
5
24-BJ
RG
41-BJ
CY
1
NO
319
EPDB30A
210
NO
A2
94-BJ
CY
7
CY
7
21-BJ
BE
R279
BE
38-BJ
292-NO
NO
3
1
241
EPDB21A
329-NO
MJ
3-126


GLOVE COMPARTMENT LIGHTING


X642
00

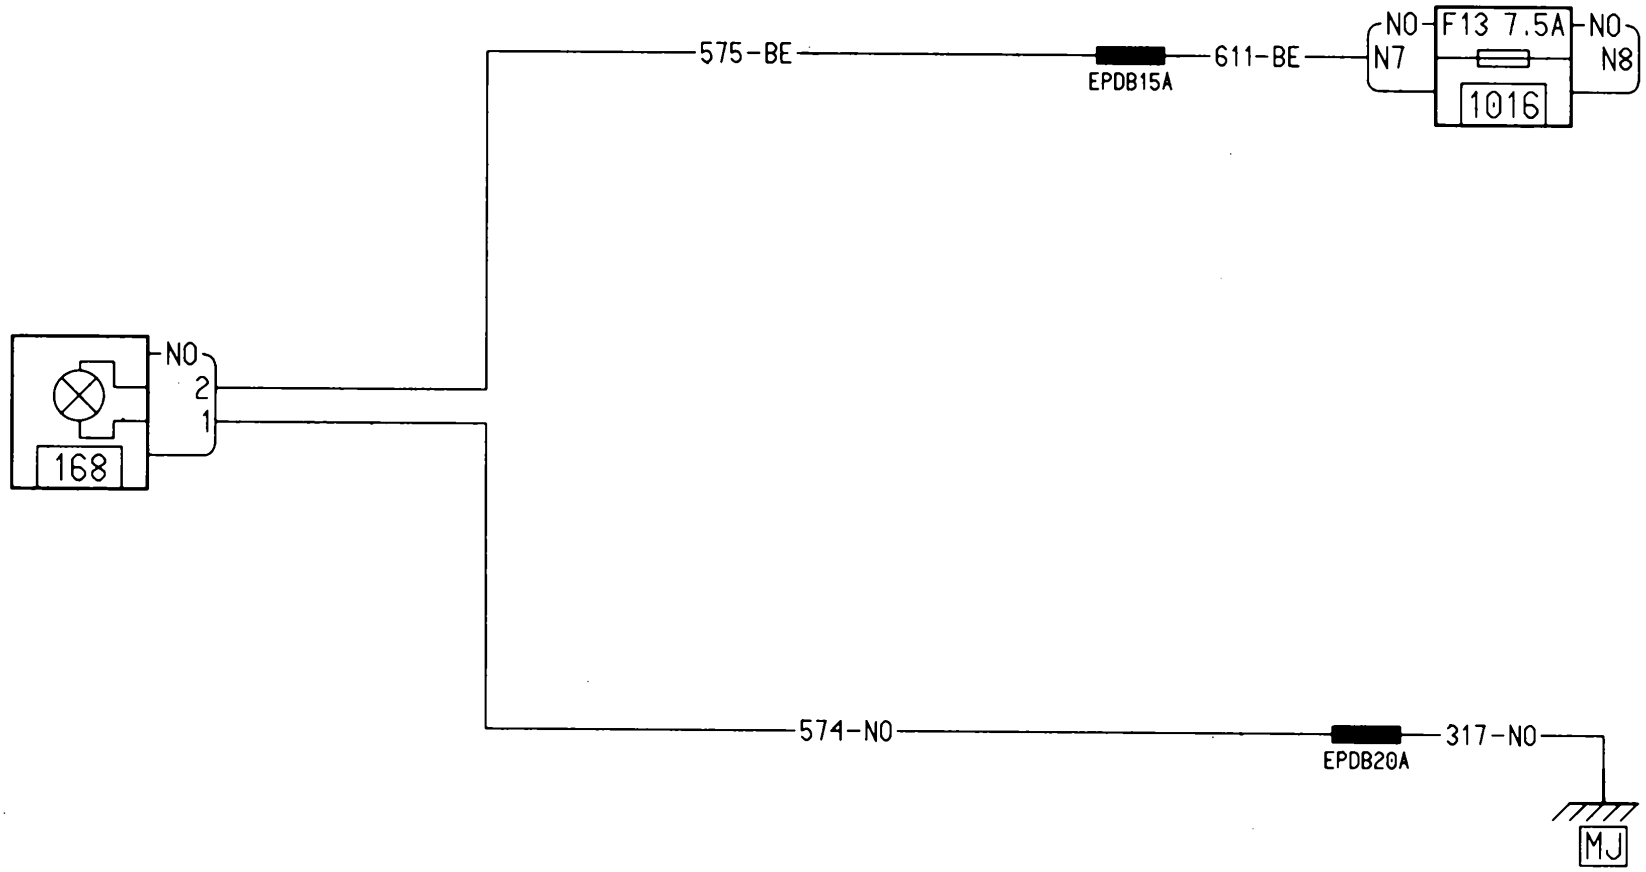


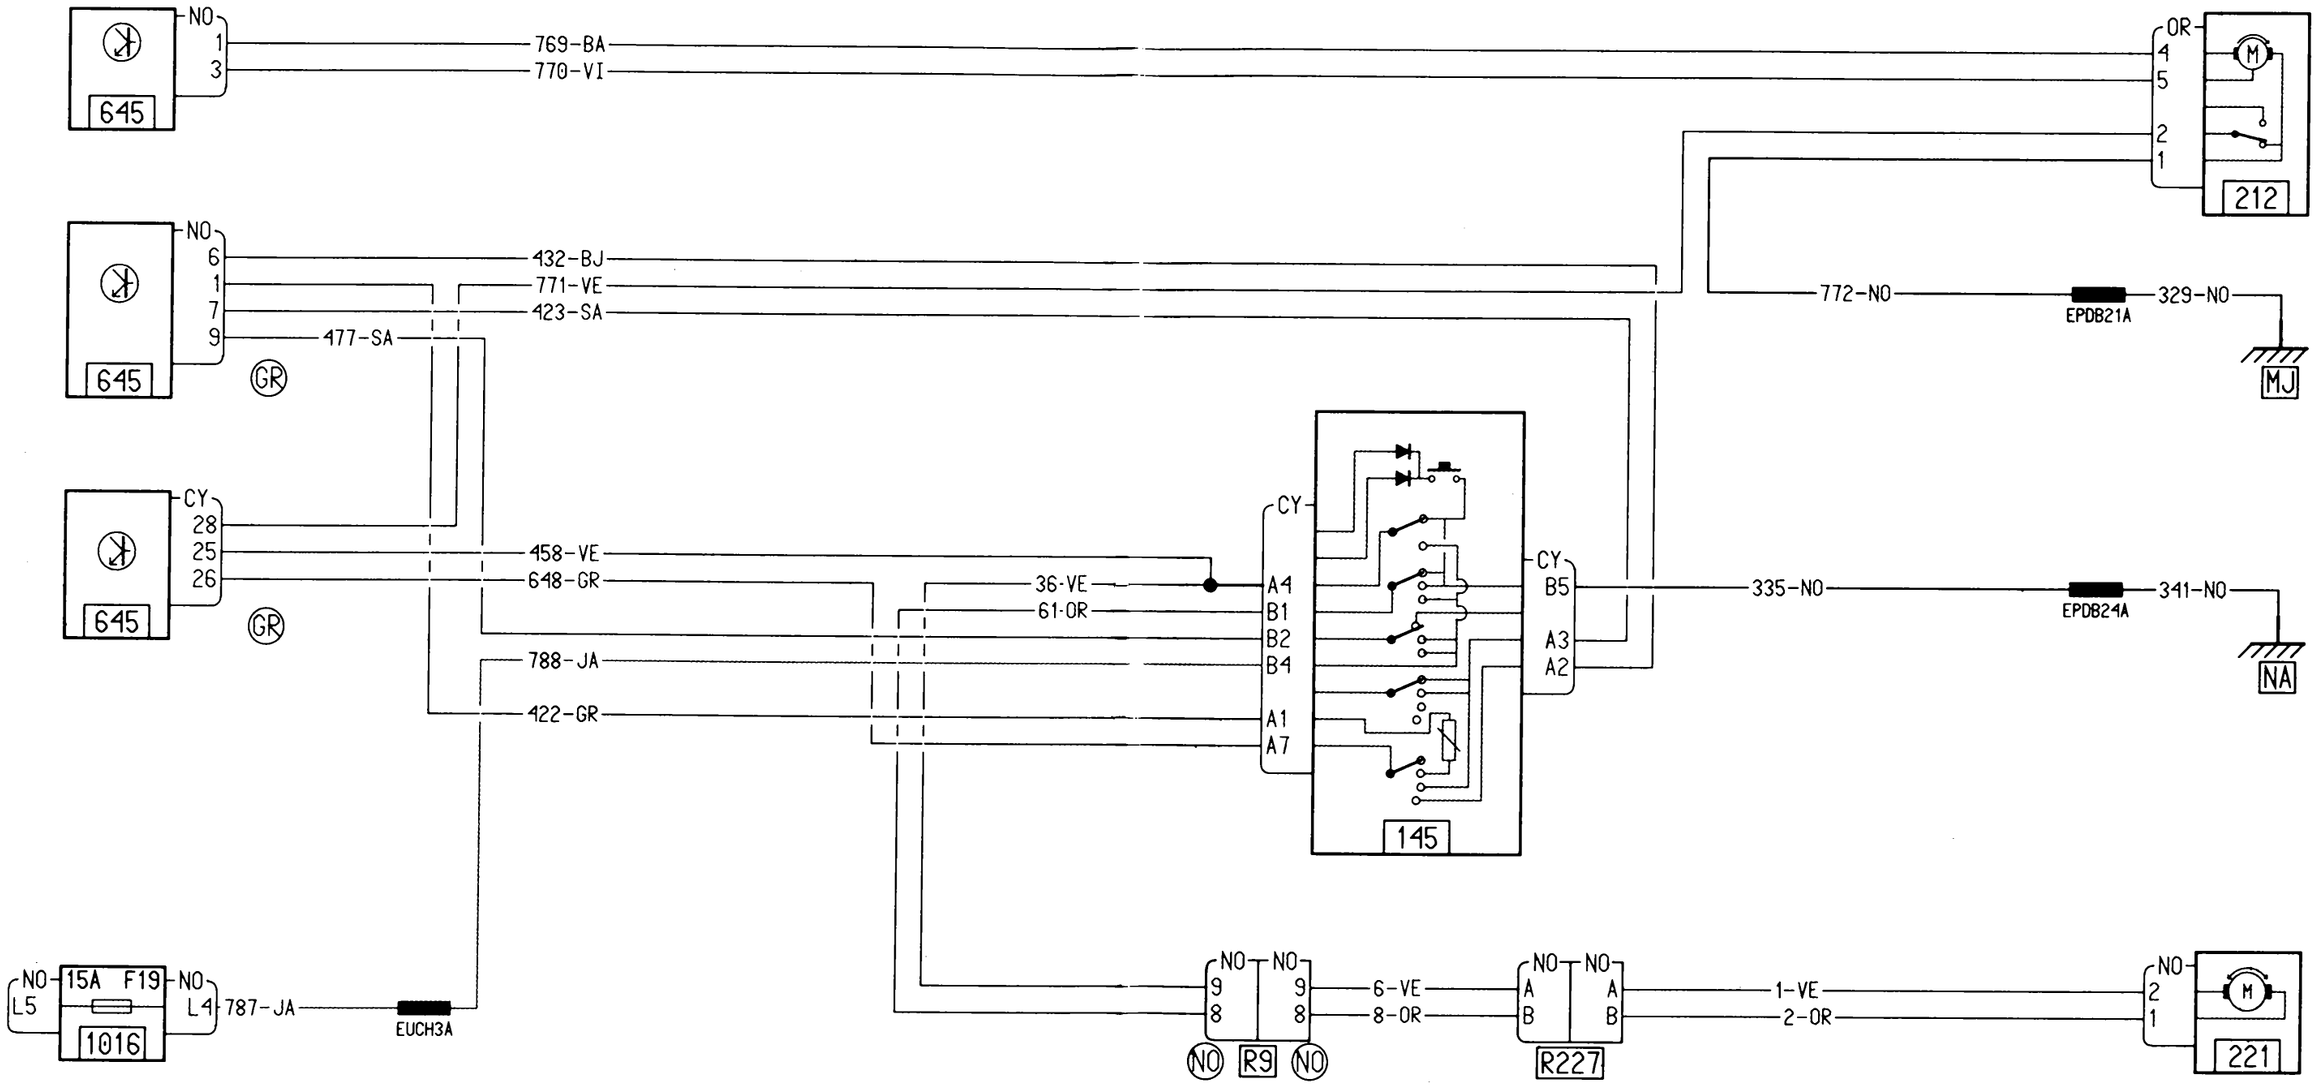
645
NO
1
3
769-BA
770-VI
212
OR
4
5
2
1
M
772-NO
EPDB21A
329-NO
MJ
645
NO
6
1
7
9
432-BJ
771-VE
423-SA
477-SA
GR
645
CY
28
25
26
458-VE
648-GR
GR
788-JA
422-GR
145
CY
A4
B1
B2
B4
A1
A7
36-VE
61-OR
CY
B5
A3
A2
335-NO
EPDB24A
341-NO
NA
NO
L5
15A F19
1016
NO
L4
787-JA
EUCH3A
NO
9
8
NO
9
8
NO
R9
NO
6-VE
8-OR
NO
A
B
NO
A
B
R227
1-VE
2-OR
NO
2
1
M
221

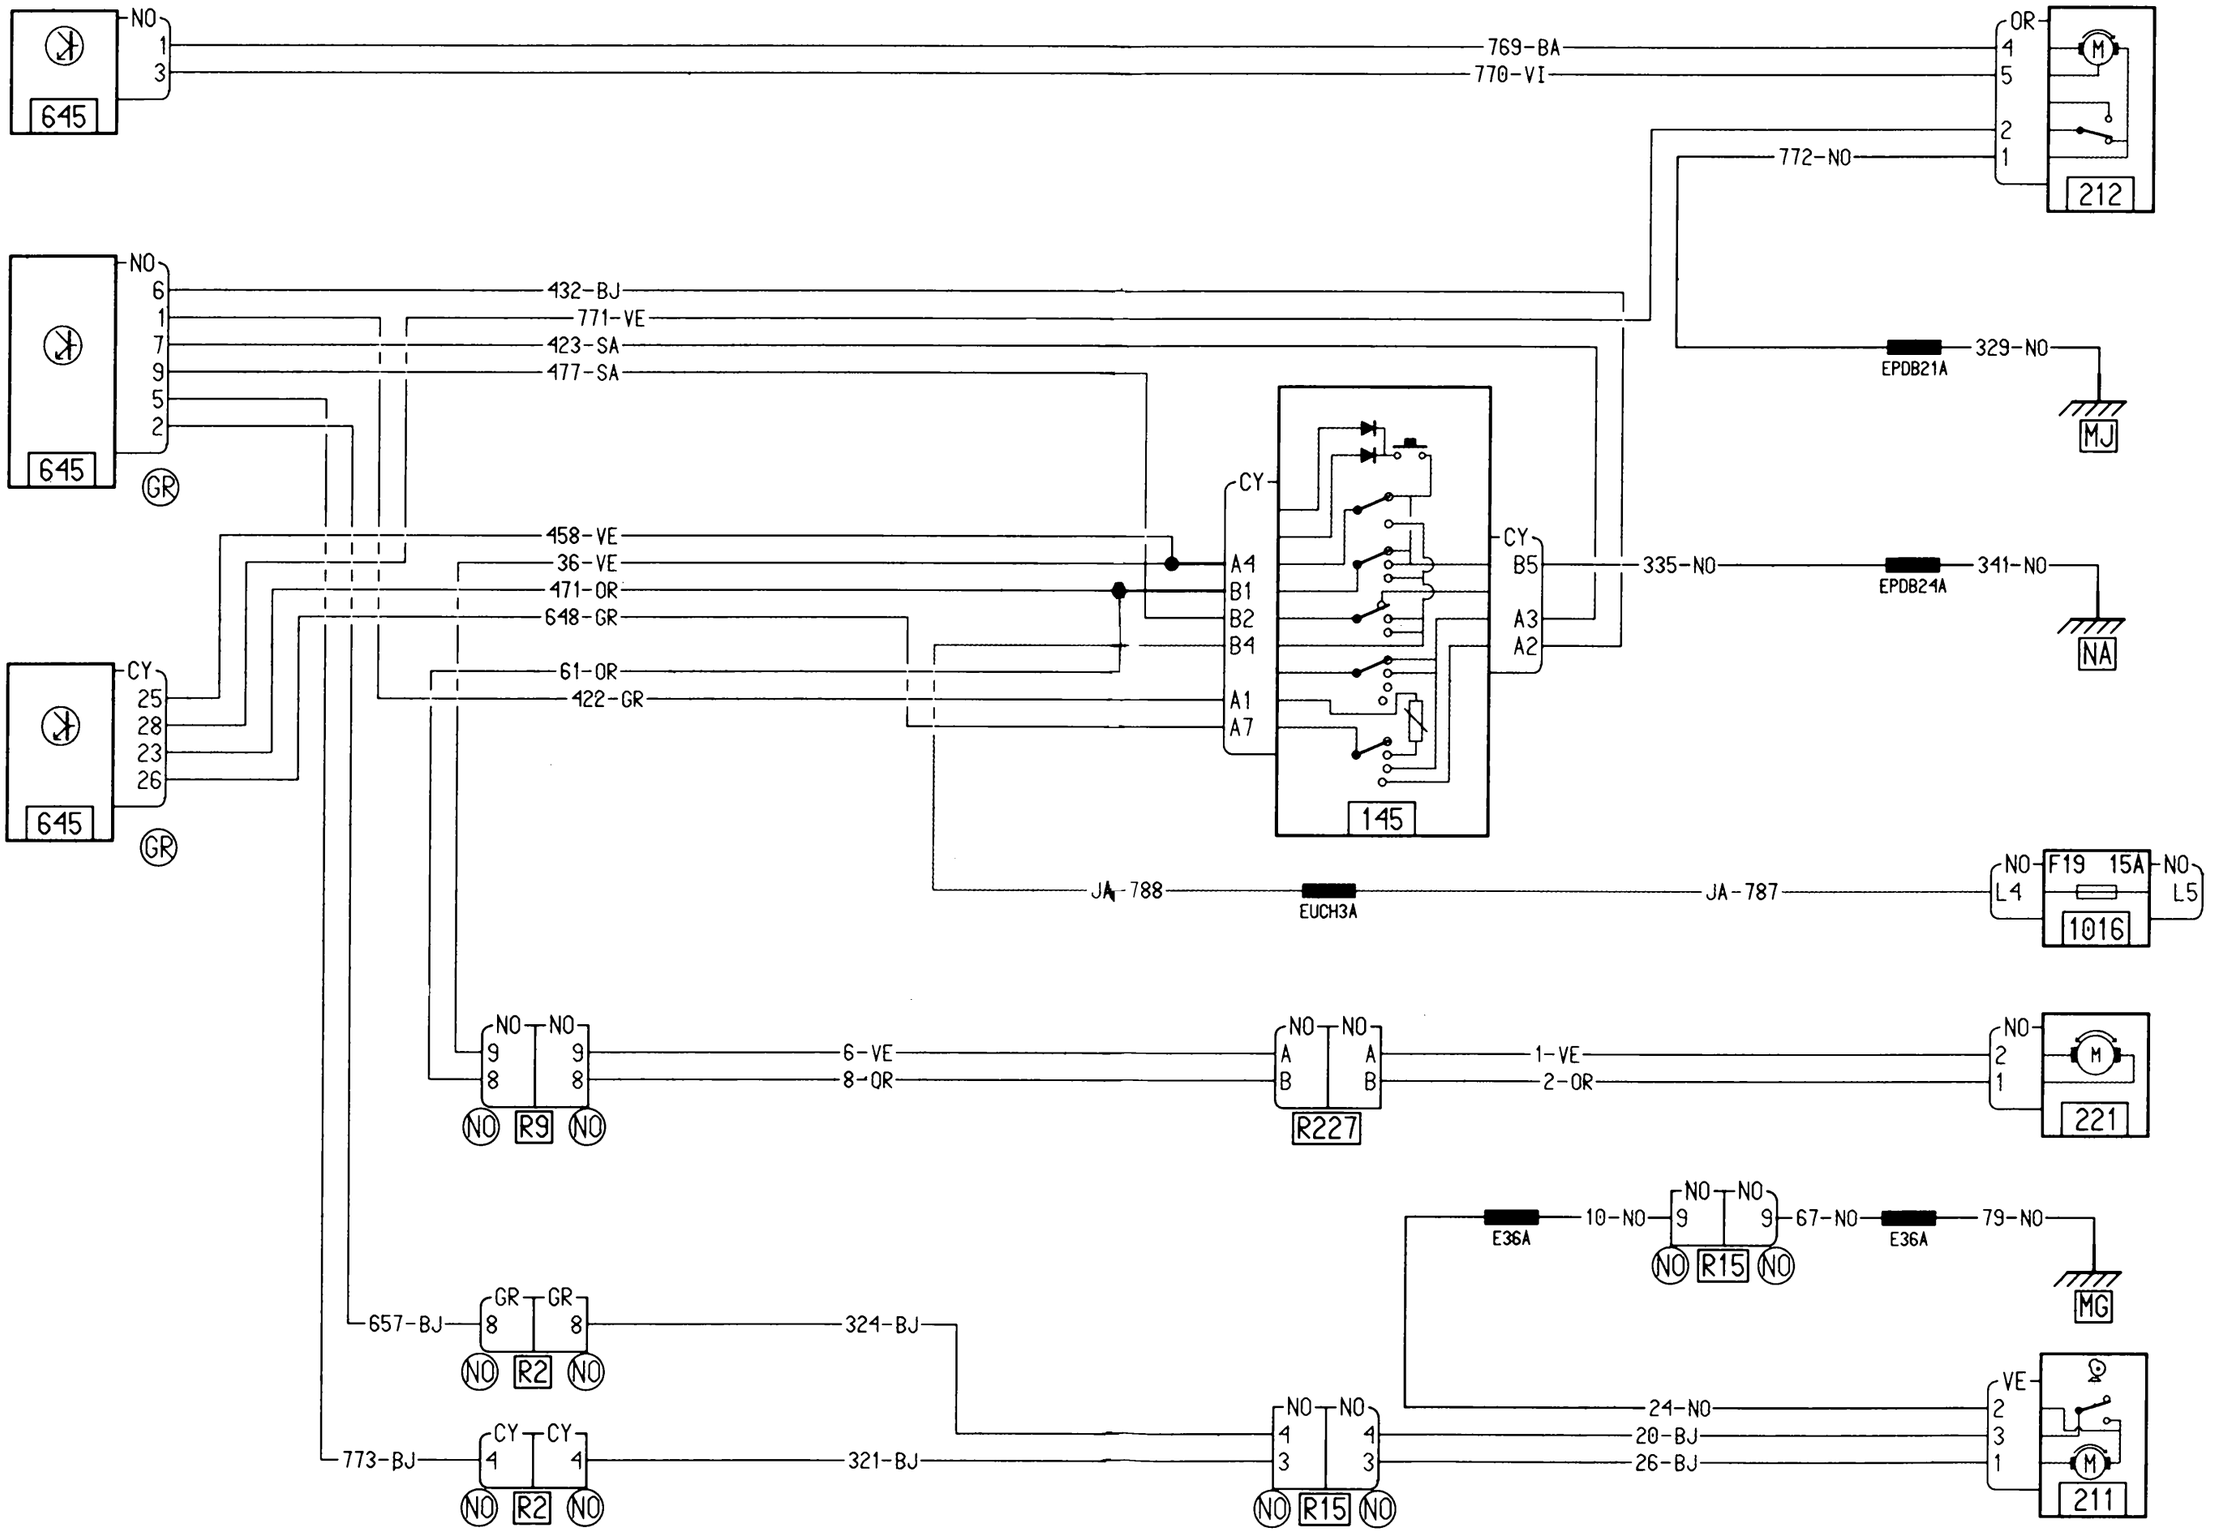
645
NO
1
3
769-BA
770-VI
OR
4
5
2
1
212
772-NO
645
NO
6
1
7
9
5
2
GR
432-BJ
771-VE
423-SA
477-SA
EPDB21A
329-NO
MJ
CY
458-VE
36-VE
471-OR
648-GR
61-OR
422-GR
A4
B1
B2
B4
A1
A7
CY
B5
A3
A2
335-NO
EPDB24A
341-NO
NA
645
CY
25
28
23
26
GR
145
JA-788
EUCH3A
JA-787
NO
L4
F19 15A
NO
L5
1016
NO
9
8
NO
R9
NO
6-VE
8-OR
NO
A
B
NO
R227
1-VE
2-OR
NO
2
1
221
E36A
10-NO
NO
9
NO
R15
NO
9
67-NO
E36A
79-NO
MG
657-BJ
GR
8
NO
R2
NO
GR
8
324-BJ
773-BJ
CY
4
NO
R2
NO
CY
4
321-BJ
NO
4
3
NO
R15
NO
4
3
24-NO
20-BJ
26-BJ
VE
2
3
1
211

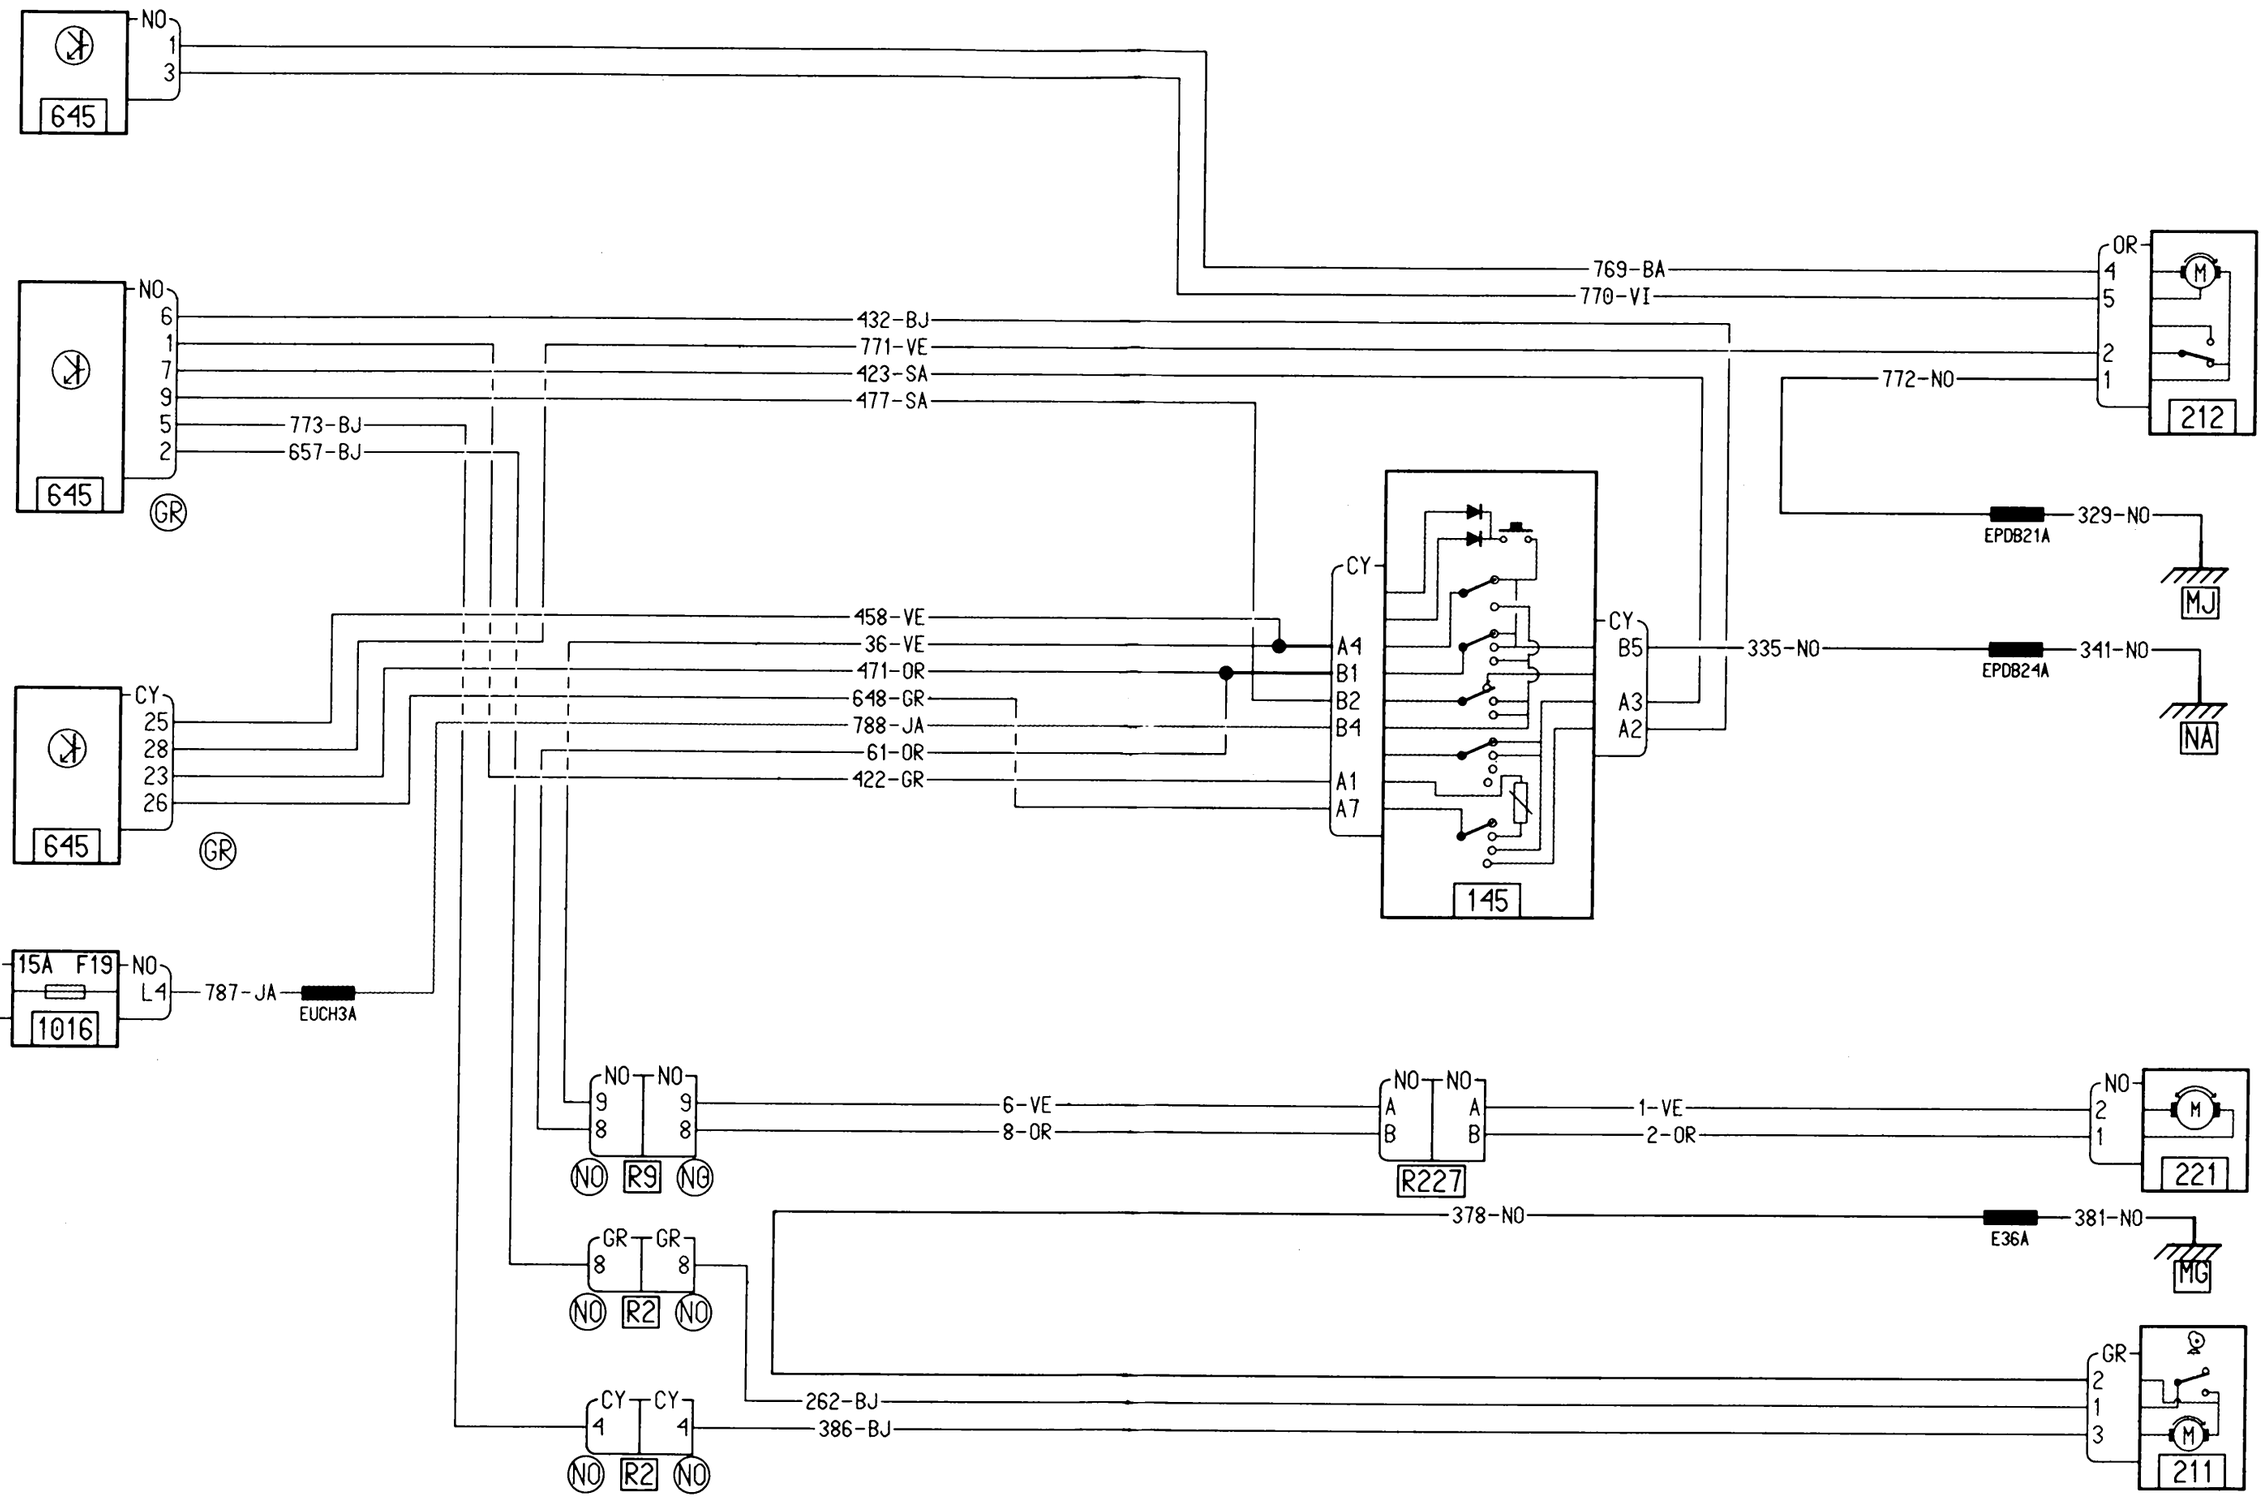

NO
1
3
645
769-BA
770-VI
OR
4
5
2
1
212
772-NO
329-NO
EPDB21A
MJ
NO
6
1
7
9
5
2
645
GR
432-BJ
771-VE
423-SA
477-SA
773-BJ
657-BJ
CY
A4
B1
B2
B4
A1
A7
145
CY
B5
A3
A2
335-NO
341-NO
EPDB24A
NA
458-VE
36-VE
471-OR
648-GR
788-JA
61-OR
422-GR
CY
25
28
23
26
645
GR
NO
15A F19
NO
L5
L4
1016
787-JA
EUCH3A
NO NO
9 9
8 8
NO R9 NO
6-VE
8-OR
NO NO
A A
B B
R227
1-VE
2-OR
NO
2
1
221
GR GR
8 8
NO R2 NO
378-NO
E36A
381-NO
MG
CY CY
4 4
NO R2 NO
262-BJ
386-BJ
GR
2
1
3
211

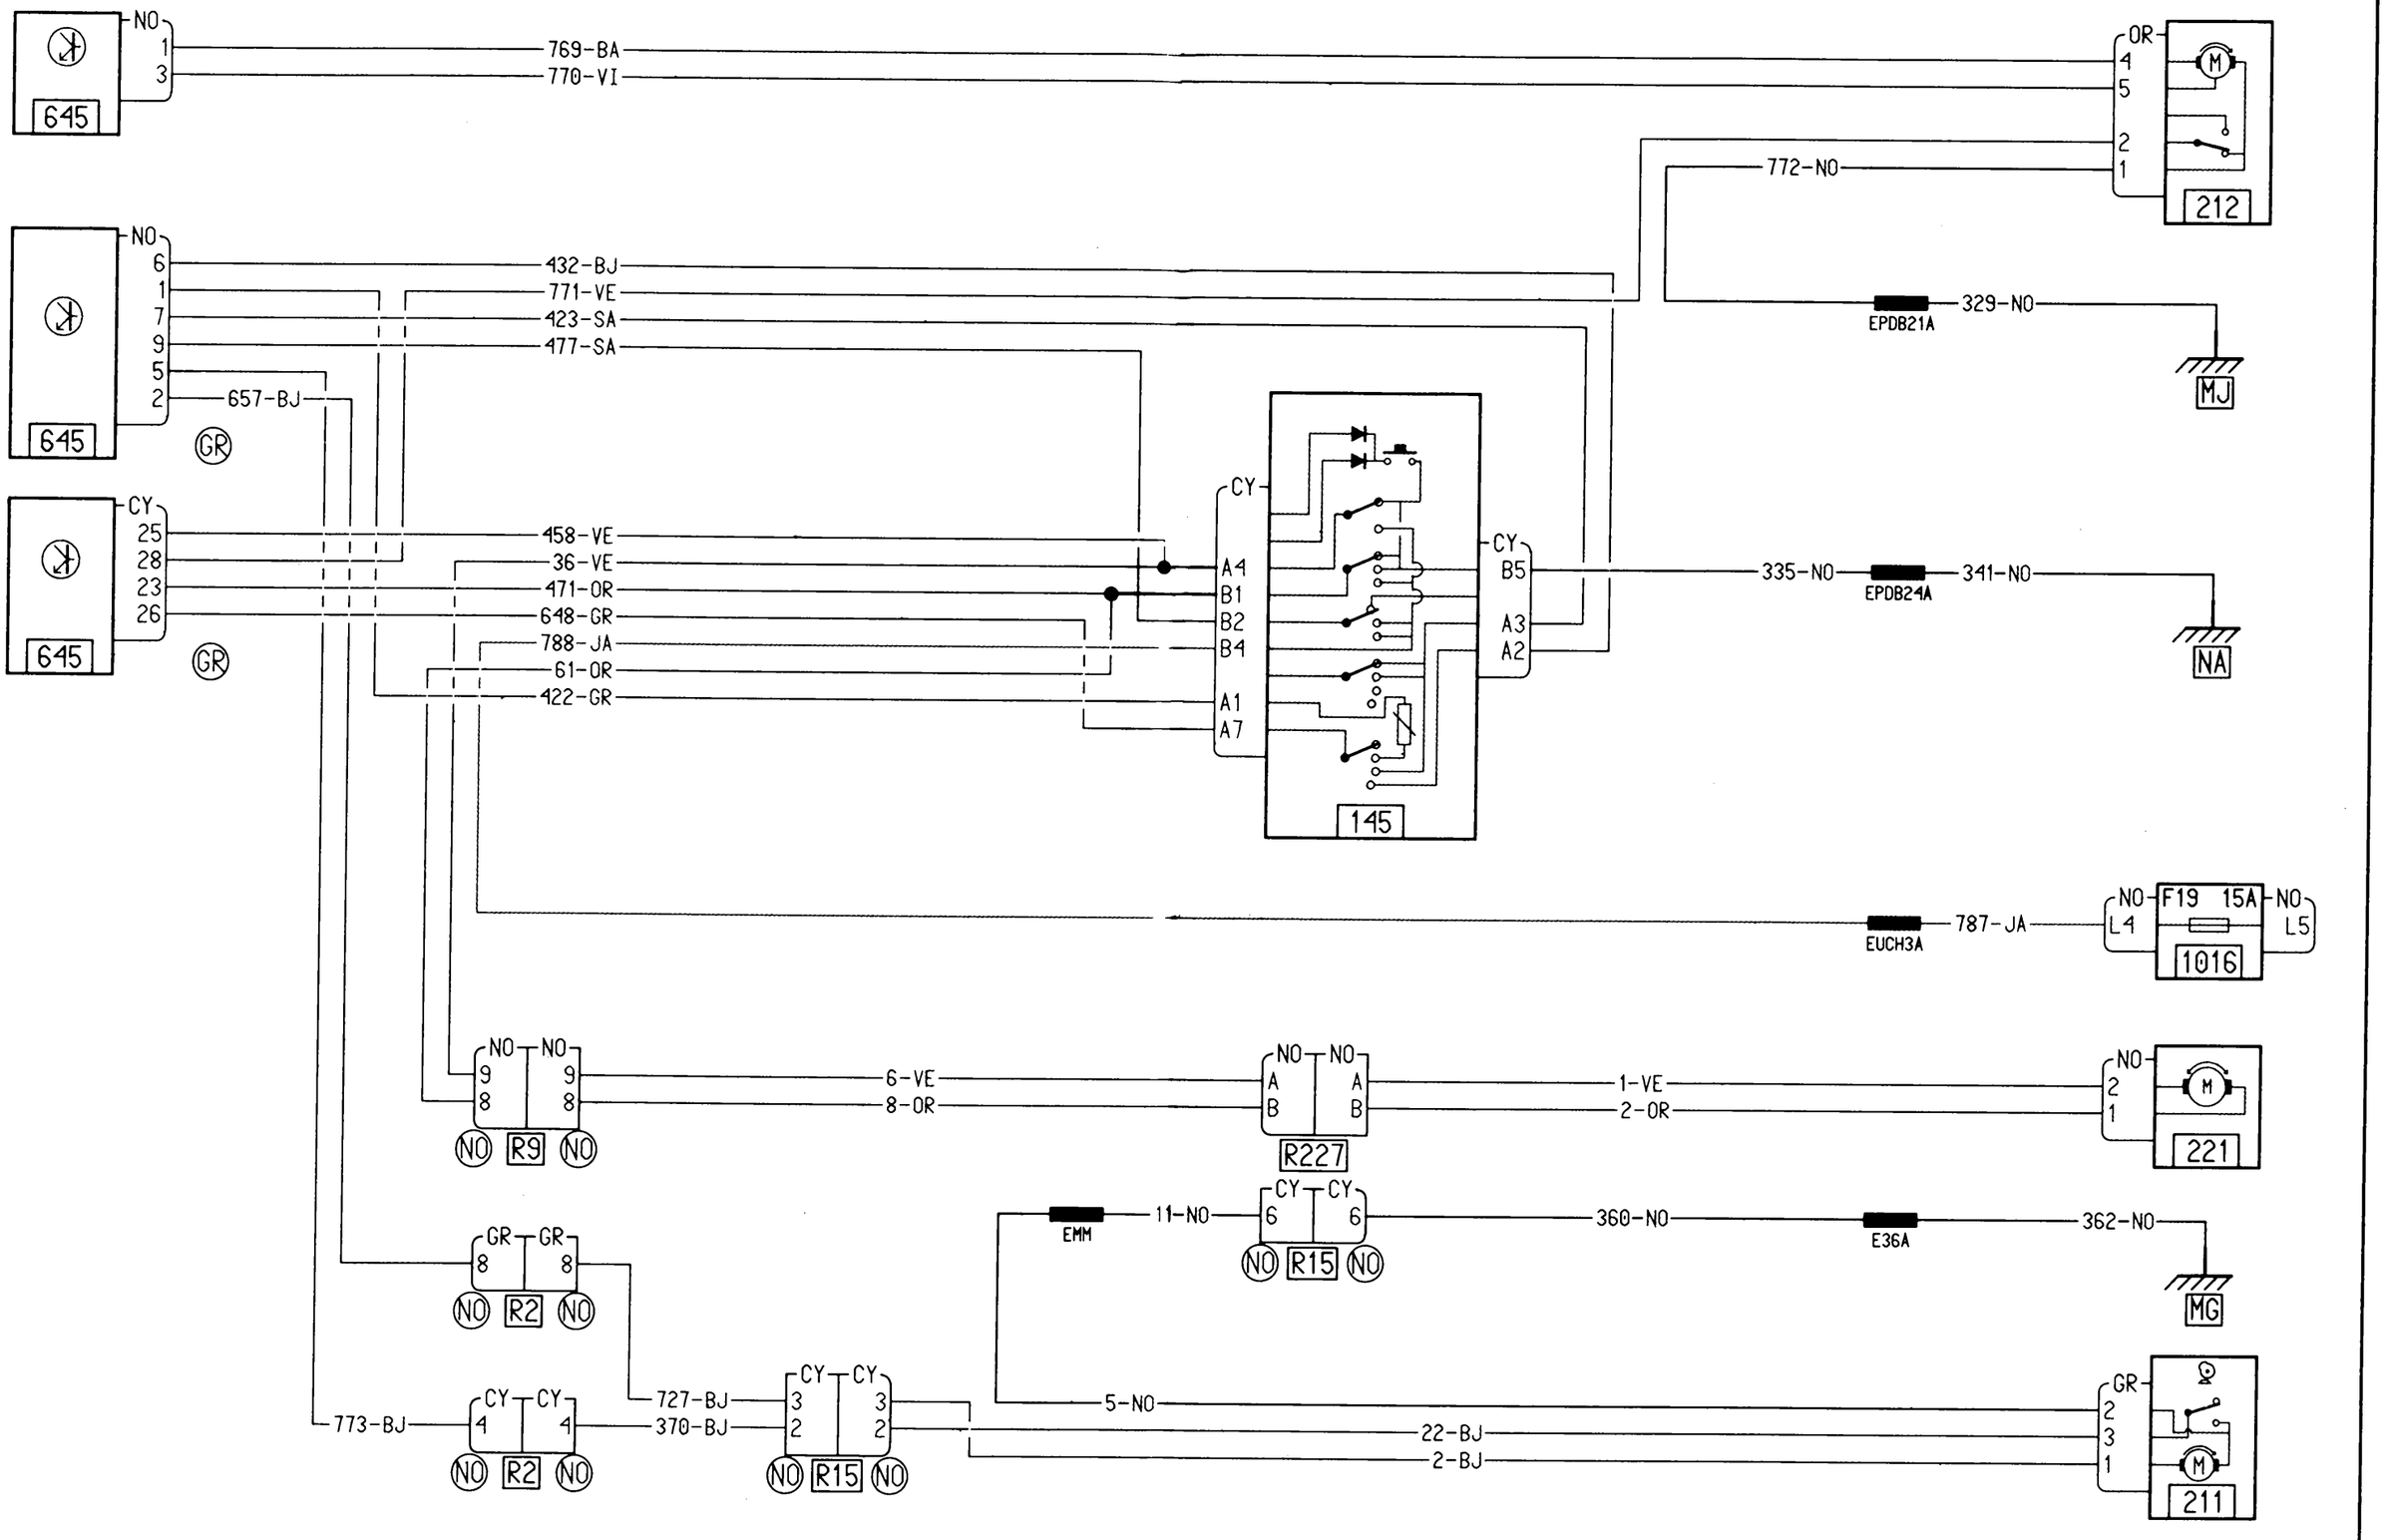
NO
1
3
769-BA
770-VI
645
OR
4
5
2
1
M
212
772-NO
NO
6
1
7
9
5
2
432-BJ
771-VE
423-SA
477-SA
657-BJ
645
GR
EPDB21A
329-NO
MJ
CY
25
28
23
26
458-VE
36-VE
471-OR
648-GR
788-JA
61-OR
422-GR
645
GR
CY
A4
B1
B2
B4
A1
A7
CY
B5
A3
A2
145
335-NO
EPDB24A
341-NO
NA
EUCH3A
787-JA
NO
L4
F19 15A
NO
L5
1016
NO NO
9 9
8 8
NO R9 NO
6-VE
8-OR
NO NO
A A
B B
R227
1-VE
2-OR
NO
2
1
M
221
GR GR
8 8
NO R2 NO
EMM
11-NO
CY CY
6 6
NO R15 NO
360-NO
E36A
362-NO
MG
773-BJ
CY CY
4 4
NO R2 NO
727-BJ
370-BJ
CY CY
3 3
2 2
NO R15 NO
5-NO
22-BJ
2-BJ
GR
2
3
1
M
211

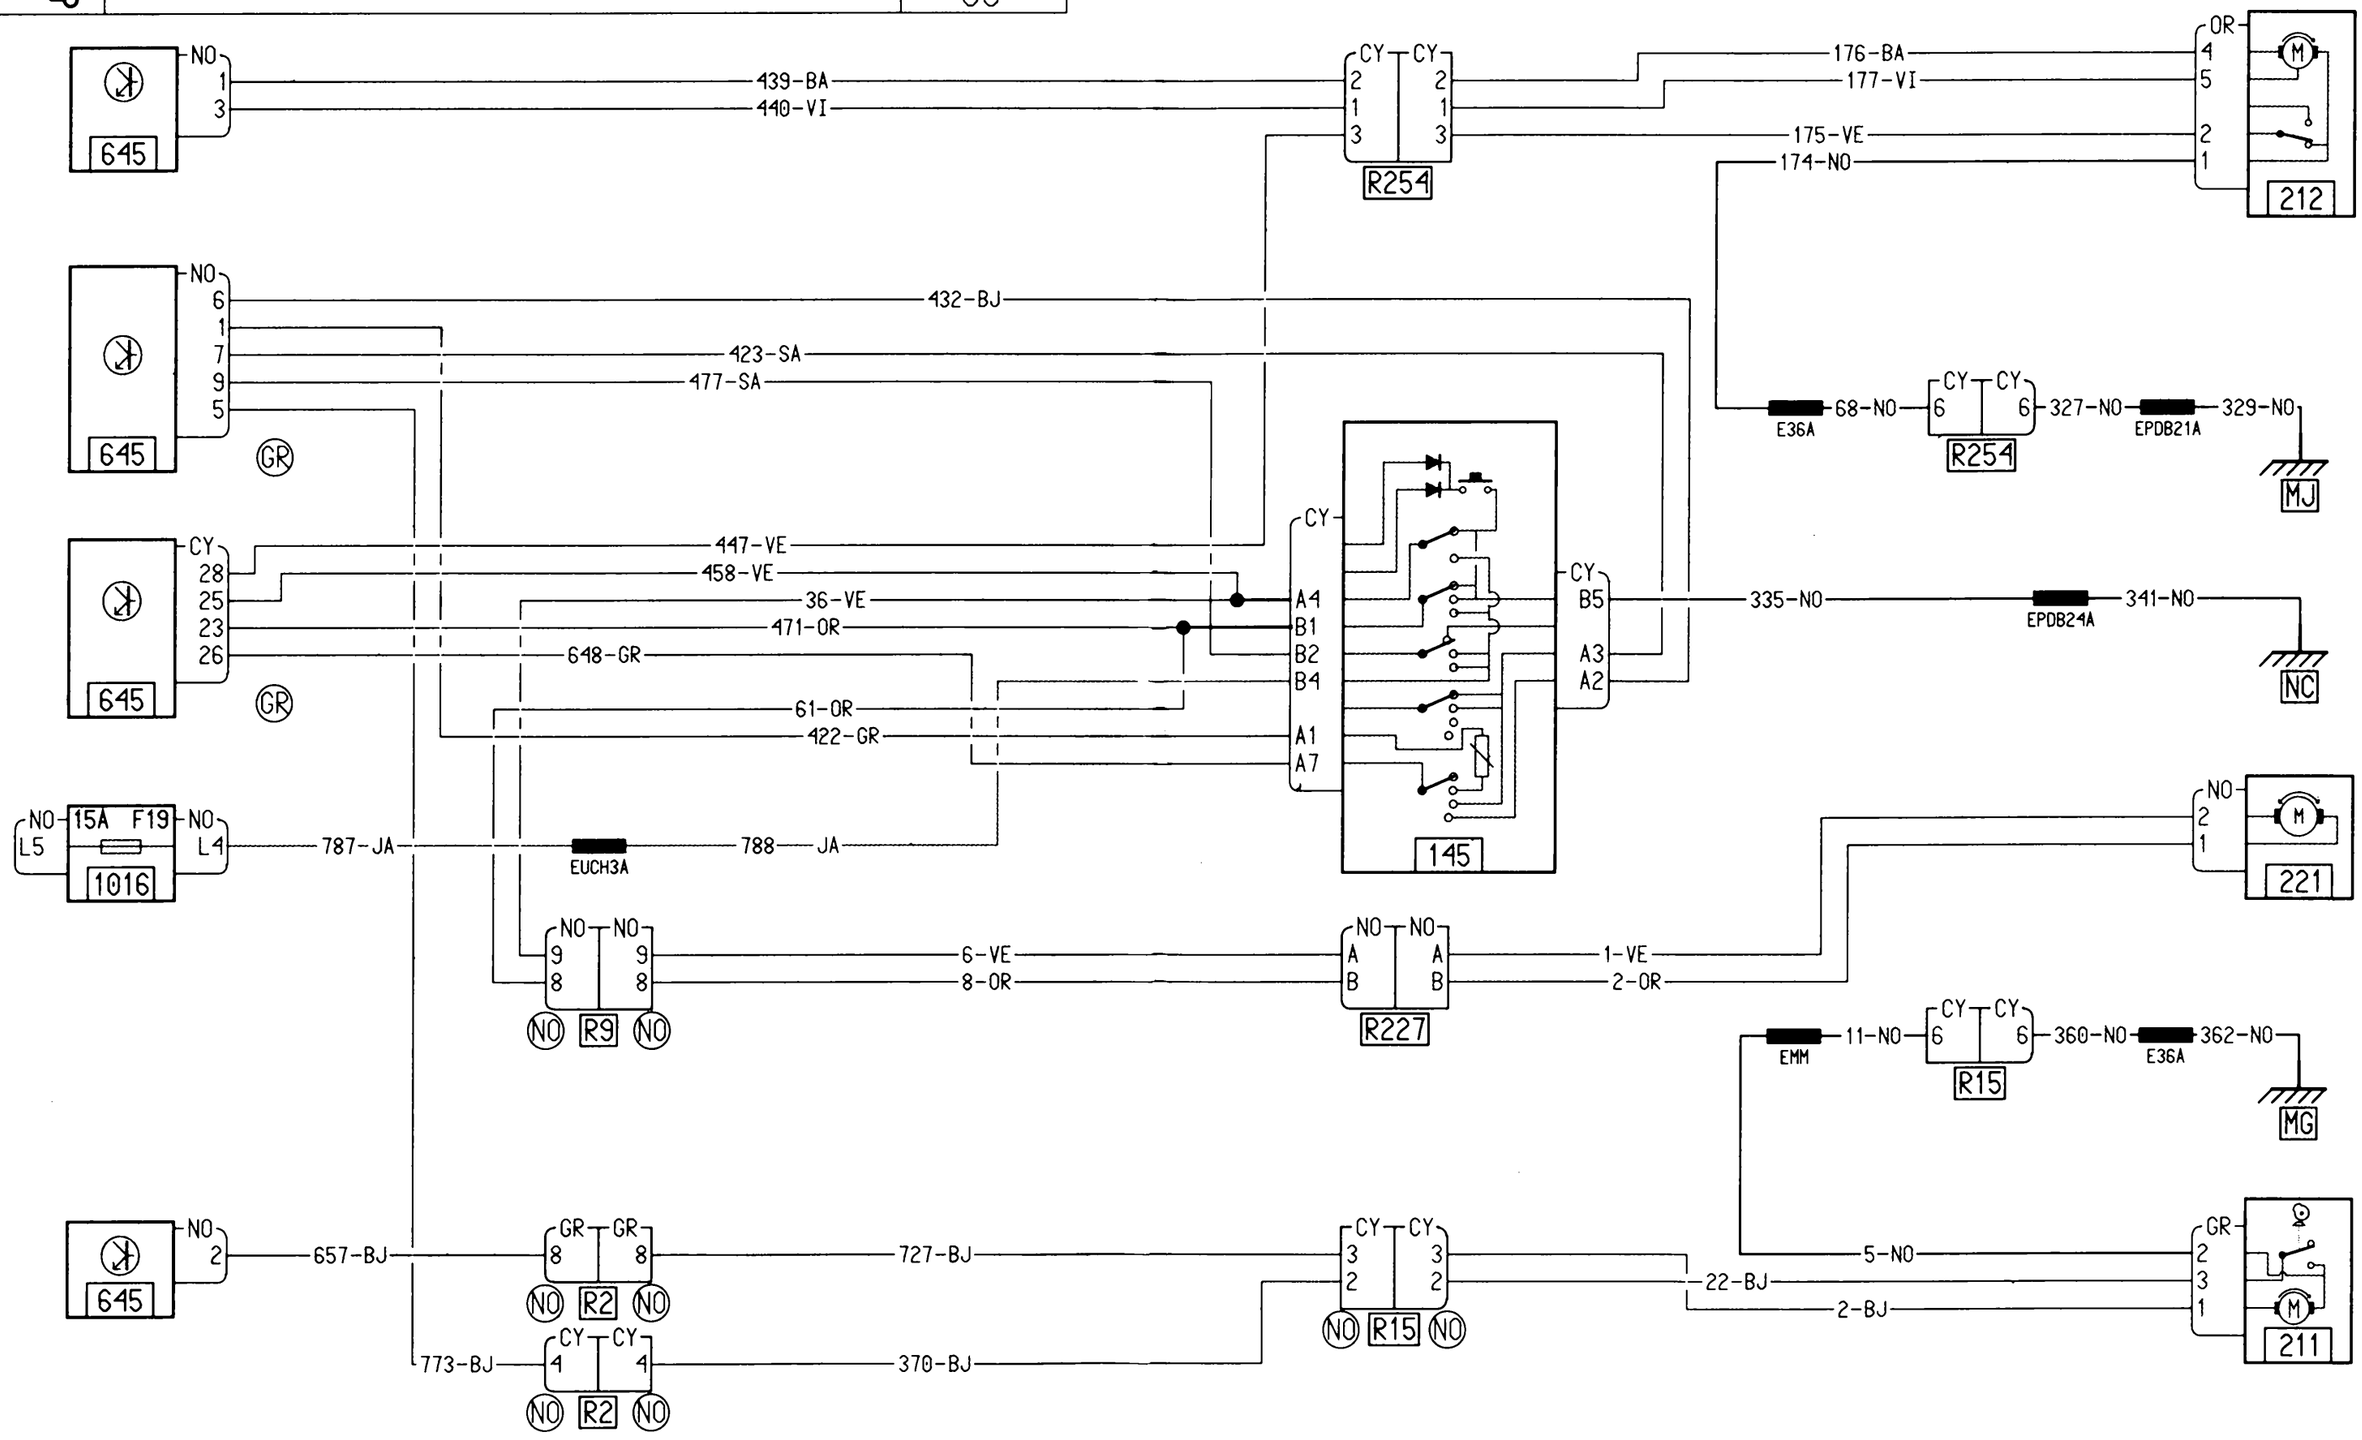
645
NO
1
3
439-BA
440-VI
CY
2
1
3
R254
176-BA
177-VI
175-VE
174-NO
OR
4
5
2
1
M
212
645
NO
6
1
7
9
5
GR
432-BJ
423-SA
477-SA
E36A
68-NO
CY
6
R254
327-NO
EPDB21A
329-NO
MJ
645
CY
28
25
23
26
GR
447-VE
458-VE
36-VE
471-OR
648-GR
61-OR
422-GR
CY
A4
B1
B2
B4
A1
A7
145
CY
B5
A3
A2
335-NO
EPDB24A
341-NO
NC
NO
15A F19
L5
L4
1016
787-JA
EUCH3A
788 JA
NO
9
8
R9
6-VE
8-OR
NO
A
B
R227
1-VE
2-OR
NO
2
1
M
221
EMM
11-NO
CY
6
R15
360-NO
E36A
362-NO
MG
645
NO
2
657-BJ
GR
8
R2
727-BJ
CY
3
2
R15
5-NO
22-BJ
2-BJ
GR
2
3
1
M
211
773-BJ
CY
4
R2
370-BJ


REAR FOGLIGHTS


X642
00

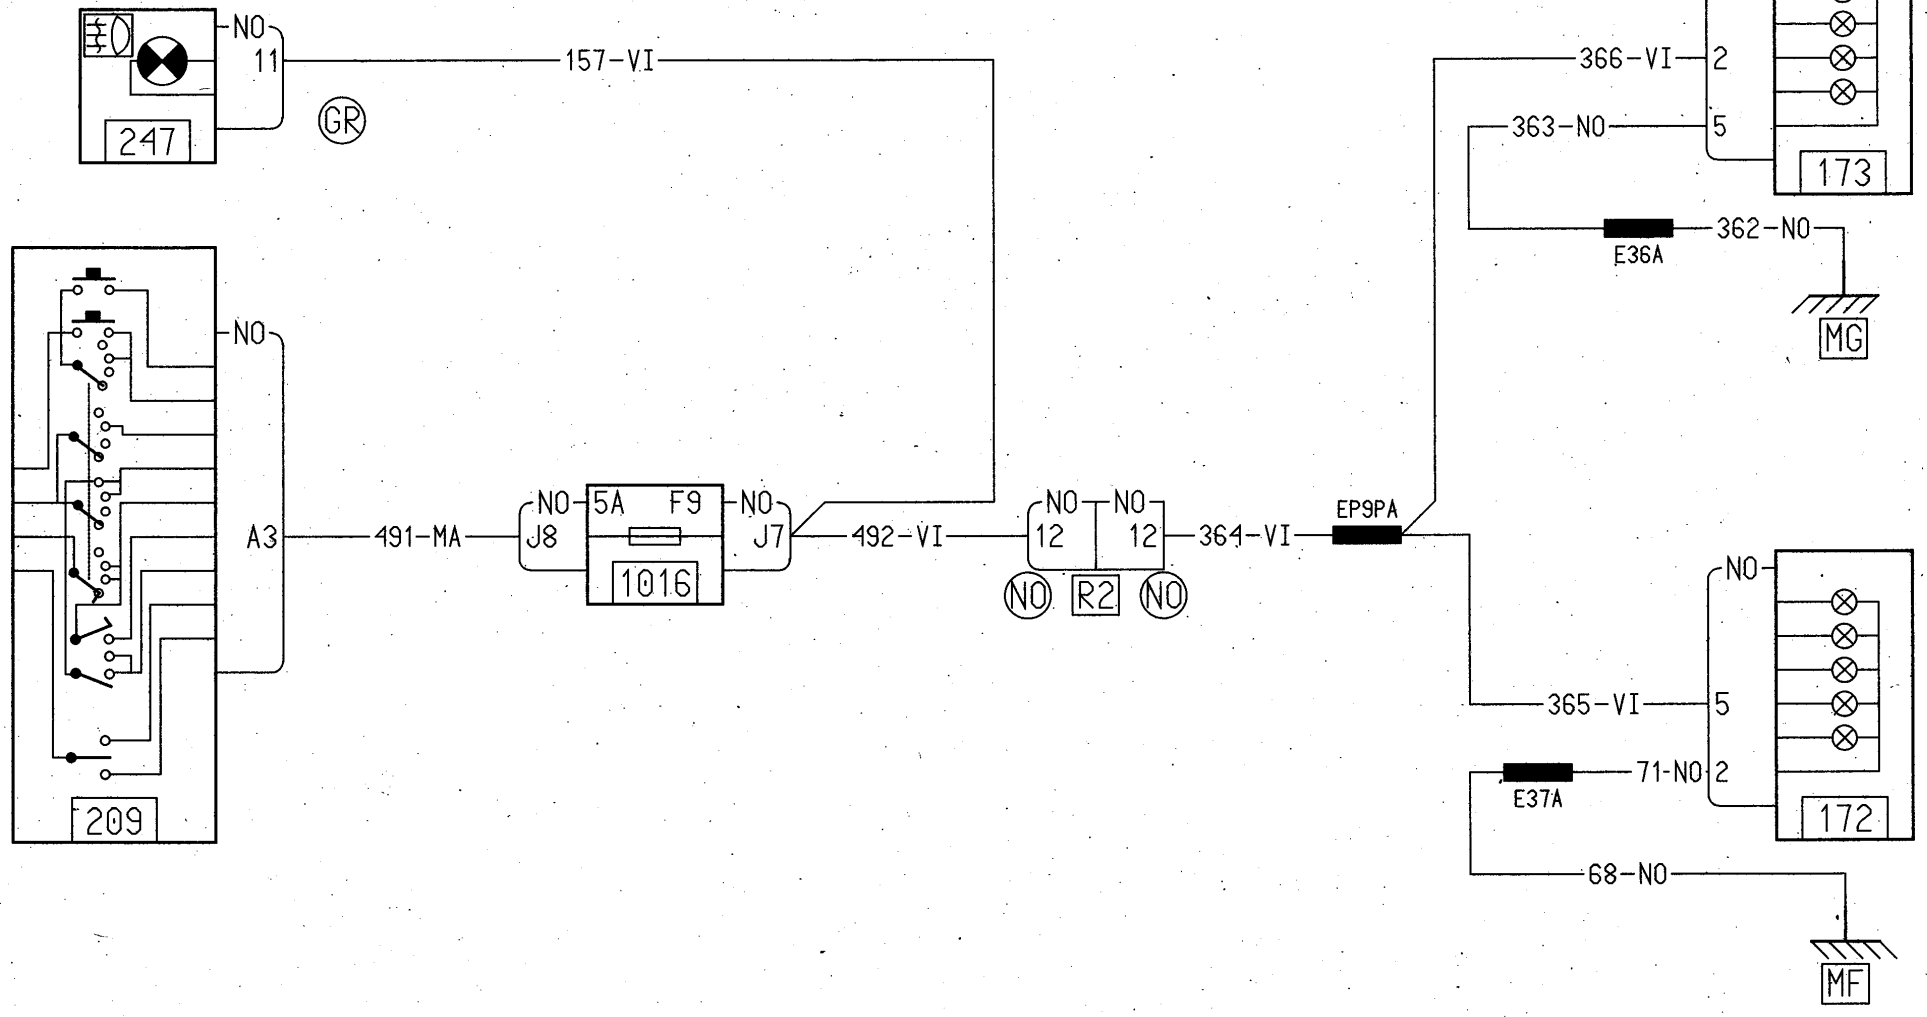


REAR FOGLIGHTS

X642
00

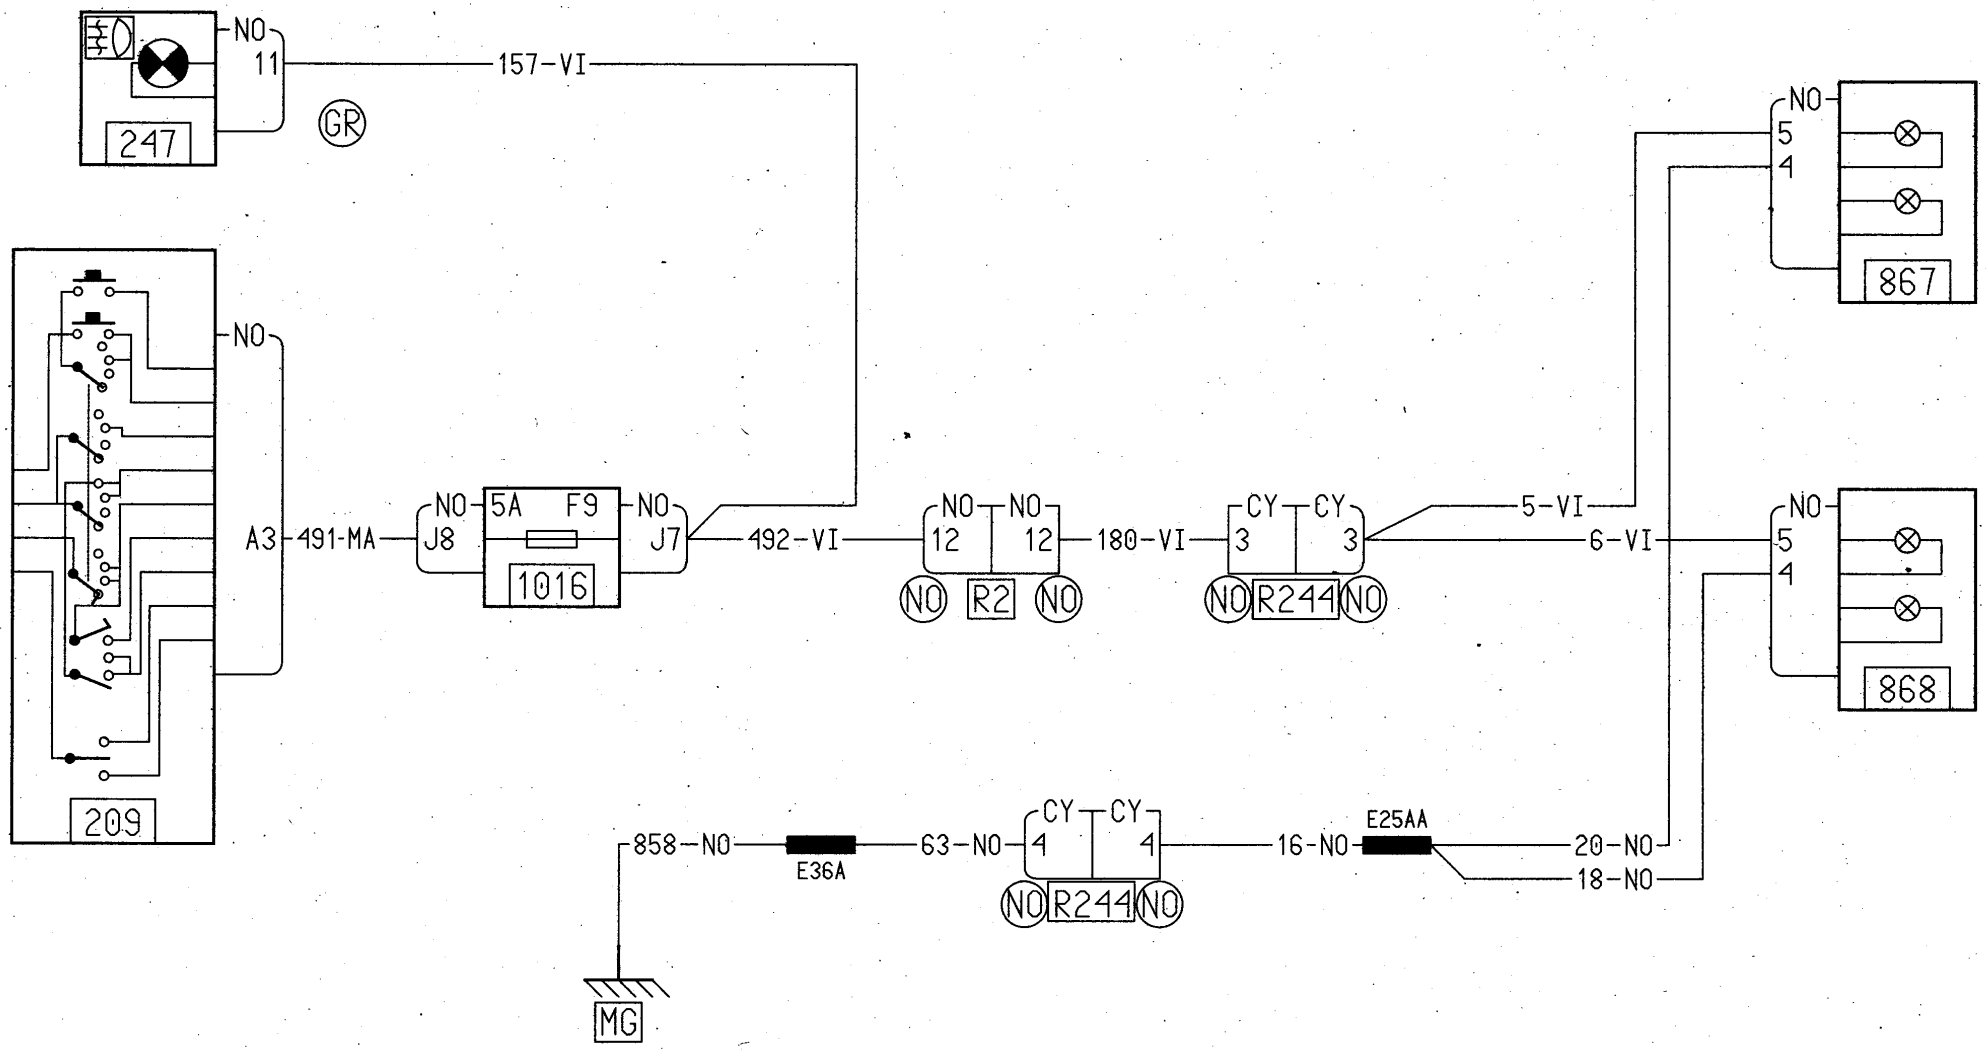

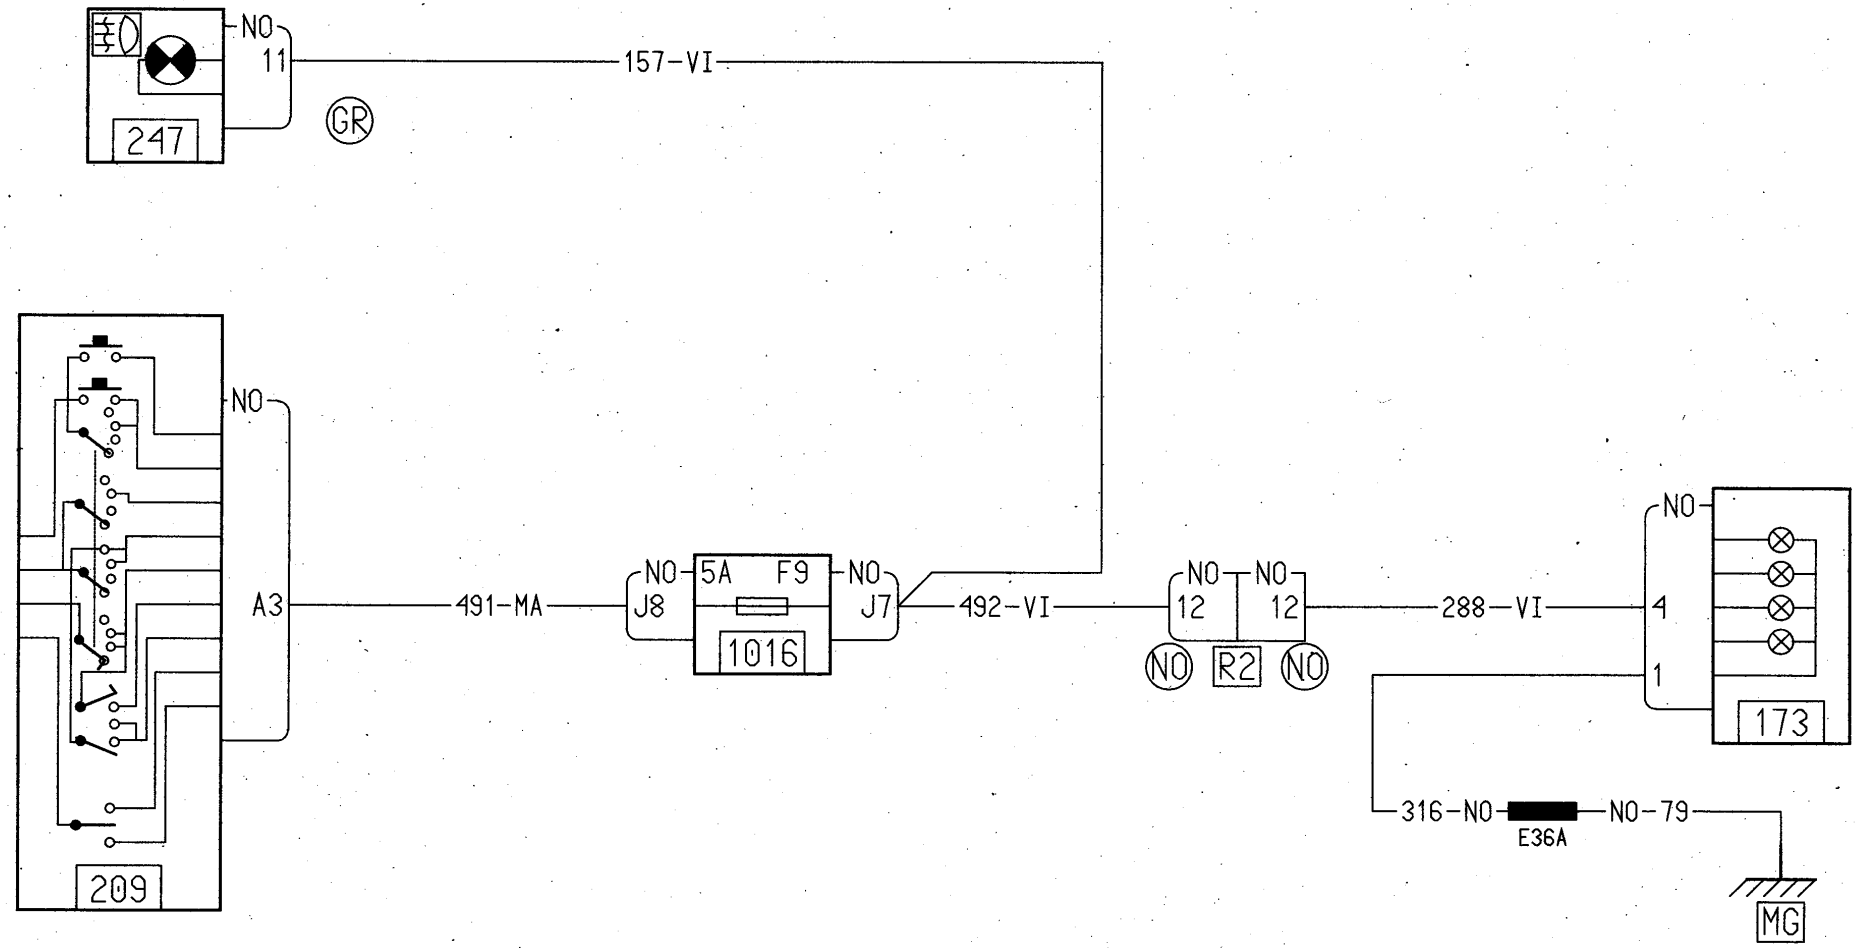

NO
11
157-VI
247
GR
NO
A3
209
491-MA
NO
J8
5A
F9
1016
NO
J7
492-VI
NO
12
NO
12
NO
R2
NO
288-VI
NO
4
1
173
316-NO
E36A
NO-79
MG

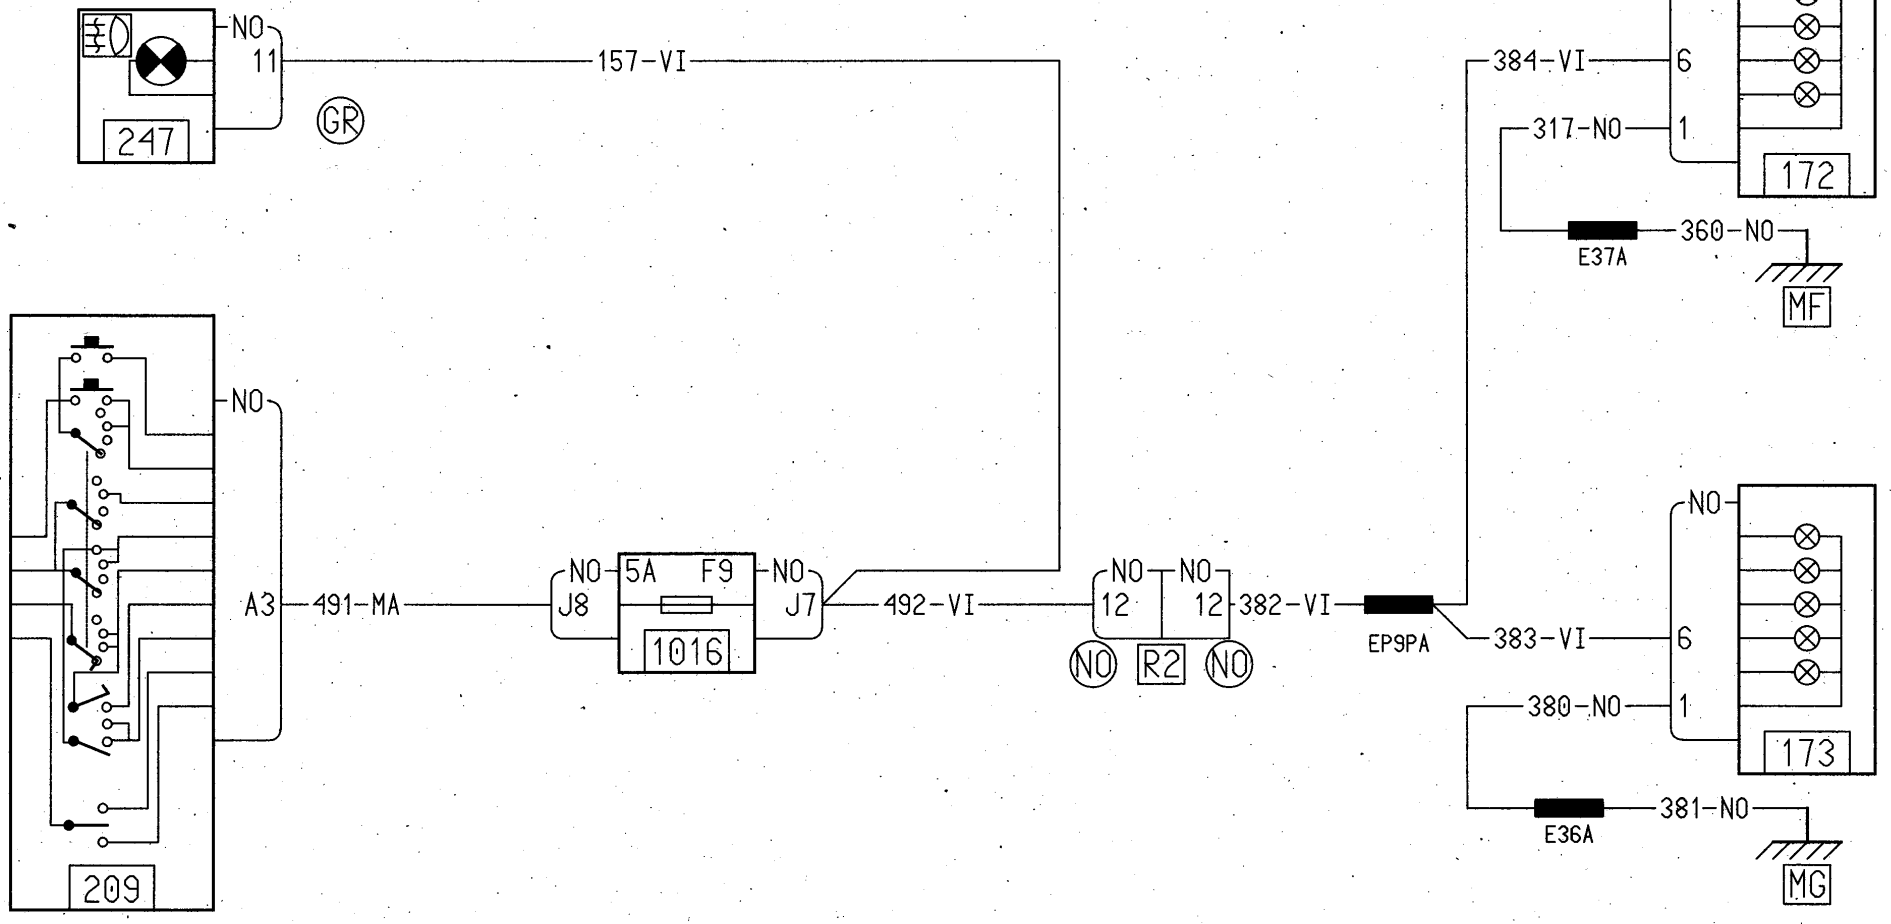

NO
11
247
GR
157-VI
NO
A3
209
491-MA
NO
J8
5A
F9
1016
NO
J7
492-VI
NO
12
NO
12
NO
R2
NO
382-VI
EP9PA
384-VI
317-NO
NO
6
1
172
E37A
360-NO
MF
383-VI
380-NO
NO
6
1
173
E36A
381-NO
MG


FRONT FOGLIGHTS


PROJAB


X642
00

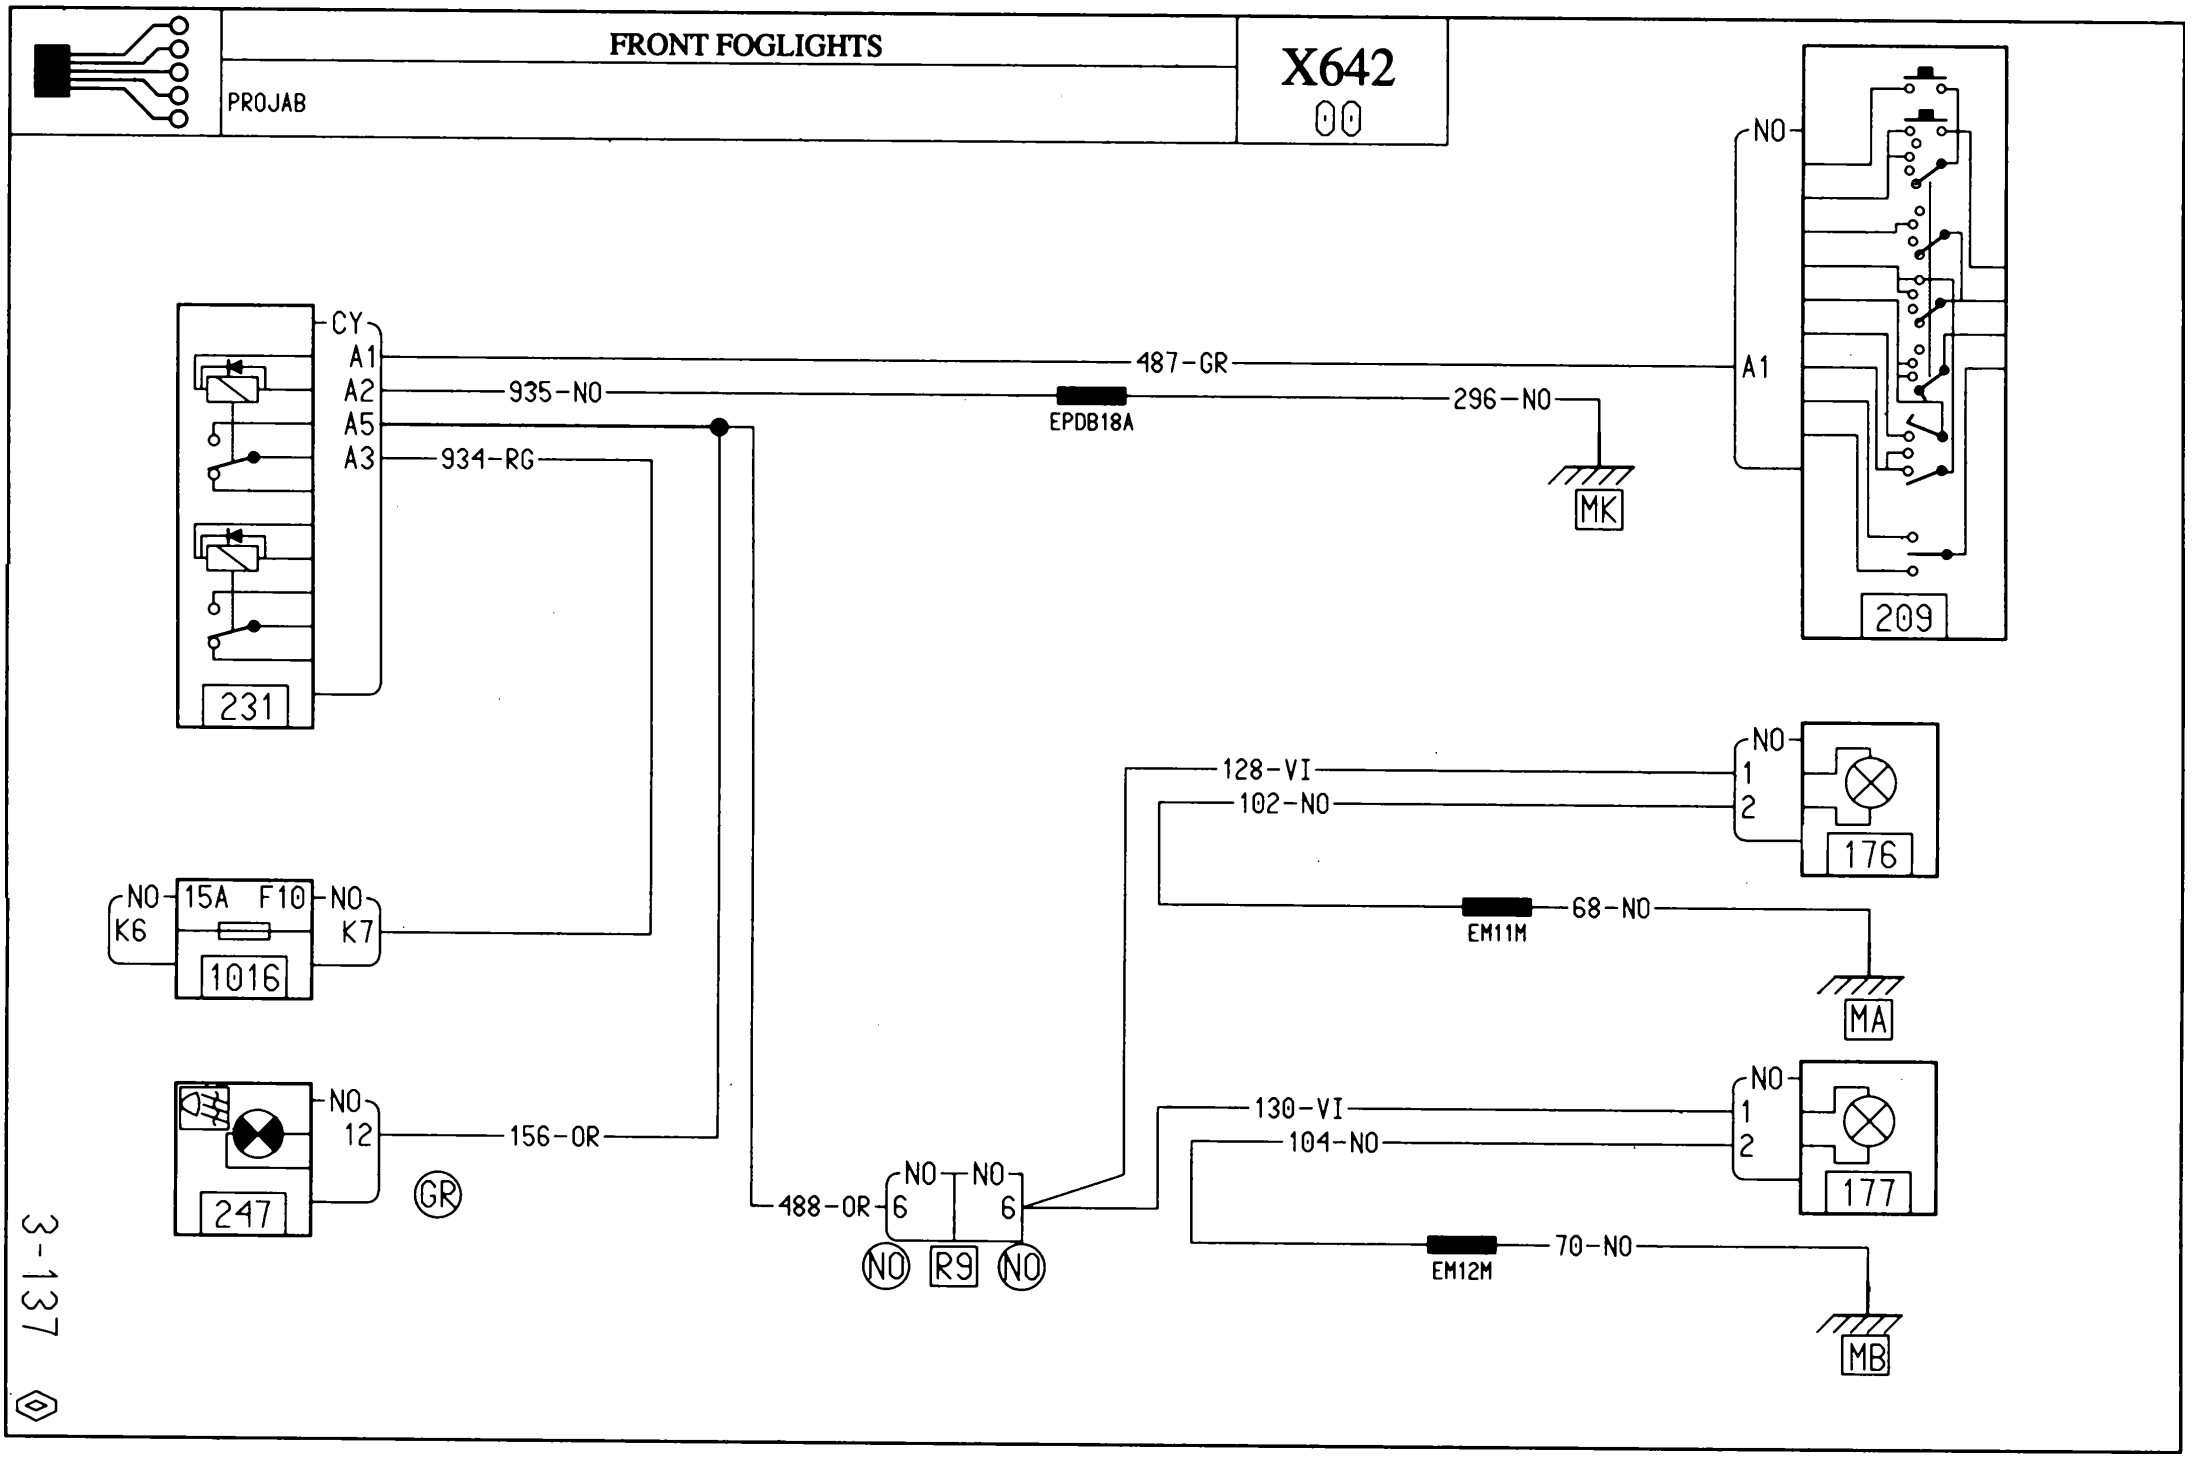

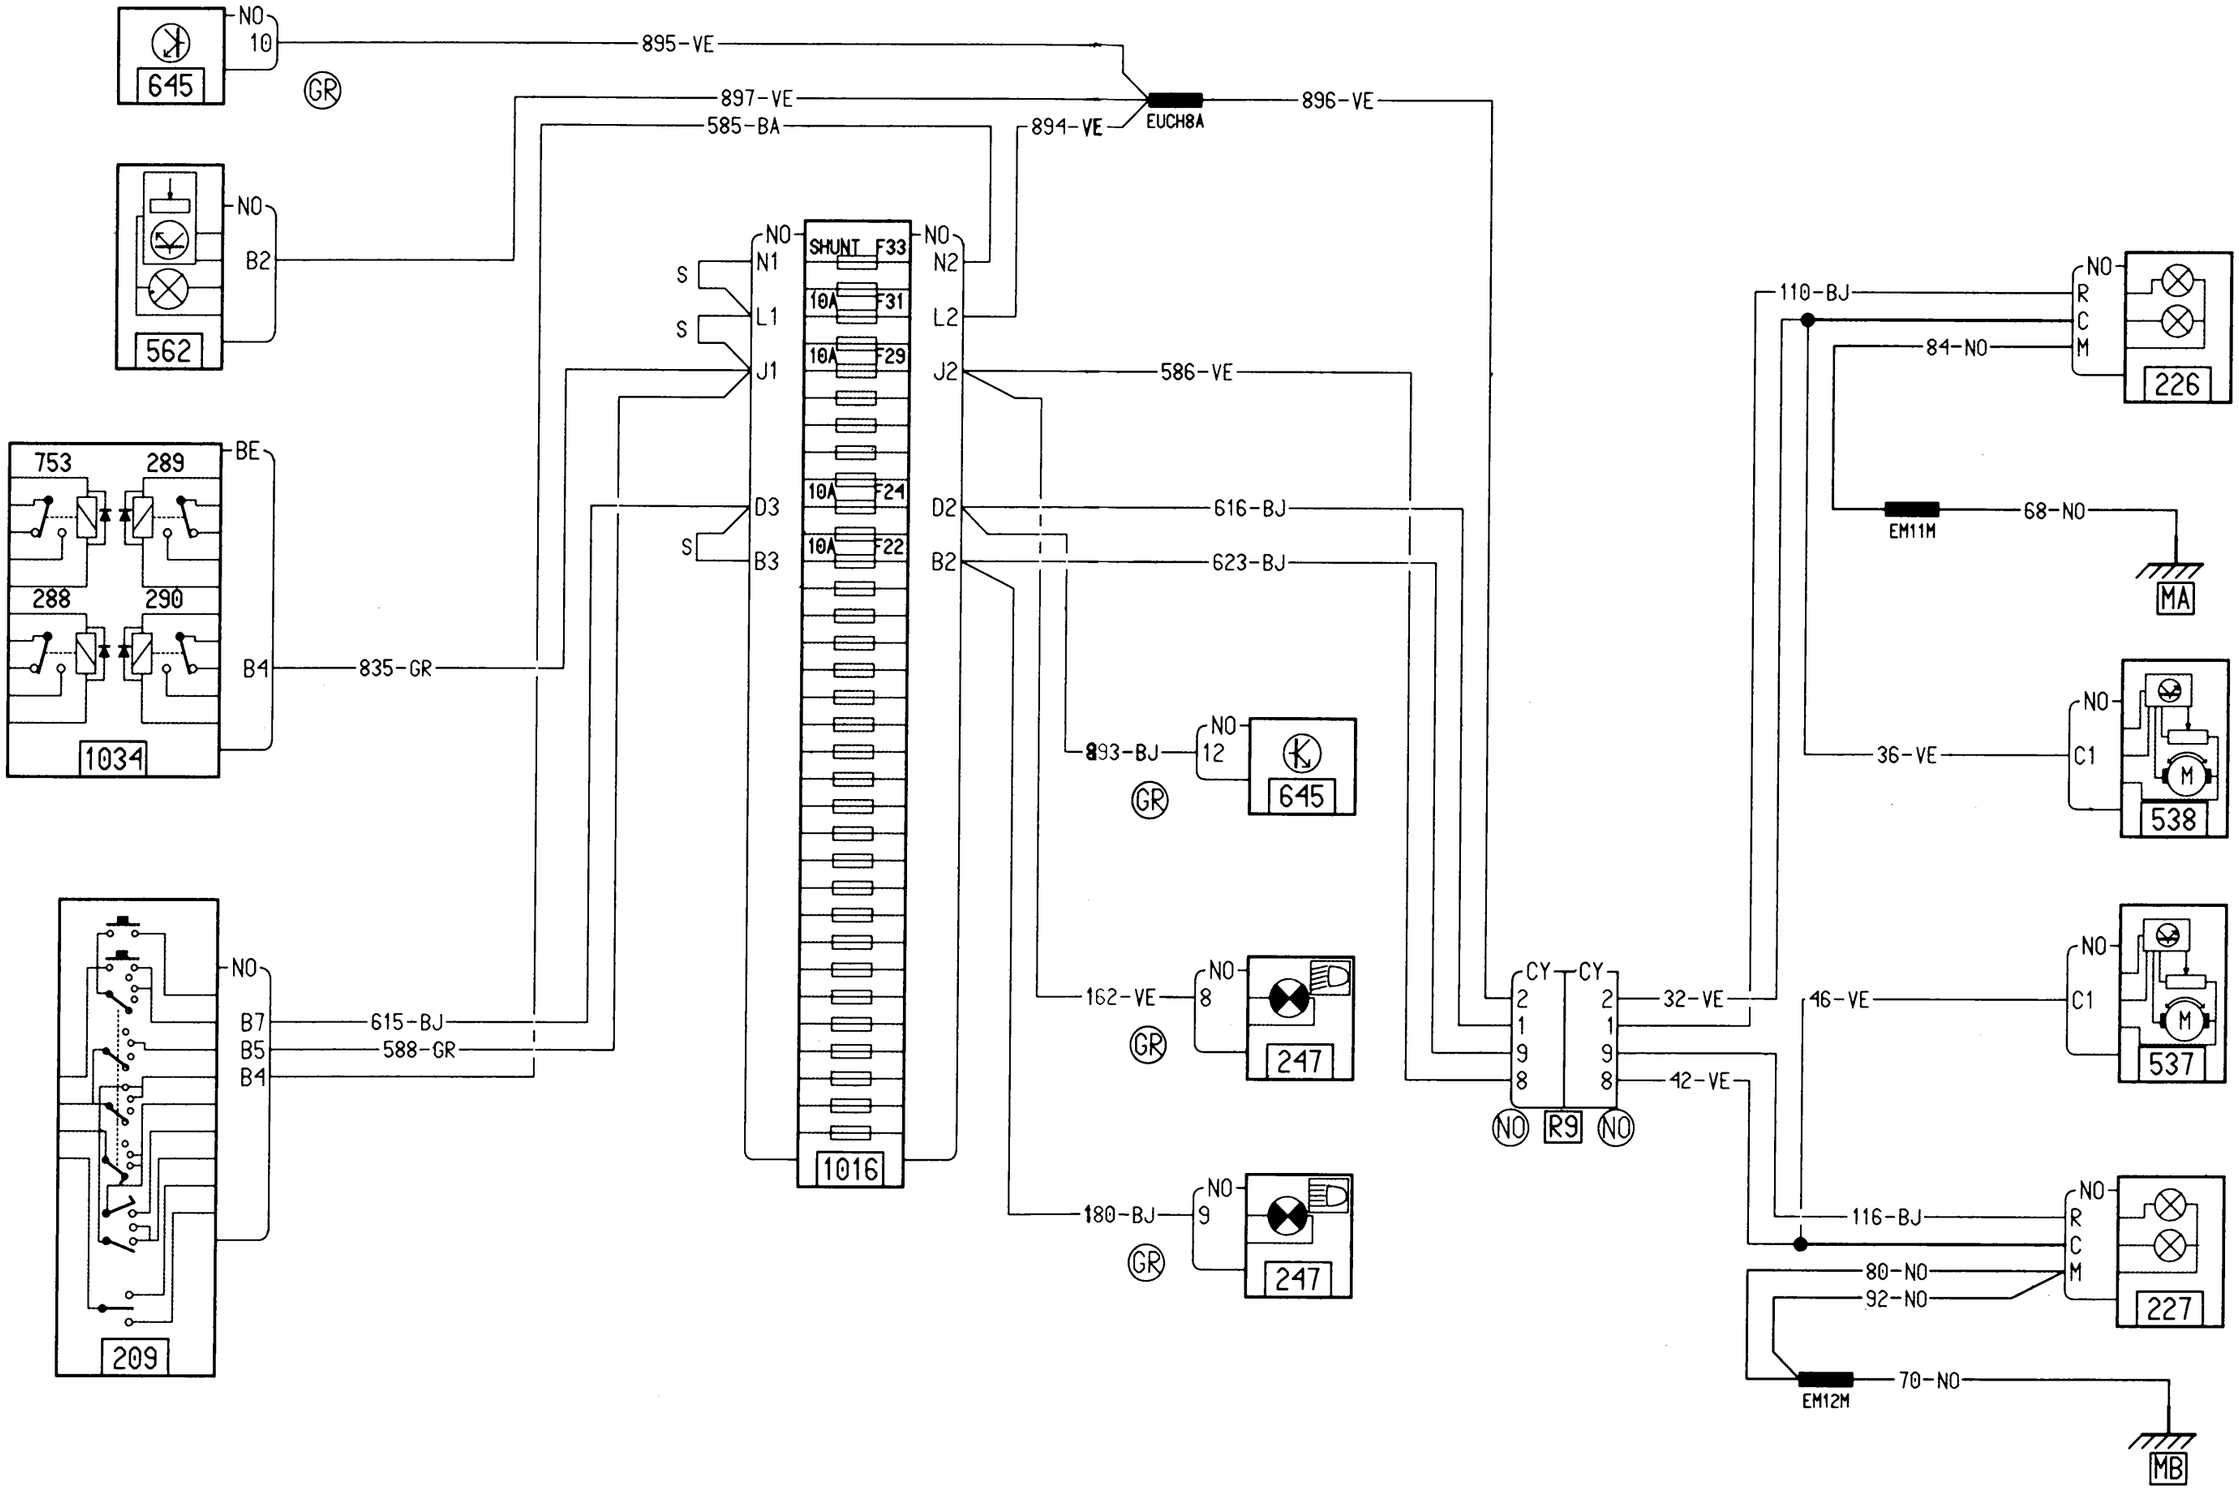
645
NO
10
GR
895-VE
897-VE
585-BA
894-VE
EUCH8A
896-VE
562
B2
753
289
288
290
BE
B4
835-GR
1034
SHUNT F33
S
N1
L1
J1
D3
B3
N2
L2
J2
D2
B2
10A F31
10A F29
10A F24
10A F22
586-VE
616-BJ
623-BJ
1016
893-BJ
12
8
162-VE
180-BJ
9
247
209
B7
B5
615-BJ
588-GR
CY
2
1
9
8
R9
32-VE
42-VE
110-BJ
84-NO
R
C
M
226
EM11M
68-NO
MA
36-VE
C1
538
46-VE
537
116-BJ
227
80-NO
92-NO
EM12M
70-NO
MB

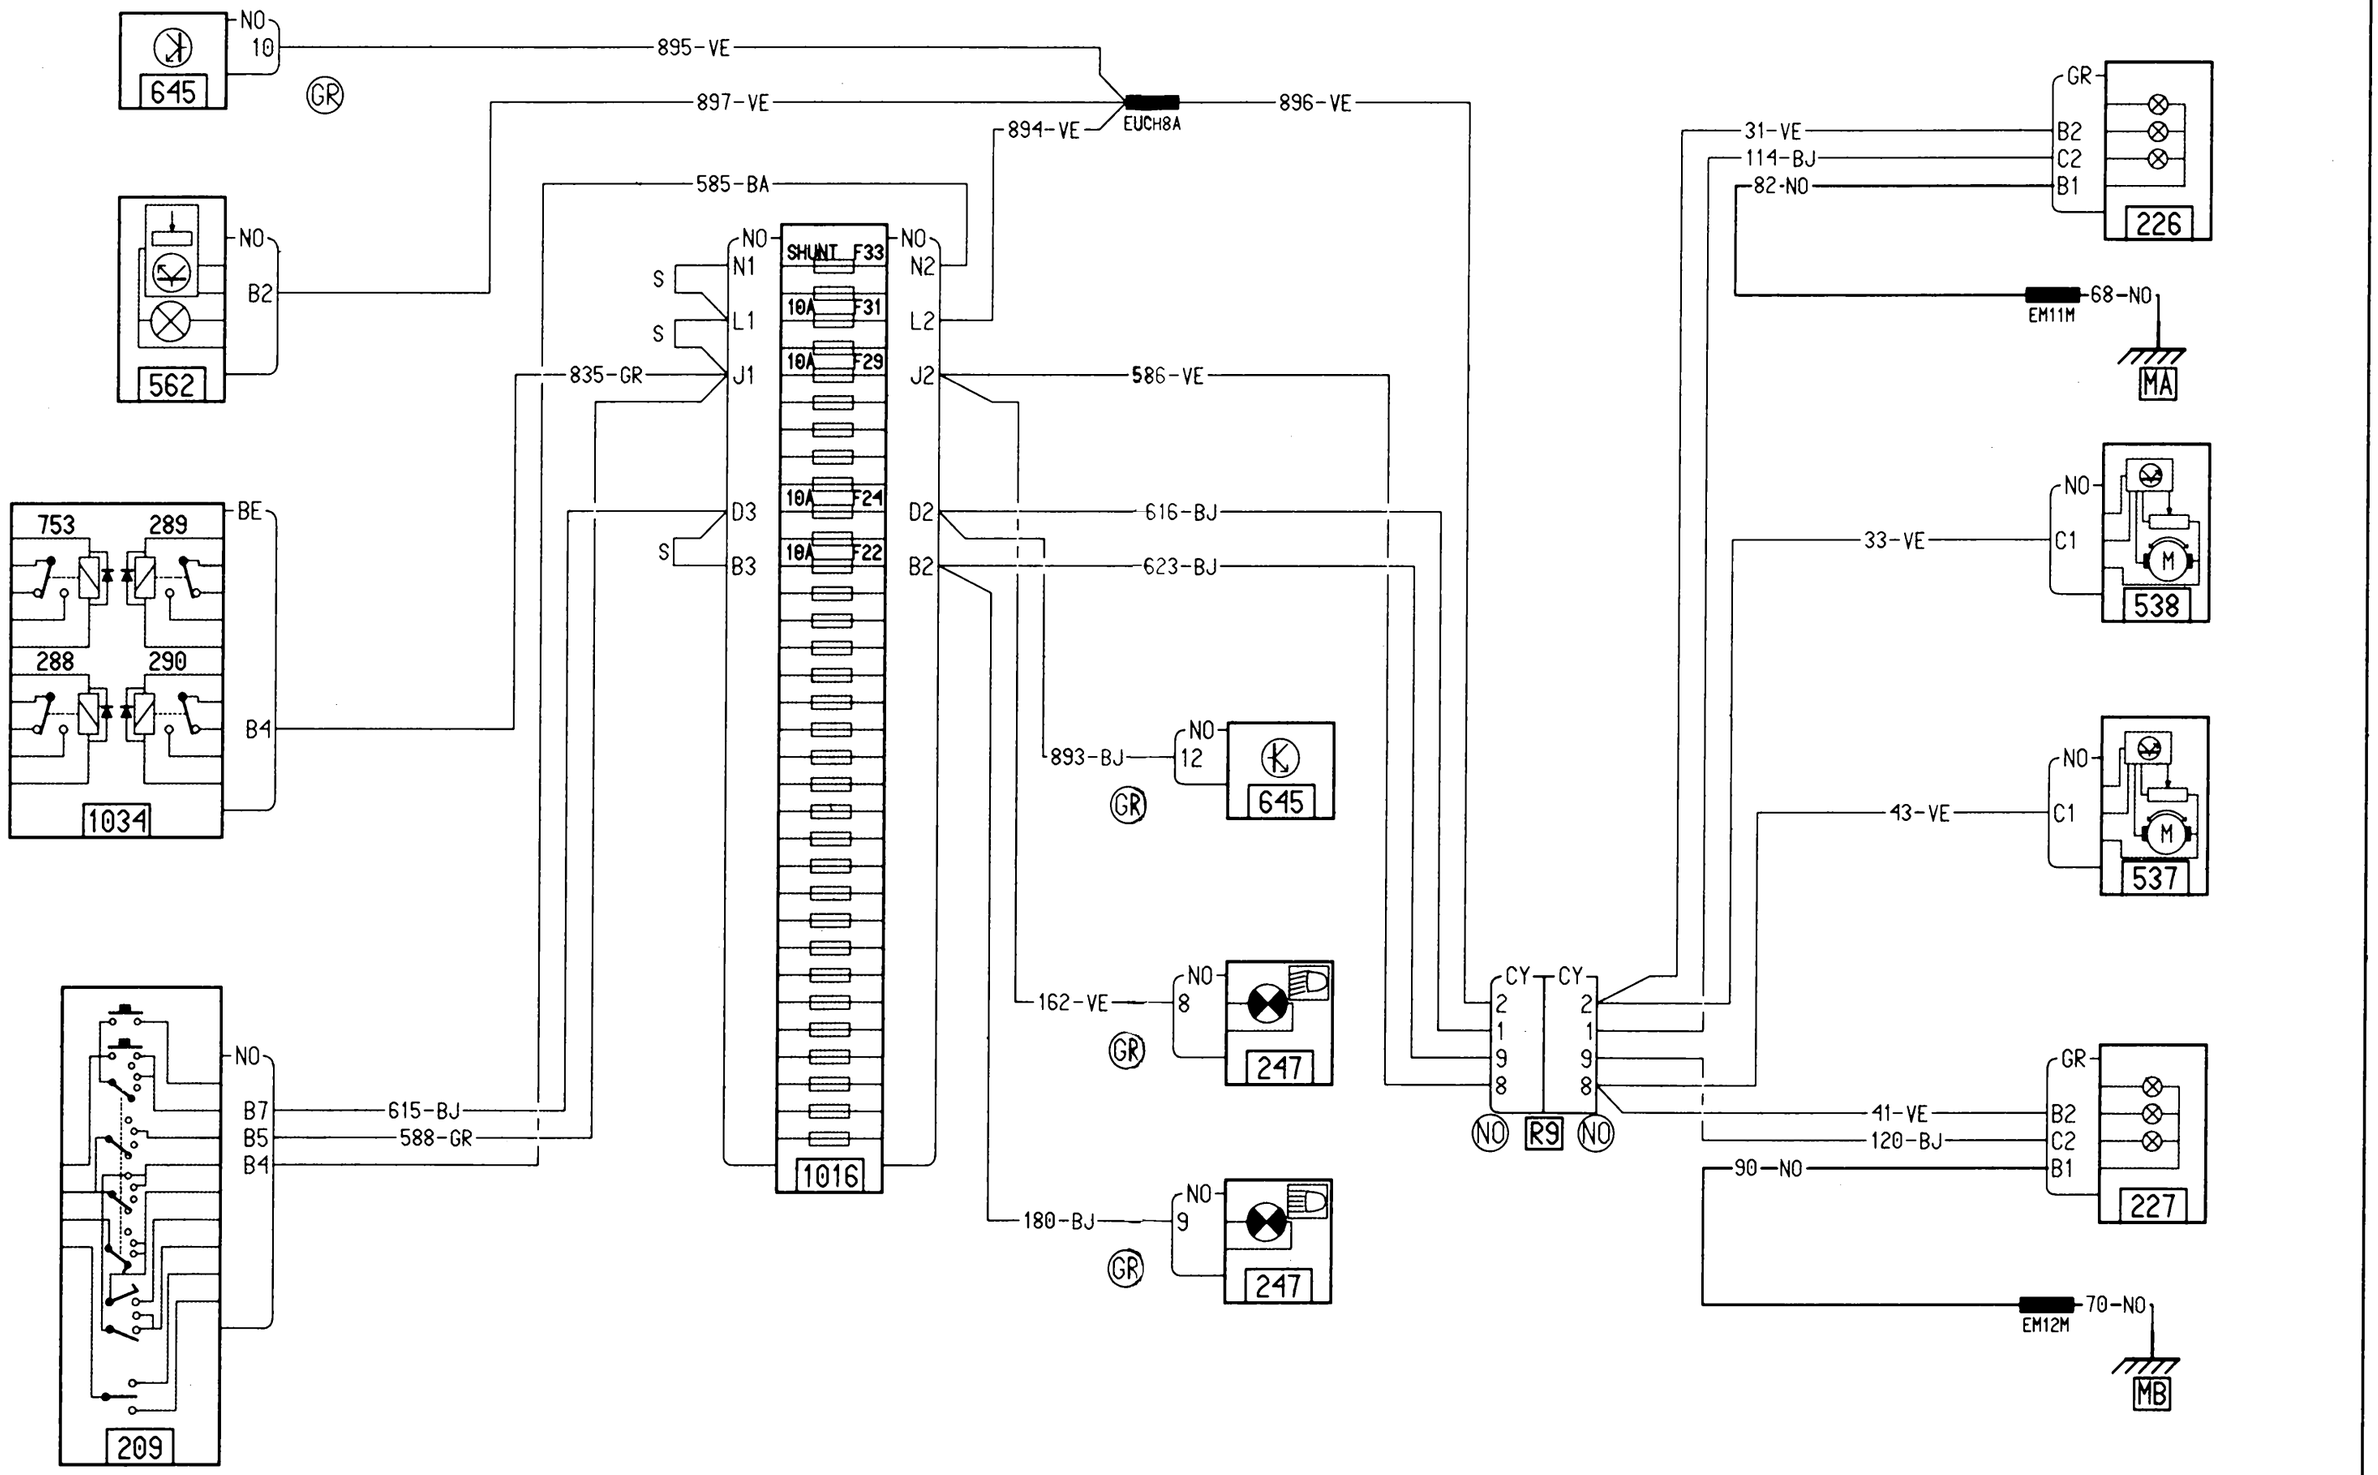
645
NO
10
GR
895-VE
897-VE
894-VE
EUCH8A
896-VE
562
B2
585-BA
753
289
288
290
BE
B4
1034
835-GR
SHUNT F33
N1
L1
J1
10A F31
10A F29
10A F24
10A F22
S
D3
B3
N2
L2
J2
D2
B2
586-VE
616-BJ
623-BJ
1016
893-BJ
12
162-VE
8
180-BJ
9
247
209
B7
B5
615-BJ
588-GR
31-VE
114-BJ
82-NO
226
68-NO
EM11M
MA
33-VE
C1
538
43-VE
537
CY
2
1
9
8
R9
41-VE
120-BJ
90-NO
227
70-NO
EM12M
MB

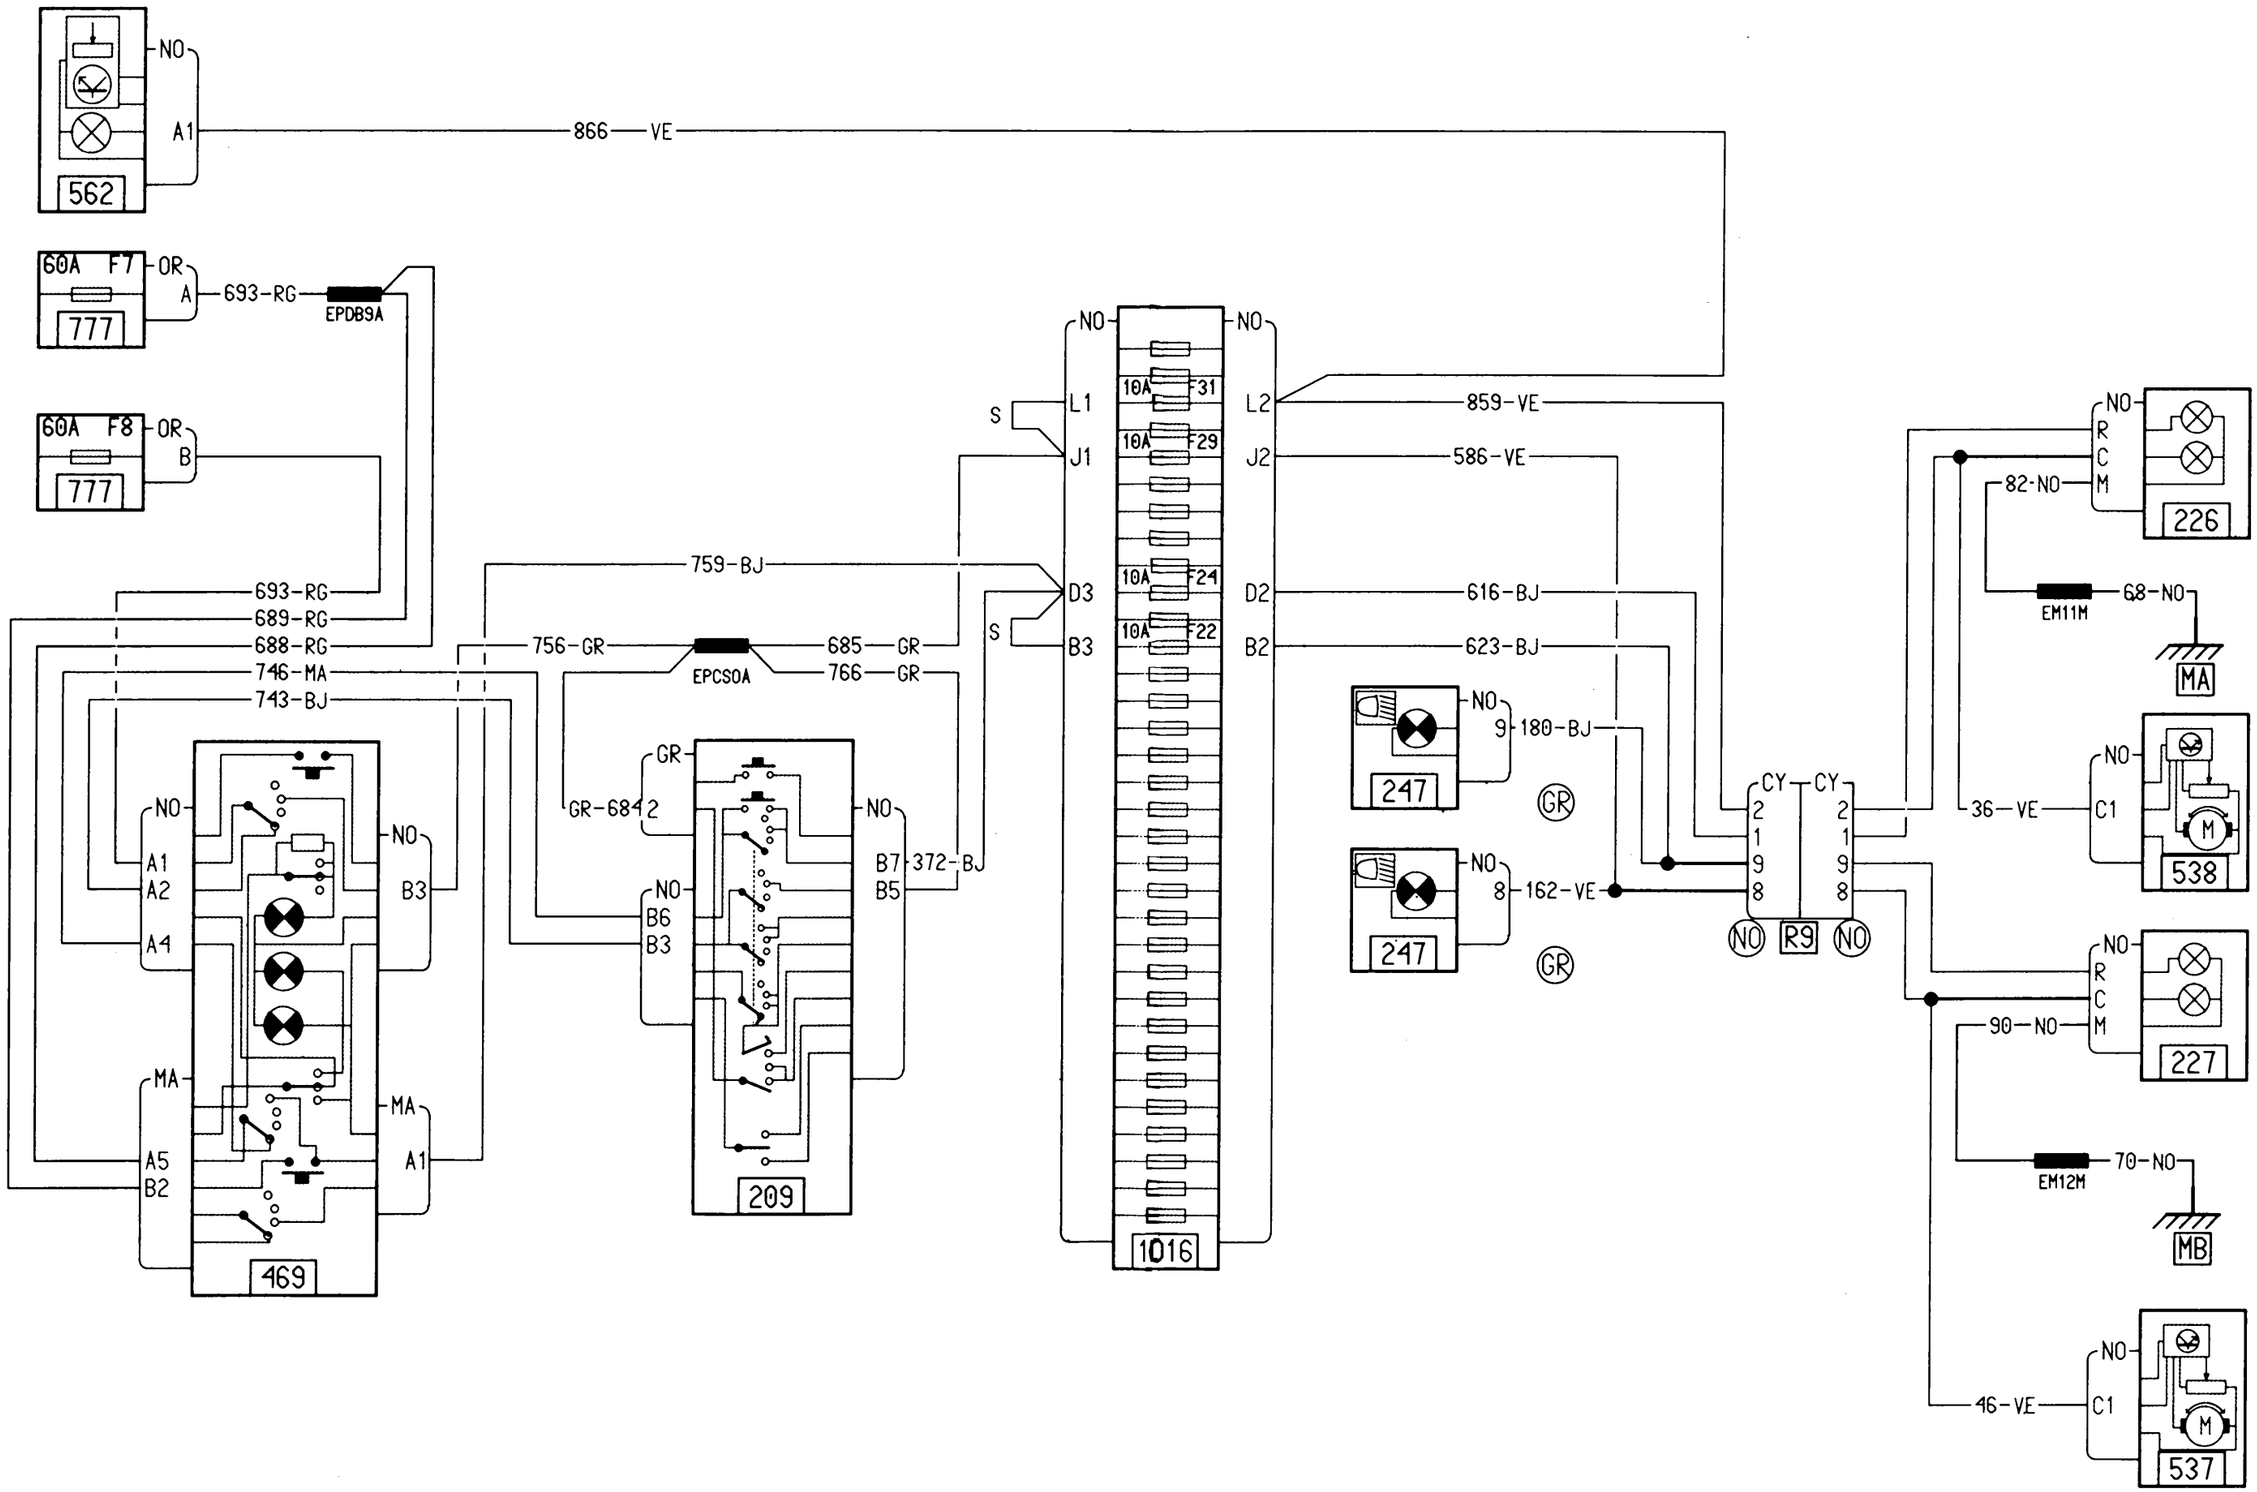
562
NO
A1
866 — VE
60A F7
777
OR
A
693-RG
EPDB9A
60A F8
777
OR
B
693-RG
689-RG
688-RG
746-MA
743-BJ
759-BJ
756-GR
EPCS0A
685 — GR
766 — GR
GR-684
S
L1
J1
D3
B3
NO
10A F31
10A F29
10A F24
10A F22
1016
L2
J2
D2
B2
859-VE
586-VE
616-BJ
623-BJ
247
9
180-BJ
247
8
162-VE
GR
CY
2
1
9
8
R9
469
A1
A2
A4
A5
B2
B3
MA
209
GR
2
B6
B3
B7
B5
372-BJ
82-NO
EM11M
68-NO
MA
226
R
C
M
36-VE
C1
538
90-NO
227
EM12M
70-NO
MB
46-VE
537

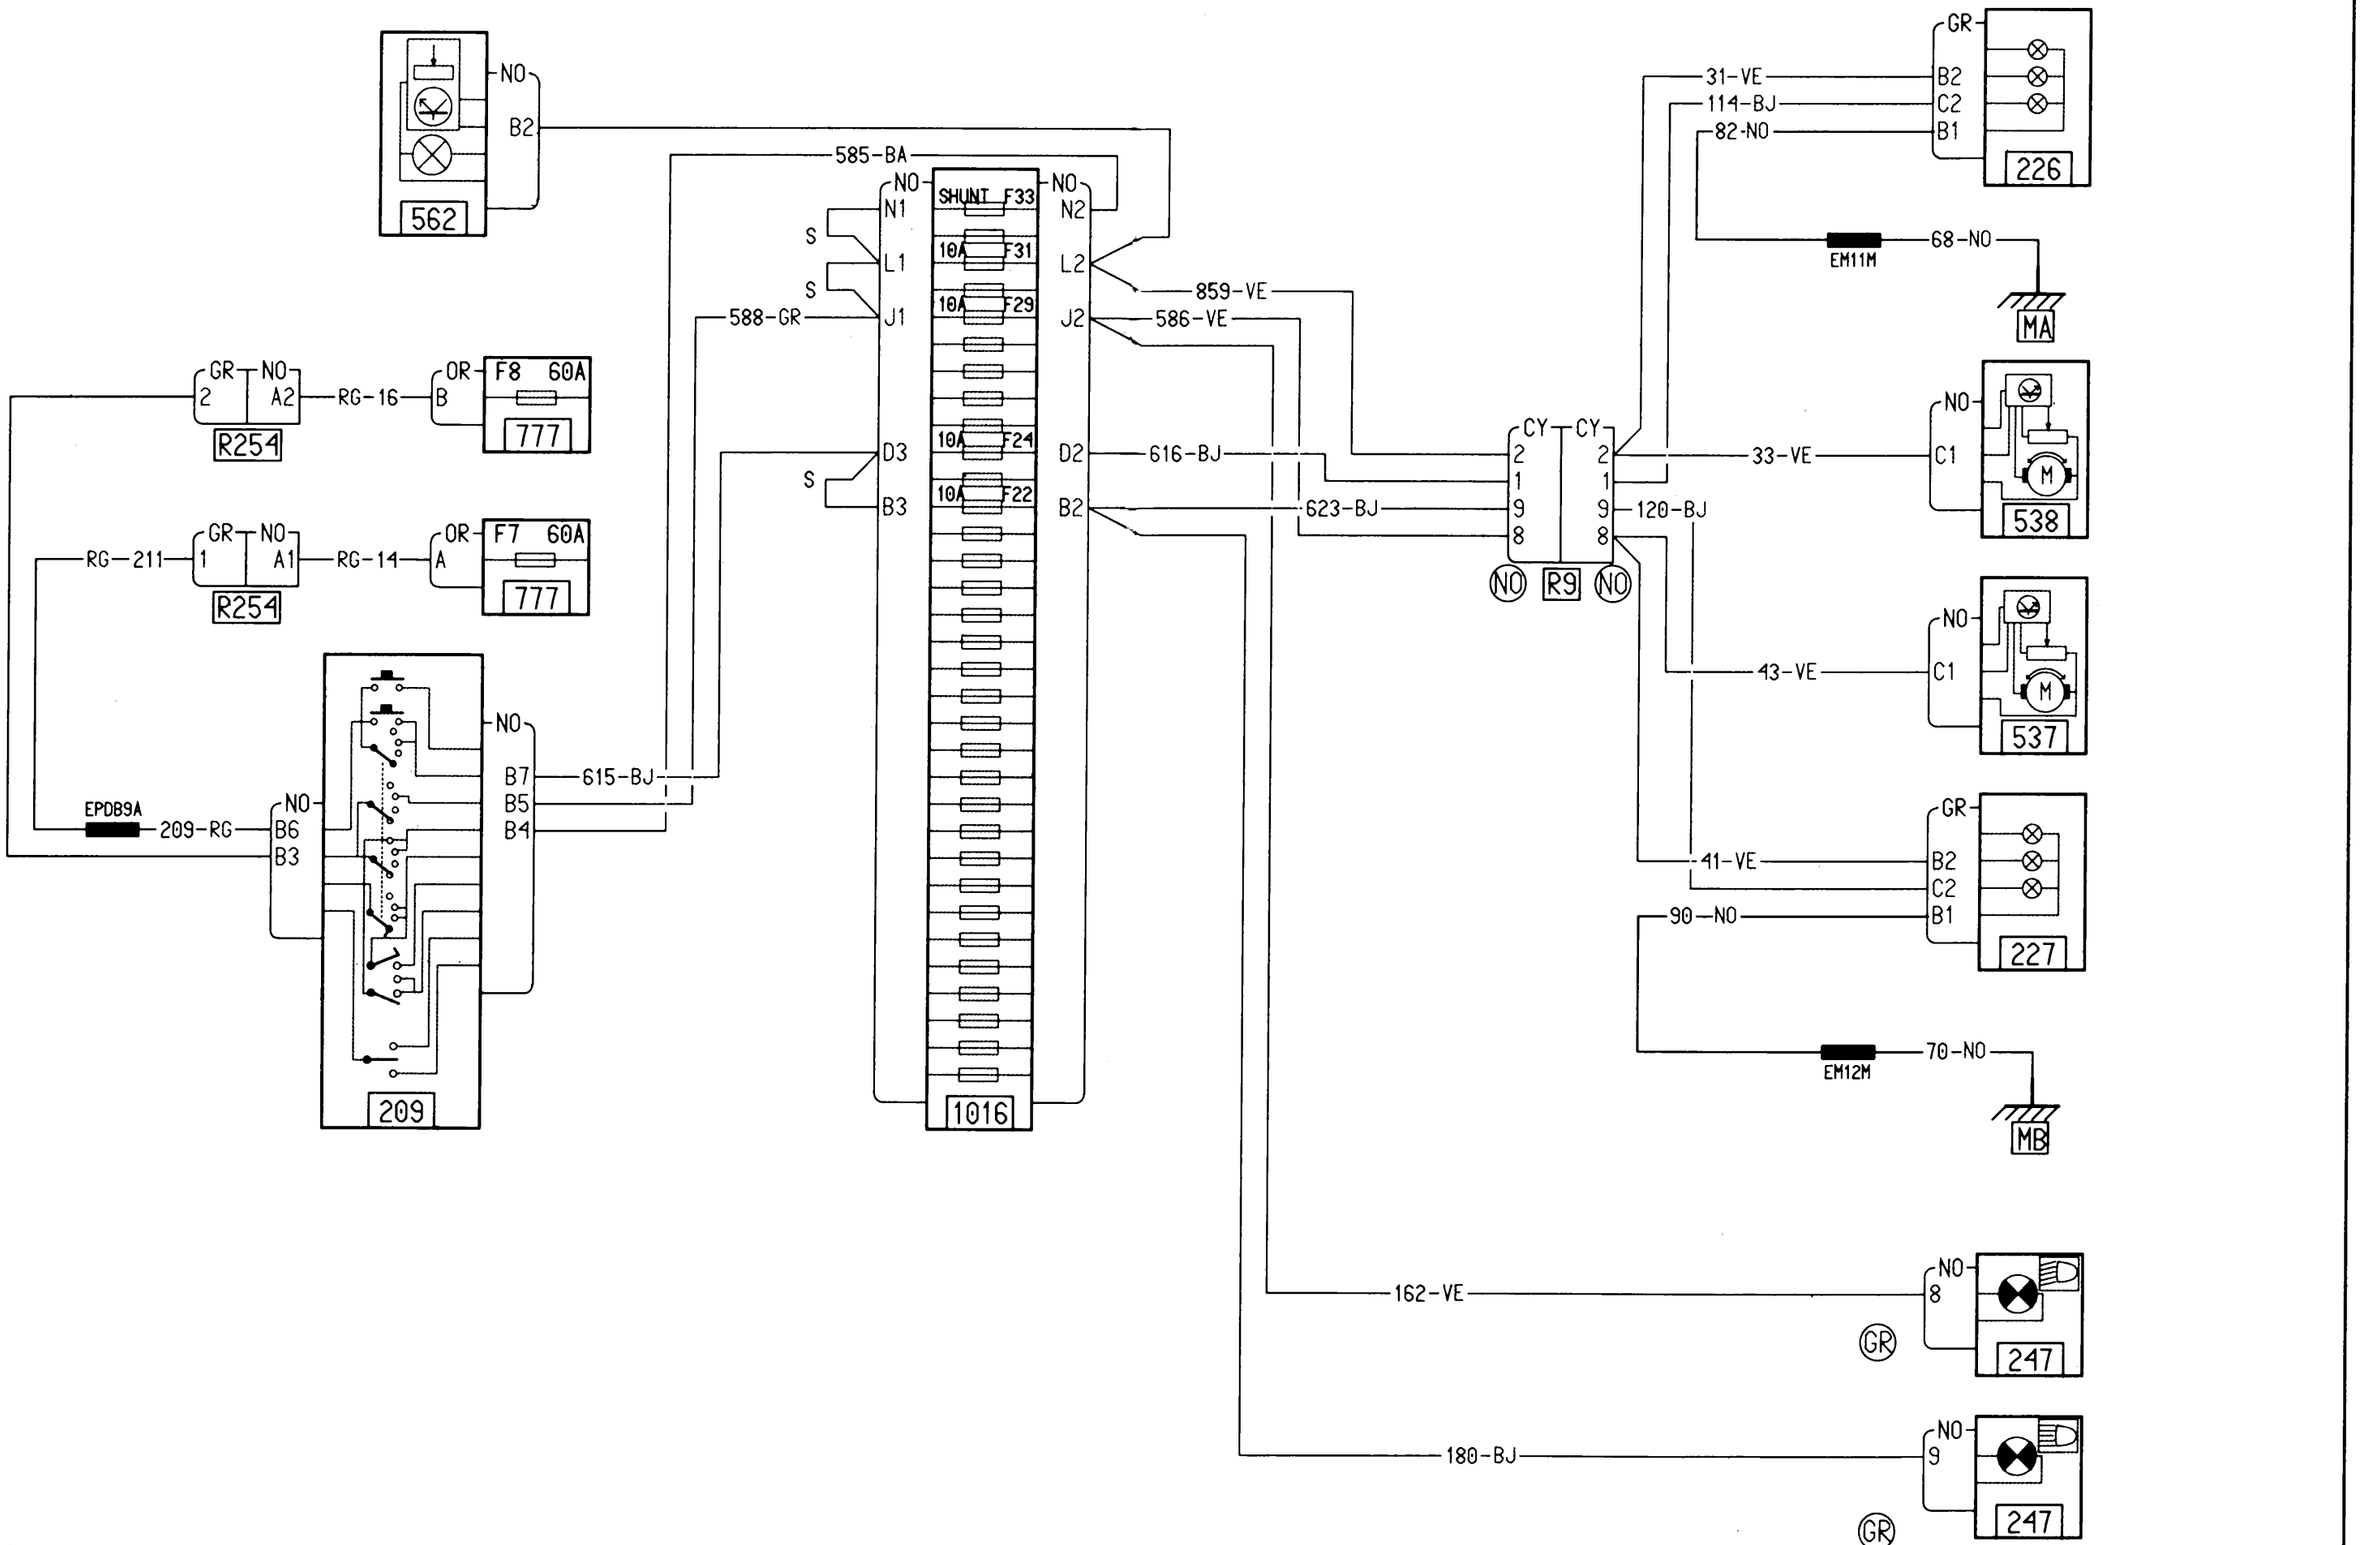
562
NO
B2
585-BA
SHUNT F33
N1
N2
S
L1
10A F31
L2
859-VE
S
588-GR
J1
10A F29
J2
586-VE
D3
10A F24
D2
616-BJ
S
B3
10A F22
B2
623-BJ
1016
GR
NO
2
A2
RG-16
OR
B
F8 60A
777
R254
RG-211
1
A1
RG-14
A
F7 60A
777
R254
EPDB9A
209-RG
NO
B6
B3
B7
B5
B4
615-BJ
209
CY
CY
2
1
9
8
NO
R9
NO
31-VE
114-BJ
82-NO
GR
B2
C2
B1
226
EM11M
68-NO
MA
33-VE
NO
C1
538
120-BJ
43-VE
NO
C1
537
41-VE
90-NO
GR
B2
C2
B1
227
EM12M
70-NO
MB
162-VE
NO
8
247
GR
180-BJ
NO
9
247
GR

DAYTIME DRIVING LIGHTS

RUNLI

X642
00

NO 15A F18 NO
J5 1016 J4
494-JA — EPDB5A — 827-JA

NO 15A F30 NO
K3 1016 K2
627-JA — EPDB25A — 987-JA

NO F31 10A NO
L2 1016 L1

NO F7 15A NO
G7 1016 G8

NO F24 10A NO
D2 1016 D3

NO SHUNTF33 NO
N1 1016 N2

NO F9 5A NO
J7 1016 J8

NO
14
13
645
GR

974-BJ

BE — 753 289 — BE
C1
C3
C4 — 820-BE
C5
C2
D1
D3
288 290
B1 — 82-BE
B3
B4
986-NO — D5
D2
B2
A C B D
1034

985-NO
835-GR
485-BA
615-BJ
588-GR
585-BA
491-MA
738-VI
735-VE

S
853-BE
854-BE

NO 7.5A F11 NO
L8 1016 L7
612-BE — EPDB17A — 283-BE
CY 7 — CY 7
NO R9 NO
60-BE
MB
70-NO — EM12M — 80-NO
NO A B — 185

NO 7.5A F13 NO
N8 1016 N7
611-BE — EPDB15A — 276-BE
CY 3 — CY 3
NO R9 NO
54-BE
MA
68-NO — EM11M — 84-NO
NO A B — 184

947-RG — EPDB9A — 211-RG
OR A F7 60A
777

EPLP

984-NO — EPDB20A — 317-NO
MJ

347-BE

NO
A4
B7
B5
B4
B1
A3
A7
A5
209

NO
B6
B3
B2
A6 — 882-NO — EPDB18A — 296-NO
MK

60A F8 OR
B
777
515-RG


60A F7 OR
A
777
211-RG — E30B9A — 208-RG
209-RG


REVERSING LIGHTS


K25/BVM5

X642

00

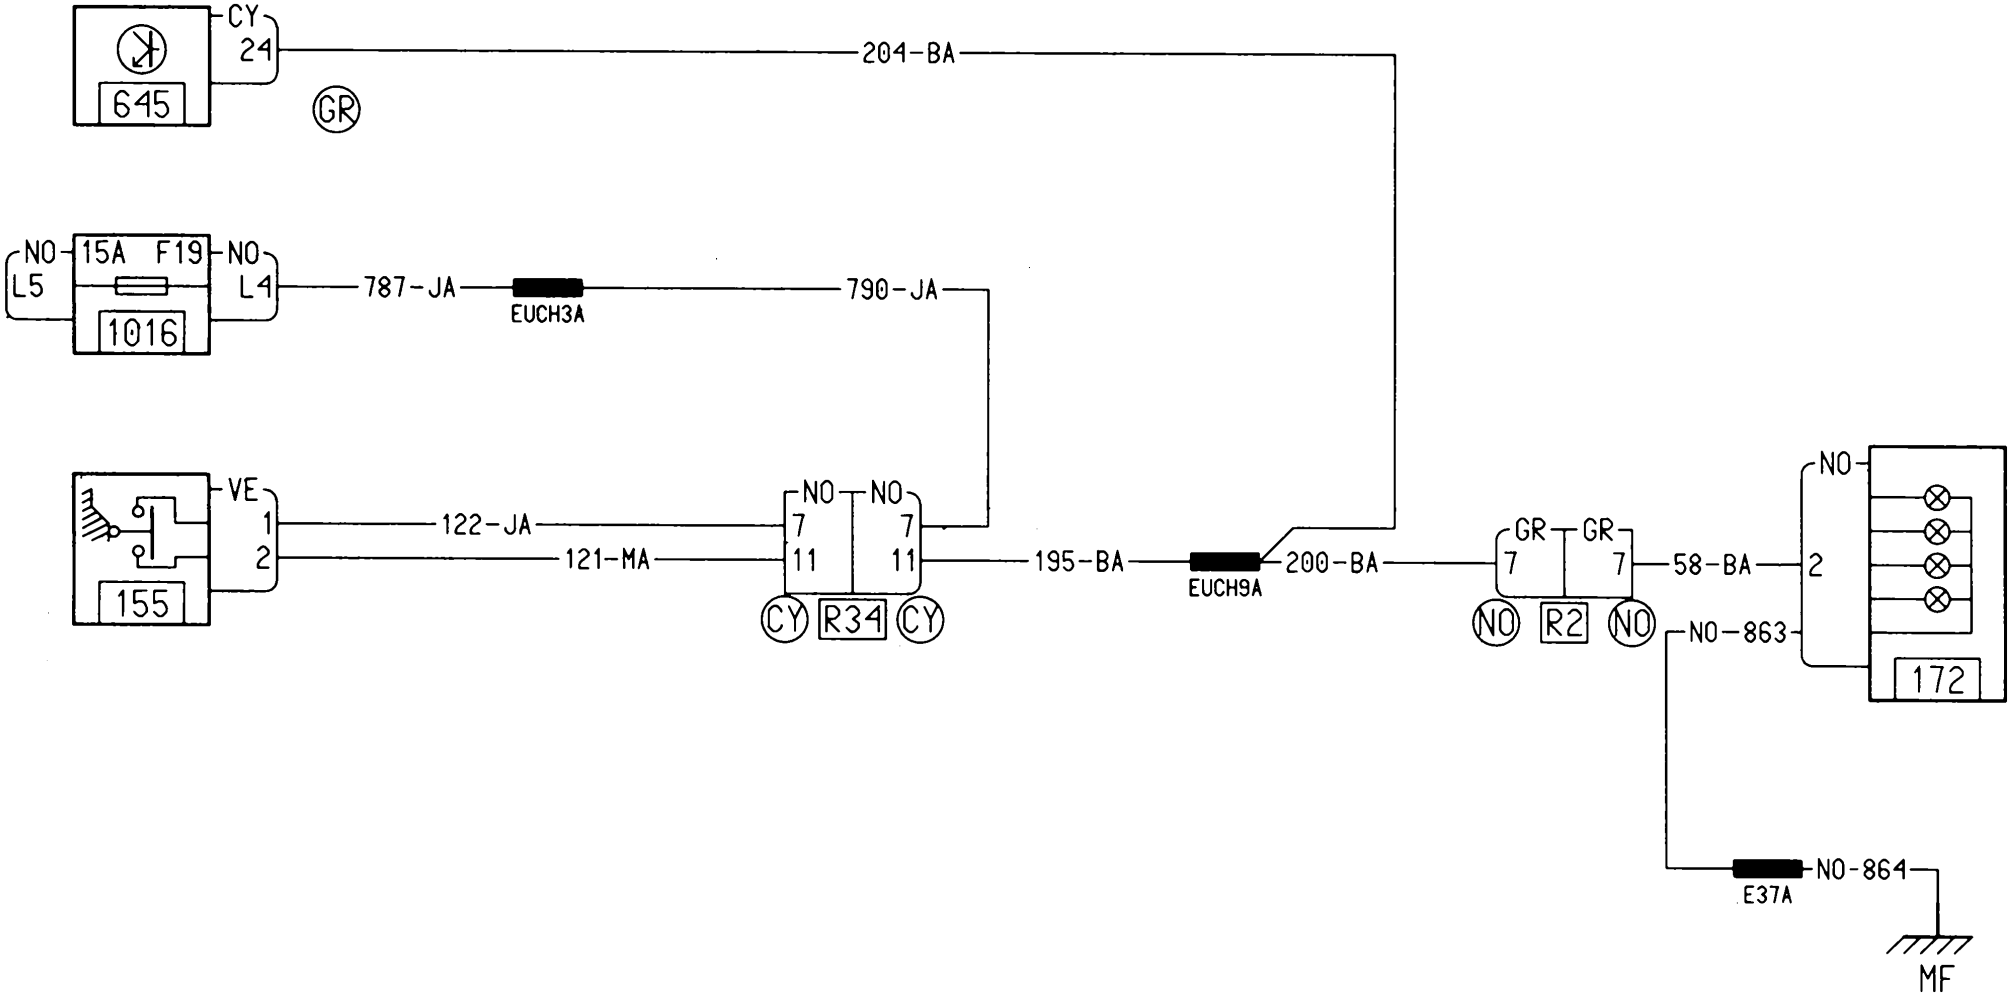

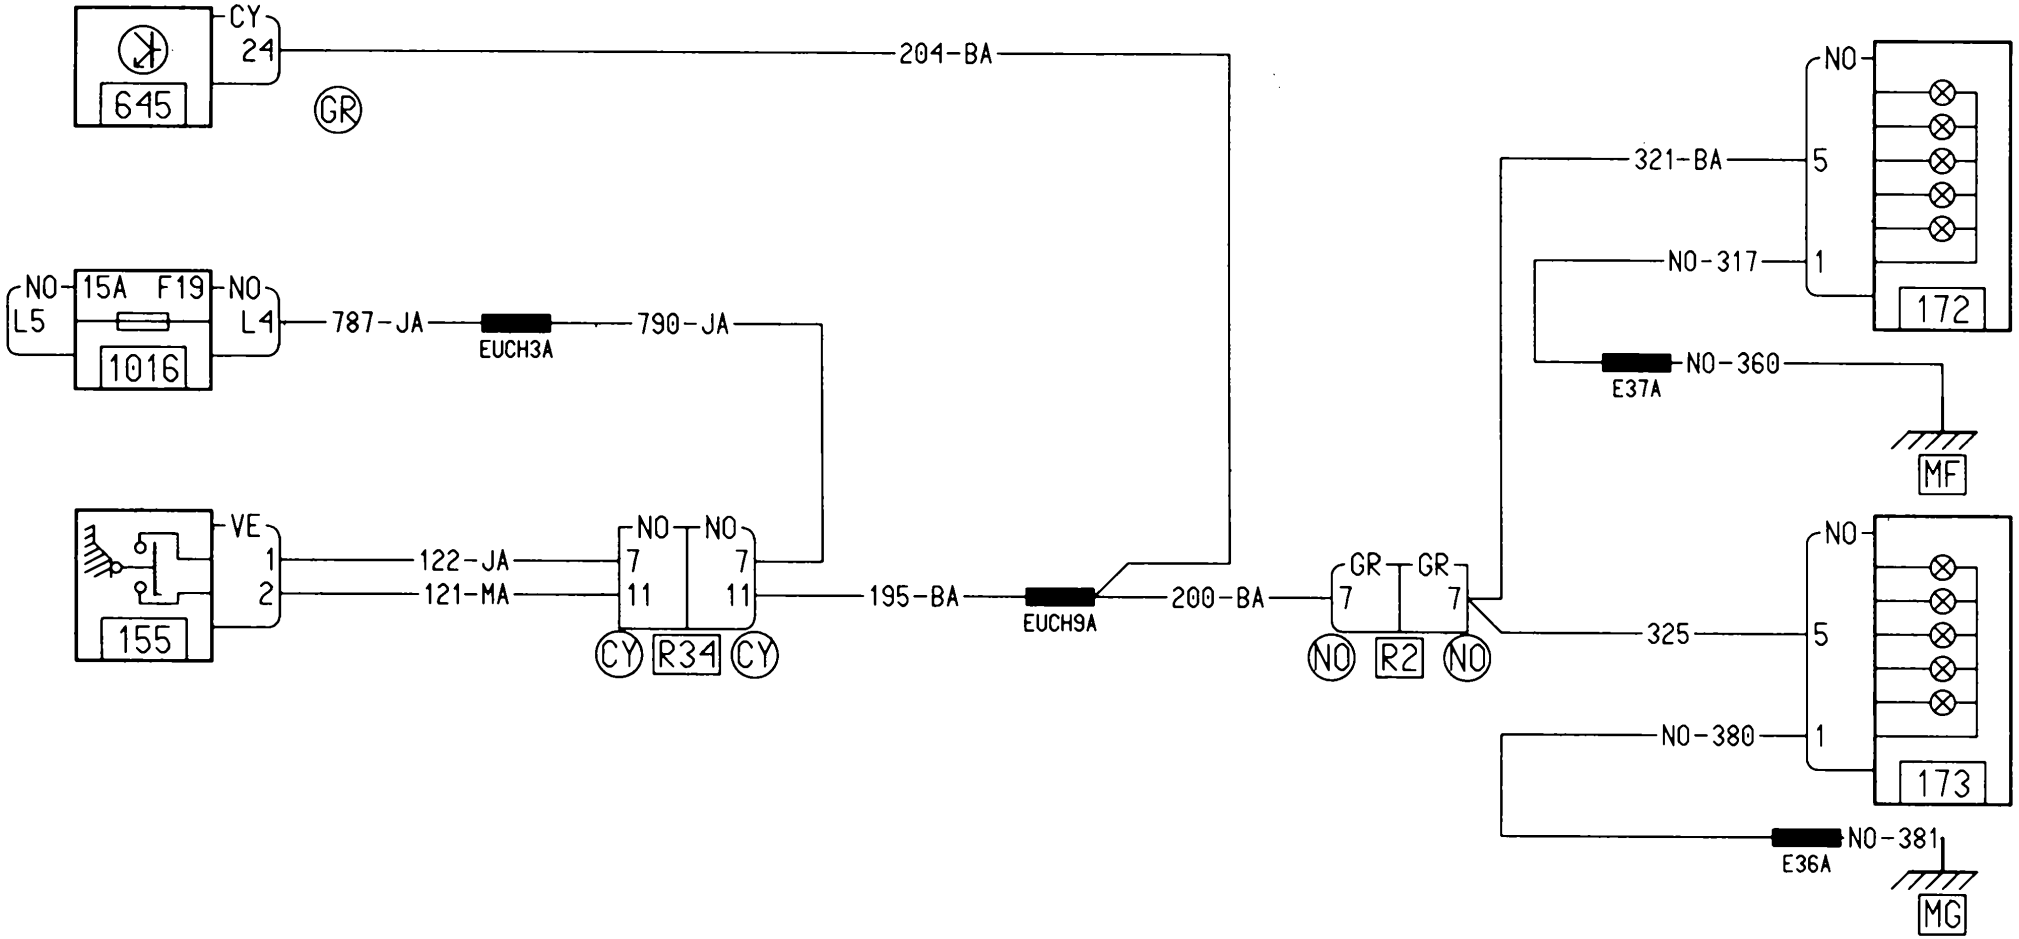

645
CY
24
204-BA
GR
NO
15A F19
NO
L5
L4
1016
787-JA
EUCH3A
790-JA
155
VE
1
2
122-JA
121-MA
NO
NO
7
11
7
11
CY
R34
CY
195-BA
EUCH9A
200-BA
GR
GR
7
7
NO
R2
NO
321-BA
NO-317
NO-360
E37A
NO
5
1
172
MF
325
NO-380
NO-381
E36A
NO
5
1
173
MG

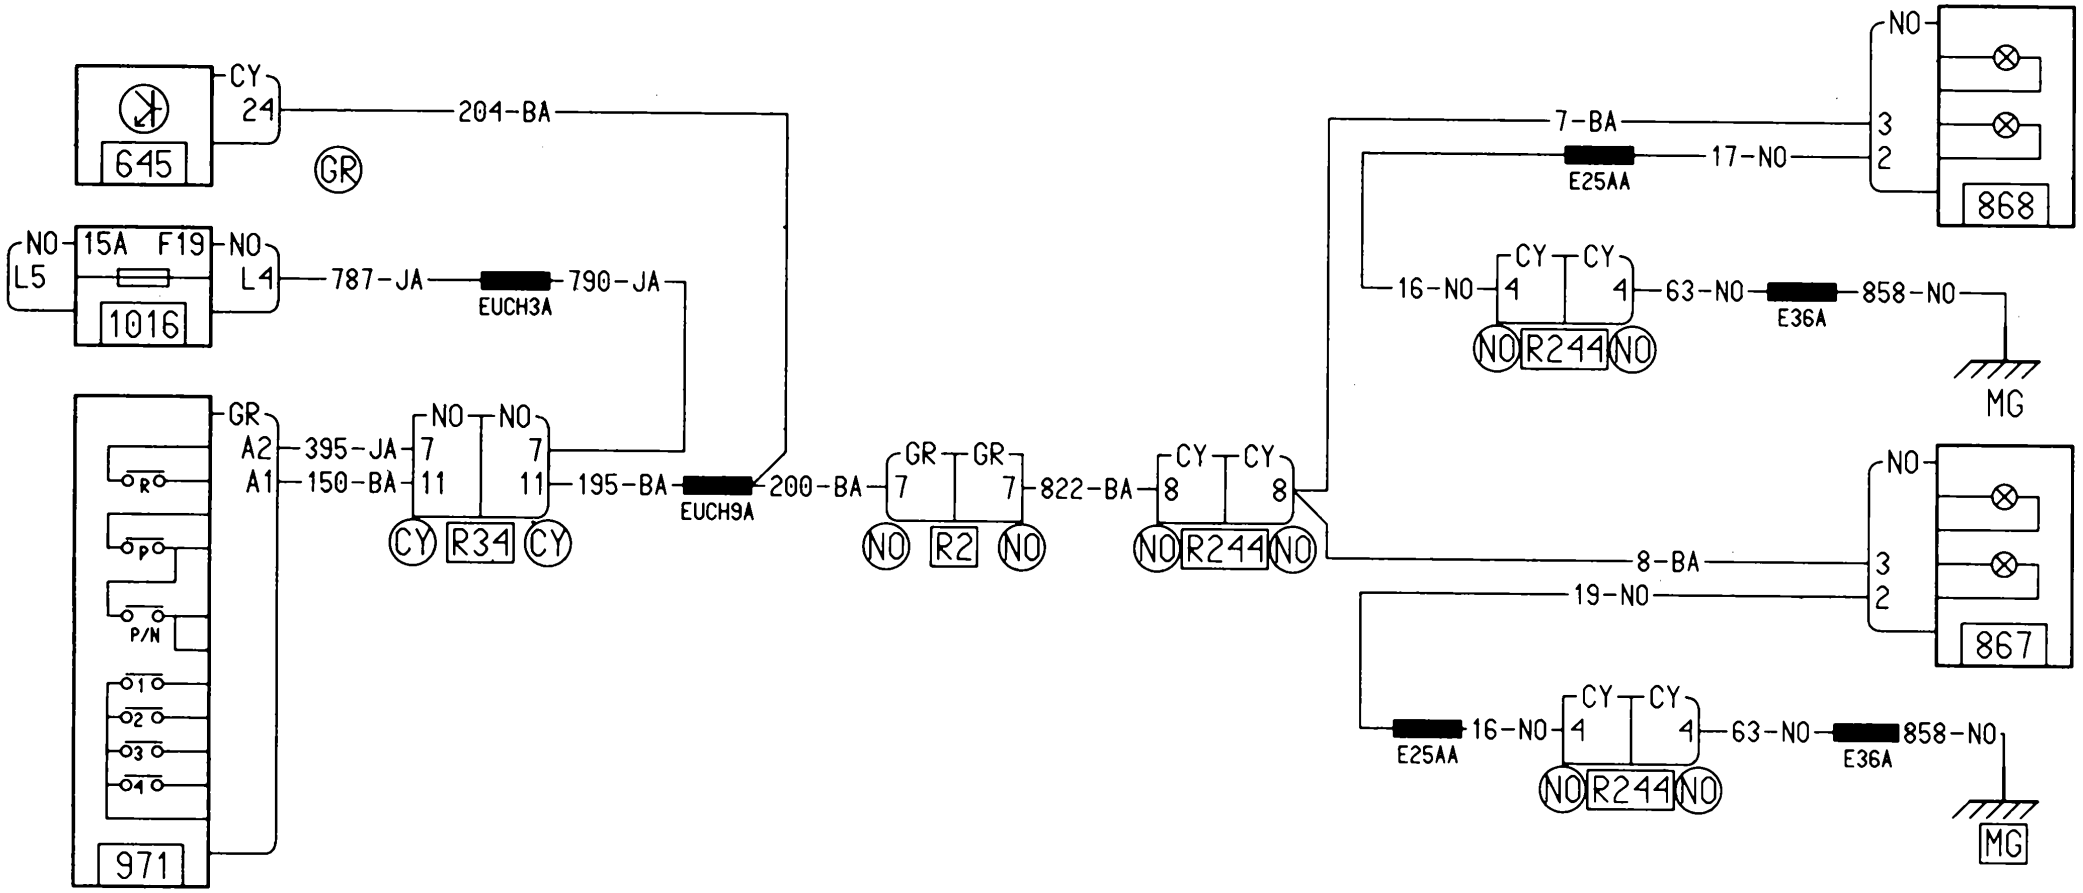
645
CY
24
204-BA
GR
NO
15A F19
NO
L5
L4
1016
787-JA
EUCH3A
790-JA
GR
A2
A1
395-JA
150-BA
971
R
P
P/N
1
2
3
4
NO
7
11
NO
7
11
CY
R34
CY
195-BA
EUCH9A
200-BA
GR
7
GR
7
NO
R2
NO
822-BA
CY
8
CY
8
NO
R244
NO
7-BA
E25AA
17-NO
NO
3
2
868
16-NO
CY
4
CY
4
NO
R244
NO
63-NO
E36A
858-NO
MG
8-BA
19-NO
NO
3
2
867
E25AA
16-NO
CY
4
CY
4
NO
R244
NO
63-NO
E36A
858-NO
MG

REVERSING LIGHTS

E64/BVM5


X642
00

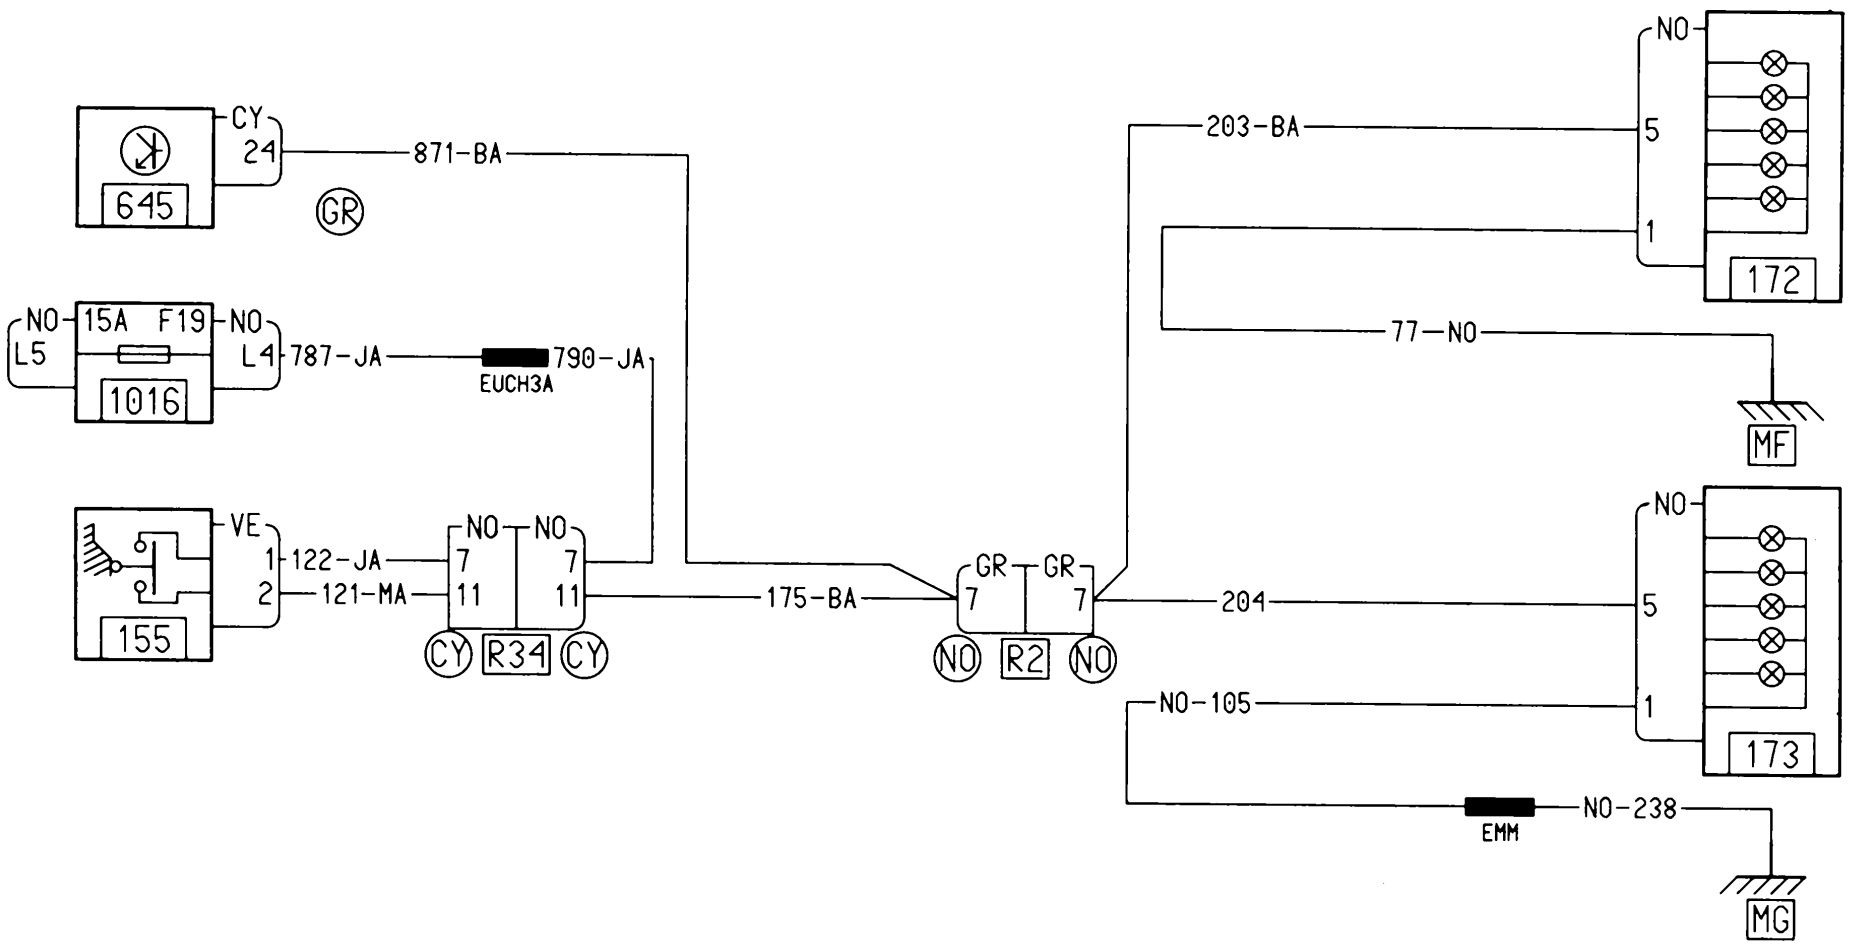

REVERSING LIGHTS

B64/BVM5/VHECOL


X642

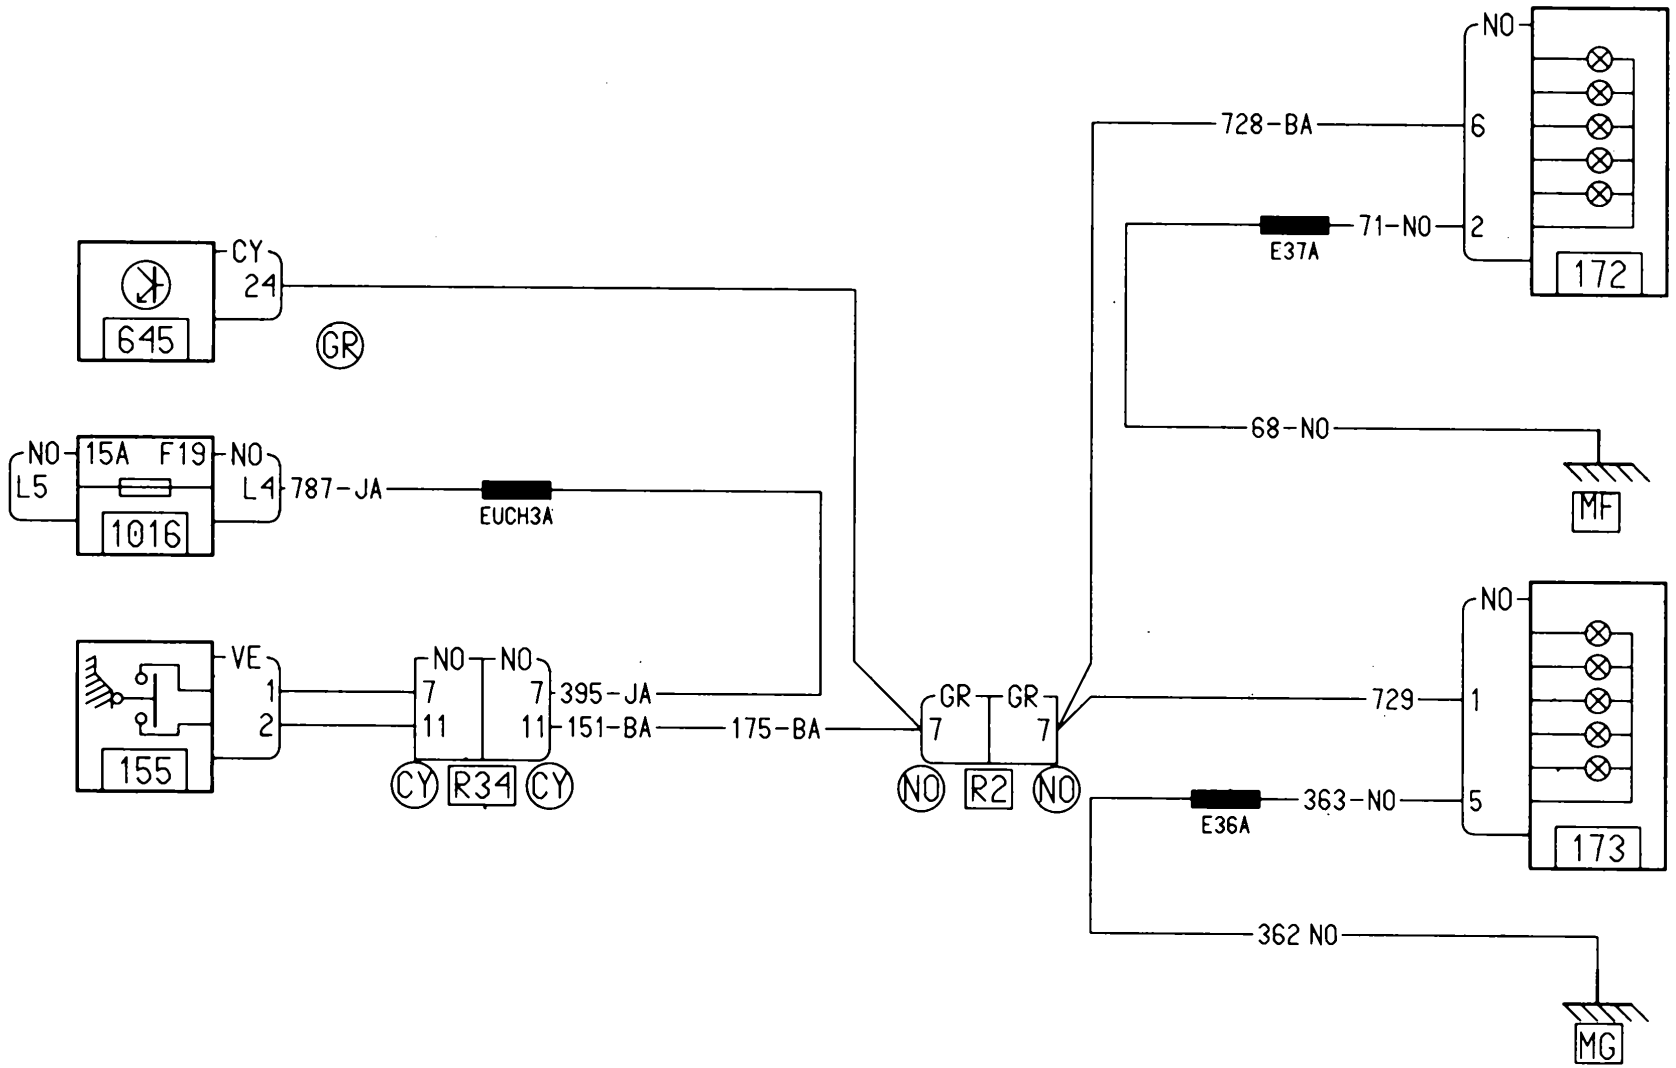

REVERSING LIGHTS

B64/E2/K4M712/EQGPL/BVM5


X642
00

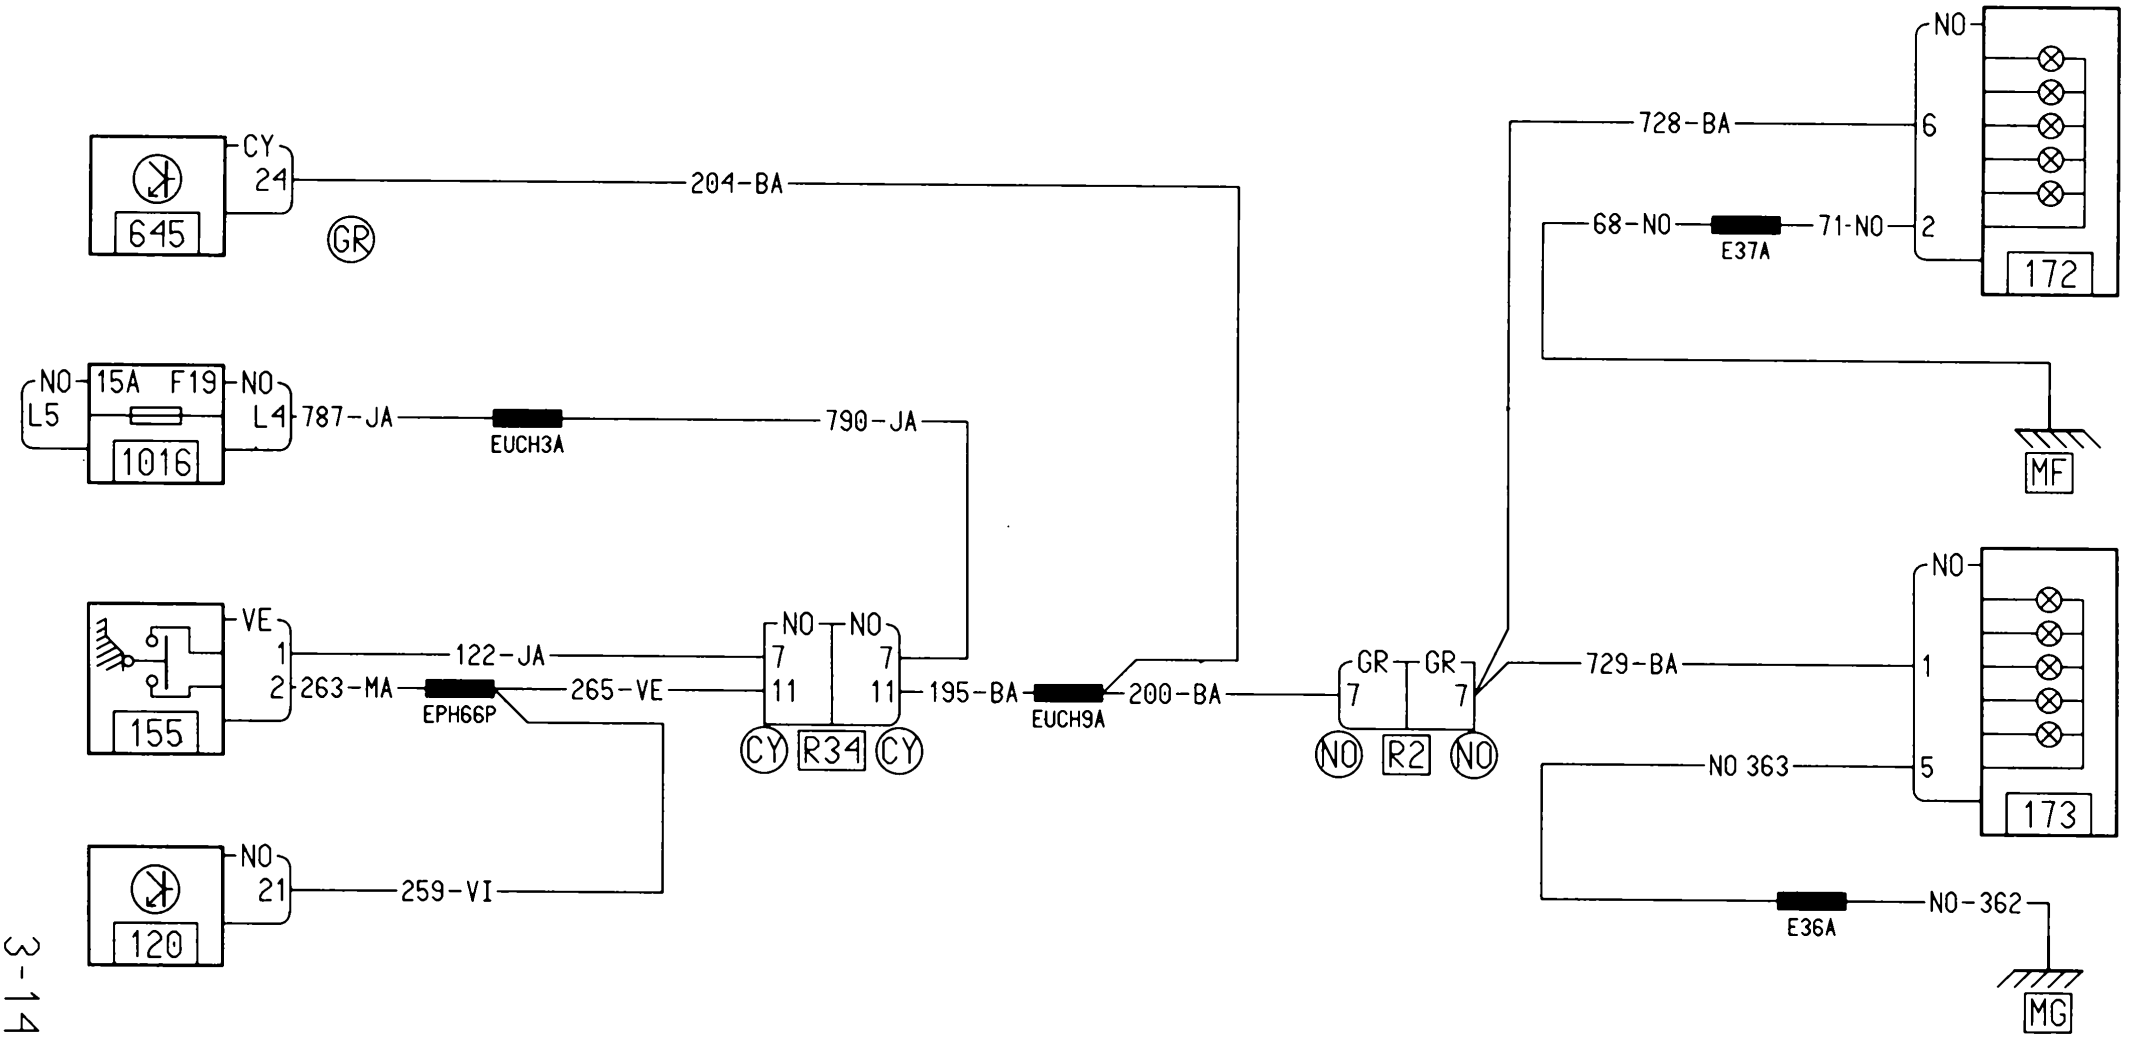

REVERSING LIGHTS

B64/DD/BVA4

X642
00

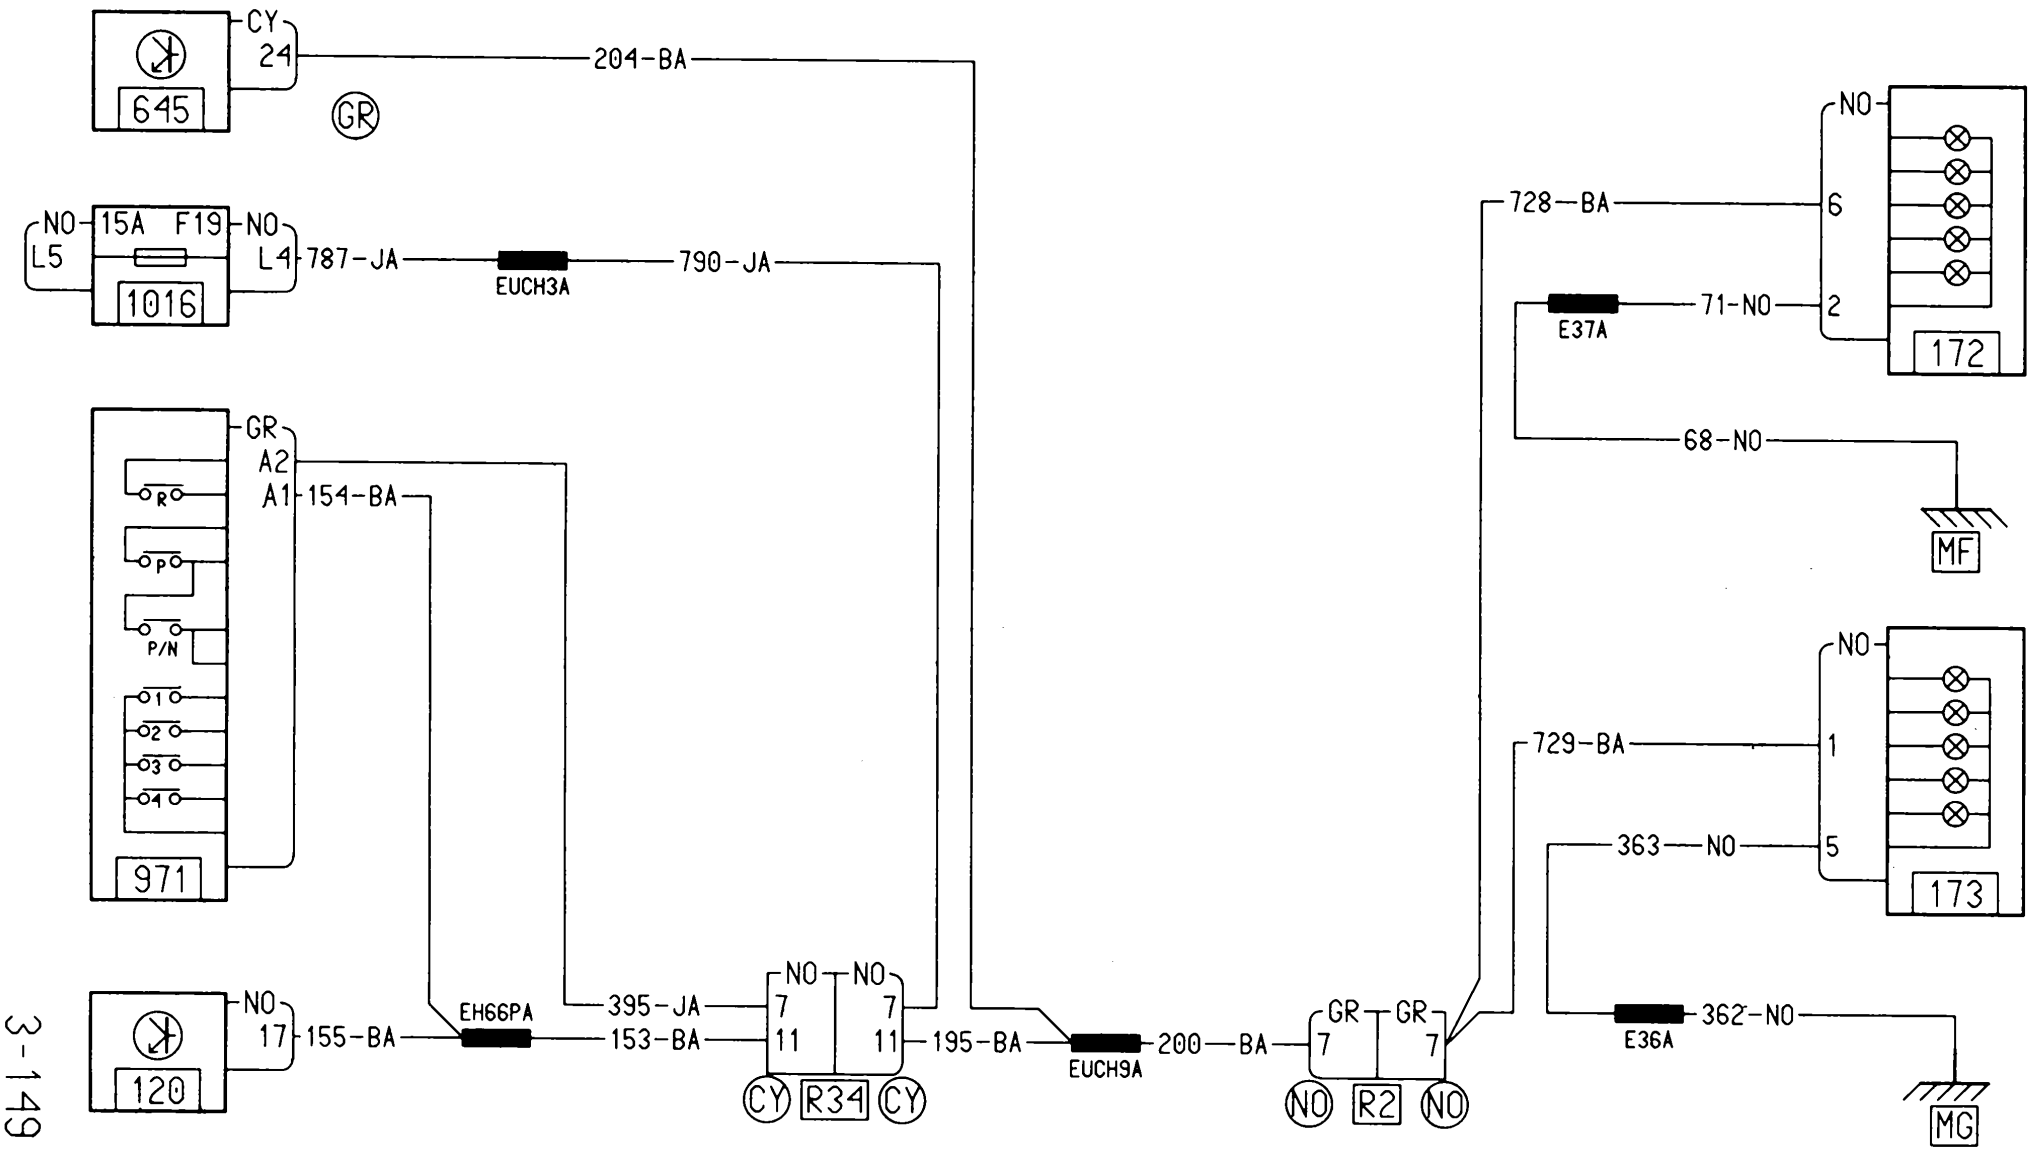



REVERSING LIGHTS

B64/BVM5

X642

00

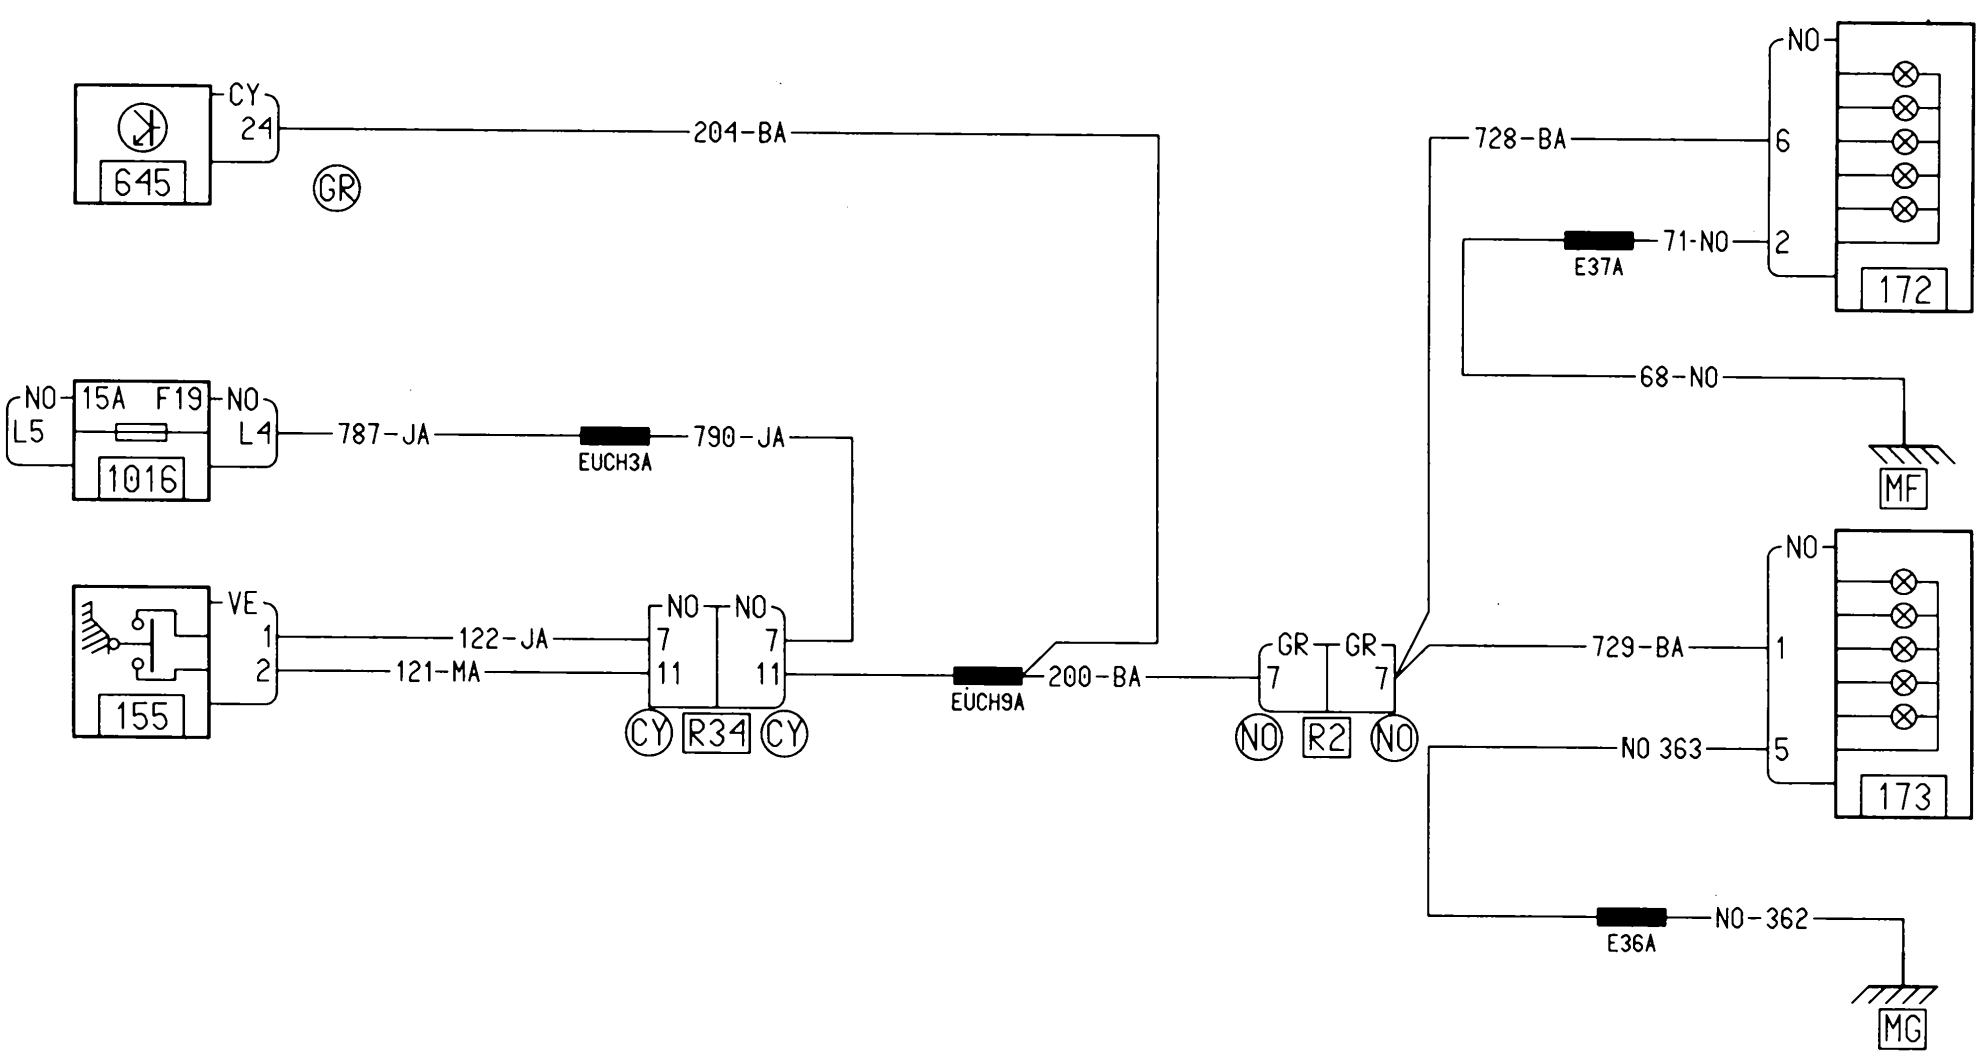


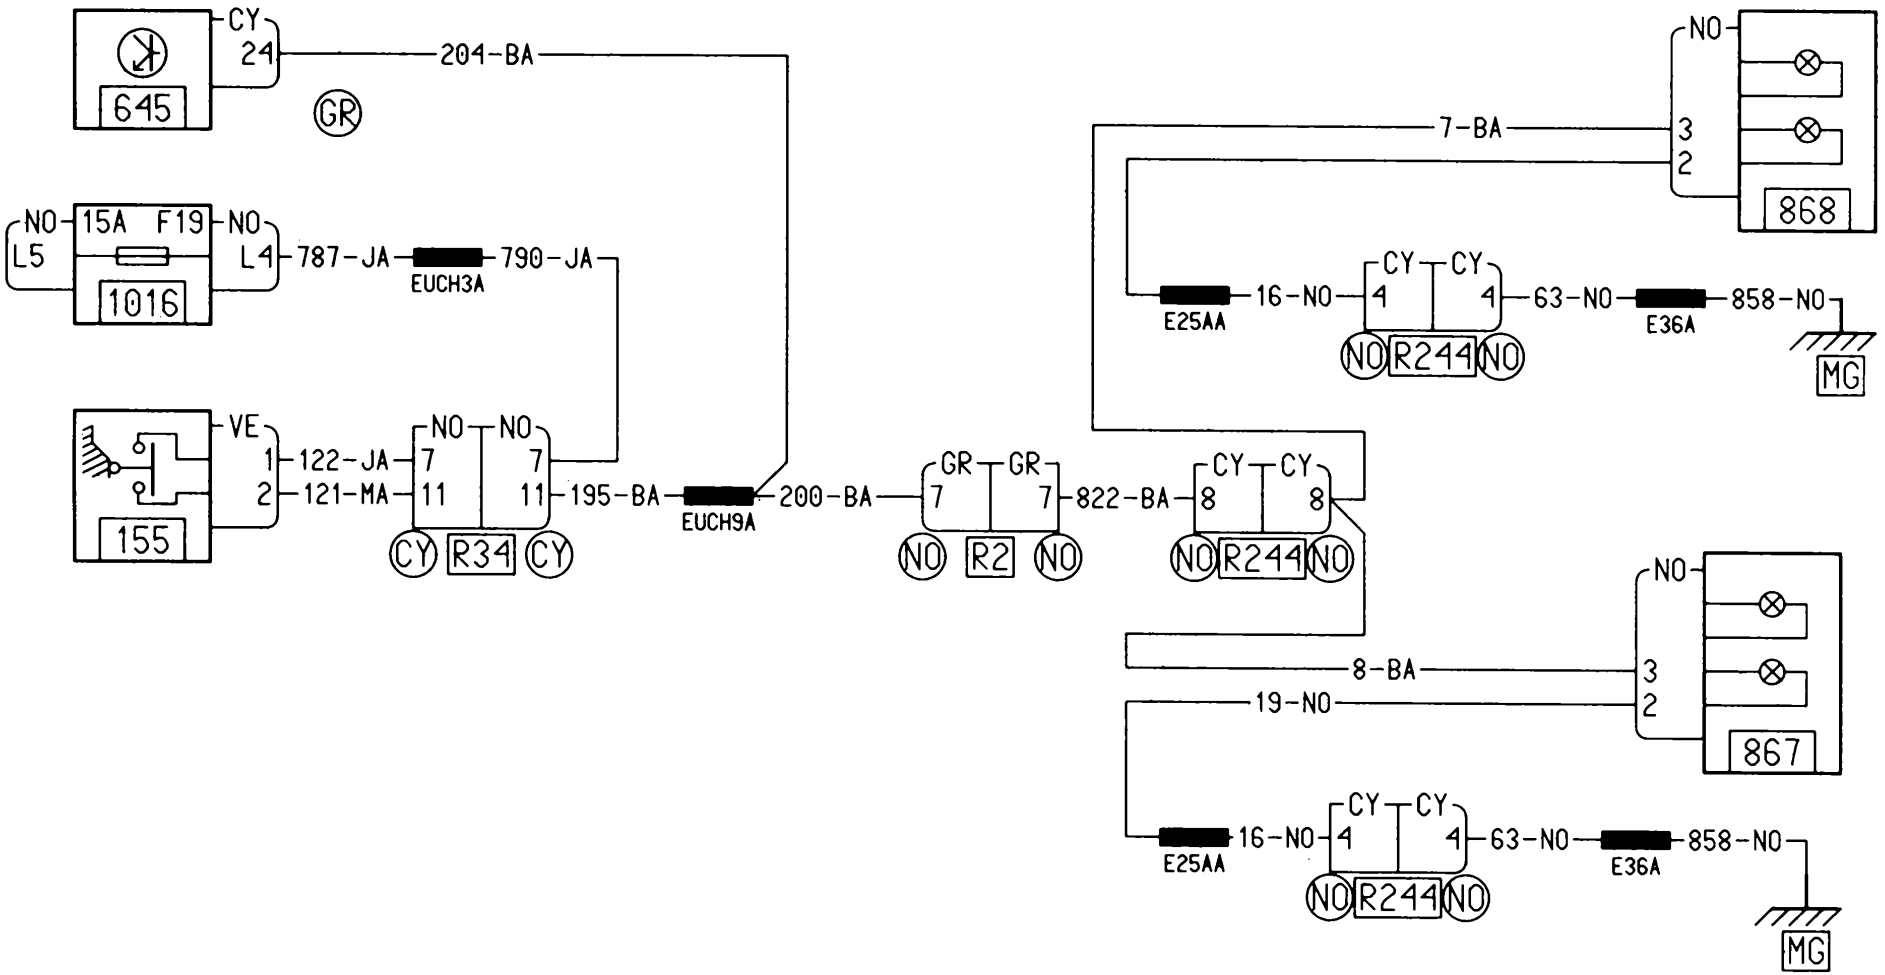

645
CY
24
204-BA
GR
NO
15A F19
L5
1016
NO
L4
787-JA
EUCH3A
790-JA
155
VE
1
2
122-JA
121-MA
NO
7
11
NO
7
11
195-BA
CY
R34
CY
EUCH9A
200-BA
GR
GR
7
7
NO
R2
NO
822-BA
CY
CY
8
8
NO
R244
NO
7-BA
NO
3
2
868
E25AA
16-NO
CY
CY
4
4
NO
R244
NO
63-NO
E36A
858-NO
MG
8-BA
19-NO
NO
3
2
867
E25AA
16-NO
CY
CY
4
4
NO
R244
NO
63-NO
E36A
858-NO
MG


REVERSING LIGHTS


B64,L64/K4M706,K7M704/MERCOS/BVM5


X642
00

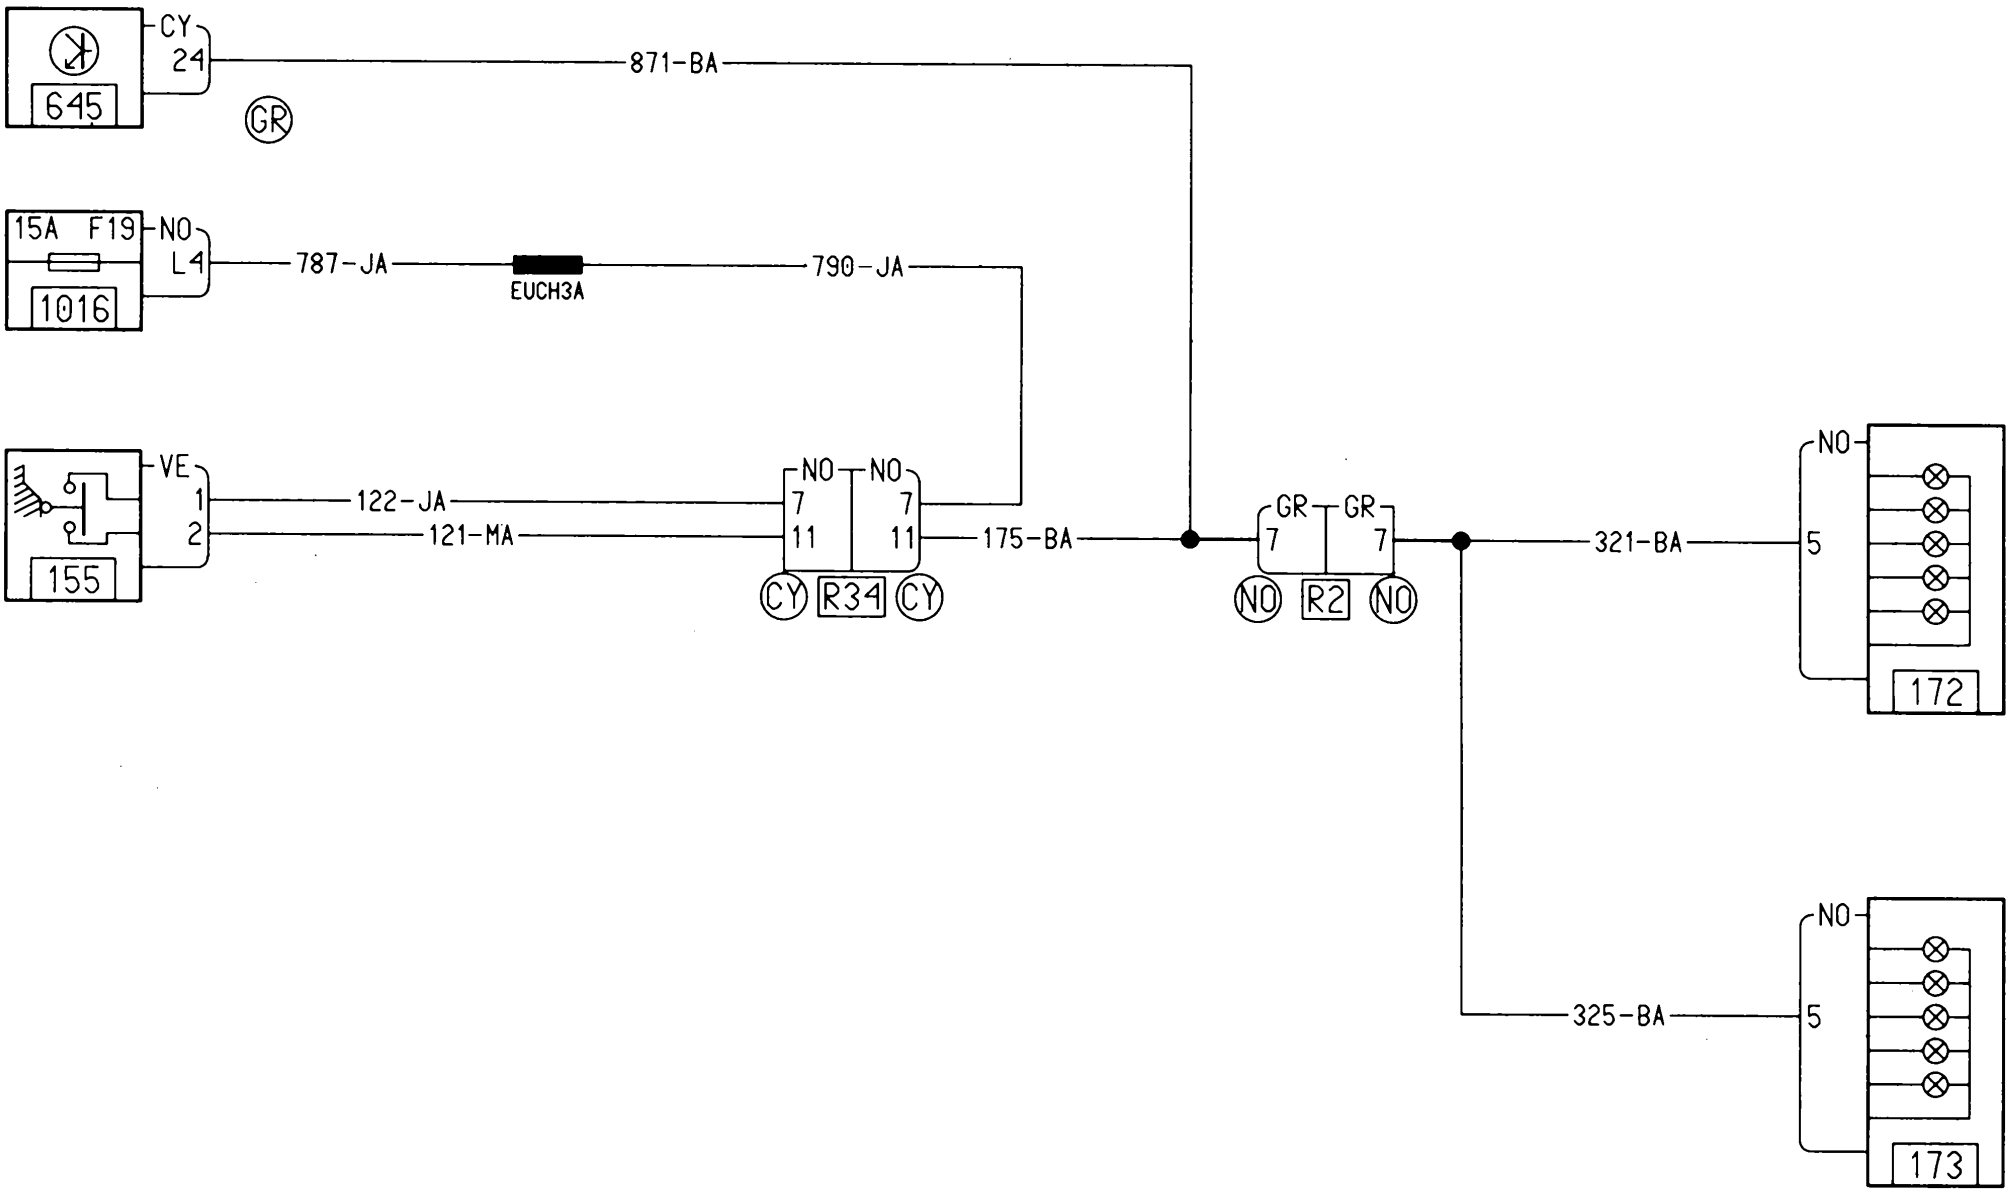


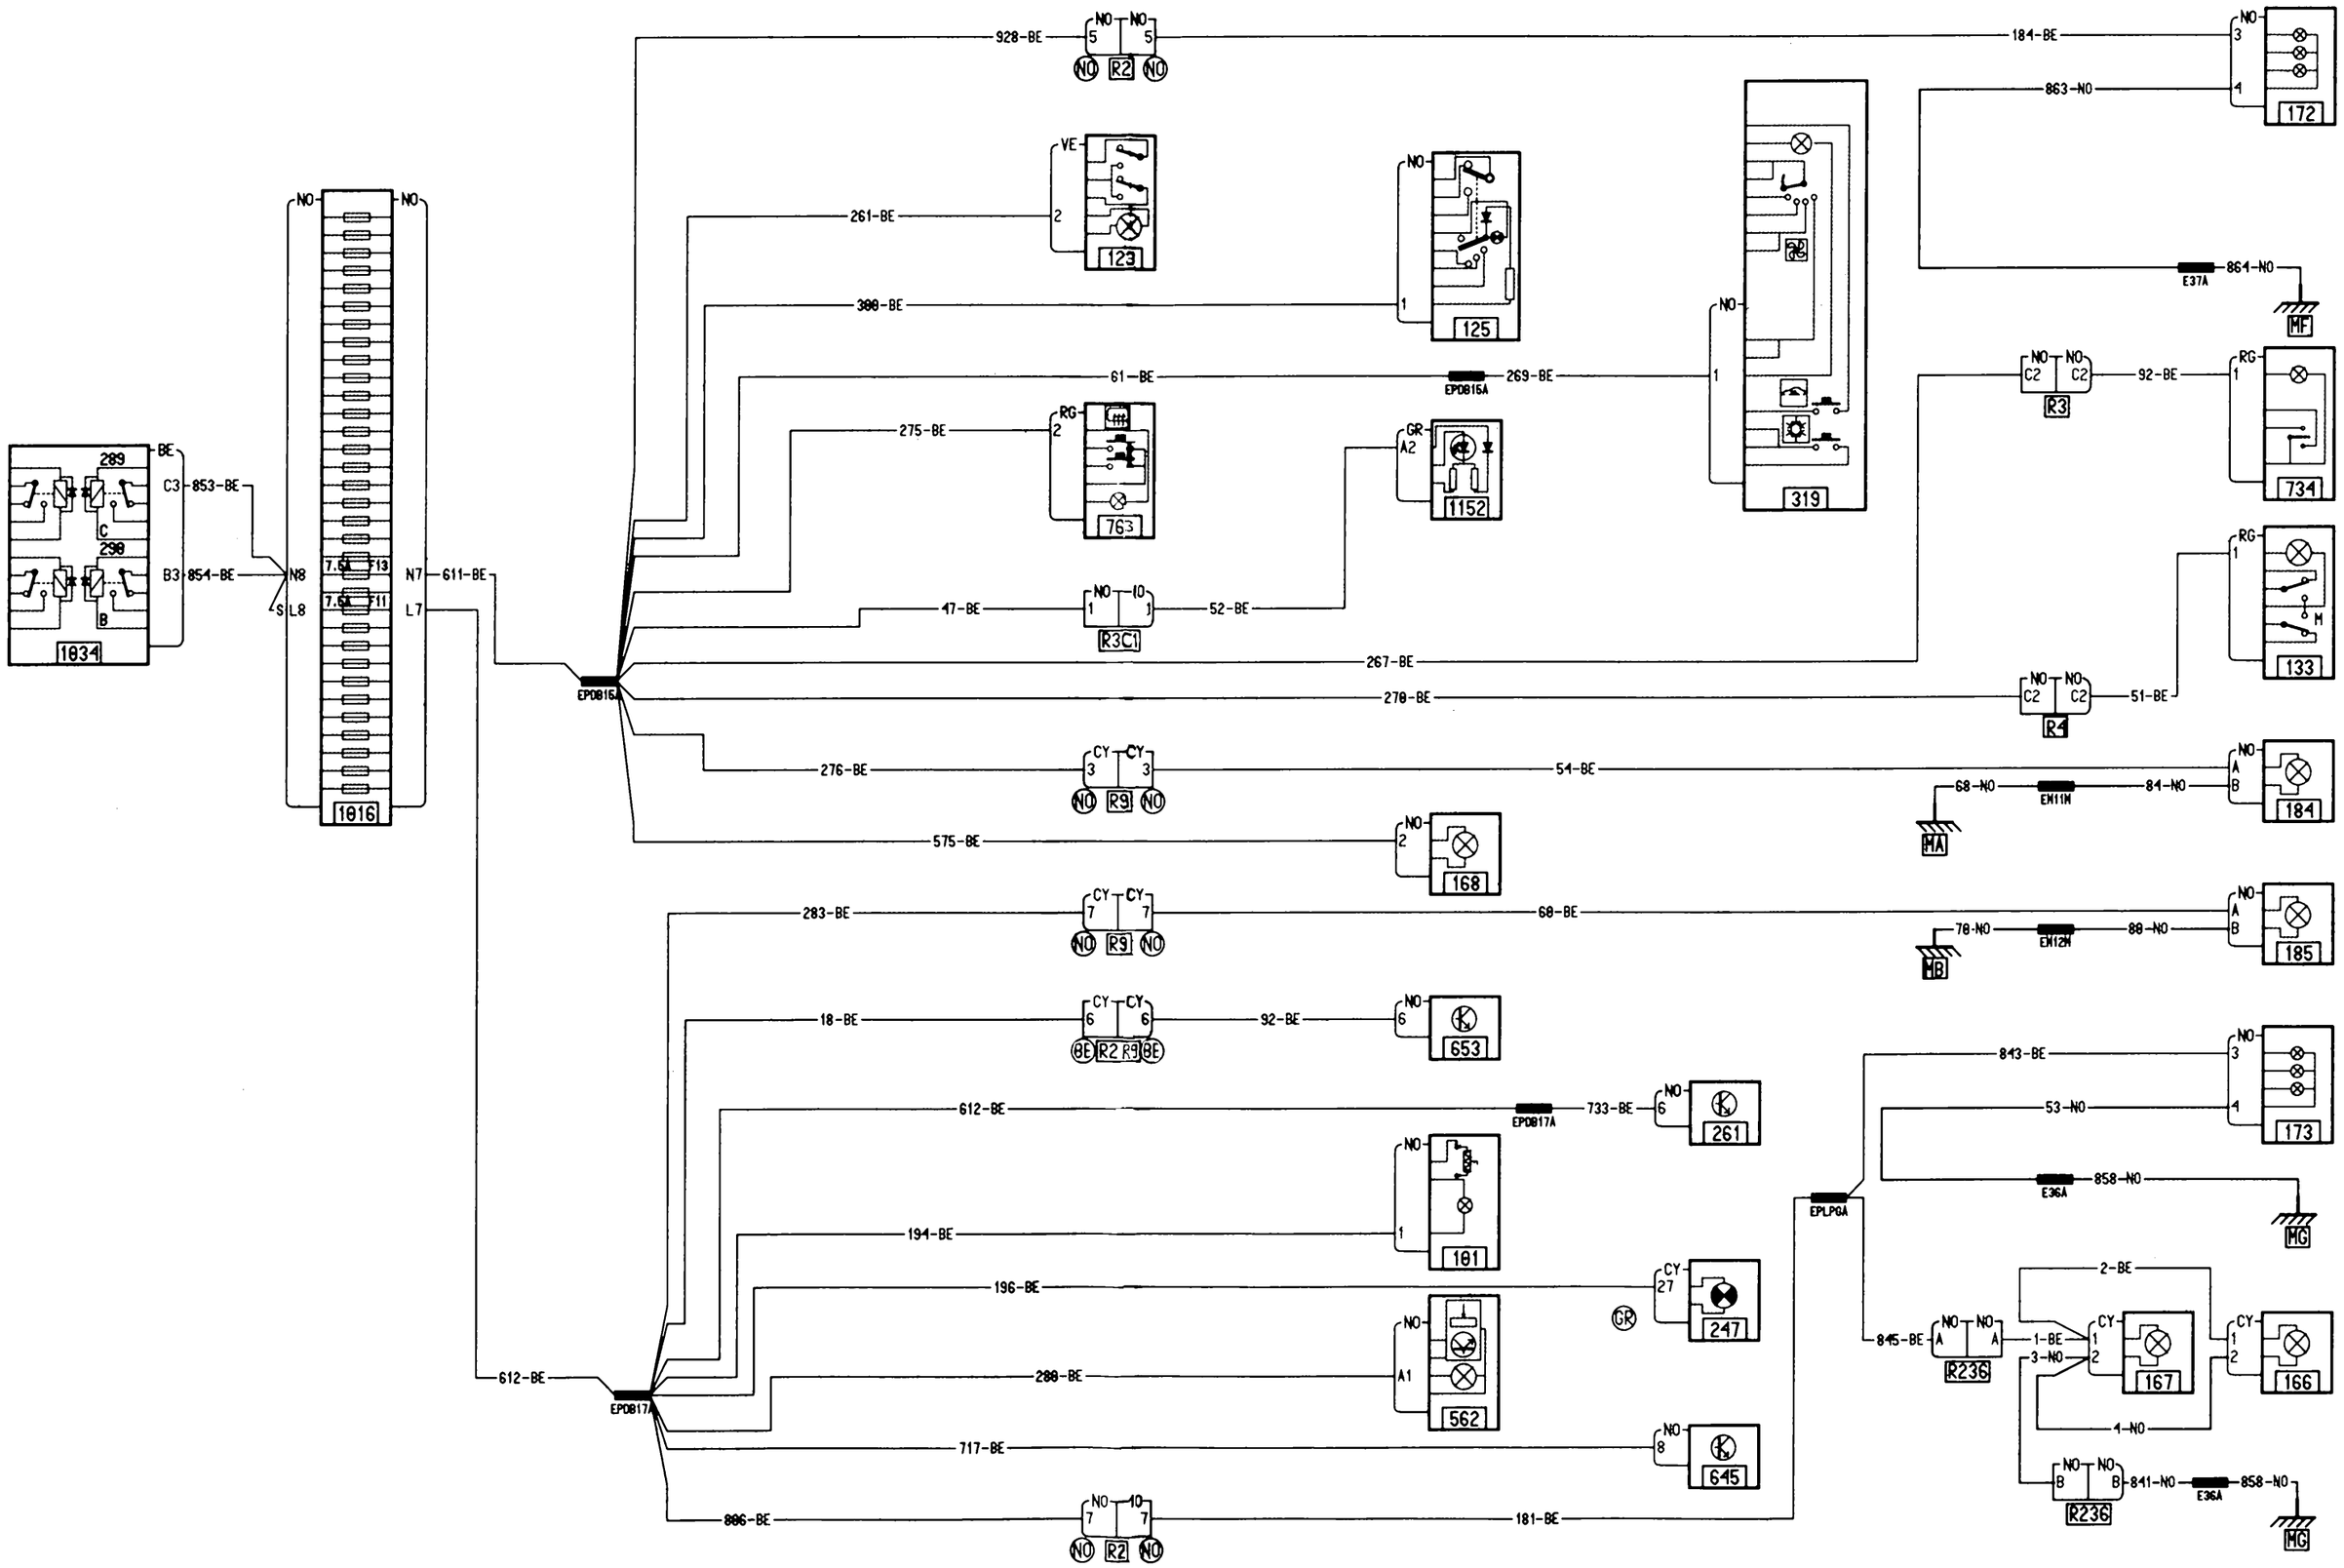

928-BE
184-BE
863-NO
261-BE
388-BE
61-BE
269-BE
275-BE
47-BE
52-BE
267-BE
270-BE
276-BE
54-BE
575-BE
283-BE
68-BE
18-BE
92-BE
612-BE
733-BE
194-BE
196-BE
288-BE
717-BE
886-BE
181-BE
843-BE
53-NO
858-NO
845-BE
1-BE
3-NO
2-BE
4-NO
841-NO
858-NO
68-NO
84-NO
78-NO
88-NO
864-NO
51-BE
92-BE
289
290
853-BE
854-BE
611-BE
612-BE
1034
1016
123
125
319
172
734
763
1152
R3
R3C1
R4
133
184
185
MF
MA
MB
EM11M
EM12M
E37A
168
653
261
101
247
562
645
173
167
166
R236
E36A
MG
EP0816A
EP0817A
EP0816A
EPLPGA

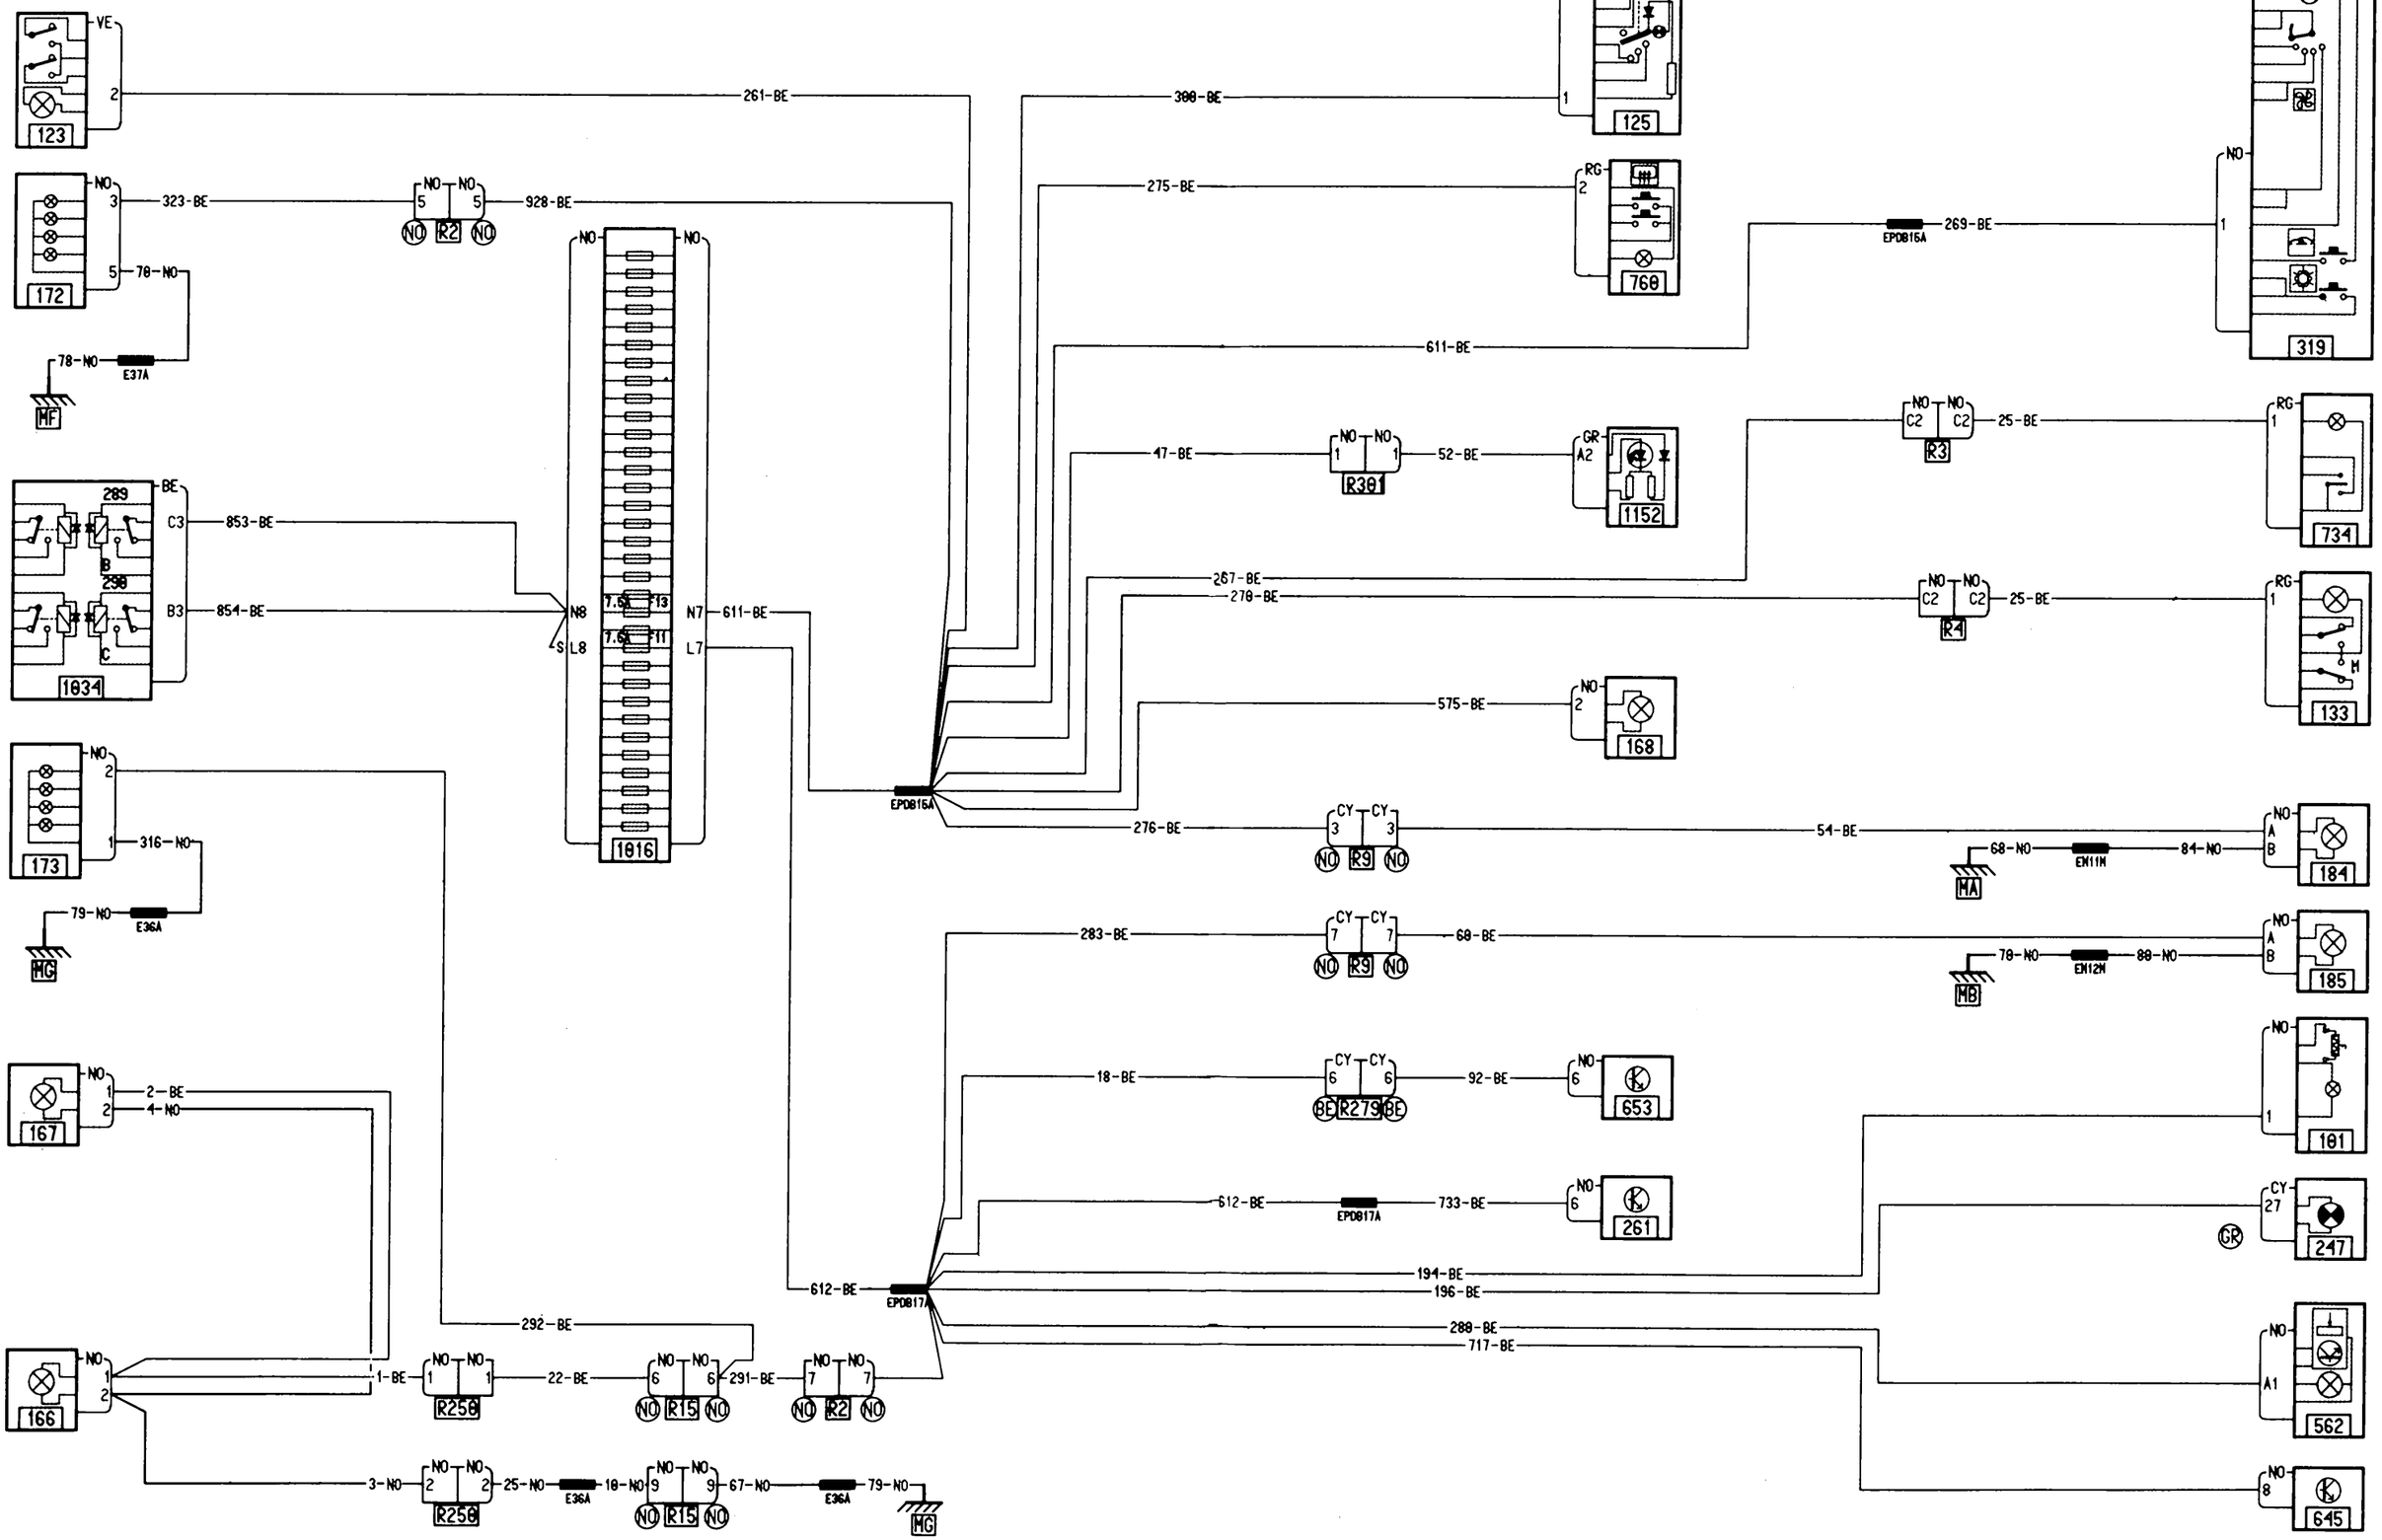

123
VE
2
261-BE
172
NO
3
323-BE
5
70-NO
78-NO
E37A
MF
R2
928-BE
1016
N8
L8
N7
611-BE
L7
1034
289
BE
C3
853-BE
B3
854-BE
B
258
C
173
316-NO
79-NO
E36A
MG
167
2-BE
4-NO
166
1-BE
R258
22-BE
R15
291-BE
R2
292-BE
3-NO
25-NO
10-NO
67-NO
EPD816A
EPD817A
300-BE
275-BE
47-BE
R301
52-BE
1152
GR
A2
575-BE
168
276-BE
CY
R9
54-BE
283-BE
68-BE
18-BE
92-BE
653
612-BE
733-BE
261
194-BE
196-BE
288-BE
717-BE
562
A1
645
8
125
760
RG
2
269-BE
319
R3
25-BE
734
R4
133
M
184
MA
68-NO
EM11M
84-NO
185
MB
78-NO
EM12M
88-NO
101
247
27

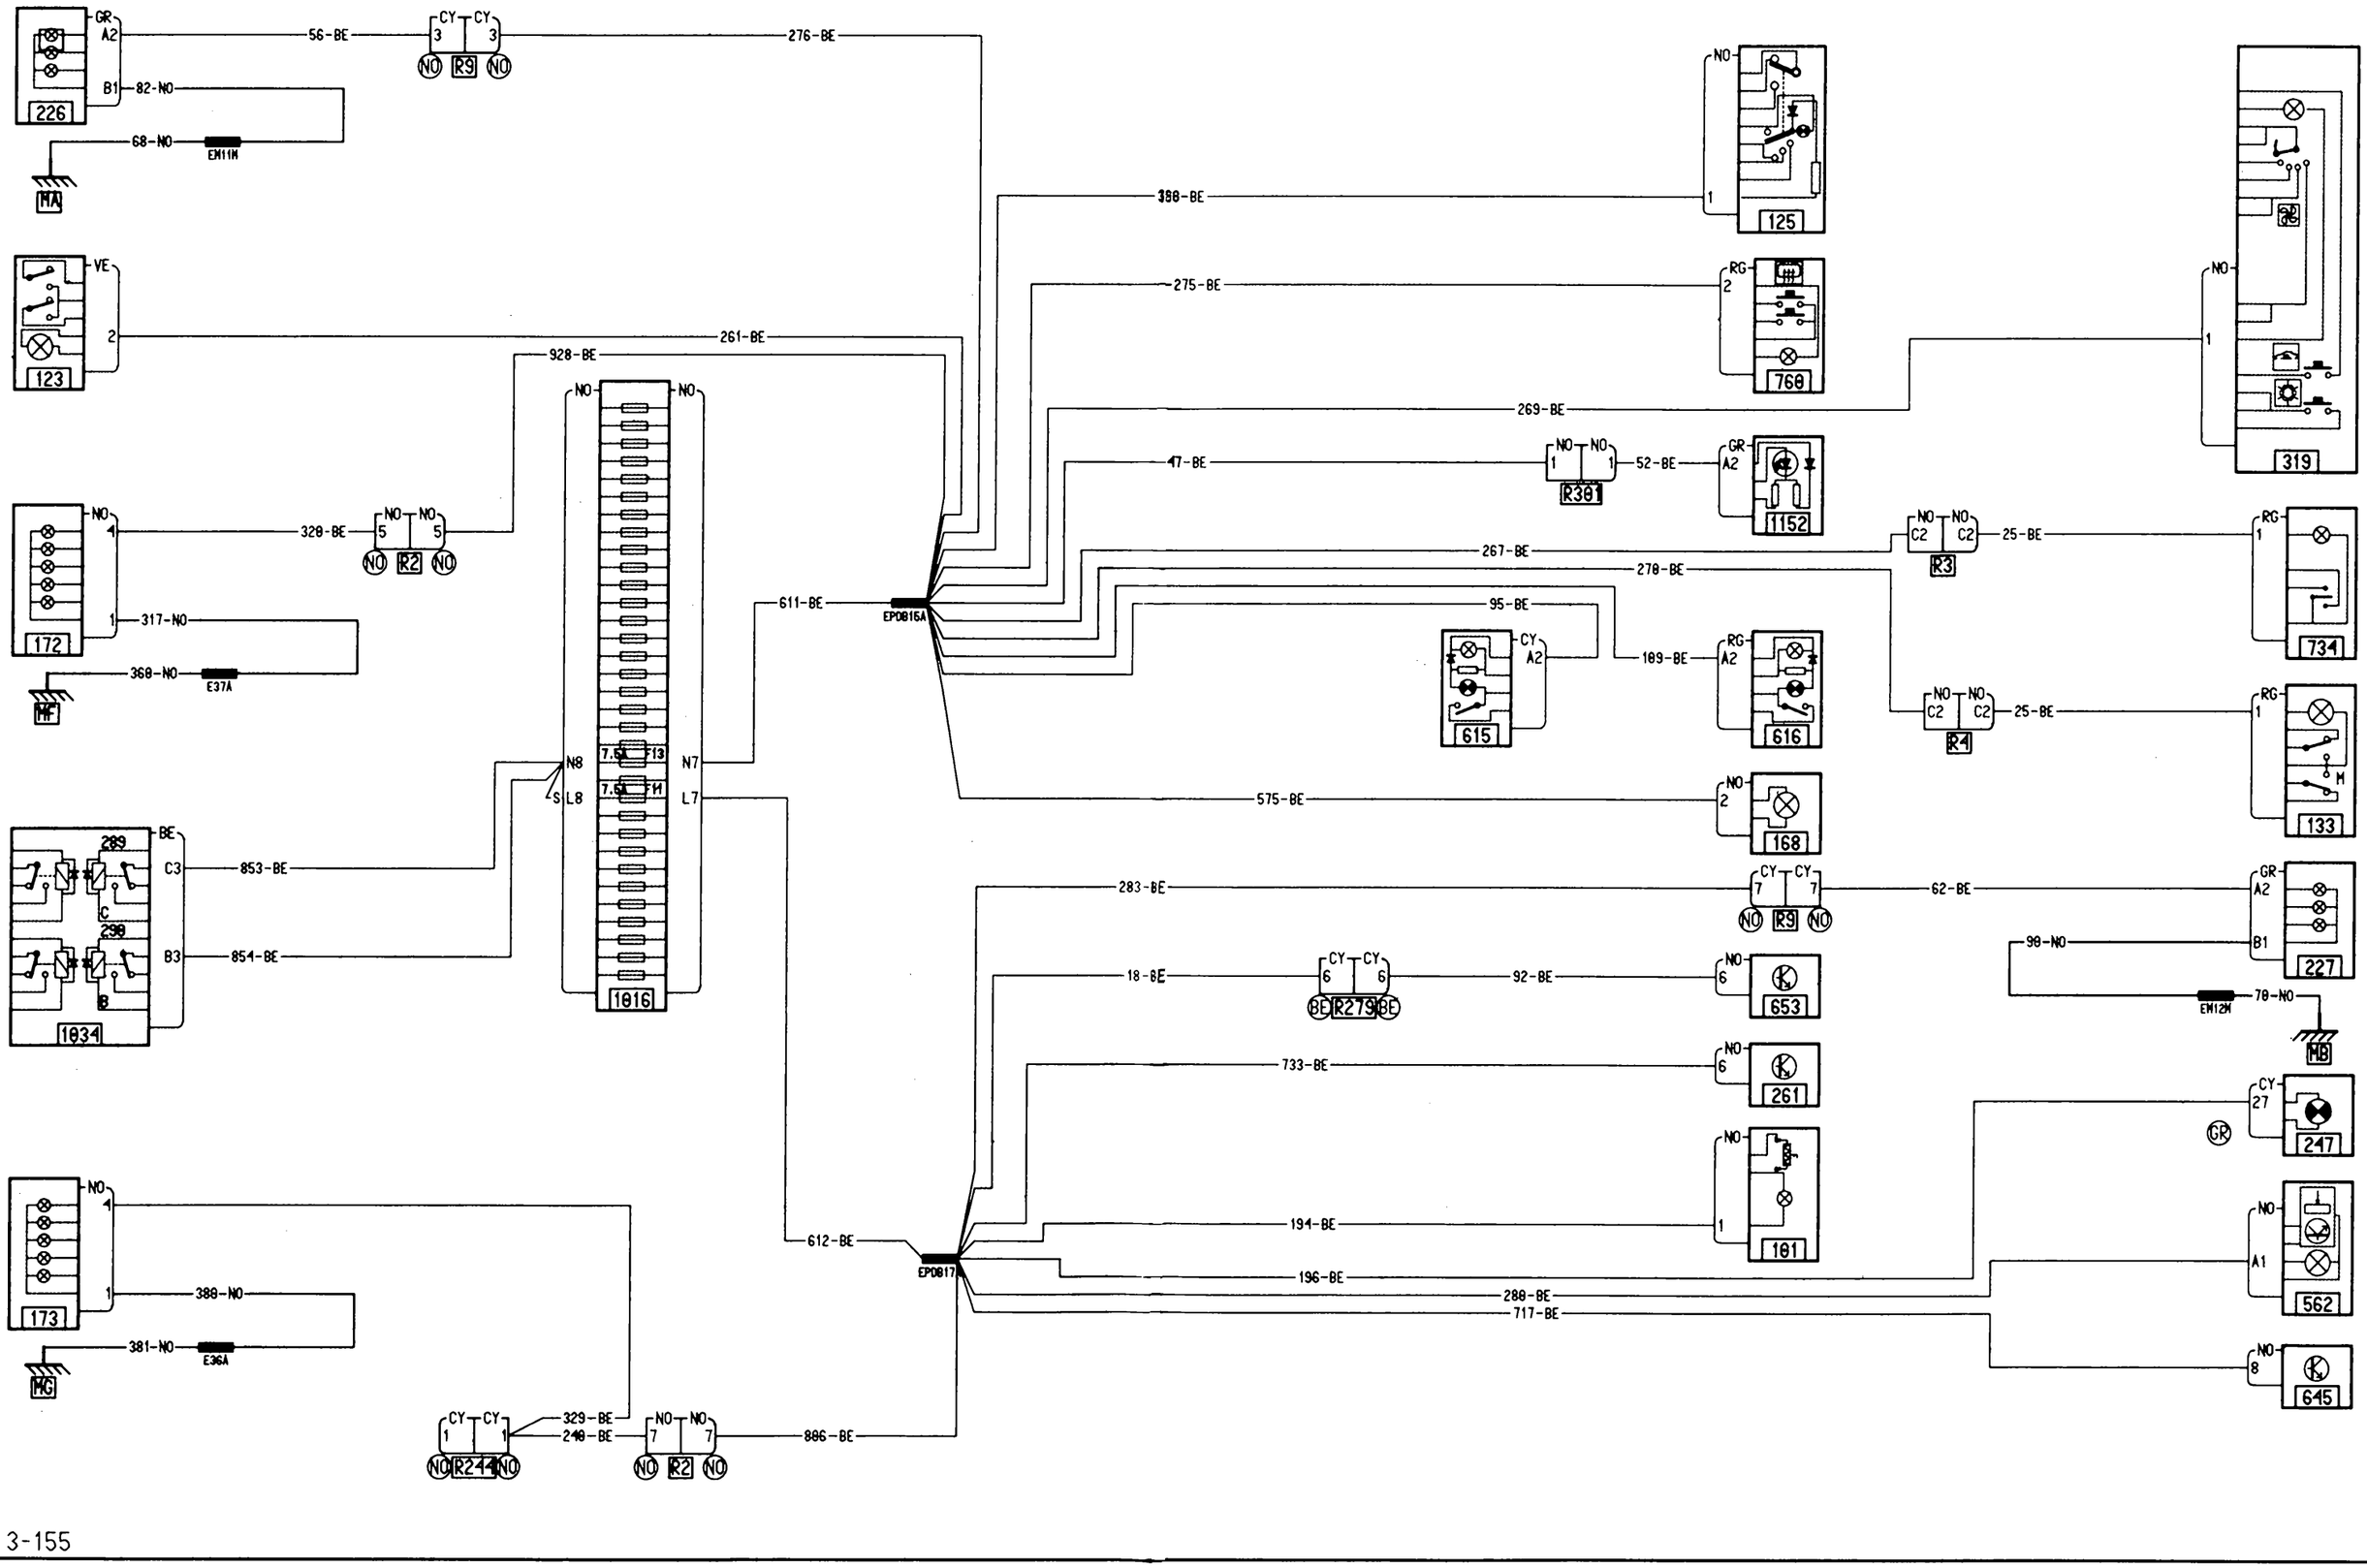

226
GR A2
56-BE
CY 3
CY 3
R9
276-BE
B1 82-NO
68-NO
EM11M
MA
123
VE 2
261-BE
928-BE
172
320-BE
R2
317-NO
368-NO
E37A
MF
1016
N8
N7
L8
L7
611-BE
EP0815A
1034
853-BE
854-BE
173
388-NO
381-NO
E36A
MG
329-BE
248-BE
R244
886-BE
612-BE
EP0817A
388-BE
125
275-BE
760
269-BE
319
47-BE
R361
52-BE
1152
267-BE
R3
25-BE
734
278-BE
95-BE
615
109-BE
616
R4
133
575-BE
168
283-BE
62-BE
227
18-BE
R279
92-BE
653
98-NO
EM12M
78-NO
MB
733-BE
261
247
194-BE
101
196-BE
288-BE
717-BE
562
645

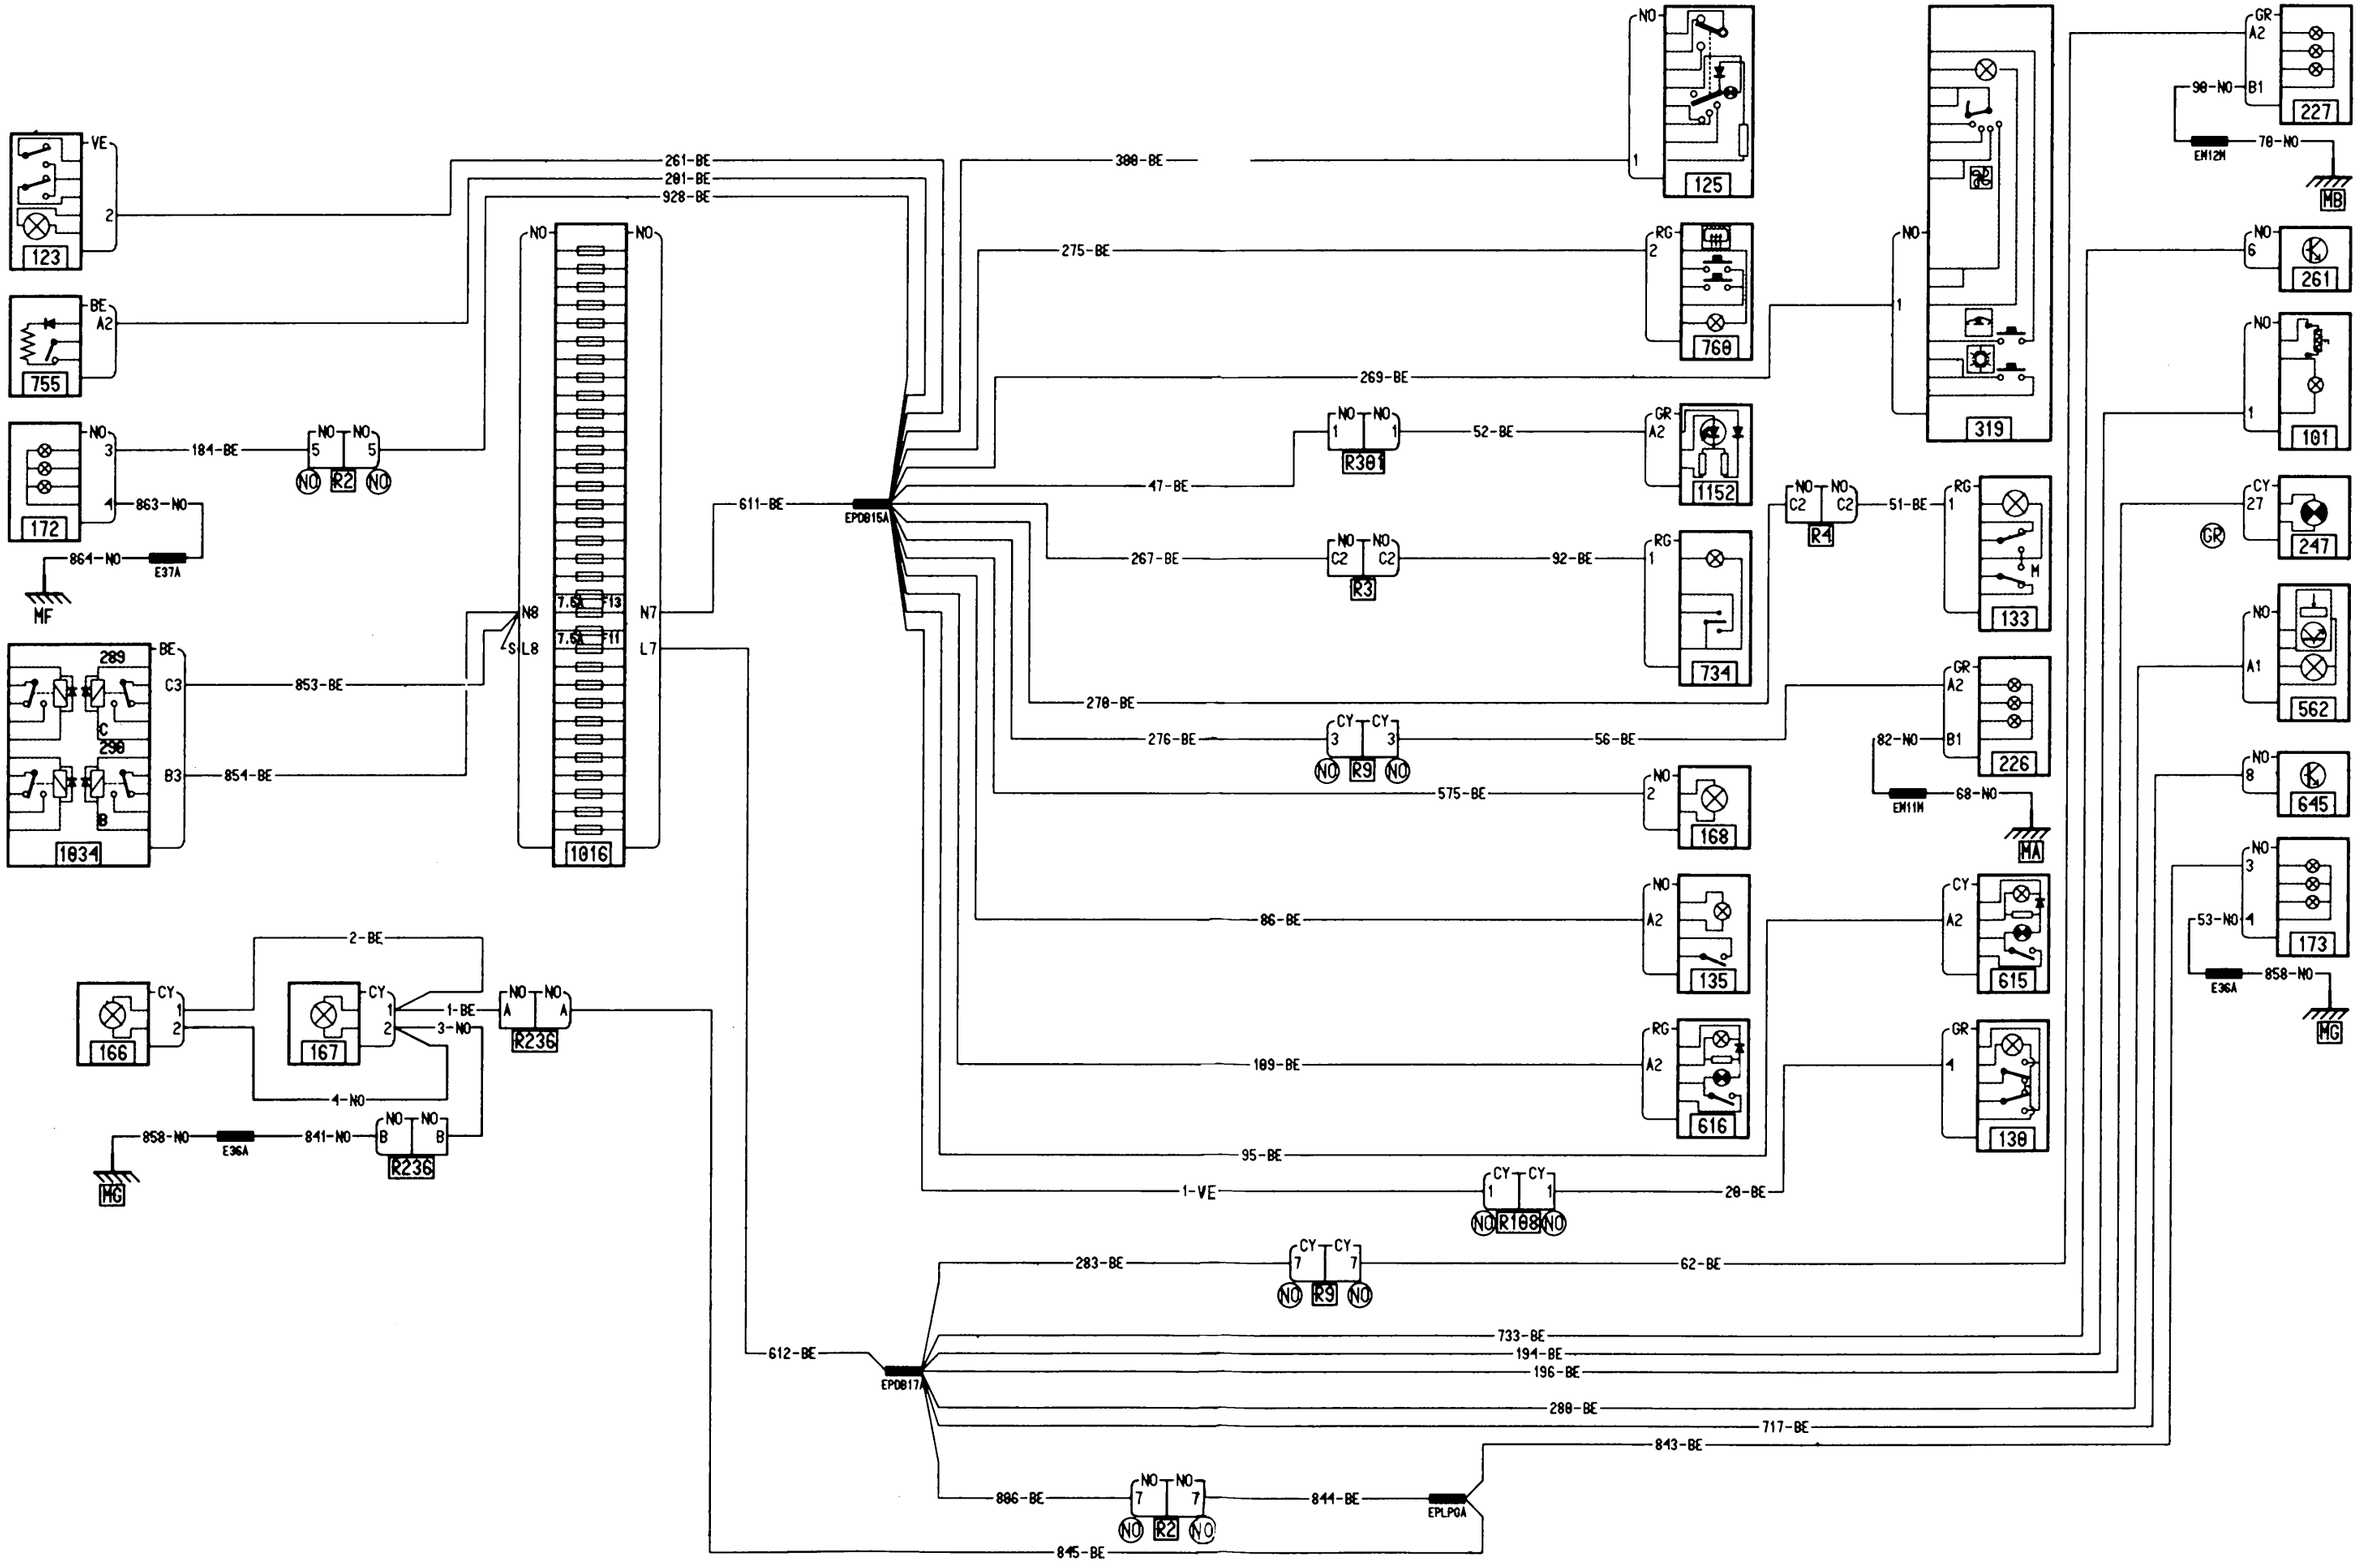

123
755
172
MF
E37A
1034
1016
EP0815A
125
760
319
1152
R301
R4
133
734
R3
168
135
615
616
139
R108
166
167
R236
227
261
101
247
562
645
173
226
MB
MA
MG
EM12M
EM11M
E36A
EPLP0A
EP0817A
R2
R9
261-BE
281-BE
928-BE
388-BE
275-BE
269-BE
611-BE
47-BE
52-BE
267-BE
92-BE
51-BE
278-BE
276-BE
56-BE
575-BE
86-BE
109-BE
95-BE
1-VE
20-BE
283-BE
62-BE
612-BE
733-BE
194-BE
196-BE
288-BE
717-BE
843-BE
886-BE
844-BE
845-BE
853-BE
851-BE
184-BE
863-NO
864-NO
2-BE
1-BE
3-NO
4-NO
858-NO
841-NO
90-NO
78-NO
82-NO
68-NO
53-NO

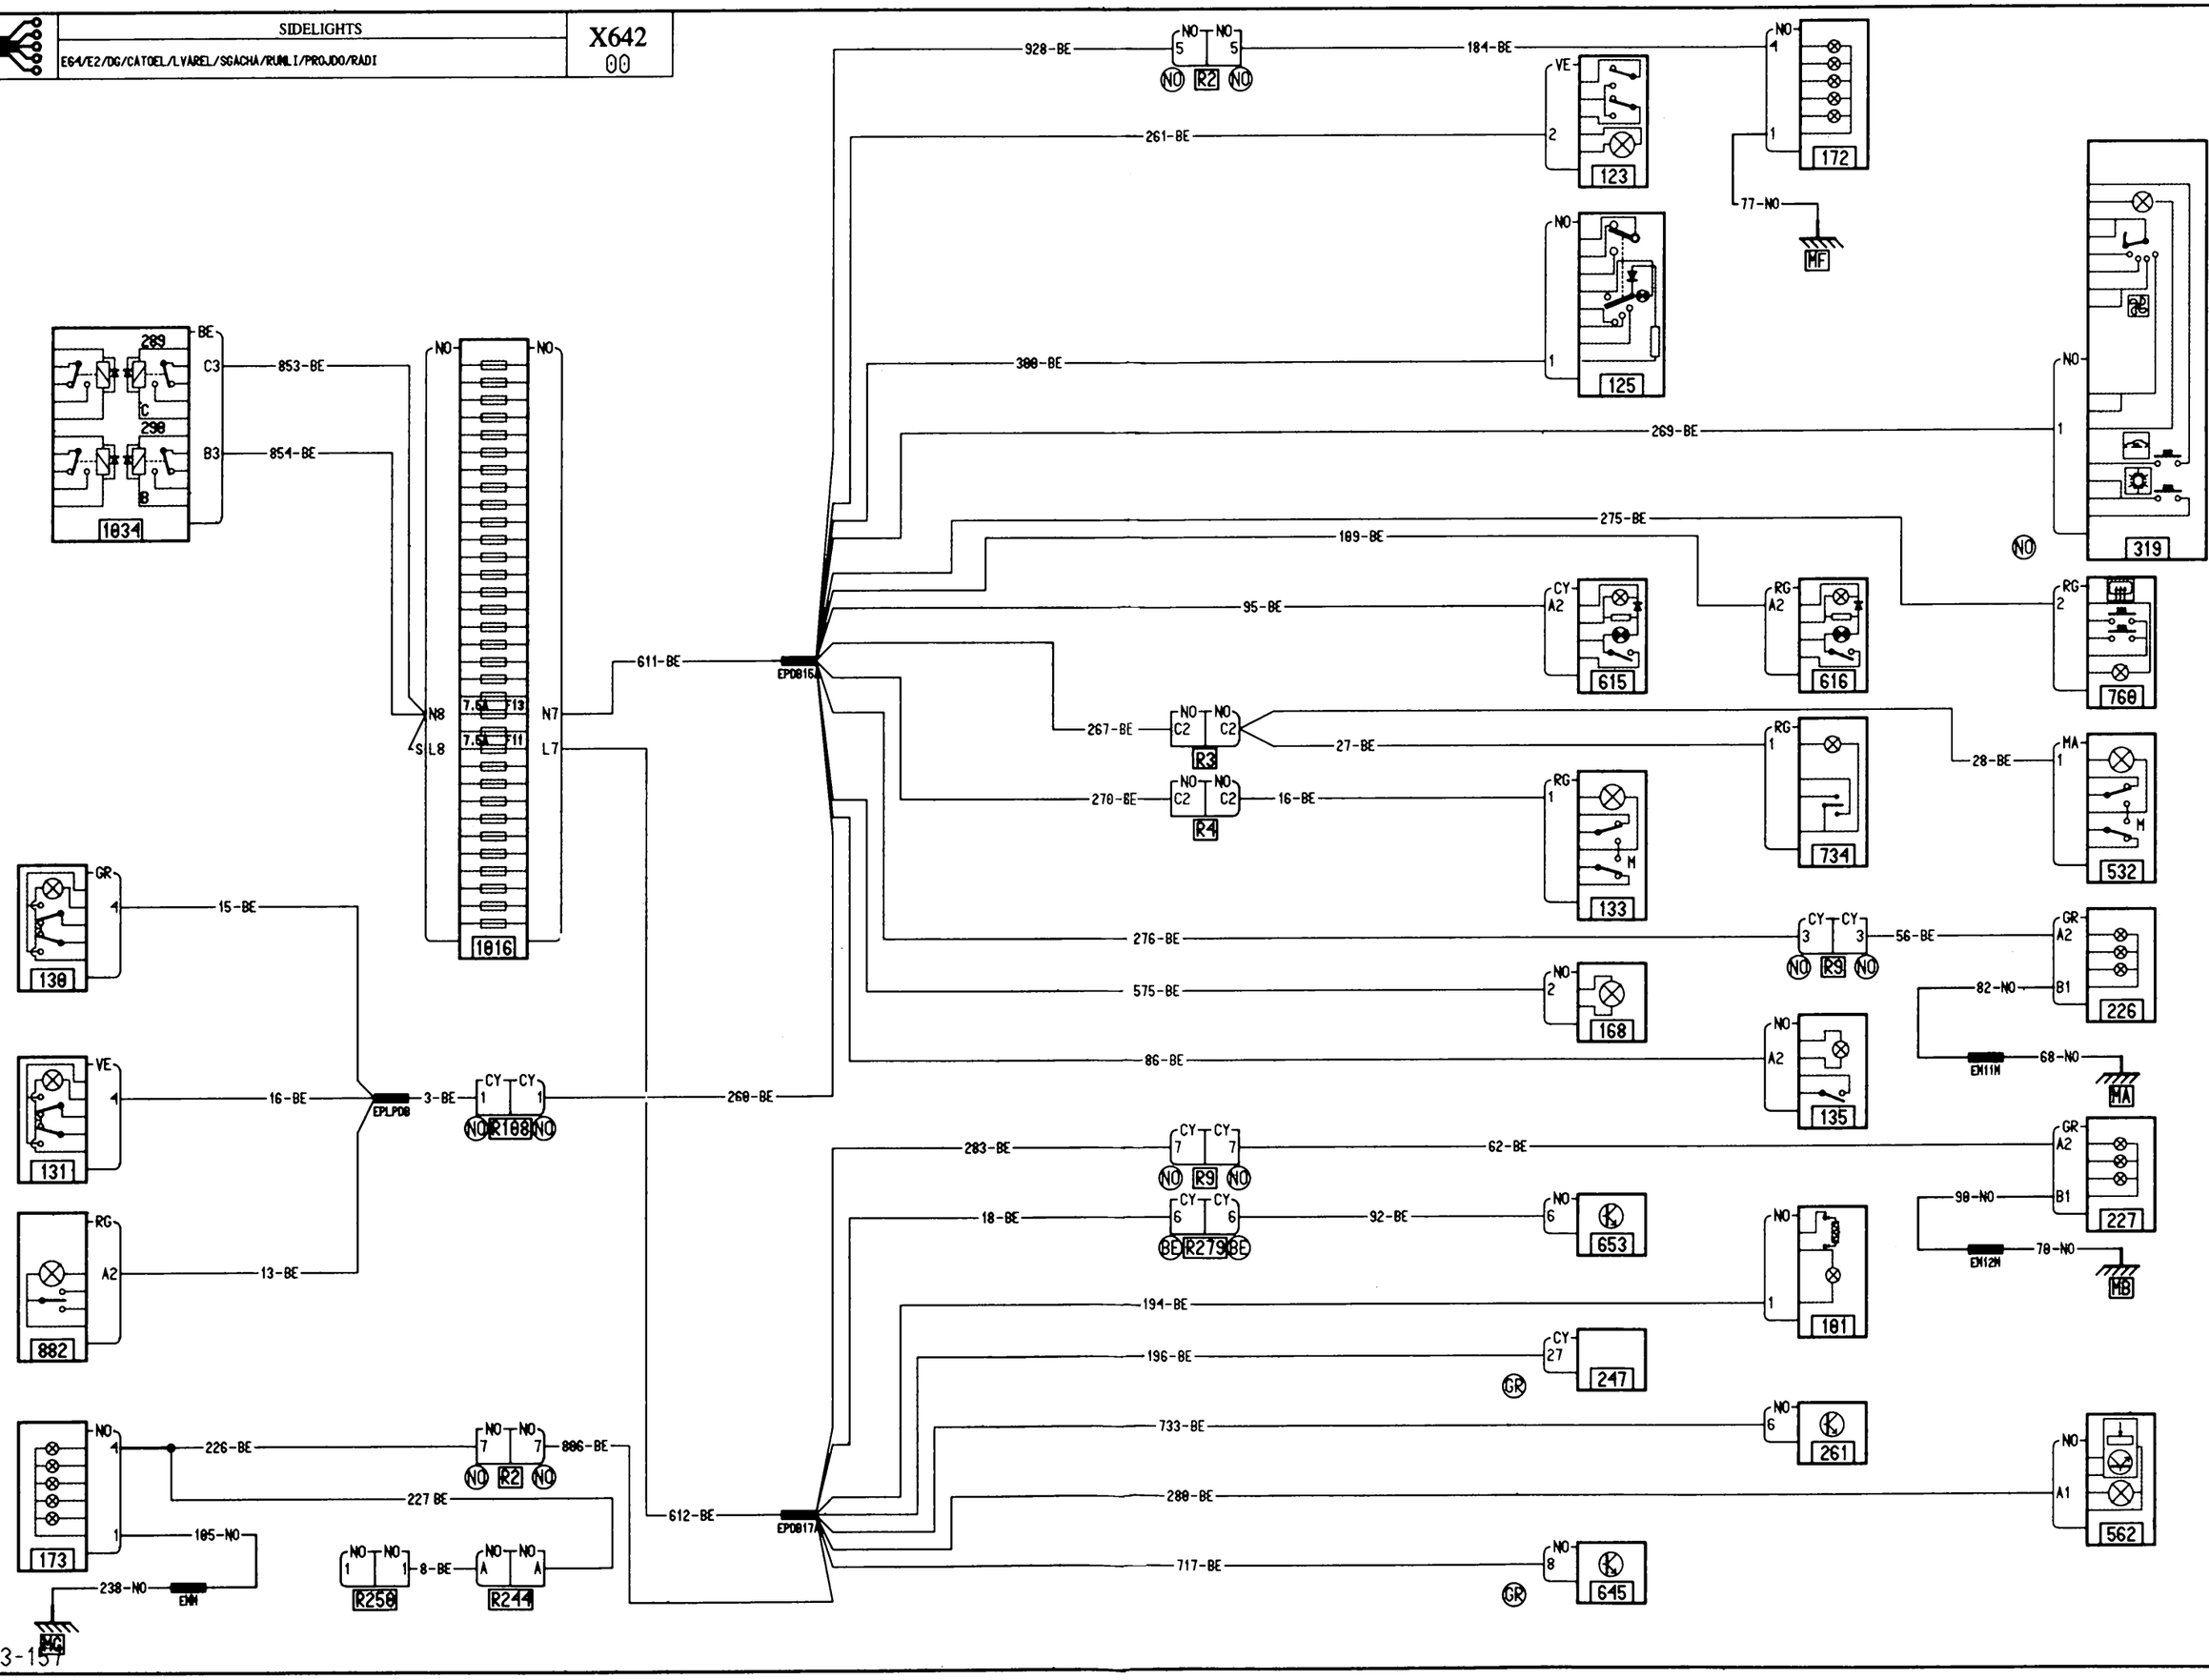

928-BE
184-BE
261-BE
300-BE
269-BE
275-BE
189-BE
95-BE
611-BE
267-BE
27-BE
270-BE
16-BE
276-BE
575-BE
86-BE
283-BE
62-BE
18-BE
92-BE
194-BE
196-BE
733-BE
288-BE
717-BE
612-BE
853-BE
854-BE
15-BE
16-BE
13-BE
226-BE
227 BE
105-NO
238-NO
886-BE
8-BE
3-BE
269-BE
56-BE
82-NO
68-NO
98-NO
78-NO
77-NO
28-BE
EPD816
EPD817
EPLPD8
EM11M
EM12M
1034
1016
130
131
882
173
123
125
172
319
615
616
760
734
532
133
168
135
653
101
247
261
562
645
226
227
R2
R3
R4
R9
R279
R108
R256
R244
MF
MA
MB
MC
EMM

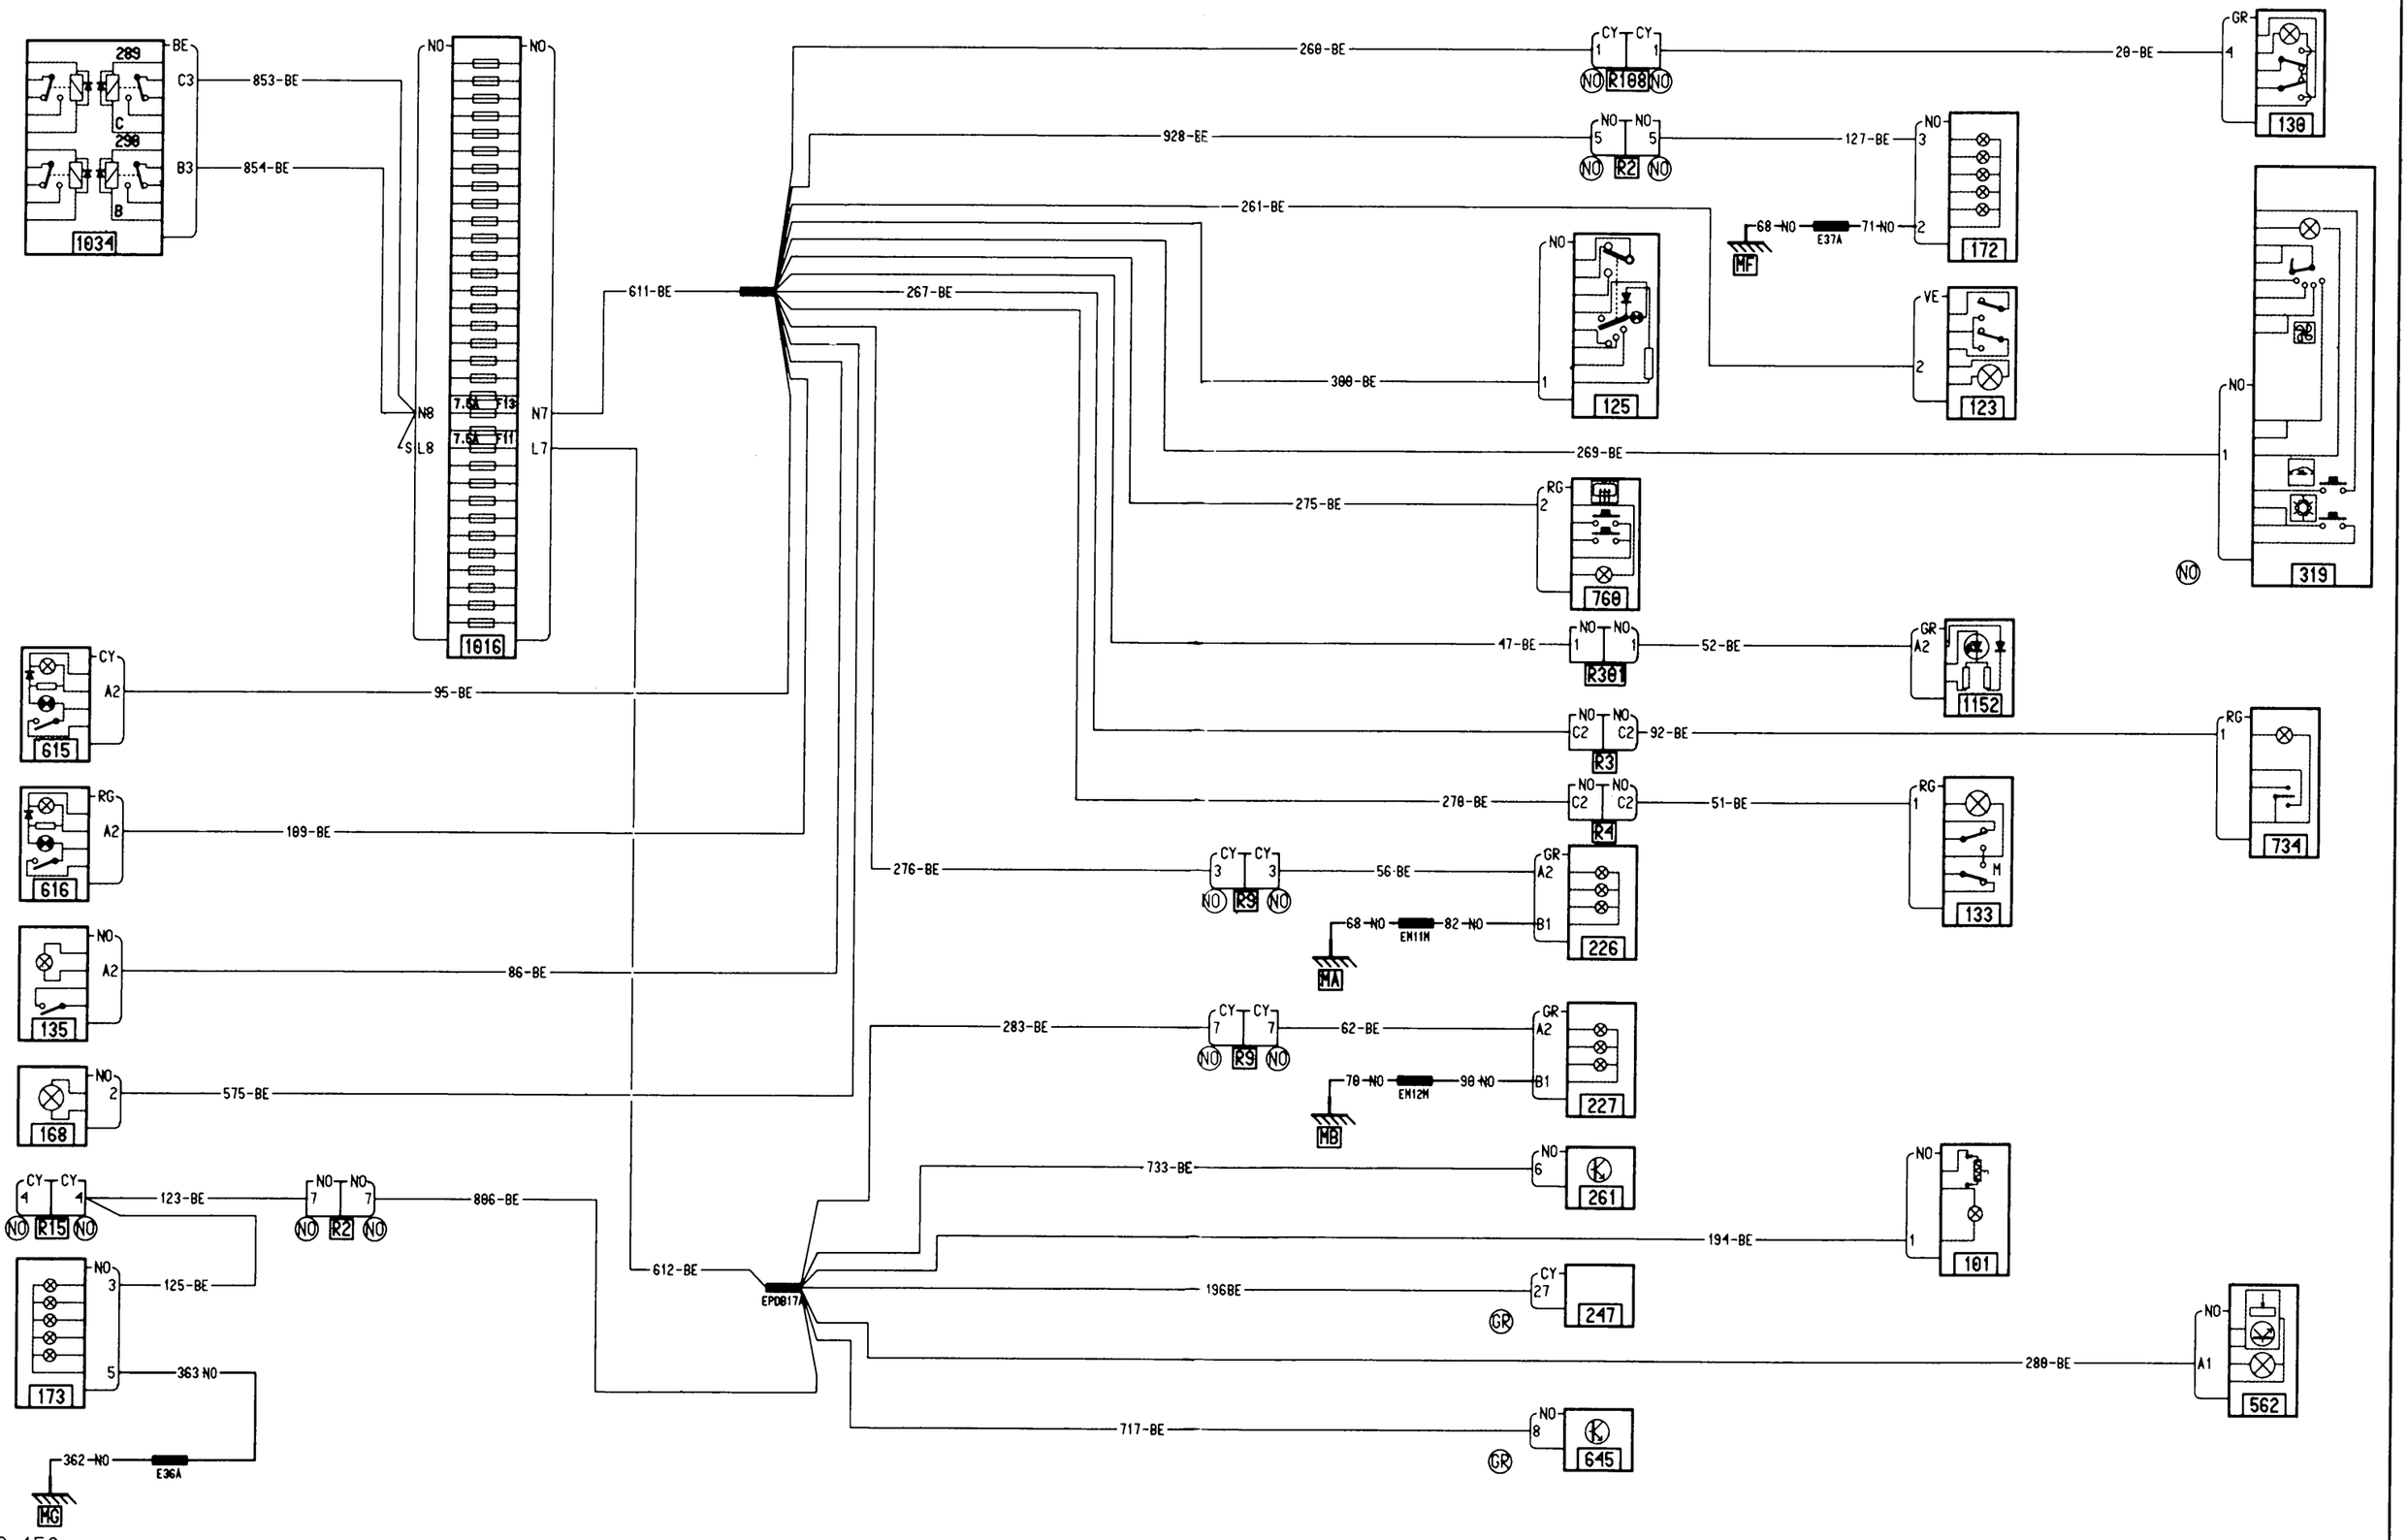

1034
289
290
C
B
BE
C3
B3
853-BE
854-BE
1016
NO
N8
N7
L8
L7
S
7.5A F13
7.5A F11
611-BE
260-BE
928-BE
261-BE
267-BE
300-BE
275-BE
269-BE
47-BE
52-BE
92-BE
278-BE
51-BE
276-BE
56-BE
283-BE
62-BE
733-BE
194-BE
196BE
717-BE
288-BE
612-BE
EPD817
95-BE
109-BE
86-BE
575-BE
806-BE
123-BE
125-BE
363 NO
362-NO
E36A
MG
127-BE
68-NO
71-NO
E37A
MF
82-NO
68-NO
EM11M
MA
98-NO
78-NO
EM12M
MB
CY
GR
RG
VE
A2
A1
B1
M
R108
R2
R3
R4
R9
R15
125
123
760
R301
1152
733
R5
1133
226
227
261
101
247
562
645
615
616
135
168
173
172
139
319
734
GR
RG

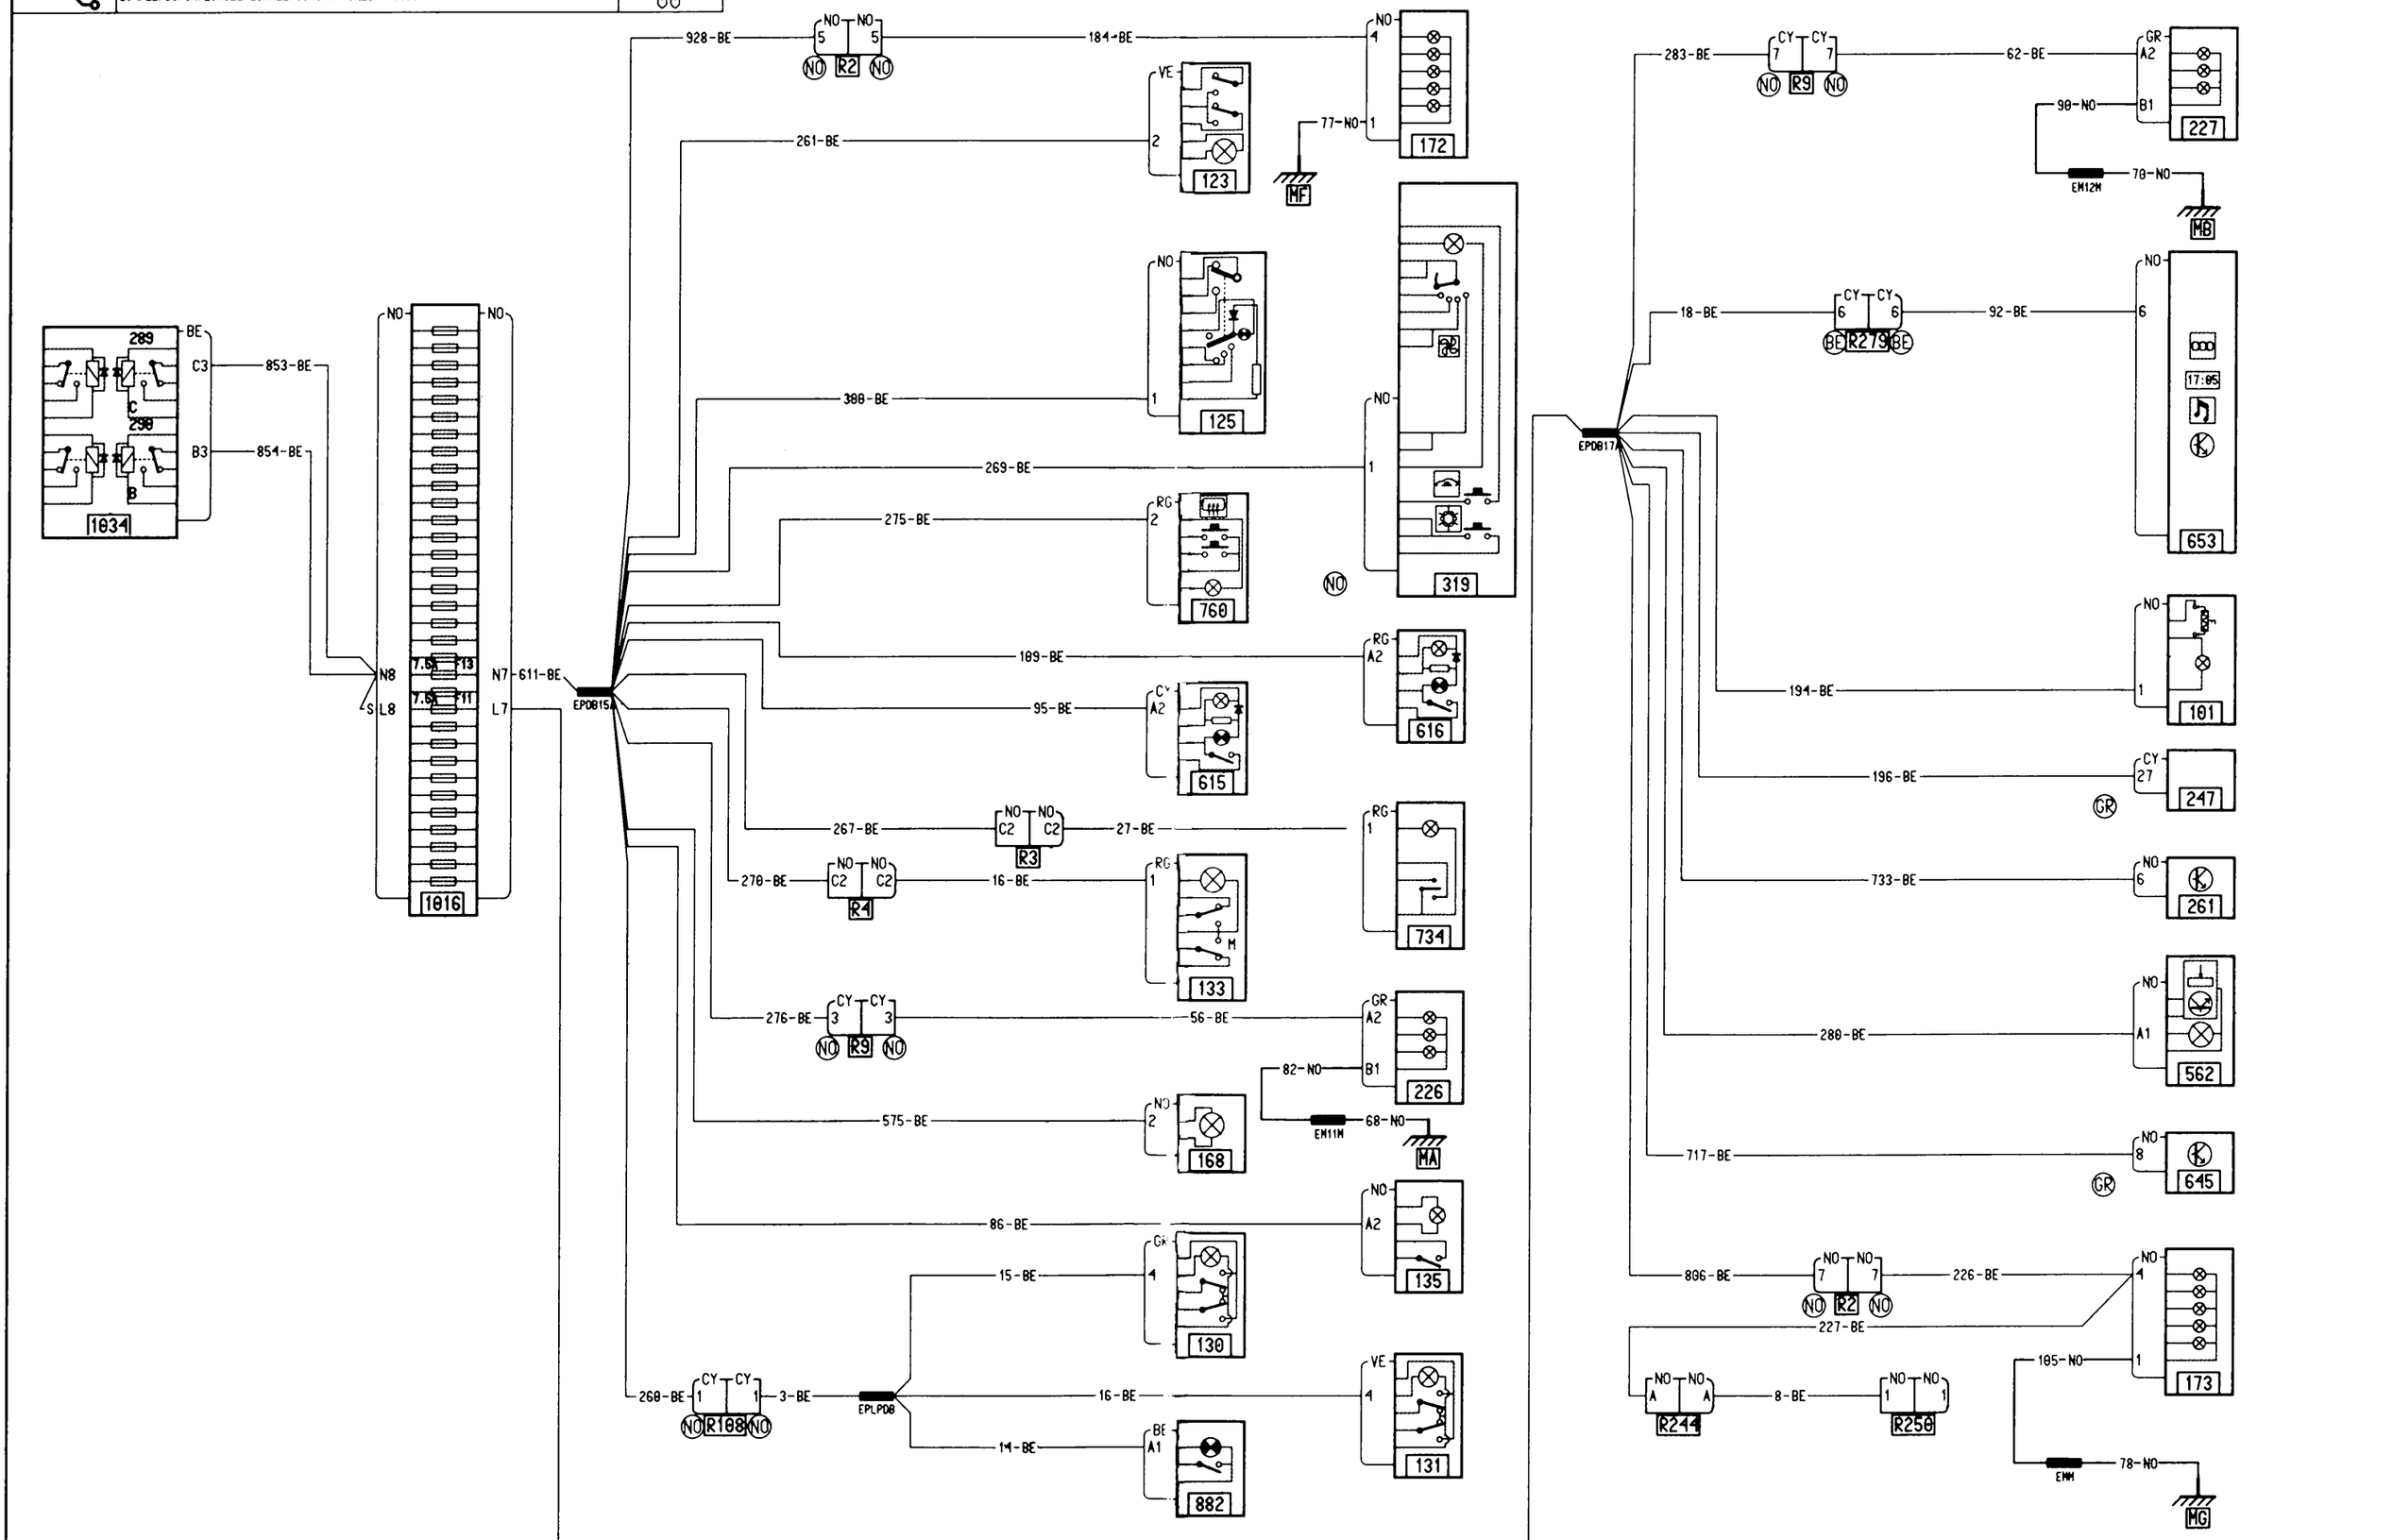

1034
289
298
BE
C3
B3
853-BE
854-BE
1016
N8
L8
N7-611-BE
L7
EP0815
928-BE
184-BE
261-BE
77-NO
MF
172
123
388-BE
125
269-BE
319
275-BE
760
189-BE
616
95-BE
615
267-BE
27-BE
R3
270-BE
16-BE
R4
734
133
276-BE
56-BE
R9
82-NO
226
EM11M
68-NO
MA
575-BE
168
86-BE
135
15-BE
130
269-BE
3-BE
EPLPD8
16-BE
14-BE
882
131
612-BE
R108
283-BE
62-BE
227
98-NO
EM12M
78-NO
MB
18-BE
92-BE
R279
653
EP0817
194-BE
101
196-BE
247
733-BE
261
280-BE
562
717-BE
645
806-BE
226-BE
227-BE
R2
R244
8-BE
R250
105-NO
173
EMM
78-NO
MG

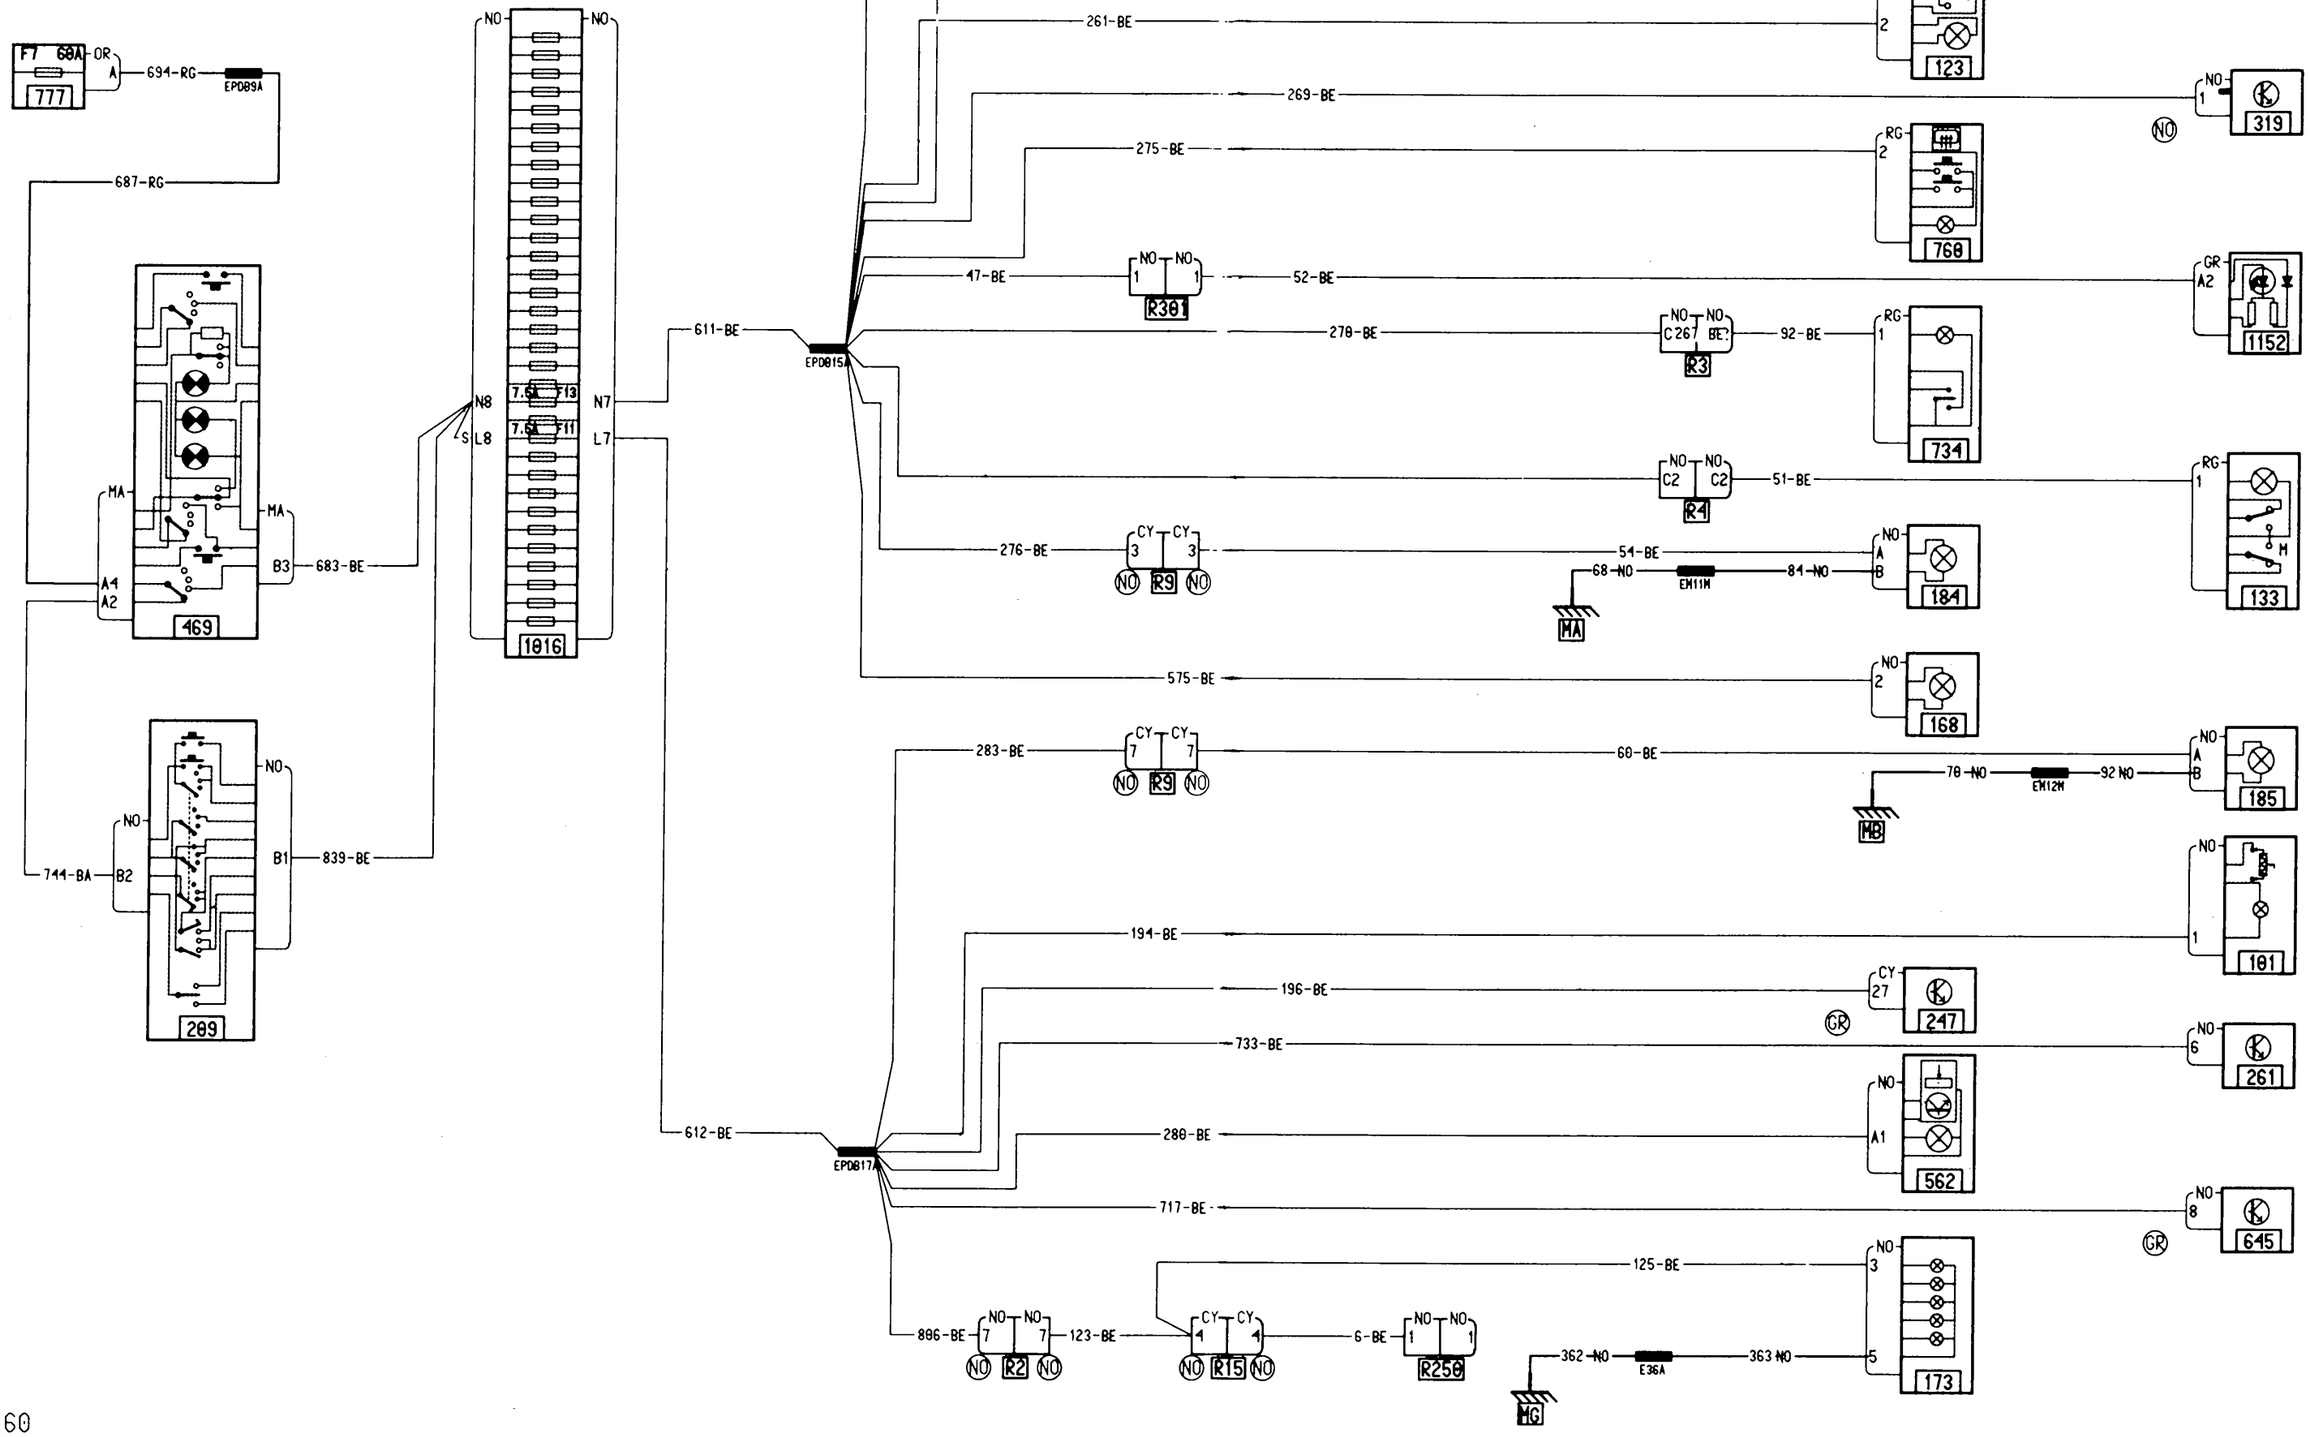

F7 60A
777
OR
A
694-RG
EPD89A
687-RG
MA
A1
A2
469
B3
683-BE
MA
NO
B2
744-BA
B1
839-BE
289
NO
NO
N8
S
L8
7.5A F13
7.5A F11
N7
L7
1016
611-BE
EPD815A
928-BE
NO 5 NO 5
NO R2 NO
127-BE
NO 3
2
172
68-NO
E37A
71-NO
MF
380-BE
NO 1
125
261-BE
VE
2
123
269-BE
NO 1
319
NO
275-BE
RG
2
760
47-BE
NO 1 NO 1
R301
52-BE
GR A2
1152
278-BE
NO C267 BE? NO
R3
92-BE
RG
1
734
NO C2 NO C2
R4
51-BE
RG
1
M
133
276-BE
CY 3 CY 3
NO R9 NO
54-BE
68-NO
EM11M
84-NO
NO
A
B
184
MA
575-BE
NO
2
168
283-BE
CY 7 CY 7
NO R9 NO
60-BE
70-NO
EM12M
92-NO
NO
A
B
185
MB
194-BE
NO
1
101
196-BE
CY
27
247
GR
733-BE
NO
6
261
612-BE
EPD817A
280-BE
NO
A1
562
717-BE
NO
8
645
GR
125-BE
NO 3
5
173
886-BE
NO 7 NO 7
NO R2 NO
123-BE
CY 1 CY 1
NO R15 NO
6-BE
NO 1 NO 1
R250
362-NO
E36A
363-NO
MG

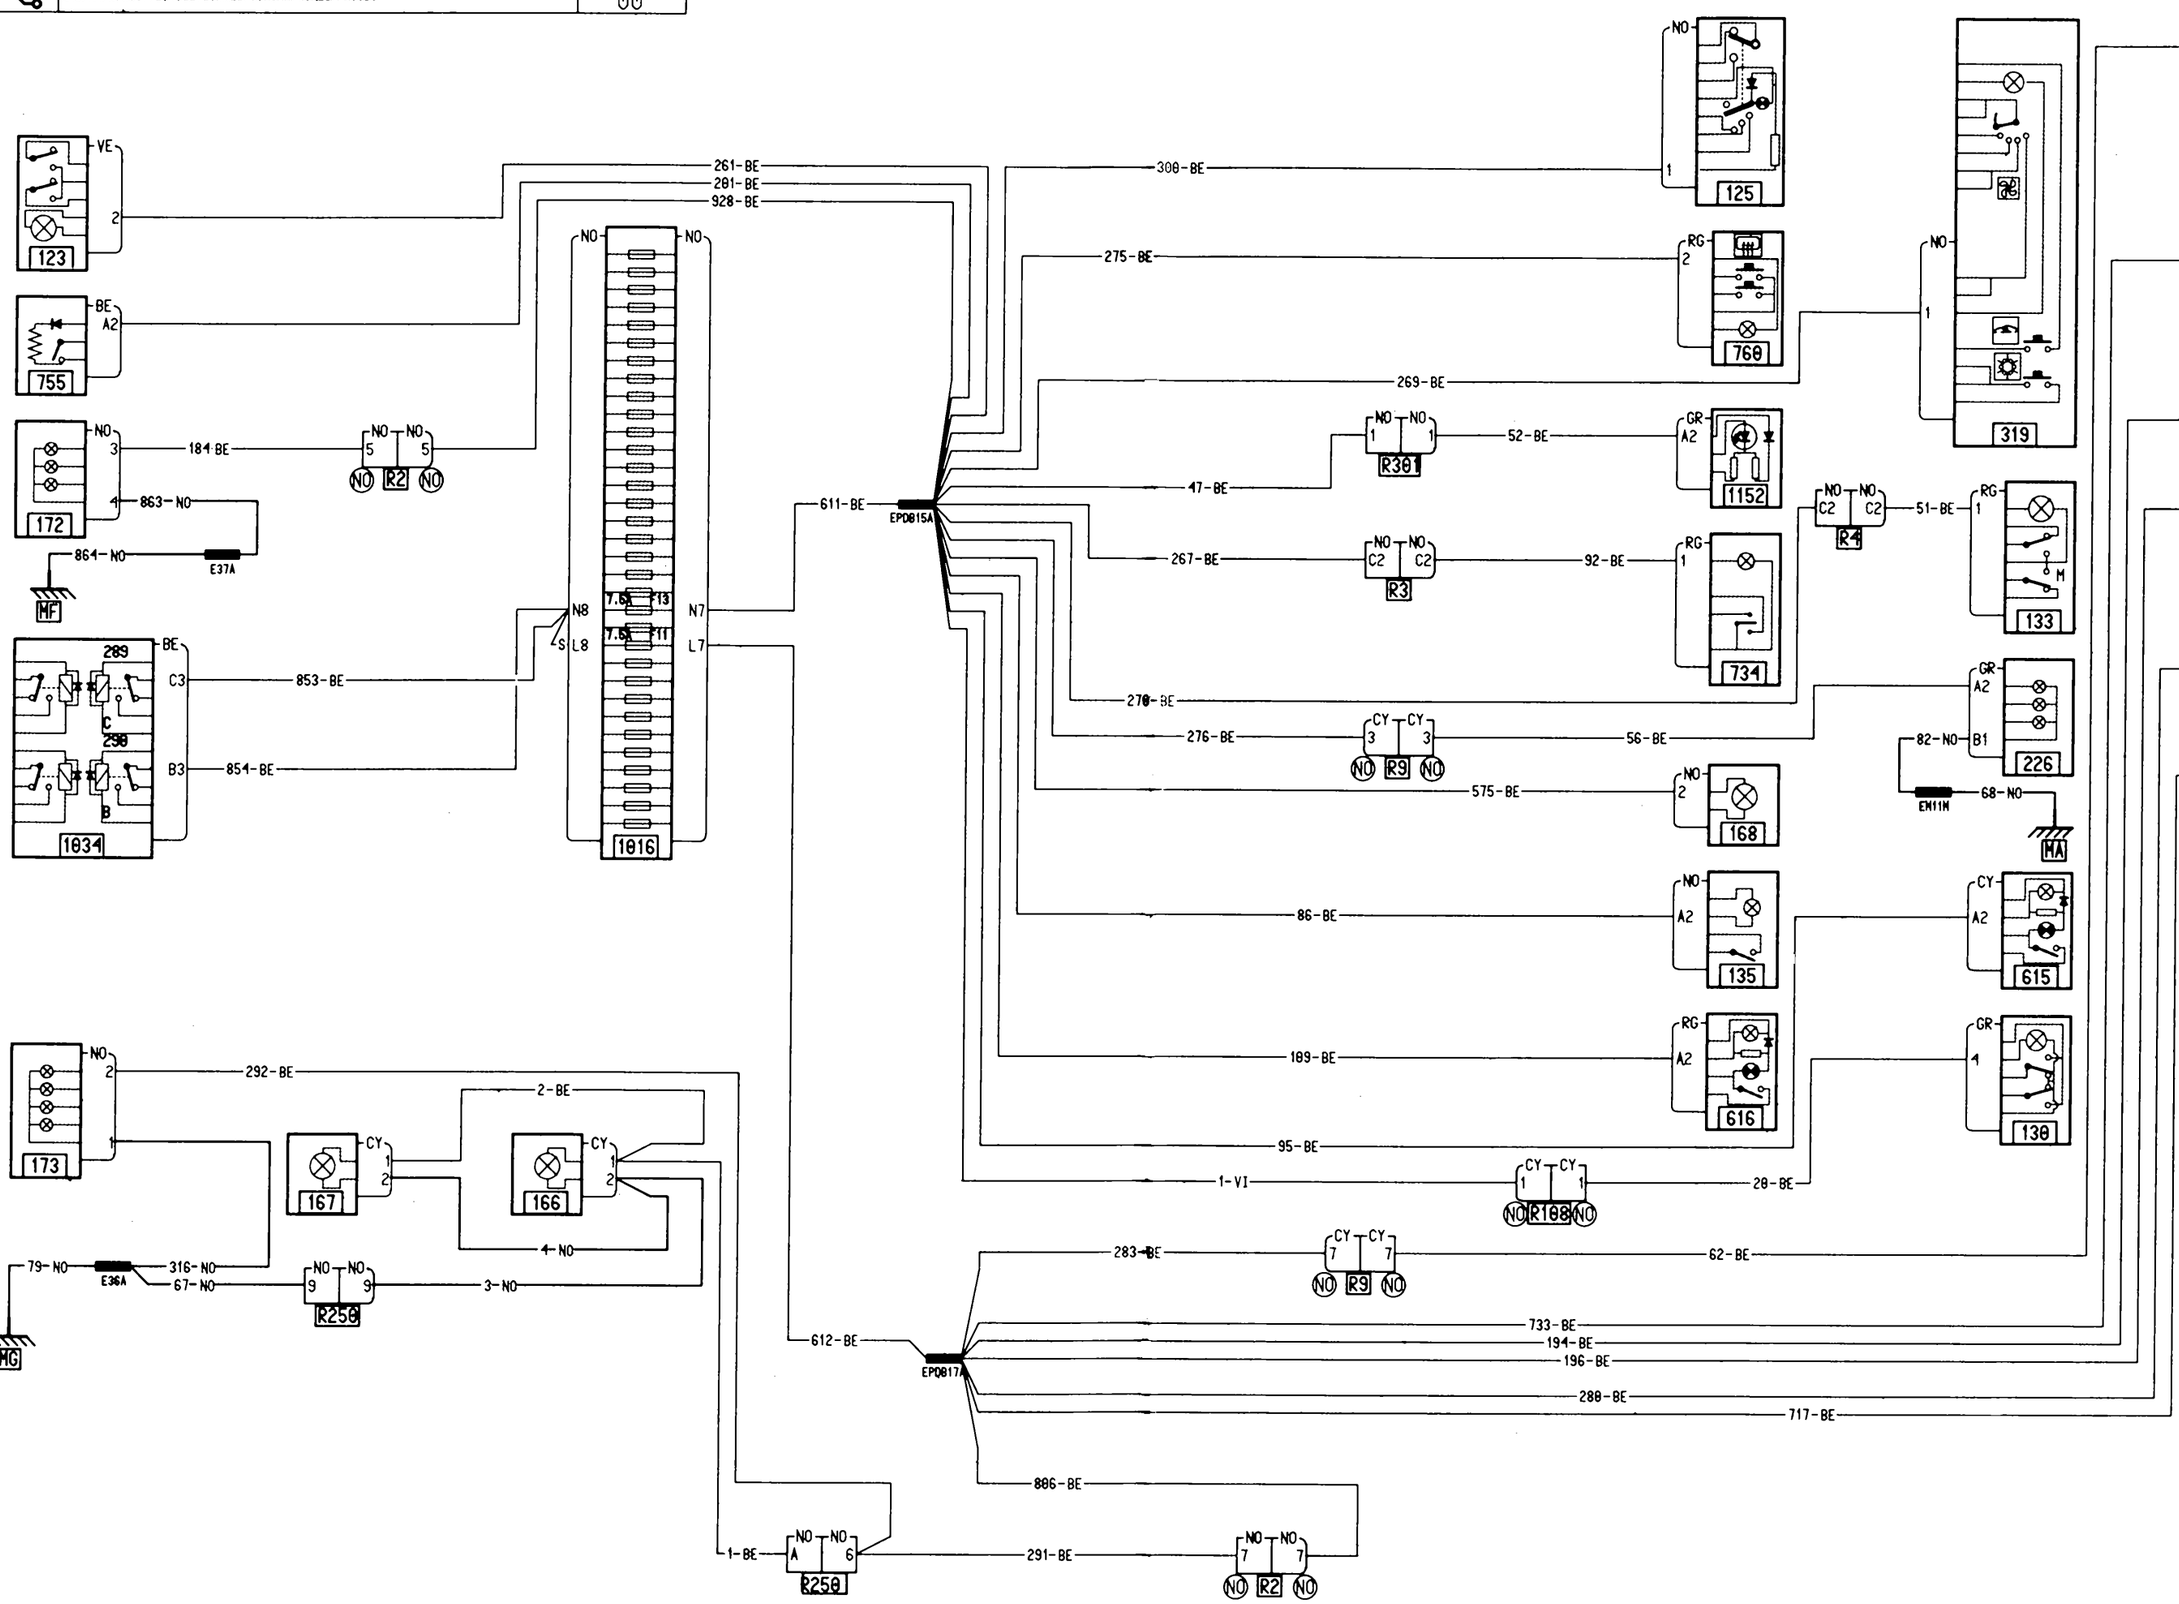

123
VE
2
261-BE
201-BE
928-BE
755
BE
A2
172
NO
3
184-BE
4
863-NO
864-NO
E37A
MF
R2
1034
289
290
C3
B3
853-BE
854-BE
1016
N8
S
L8
N7
L7
611-BE
EPD815A
308-BE
275-BE
269-BE
47-BE
267-BE
278-BE
276-BE
575-BE
86-BE
109-BE
95-BE
1-VI
283-BE
612-BE
EPD817A
886-BE
125
760
319
R301
52-BE
1152
R3
92-BE
734
R4
51-BE
133
R9
56-BE
168
135
616
615
R108
20-BE
130
173
292-BE
2-BE
167
166
4-NO
79-NO
E36A
316-NO
67-NO
R259
3-NO
MG
1-BE
291-BE
R2
733-BE
194-BE
196-BE
288-BE
717-BE
62-BE
GR
A2
98-NO
B1
227
EM12M
78-NO
MB
261
101
247
562
645
82-NO
226
EM11M
68-NO
MA

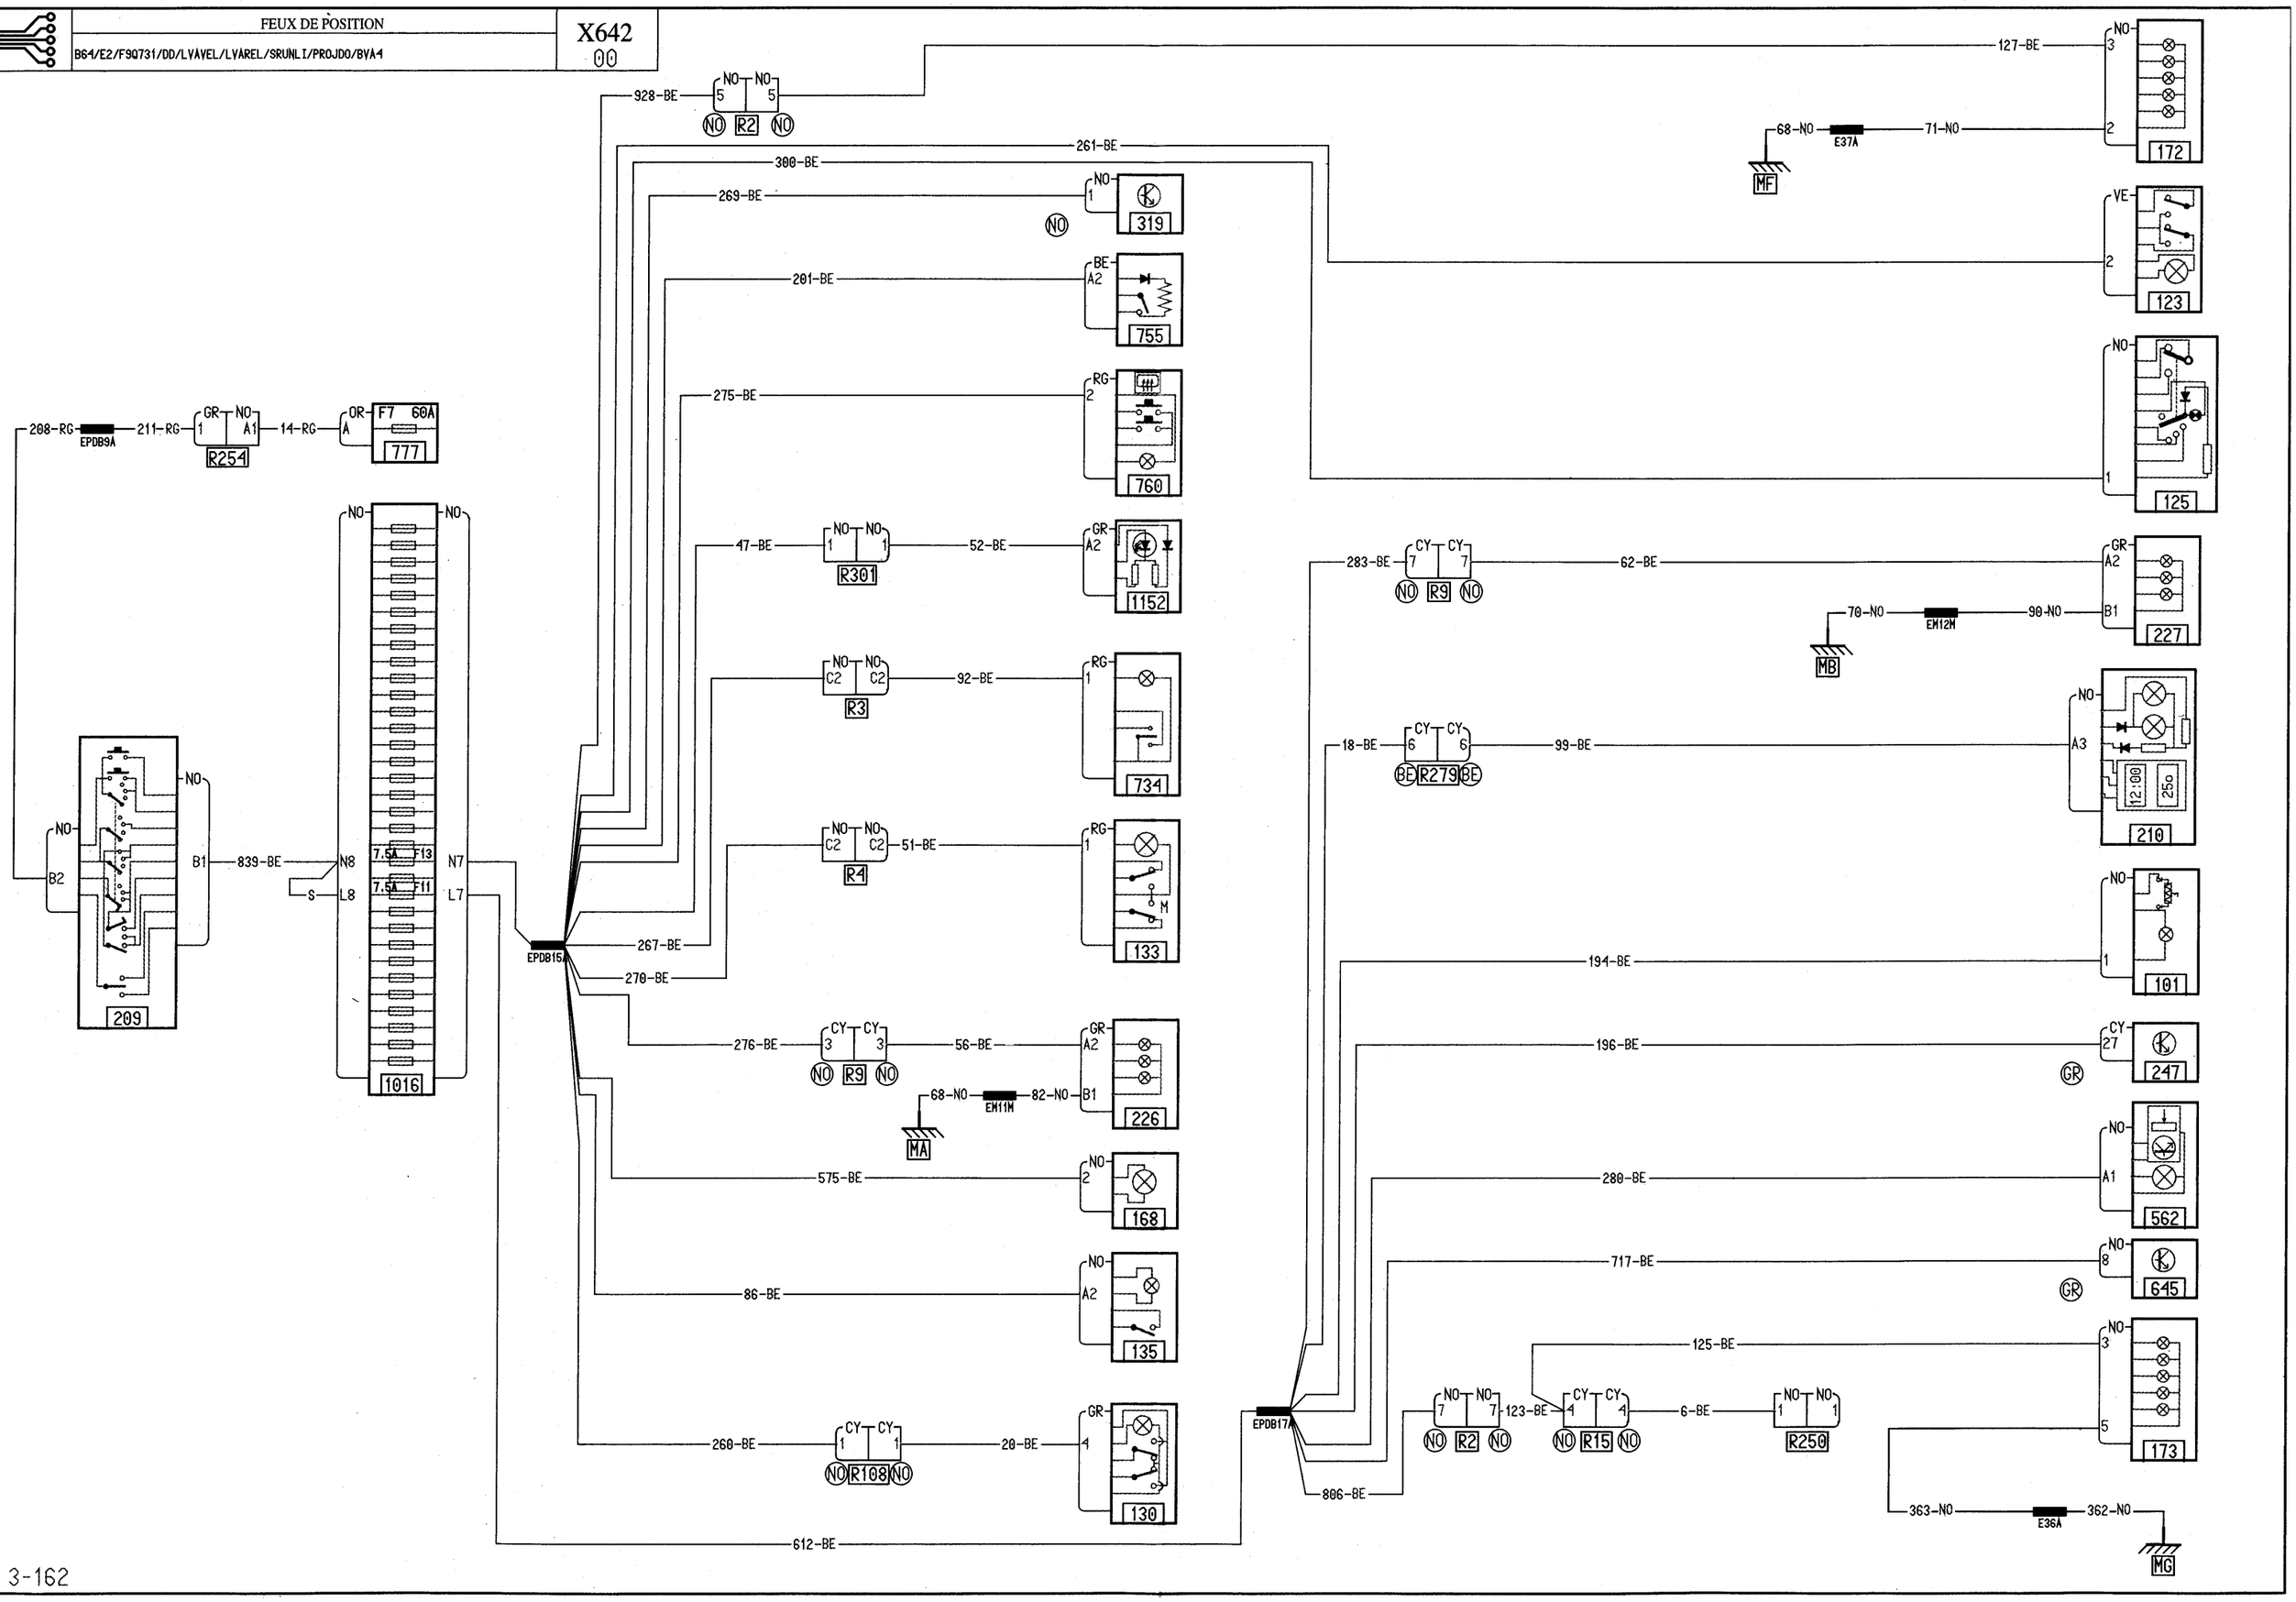
928-BE
NO 5 NO 5
NO R2 NO
127-BE
NO 3
68-NO E37A 71-NO
2
172
MF
261-BE
300-BE
269-BE
NO 1
319
NO
VE
2
123
201-BE
BE A2
755
NO
1
125
275-BE
RG 2
760
208-RG EPDB9A 211-RG
GR NO 1 A1
R254
14-RG
OR A
F7 60A
777
47-BE
NO NO 1 1
R301
52-BE
GR A2
1152
283-BE
CY CY 7 7
NO R9 NO
62-BE
GR A2
70-NO EM12M 90-NO
B1
227
MB
NO NO
NO
B2
B1
839-BE
209
N8
S L8
7.5A F13
7.5A F11
N7
L7
1016
NO C2 NO C2
R3
92-BE
RG 1
734
18-BE
CY CY 6 6
BE R279 BE
99-BE
NO
A3
12:00
25o
210
NO C2 NO C2
R4
51-BE
RG 1
M
133
EPDB15A
267-BE
270-BE
194-BE
NO
1
101
276-BE
CY CY 3 3
NO R9 NO
56-BE
GR A2
68-NO EM11M 82-NO B1
MA
226
196-BE
CY 27
GR
247
575-BE
NO 2
168
280-BE
NO A1
562
717-BE
NO 8
GR
645
86-BE
NO A2
135
125-BE
NO 3
5
173
260-BE
CY CY 1 1
NO R108 NO
20-BE
GR 4
130
EPDB17A
NO NO 7 7
NO R2 NO
123-BE
CY CY 4 4
NO R15 NO
6-BE
NO NO 1 1
R250
806-BE
612-BE
363-NO E36A 362-NO
MG

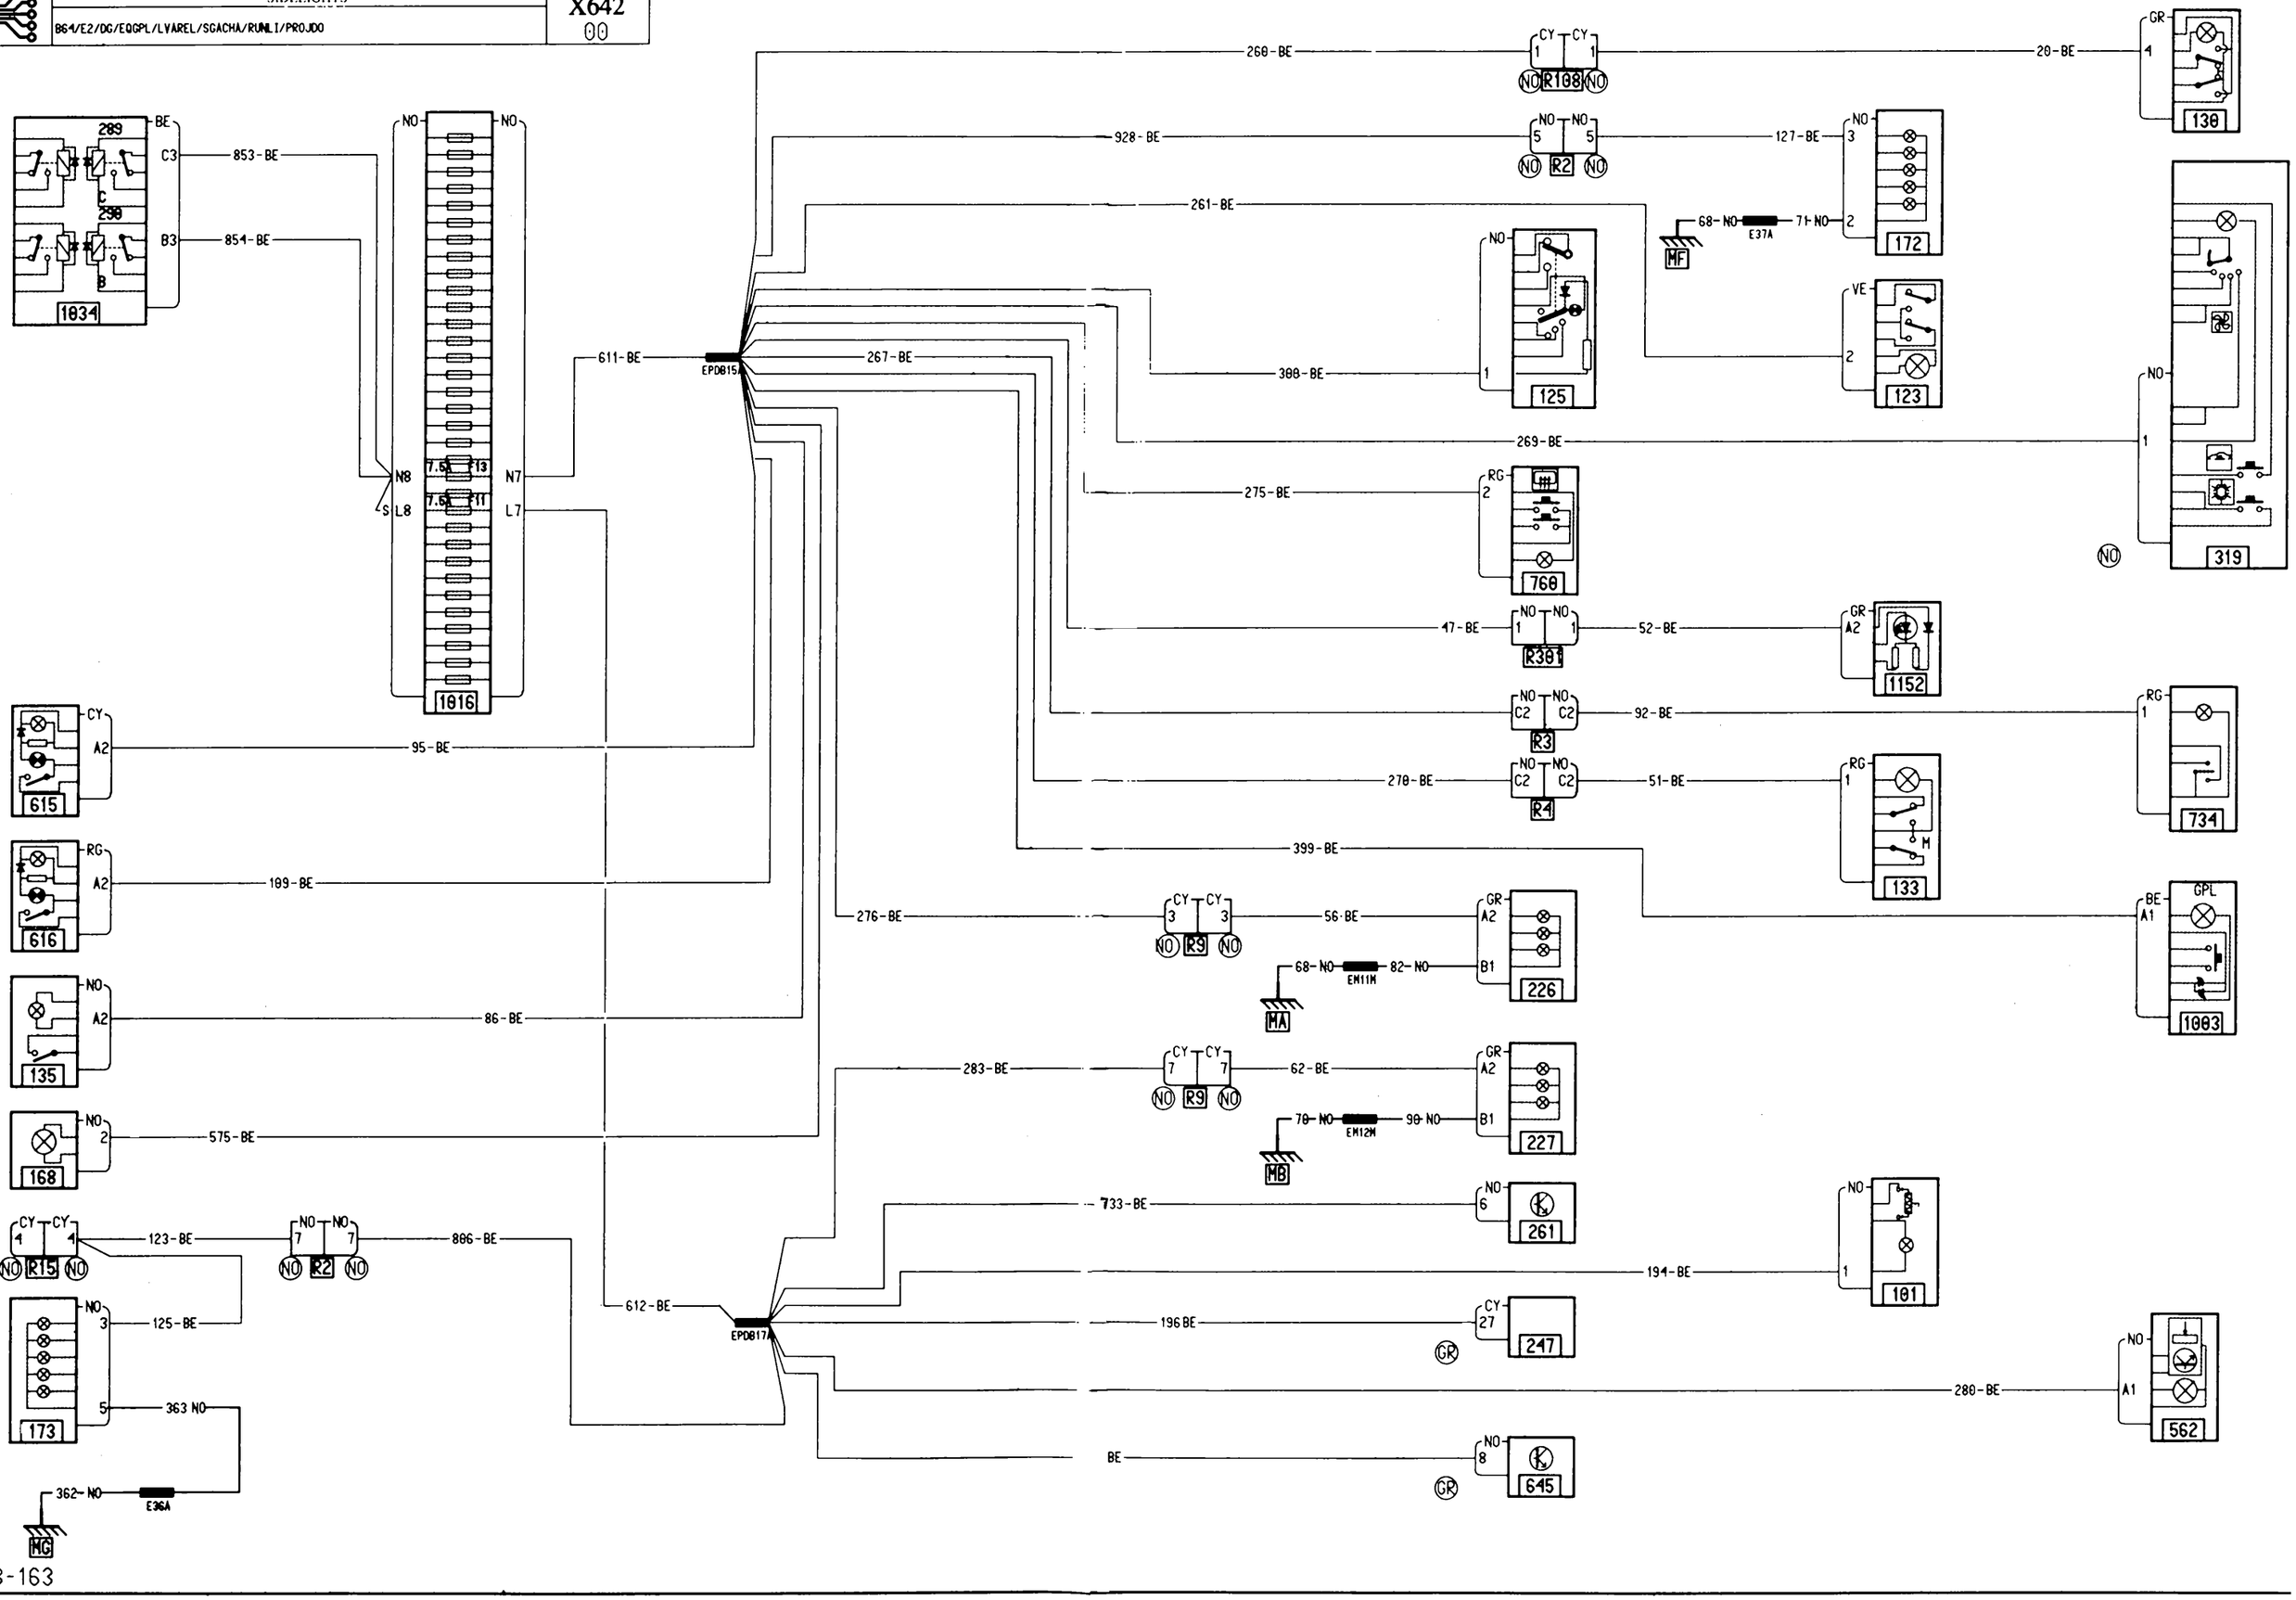
1034
289
290
BE
C3
B3
853-BE
854-BE
1016
NO
N8
L8
N7
L7
611-BE
EPD815A
260-BE
928-BE
261-BE
267-BE
308-BE
275-BE
47-BE
92-BE
270-BE
399-BE
276-BE
283-BE
733-BE
194-BE
196 BE
BE
612-BE
EPD817A
95-BE
199-BE
86-BE
575-BE
123-BE
806-BE
125-BE
363 NO
362-NO
E36A
NC
56-BE
68-NO
82-NO
EM11M
MA
62-BE
78-NO
90-NO
EM12M
MB
127-BE
68-NO
71-NO
E37A
MF
269-BE
52-BE
280-BE
R108
R2
R3
R4
R9
R15
R301
615
616
135
168
173
125
123
760
319
1152
734
133
226
227
261
101
247
562
645
172
1003
130
GR
RG
VE
GPL
CY
A1
A2
B1
C2
GR
(NO)
(GR)

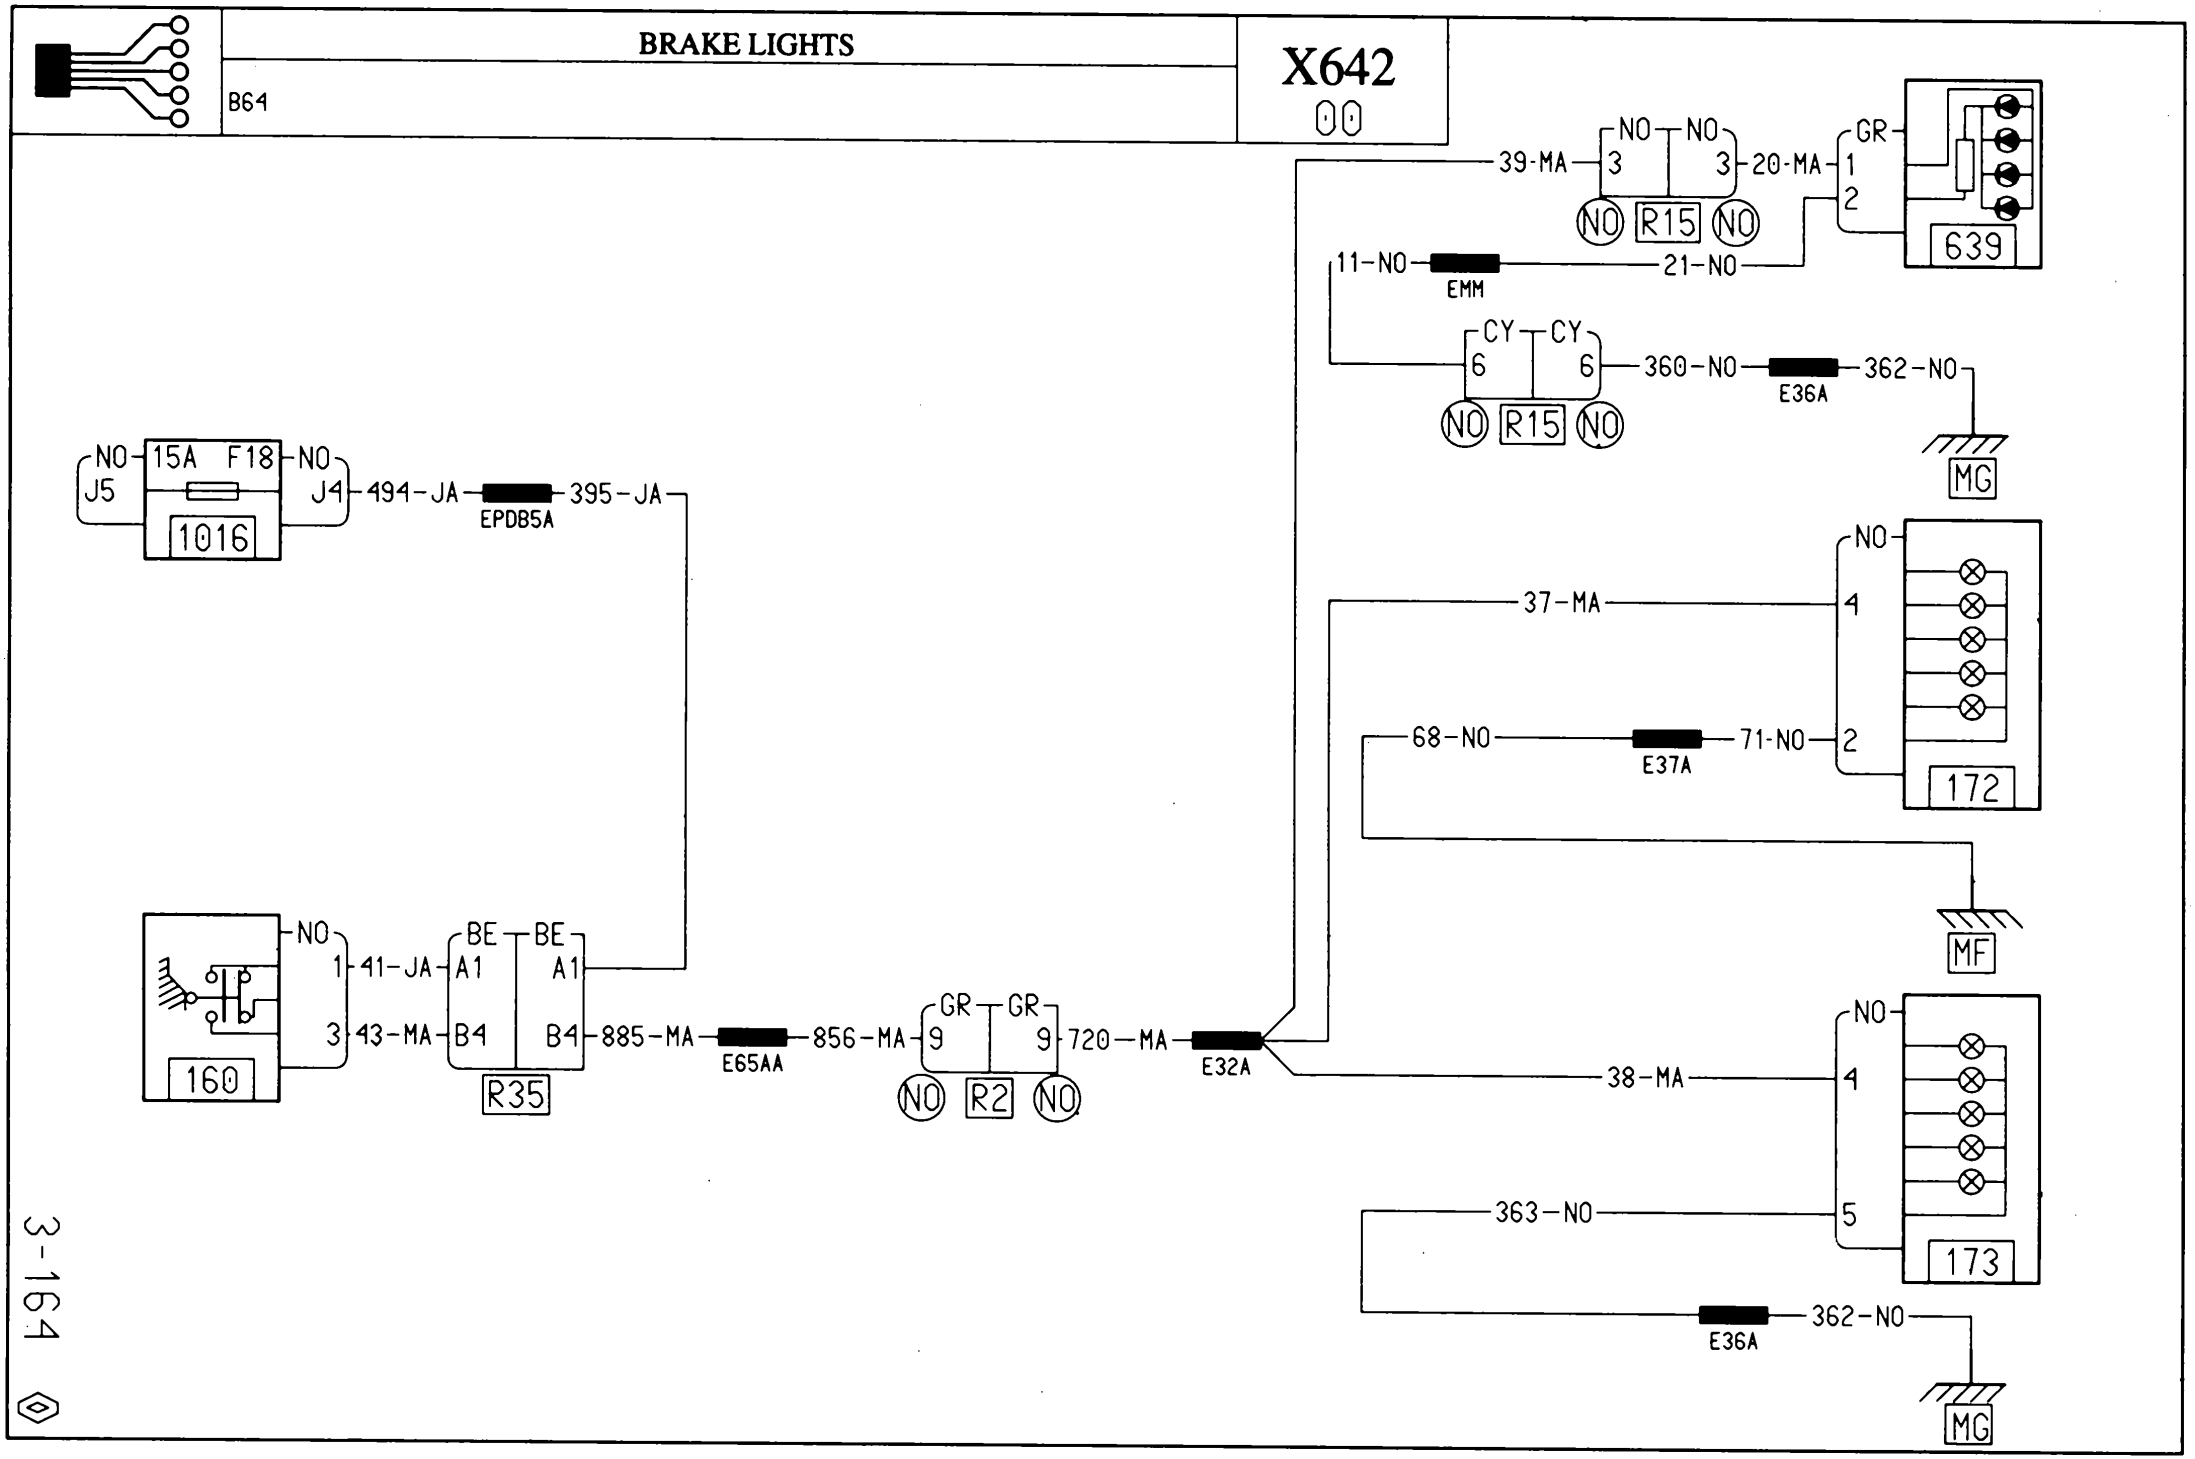

BRAKE LIGHTS
B64
X642
00
NO
15A
F18
J5
J4
1016
494-JA
EPDB5A
395-JA
39-MA
NO
3
NO
3
20-MA
GR
1
2
639
NO
R15
NO
11-NO
EMM
21-NO
CY
CY
6
6
360-NO
E36A
362-NO
MG
37-MA
4
68-NO
E37A
71-NO
2
172
MF
160
1
41-JA
3
43-MA
BE
A1
B4
BE
A1
B4
R35
885-MA
E65AA
856-MA
GR
9
GR
9
NO
R2
NO
720-MA
E32A
38-MA
4
363-NO
5
173
E36A
362-NO
MG

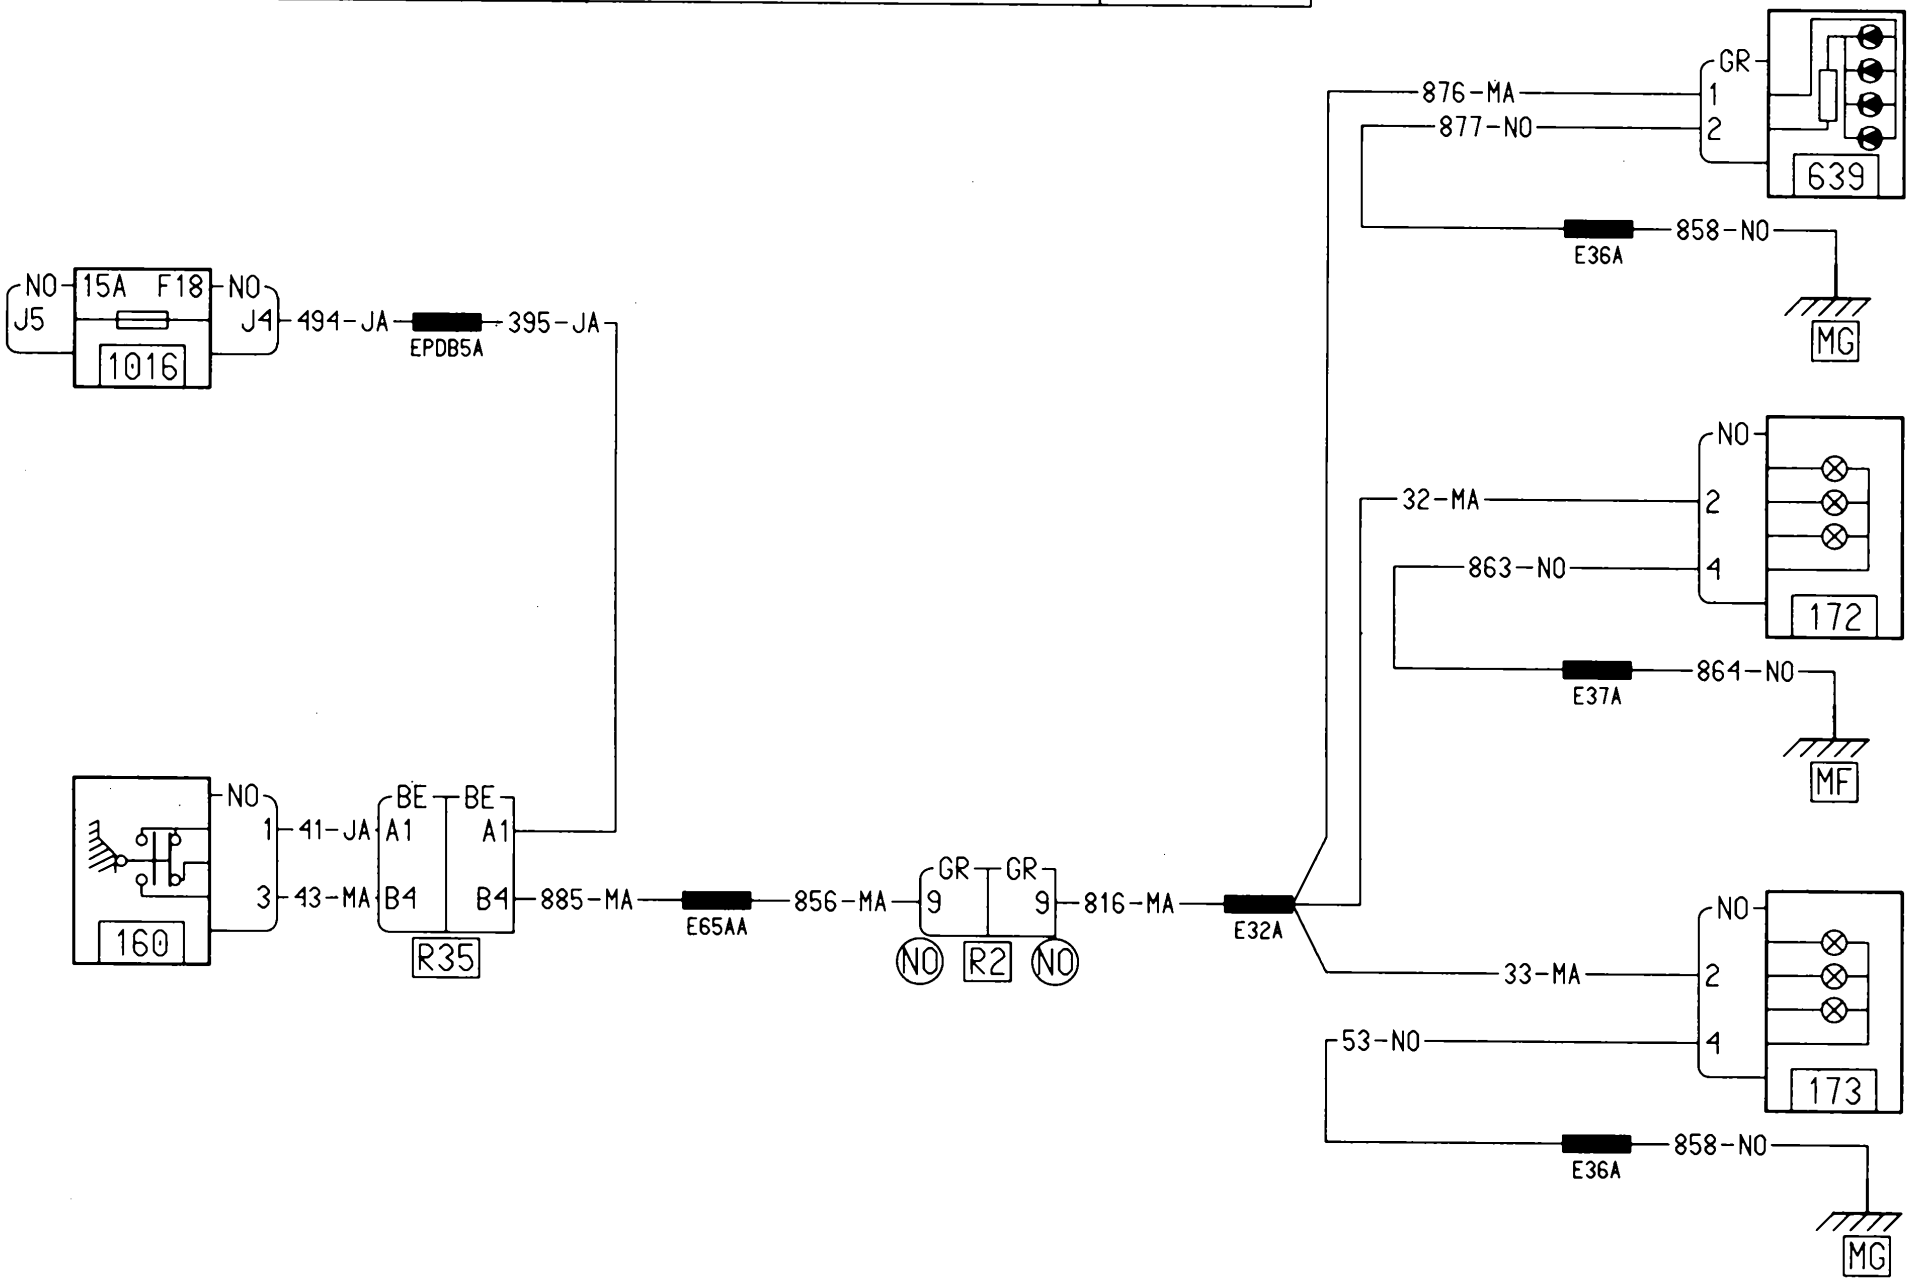
NO
15A F18
NO
J5
J4
1016
494-JA
EPDB5A
395-JA
876-MA
877-NO
GR
1
2
639
E36A
858-NO
MG
32-MA
863-NO
NO
2
4
172
E37A
864-NO
MF
160
NO
1
3
41-JA
43-MA
BE
BE
A1
A1
B4
B4
R35
885-MA
E65AA
856-MA
GR
GR
9
9
NO
R2
NO
816-MA
E32A
33-MA
53-NO
173
858-NO
MG

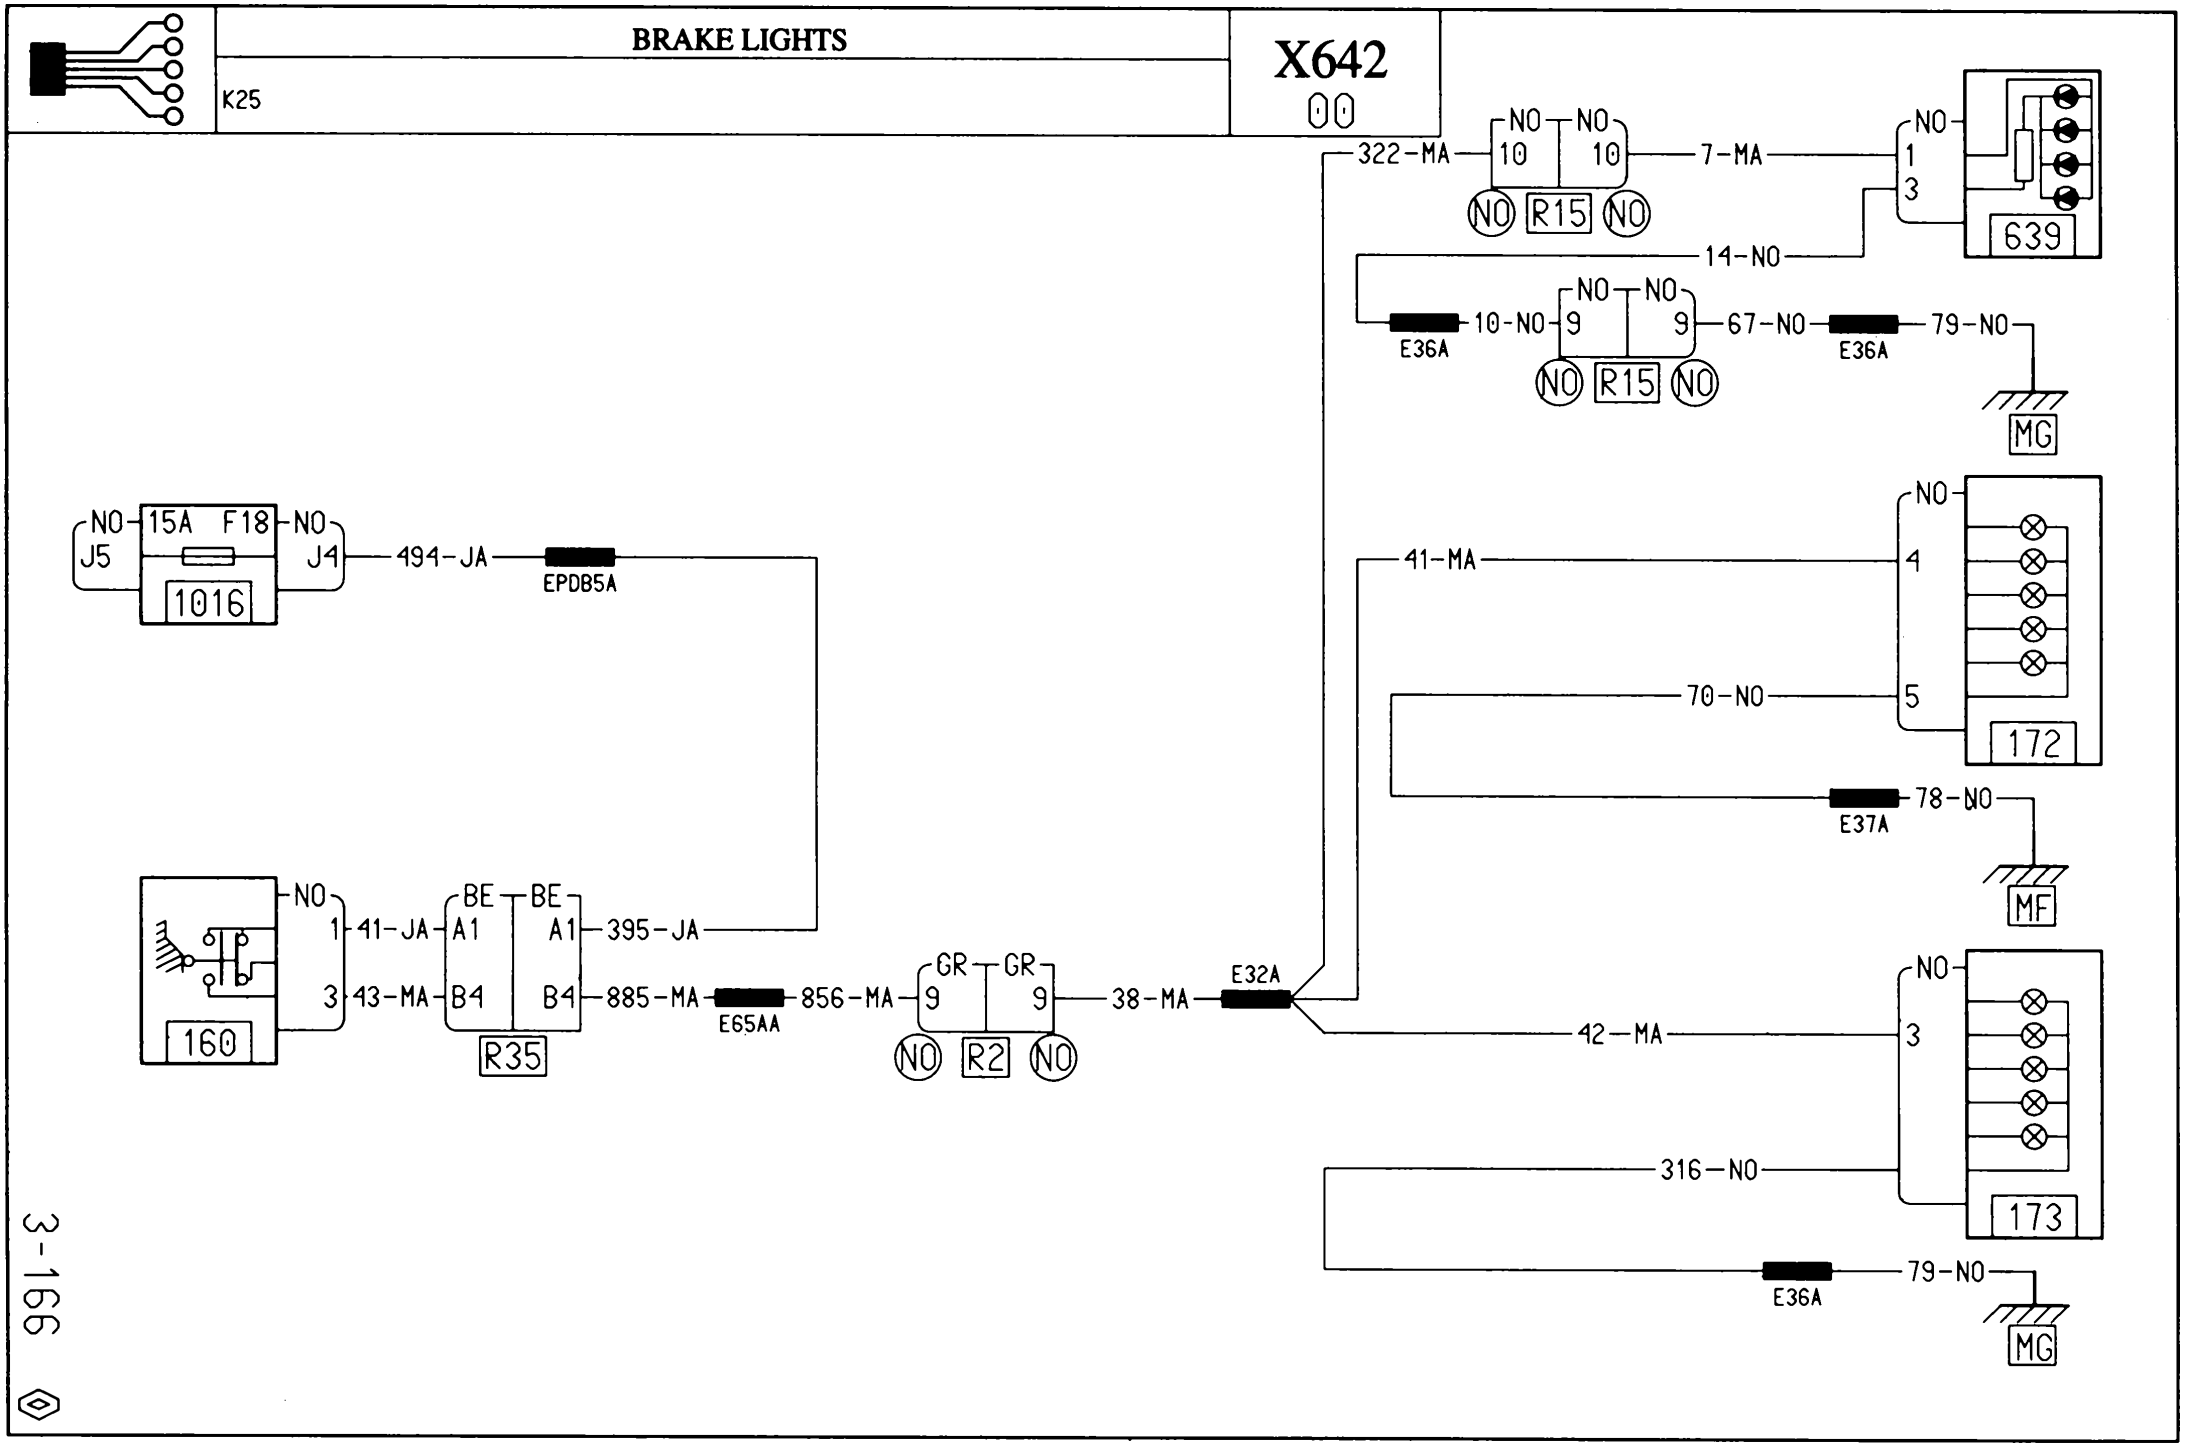
BRAKE LIGHTS
K25
X642
00
322-MA
NO 10 NO 10
7-MA
NO R15 NO
NO 1 3
639
14-NO
NO NO
E36A 10-NO 9 9 67-NO E36A 79-NO
NO R15 NO
MG
NO J5 15A F18 NO J4
1016
494-JA
EPDB5A
41-MA
NO 4
70-NO
5
172
E37A 78-NO
MF
160
NO 1 41-JA 3 43-MA
BE A1 BE A1
B4 B4
R35
885-MA
E65AA
856-MA
GR 9 GR 9
NO R2 NO
38-MA
E32A
42-MA
NO 3
316-NO
173
E36A 79-NO
MG


BRAKE LIGHTS


X642
00

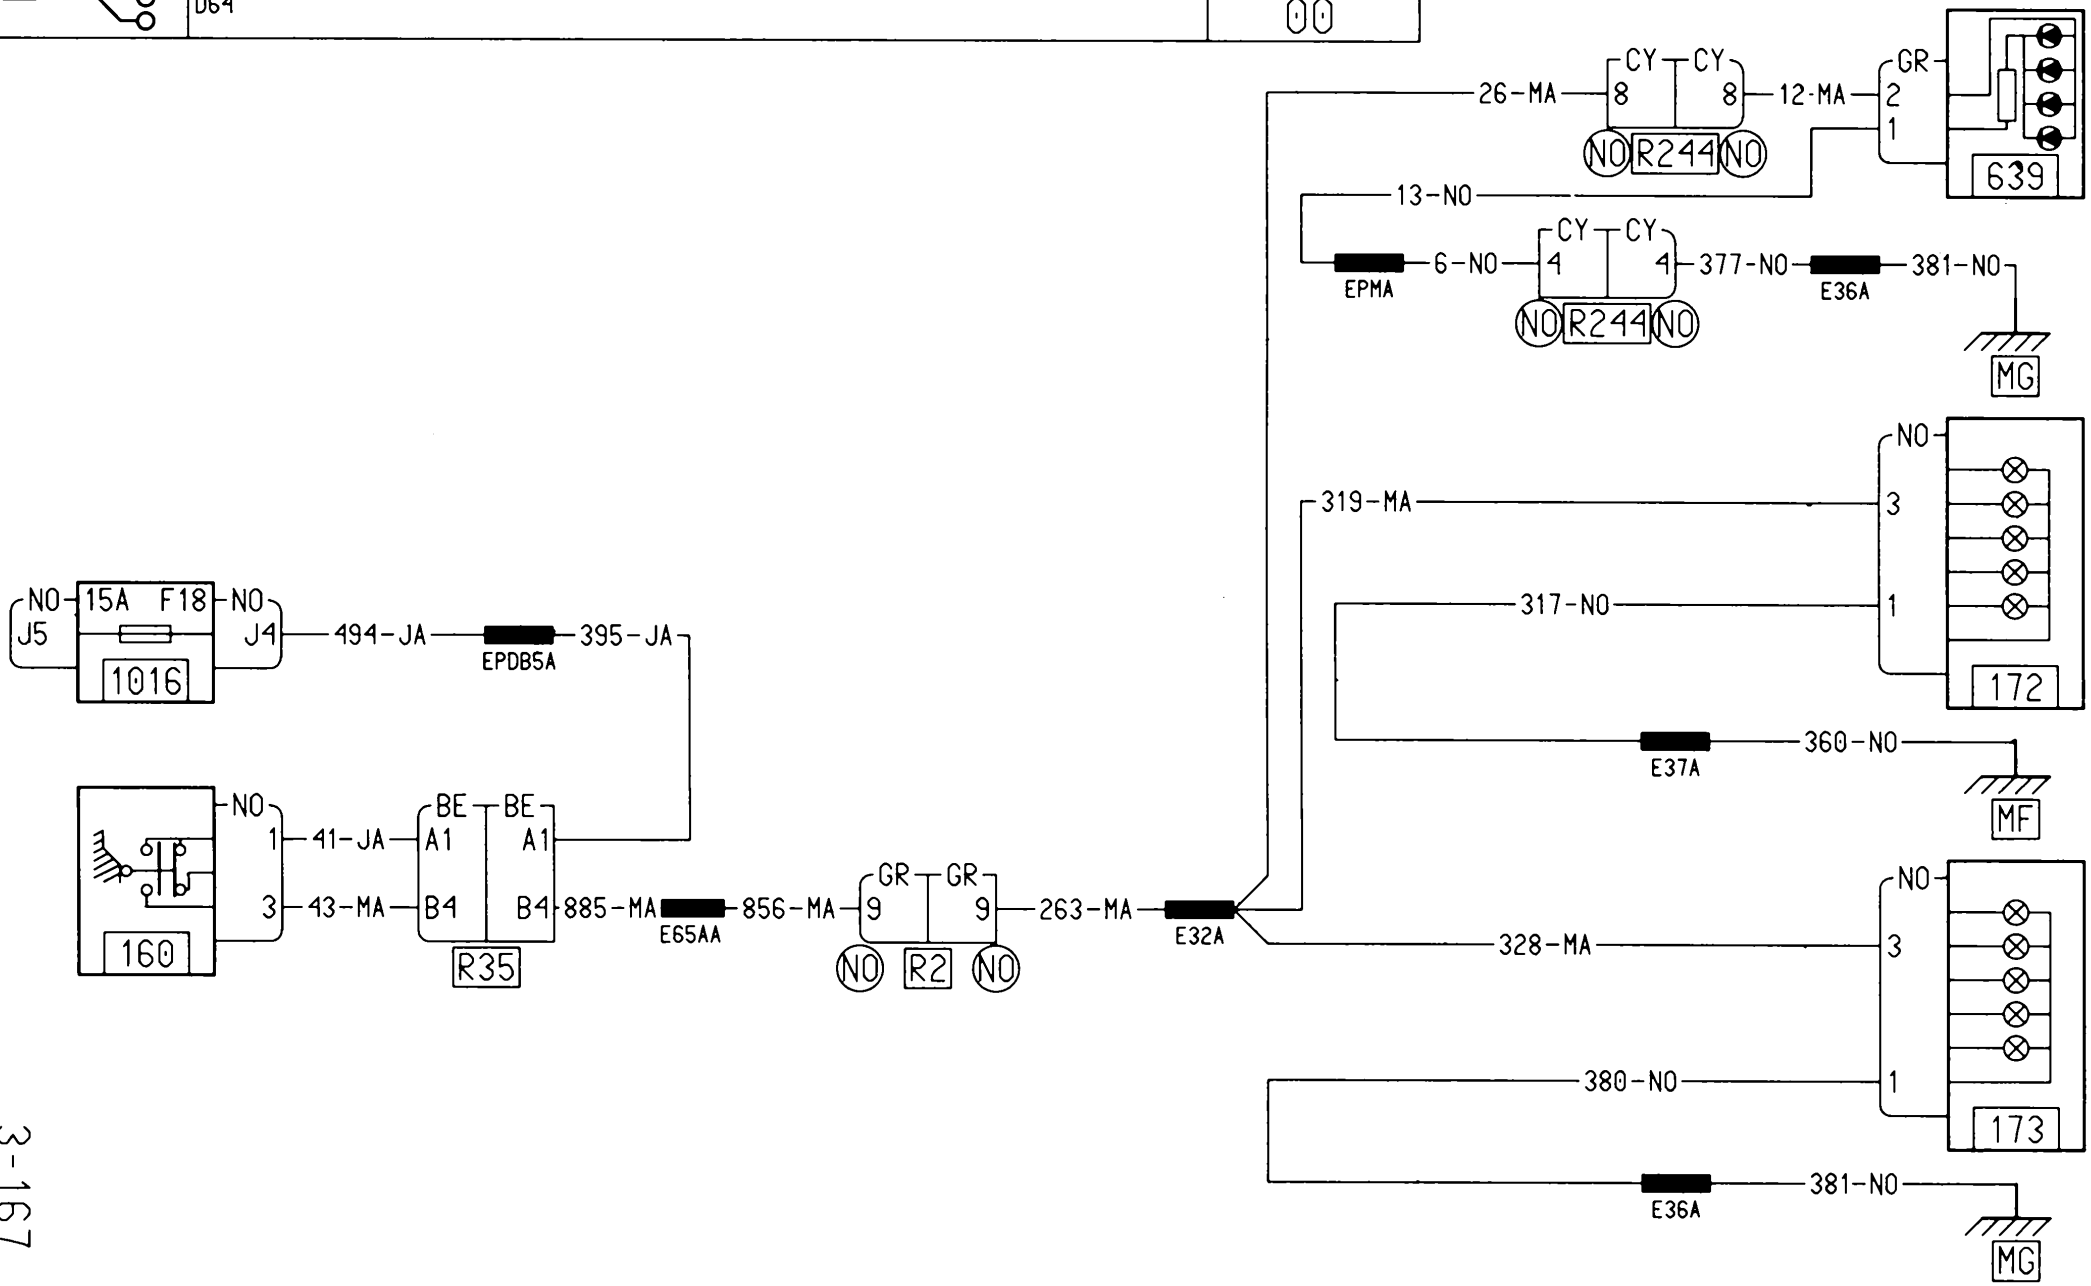



BRAKE LIGHTS


X642
00

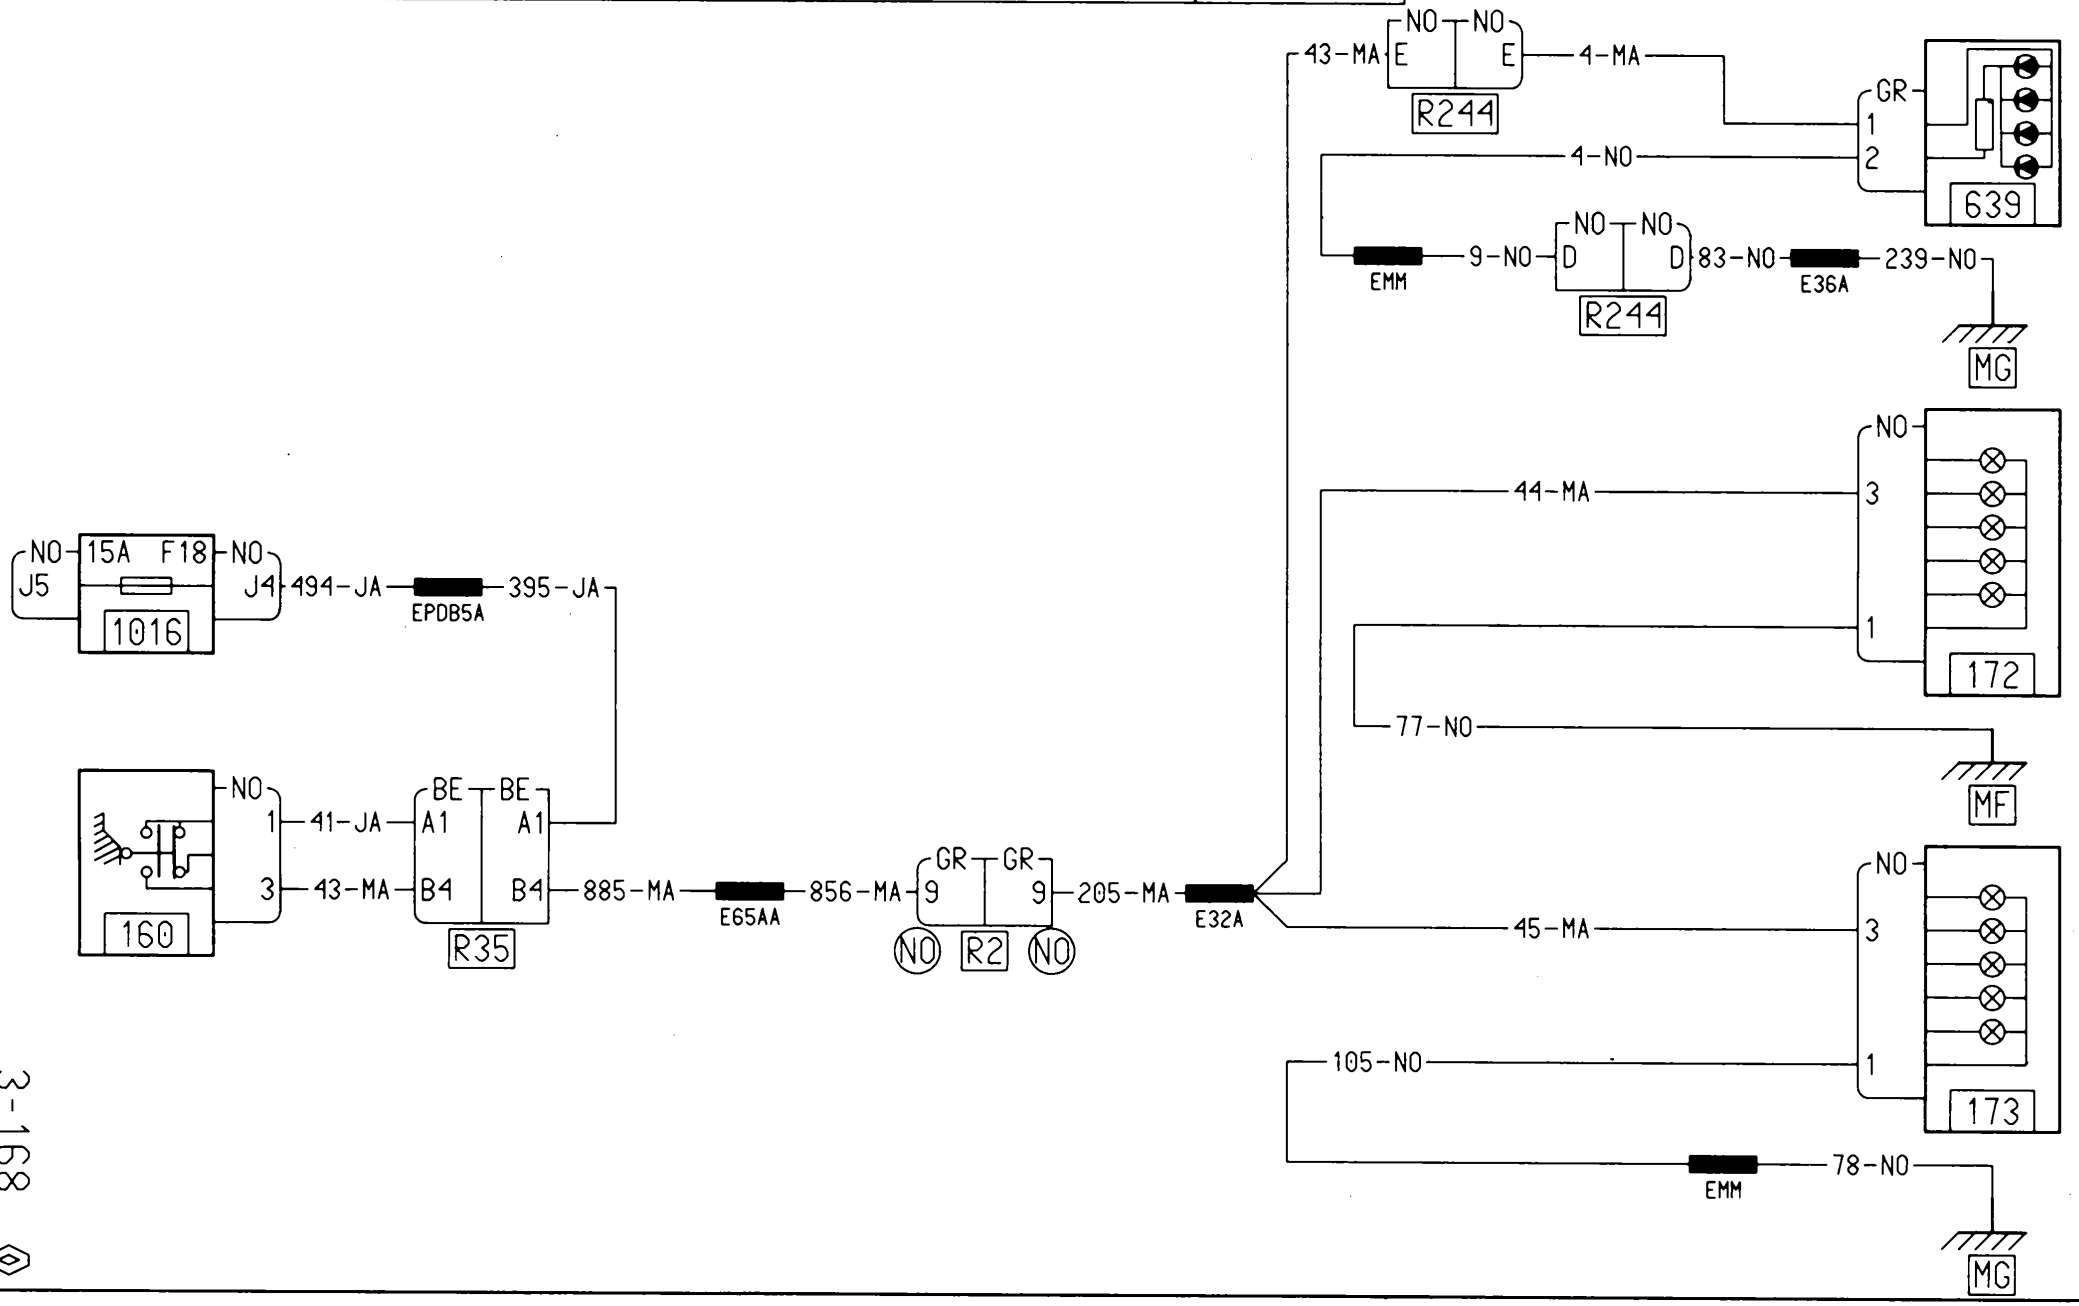

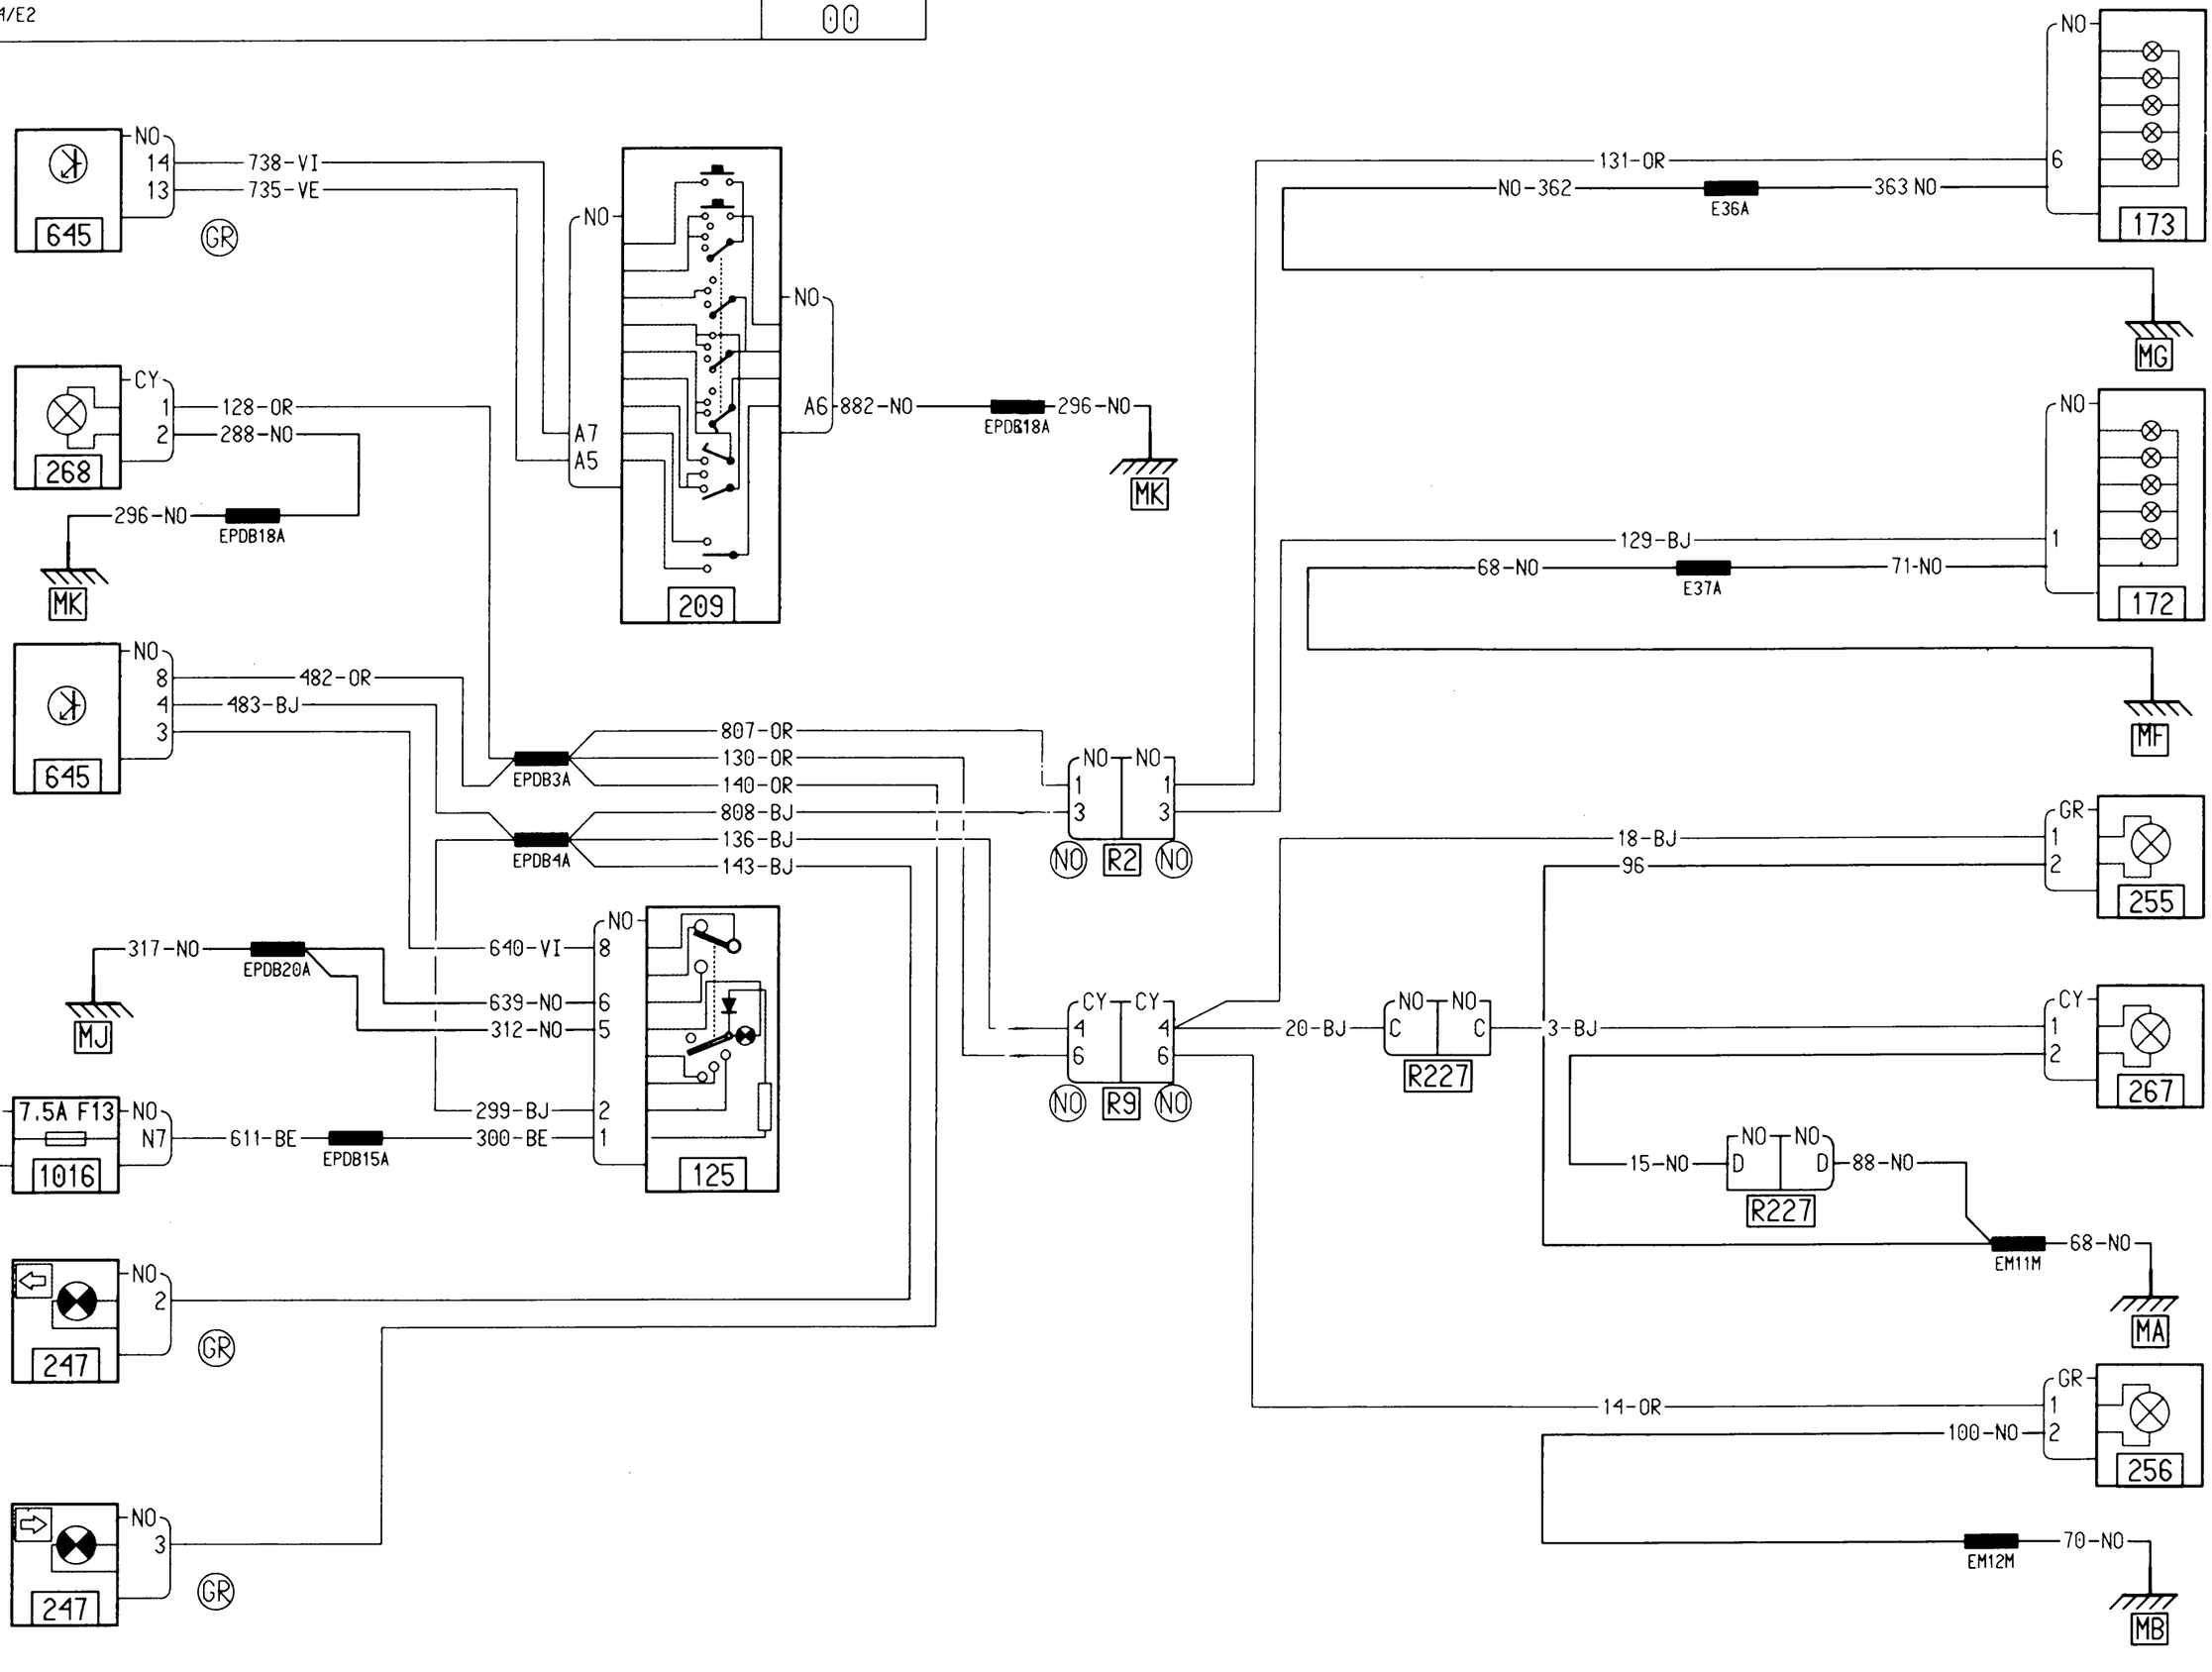
645
NO
14
13
738-VI
735-VE
GR
268
CY
1
2
128-OR
288-NO
296-NO
EPDB18A
MK
209
A7
A5
A6
882-NO
296-NO
EPDB18A
MK
645
NO
8
4
3
482-OR
483-BJ
EPDB3A
EPDB4A
807-OR
130-OR
140-OR
808-BJ
136-BJ
143-BJ
NO
1
3
NO
R2
NO
NO
1
3
317-NO
EPDB20A
MJ
640-VI
639-NO
312-NO
299-BJ
611-BE
300-BE
EPDB15A
NO
8
6
5
2
1
125
NO
N8
7.5A F13
NO
N7
1016
247
NO
2
GR
247
NO
3
GR
CY
CY
4
6
NO
R9
NO
20-BJ
NO
C
NO
C
R227
131-OR
NO-362
E36A
363 NO
NO
6
173
MG
129-BJ
68-NO
E37A
71-NO
NO
1
172
MF
18-BJ
96
GR
1
2
255
3-BJ
CY
1
2
267
15-NO
NO
D
NO
D
R227
88-NO
EM11M
68-NO
MA
14-OR
100-NO
GR
1
2
256
EM12M
70-NO
MB

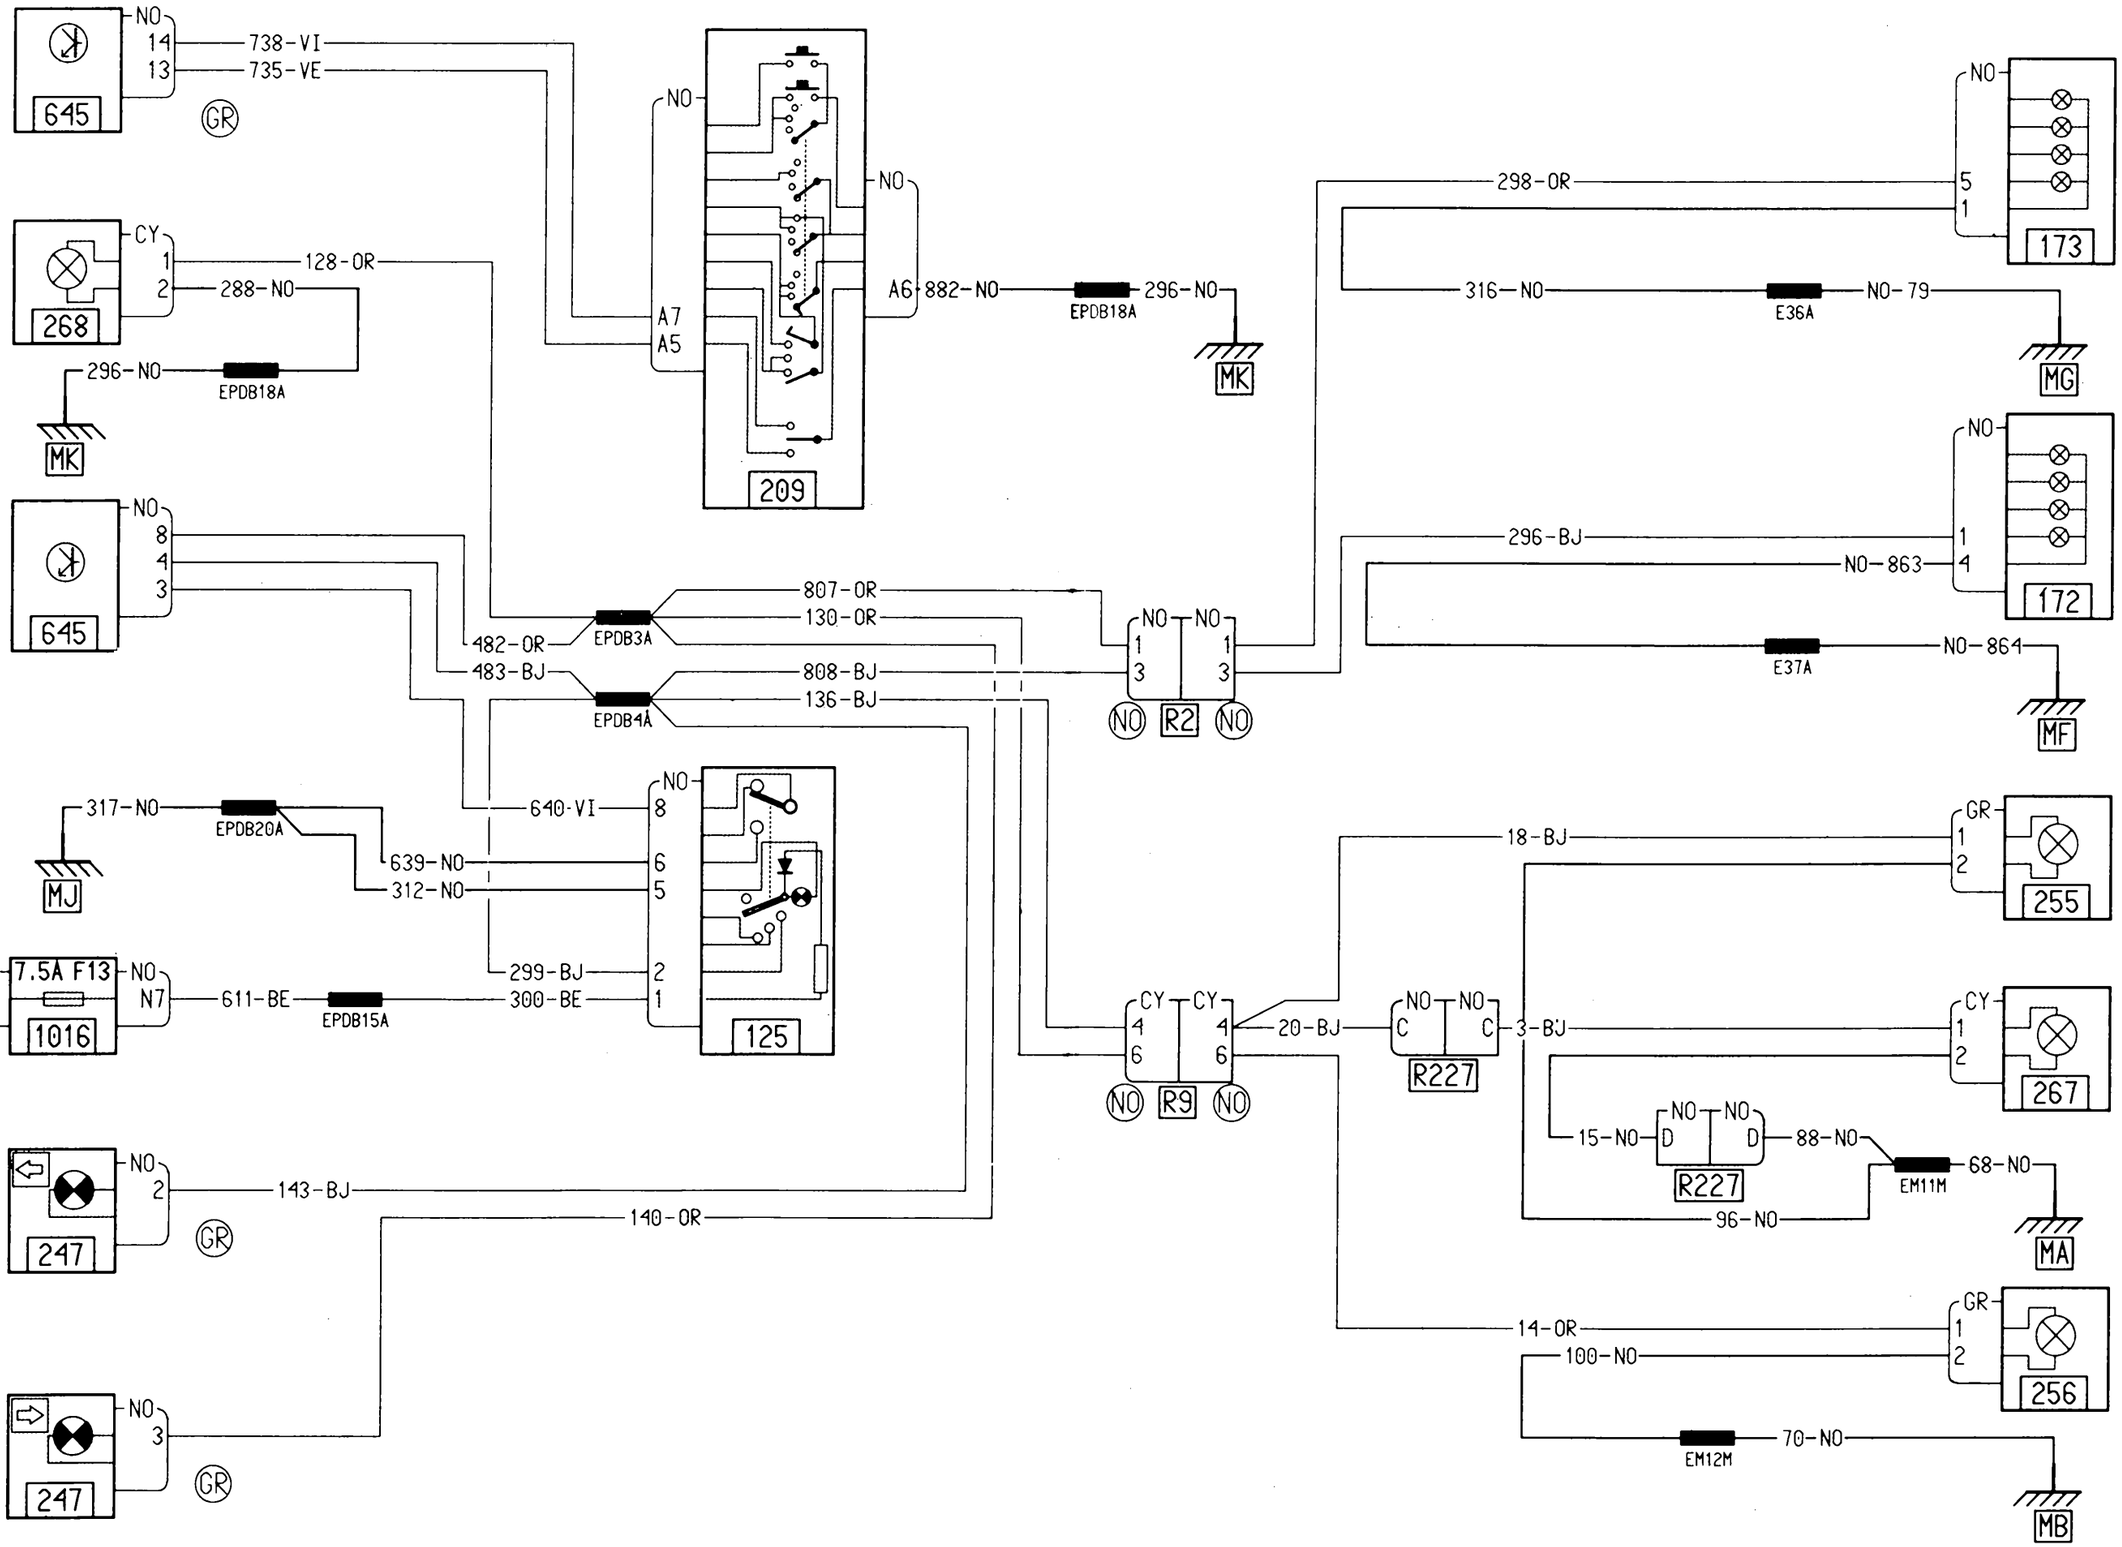
645
NO
14
13
738-VI
735-VE
GR
268
CY
1
2
128-OR
288-NO
296-NO
EPDB18A
MK
209
NO
A7
A5
A6
882-NO
EPDB18A
296-NO
MK
173
298-OR
316-NO
E36A
NO-79
MG
172
296-BJ
NO-863
E37A
NO-864
MF
645
8
4
3
482-OR
483-BJ
EPDB3A
EPDB4A
807-OR
130-OR
808-BJ
136-BJ
NO
1
3
R2
317-NO
EPDB20A
MJ
640-VI
639-NO
312-NO
299-BJ
300-BE
8
6
5
2
1
125
7.5A F13
N8
N7
1016
611-BE
EPDB15A
247
143-BJ
140-OR
GR
CY
4
6
R9
20-BJ
R227
C
D
18-BJ
3-BJ
15-NO
88-NO
68-NO
96-NO
EM11M
255
267
256
14-OR
100-NO
70-NO
EM12M
MA
MB

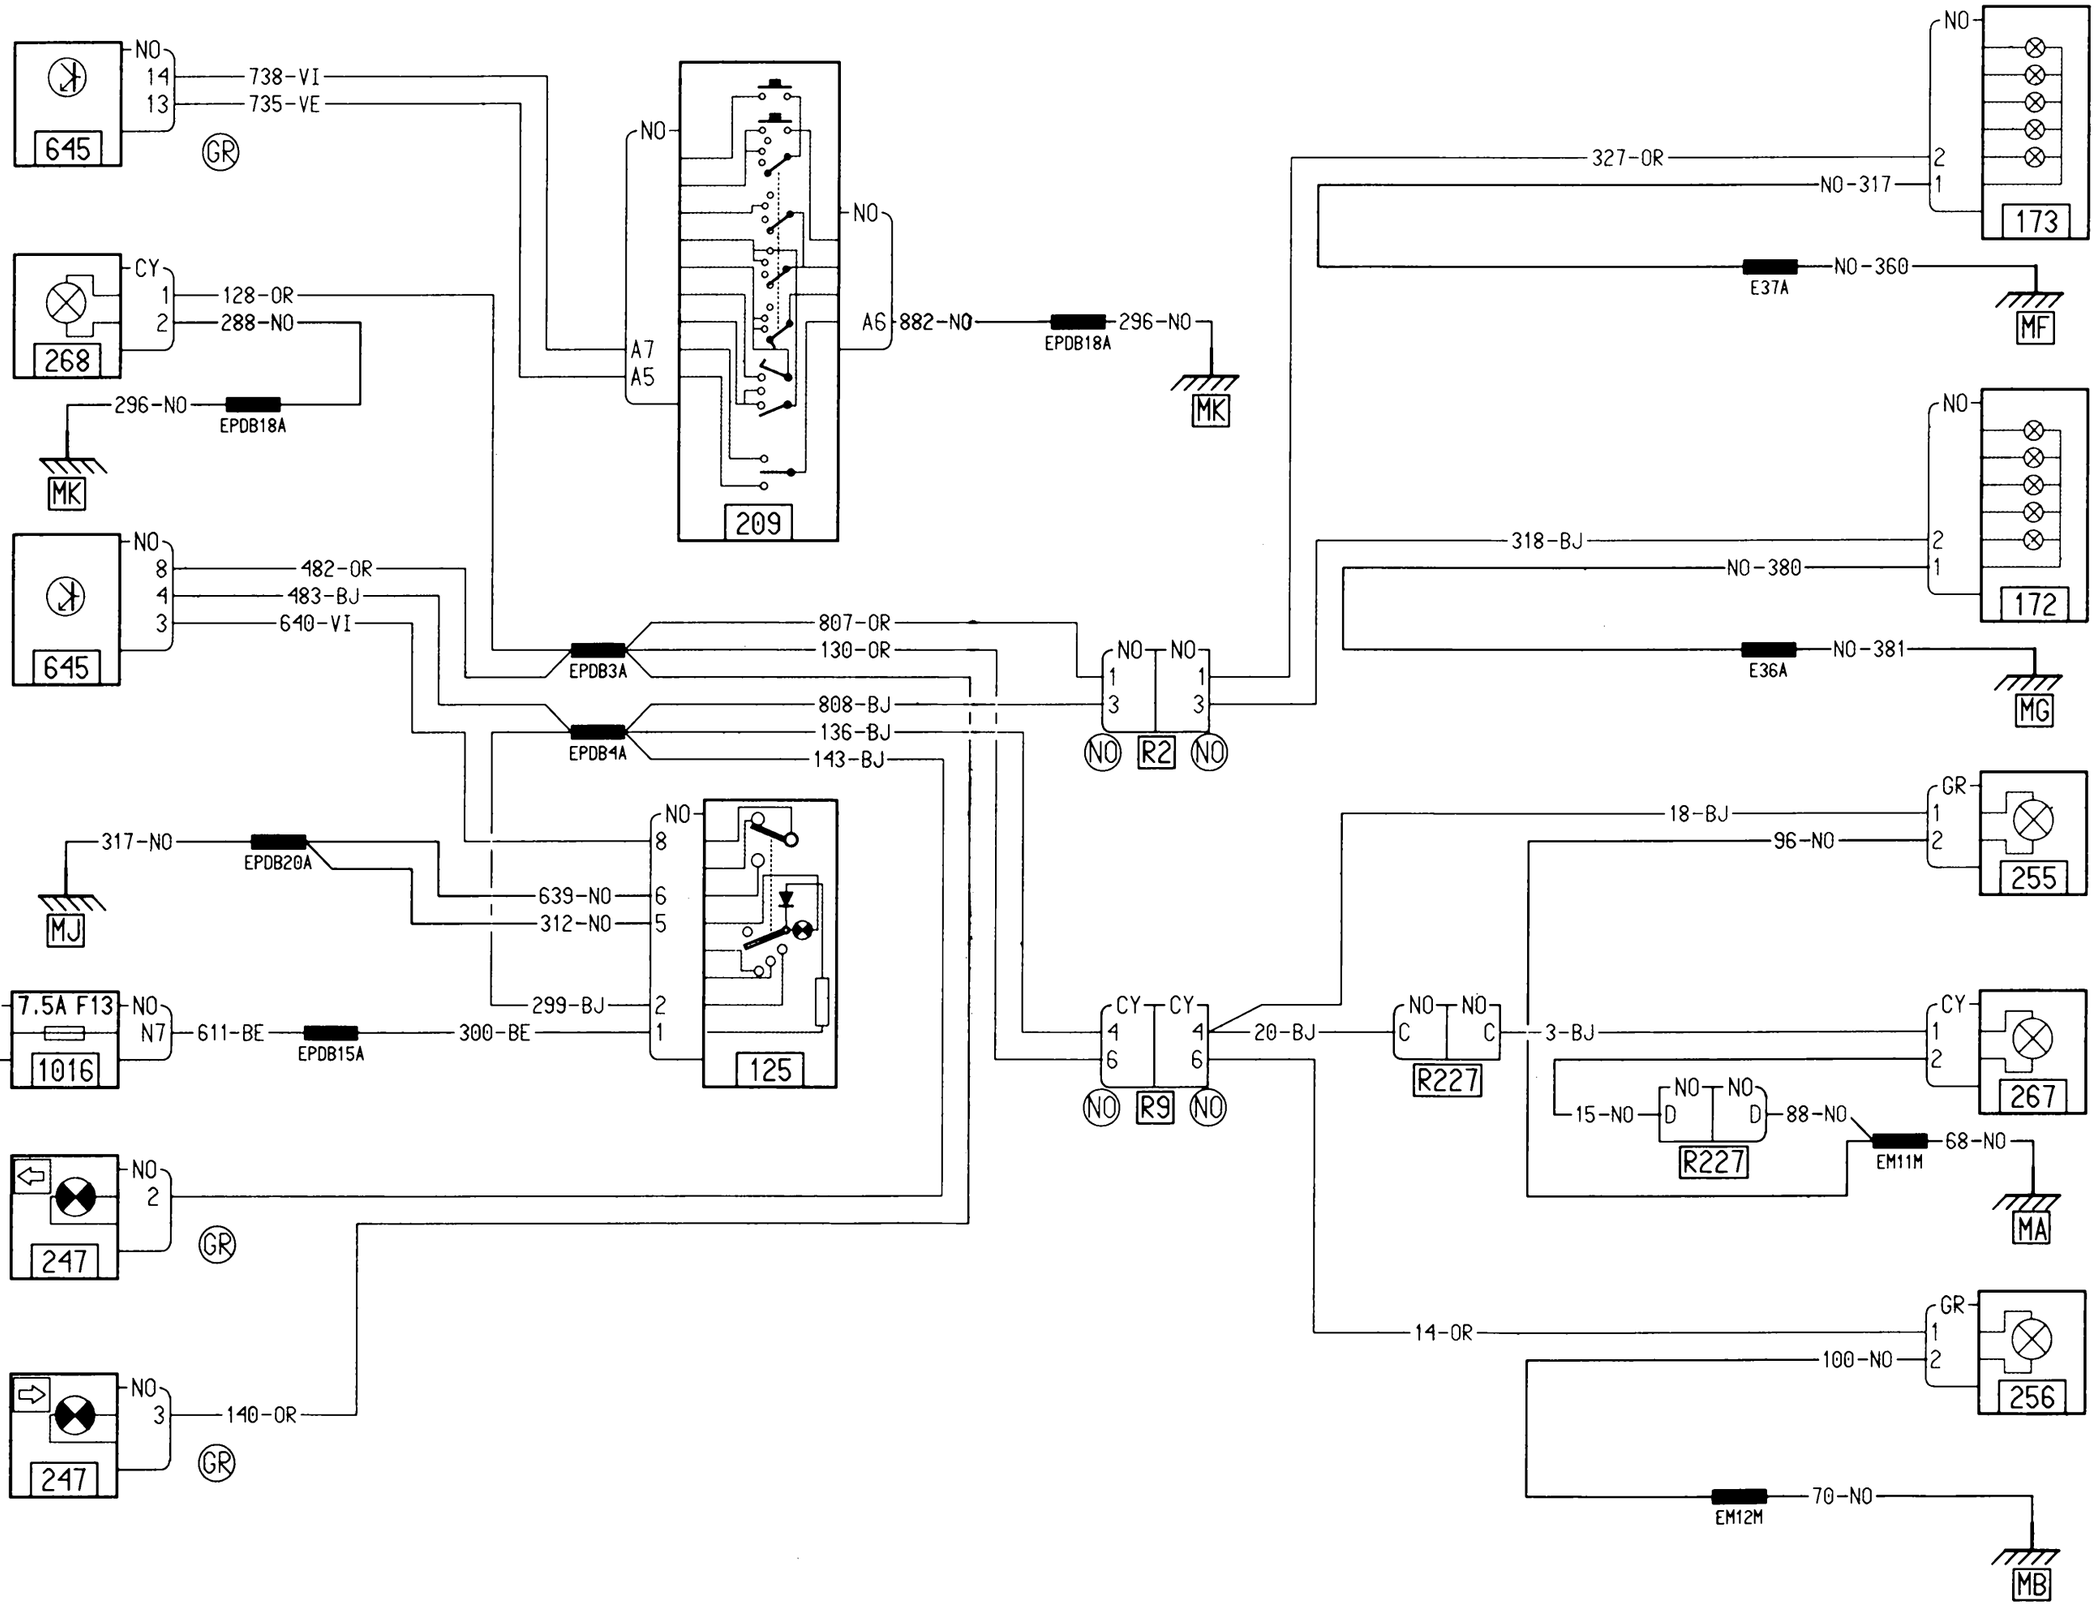

645
NO
14
13
738-VI
735-VE
GR
268
CY
1
2
128-OR
288-NO
296-NO
EPDB18A
MK
209
A7
A5
A6
882-NO
EPDB18A
296-NO
MK
645
NO
8
4
3
482-OR
483-BJ
640-VI
EPDB3A
EPDB4A
807-OR
130-OR
808-BJ
136-BJ
143-BJ
317-NO
EPDB20A
MJ
639-NO
312-NO
299-BJ
7.5A F13
NO
N8
N7
1016
611-BE
EPDB15A
300-BE
125
247
GR
140-OR
NO
R2
R9
R227
327-OR
NO-317
173
E37A
NO-360
MF
318-BJ
NO-380
172
E36A
NO-381
MG
18-BJ
96-NO
255
20-BJ
3-BJ
15-NO
88-NO
267
EM11M
68-NO
MA
14-OR
100-NO
256
EM12M
70-NO
MB

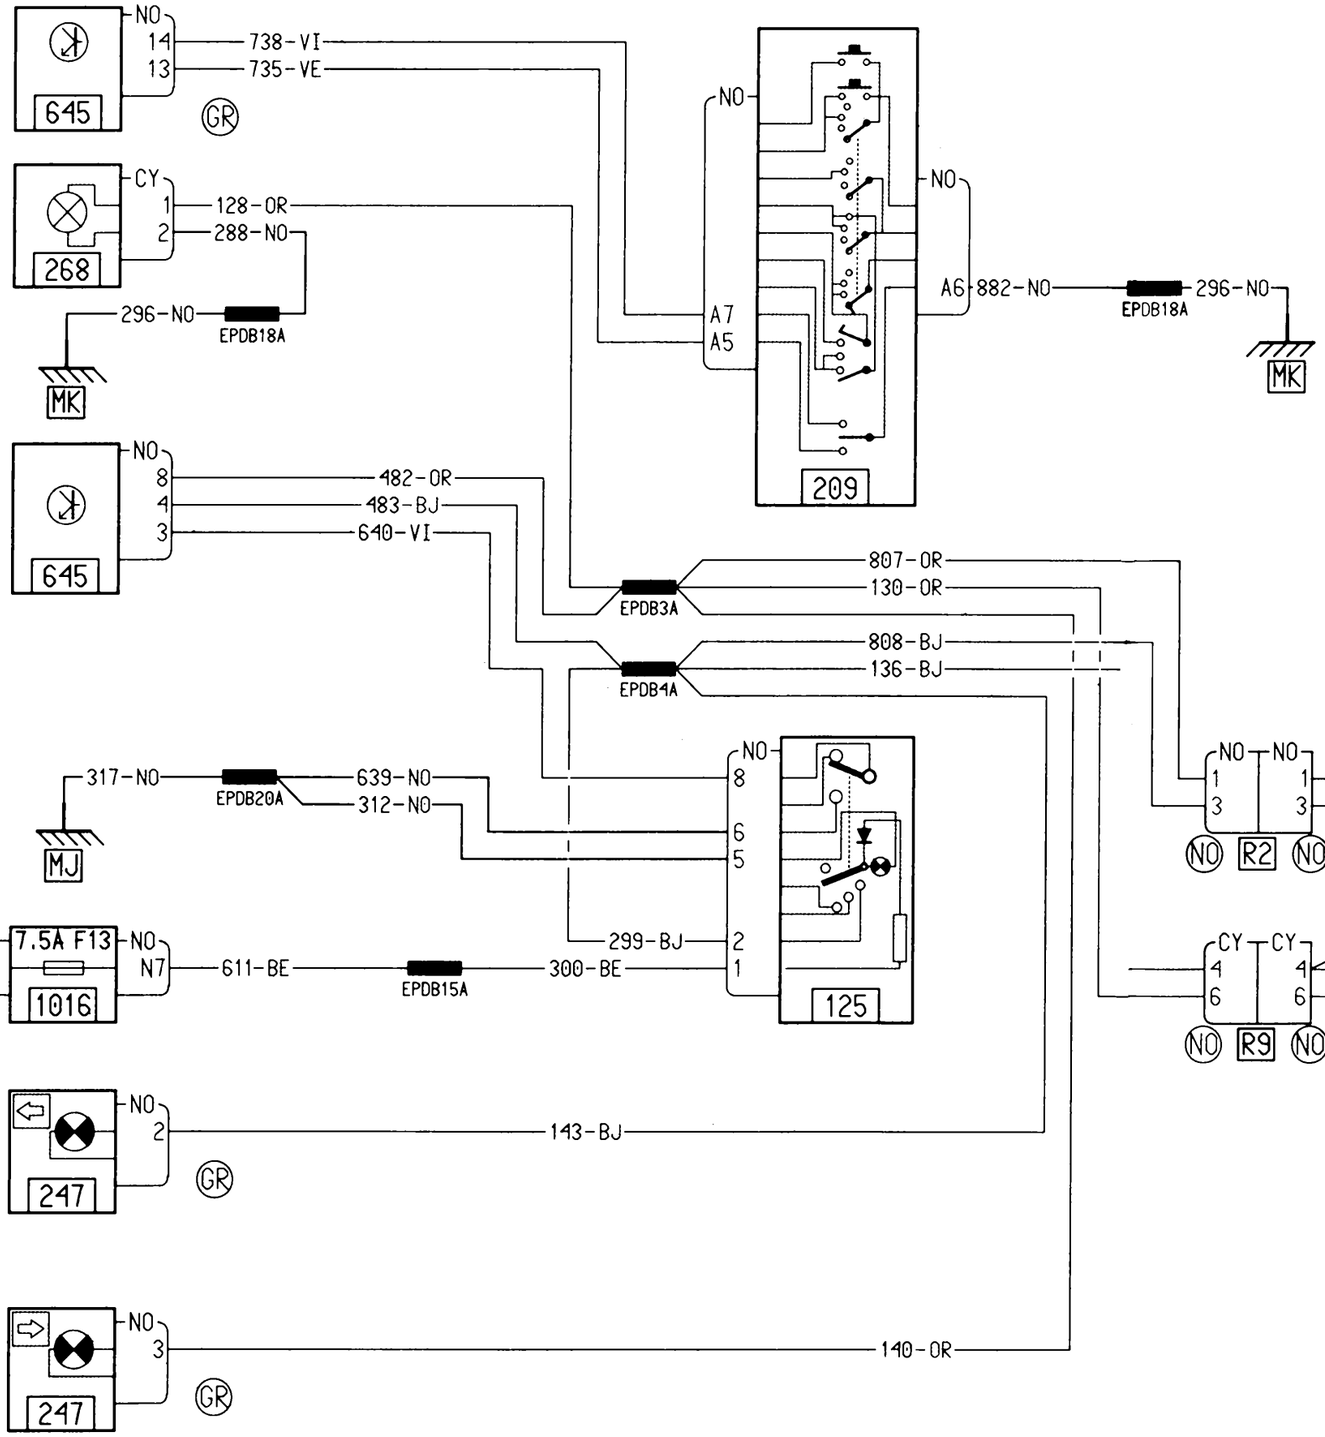
645
NO
14
13
738-VI
735-VE
GR
268
CY
1
2
128-OR
288-NO
296-NO
EPDB18A
MK
209
NO
A7
A5
A6
882-NO
EPDB18A
296-NO
MK
645
NO
8
4
3
482-OR
483-BJ
640-VI
EPDB3A
EPDB4A
807-OR
130-OR
808-BJ
136-BJ
317-NO
EPDB20A
639-NO
312-NO
MJ
7.5A F13
N8
N7
1016
611-BE
EPDB15A
299-BJ
300-BE
125
247
143-BJ
GR
247
140-OR
GR
188-OR
53-NO
173
E36A
858-NO
MG
186-BJ
863-NO
172
E37A
864-NO
MF
R2
18-BJ
96-NO
255
R9
20-BJ
R227
3-BJ
15-NO
267
R227
88-NO
EM11M
68-NO
MA
14-OR
100-NO
256
EM12M
70-NO
MB

INDICATOR

B64/E1/DG/SRUNLI/VHECOL


X642
00

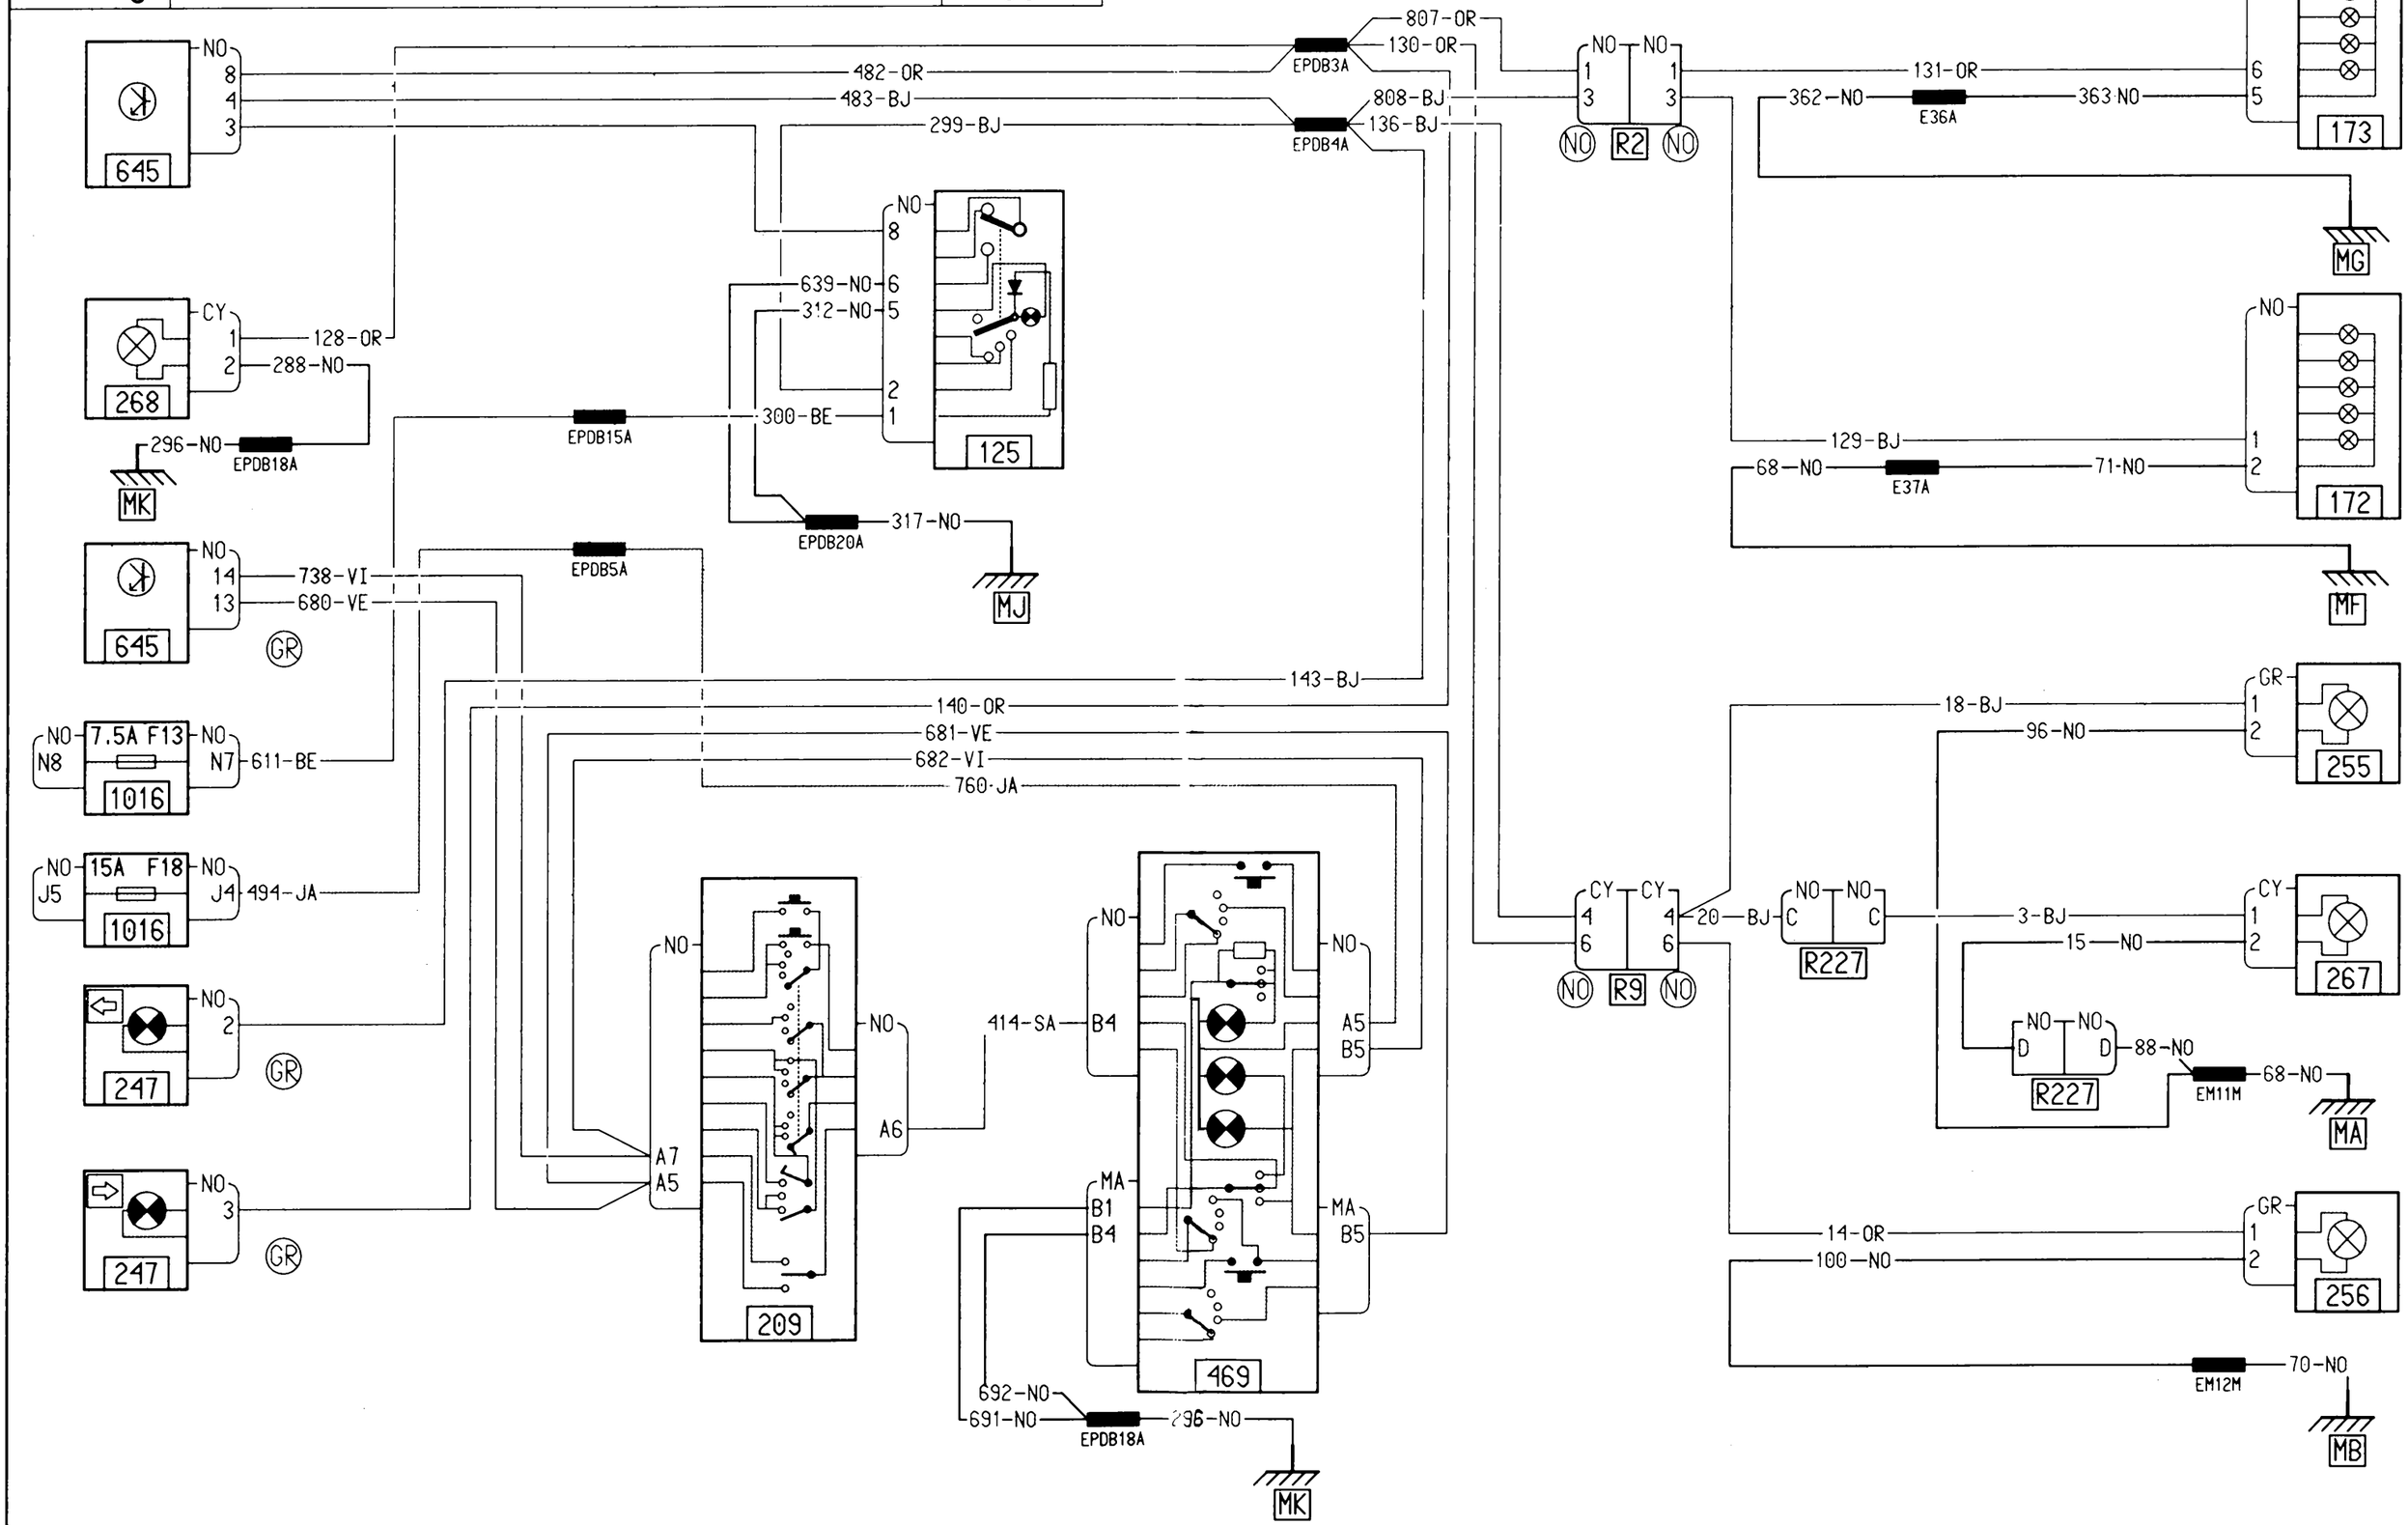

FUEL LEVEL INDICATION

(E7J626,F4P720,F4P722,F8Q790,K4M701),(B64,D64,K25/K4J750),(F4R740,F4R741)

X642
00

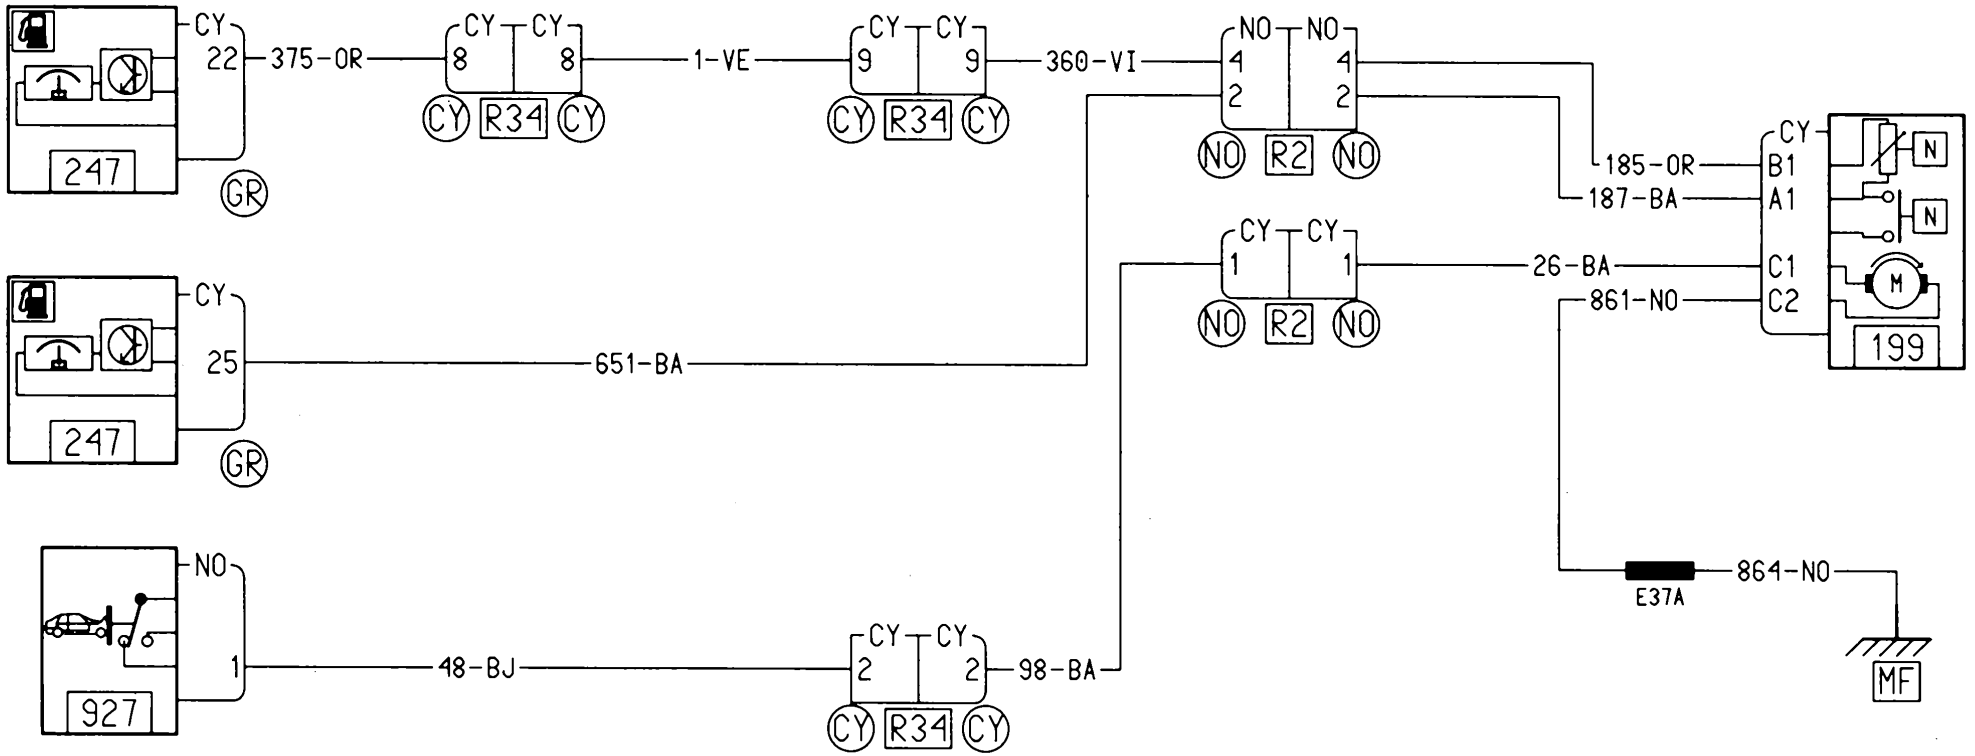


FUEL LEVEL INDICATION

E64/F5R740,K4J714,K4J750

X642


00

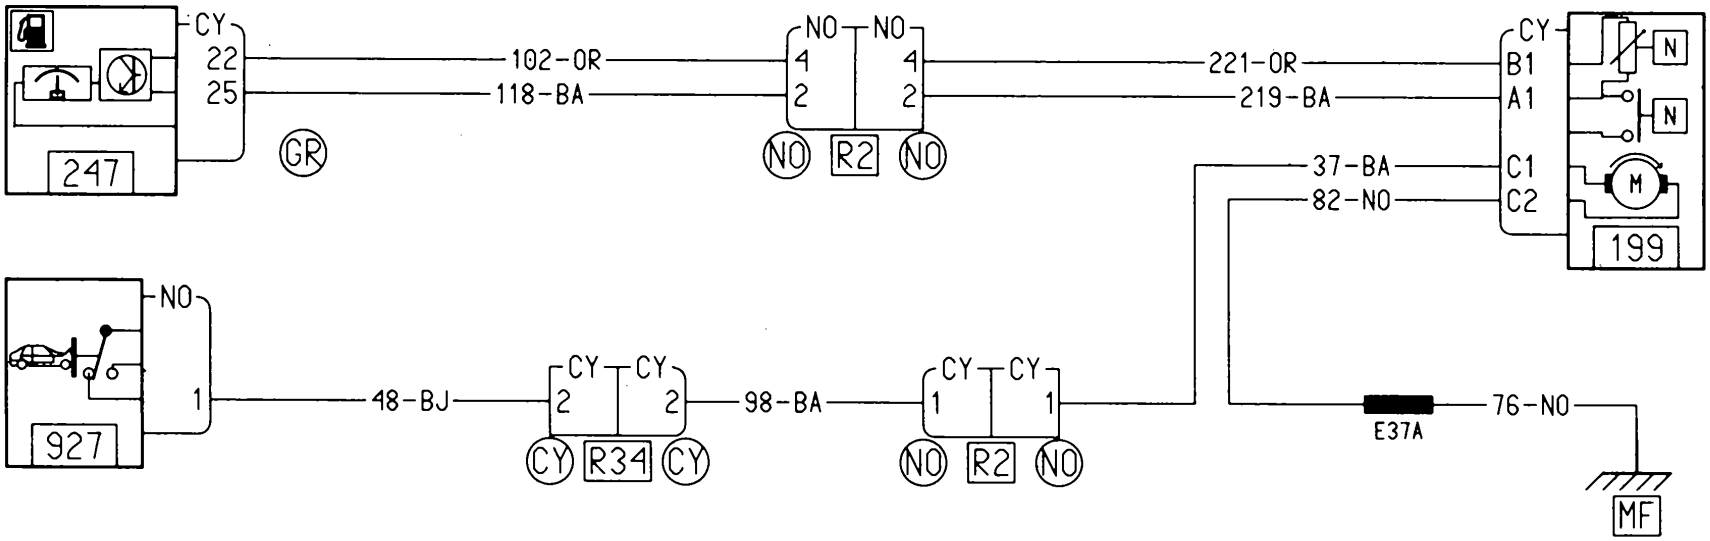


FUEL LEVEL INDICATION

B64/F8Q622/VHECOL

X642
00

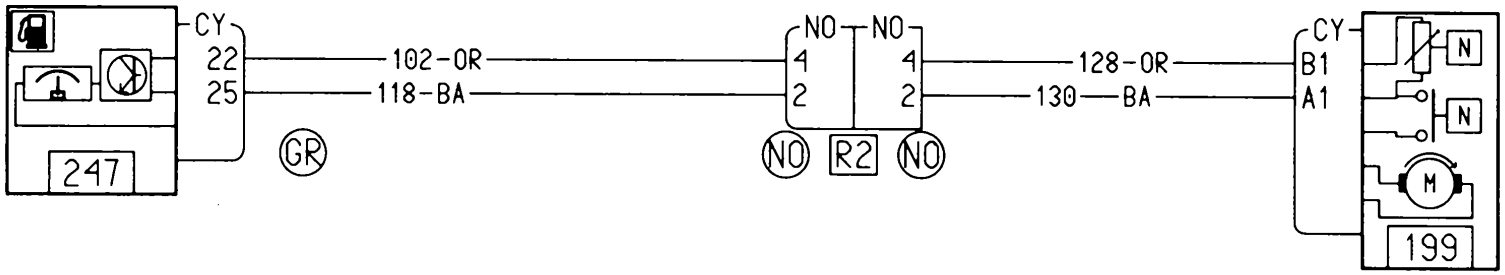


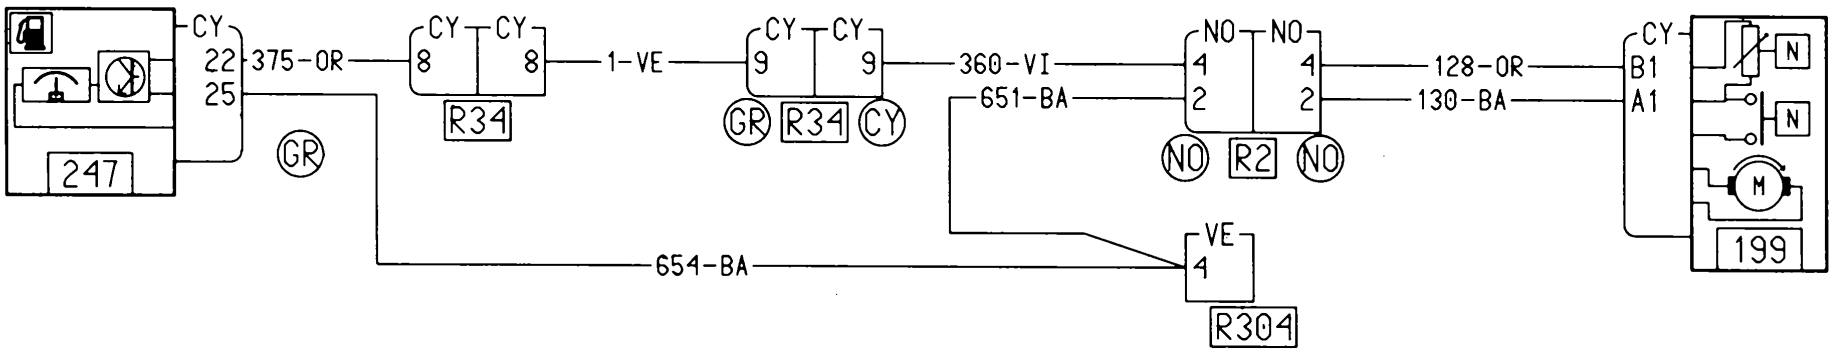
CY
22
25
247
375-OR
GR
CY
8
CY
8
R34
1-VE
CY
9
CY
9
GR
R34
CY
360-VI
651-BA
NO
4
NO
4
2
2
NO
R2
NO
128-OR
130-BA
CY
B1
A1
N
N
M
199
654-BA
VE
4
R304

FUEL LEVEL INDICATION

K4M712/EQGPL


X642
00

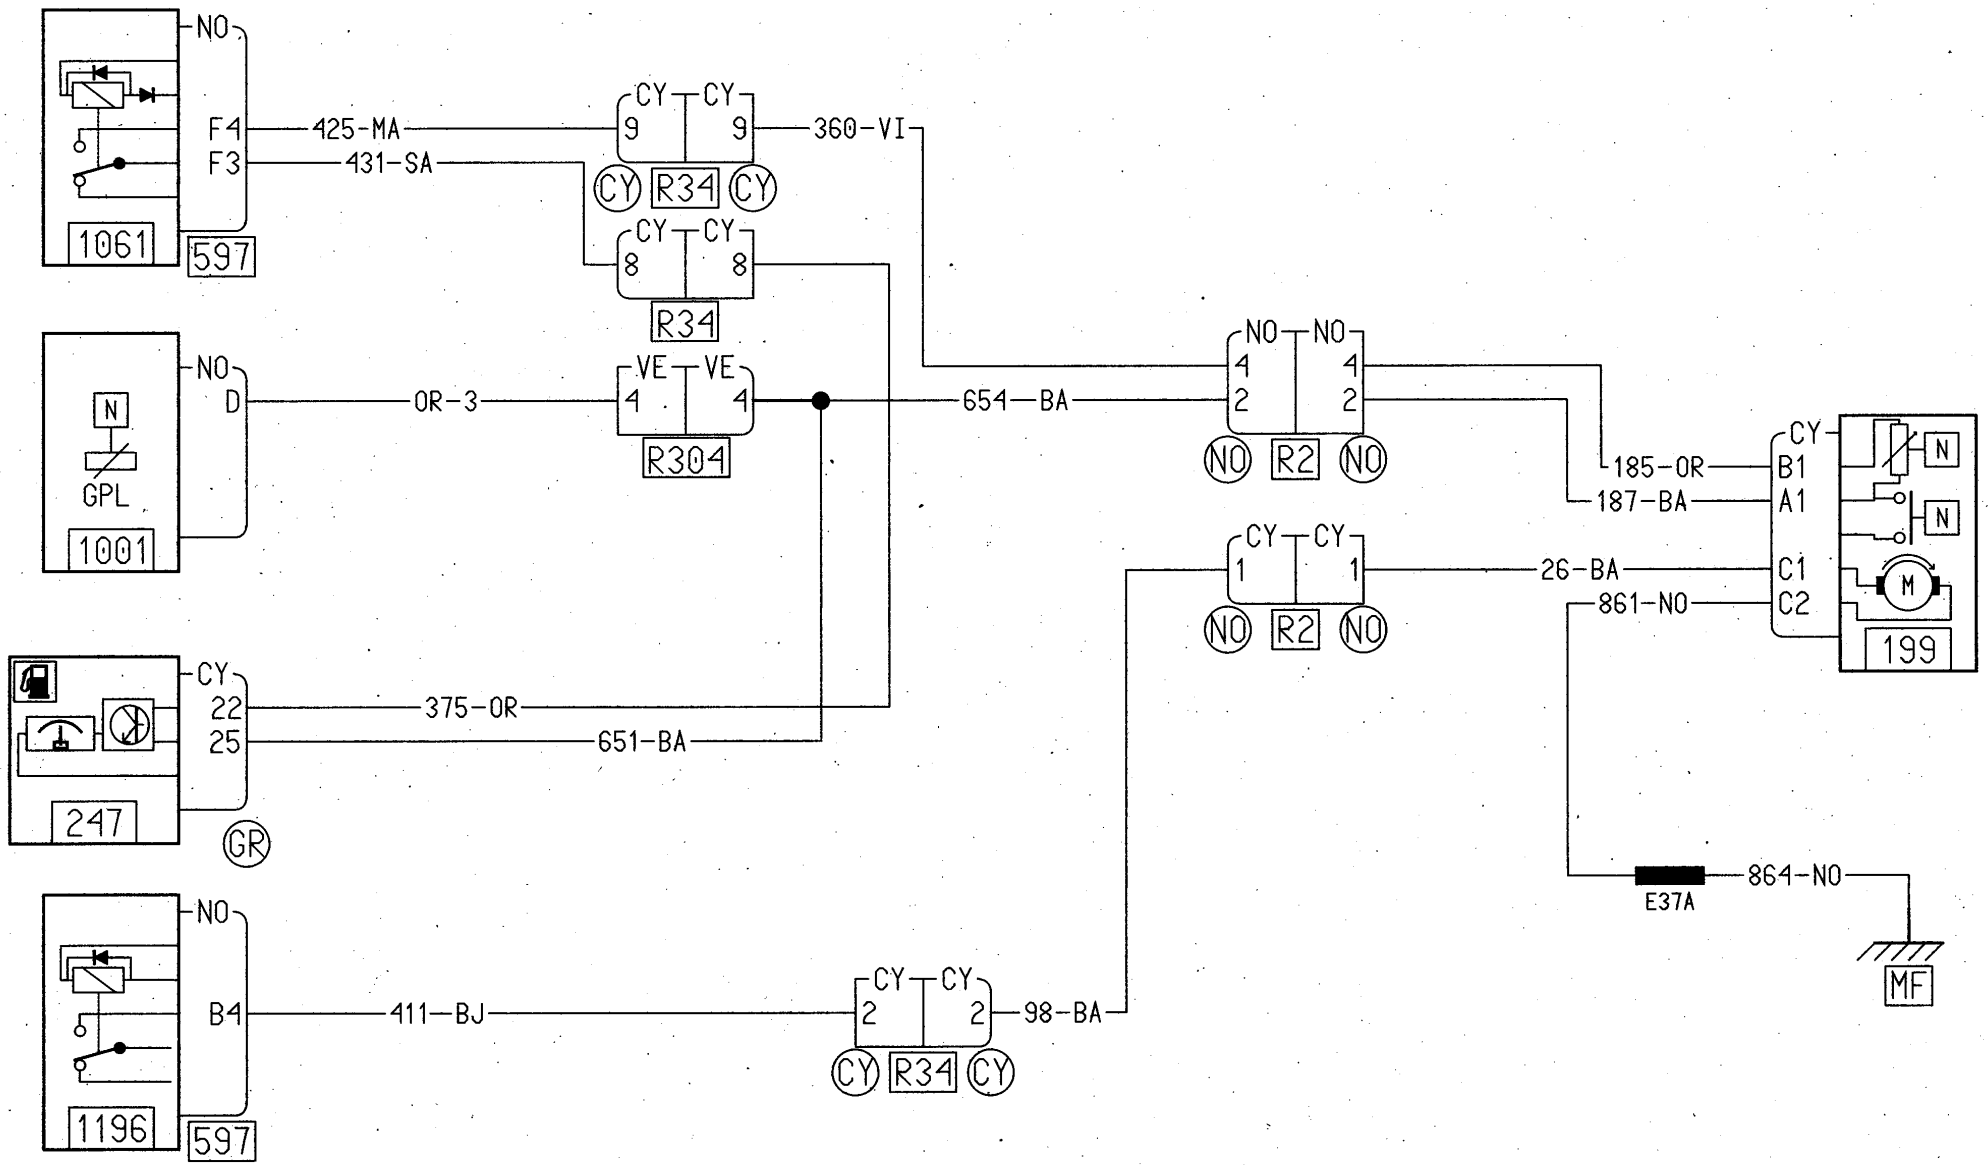

FUEL LEVEL INDICATION

B64,L64/K4M706/CA,CHAUFO/MERCOS/BVM5


X642
00

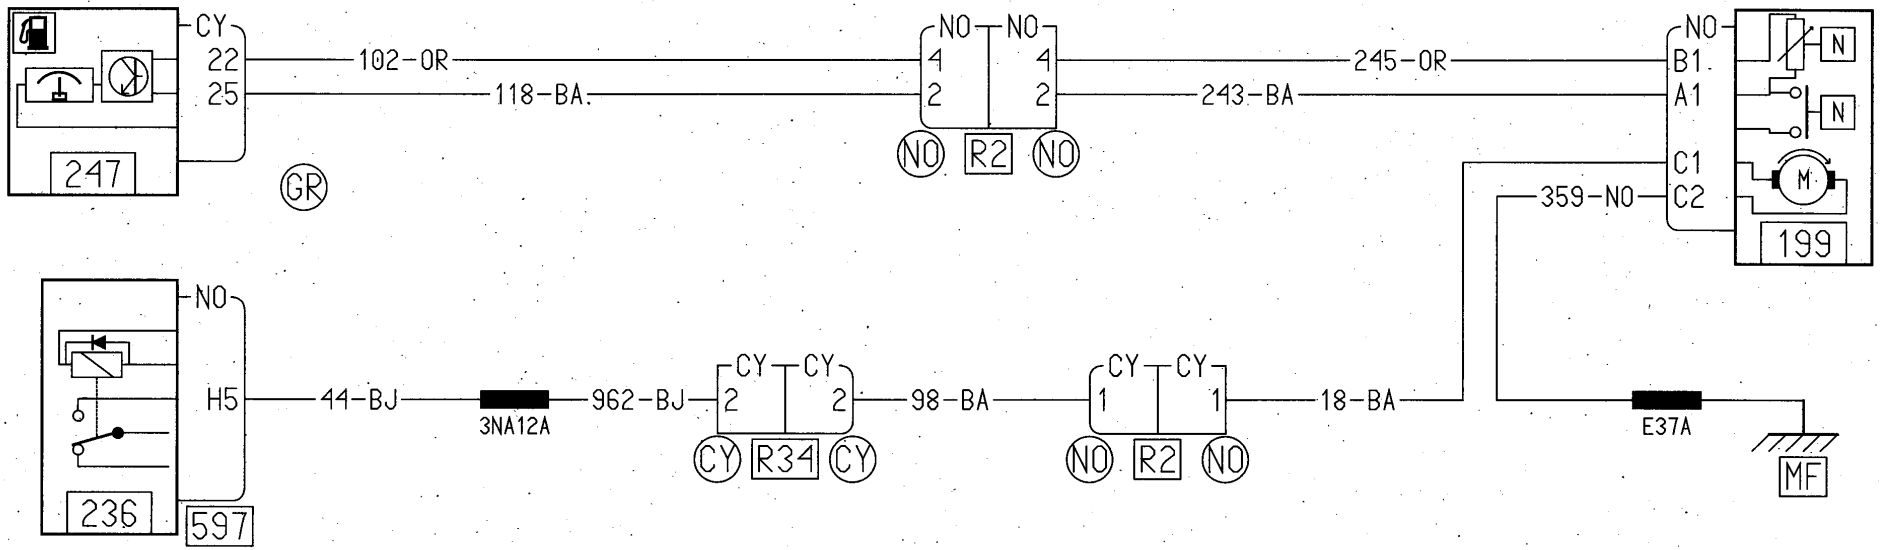

FUEL LEVEL INDICATION


B64,L64/K7M704/CHAUFO/MERCOS/BVM5

X642
00

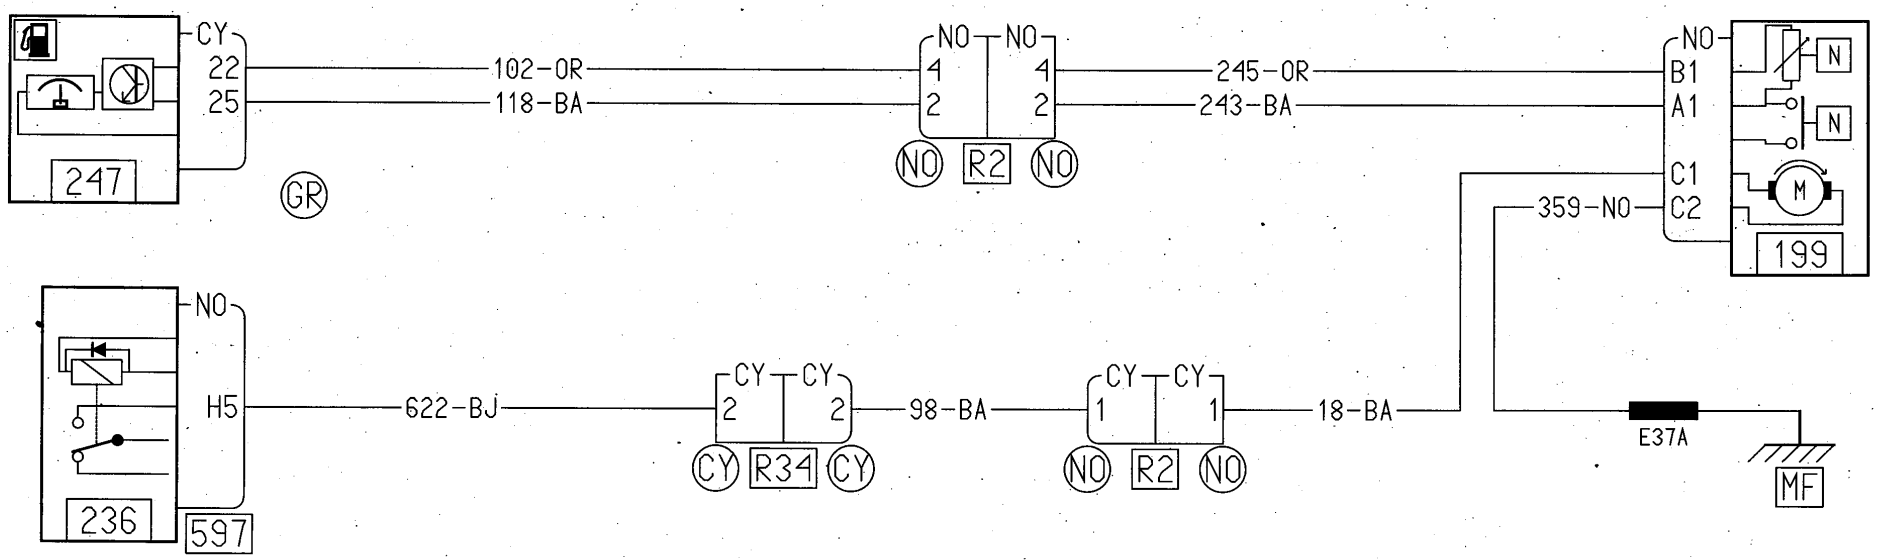


OIL LEVEL INDICATOR

X642
00

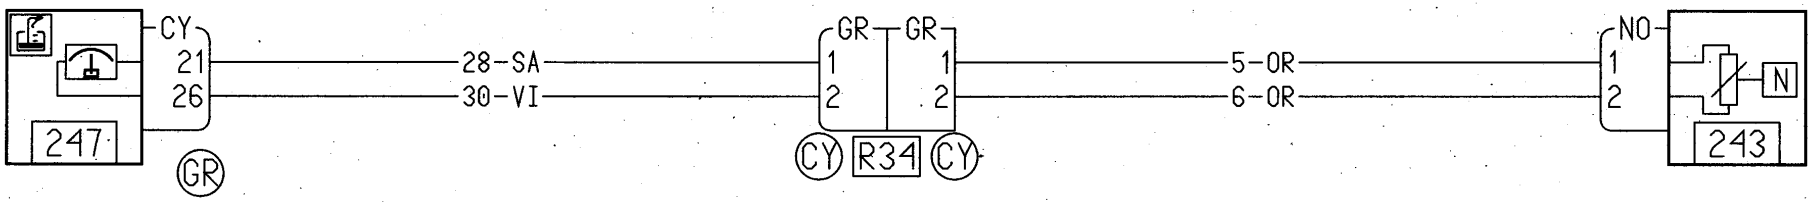

OIL PRESSURE INDICATOR


X642
00

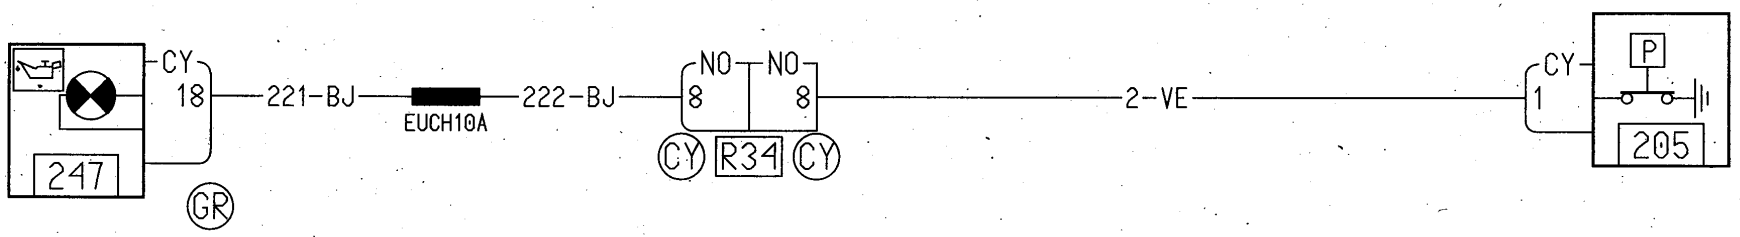

OIL PRESSURE INDICATOR

B64,L64/K4M706,K7M704/MERCOS/BVM5


X642
00

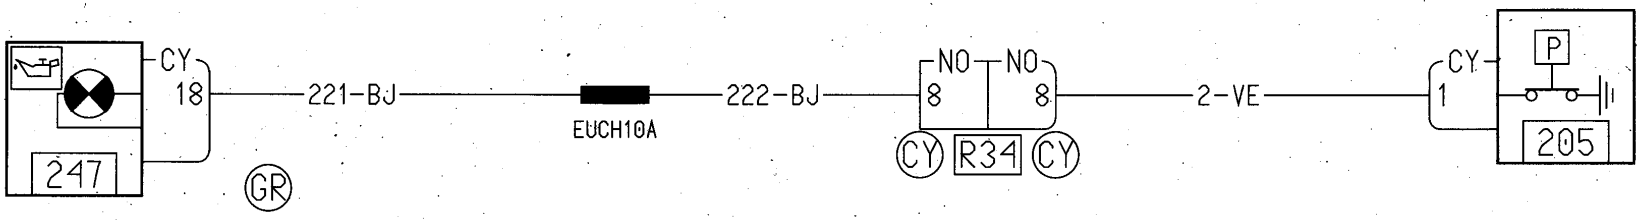

EXTERNAL TEMPERATURE INDICATOR

E2/DG/RETROE/RADI


X642
00

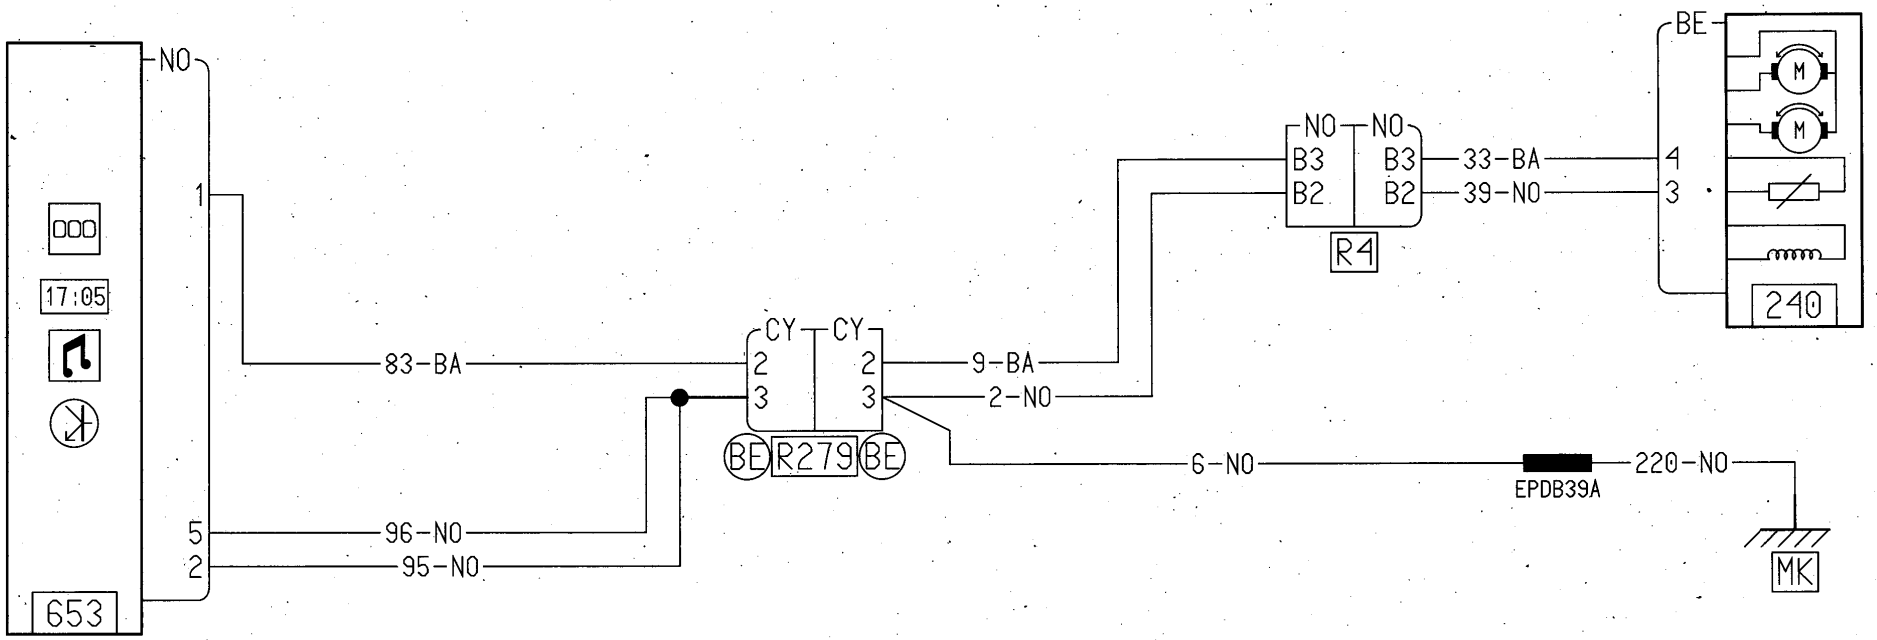



EXTERNAL TEMPERATURE INDICATOR


E2/DD/RETROE/SRADIO


X642

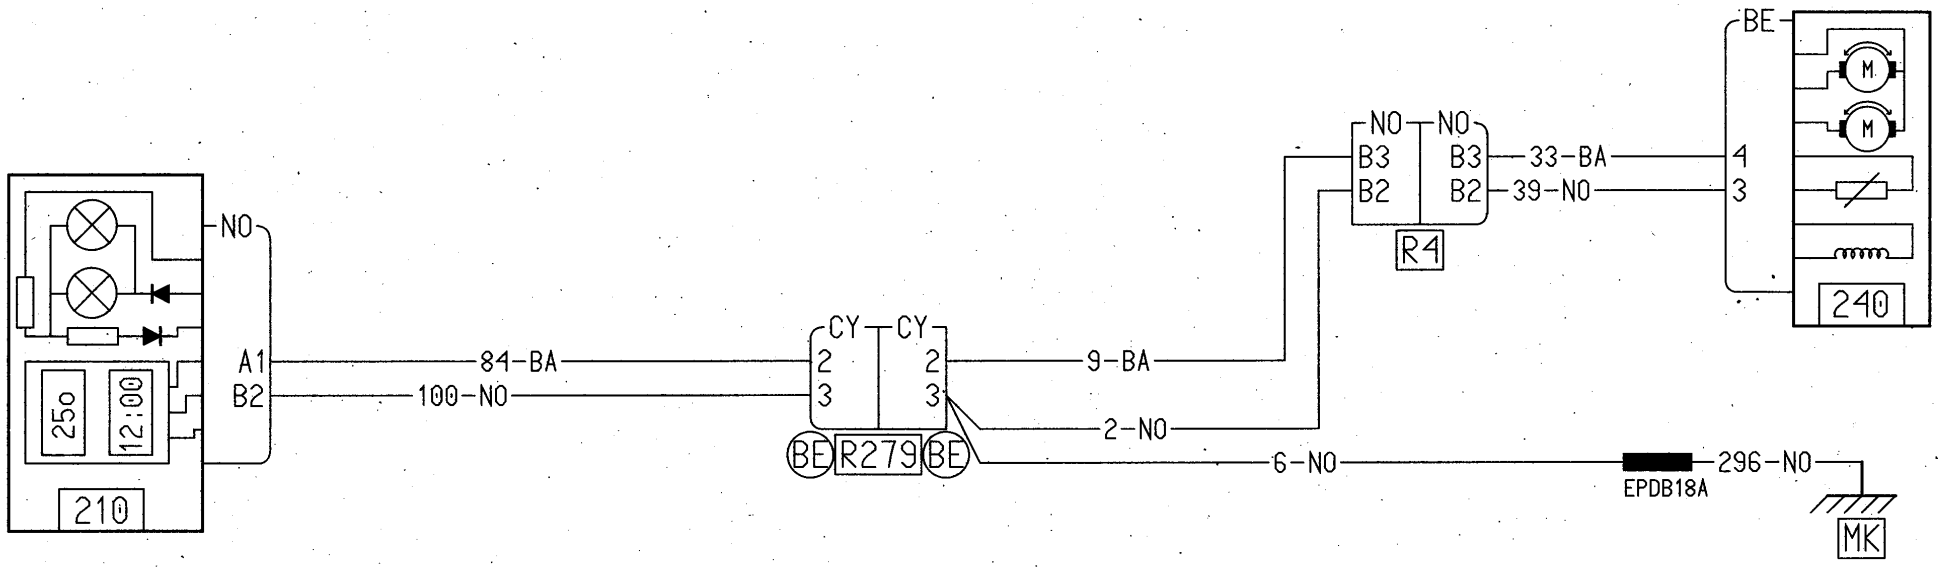


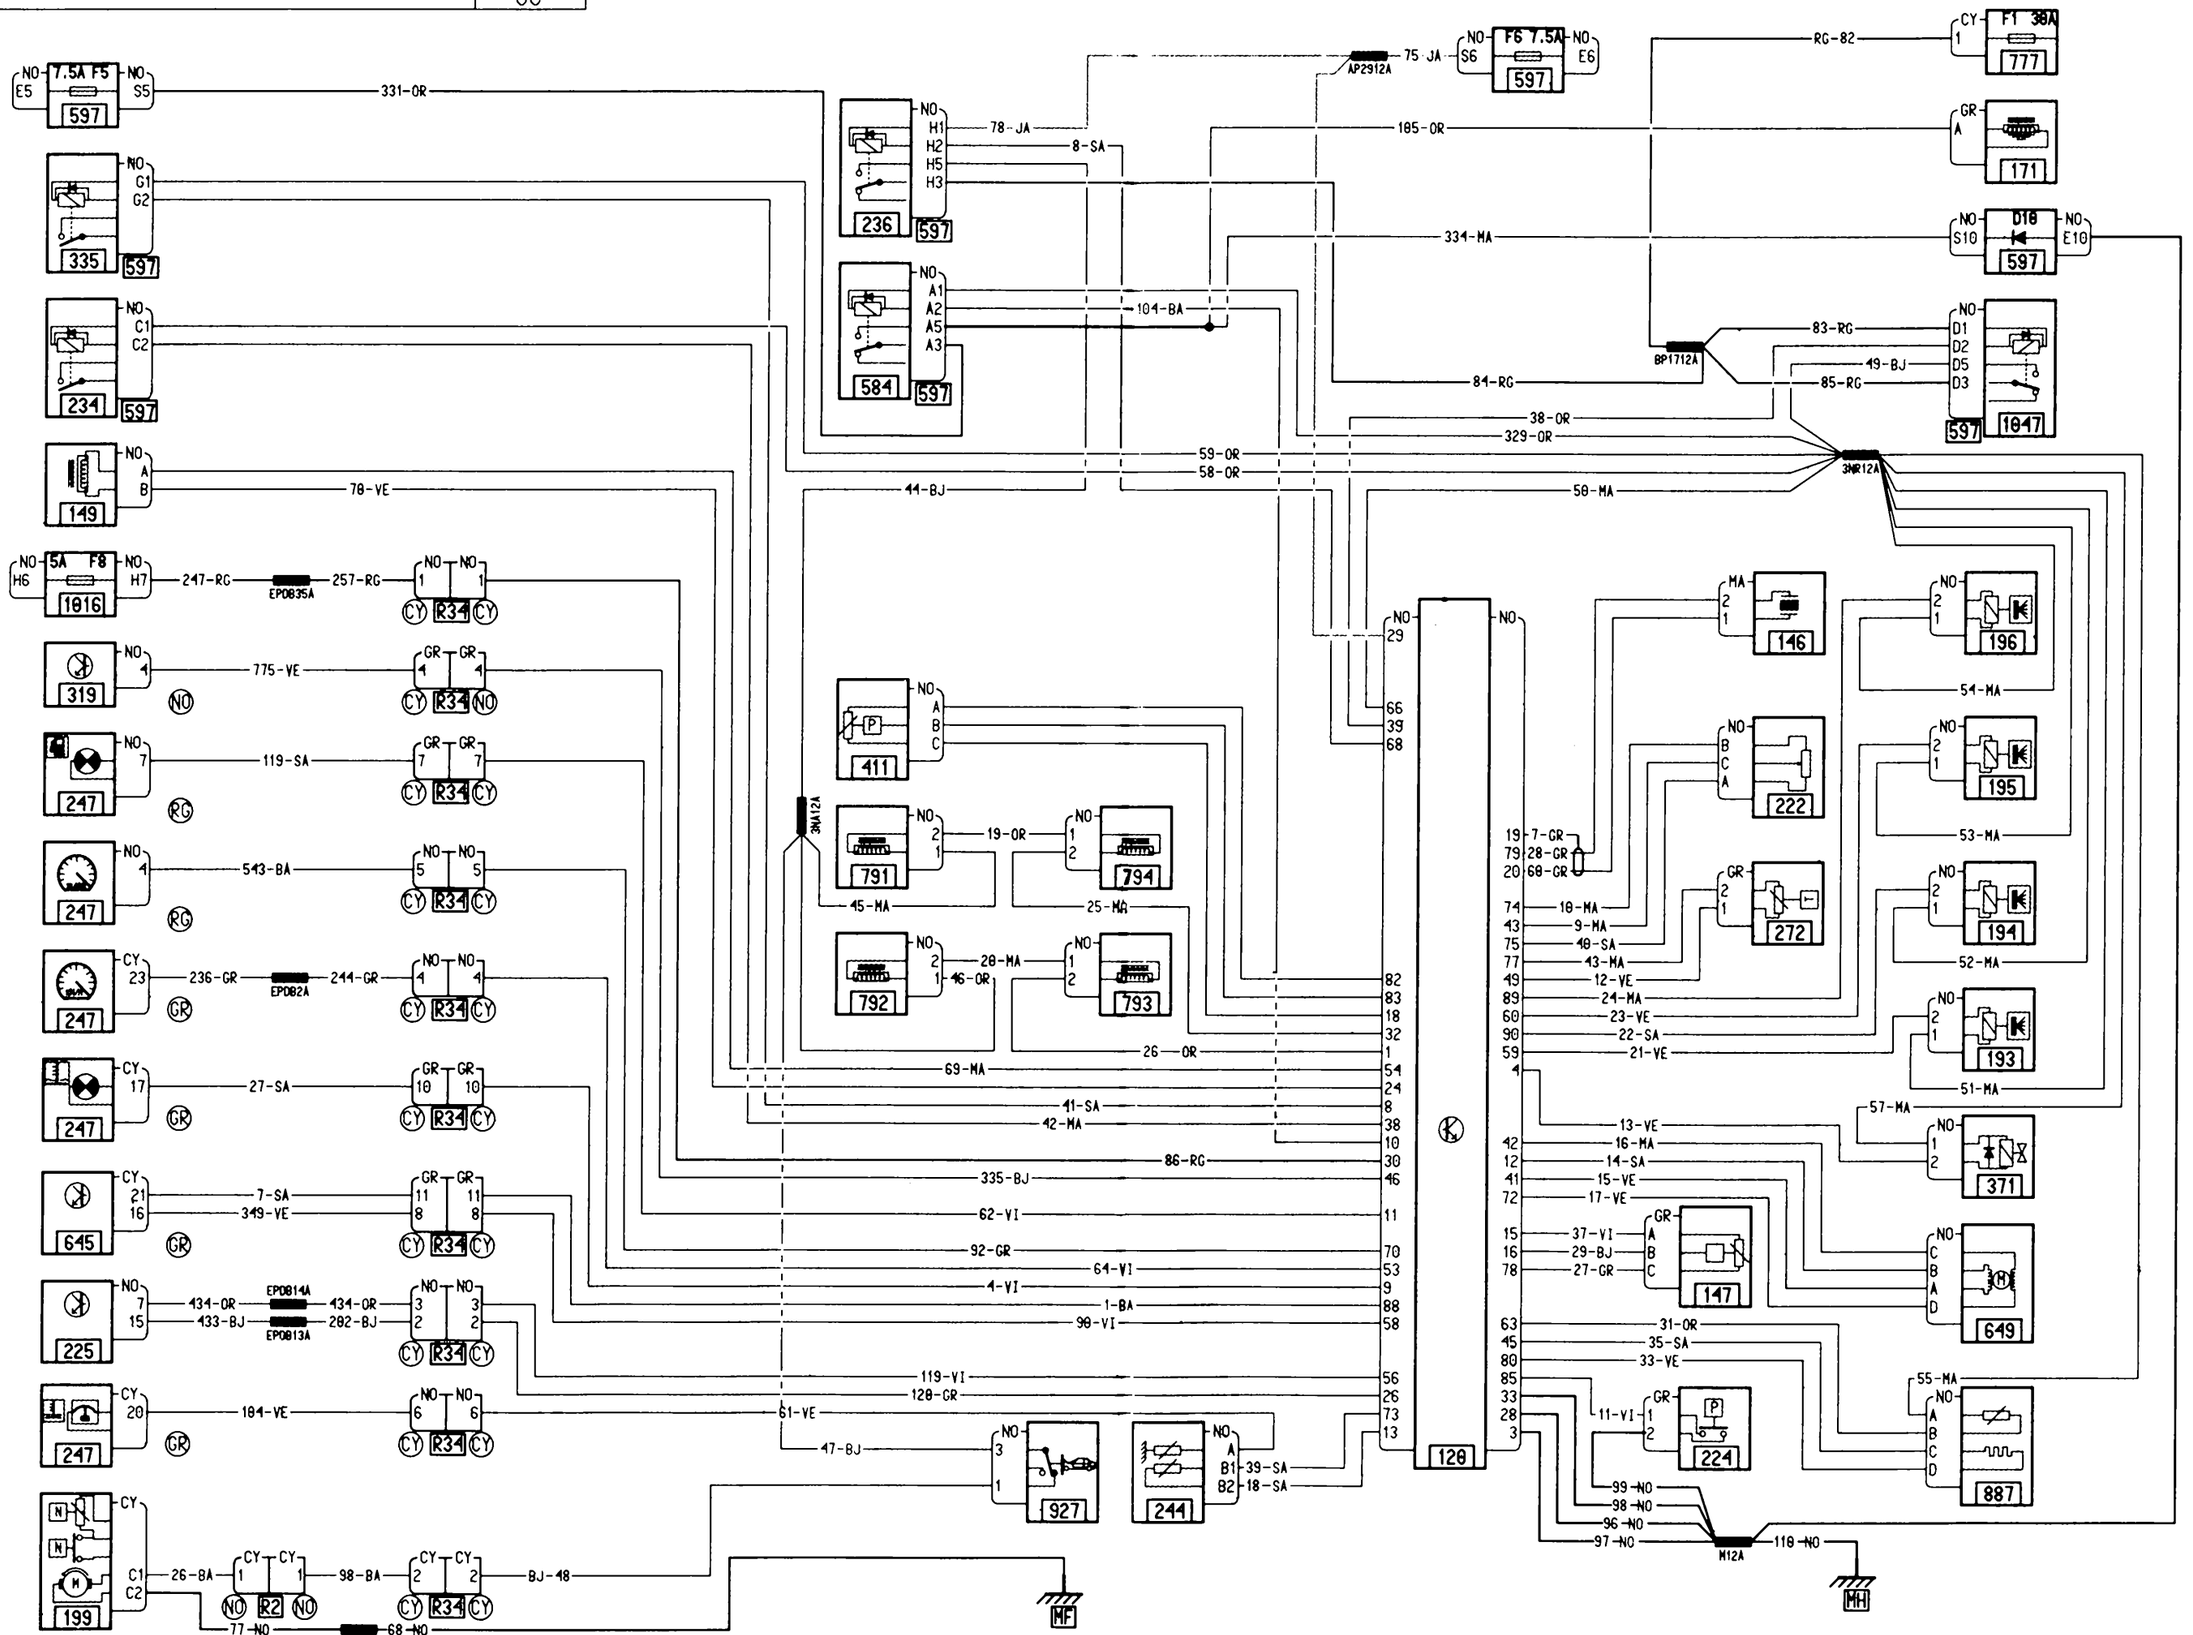

597
331-OR
335
234
149
78-VE
1016
247-RG
EP0835A
257-RG
R34
319
775-VE
R2
247
119-SA
543-BA
236-GR
EP0802A
244-GR
27-SA
645
7-SA
349-VE
225
434-OR
EP0814A
433-BJ
EP0813A
202-BJ
184-VE
199
C1
C2
26-BA
98-BA
BJ-18
77-NO
E37A
68-NO
236
78-JA
8-SA
584
104-BA
411
791
19-OR
45-MA
794
25-MA
792
20-MA
46-OR
793
26-OR
69-MA
41-SA
42-MA
335-BJ
62-VI
92-GR
64-VI
1-VI
1-BA
90-VI
119-VI
120-GR
61-VE
47-BJ
927
244
39-SA
18-SA
3MA12A
AP2912A
75-JA
F6 7.5A
185-OR
334-MA
BP1712A
84-RG
83-RG
19-BJ
85-RG
38-OR
329-OR
59-OR
58-OR
44-BJ
50-MA
D18
1047
777
171
F1 30A
RG-82
120
146
222
272
147
224
371
887
M12A
110-NO
MH
MF
196
195
194
193
649
54-MA
53-MA
52-MA
51-MA
57-MA
55-MA
99-NO
98-NO
96-NO
97-NO
7-GR
28-GR
60-GR
18-MA
9-MA
40-SA
43-MA
12-VE
24-MA
23-VE
22-SA
21-VE
13-VE
16-MA
14-SA
15-VE
17-VE
37-VI
29-BJ
27-GR
31-OR
35-SA
33-VE
11-VI

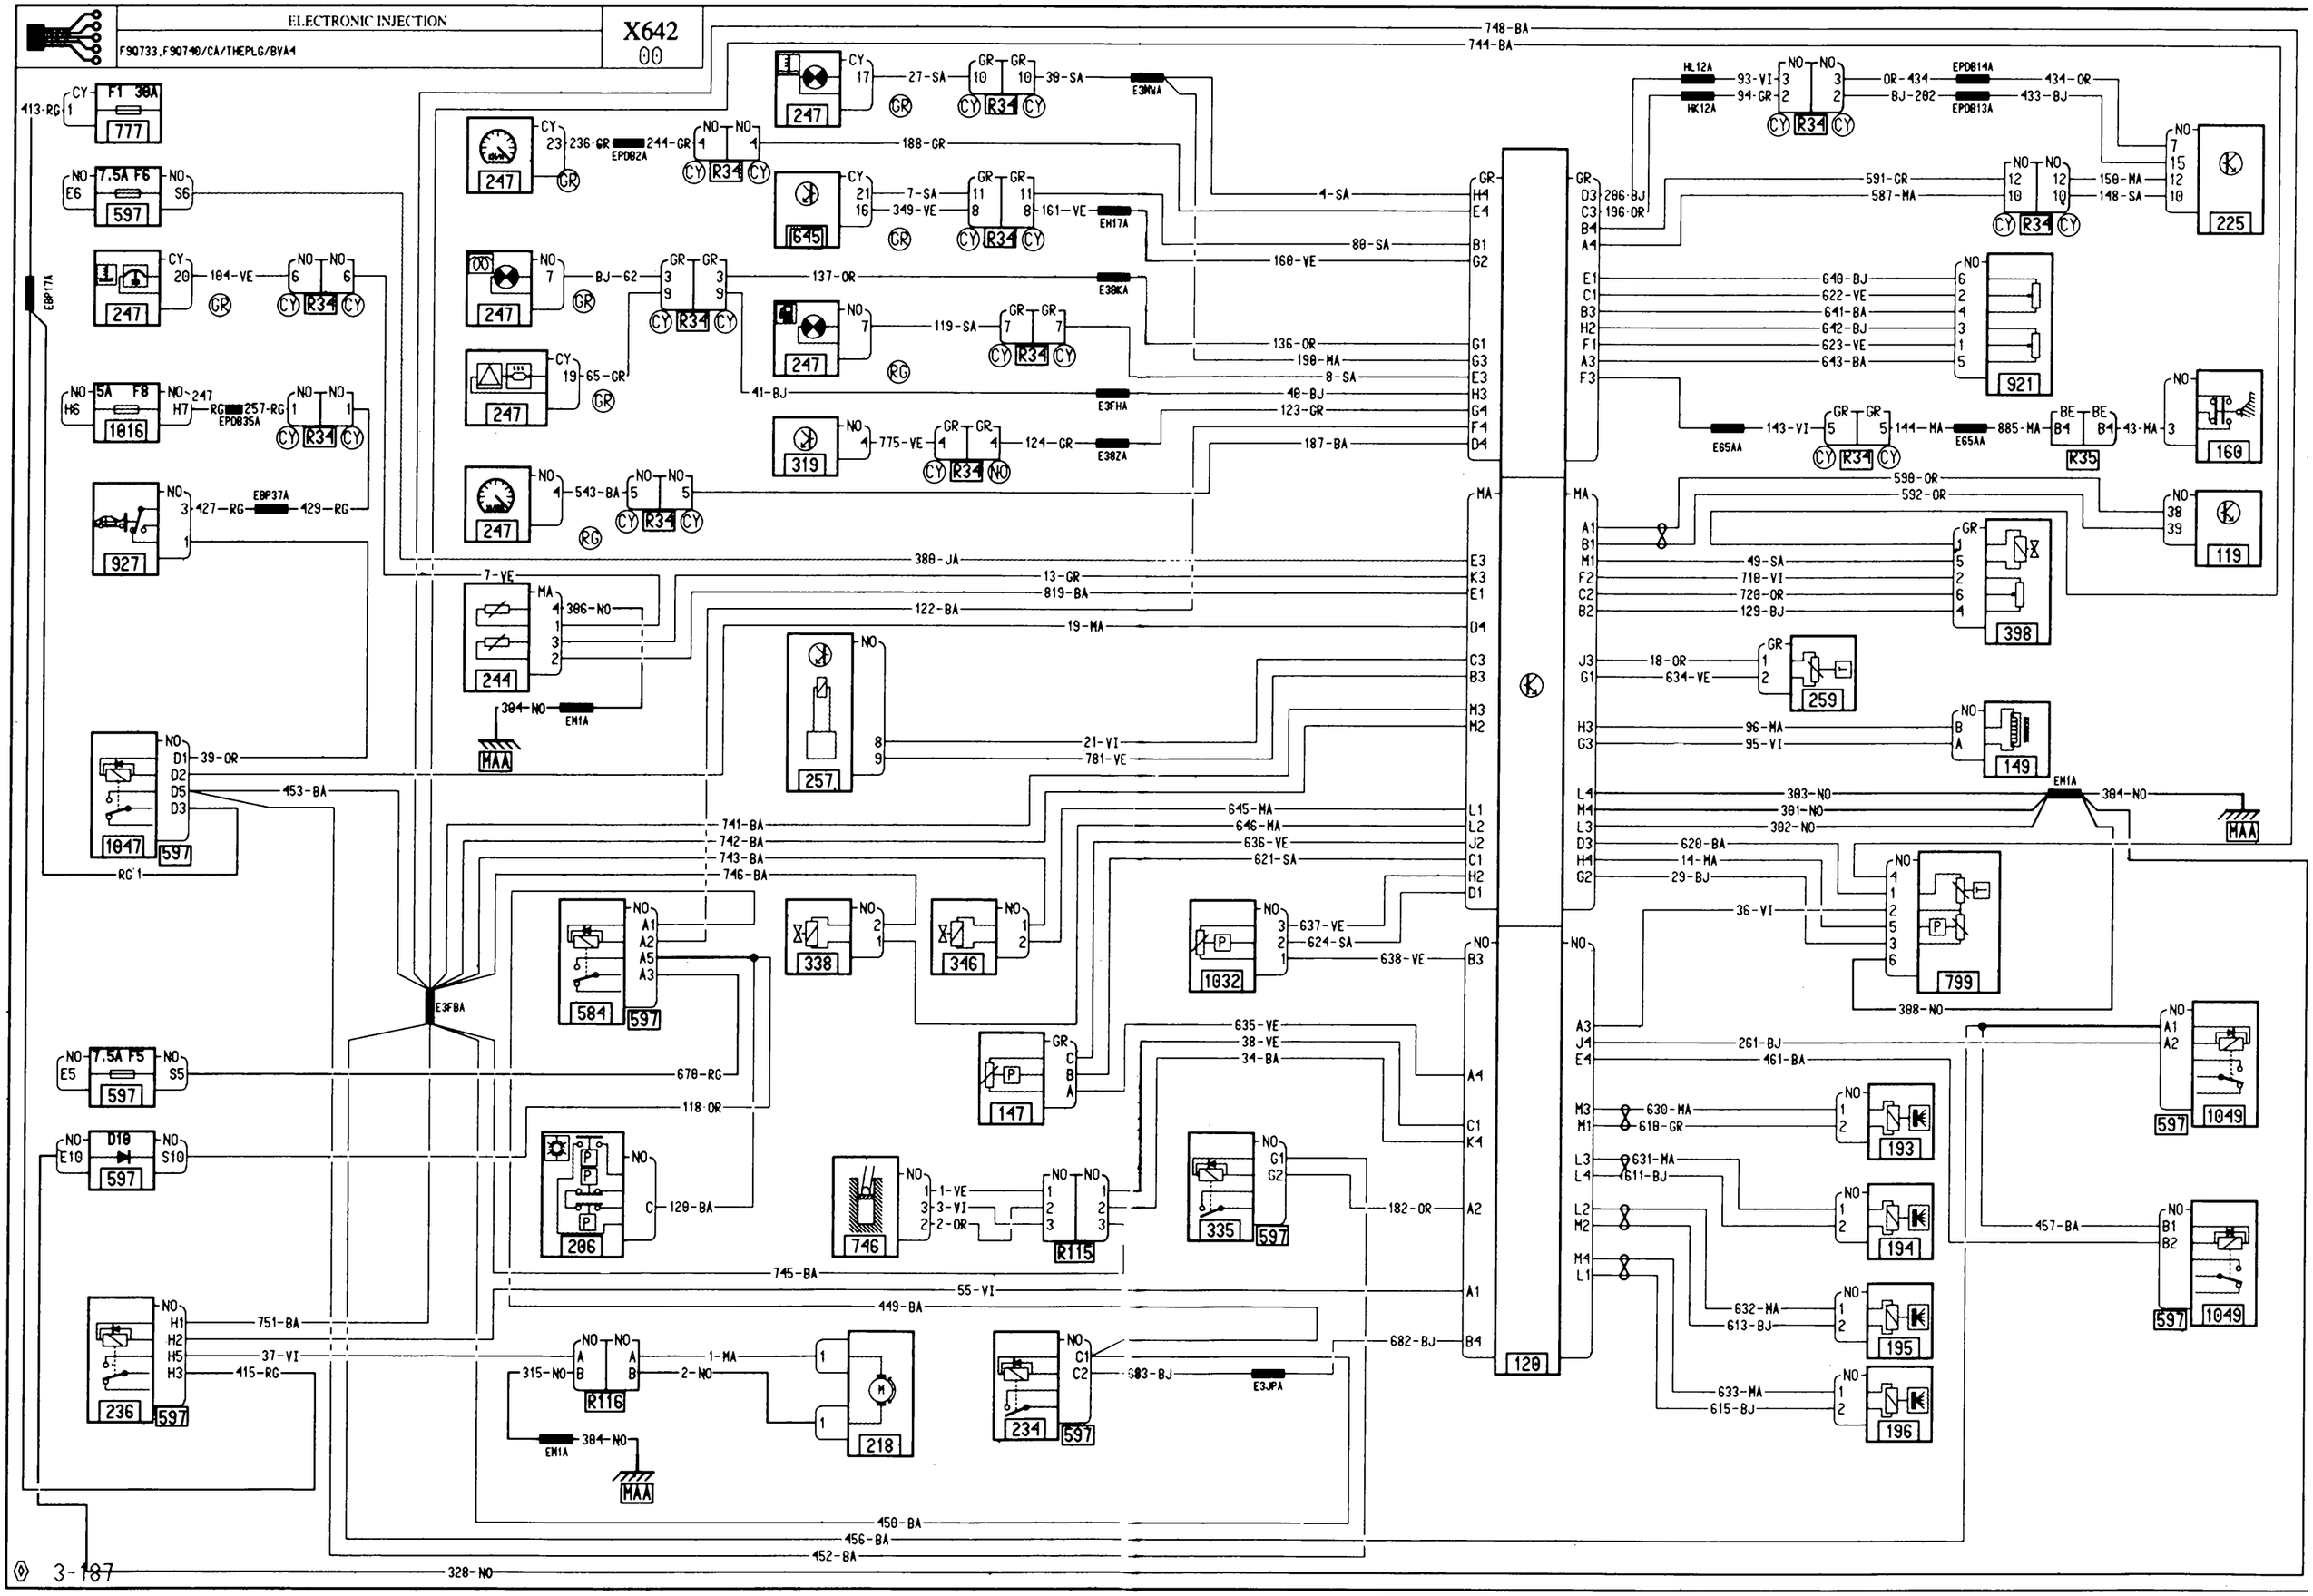

748-BA
744-BA
413-RG
F1 30A
777
7.5A F6
597
E6
S6
5A F8
1016
H6
H7
247
RG
257-RG
EP0835A
927
EBP37A
427-RG
429-RG
1047
D1
D2
D5
D3
39-OR
453-BA
RG 1
EBP17A
E3FBA
247
236-GR
244-GR
EP0B2A
188-GR
645
7-SA
349-VE
161-VE
EH17A
4-SA
80-SA
160-VE
BJ-62
137-OR
E38KA
119-SA
65-GR
41-BJ
E3FHA
319
775-VE
124-GR
E38ZA
543-BA
123-GR
187-BA
380-JA
7-VE
13-GR
819-BA
122-BA
19-MA
244
386-NO
384-NO
EM1A
MAA
257
8
9
21-VI
781-VE
645-MA
646-MA
636-VE
621-SA
741-BA
742-BA
743-BA
746-BA
338
346
1032
637-VE
624-SA
638-VE
584
597
E3FBA
678-RG
118-OR
635-VE
38-VE
34-BA
147
206
120-BA
746
1-VE
3-VI
2-OR
R115
335
182-OR
745-BA
55-VI
449-BA
682-BJ
751-BA
37-VI
415-RG
236
315-NO
R116
1-MA
2-NO
218
234
583-BJ
E3JPA
450-BA
456-BA
452-BA
328-NO
HL12A
HK12A
93-VI
94-GR
OR-434
BJ-282
EPDB14A
EPDB13A
434-OR
433-BJ
225
591-GR
587-MA
150-MA
148-SA
286-BJ
196-OR
640-BJ
622-VE
641-BA
642-BJ
623-VE
643-BA
921
E65AA
143-VI
144-MA
885-MA
43-MA
160
598-OR
592-OR
119
49-SA
718-VI
720-OR
129-BJ
398
18-OR
634-VE
259
96-MA
95-VI
149
383-NO
381-NO
382-NO
620-BA
14-MA
29-BJ
36-VI
799
388-NO
261-BJ
461-BA
630-MA
610-GR
631-MA
611-BJ
632-MA
613-BJ
633-MA
615-BJ
193
194
195
196
457-BA
1049
120

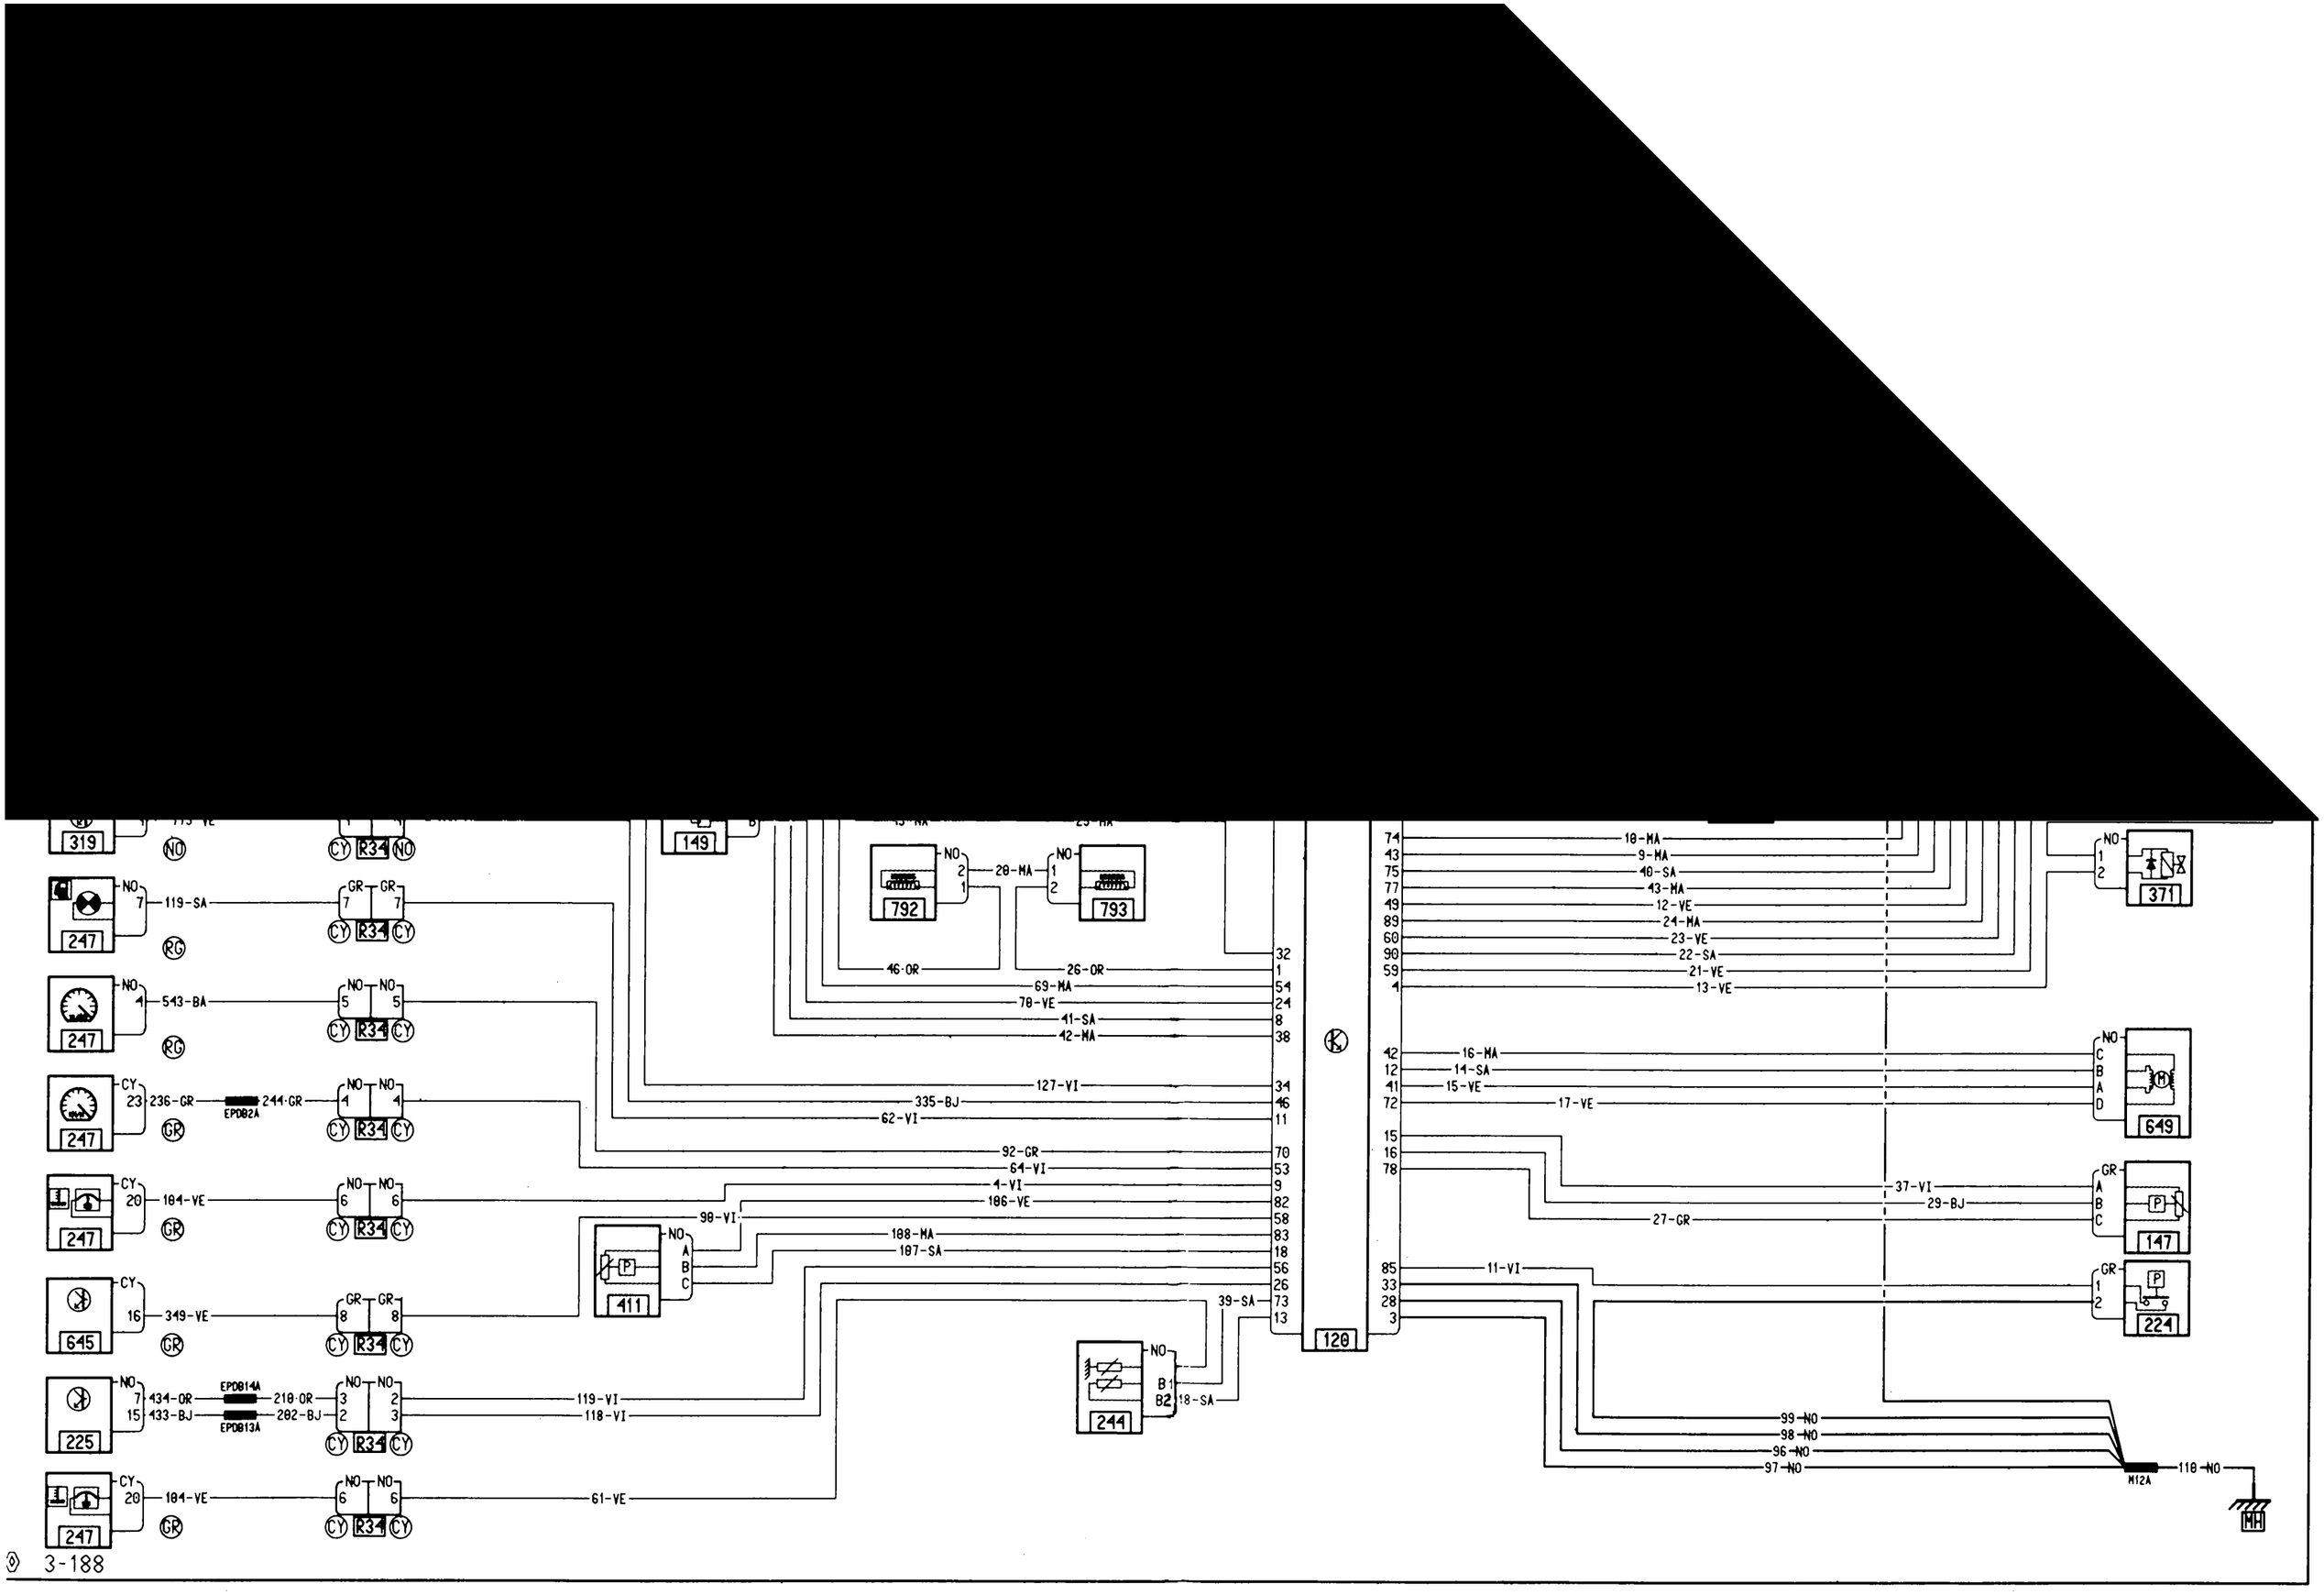

319
247
645
225
792
793
411
244
149
371
649
147
224
120
M12A
MH
119-SA
543-BA
236-GR
244-GR
EPDB2A
184-VE
349-VE
434-OR
433-BJ
EPDB14A
EPDB13A
210-OR
202-BJ
119-VI
118-VI
61-VE
46-OR
26-OR
20-MA
69-MA
78-VE
41-SA
42-MA
127-VI
335-BJ
62-VI
92-GR
64-VI
1-VI
186-VE
98-VI
108-MA
107-SA
39-SA
18-SA
18-MA
9-MA
40-SA
43-MA
12-VE
24-MA
23-VE
22-SA
21-VE
13-VE
16-MA
14-SA
15-VE
17-VE
37-VI
29-BJ
27-GR
11-VI
99-NO
98-NO
96-NO
97-NO
118-NO

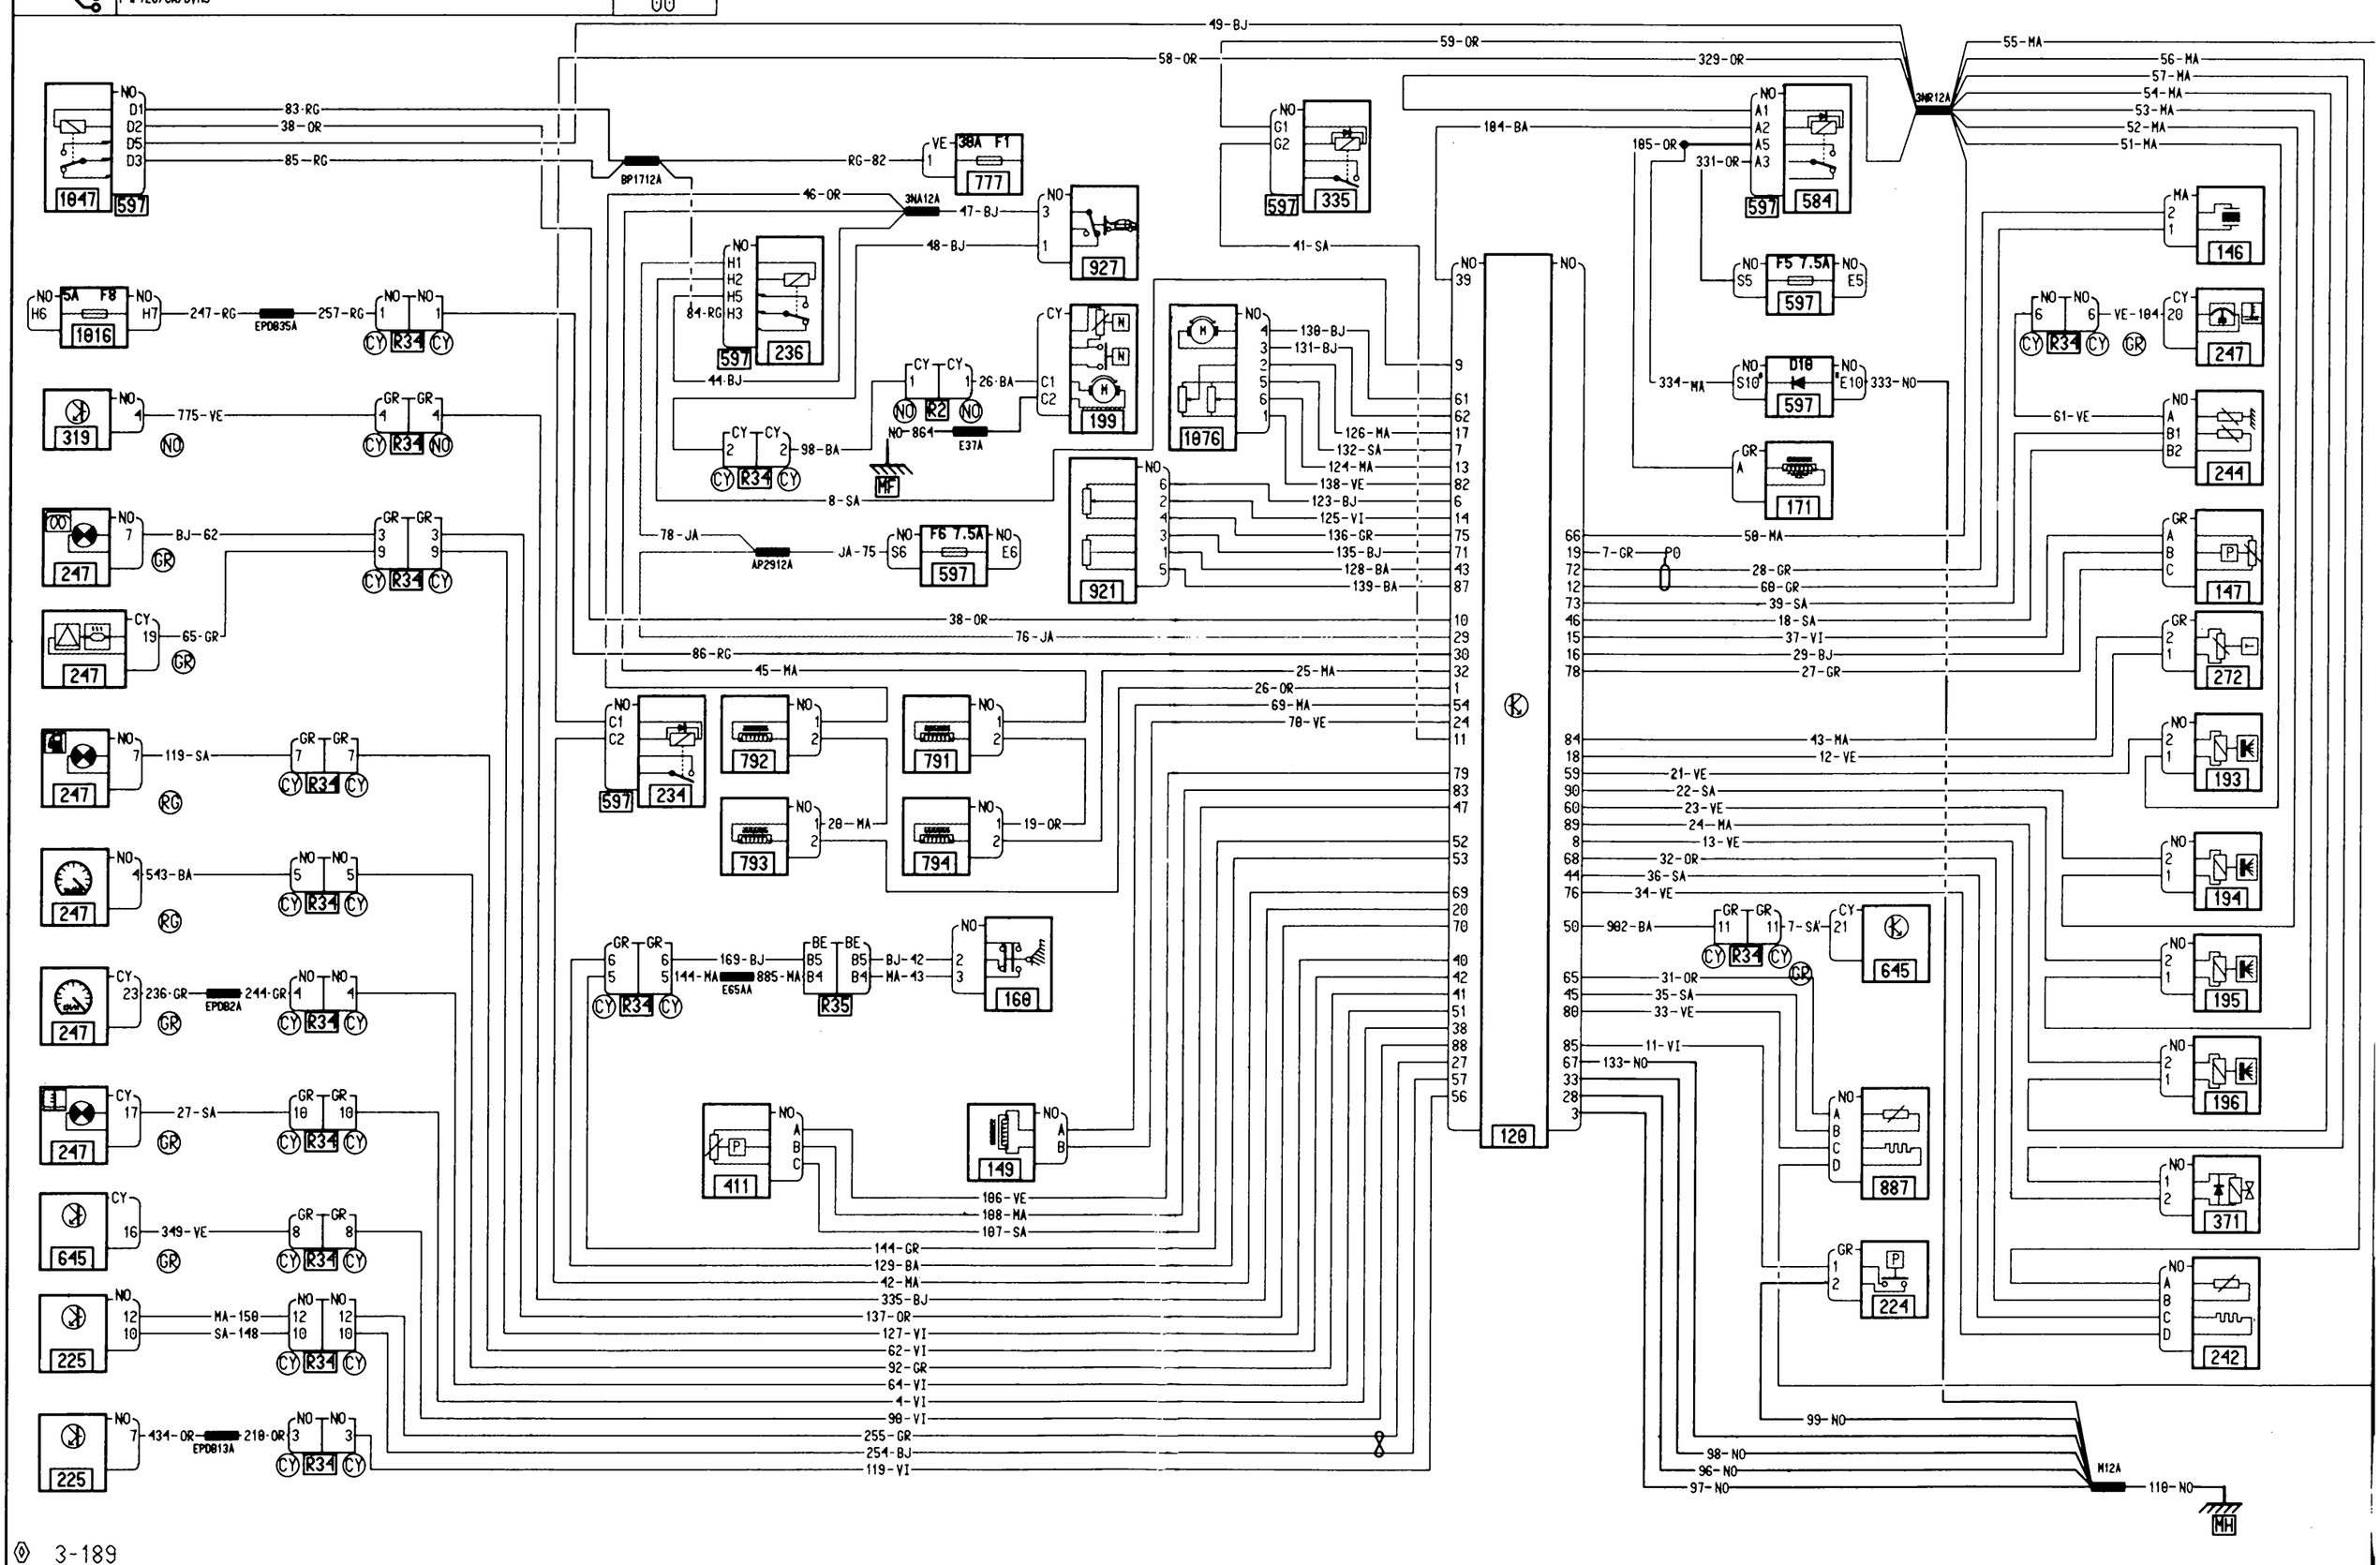

1047
597
83-RG
38-OR
85-RG
BP1712A
RG-82
38A F1
777
46-OR
3NA12A
47-BJ
48-BJ
927
84-RG
236
44-BJ
CY R2 NO
26-BA
NO-864
E37A
MF
C1
C2
199
98-BA
8-SA
78-JA
AP2912A
JA-75
F6 7.5A
S6
E6
921
1016
5A F8
H6
H7
247-RG
EPD835A
257-RG
R34
319
775-VE
247
BJ-62
65-GR
119-SA
543-BA
236-GR
EPD82A
244-GR
27-SA
645
349-VE
225
MA-150
SA-148
434-OR
EPD813A
218-OR
R35
597
335
41-SA
1076
138-BJ
131-BJ
126-MA
132-SA
124-MA
138-VE
123-BJ
125-VI
136-GR
135-BJ
128-BA
139-BJ
184-BA
185-OR
331-OR
584
F5 7.5A
S5
E5
D18
S10
E10
334-MA
333-NO
171
3MR12A
55-MA
56-MA
57-MA
54-MA
53-MA
52-MA
51-MA
146
247
244
147
272
193
194
195
196
371
242
61-VE
VE-104
38-OR
76-JA
86-RG
45-MA
25-MA
26-OR
69-MA
78-VE
19-OR
20-MA
792
791
793
794
234
169-BJ
144-MA
E65AA
885-MA
BJ-42
MA-43
160
R35
411
149
106-VE
108-MA
107-SA
144-GR
129-BA
42-MA
335-BJ
137-OR
127-VI
62-VI
92-GR
64-VI
4-VI
98-VI
255-GR
251-BJ
119-VI
120
50-MA
7-GR
P0
28-GR
60-GR
39-SA
18-SA
37-VI
29-BJ
27-GR
43-MA
12-VE
21-VE
22-SA
23-VE
24-MA
13-VE
32-OR
36-SA
34-VE
902-BA
7-SA
645
31-OR
35-SA
33-VE
11-VI
133-NO
887
224
99-NO
98-NO
96-NO
97-NO
M12A
110-NO
MH

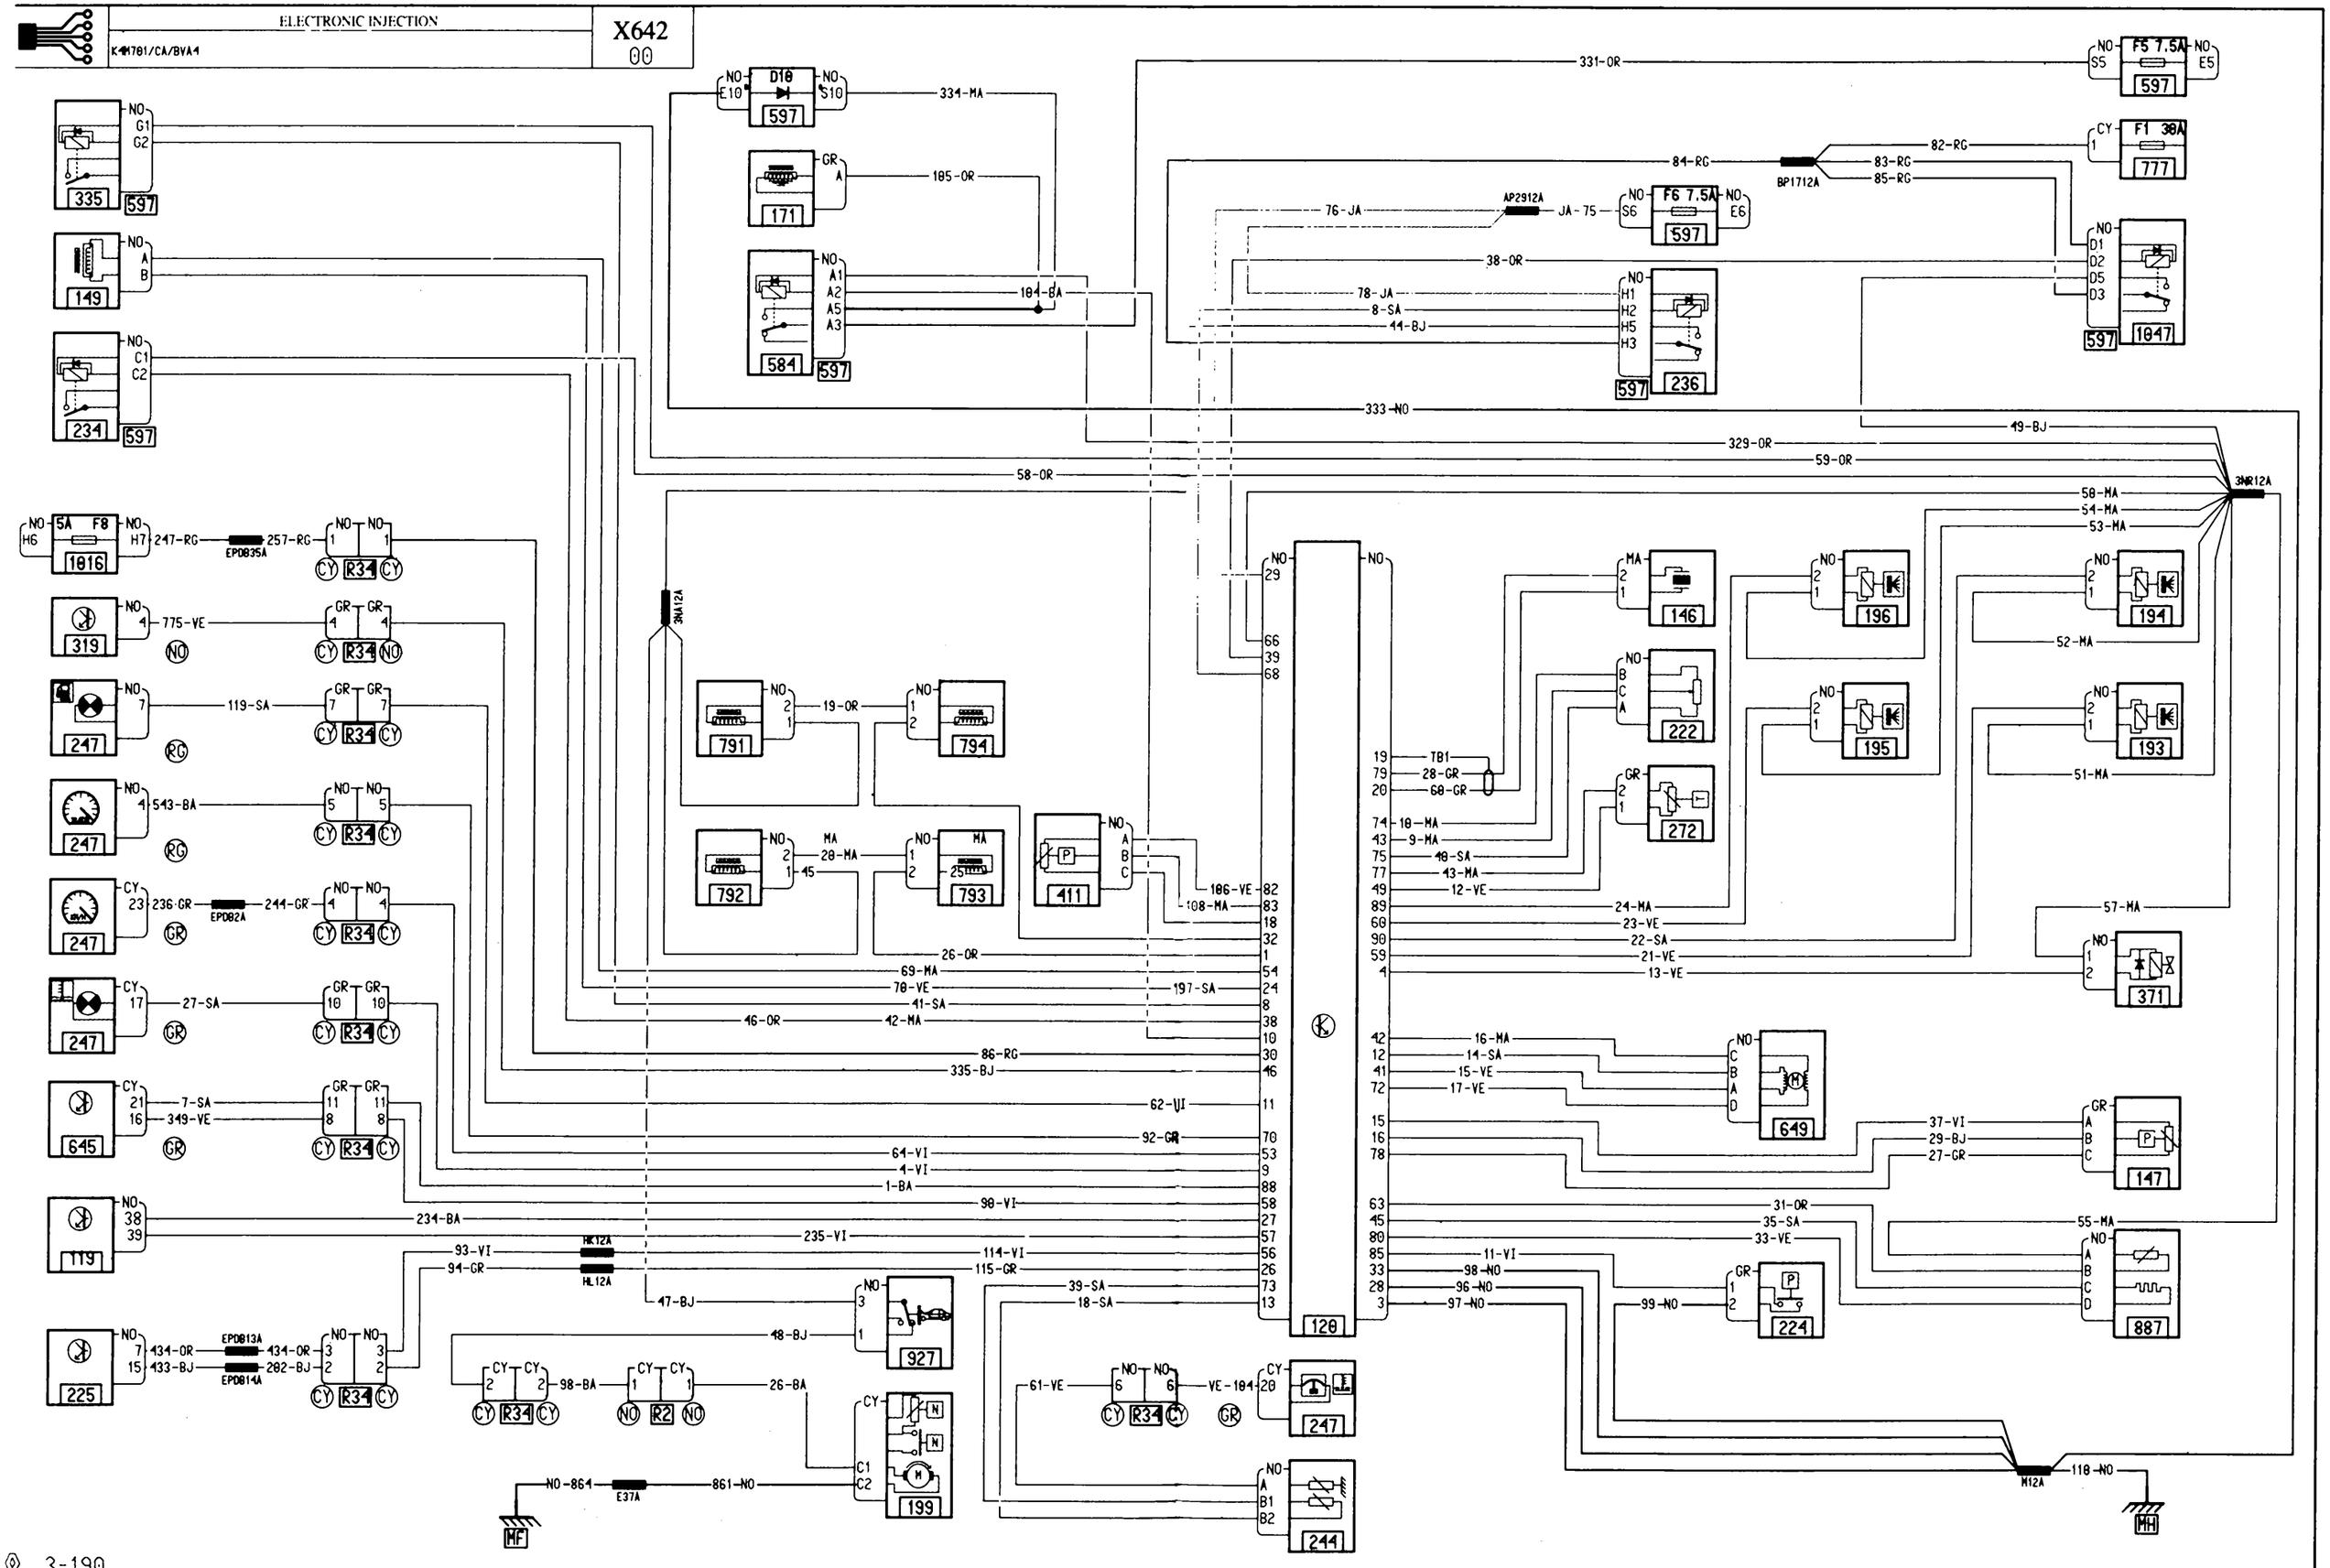

335
149
234
319
247
645
119
225
791
794
792
793
411
927
199
244
120
146
222
272
196
195
194
193
371
649
147
887
224
597
584
171
777
1047
236
1016
331-OR
84-RG
82-RG
83-RG
85-RG
76-JA
JA-75
38-OR
78-JA
8-SA
44-BJ
333-NO
19-BJ
329-OR
59-OR
58-OR
3NR12A
M12A
MF
MH
E37A
EP0835A
EP0813A
EP0814A
EP0802A
AP2912A
BP1712A
HK12A
HL12A

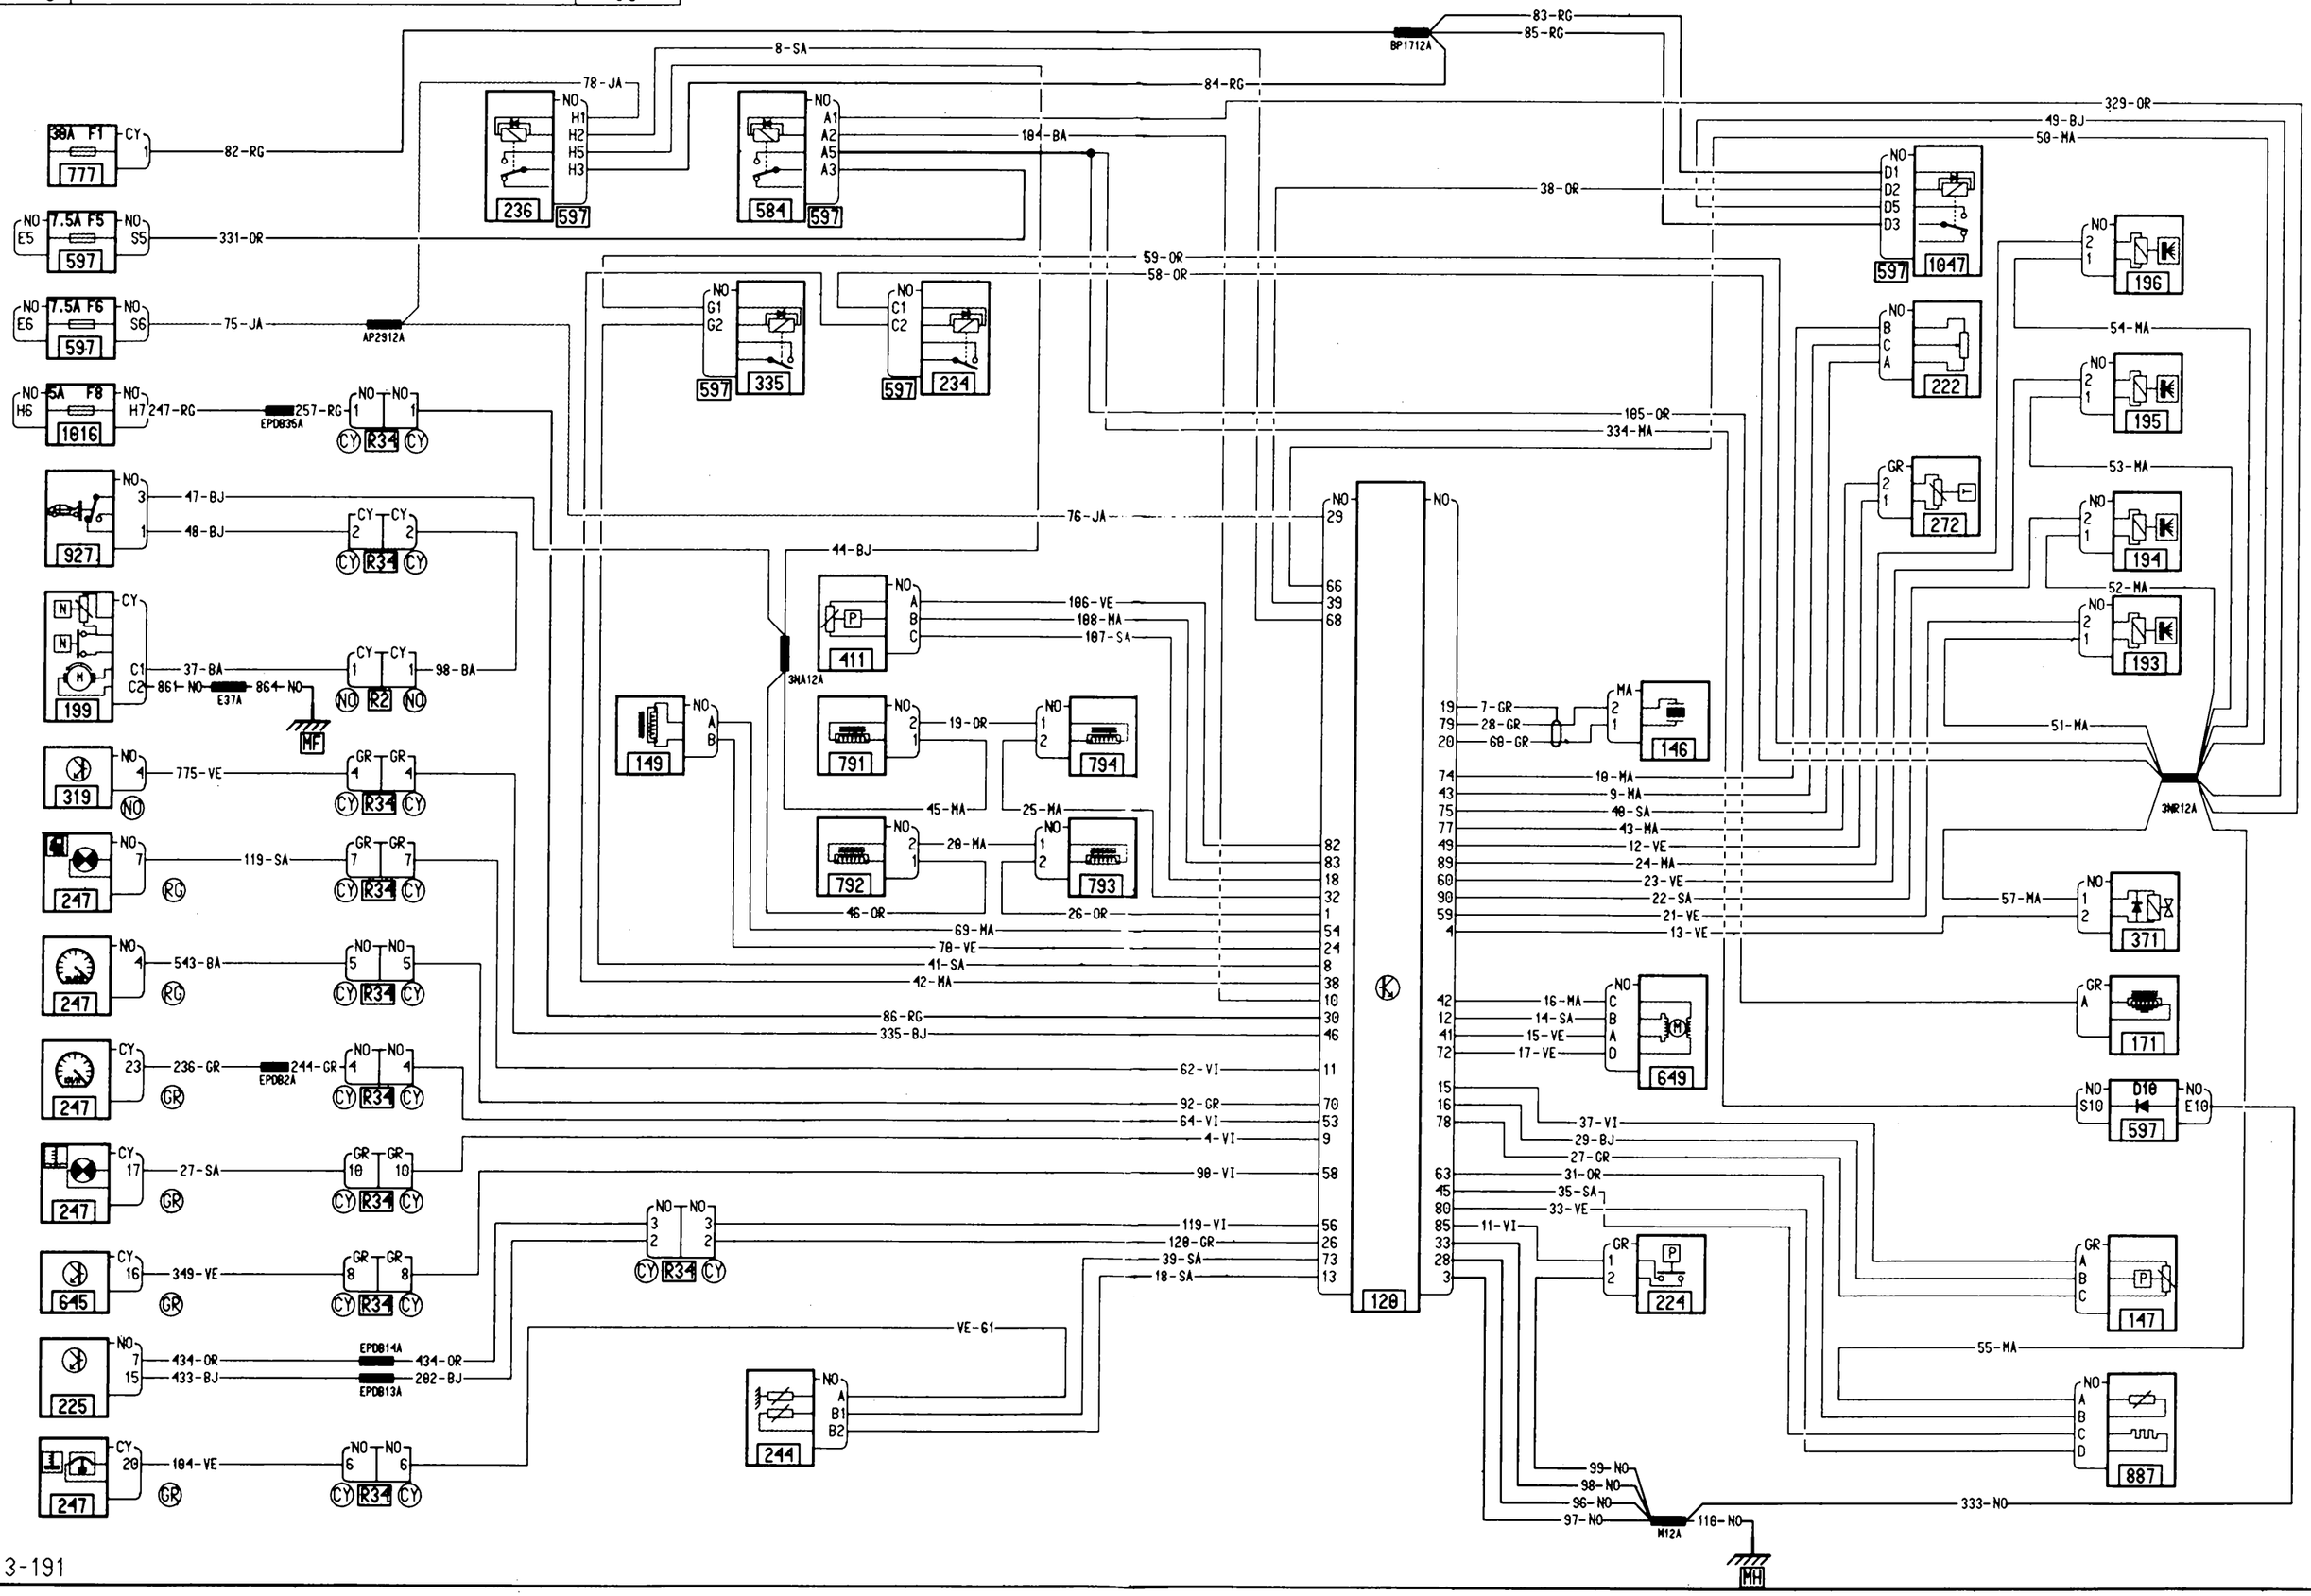

30A F1
777
82-RG
7.5A F5
597
331-OR
7.5A F6
597
75-JA
AP2912A
5A F8
1016
247-RG
257-RG
EP0835A
927
47-BJ
48-BJ
199
37-BA
861-NO
E37A
864-NO
98-BA
MF
319
775-VE
247
119-SA
543-BA
236-GR
244-GR
EP0832A
27-SA
645
349-VE
225
434-OR
433-BJ
EP0814A
202-BJ
EP0813A
184-VE
78-JA
236
597
8-SA
584
184-BA
84-RG
83-RG
85-RG
BP1712A
329-OR
49-BJ
50-MA
38-OR
59-OR
58-OR
335
234
76-JA
44-BJ
411
3MA12A
186-VE
188-MA
187-SA
149
791
19-OR
794
45-MA
25-MA
792
28-MA
793
46-OR
26-OR
69-MA
70-VE
41-SA
42-MA
86-RG
335-BJ
62-VI
92-GR
64-VI
4-VI
98-VI
119-VI
120-GR
39-SA
18-SA
VE-61
244
185-OR
334-MA
1047
222
272
196
195
194
193
54-MA
53-MA
52-MA
51-MA
3MR12A
146
7-GR
28-GR
68-GR
10-MA
9-MA
48-SA
43-MA
12-VE
24-MA
23-VE
22-SA
21-VE
13-VE
57-MA
371
171
649
16-MA
14-SA
15-VE
17-VE
D18
S10
E10
37-VI
29-BJ
27-GR
31-OR
35-SA
33-VE
11-VI
224
147
55-MA
887
99-NO
98-NO
96-NO
97-NO
M12A
118-NO
333-NO
MH
120

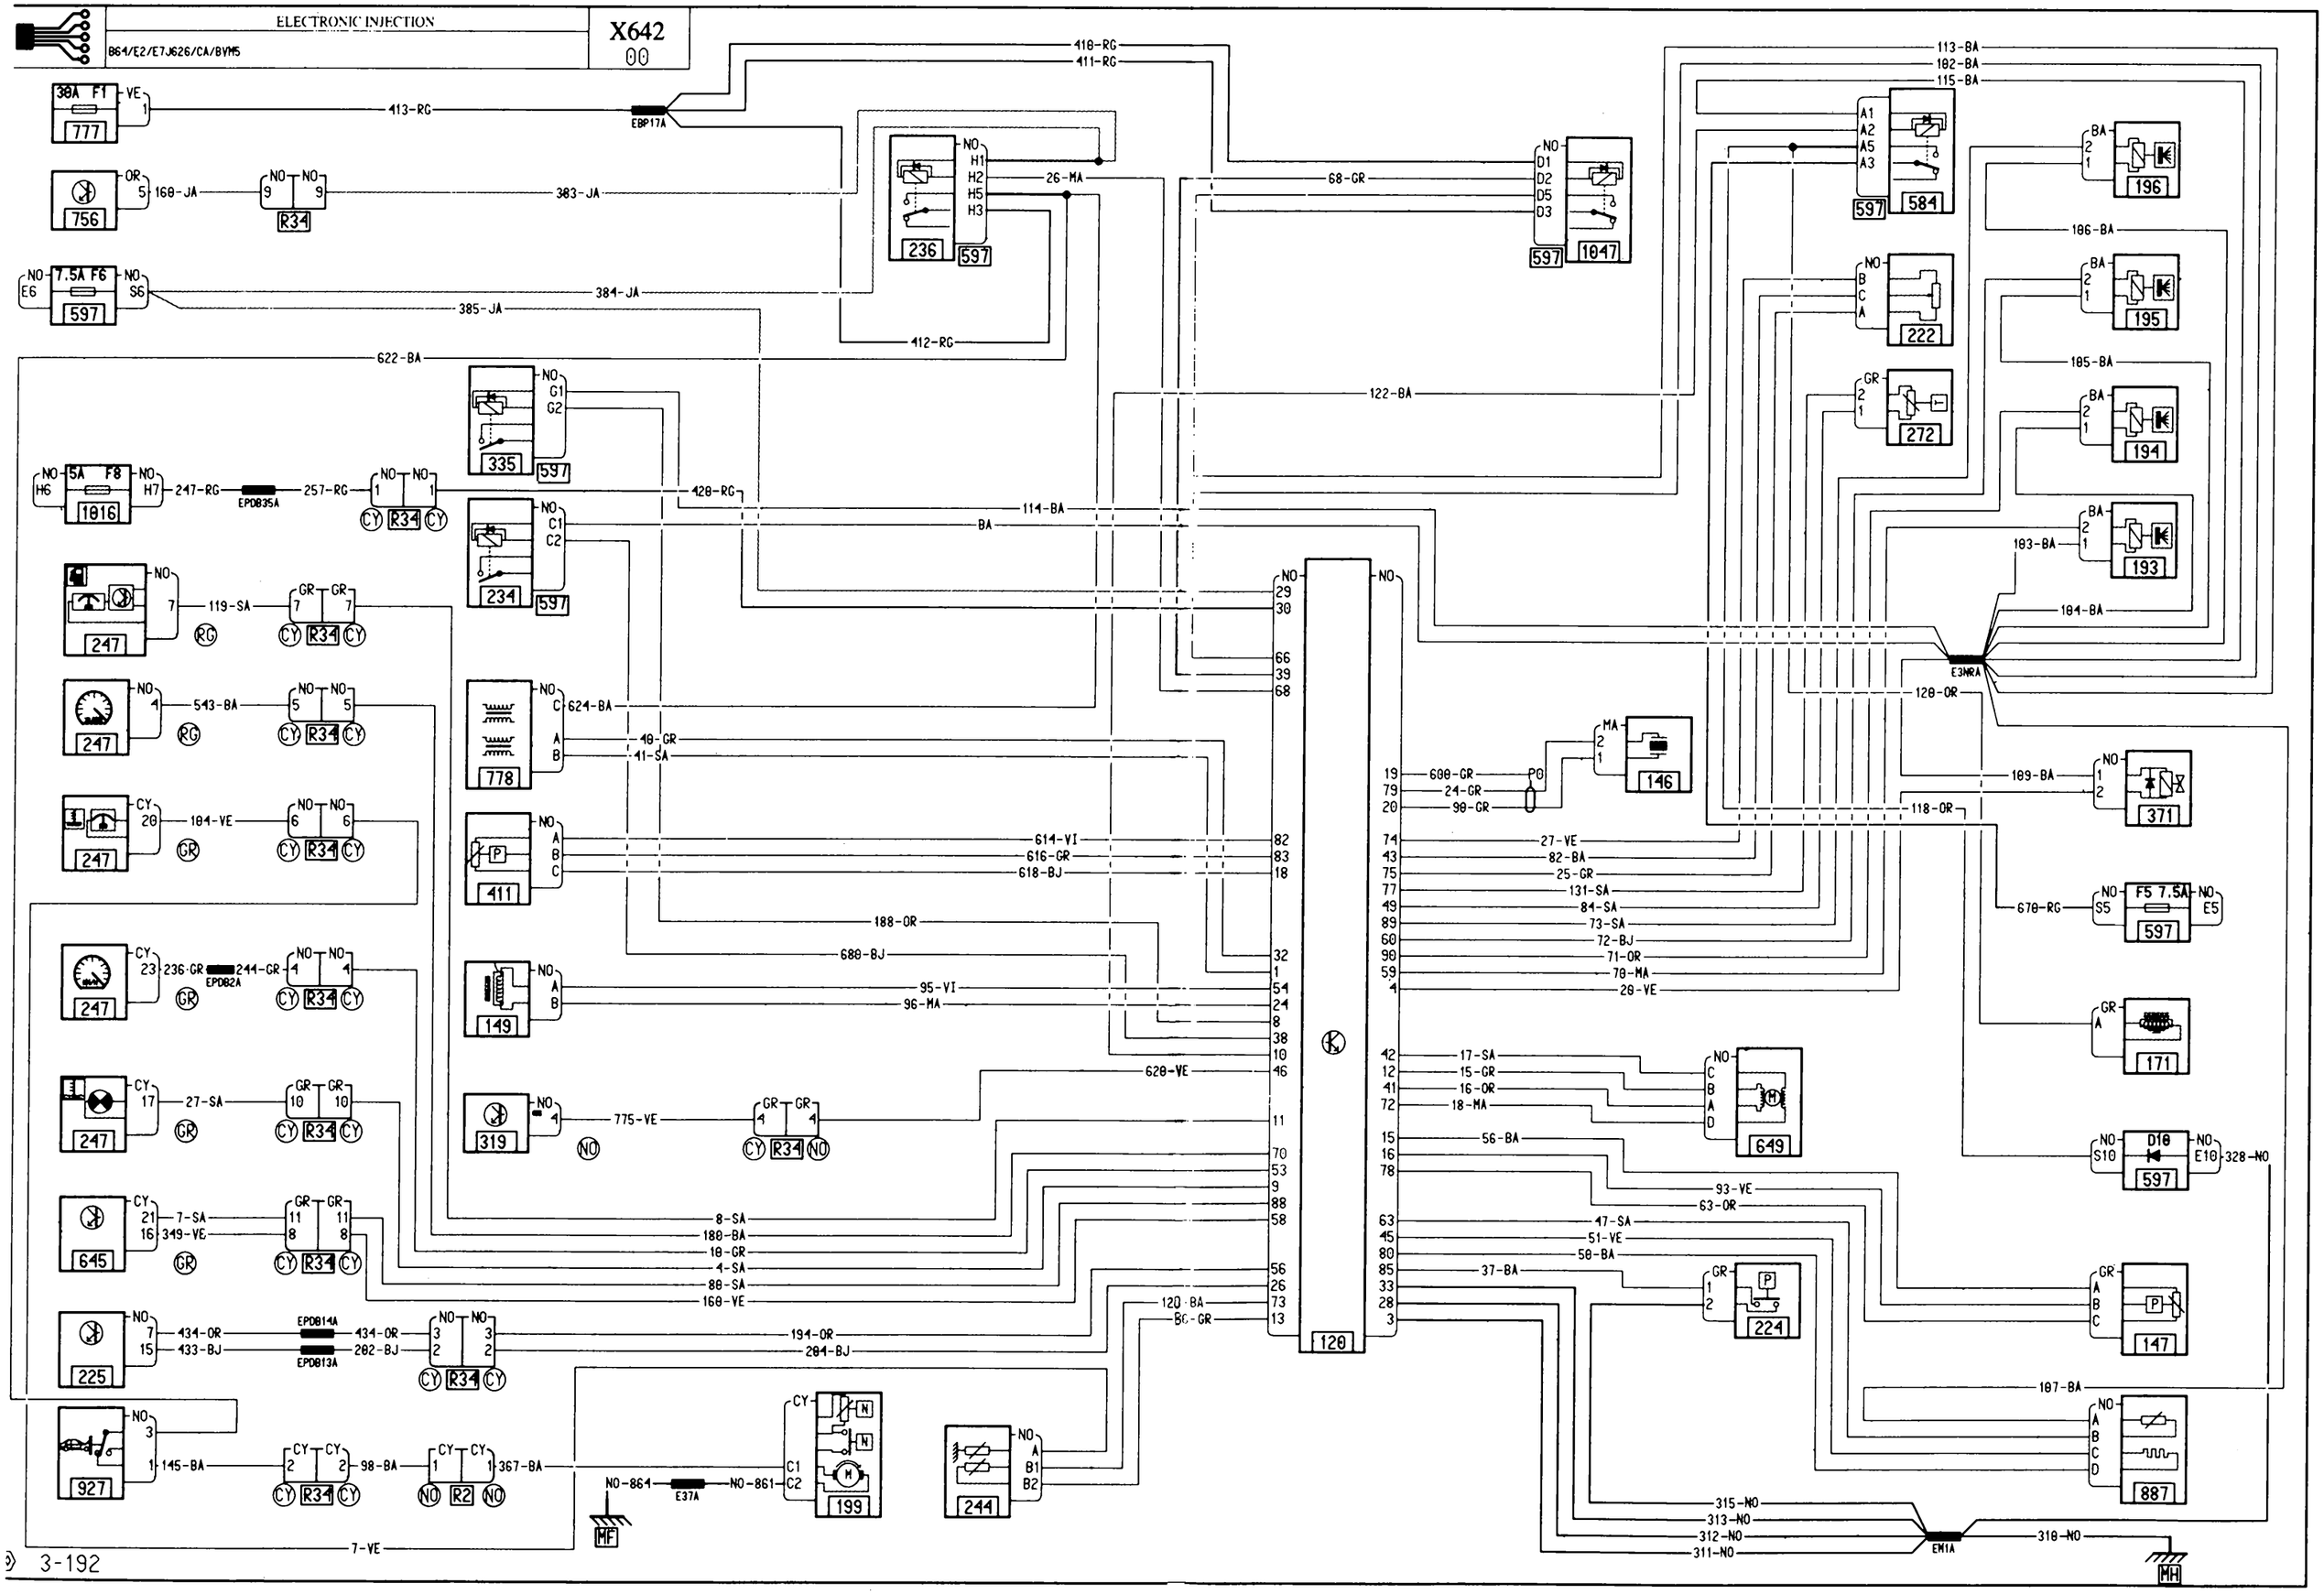

30A F1
777
413-RG
EBP17A
410-RG
411-RG
756
168-JA
R34
383-JA
236
597
26-MA
68-GR
1047
7.5A F6
384-JA
385-JA
622-BA
335
122-BA
5A F8
1016
247-RG
EPD835A
257-RG
428-RG
114-BA
BA
234
247
119-SA
543-BA
778
624-BA
48-GR
41-SA
104-VE
411
614-VI
616-GR
618-BJ
188-OR
680-BJ
149
95-VI
96-MA
620-VE
319
775-VE
27-SA
645
7-SA
349-VE
8-SA
180-BA
18-GR
4-SA
88-SA
160-VE
225
434-OR
433-BJ
EPD814A
EPD813A
282-BJ
194-OR
284-BJ
927
145-BA
98-BA
367-BA
NO-861
E37A
199
244
120-BA
BG-GR
120
7-VE
MF
584
222
272
196
195
194
193
146
600-GR
24-GR
90-GR
PO
27-VE
82-BA
25-GR
131-SA
84-SA
73-SA
72-BJ
71-OR
70-MA
20-VE
371
670-RG
F5 7.5A
171
649
17-SA
15-GR
16-OR
18-MA
56-BA
93-VE
63-OR
47-SA
51-VE
50-BA
37-BA
224
147
887
107-BA
315-NO
313-NO
312-NO
311-NO
E41A
310-NO
MH
113-BA
112-BA
115-BA
106-BA
105-BA
103-BA
104-BA
E3MRA
120-OR
109-BA
118-OR
D16
328-NO

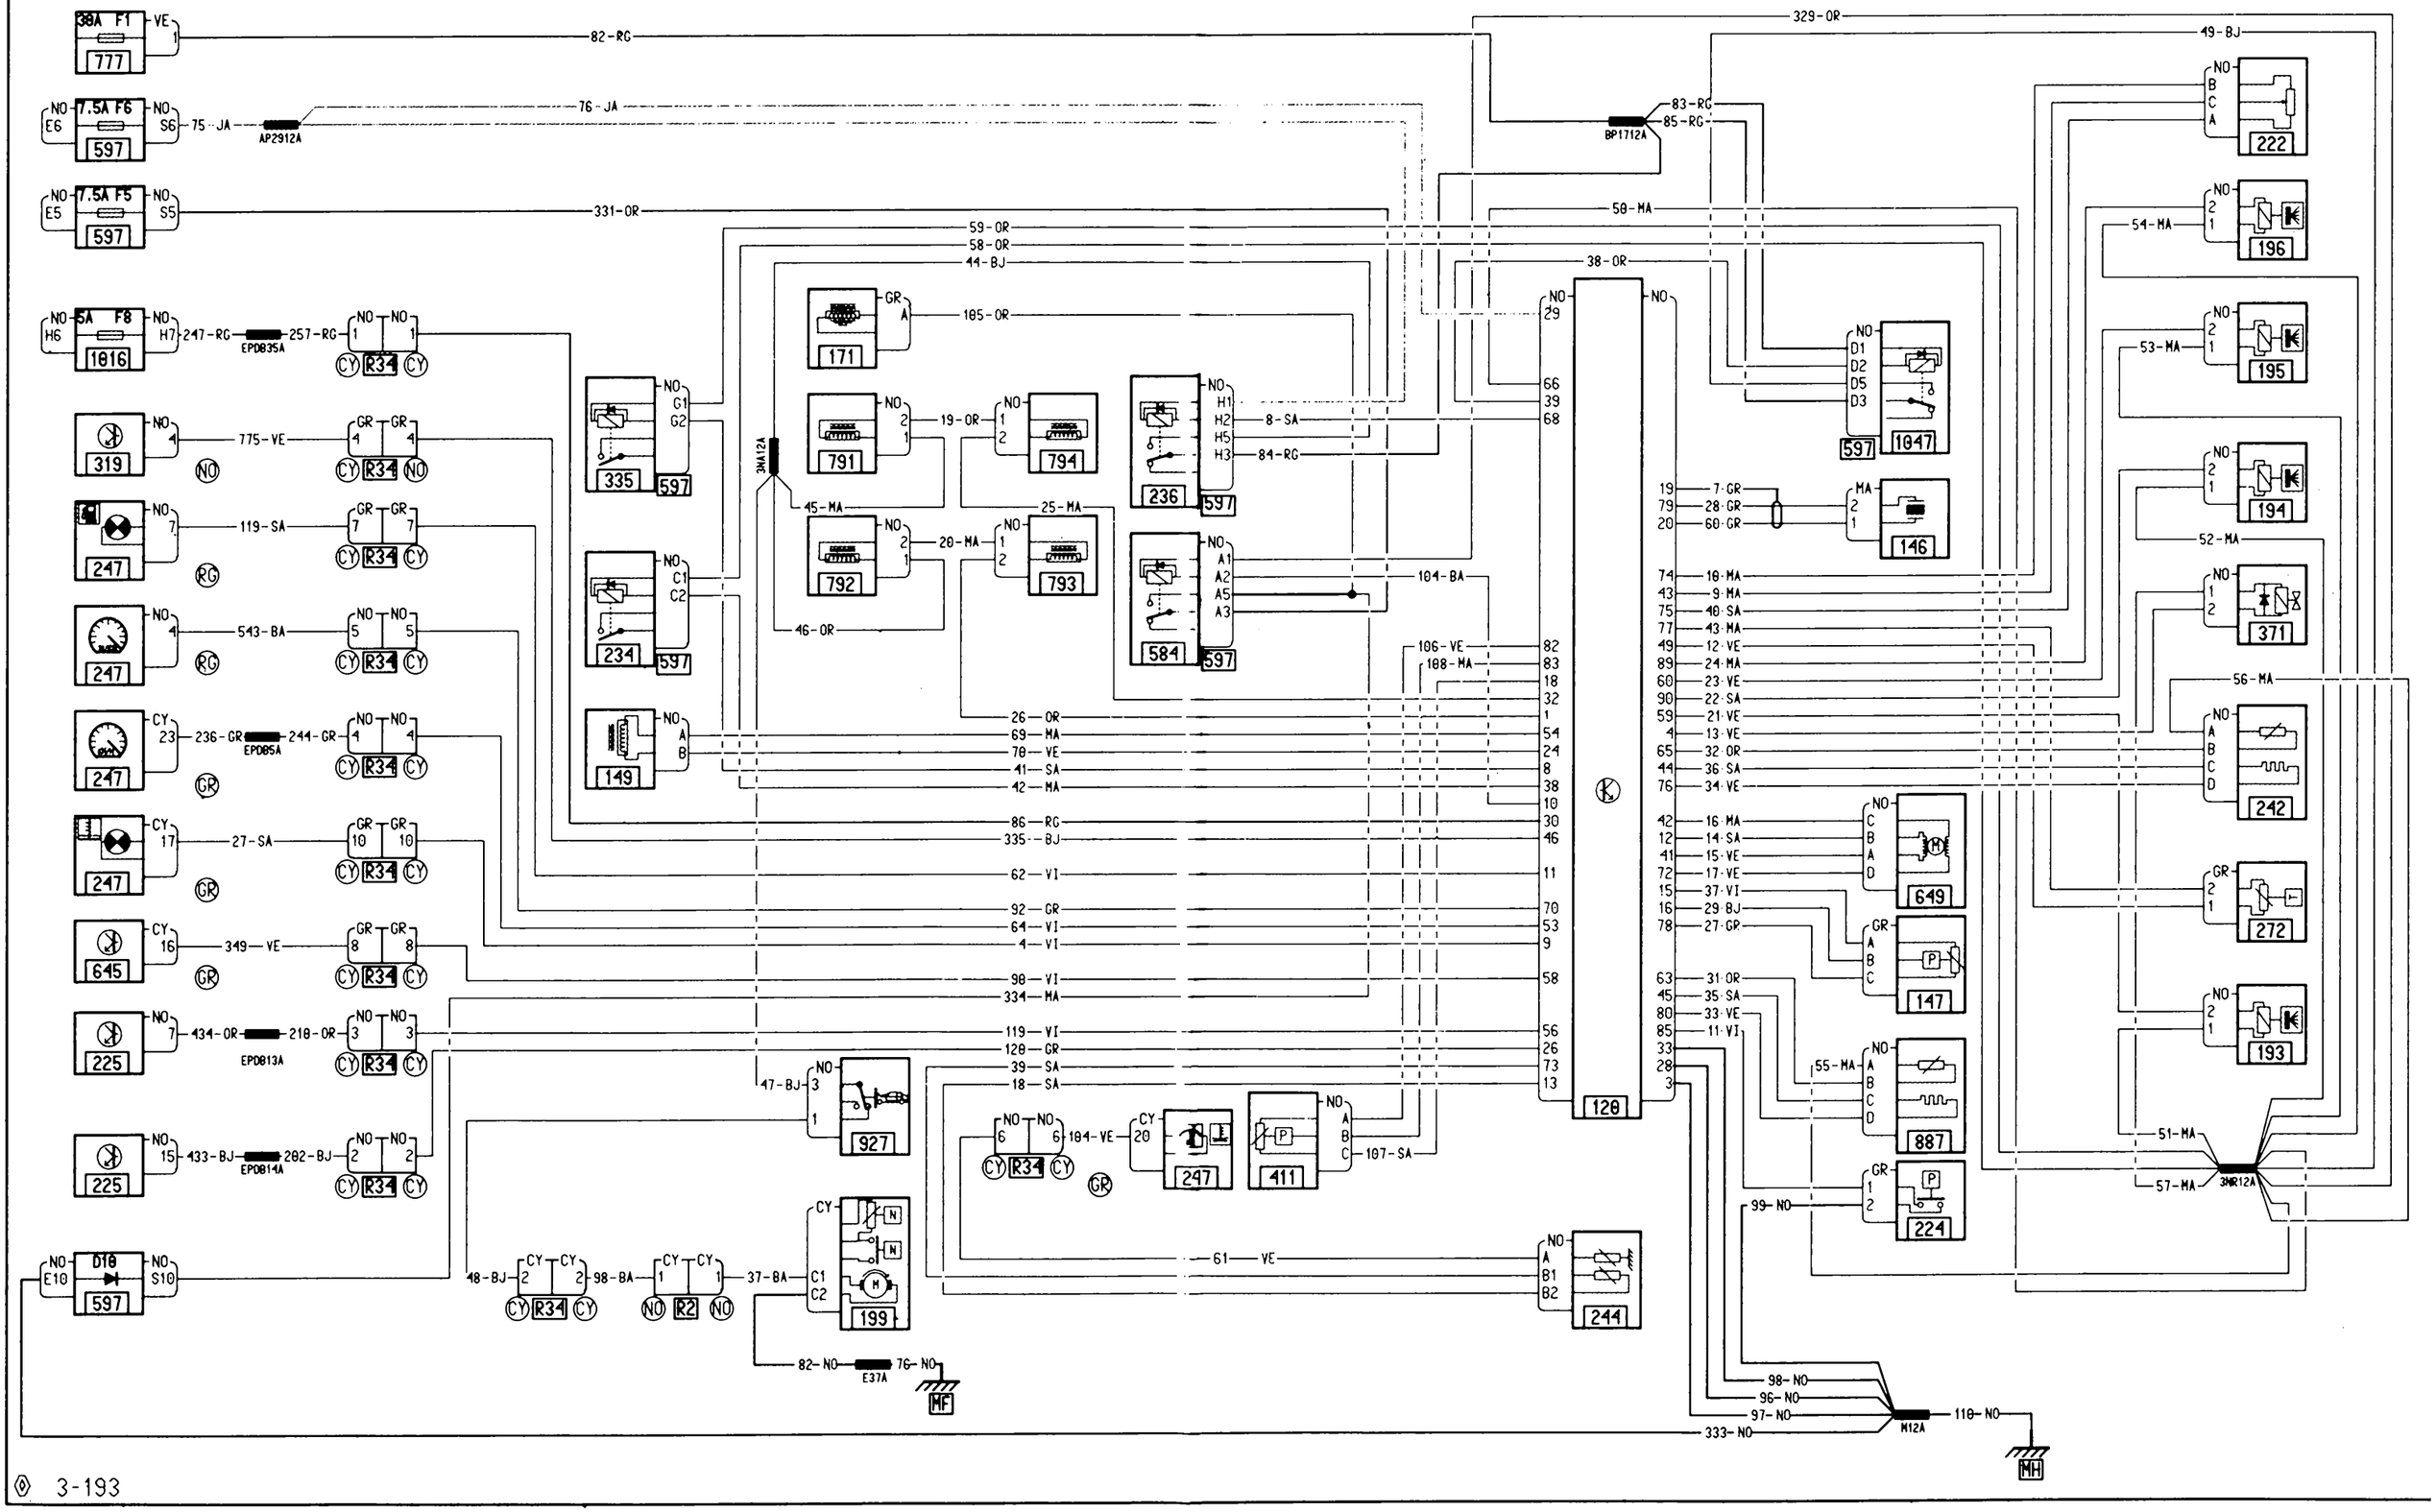

38A F1
777
82-RG
7.5A F6
597
75-JA
AP2912A
76-JA
7.5A F5
597
331-OR
5A F8
1016
247-RG
EPD835A
257-RG
R34
319
775-VE
247
119-SA
247
543-BA
247
236-GR
EPD85A
244-GR
247
27-SA
645
349-VE
225
434-OR
EPD813A
218-OR
225
433-BJ
EPD814A
282-BJ
D18
597
335
597
234
597
149
3MA12A
171
185-OR
791
19-OR
794
792
20-MA
793
45-MA
25-MA
46-OR
236
597
8-SA
84-RG
584
597
104-BA
927
47-BJ
199
48-BJ
98-BA
37-BA
82-NO
E37A
76-NO
MF
411
107-SA
184-VE
247
61-VE
244
BP1712A
83-RG
85-RG
329-OR
49-BJ
59-OR
58-OR
44-BJ
38-OR
50-MA
66
39
68
82
83
18
32
1
54
24
8
38
10
30
46
11
70
53
9
58
56
26
73
13
120
26-OR
69-MA
70-VE
41-SA
42-MA
86-RG
335-BJ
62-VI
92-GR
64-VI
4-VI
90-VI
334-MA
119-VI
120-GR
39-SA
18-SA
1047
597
146
19-7-GR
79-28-GR
20-60-GR
74-10-MA
43-9-MA
75-40-SA
77-43-MA
49-12-VE
89-24-MA
60-23-VE
90-22-SA
59-21-VE
4-13-VE
65-32-OR
44-36-SA
76-34-VE
222
196
195
194
371
272
193
242
649
147
887
224
42-16-MA
12-14-SA
41-15-VE
72-17-VE
15-37-VI
16-29-BJ
78-27-GR
63-31-OR
45-35-SA
80-33-VE
85-11-VI
33
28
3
54-MA
53-MA
52-MA
56-MA
55-MA
51-MA
57-MA
3MR12A
99-NO
98-NO
96-NO
97-NO
333-NO
M12A
110-NO
MH

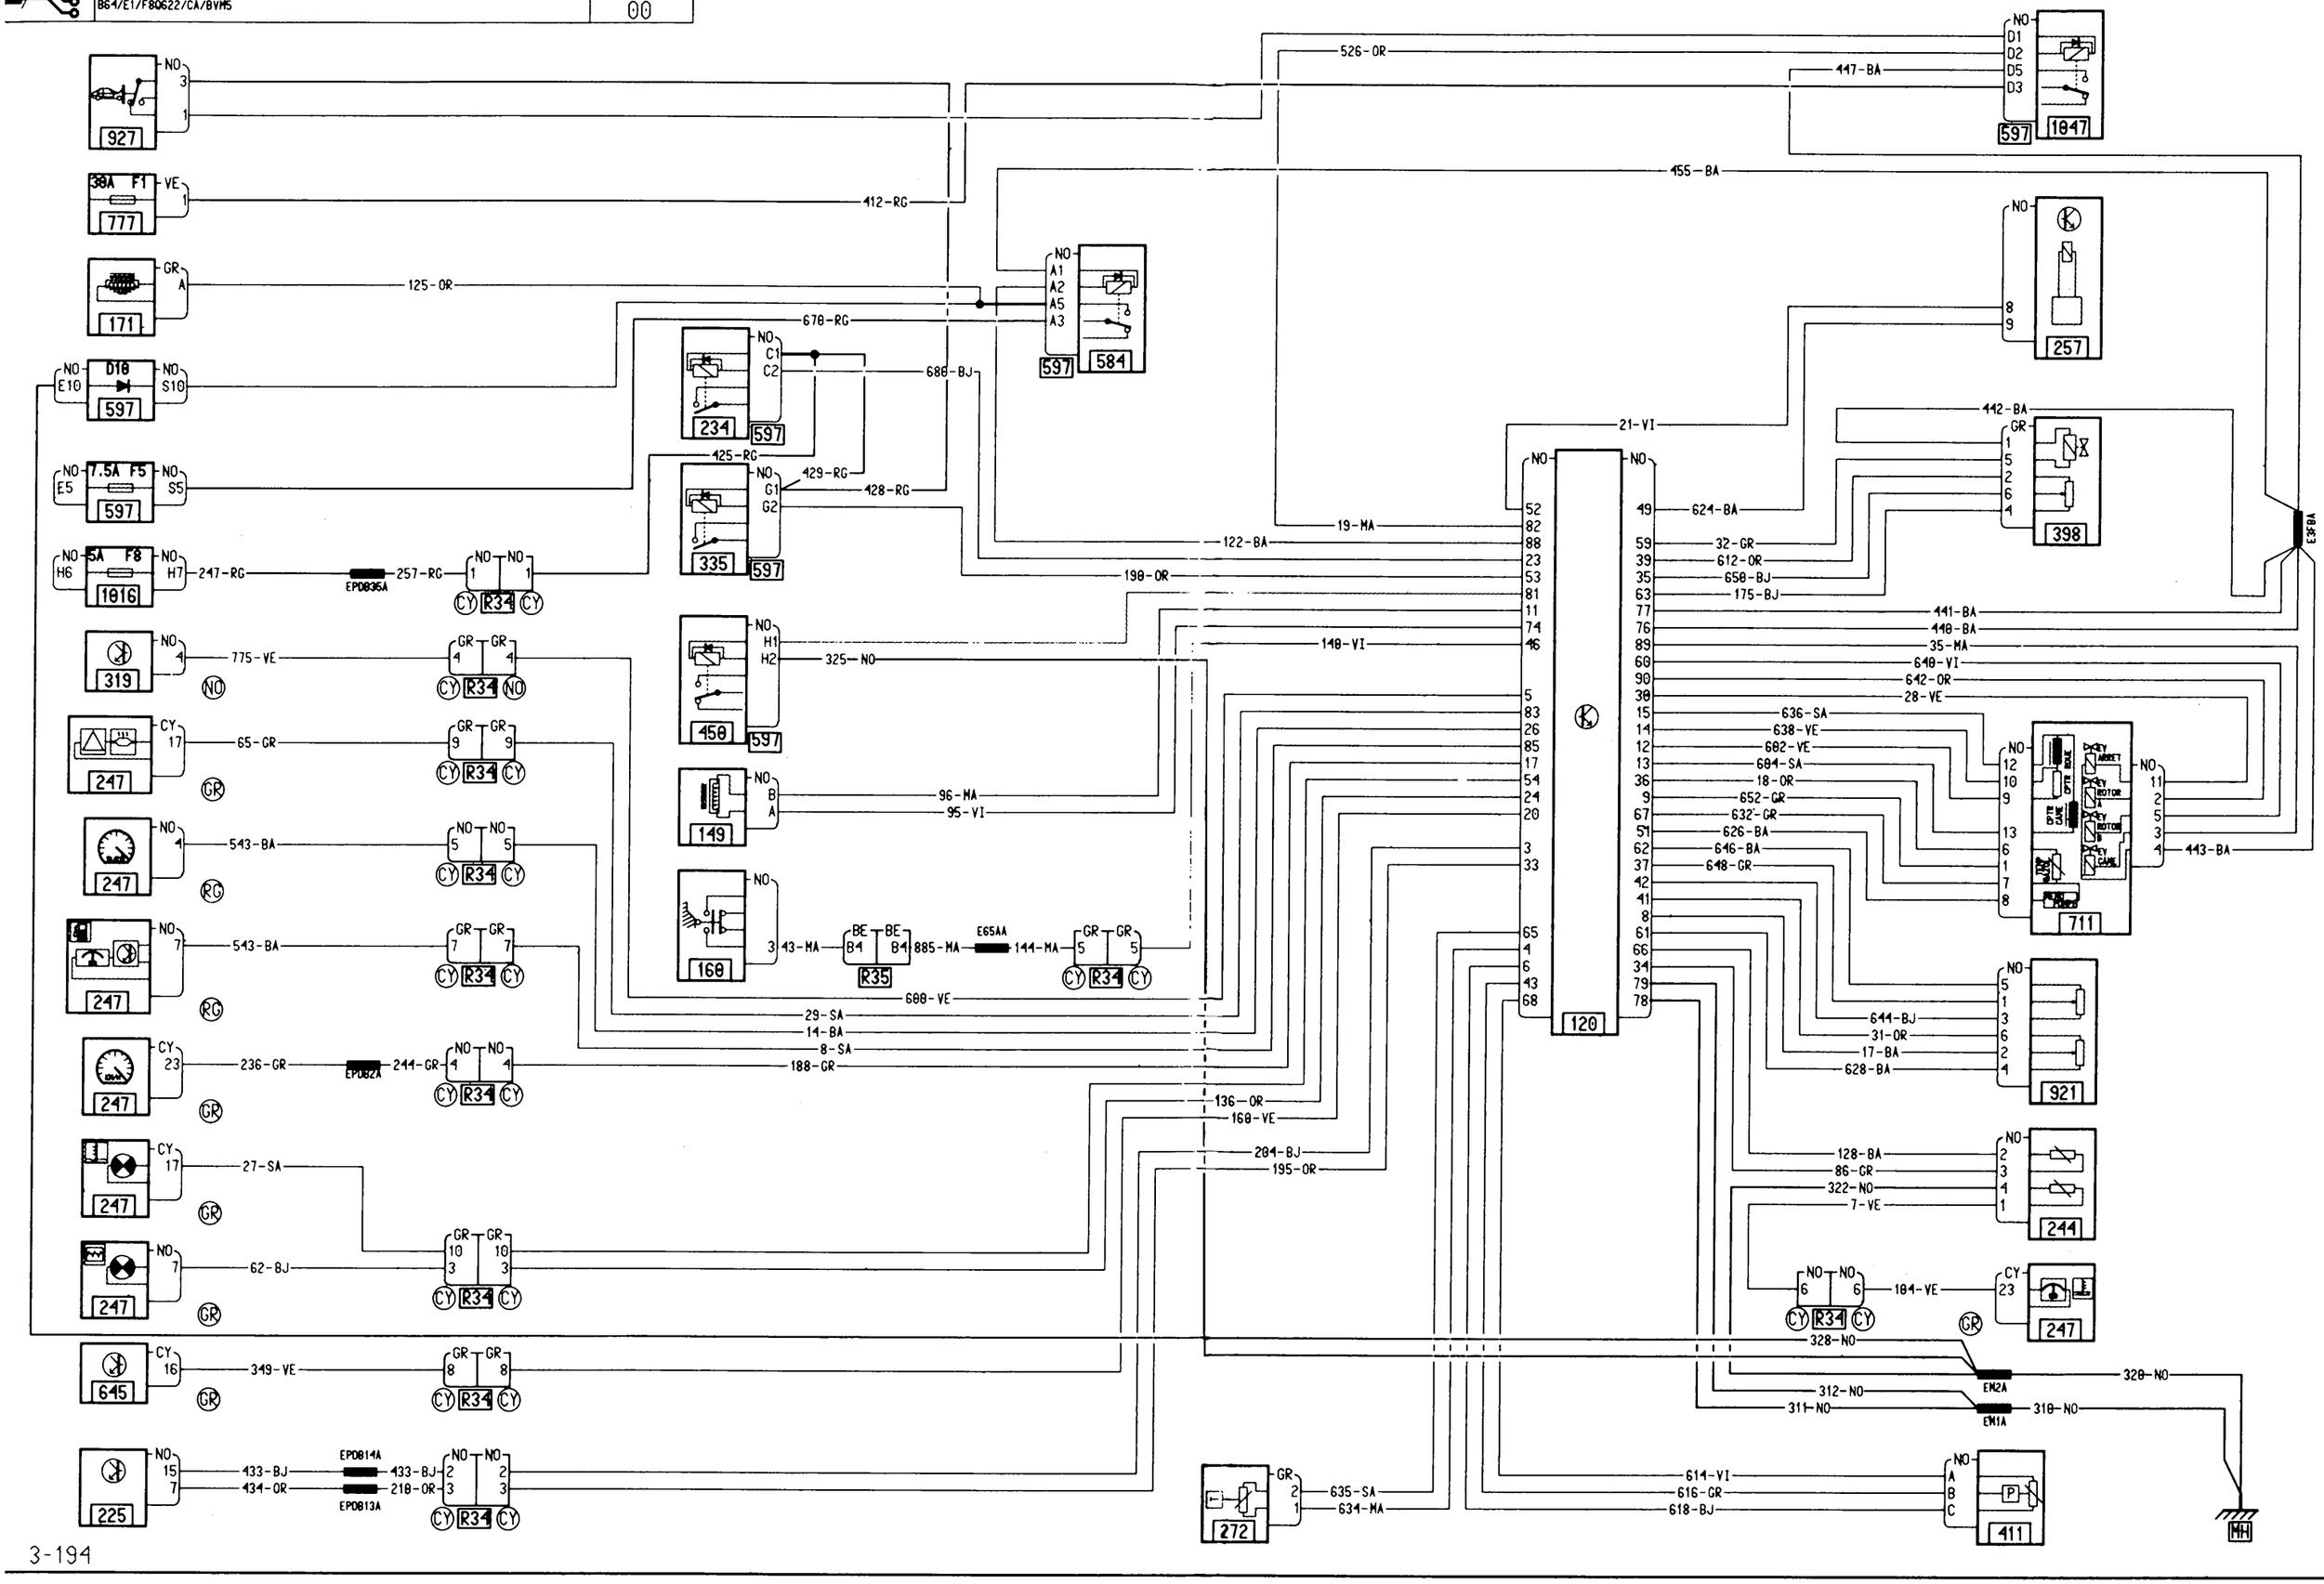

927
777
171
597
584
234
335
450
149
160
1016
319
247
645
225
272
120
1047
257
398
711
921
244
411
R34
R35
EM2A
EM1A
MH
526-OR
447-BA
155-BA
412-RG
125-OR
678-RG
686-BJ
425-RG
429-RG
428-RG
122-BA
19-MA
198-OR
148-VI
325-NO
96-MA
95-VI
247-RG
257-RG
EP0836A
775-VE
65-GR
543-BA
543-BA
236-GR
EP0824A
244-GR
188-GR
27-SA
62-BJ
349-VE
433-BJ
434-OR
EP0814A
433-BJ
218-OR
EP0813A
43-MA
885-MA
E65AA
144-MA
600-VE
29-SA
14-BA
8-SA
136-OR
160-VE
204-BJ
195-OR
21-VI
442-BA
624-BA
32-GR
612-OR
650-BJ
175-BJ
441-BA
440-BA
35-MA
640-VI
642-OR
28-VE
636-SA
638-VE
602-VE
604-SA
18-OR
652-GR
632-GR
626-BA
646-BA
648-GR
644-BJ
31-OR
17-BA
628-BA
128-BA
86-GR
322-NO
7-VE
184-VE
328-NO
312-NO
311-NO
320-NO
310-NO
635-SA
634-MA
614-VI
616-GR
618-BJ
443-BA

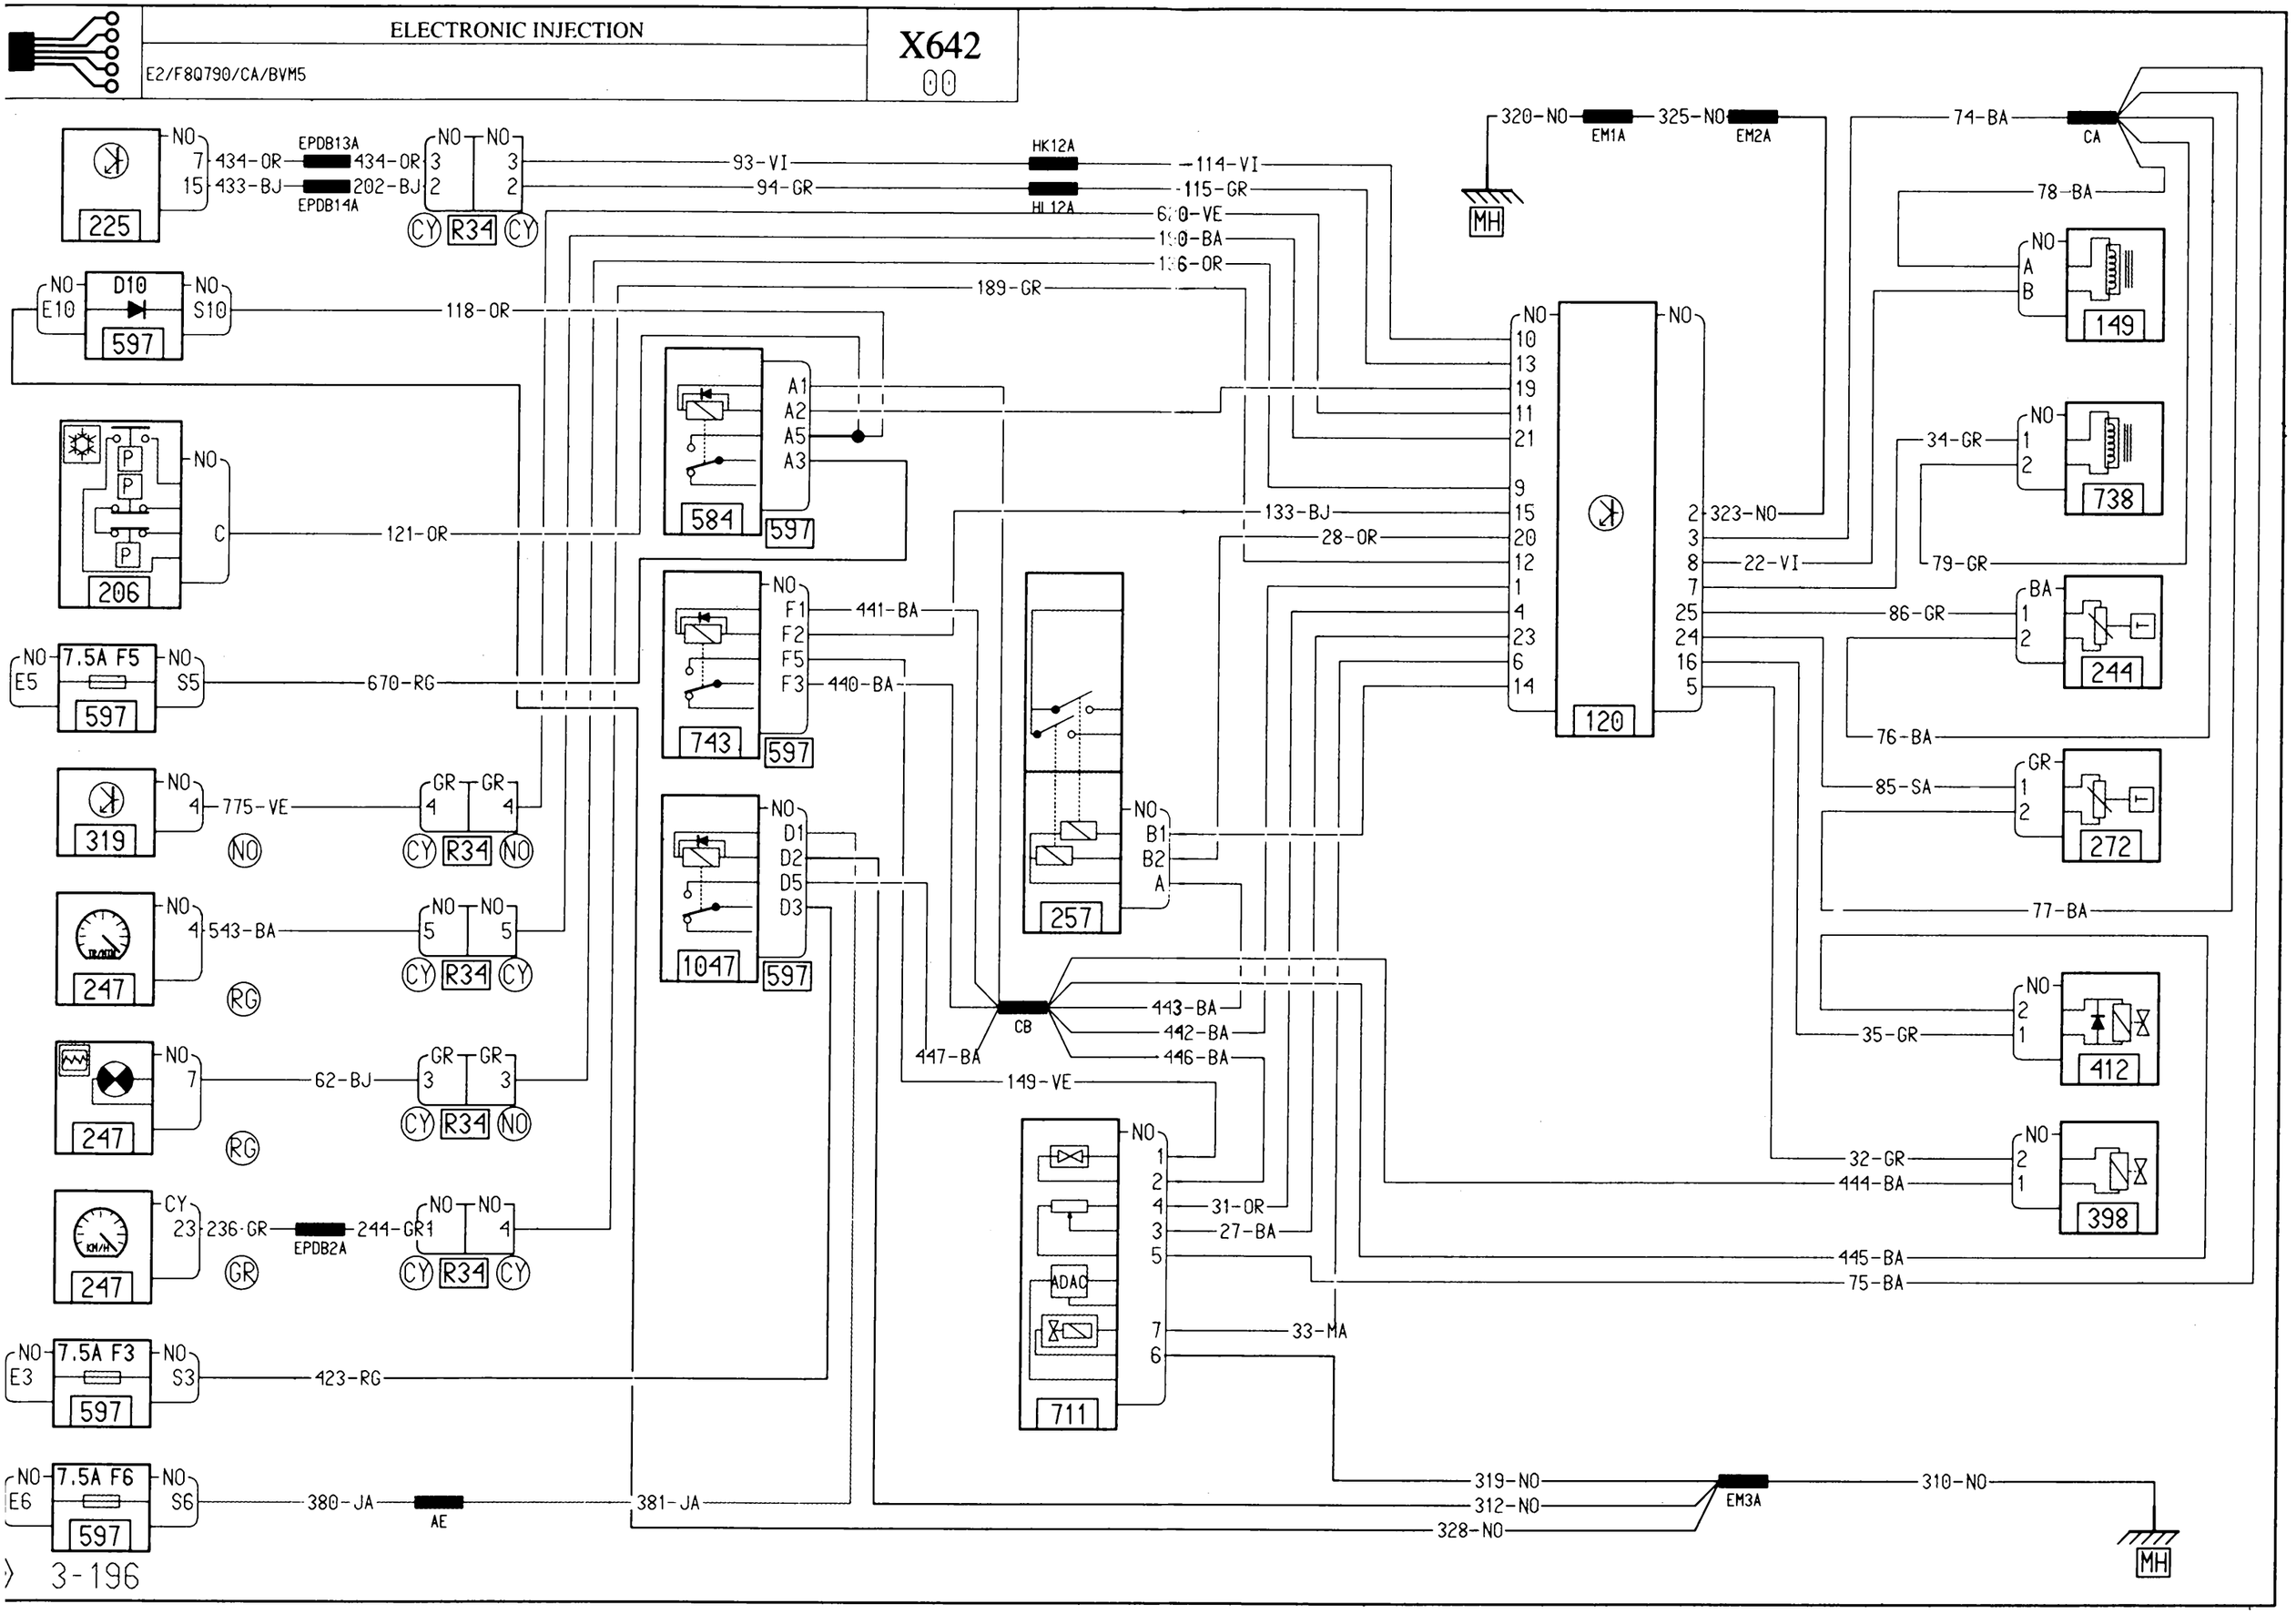

225
NO 7 434-OR EPDB13A 434-OR NO 3 NO 3
15 433-BJ EPDB14A 202-BJ 2 2
CY R34 CY
93-VI HK12A 114-VI
94-GR HL12A 115-GR
670-VE
190-BA
136-OR
189-GR
320-NO EM1A 325-NO EM2A
MH
74-BA CA
78-BA
NO E10 D10 NO S10
597
118-OR
149
NO A B
NO 10 13 19 11 21 9 15 20 12 1 4 23 6 14
NO 2 3 8 7 25 24 16 5
120
323-NO
22-VI
34-GR
738
79-GR
133-BJ
28-OR
206
P P P
NO C
121-OR
584
A1 A2 A5 A3
597
NO E5 7.5A F5 NO S5
597
670-RG
743
NO F1 F2 F5 F3
441-BA
440-BA
597
86-GR
244
BA 1 2
76-BA
85-SA
272
GR 1 2
77-BA
319
NO 4
775-VE
GR 4 GR 4
CY R34 NO
NO
247
NO 4
543-BA
NO 5 NO 5
CY R34 CY
RG
1047
NO D1 D2 D5 D3
597
257
NO B1 B2 A
CB
443-BA
442-BA
446-BA
447-BA
149-VE
35-GR
412
NO 2 1
247
NO 7
62-BJ
GR 3 GR 3
CY R34 NO
RG
32-GR
444-BA
398
NO 2 1
247
CY 23
236-GR EPDB2A 244-GR
NO 1 NO 4
CY R34 CY
GR
711
NO 1 2 4 3 5 7 6
ADAC
31-OR
27-BA
445-BA
75-BA
33-MA
NO E3 7.5A F3 NO S3
597
423-RG
NO E6 7.5A F6 NO S6
597
380-JA AE
381-JA
319-NO
312-NO
328-NO
EM3A
310-NO
MH

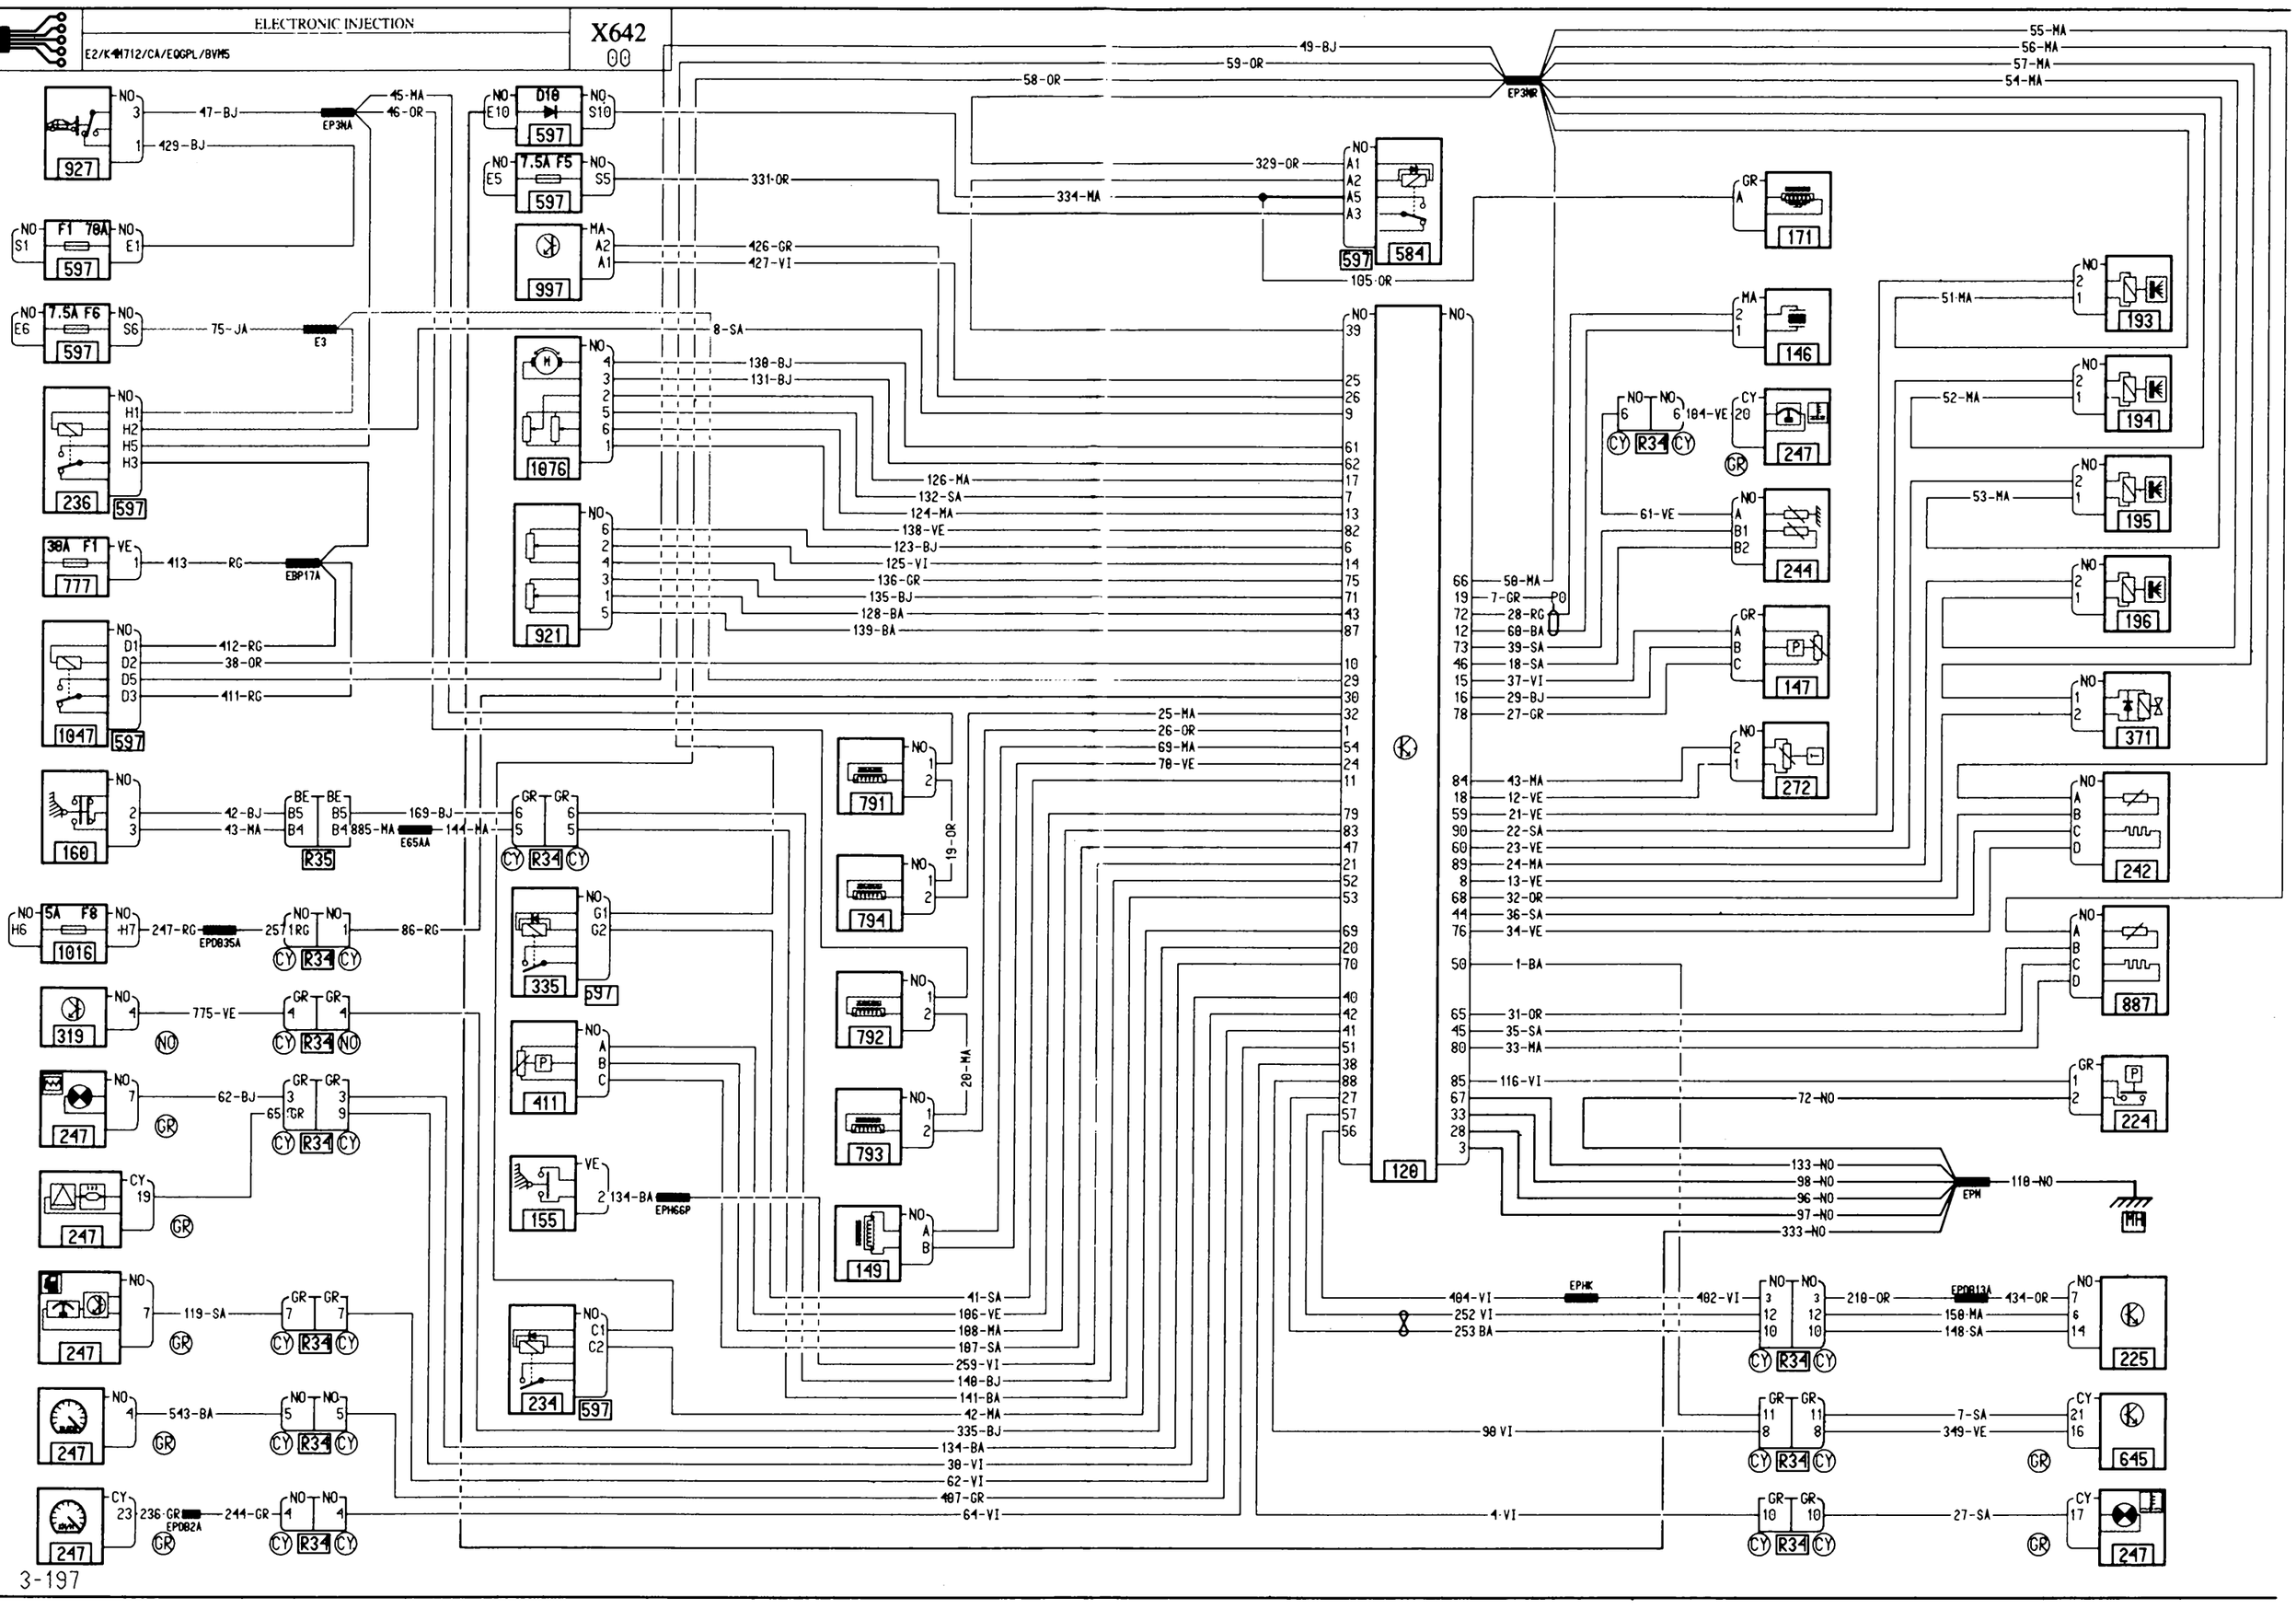

927
597
F1 70A
E1
7.5A F6
E6
E3
236
777
38A F1
EBP17A
1047
160
R35
E65AA
1016
EP0835A
319
247
155
234
335
411
997
1076
921
791
792
793
794
149
120
EP3NA
EP3NR
EPHK
EPM
EP0813A
EP0824A
D18
7.5A F5
F8
171
146
147
244
272
242
887
224
193
194
195
196
371
225
645
R34
R36
R37
R38
R39
R40
R41
R42
R43
R44
R45
R46
R47
R48
R49
R50
R51
R52
R53
R54
R55
R56
R57
R58
R59
R60
R61
R62
R63
R64
R65
R66
R67
R68
R69
R70
R71
R72
R73
R74
R75

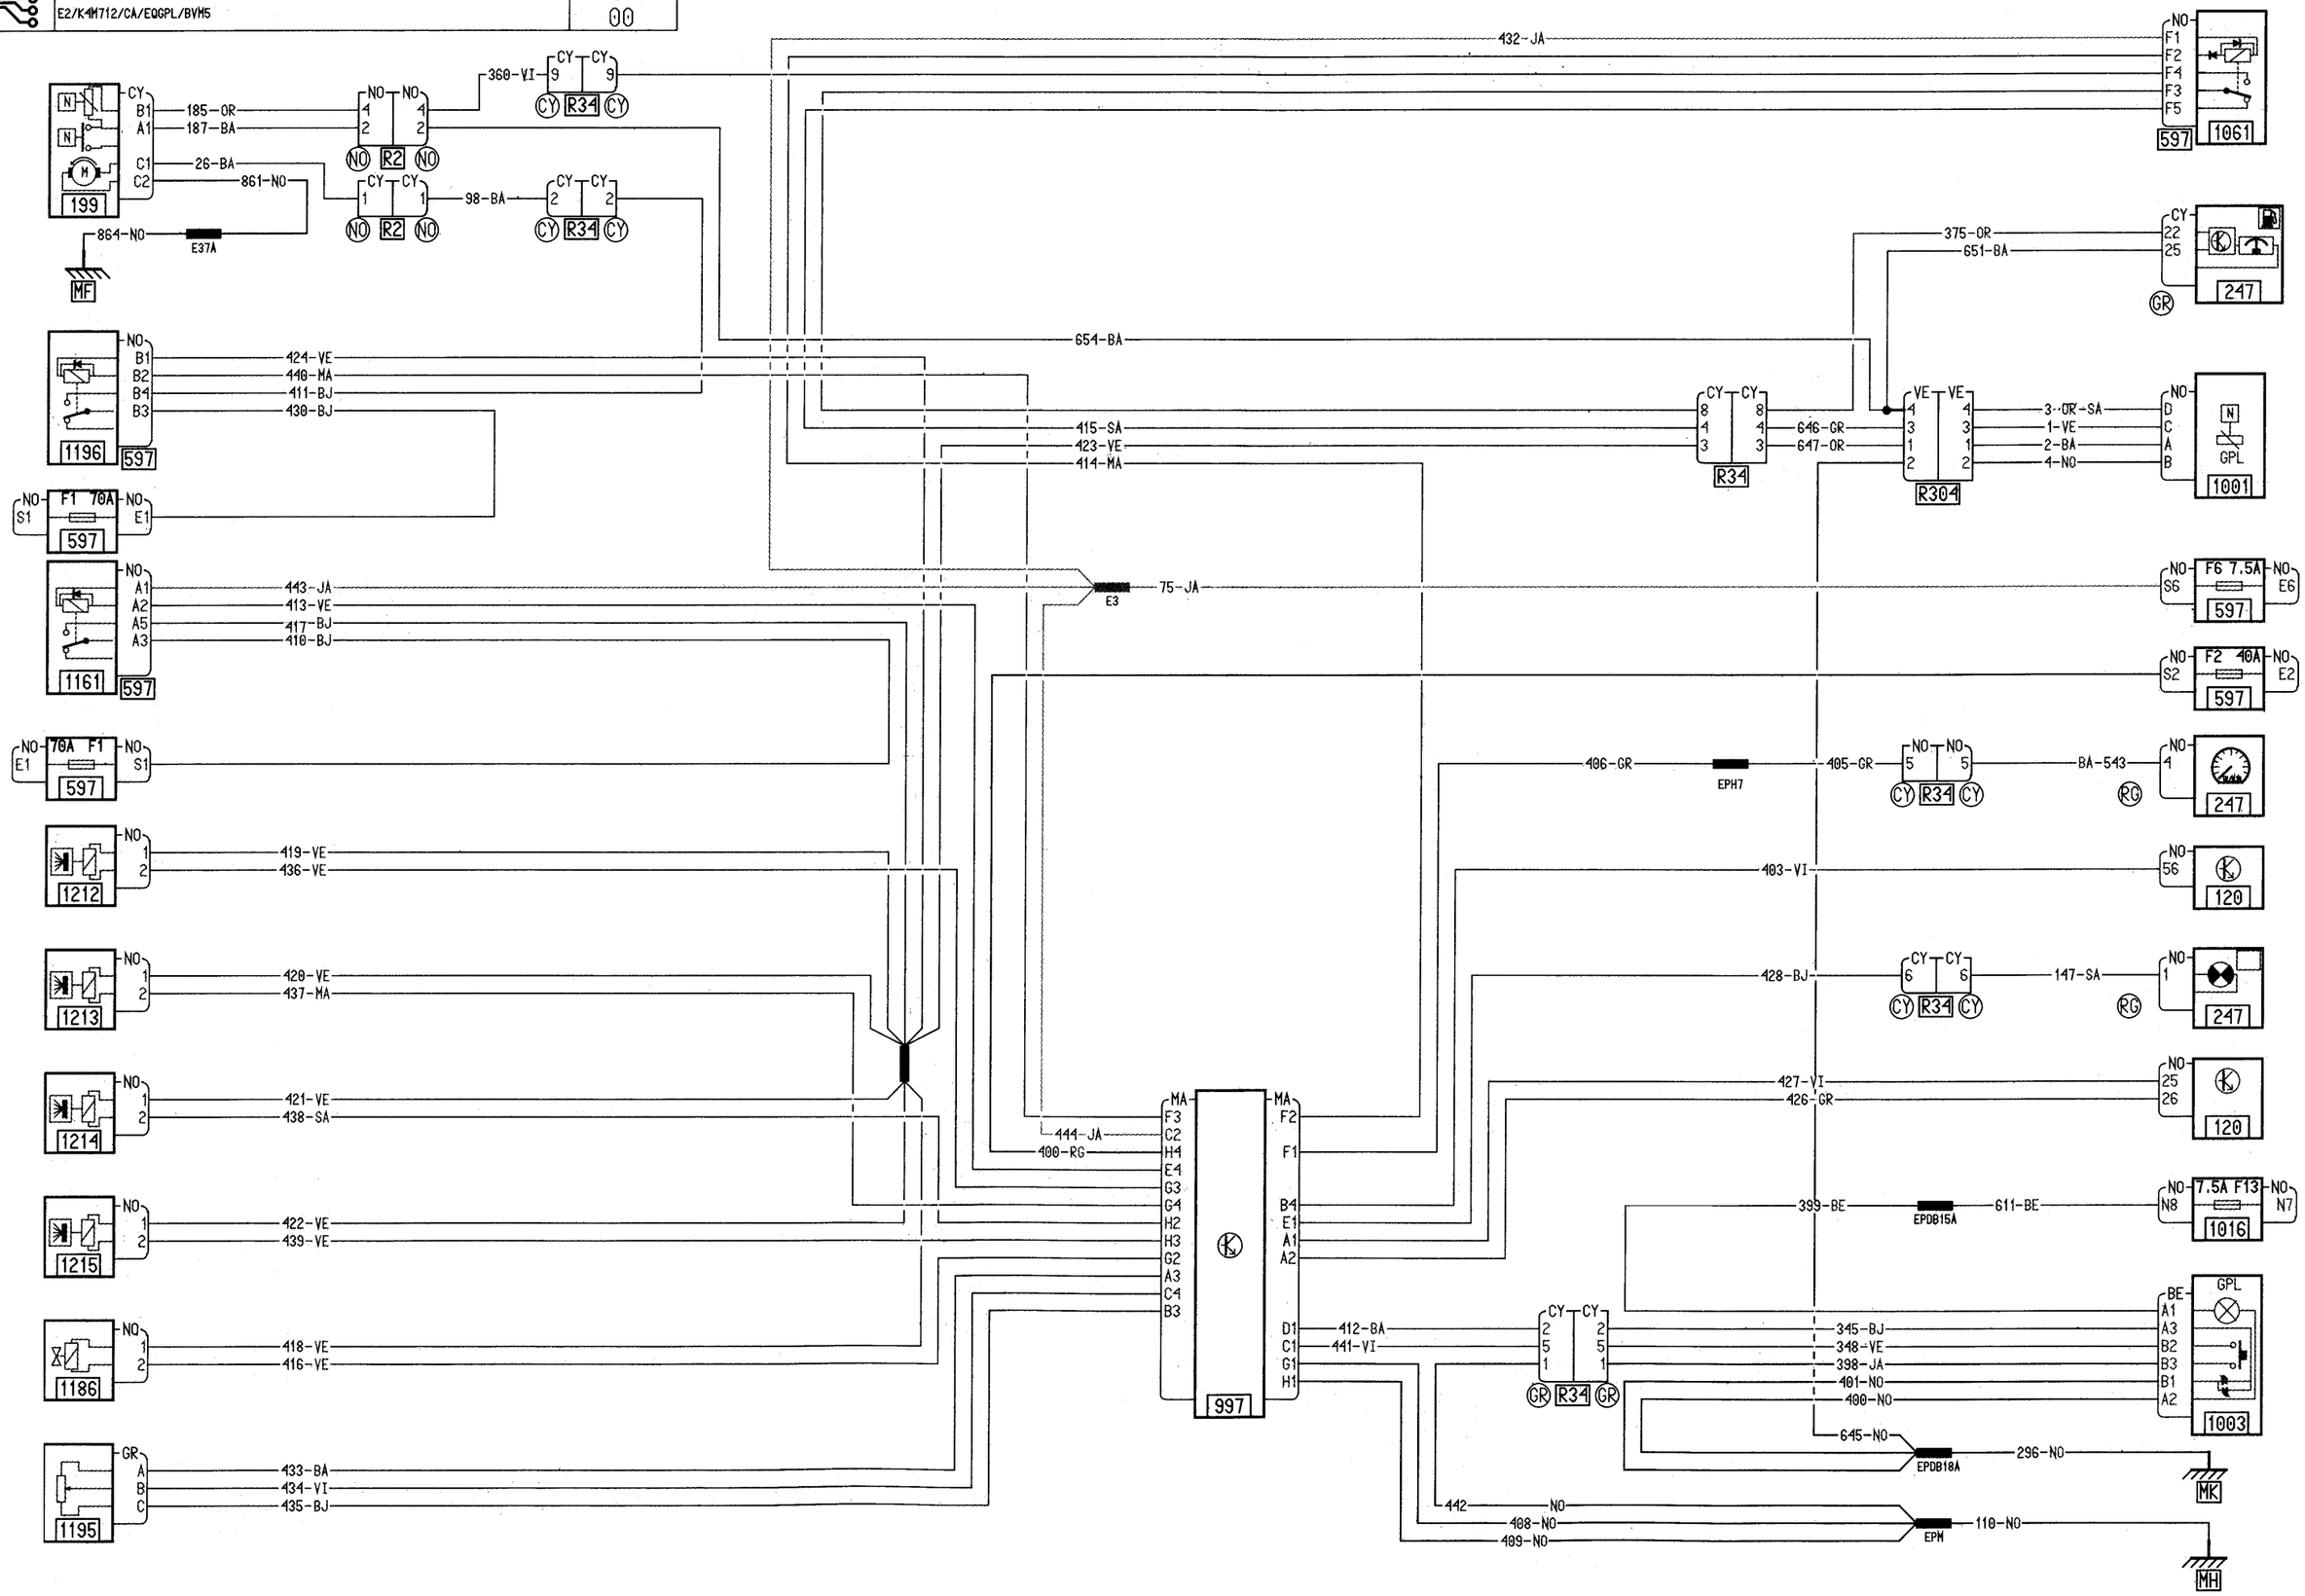

199
185-OR
187-BA
26-BA
861-NO
864-NO
E37A
MF
R2
360-VI
98-BA
R34
597
1061
432-JA
247
375-OR
651-BA
GR
1196
424-VE
440-MA
411-BJ
430-BJ
654-BA
415-SA
423-VE
414-MA
646-GR
647-OR
R304
3-OR-SA
1-VE
2-BA
4-NO
GPL
1001
F1 70A
1161
443-JA
413-VE
417-BJ
410-BJ
E3
75-JA
F6 7.5A
F2 40A
70A F1
1212
419-VE
436-VE
1213
420-VE
437-MA
1214
421-VE
438-SA
1215
422-VE
439-VE
1186
418-VE
416-VE
1195
433-BA
434-VI
435-BJ
444-JA
400-RG
997
406-GR
EPH7
405-GR
BA-543
403-VI
56
120
428-BJ
147-SA
427-VI
426-GR
399-BE
EPDB15A
611-BE
7.5A F13
1016
412-BA
441-VI
345-BJ
348-VE
398-JA
401-NO
400-NO
1003
645-NO
EPDB18A
296-NO
MK
442-NO
408-NO
409-NO
EPM
110-NO
MH

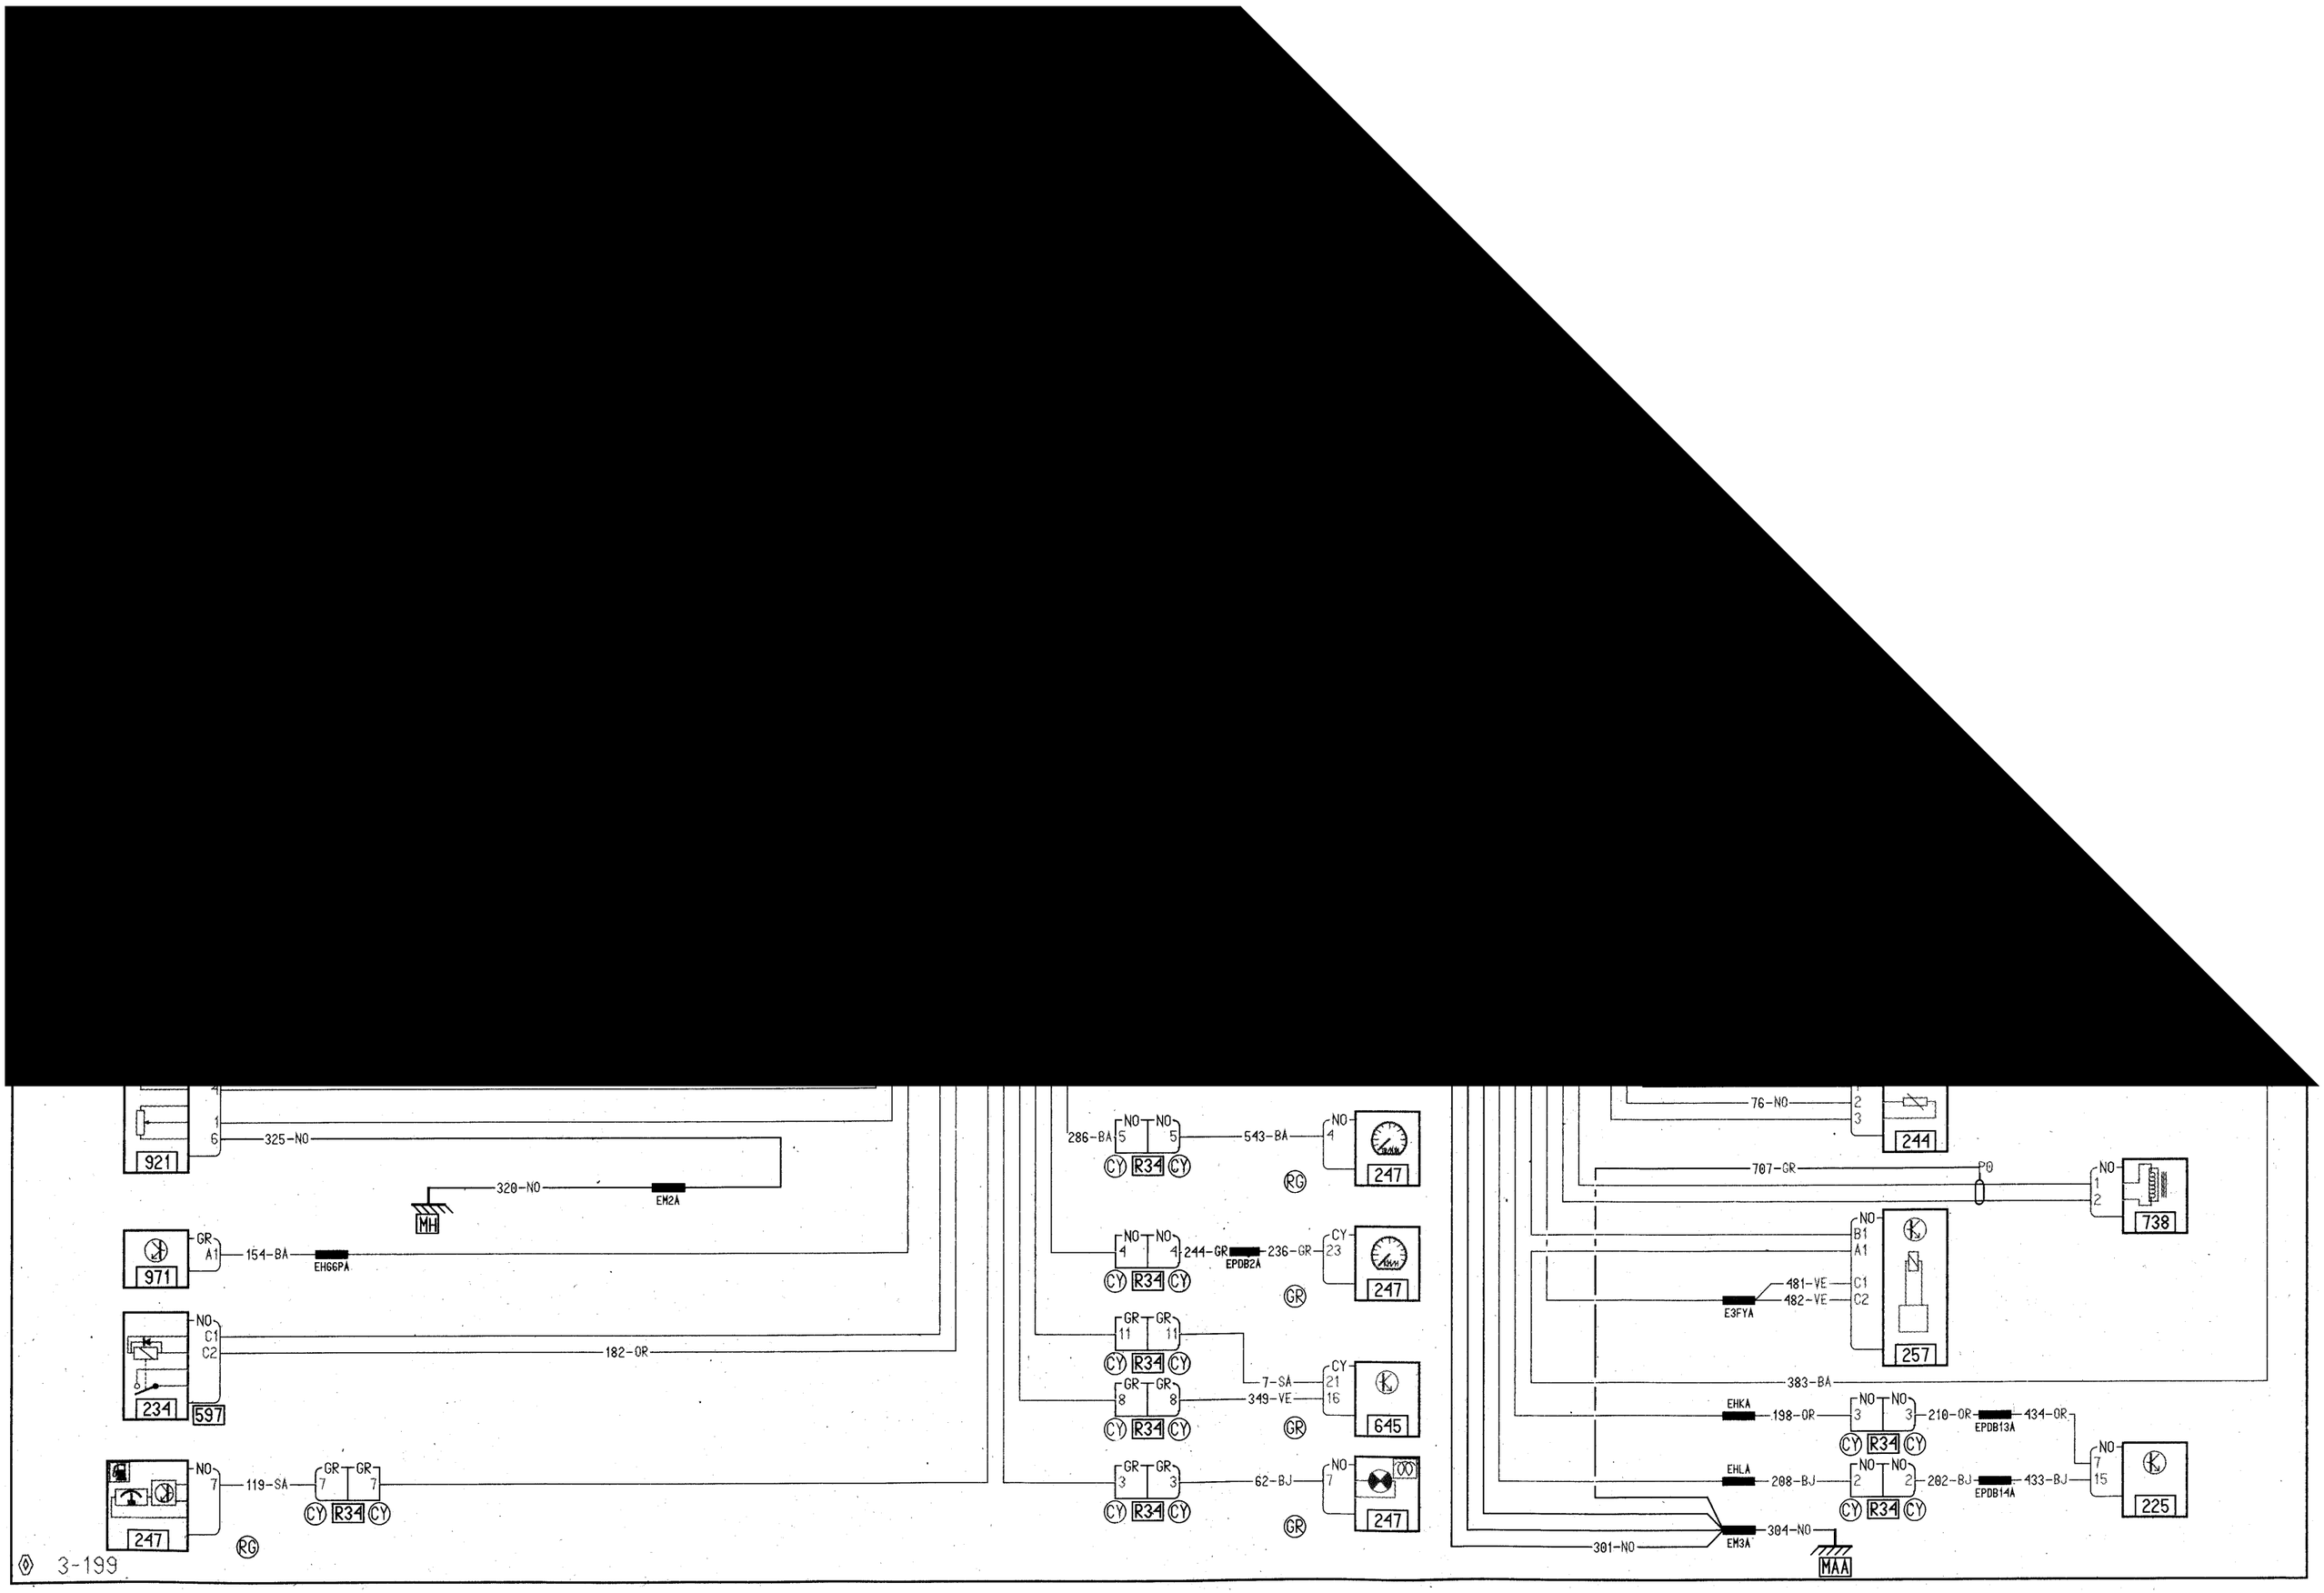

921
325-NO
320-NO
EM2A
MH
971
GR
A1
154-BA
EH66PA
234
597
NO
C1
C2
182-OR
247
119-SA
GR
7
CY
R34
RG
286-BA
5
543-BA
4
247
244-GR
EPDB2A
236-GR
23
11
7-SA
21
16
645
8
349-VE
3
62-BJ
76-NO
244
707-GR
P0
738
B1
481-VE
482-VE
E3FYA
257
383-BA
EHKA
198-OR
210-OR
EPDB13A
434-OR
EHLA
208-BJ
202-BJ
EPDB14A
433-BJ
15
225
301-NO
304-NO
EM3A
MAA

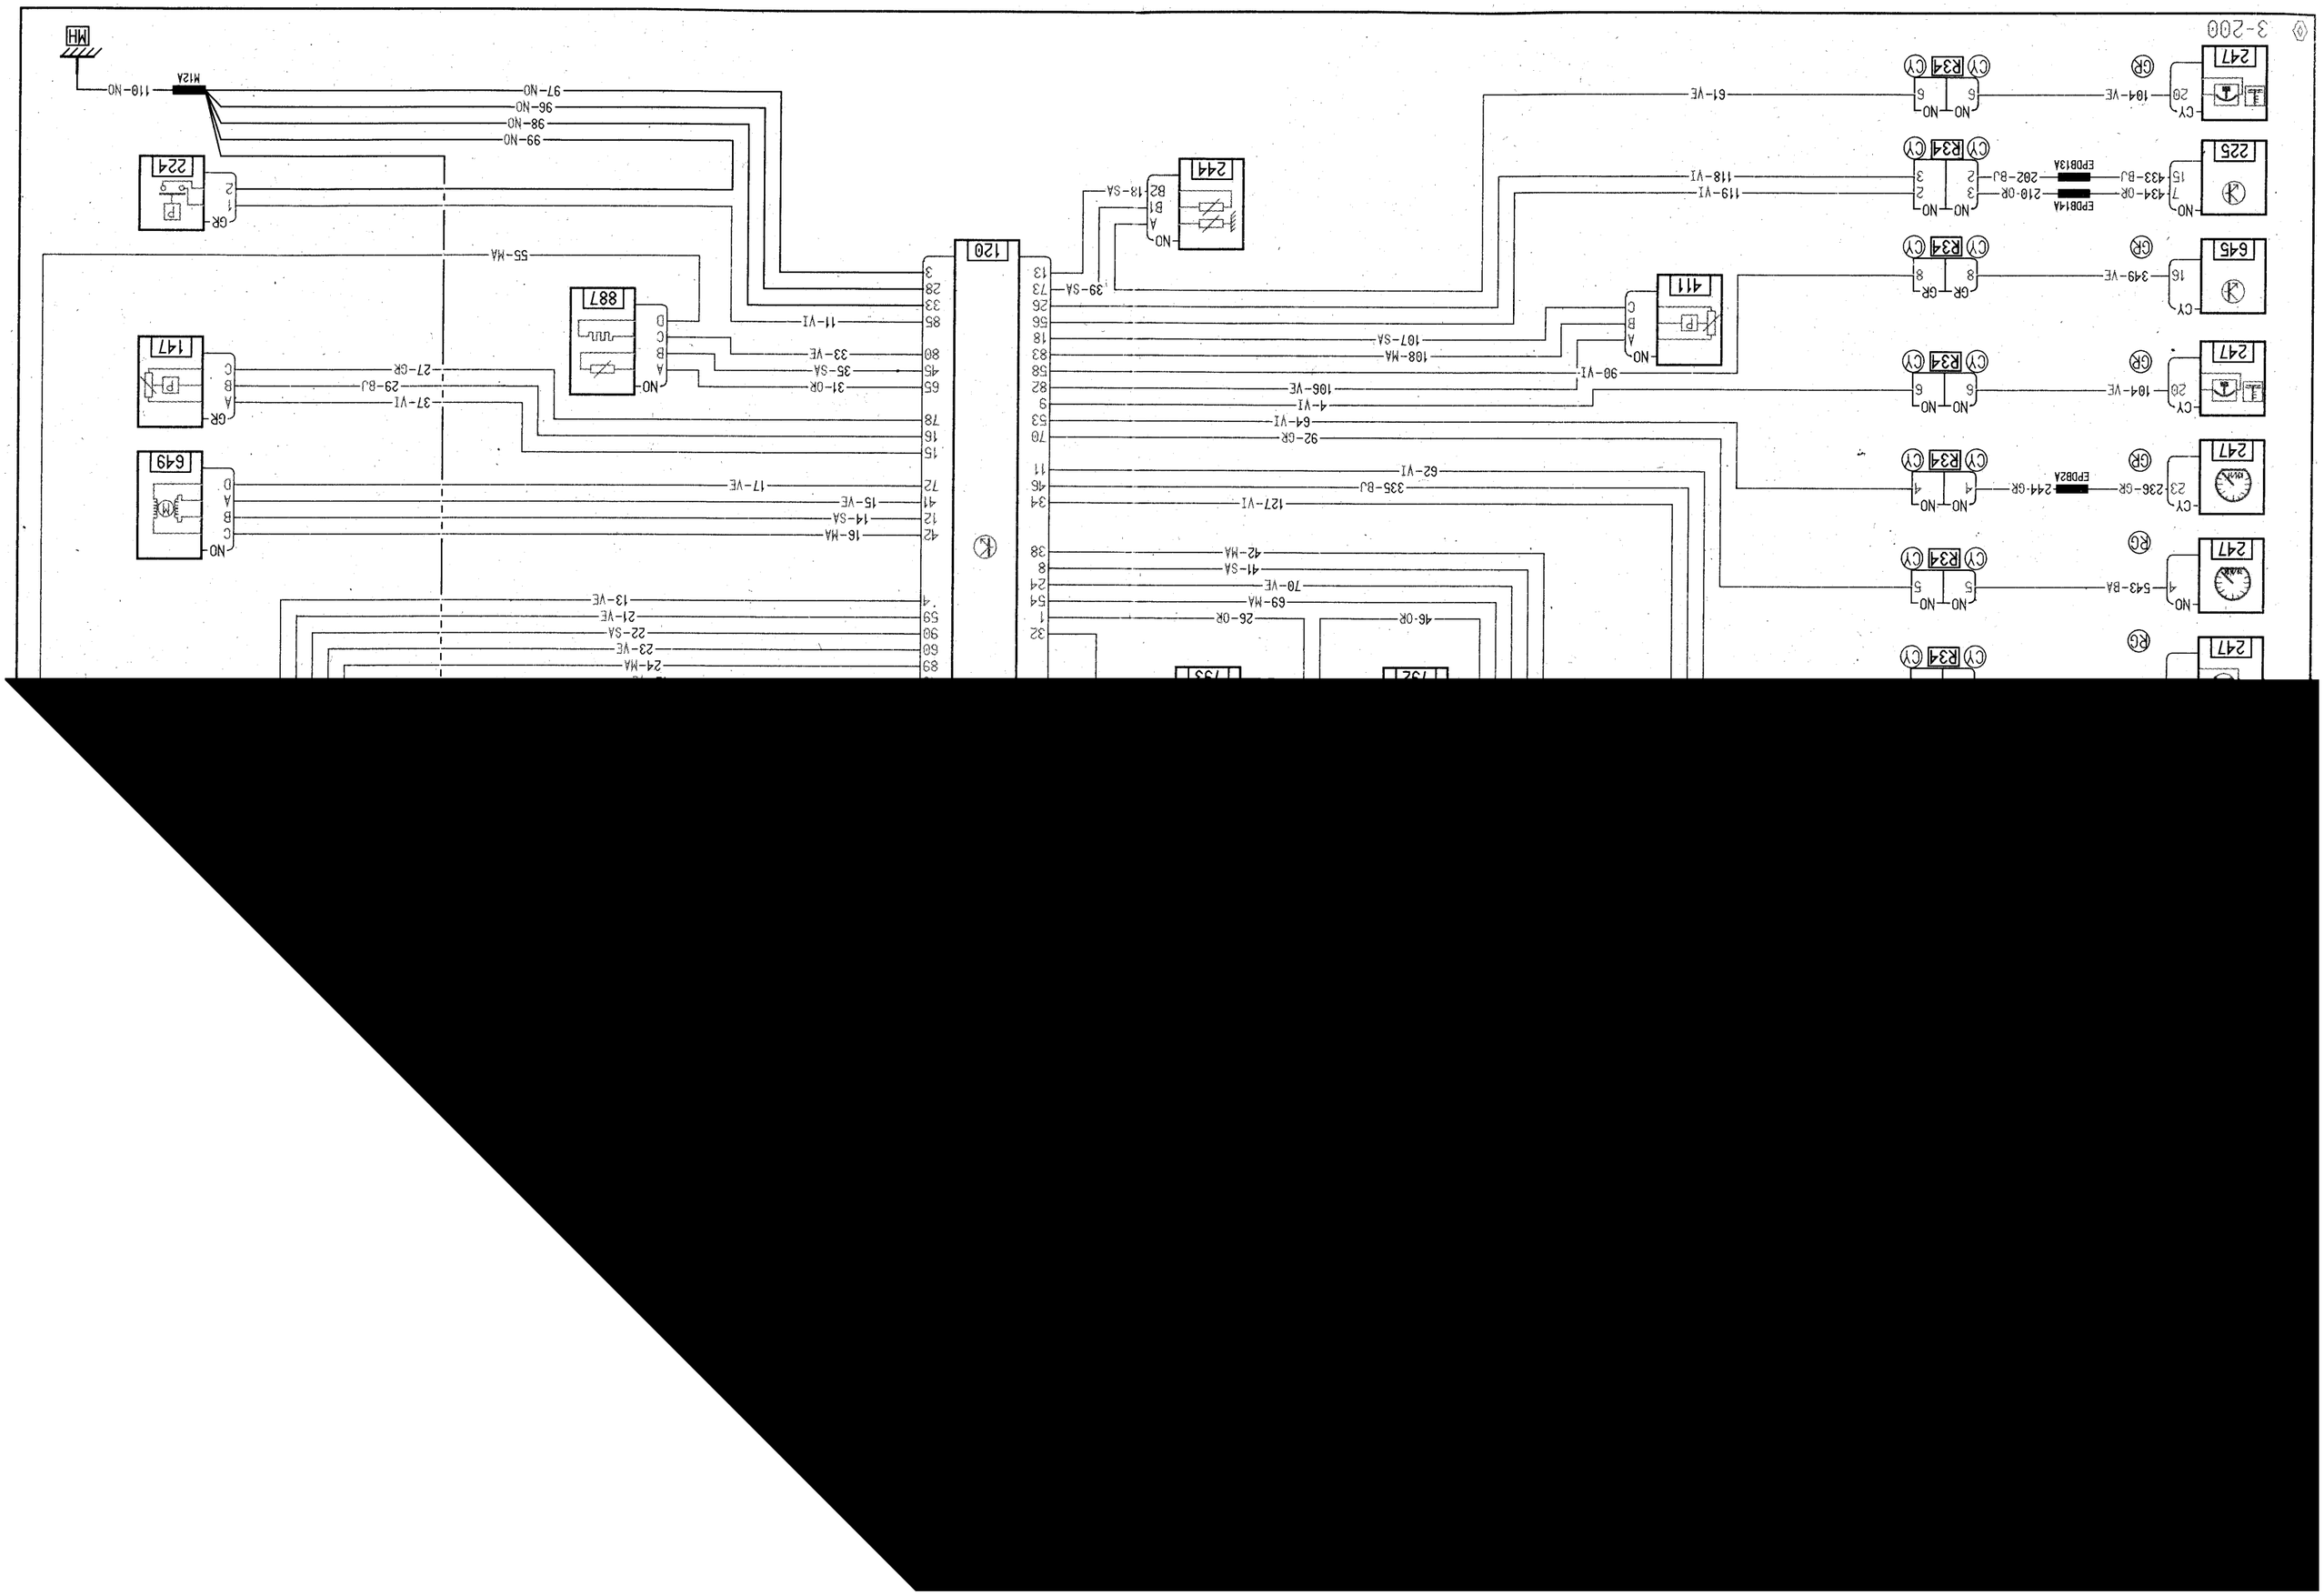
MH
M12A
110-NO
97-NO
96-NO
98-NO
99-NO
224
GR
55-MA
887
11-VI
33-VE
35-SA
31-OR
147
27-GR
29-BU
37-VI
649
17-VE
15-VE
14-SA
16-MA
13-VE
21-VE
22-SA
23-VE
24-MA
120
244
18-SA
39-SA
411
61-VE
119-VI
118-VI
107-SA
108-MA
90-VI
106-VE
4-VI
64-VI
92-GR
62-VI
335-BU
127-VI
42-MA
41-SA
70-VE
69-MA
26-OR
46-OR
247
104-VE
R34
225
434-OR
433-BU
210-OR
202-BU
EPDB14A
EPDB13A
645
349-VE
236-GR
244-GR
EPDB2A
543-BA
RG

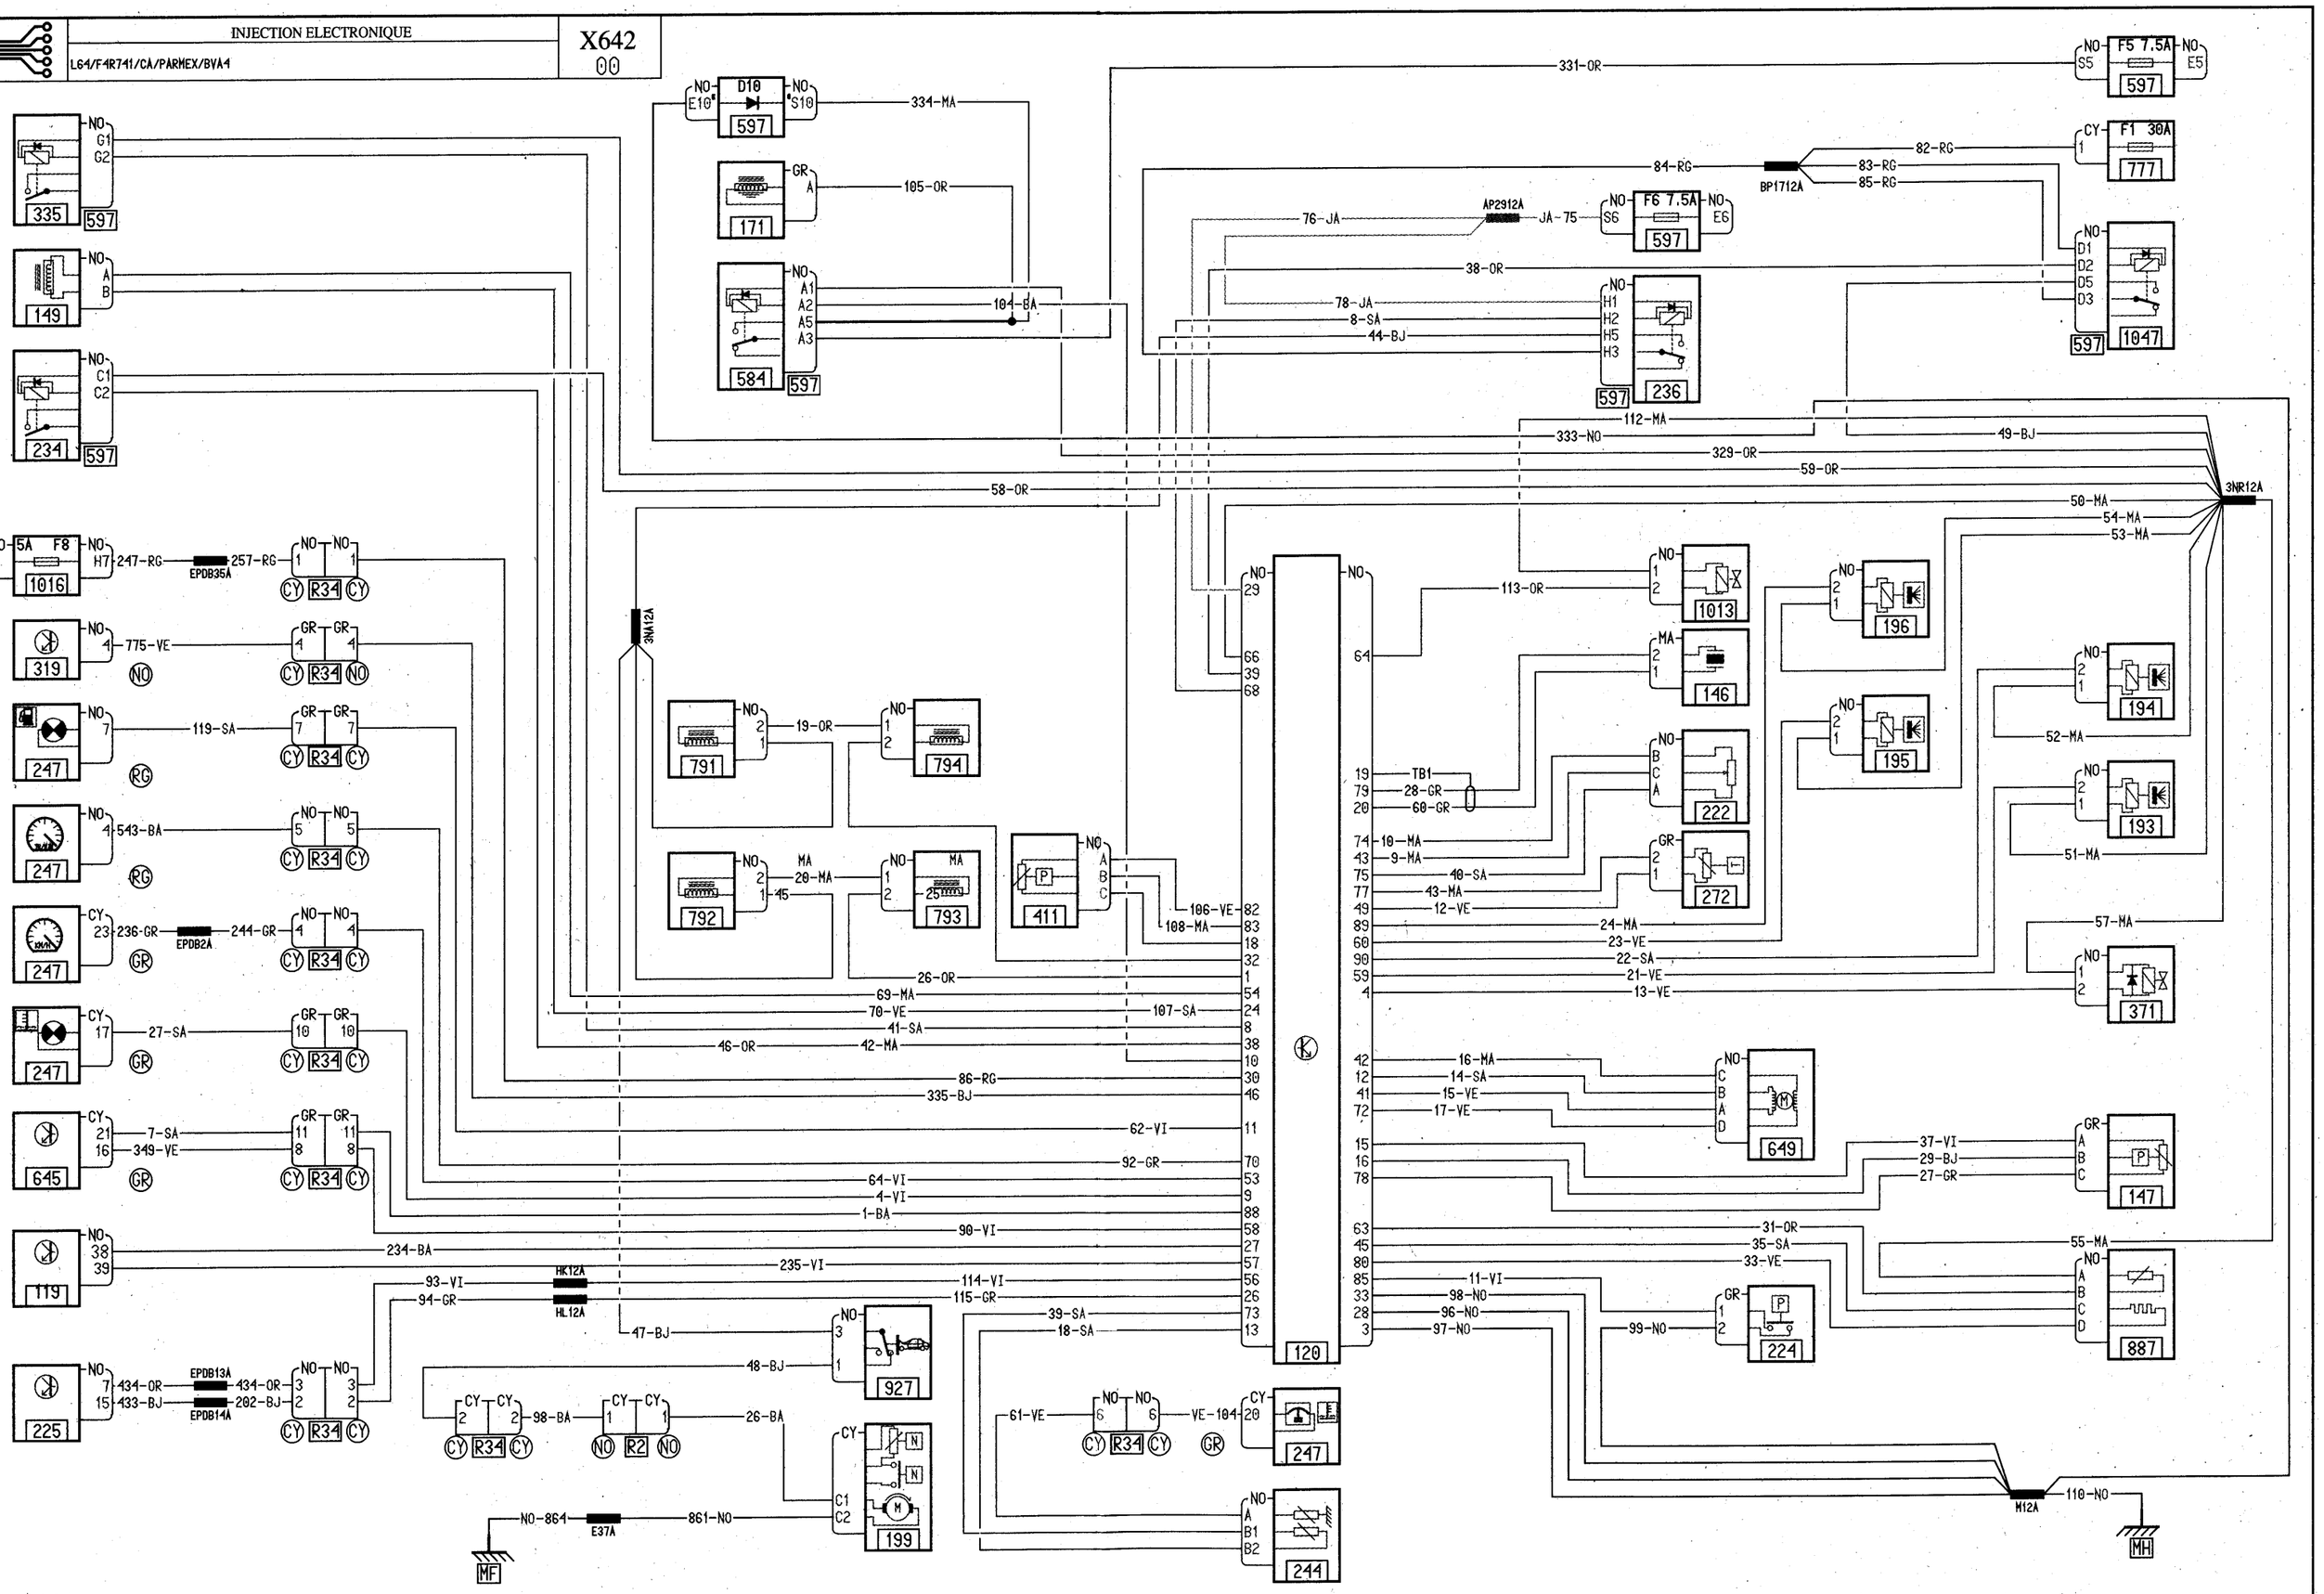
335
597
149
234
D10
584
171
792
791
794
793
411
1016
5A F8
EPDB35A
319
247
645
119
225
EPDB13A
EPDB14A
EPDB2A
HK12A
HL12A
3NA12A
3NR12A
331-OR
334-MA
105-OR
104-BA
84-RG
82-RG
83-RG
85-RG
BP1712A
AP2912A
76-JA
JA-75
F6 7.5A
F5 7.5A
F1 30A
777
1047
38-OR
78-JA
8-SA
44-BJ
236
112-MA
333-NO
329-OR
49-BJ
59-OR
58-OR
50-MA
54-MA
53-MA
52-MA
51-MA
57-MA
1013
146
222
272
196
195
194
193
371
649
147
224
887
244
120
M12A
MH
MF
E37A
775-VE
119-SA
543-BA
236-GR
244-GR
27-SA
7-SA
349-VE
234-BA
235-VI
93-VI
94-GR
434-OR
433-BJ
202-BJ
19-OR
20-MA
25-MA
45
26-OR
69-MA
70-VE
41-SA
46-OR
42-MA
86-RG
335-BJ
62-VI
92-GR
64-VI
4-VI
1-BA
90-VI
114-VI
115-GR
39-SA
18-SA
47-BJ
48-BJ
98-BA
26-BA
61-VE
VE-104
106-VE
108-MA
107-SA
247-RG
257-RG
113-OR
19
79
20
TB1
28-GR
60-GR
74
10-MA
43
9-MA
75
40-SA
77
43-MA
49
12-VE
89
24-MA
60
23-VE
90
22-SA
59
21-VE
4
13-VE
42
16-MA
12
14-SA
41
15-VE
72
17-VE
15
16
78
63
45
80
85
33
28
3
31-OR
35-SA
33-VE
11-VI
98-NO
96-NO
97-NO
99-NO
37-VI
29-BJ
27-GR
55-MA
110-NO
R34
R2
CY
GR
NO
RG
MA

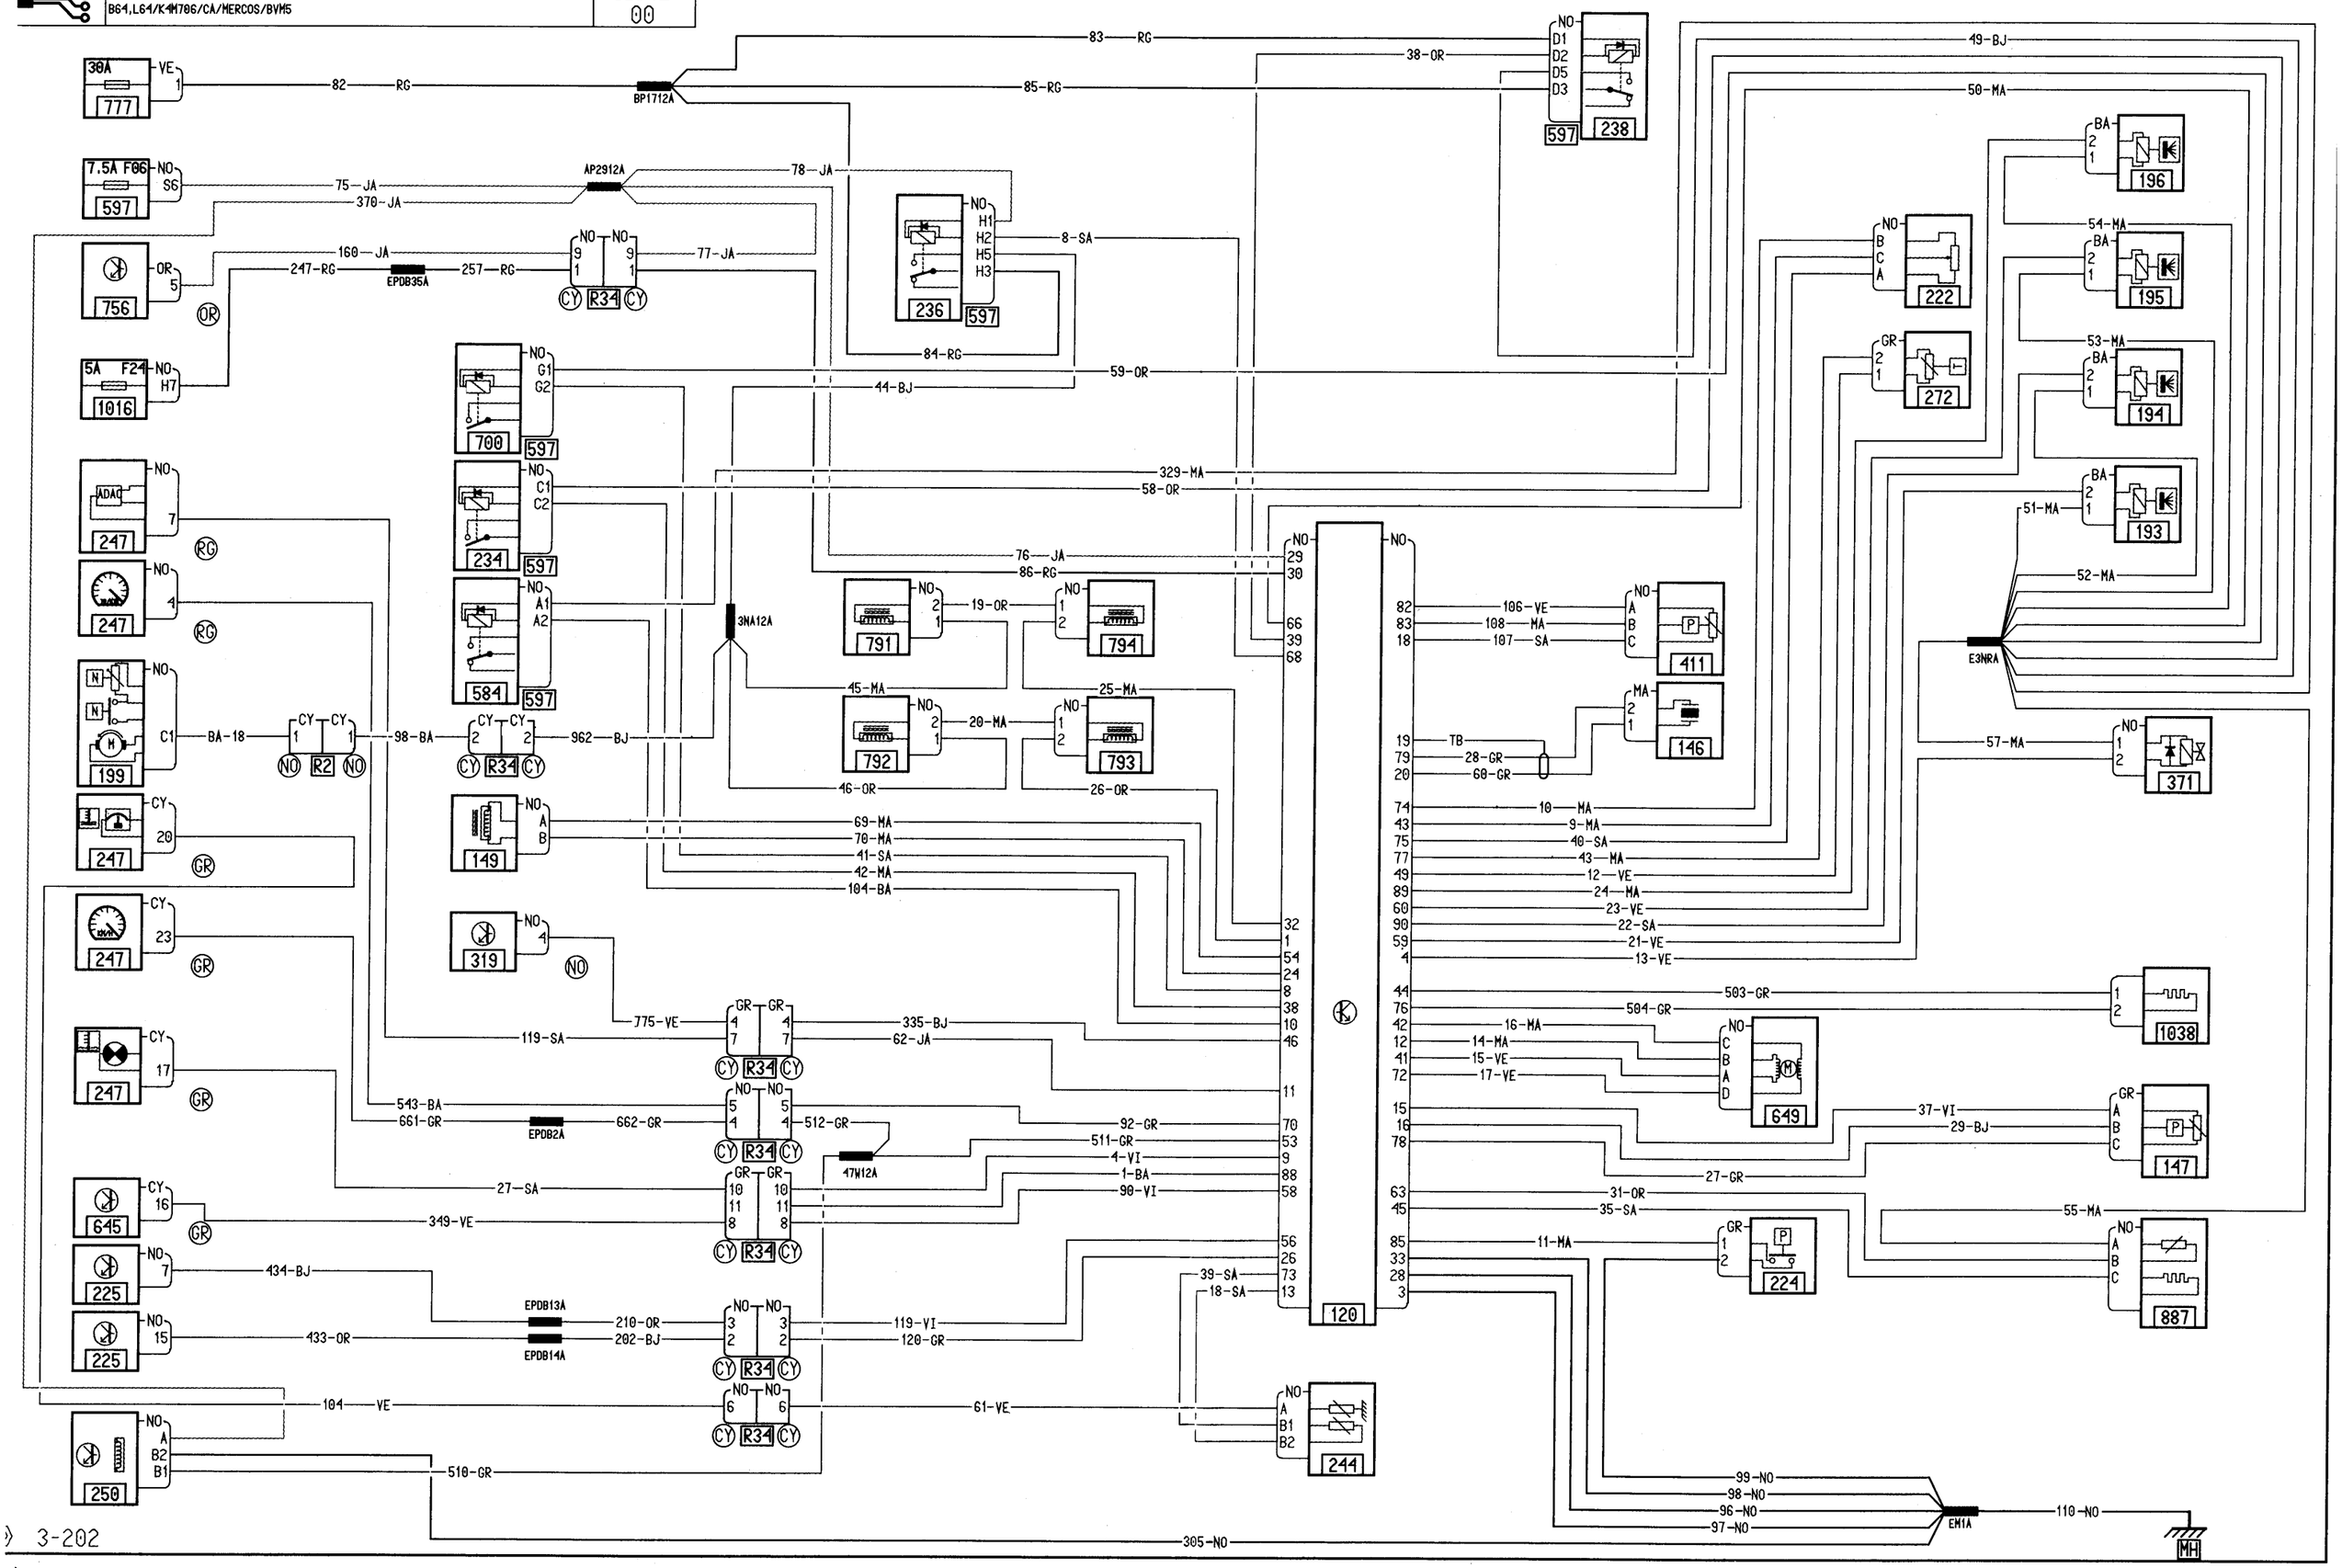
30A 777
7.5A F06 597
756
5A F24 1016
247 ADAC
247
247
199
247
247
247
645
225
225
250
700 597
234 597
584 597
149
319
791
792
793
794
3NA12A
EPDB35A
EPDB2A
47W12A
EPDB13A
EPDB14A
AP2912A
BP1712A
236 597
597 238
222
196
195
272
194
193
411
146
371
1038
649
147
224
887
244
120
E3NRA
EM1A
MH
82 RG
83 RG
85 RG
38 OR
19 BJ
50 MA
75 JA
370 JA
78 JA
160 JA
247 RG
257 RG
77 JA
8 SA
84 RG
59 OR
44 BJ
329 MA
58 OR
76 JA
86 RG
19 OR
15 MA
25 MA
20 MA
16 OR
26 OR
98 BA
962 BJ
69 MA
70 MA
41 SA
42 MA
104 BA
775 VE
335 BJ
62 JA
119 SA
543 BA
661 GR
662 GR
512 GR
92 GR
511 GR
4 VI
1 BA
90 VI
27 SA
349 VE
434 BJ
210 OR
202 BJ
433 OR
119 VI
120 GR
104 VE
61 VE
510 GR
39 SA
18 SA
106 VE
108 MA
107 SA
19 TB
79 28 GR
20 60 GR
74 10 MA
43 9 MA
75 40 SA
77 43 MA
49 12 VE
89 24 MA
60 23 VE
90 22 SA
59 21 VE
4 13 VE
44 503 GR
76 504 GR
42 16 MA
12 14 MA
41 15 VE
72 17 VE
15
16
78
37 VI
29 BJ
27 GR
63 31 OR
45 35 SA
85 11 MA
33
28
3
51 MA
52 MA
53 MA
54 MA
55 MA
57 MA
99 NO
98 NO
96 NO
97 NO
110 NO
305 NO

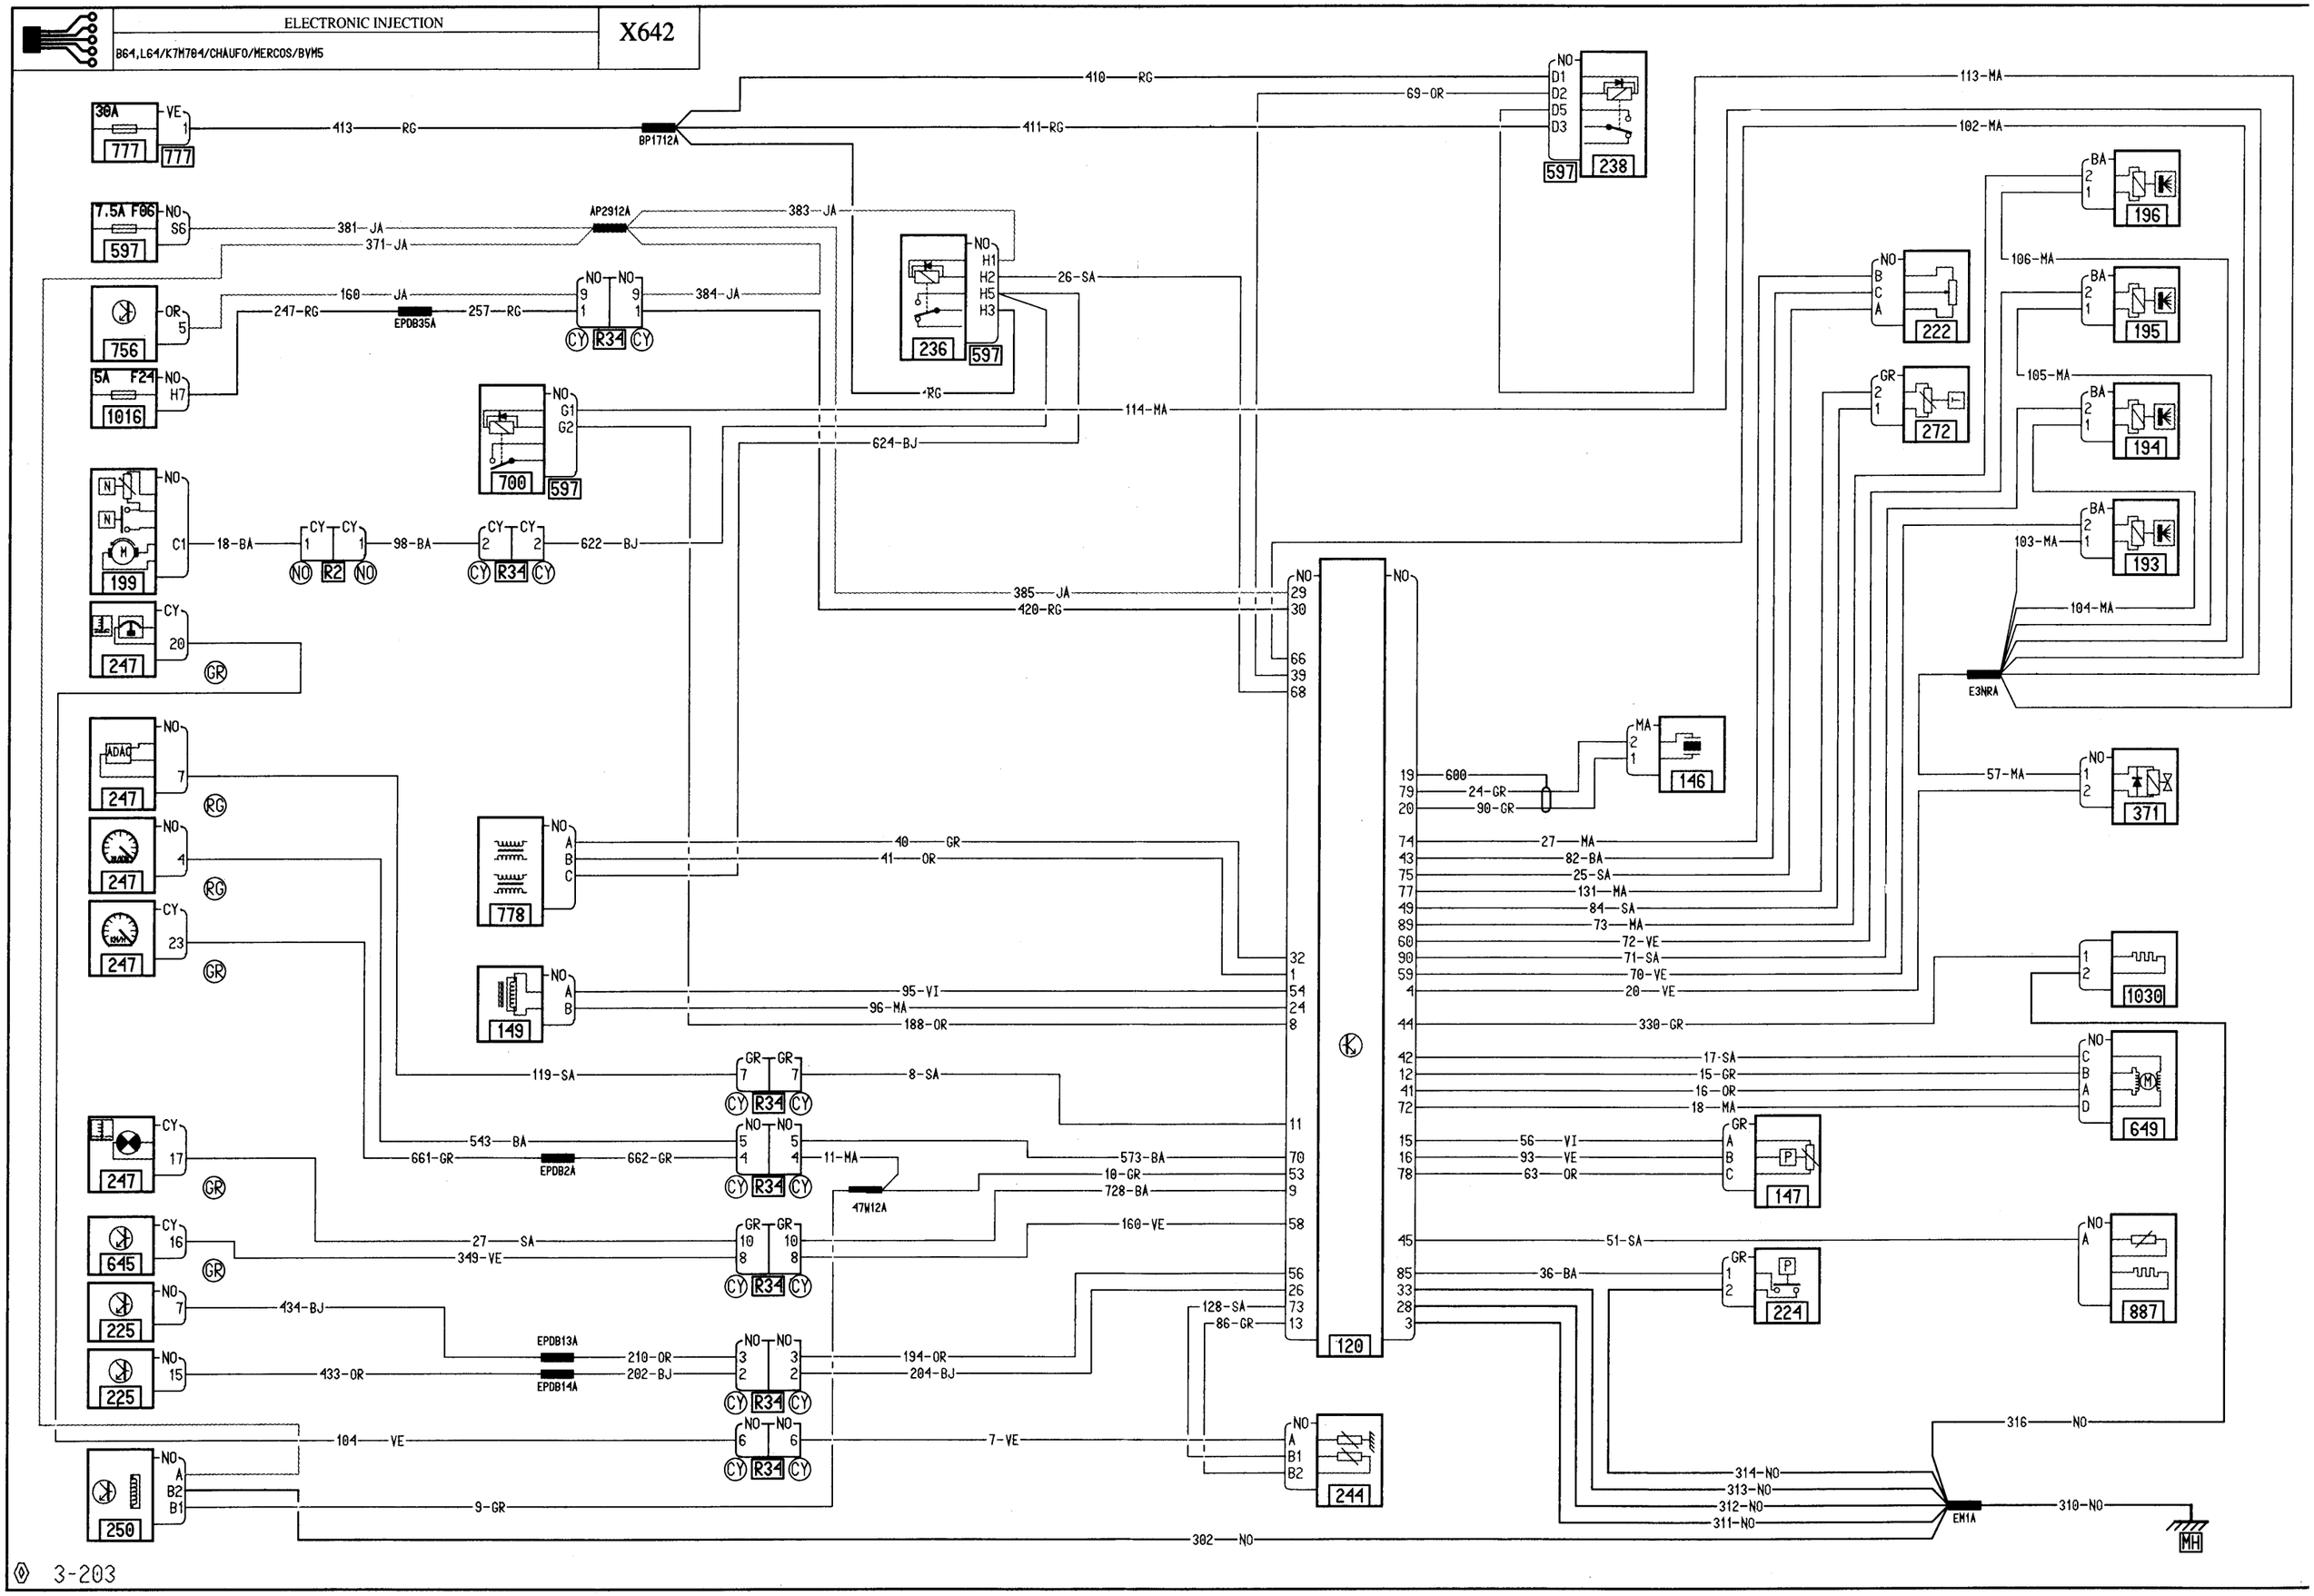

30A F66
777
VE 1
413 RG
BP1712A
410 RG
69-OR
411-RG
NO D1 D2 D5 D3
597 238
113-MA
102-MA
7.5A F06
597
NO S6
381-JA
371-JA
AP2912A
383-JA
756
OR 5
160-JA
247-RG
EPDB35A
257-RG
NO 9 1
R34
384-JA
5A F24
1016
NO H7
NO H1 H2 H5 H3
236 597
26-SA
RG
700 597
NO G1 G2
114-MA
624-BJ
199
NO C1
18-BA
CY 1 1
NO R2 NO
98-BA
CY 2 2
CY R34 CY
622-BJ
247
CY 20
GR
385-JA
420-RG
NO 29 30 66 39 68
NO
120
247
NO ADAC 7
RG
247
NO 4
RG
247
CY 23
GR
778
NO A B C
40-GR
41-OR
149
NO A B
95-VI
96-MA
188-OR
32 1 54 24 8
247
CY 17
GR
543-BA
661-GR
EPDB2A
662-GR
11-MA
573-BA
10-GR
728-BA
47W12A
11 70 53 9
645
CY 16
GR
27-SA
349-VE
160-VE
58
225
NO 7
434-BJ
225
NO 15
433-OR
EPDB13A
210-OR
EPDB14A
202-BJ
194-OR
204-BJ
56 26 73 13
128-SA
86-GR
104-VE
7-VE
250
NO A B2 B1
9-GR
302-NO
244
NO A B1 B2
MA 2 1
146
19 600
79 24-GR
20 90-GR
74 27-MA
43 82-BA
75 25-SA
77 131-MA
49 84-SA
89 73-MA
60 72-VE
90 71-SA
59 70-VE
4 20-VE
44 330-GR
42 17-SA
12 15-GR
41 16-OR
72 18-MA
15 56-VI
16 93-VE
78 63-OR
45 51-SA
85 36-BA
33
28
3
NO A B C
222
GR 2 1
272
BA 2 1
196
106-MA
BA 2 1
195
105-MA
BA 2 1
194
BA 2 1
193
103-MA
104-MA
E3NRA
57-MA
NO 1 2
371
1 2
1030
NO C B A D
649
GR A B C
147
GR 1 2
224
NO A
887
316-NO
314-NO
313-NO
312-NO
311-NO
EM1A
310-NO
MH

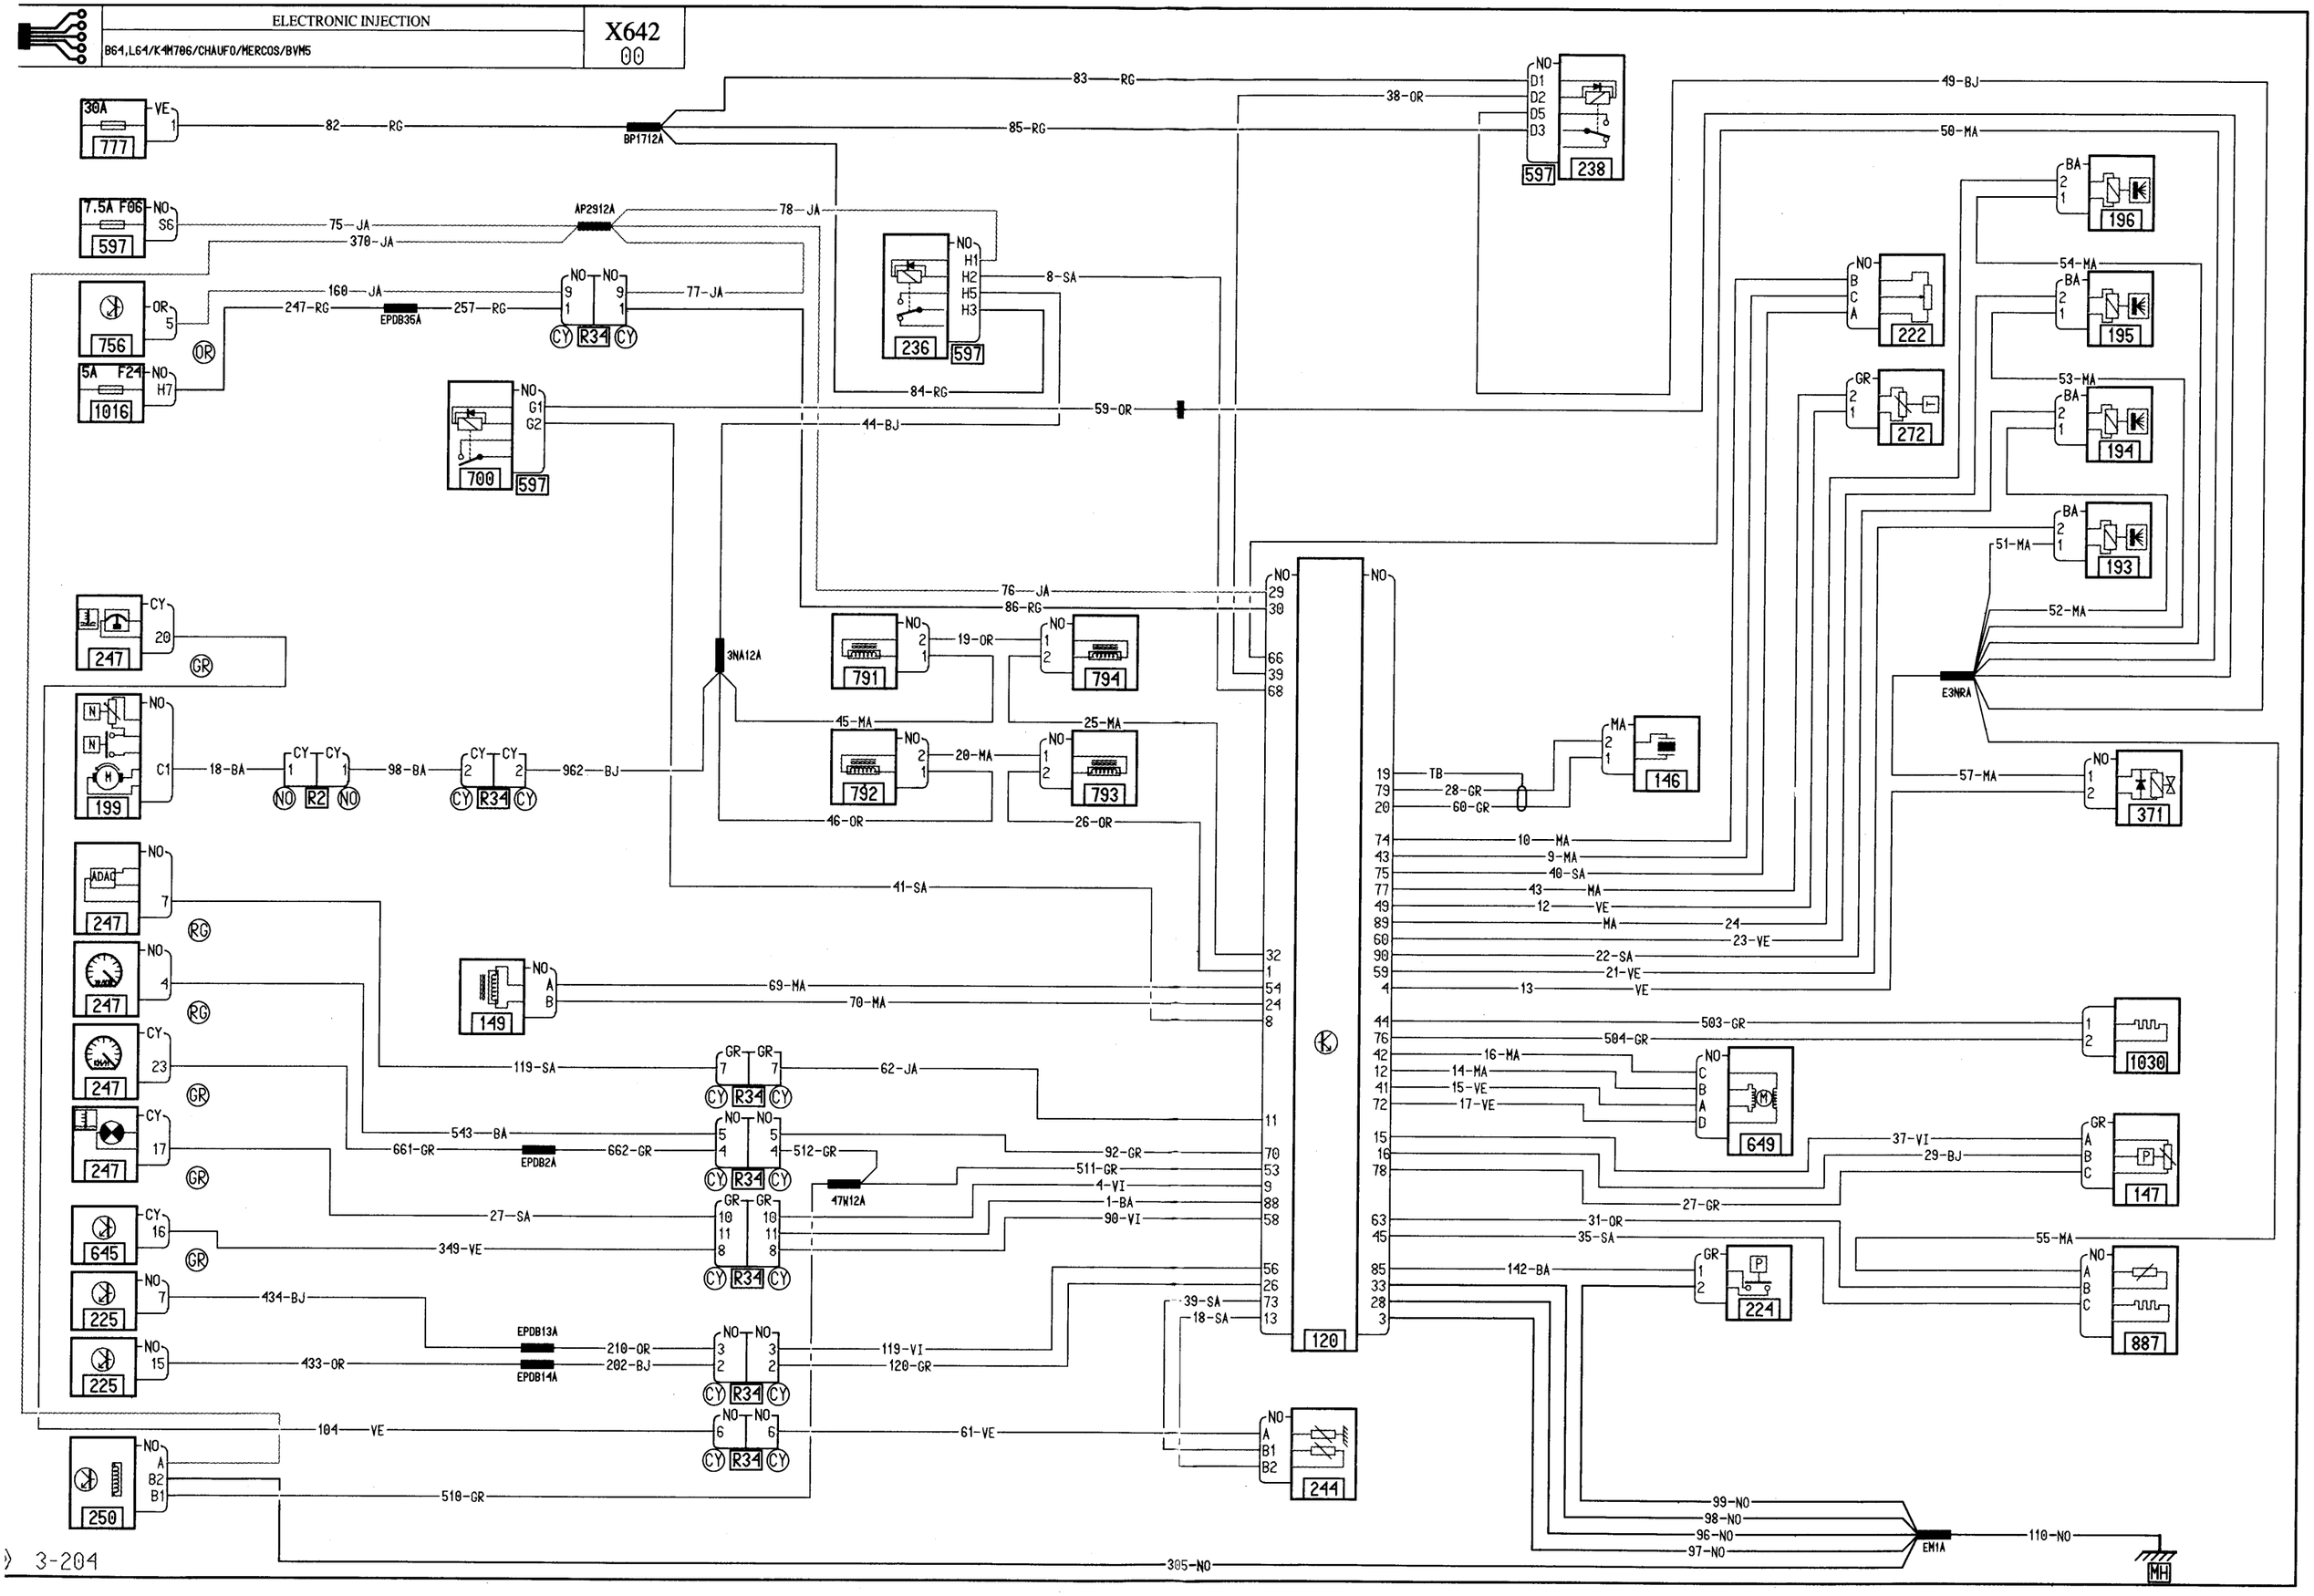

30A 777 VE 1
82 RG
BP1712A
83 RG
38-OR
85-RG
NO D1 D2 D5 D3 597 238
49-BJ
50-MA
7.5A F06 NO S6 597
75-JA
370-JA
AP2912A
78-JA
NO H1 H2 H5 H3 236 597
8-SA
160-JA
247-RG
EPDB35A
257-RG
NO 9 1 CY R34 CY
77-JA
OR 5 756
OR
5A F24 NO H7 1016
84-RG
NO G1 G2 700 597
59-OR
44-BJ
BA 2 1 196
54-MA
BA 2 1 195
NO B C A 222
GR 2 1 272
53-MA
BA 2 1 194
BA 2 1 193
51-MA
52-MA
E3NRA
CY 20 247
GR
76-JA
86-RG
NO 29 30 66 39 68
3NA12A
NO 2 1 791
19-OR
NO 1 2 794
45-MA
25-MA
NO 2 1 792
20-MA
NO 1 2 793
46-OR
26-OR
NO 199 C1
18-BA
CY 1 1 NO R2 NO
98-BA
CY 2 2 CY R34 CY
962-BJ
NO 1 2 371
57-MA
MA 2 1 146
19 TB
79 28-GR
20 60-GR
74 10-MA
43 9-MA
75 40-SA
77 43-MA
49 12-VE
89 MA 24
60 23-VE
90 22-SA
59 21-VE
4 13-VE
NO 7 ADAC 247
41-SA
RG
NO 4 247
RG
NO A B 149
69-MA
70-MA
32 1 54 24 8
CY 23 247
GR
119-SA
GR 7 7 CY R34 CY
62-JA
11
CY 17 247
GR
543-BA
661-GR
EPDB2A
662-GR
NO 5 4 5 4 CY R34 CY
512-GR
92-GR
511-GR
4-VI
1-BA
90-VI
47M12A
70 53 9 88 58
CY 16 645
GR
27-SA
349-VE
GR 10 11 8 10 11 8 CY R34 CY
NO 7 225
434-BJ
EPDB13A
EPDB14A
NO 15 225
433-OR
210-OR
202-BJ
NO 3 2 3 2 CY R34 CY
119-VI
120-GR
56 26 73 13
39-SA
18-SA
120
NO 6 6 CY R34 CY
61-VE
104-VE
NO A B2 B1 250
510-GR
NO A B1 B2 244
NO C B A D 649
16-MA
14-MA
15-VE
17-VE
503-GR
504-GR
1 2 1030
37-VI
29-BJ
27-GR
GR A B C 147
31-OR
35-SA
55-MA
GR 1 2 P 224
142-BA
NO A B C 887
99-NO
98-NO
96-NO
97-NO
EM1A
110-NO
305-NO
MH

HEADLAMP WASHERS

E2/DG/RUNLI/LAVPH

X642
00

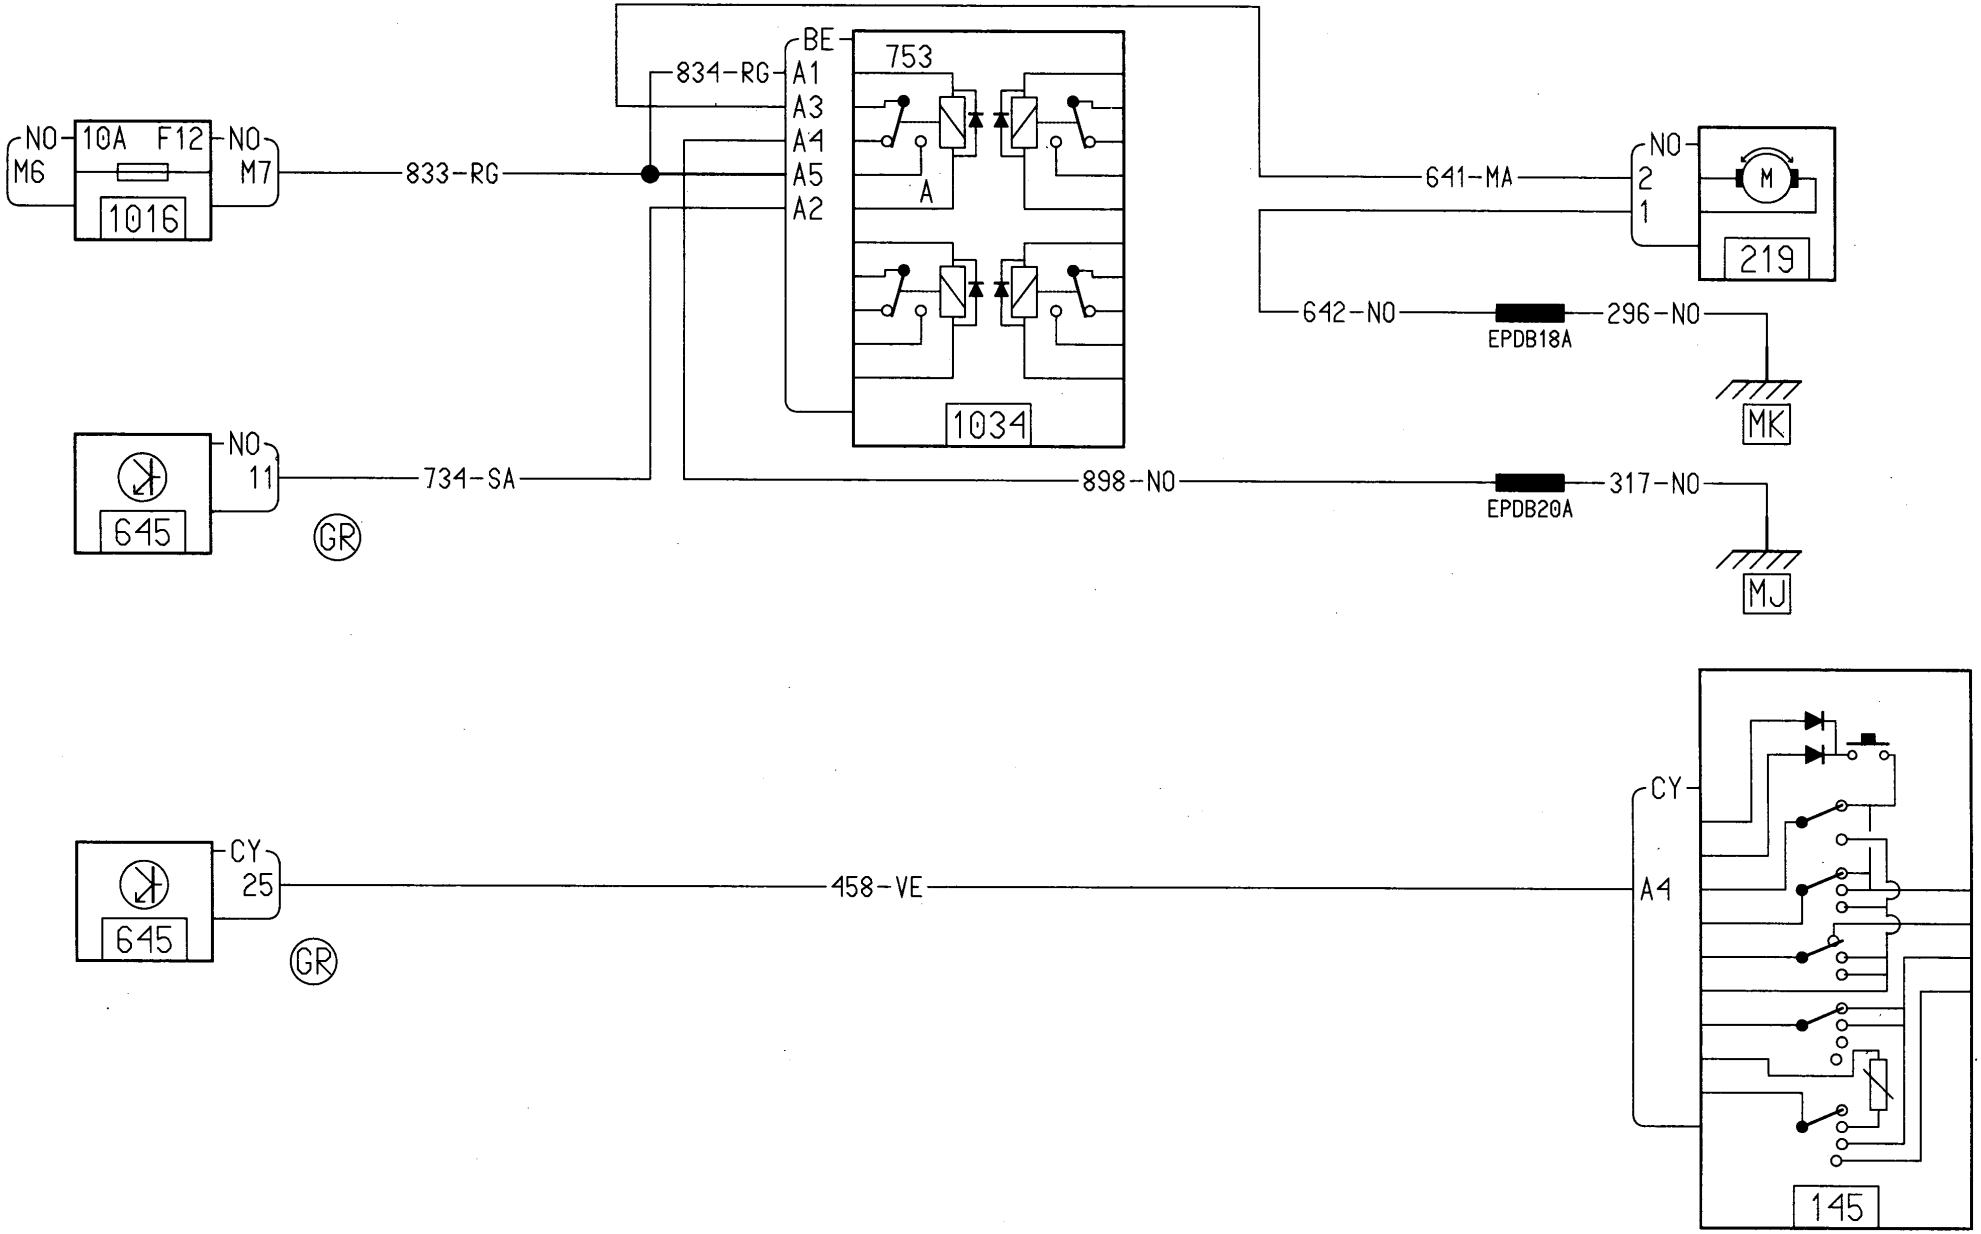

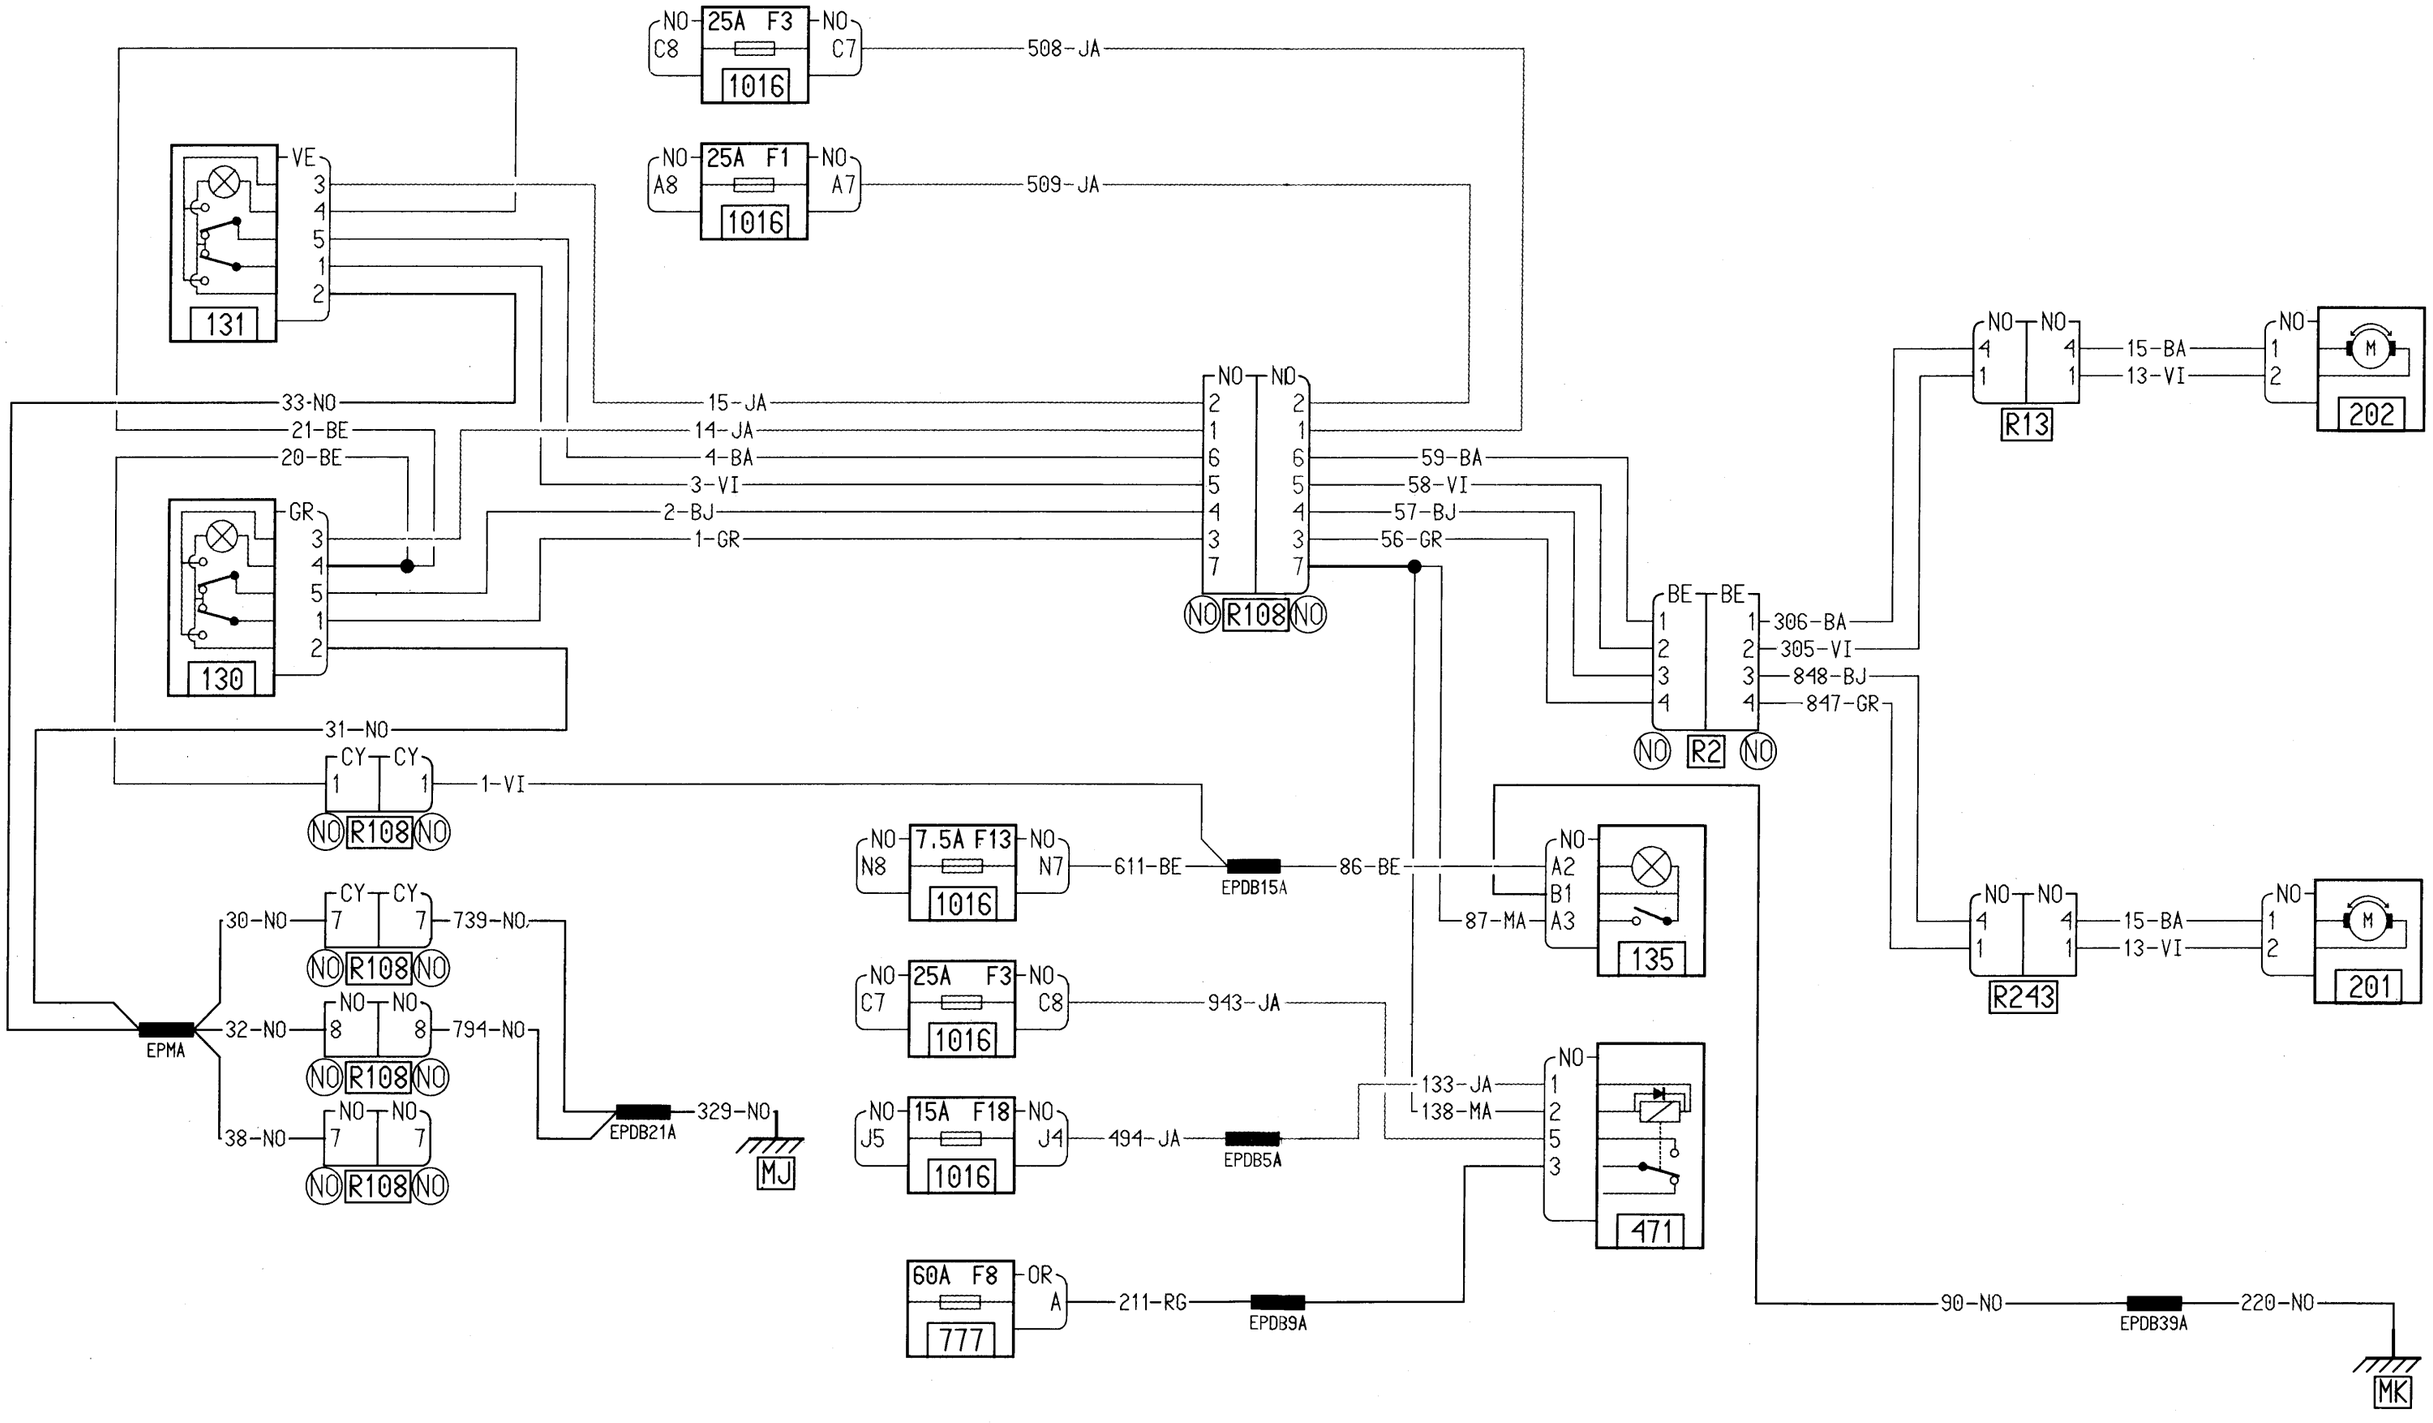

NO C8 25A F3 NO C7
1016
508-JA
NO A8 25A F1 NO A7
1016
509-JA
VE
3
4
5
1
2
131
33-NO
21-BE
20-BE
15-JA
14-JA
4-BA
3-VI
2-BJ
1-GR
NO NO
2 2
1 1
6 6
5 5
4 4
3 3
7 7
NO R108 NO
59-BA
58-VI
57-BJ
56-GR
GR
3
4
5
1
2
130
31-NO
CY CY
1 1
1-VI
NO R108 NO
BE BE
1 1
2 2
3 3
4 4
NO R2 NO
306-BA
305-VI
848-BJ
847-GR
NO NO
4 4
1 1
R13
15-BA
13-VI
NO
1
2
M
202
NO NO
4 4
1 1
R243
15-BA
13-VI
NO
1
2
M
201
NO N8 7.5A F13 NO N7
1016
611-BE
EPDB15A
86-BE
NO
A2
B1
A3
87-MA
135
30-NO
CY CY
7 7
739-NO
NO R108 NO
32-NO
NO NO
8 8
794-NO
NO R108 NO
38-NO
NO NO
7 7
NO R108 NO
EPMA
EPDB21A
329-NO
MJ
NO C7 25A F3 NO C8
1016
943-JA
NO J5 15A F18 NO J4
1016
494-JA
EPDB5A
133-JA
138-MA
NO
1
2
5
3
471
60A F8 OR A
777
211-RG
EPDB9A
90-NO
EPDB39A
220-NO
MK


REAR ELECTRIC WINDOW

E64,K25/E2/DG/LVAREL

X642

00

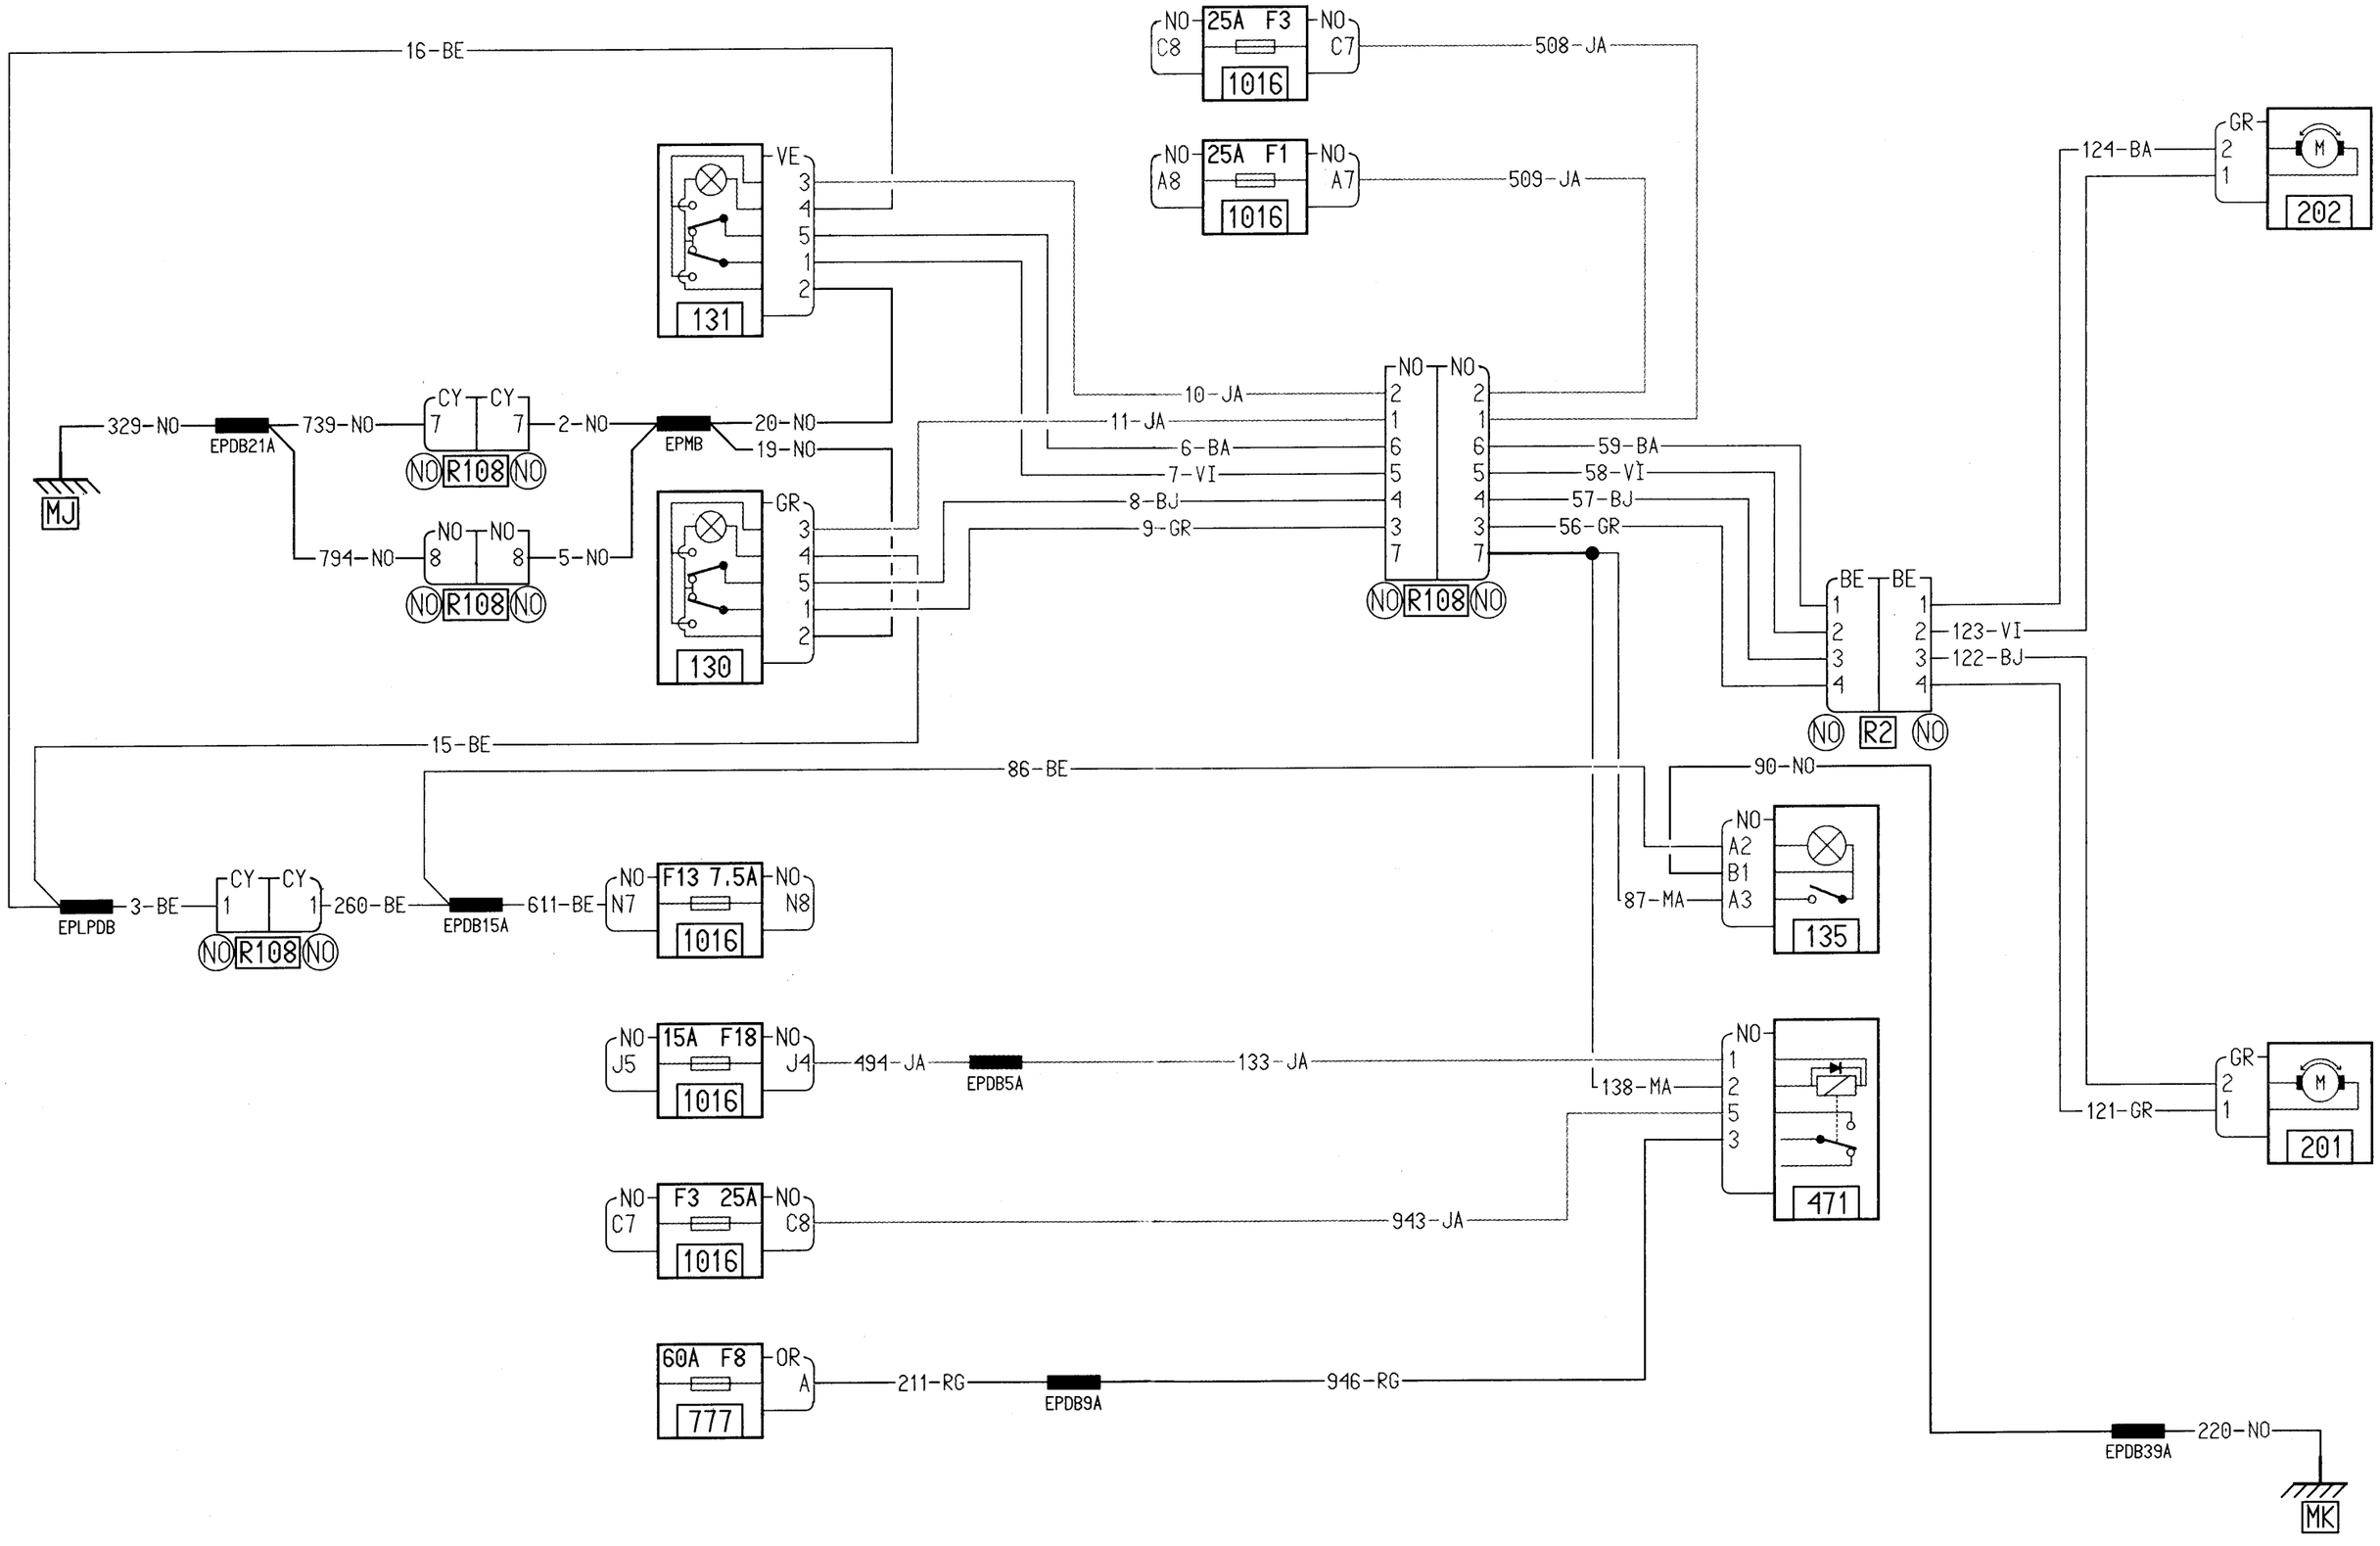


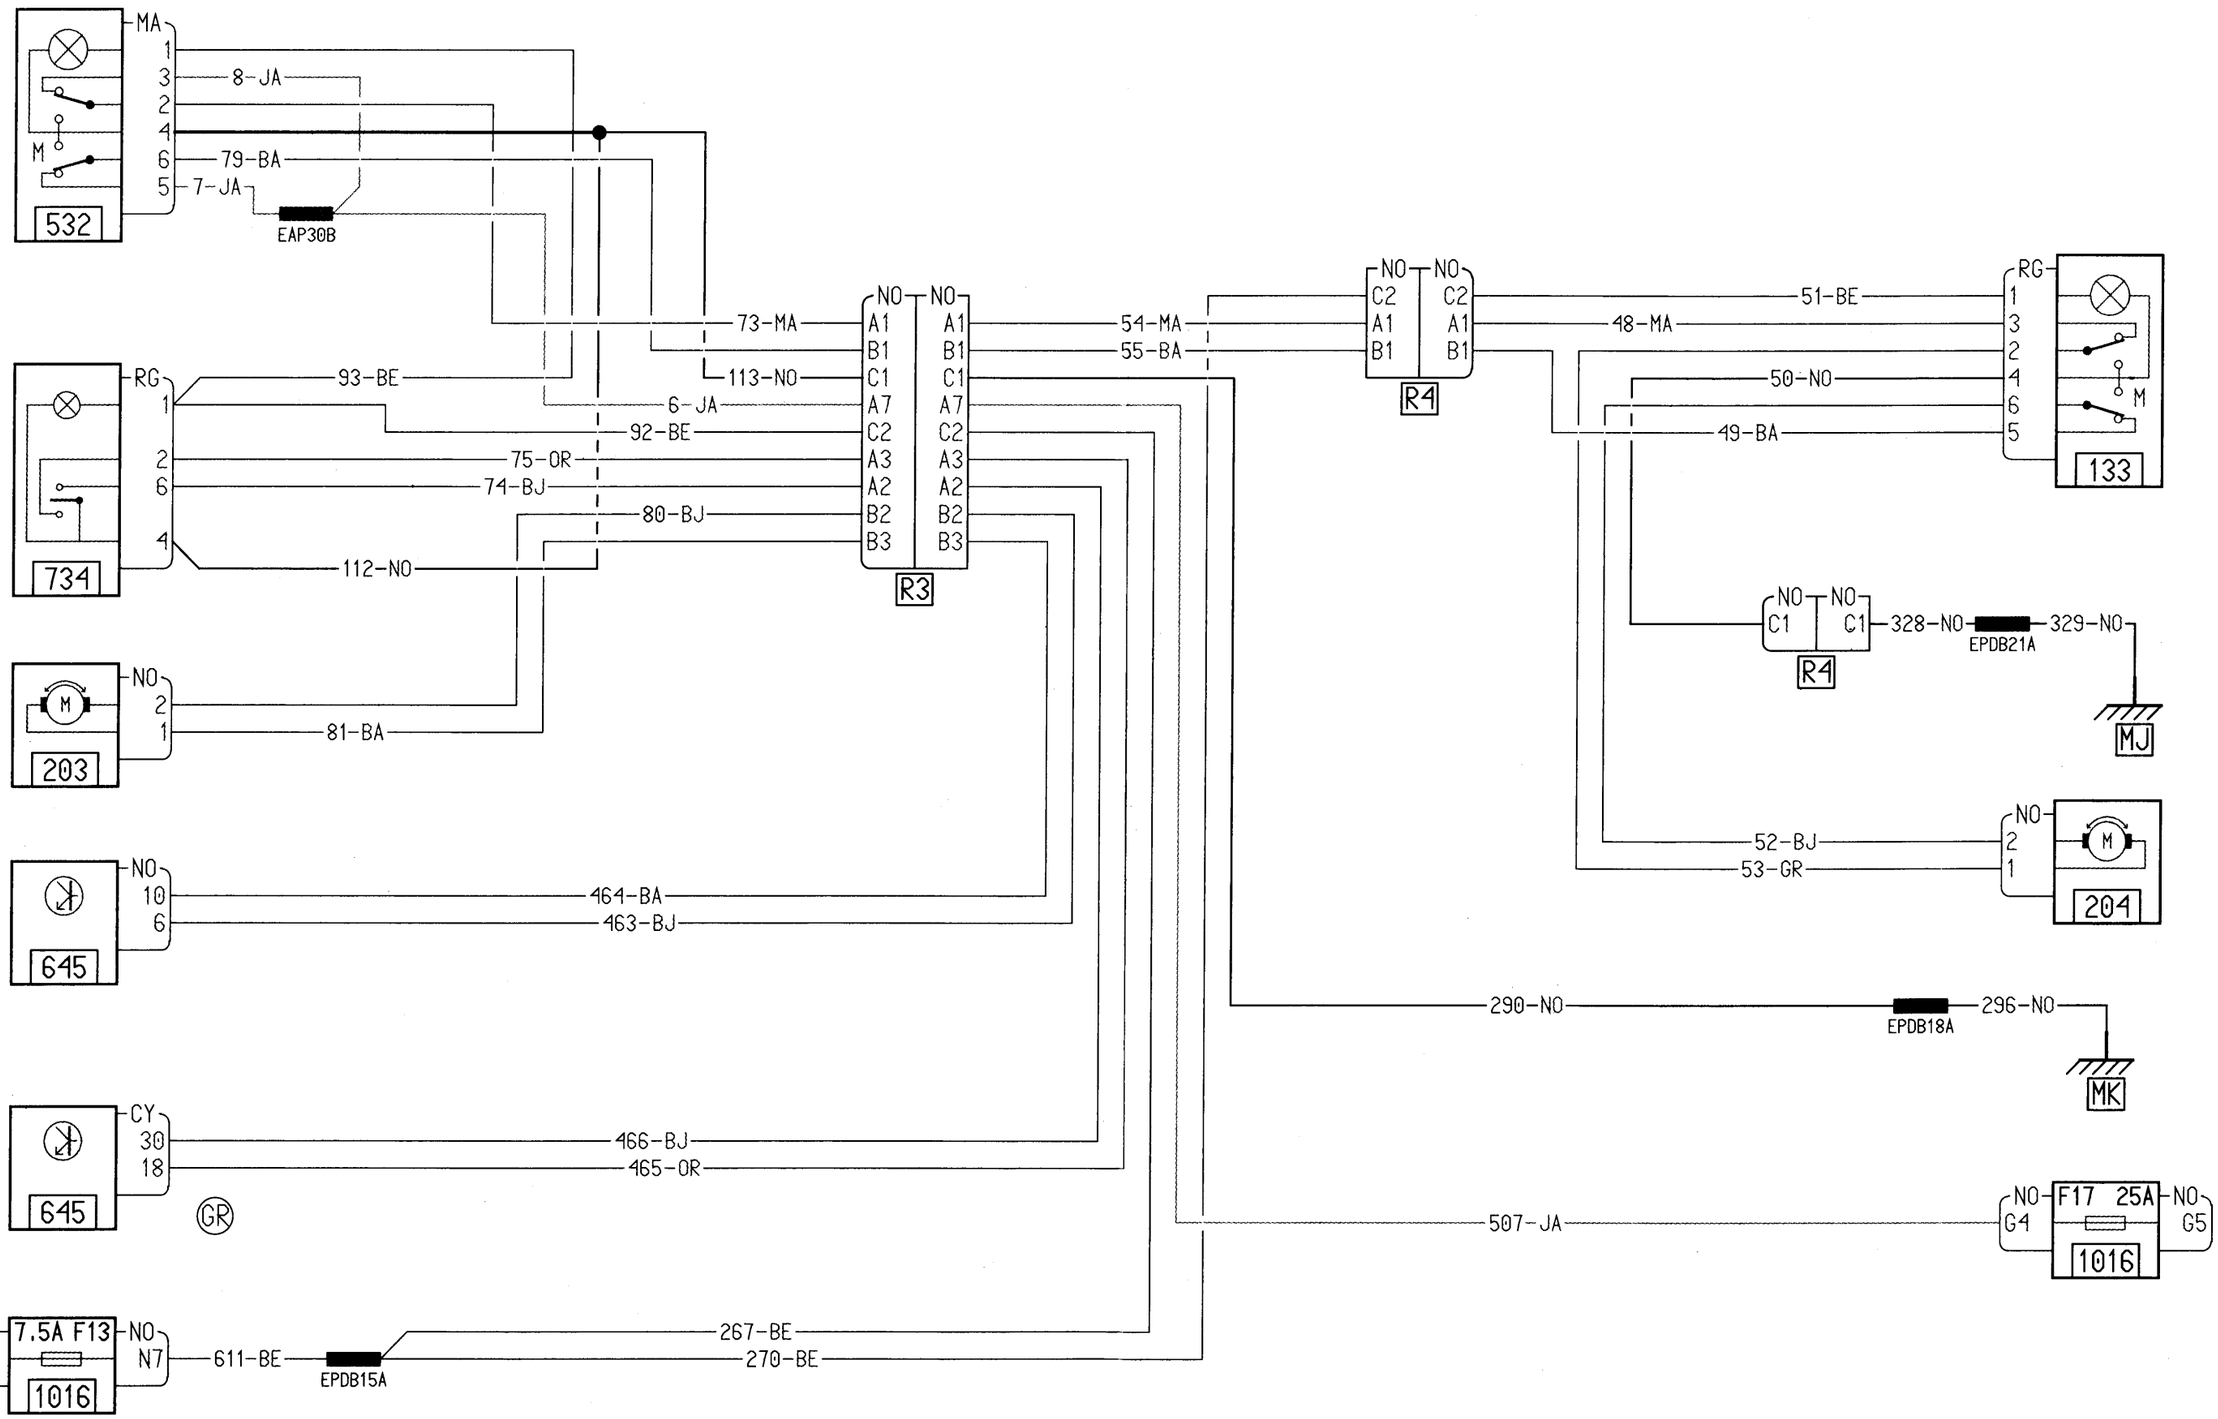

MA
1
3
8-JA
2
4
M
6
79-BA
5
7-JA
532
EAP30B
73-MA
113-NO
6-JA
92-BE
75-OR
74-BJ
80-BJ
112-NO
93-BE
RG
1
2
6
4
734
NO
2
1
81-BA
203
NO
10
6
464-BA
463-BJ
645
CY
30
18
466-BJ
465-OR
645
GR
NO
A1
B1
C1
A7
C2
A3
A2
B2
B3
R3
NO
A1
B1
C1
A7
C2
A3
A2
B2
B3
54-MA
55-BA
NO
C2
A1
B1
R4
NO
C2
A1
B1
51-BE
48-MA
50-NO
49-BA
RG
1
3
2
4
6
5
M
133
NO
C1
NO
C1
328-NO
EPDB21A
329-NO
R4
MJ
NO
2
1
M
52-BJ
53-GR
204
290-NO
EPDB18A
296-NO
MK
507-JA
NO
G4
F17 25A
NO
G5
1016
NO
N8
7.5A F13
NO
N7
611-BE
EPDB15A
267-BE
270-BE
1016


DRIVER'S ELECTRIC WINDOW

B64,D64,L64/E2/DG/LVAVEL

X642
00

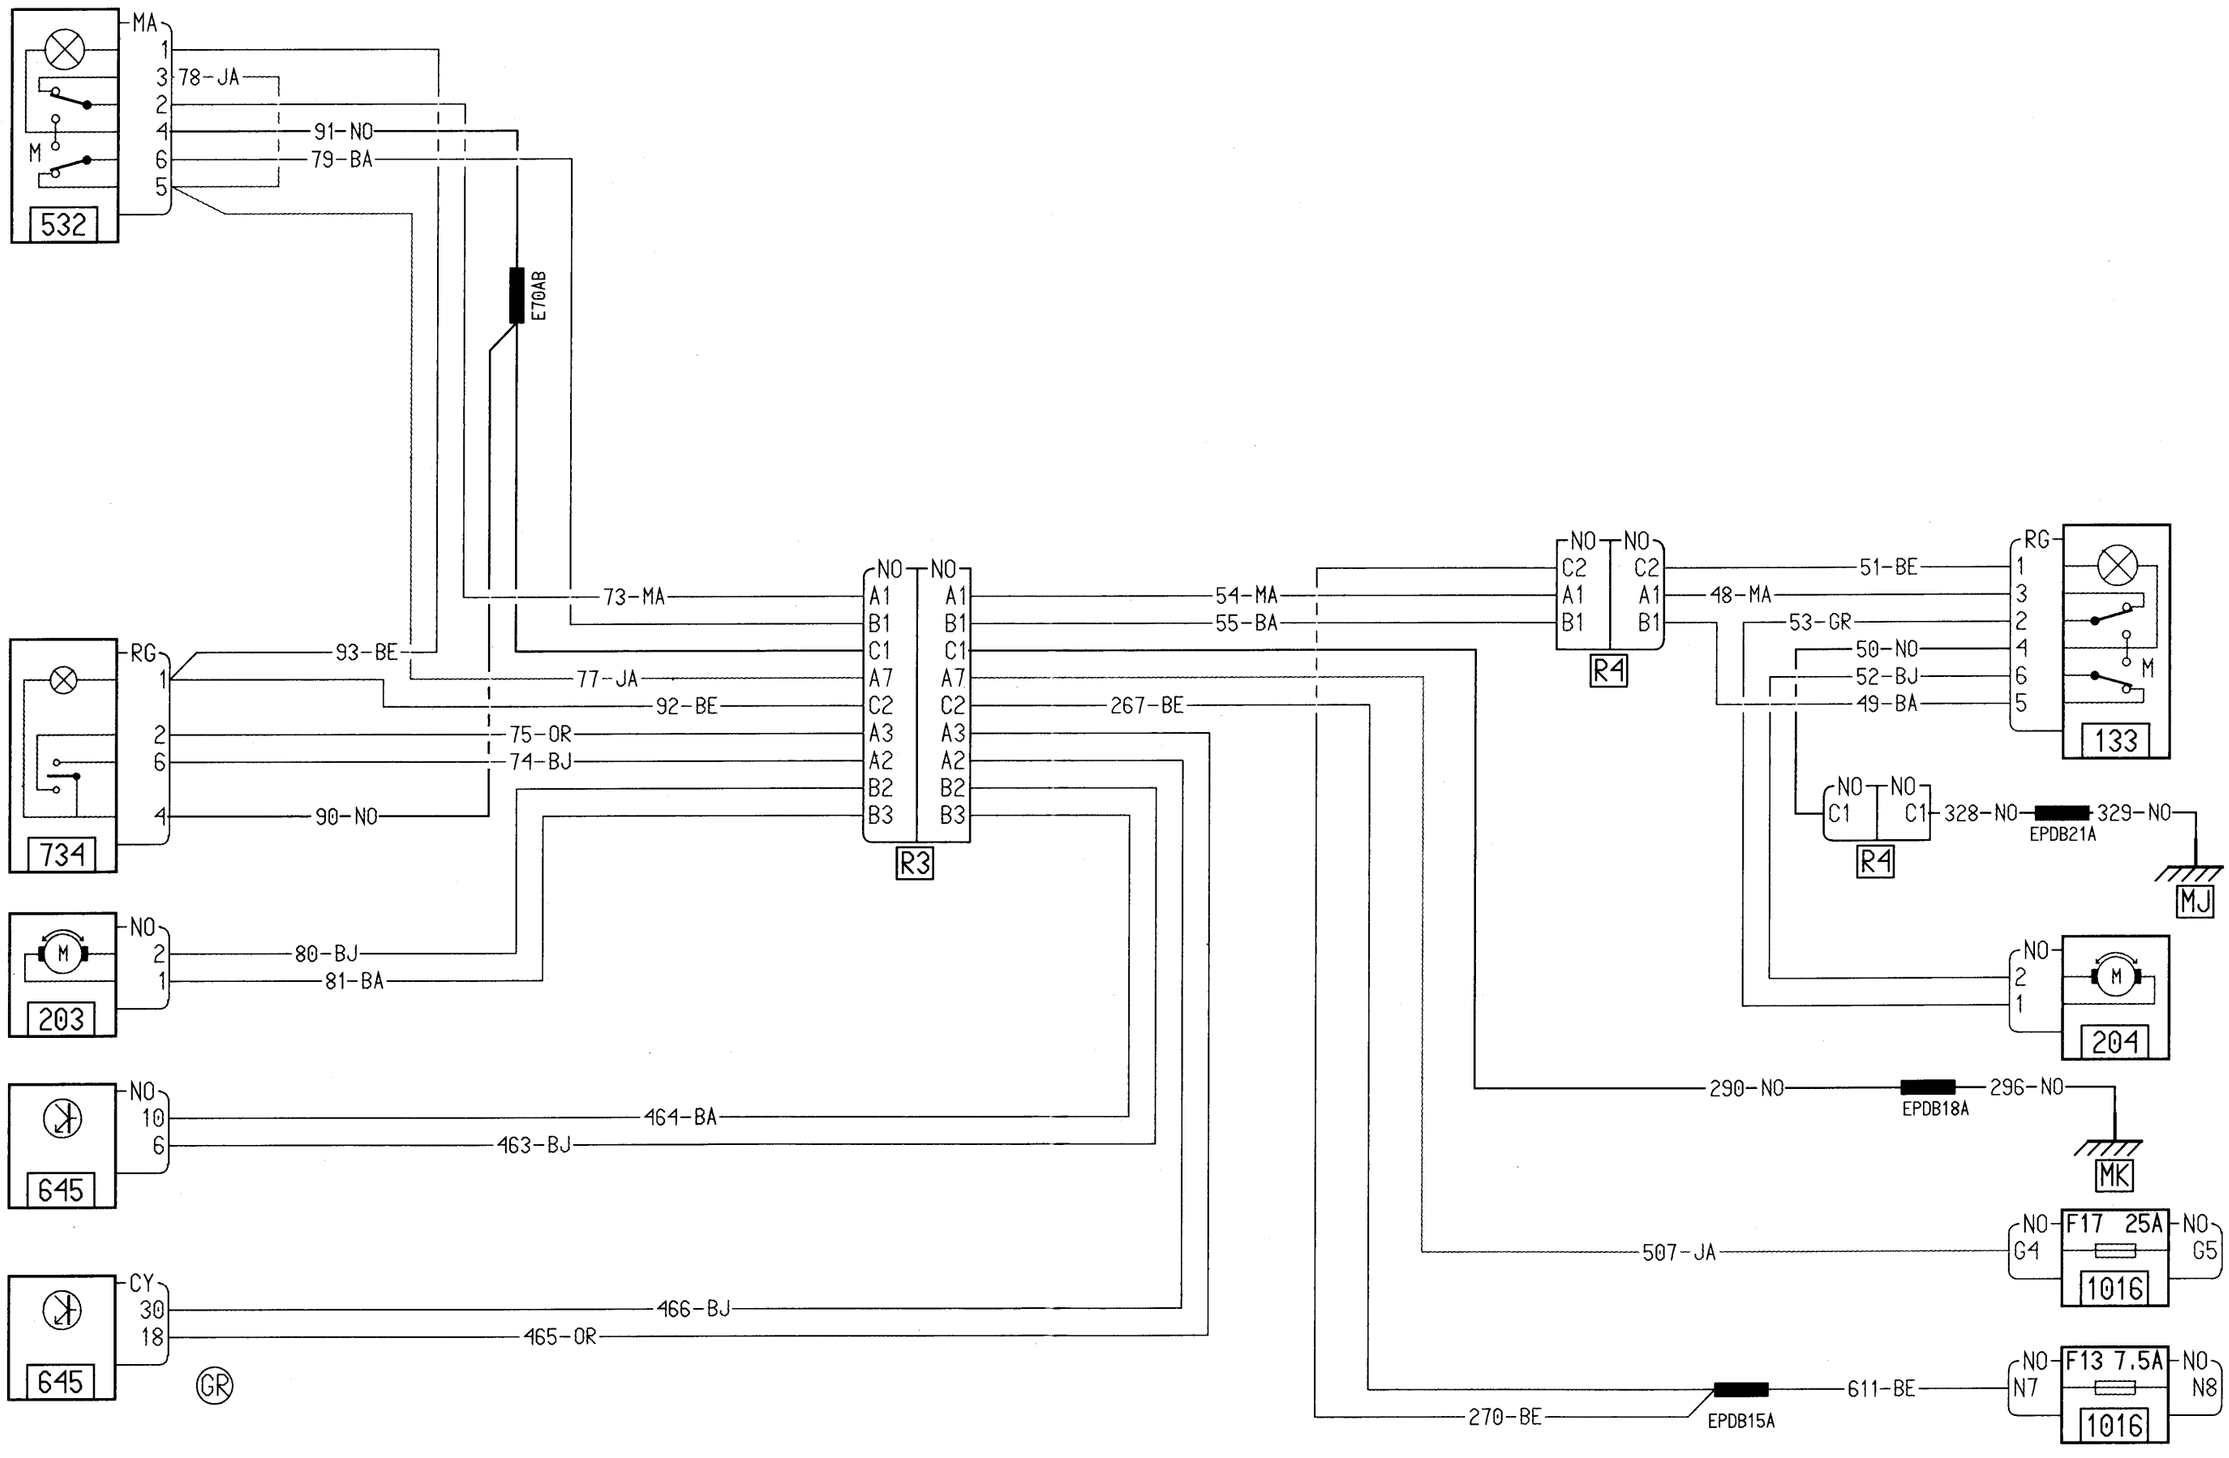

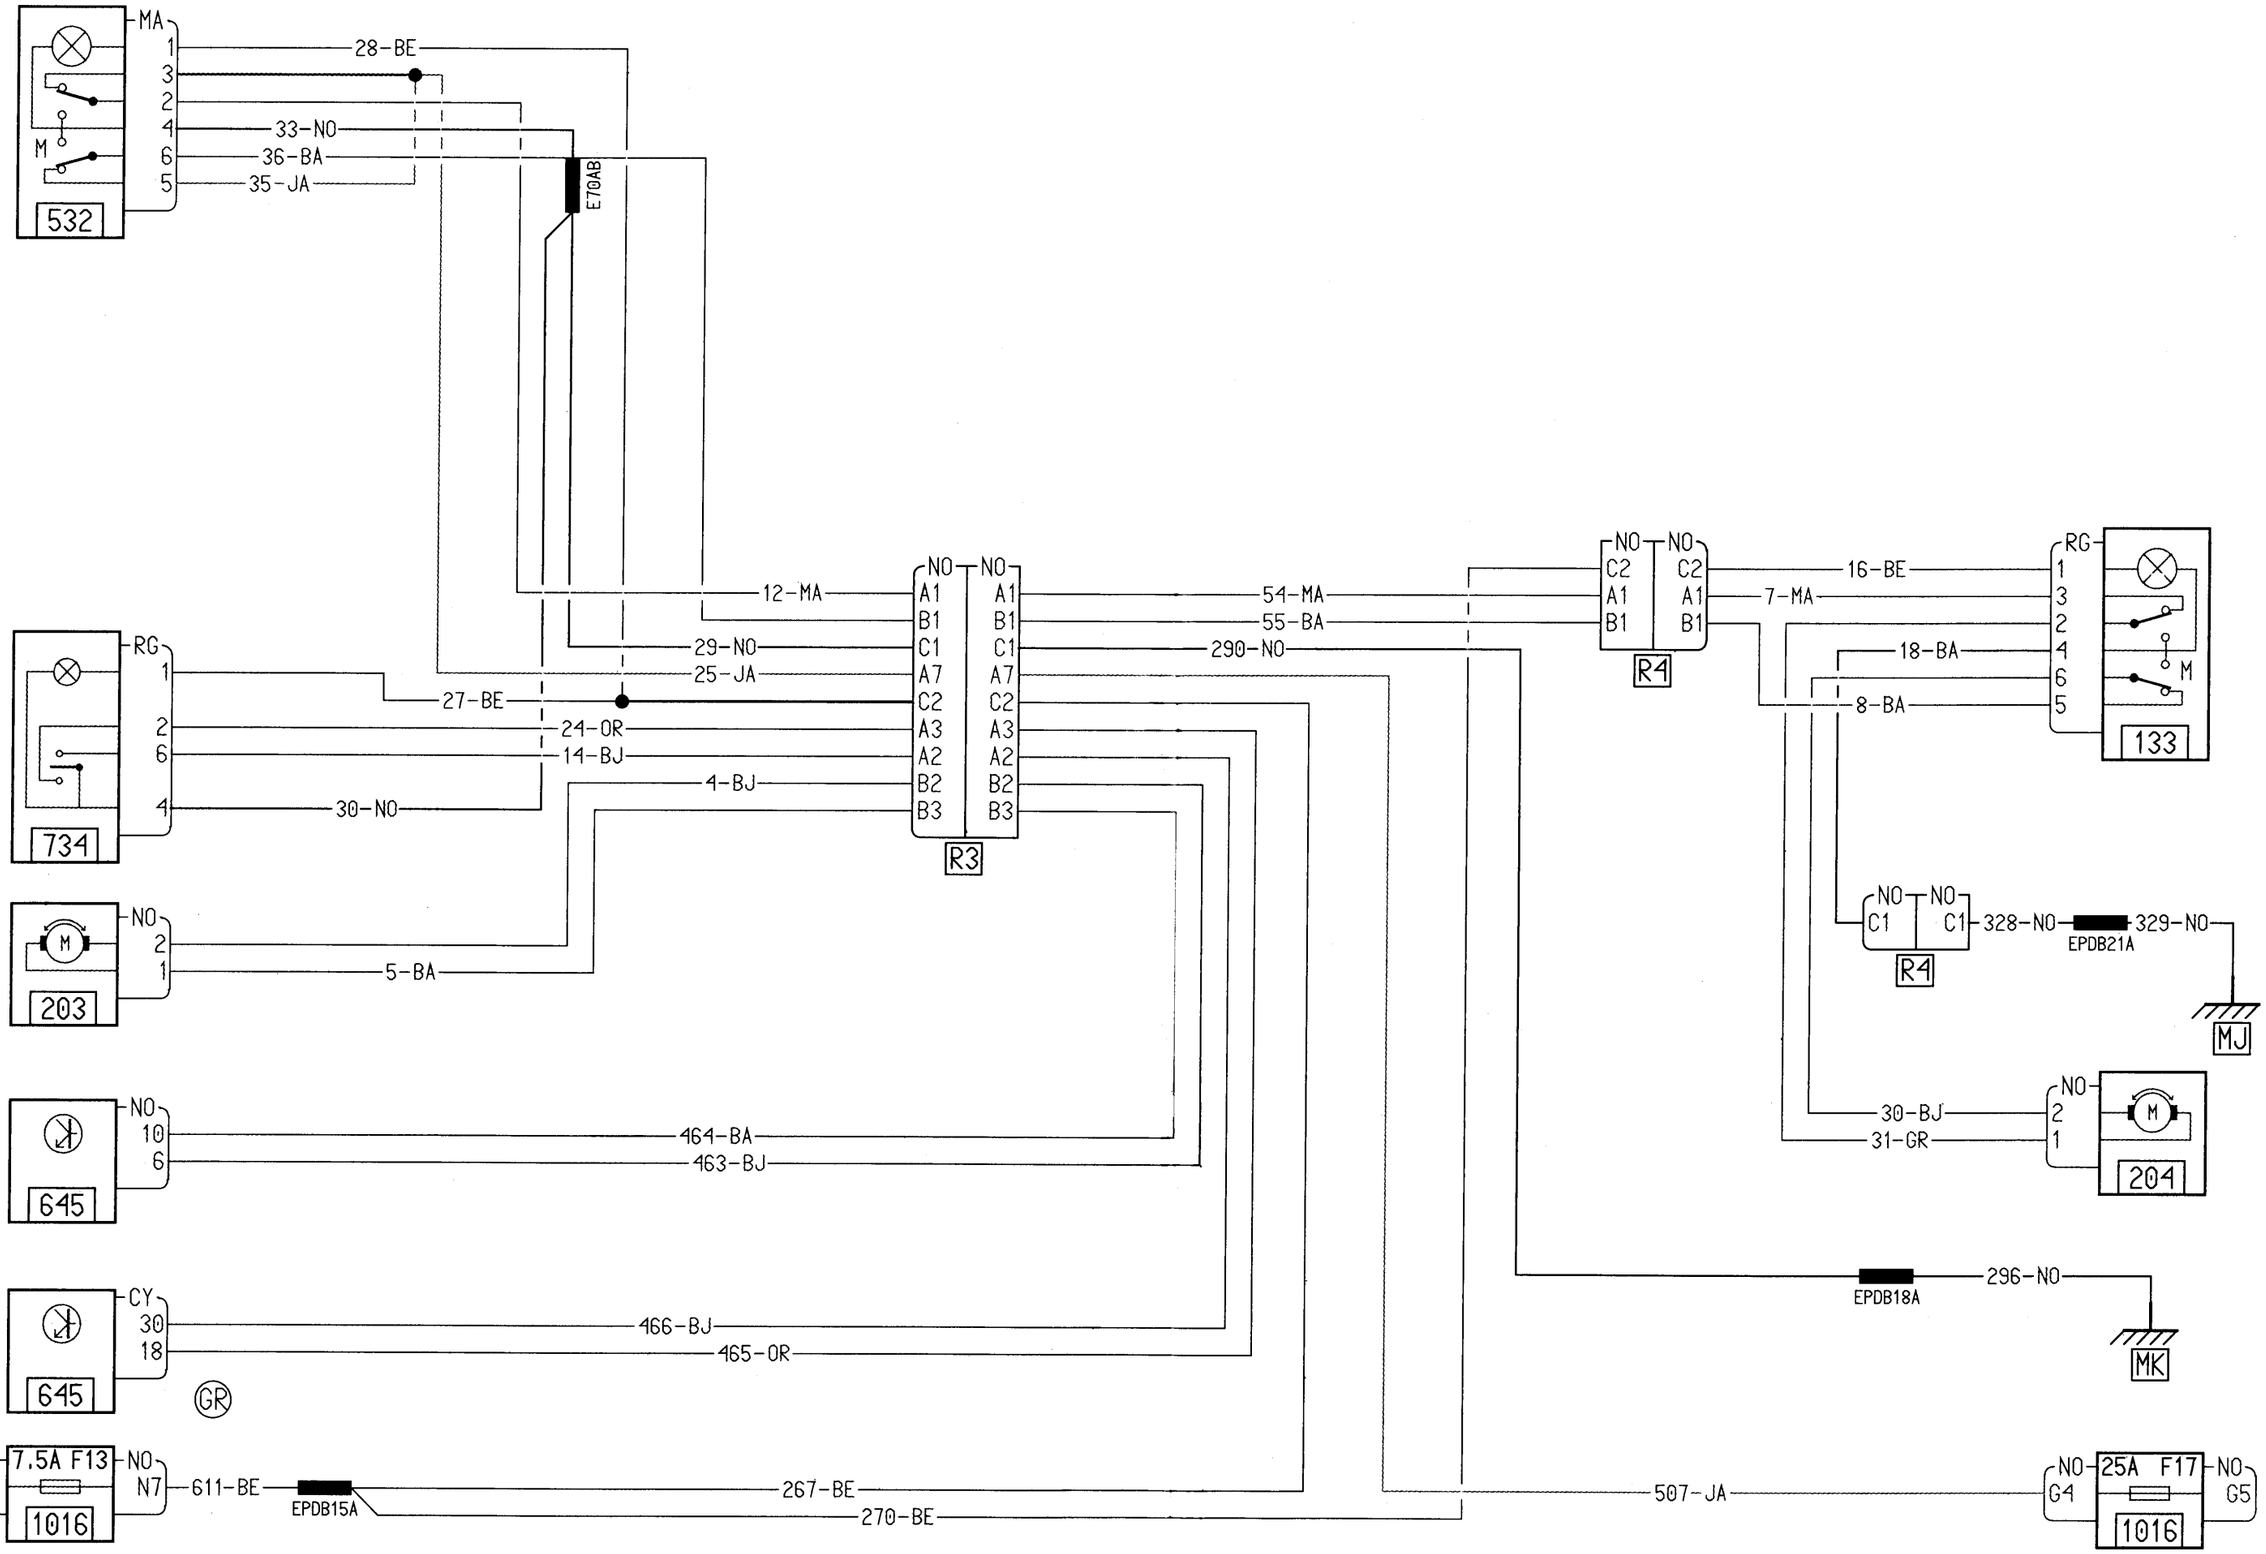

MA
1
3
2
4
6
5
M
532
28-BE
33-NO
36-BA
35-JA
E70AB
12-MA
29-NO
25-JA
27-BE
24-OR
14-BJ
4-BJ
30-NO
NO
A1
B1
C1
A7
C2
A3
A2
B2
B3
R3
54-MA
55-BA
290-NO
NO
C2
A1
B1
R4
RG
1
2
6
4
734
NO
2
1
M
203
5-BA
NO
10
6
645
464-BA
463-BJ
CY
30
18
645
466-BJ
465-OR
GR
NO
N8
7.5A F13
NO
N7
1016
611-BE
EPDB15A
267-BE
270-BE
507-JA
NO
G4
25A F17
NO
G5
1016
16-BE
7-MA
18-BA
8-BA
RG
1
3
2
4
6
5
M
133
NO
C1
C1
R4
328-NO
EPDB21A
329-NO
MJ
30-BJ
31-GR
NO
2
1
M
204
EPDB18A
296-NO
MK

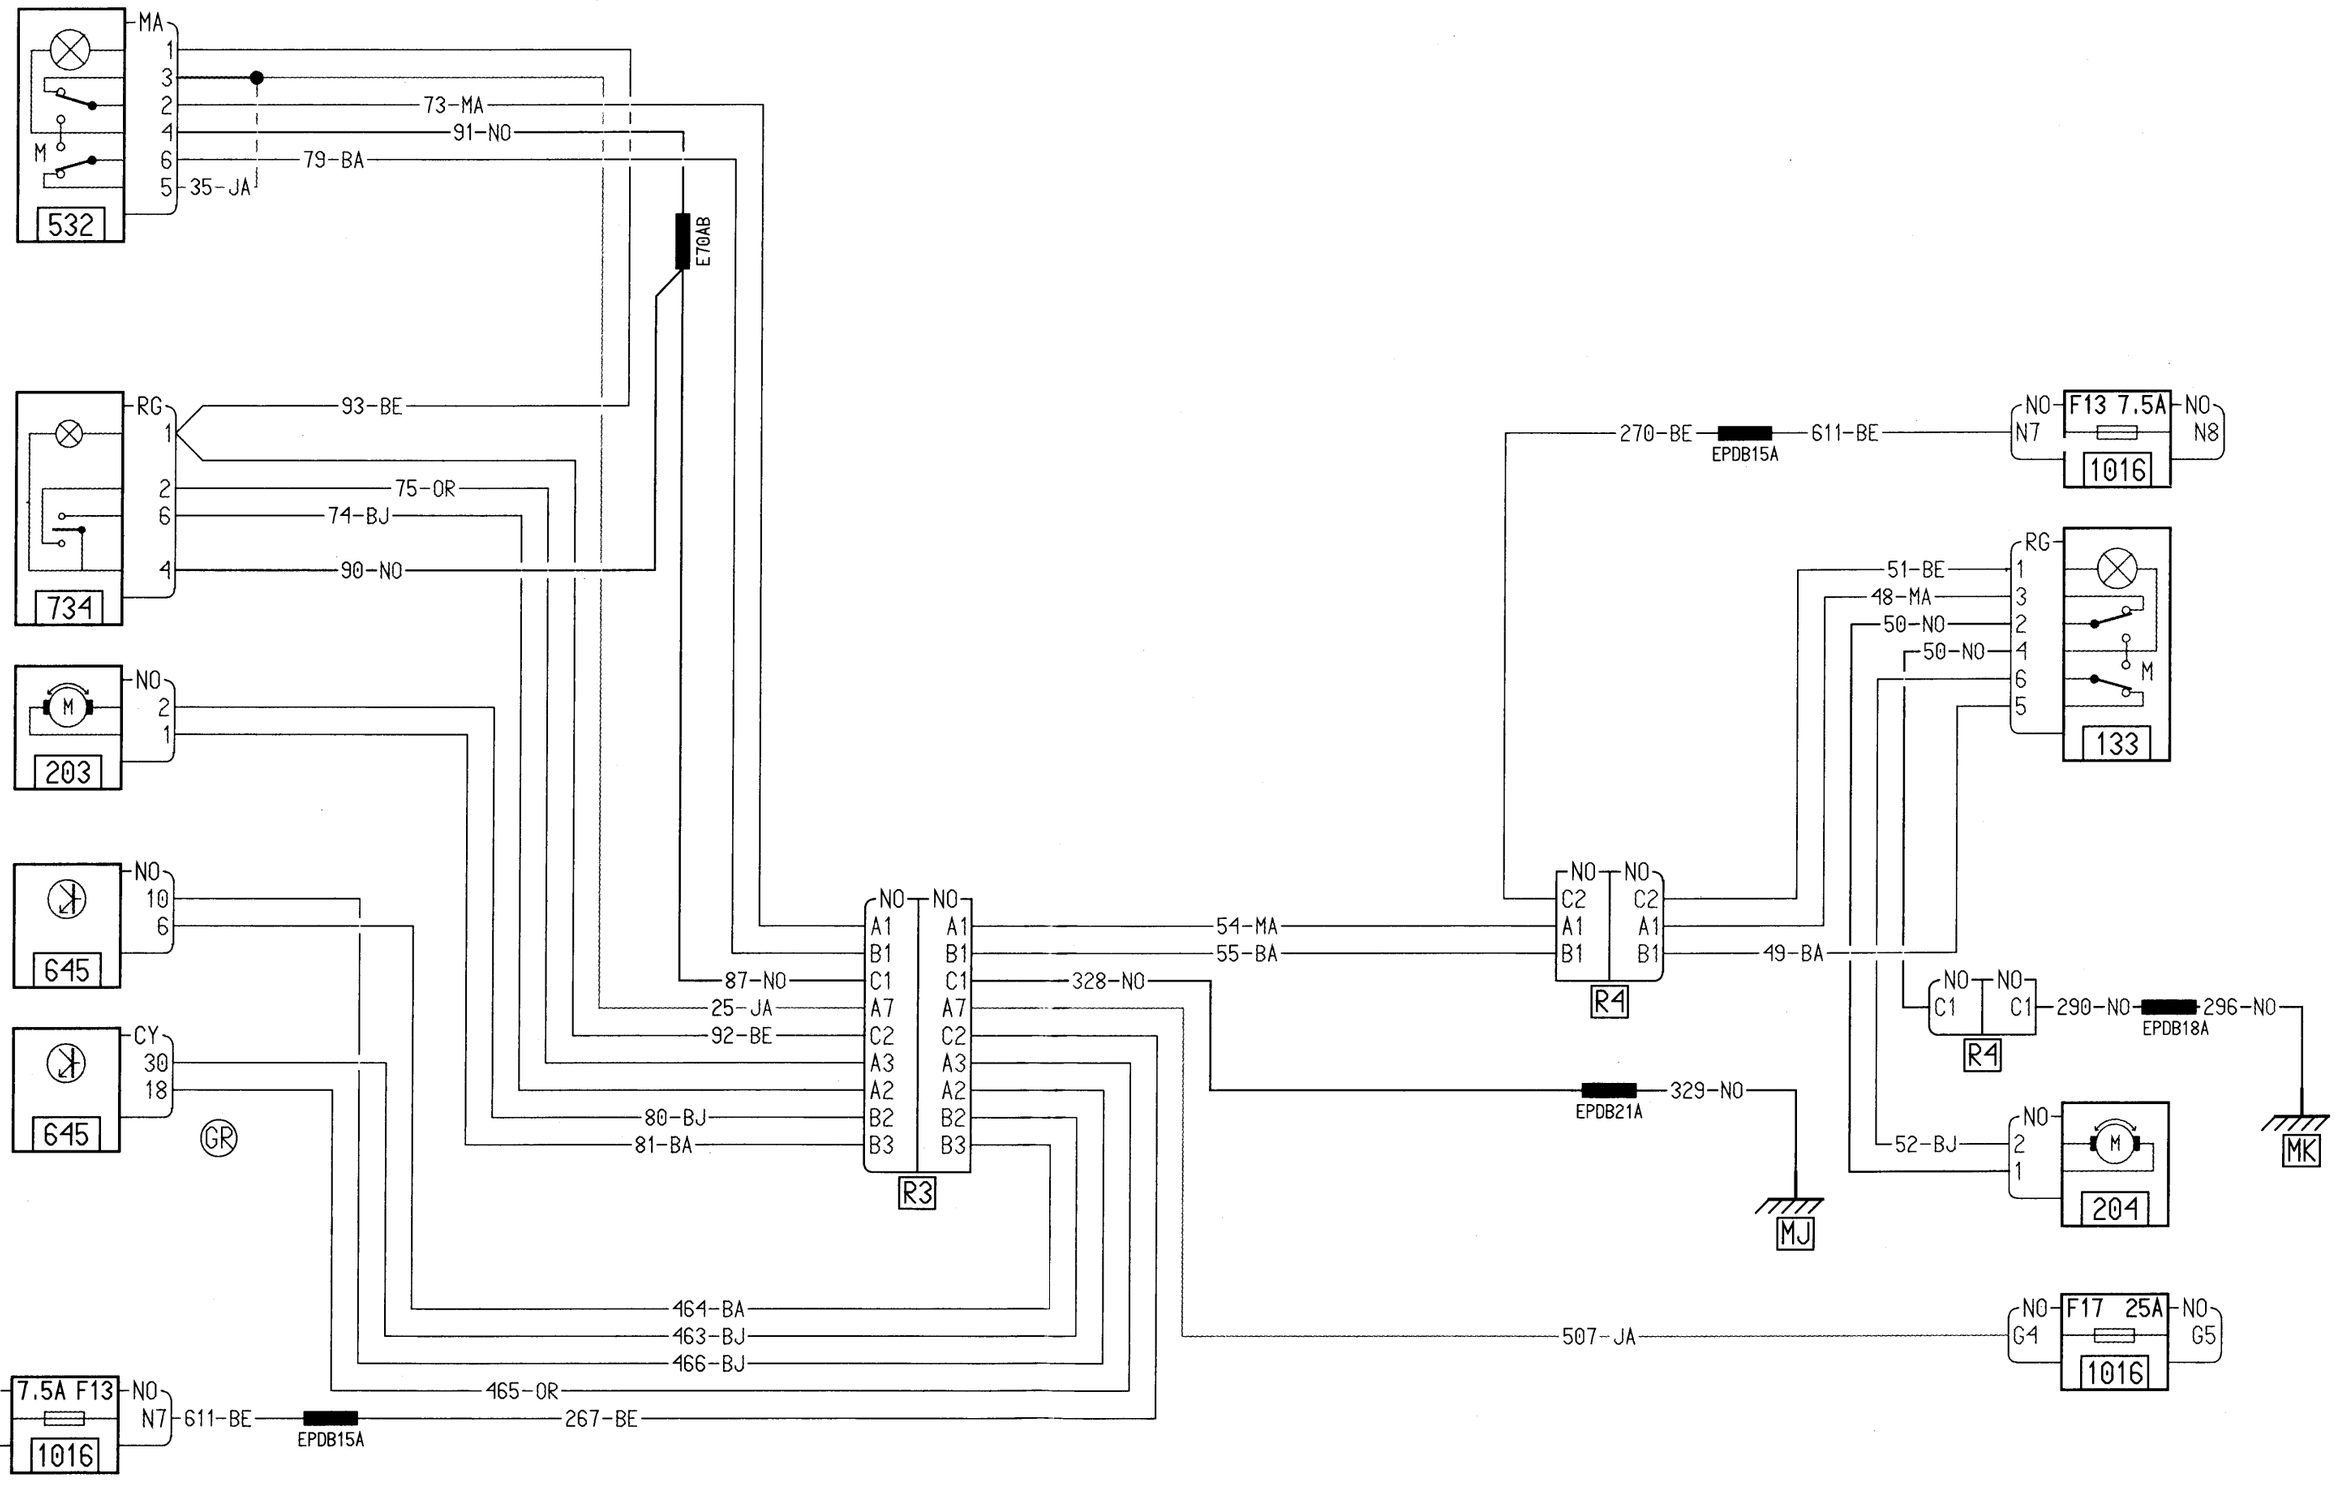

MA
1
3
2
73-MA
4
91-NO
M
6
79-BA
5
35-JA
532
E70AB
RG
93-BE
1
2
75-OR
6
74-BJ
4
90-NO
734
NO
2
1
M
203
NO
10
6
645
CY
30
18
645
GR
NO
A1
B1
C1
A7
C2
A3
A2
B2
B3
R3
87-NO
25-JA
92-BE
80-BJ
81-BA
NO
7.5A F13
N8
N7
1016
611-BE
EPDB15A
267-BE
465-OR
464-BA
463-BJ
466-BJ
270-BE
EPDB15A
611-BE
NO
F13 7.5A
N7
N8
1016
RG
51-BE
48-MA
50-NO
50-NO
1
3
2
4
6
5
M
133
NO
C2
A1
B1
R4
54-MA
55-BA
328-NO
329-NO
EPDB21A
MJ
49-BA
NO
C1
R4
290-NO
EPDB18A
296-NO
MK
52-BJ
NO
2
1
M
204
NO
F17 25A
G4
G5
1016
507-JA

HOOD MODULE

E64/E2/DG/CATOEL

X642
00

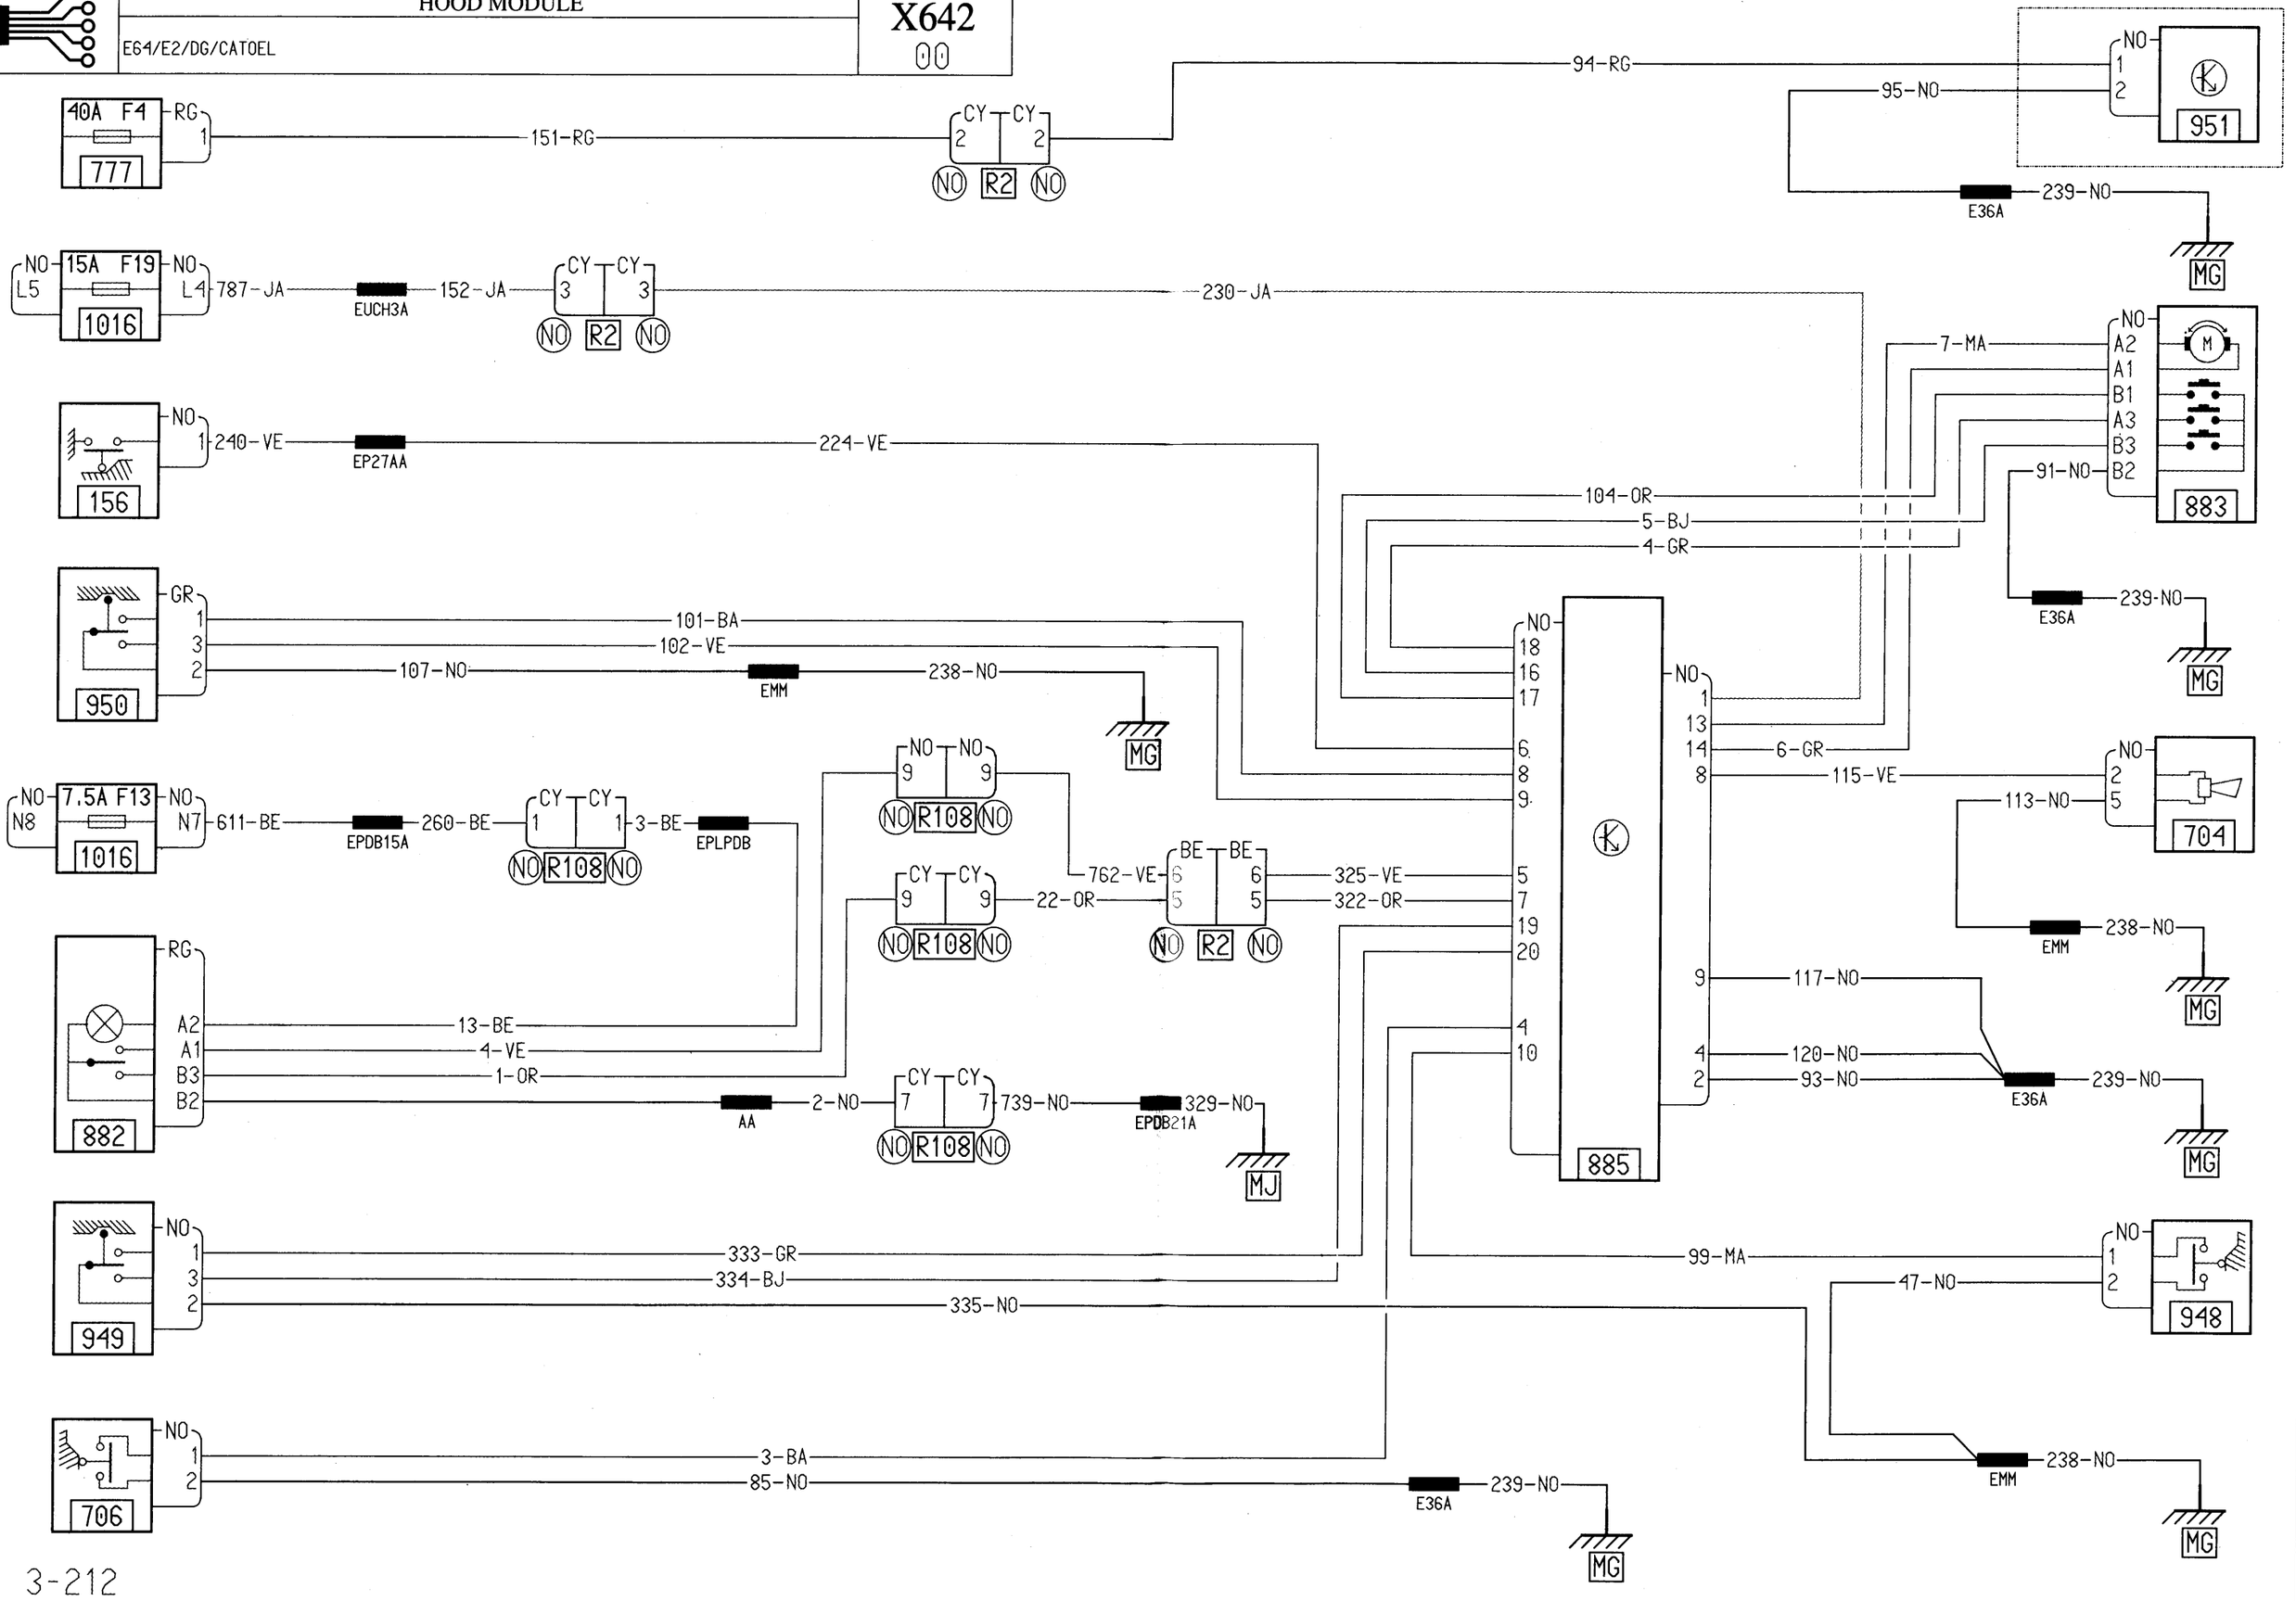


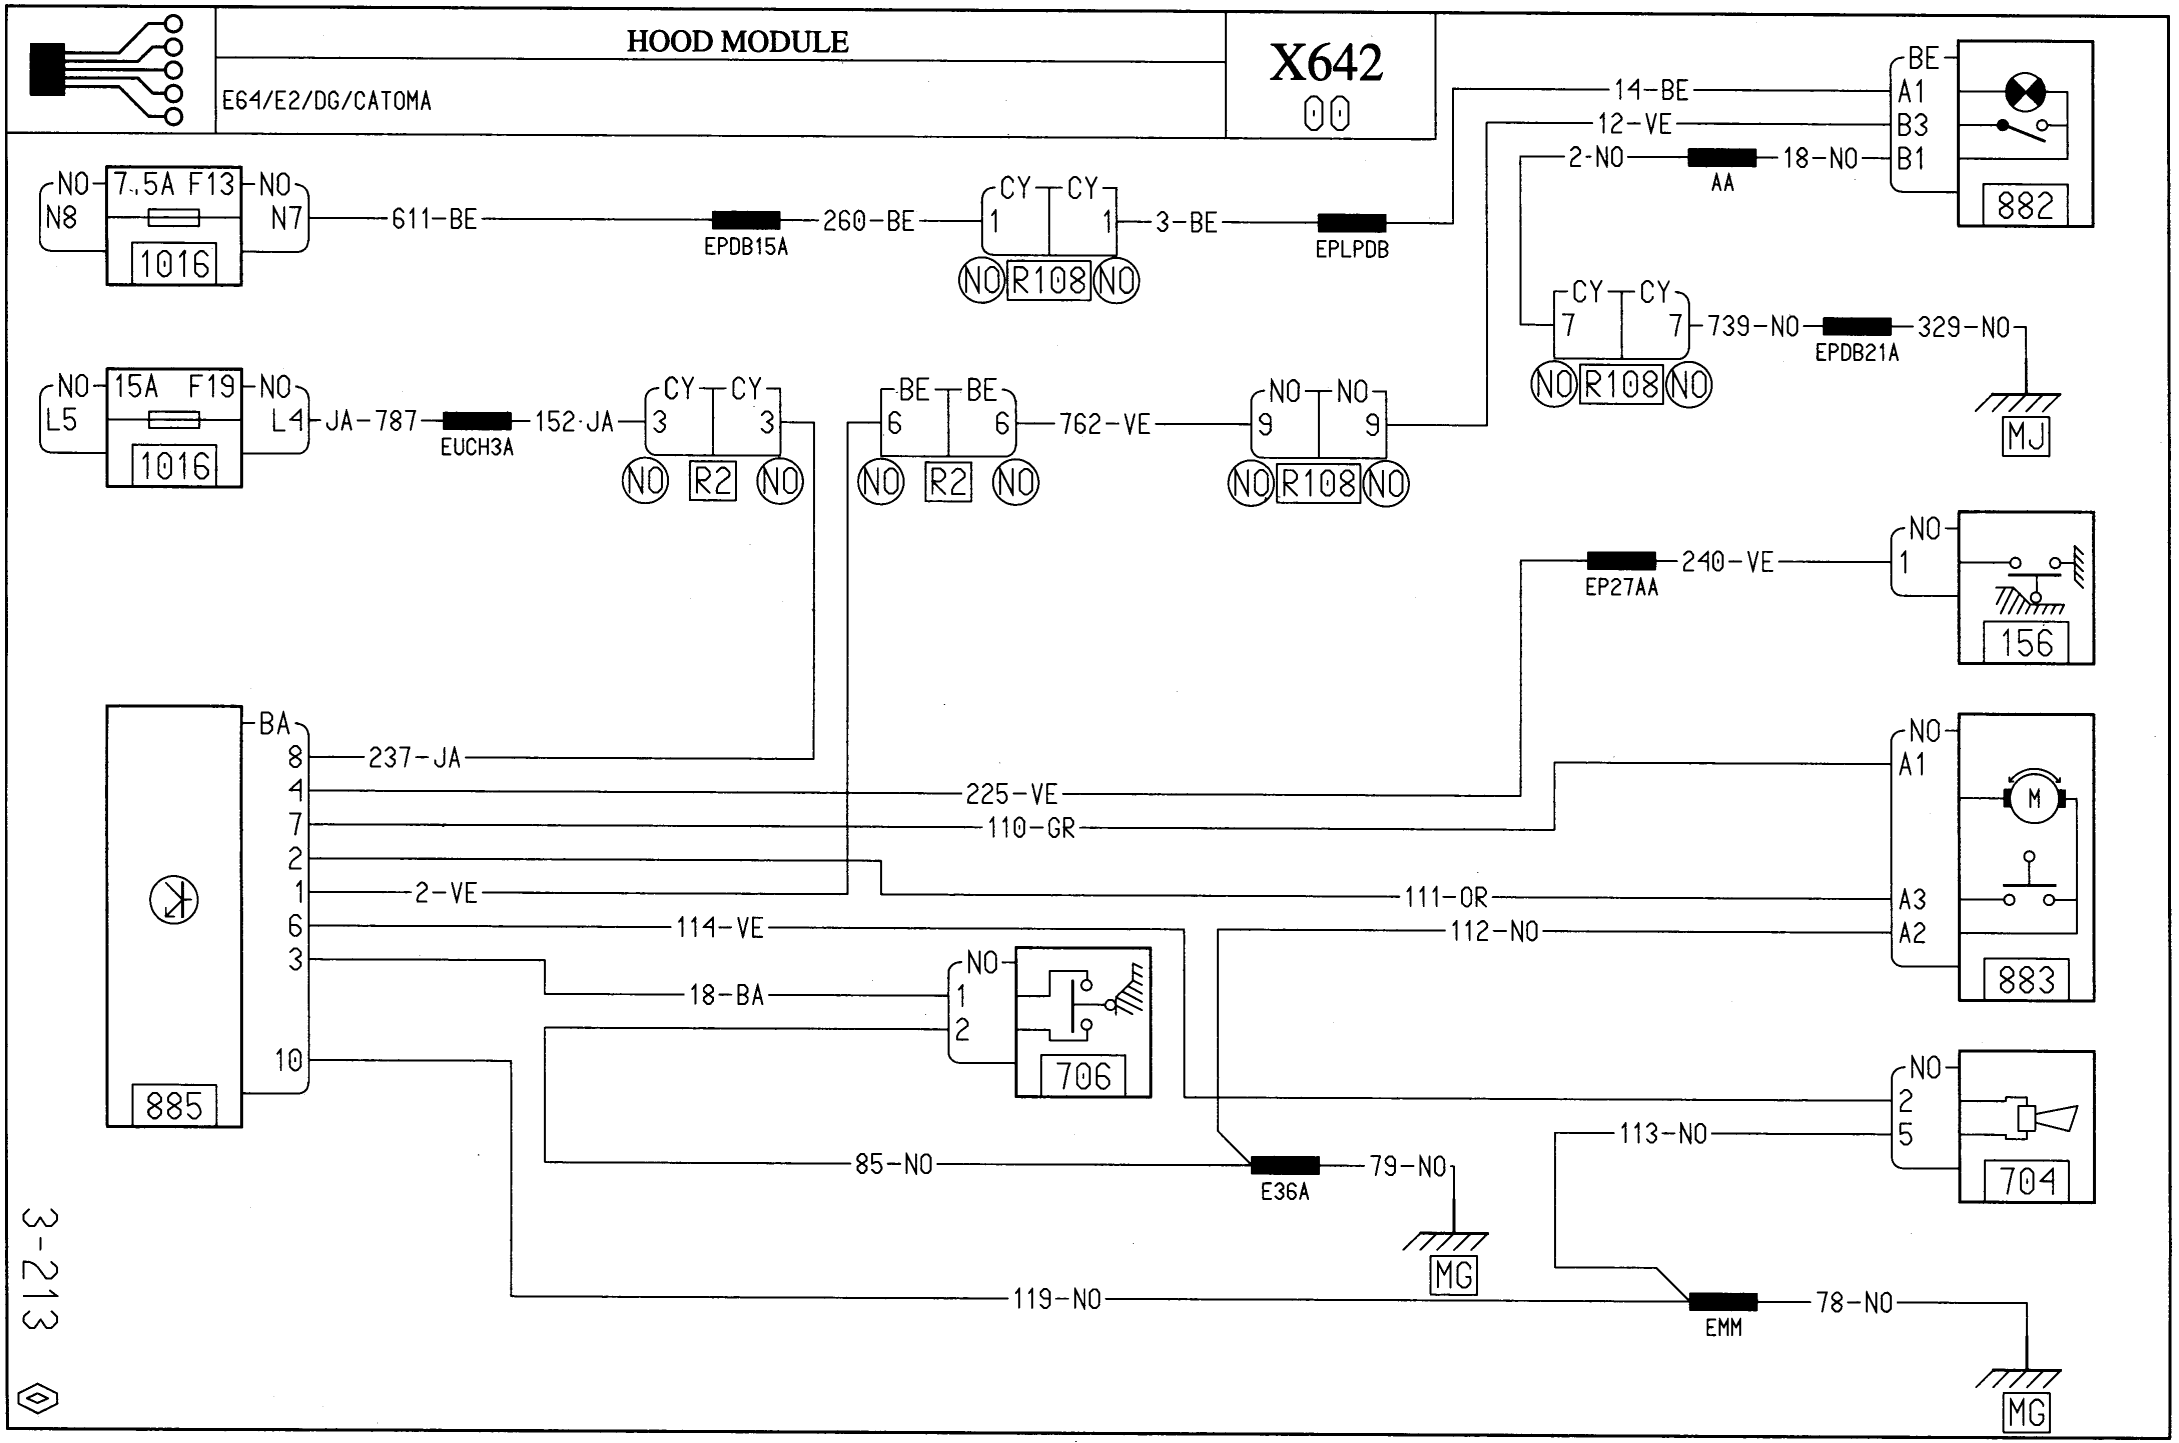

HOOD MODULE
E64/E2/DG/CATOMA
X642
00
NO N8
7.5A F13
NO N7
1016
611-BE
EPDB15A
260-BE
CY 1
CY 1
NO R108 NO
3-BE
EPLPDB
14-BE
12-VE
2-NO
AA
18-NO
BE A1 B3 B1
882
CY 7
CY 7
NO R108 NO
739-NO
EPDB21A
329-NO
MJ
NO L5
15A F19
NO L4
1016
JA-787
EUCH3A
152-JA
CY 3
CY 3
NO R2 NO
BE 6
BE 6
NO R2 NO
762-VE
NO 9
NO 9
NO R108 NO
EP27AA
240-VE
NO 1
156
BA
8
4
7
2
1
6
3
10
237-JA
225-VE
110-GR
2-VE
111-OR
114-VE
112-NO
18-BA
885
NO 1 2
706
NO A1 A3 A2
M
883
NO 2 5
704
85-NO
E36A
79-NO
MG
113-NO
119-NO
EMM
78-NO
MG


CLOCK


E2/SRADIO


X642
00

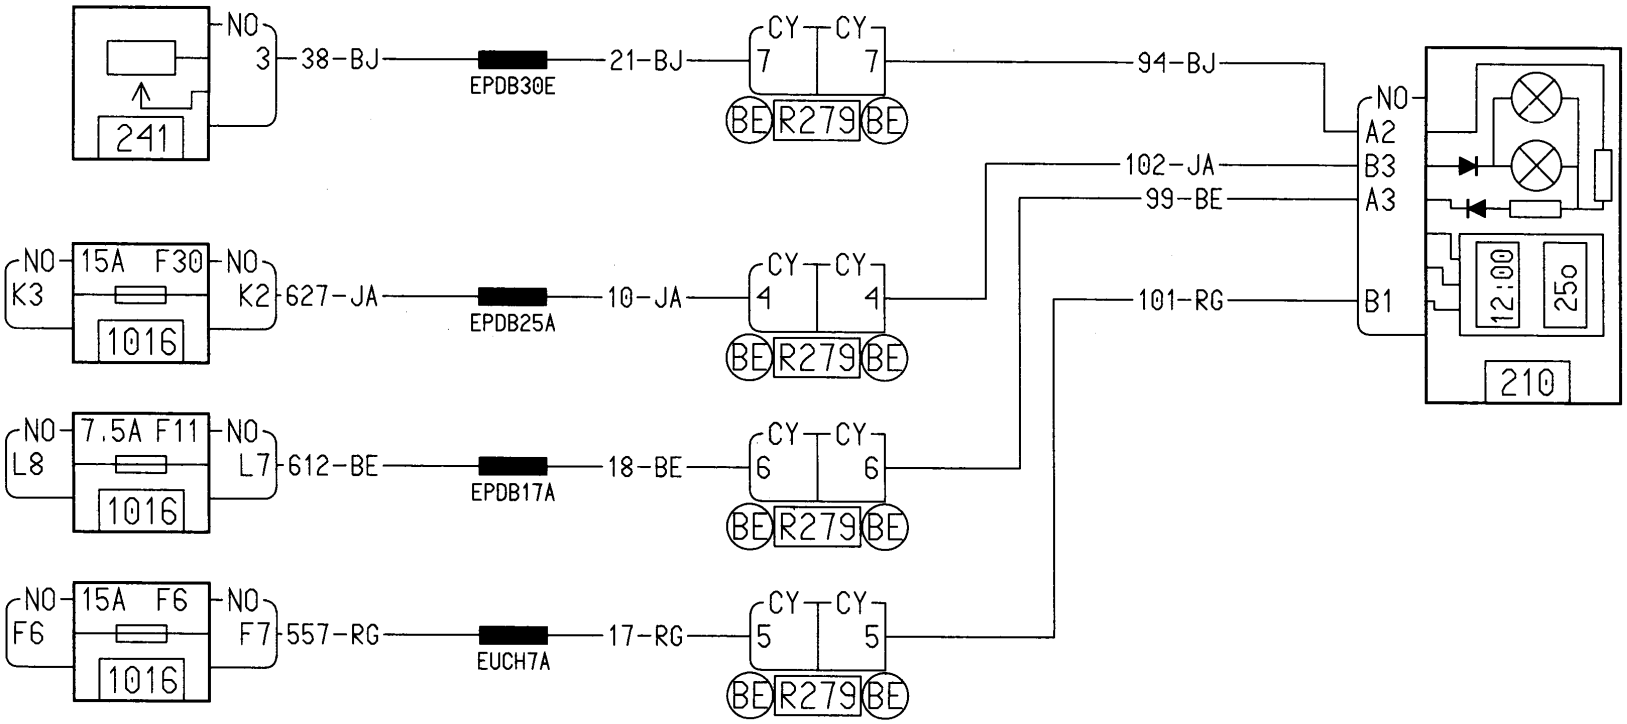


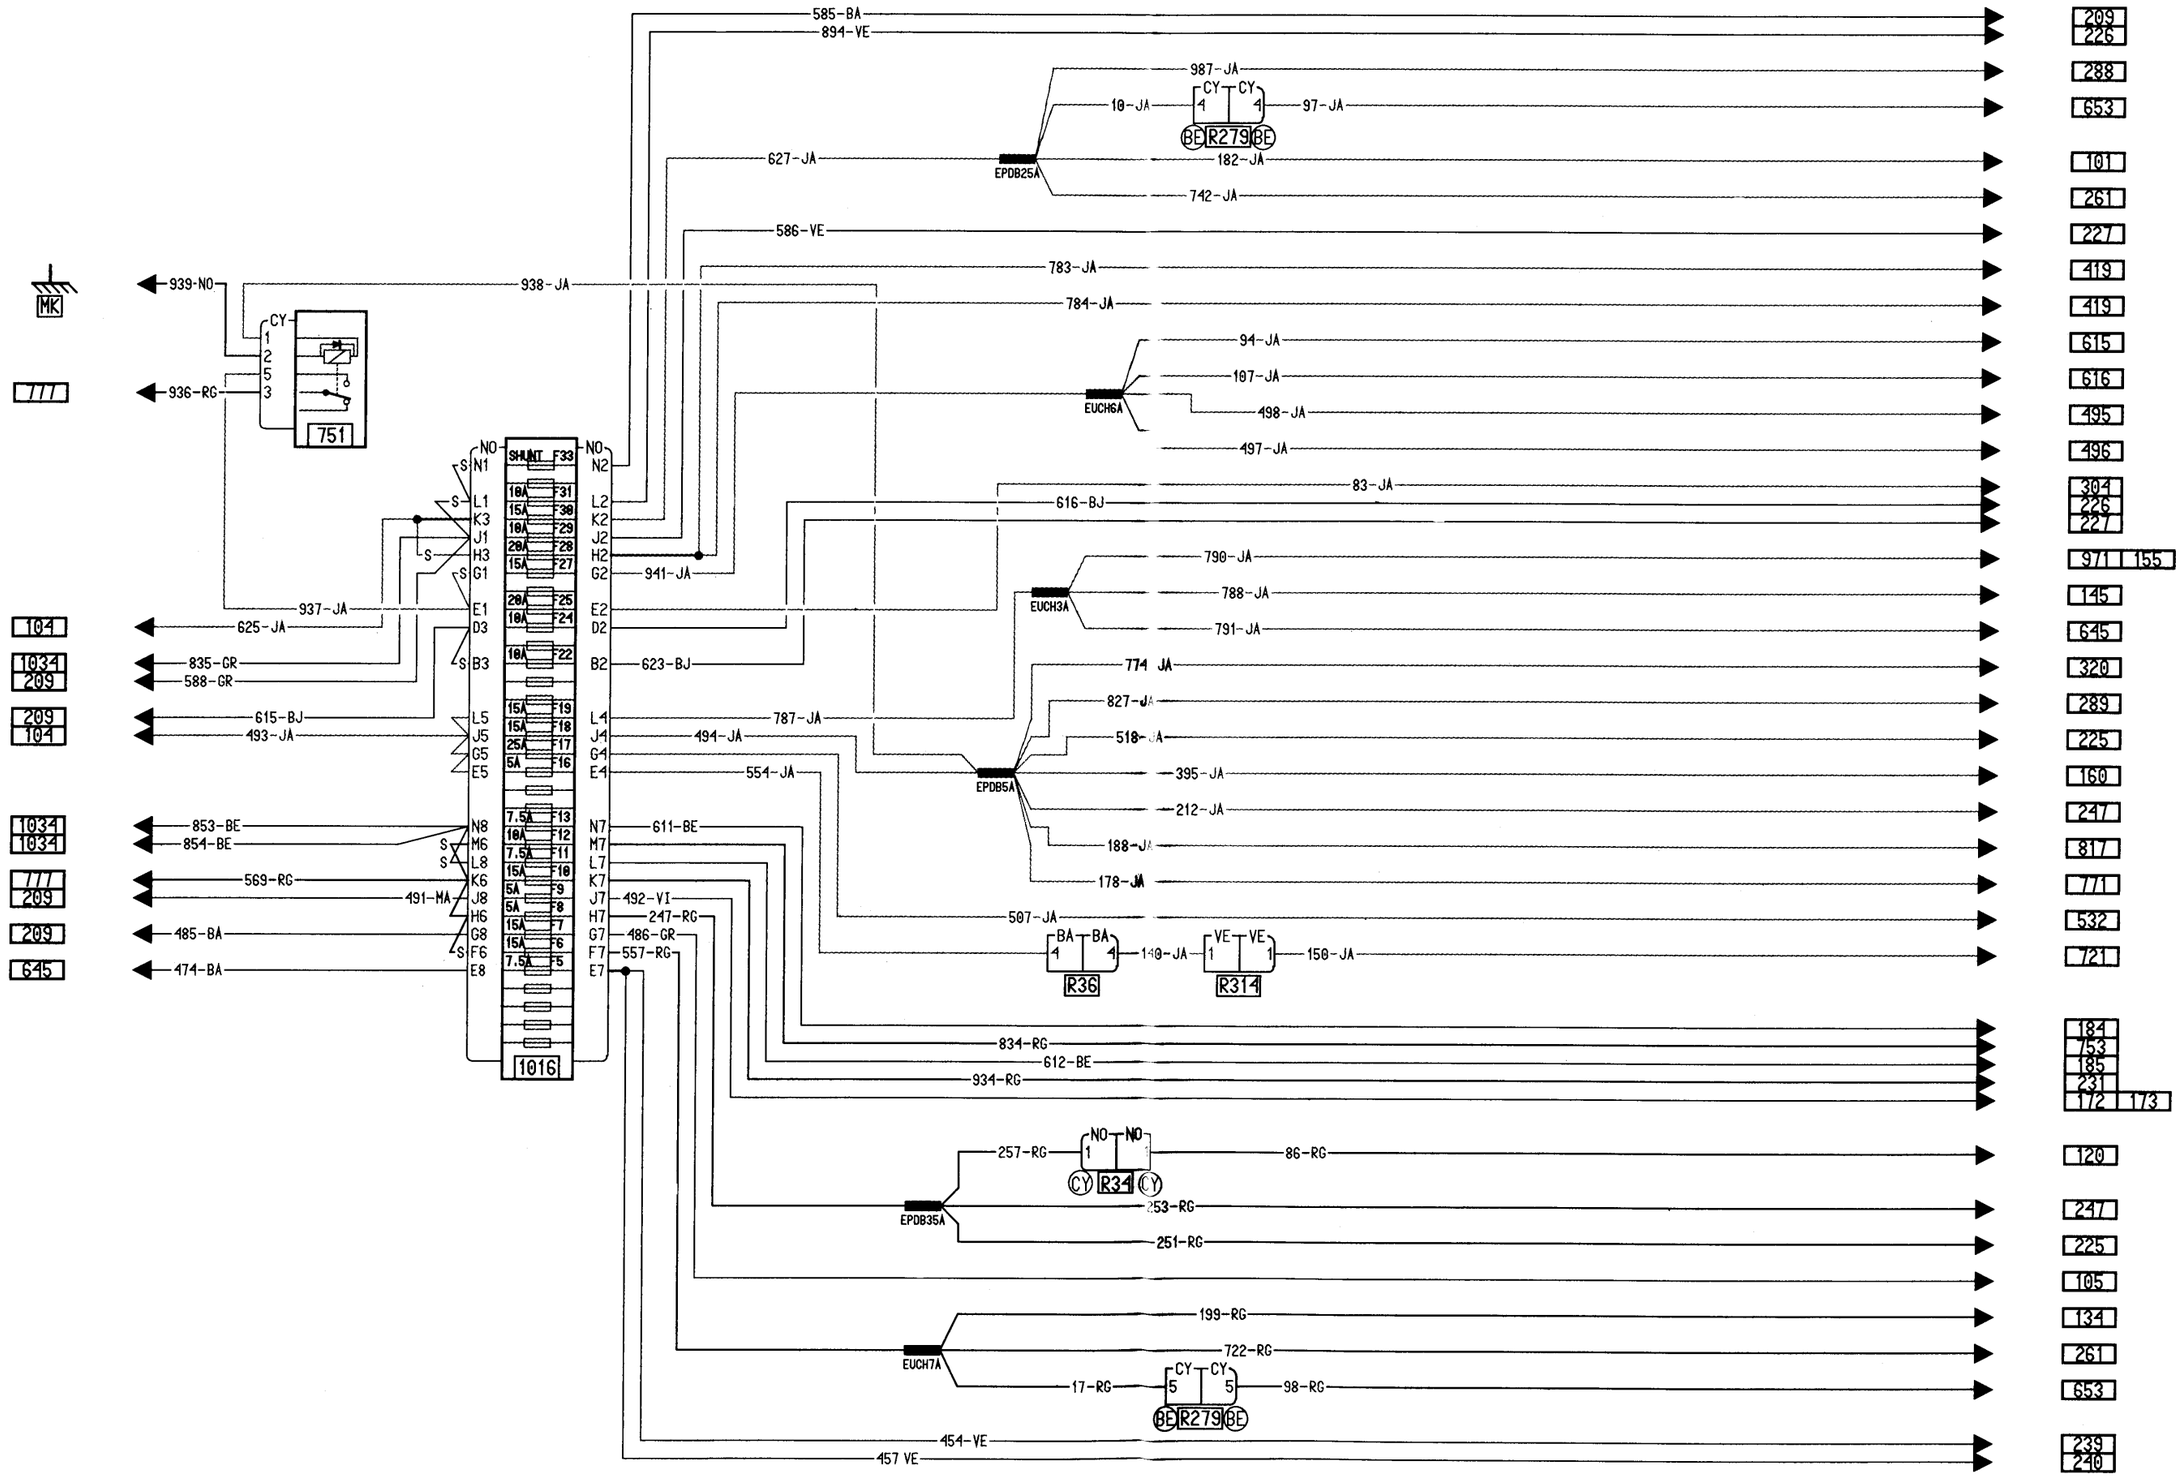
MK
777
939-NO
936-RG
938-JA
CY
751
937-JA
104
625-JA
1034
209
835-GR
588-GR
209
104
615-BJ
493-JA
1034
1034
853-BE
854-BE
777
209
569-RG
491-MA
209
485-BA
645
474-BA
NO
S N1
S L1
K3
J1
S H3
S G1
E1
D3
S B3
L5
J5
G5
E5
N8
S M6
S L8
K6
J8
H6
G8
S F6
E8
SHUNT F33
10A F31
15A F30
10A F29
20A F28
15A F27
20A F26
10A F24
10A F22
15A F19
15A F18
25A F17
5A F16
7.5A F13
10A F12
7.5A F11
15A F10
5A F9
5A F8
15A F7
15A F6
7.5A F5
1016
NO N2
L2
K2
J2
H2
G2
941-JA
E2
D2
B2
623-BJ
L4
J4
G4
E4
787-JA
494-JA
554-JA
N7
M7
L7
K7
J7
H7
G7
F7
E7
611-BE
492-VI
247-RG
486-GR
557-RG
585-BA
894-VE
987-JA
10-JA
CY 4 CY 4
97-JA
BE R279 BE
627-JA
EPDB25A
182-JA
742-JA
586-VE
783-JA
784-JA
94-JA
107-JA
EUCH6A
498-JA
497-JA
83-JA
616-BJ
790-JA
EUCH3A
788-JA
791-JA
774 JA
827-JA
518-JA
395-JA
212-JA
188-JA
178-JA
EPDB5A
507-JA
BA 1 BA 1
R36
VE 1 VE 1
R314
150-JA
834-RG
612-BE
934-RG
257-RG
NO 1 NO 2
CY R34 CY
86-RG
EPDB35A
253-RG
251-RG
199-RG
722-RG
EUCH7A
17-RG
CY 5 CY 5
BE R279 BE
98-RG
454-VE
457 VE
209
226
288
653
101
261
227
419
419
615
616
495
496
304
226
227
971
155
145
645
320
289
225
160
247
817
771
532
721
184
53
185
231
172
173
120
247
225
105
134
261
653
239
240

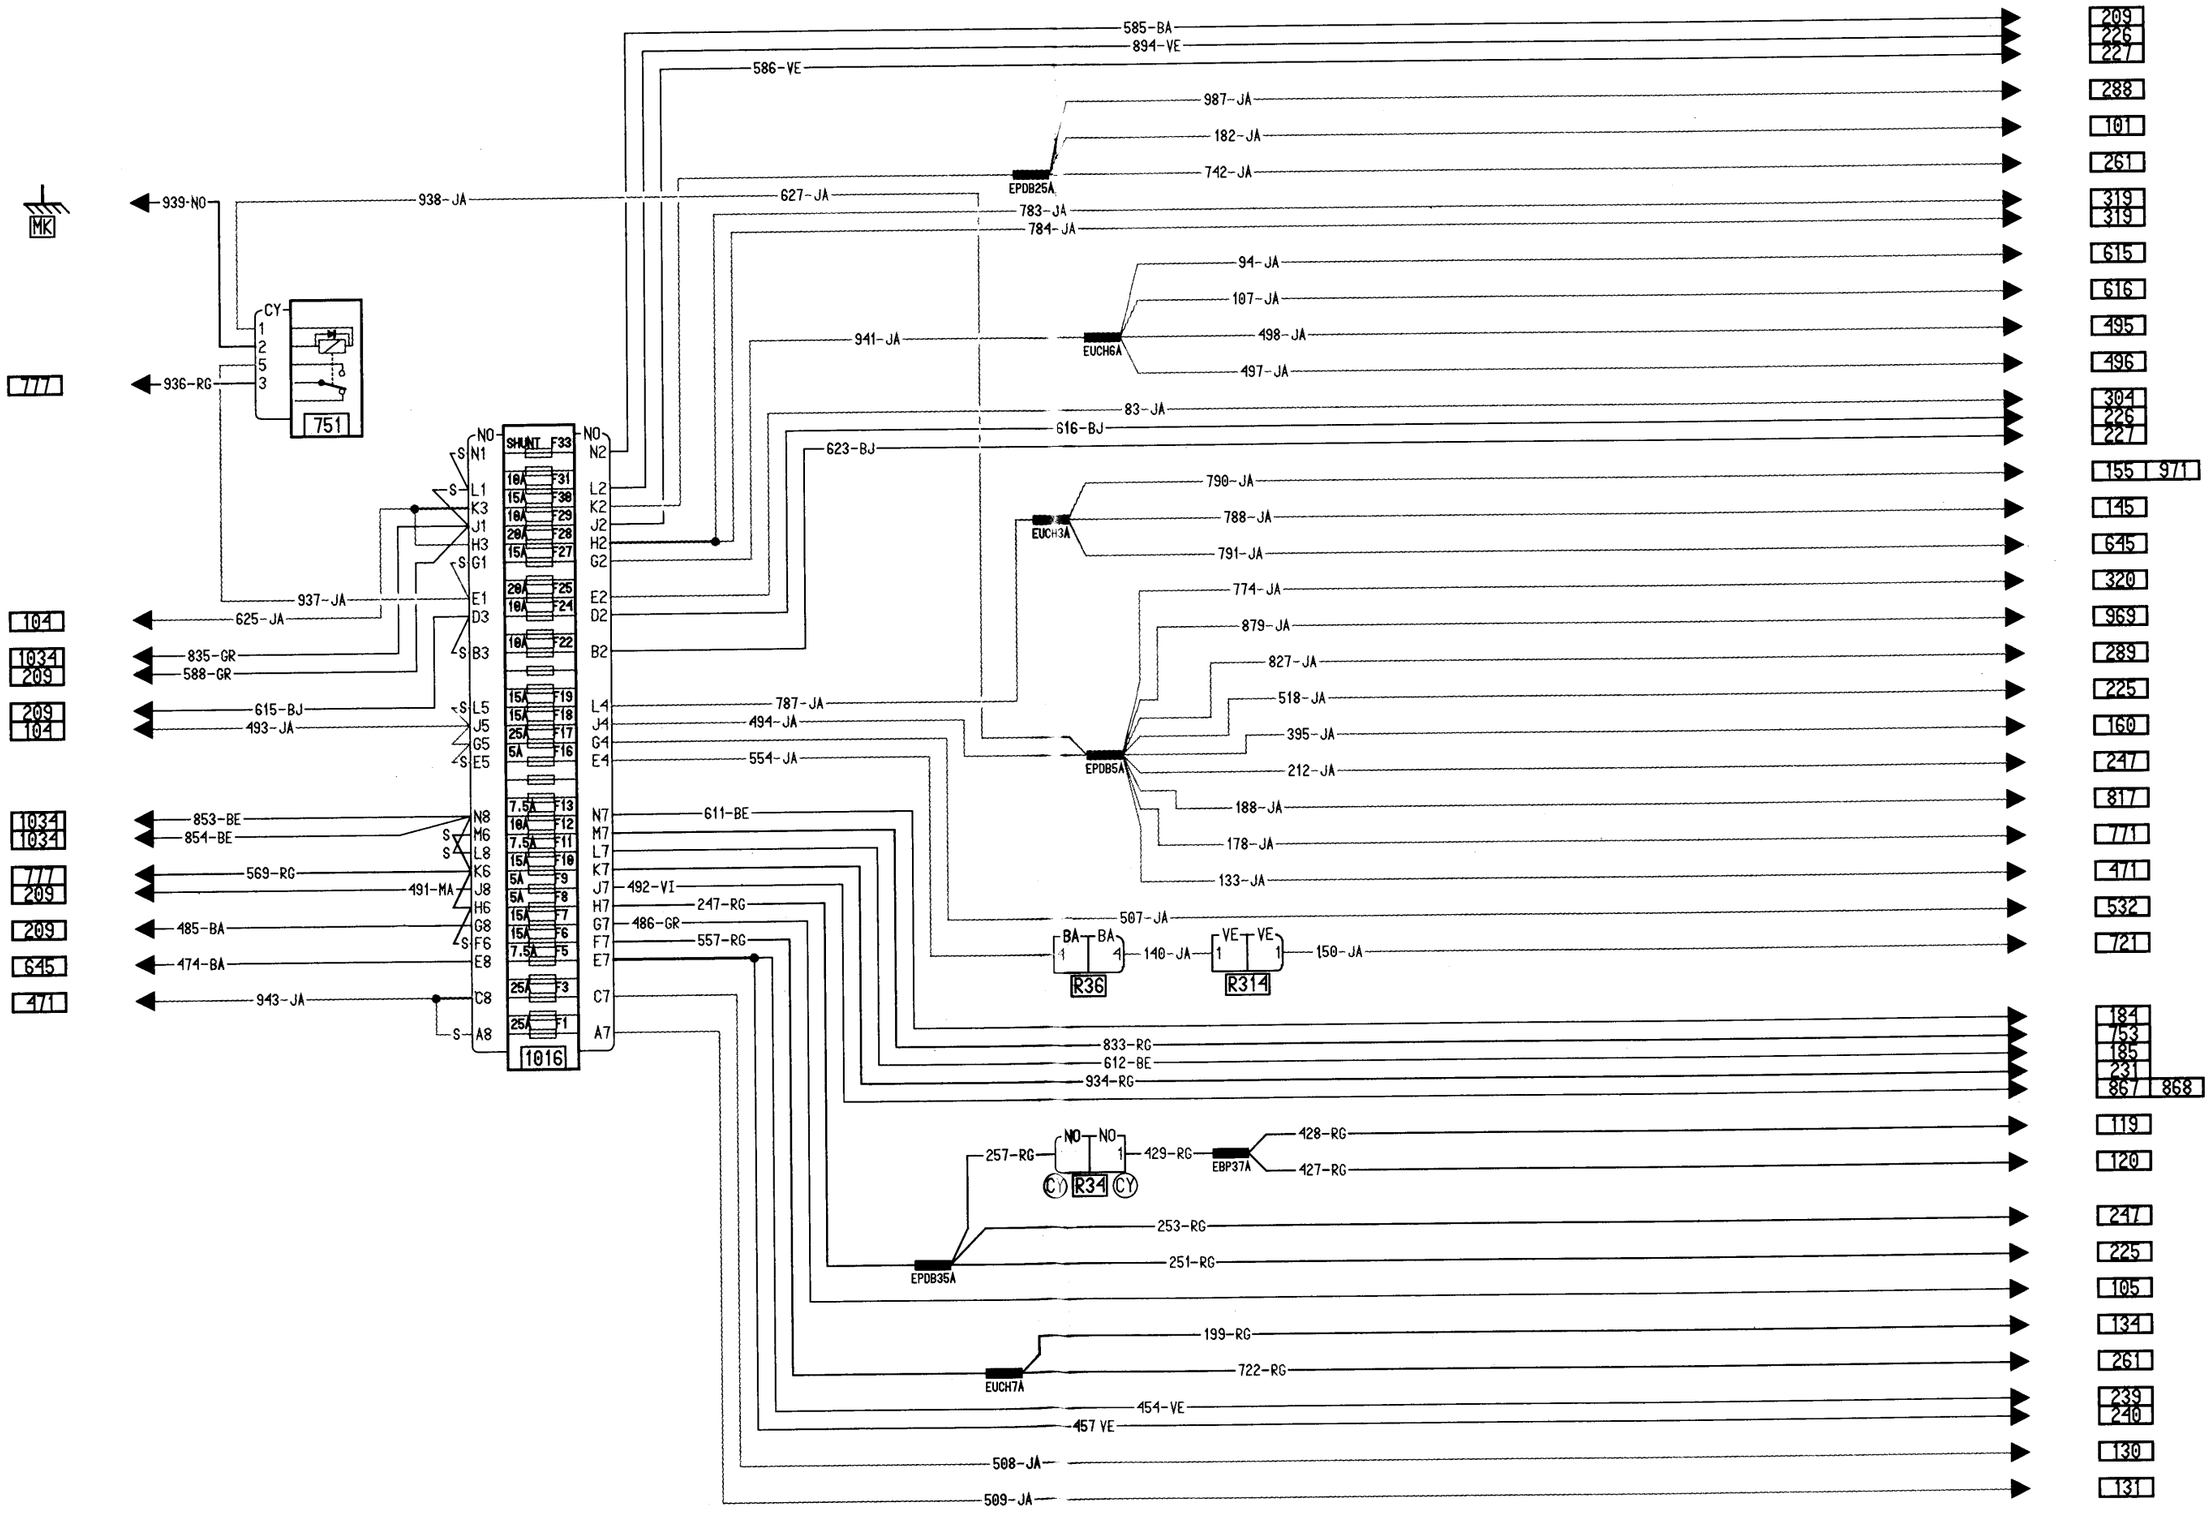

MK
939-NO
938-JA
936-RG
CY
751
777
104
1034
209
625-JA
835-GR
588-GR
615-BJ
493-JA
853-BE
854-BE
569-RG
491-MA
485-BA
474-BA
943-JA
645
471
937-JA
SHUNT F33
1016
585-BA
894-VE
586-VE
987-JA
182-JA
742-JA
EPDB25A
627-JA
783-JA
784-JA
941-JA
94-JA
107-JA
498-JA
497-JA
EUCH6A
83-JA
616-BJ
623-BJ
790-JA
788-JA
791-JA
EUCH3A
774-JA
879-JA
827-JA
518-JA
395-JA
212-JA
188-JA
178-JA
133-JA
EPDB5A
787-JA
494-JA
554-JA
611-BE
492-VI
247-RG
486-GR
557-RG
507-JA
BA
R36
140-JA
VE
R314
150-JA
833-RG
612-BE
934-RG
257-RG
NO
R34
CY
429-RG
EBP37A
428-RG
427-RG
EPDB35A
253-RG
251-RG
199-RG
722-RG
EUCH7A
454-VE
457 VE
508-JA
509-JA
209
226
227
288
101
261
319
319
615
616
495
496
304
226
227
155
971
145
645
320
969
289
225
160
247
817
771
471
532
721
184
753
185
231
86
868
119
120
247
225
105
134
261
239
240
130
131

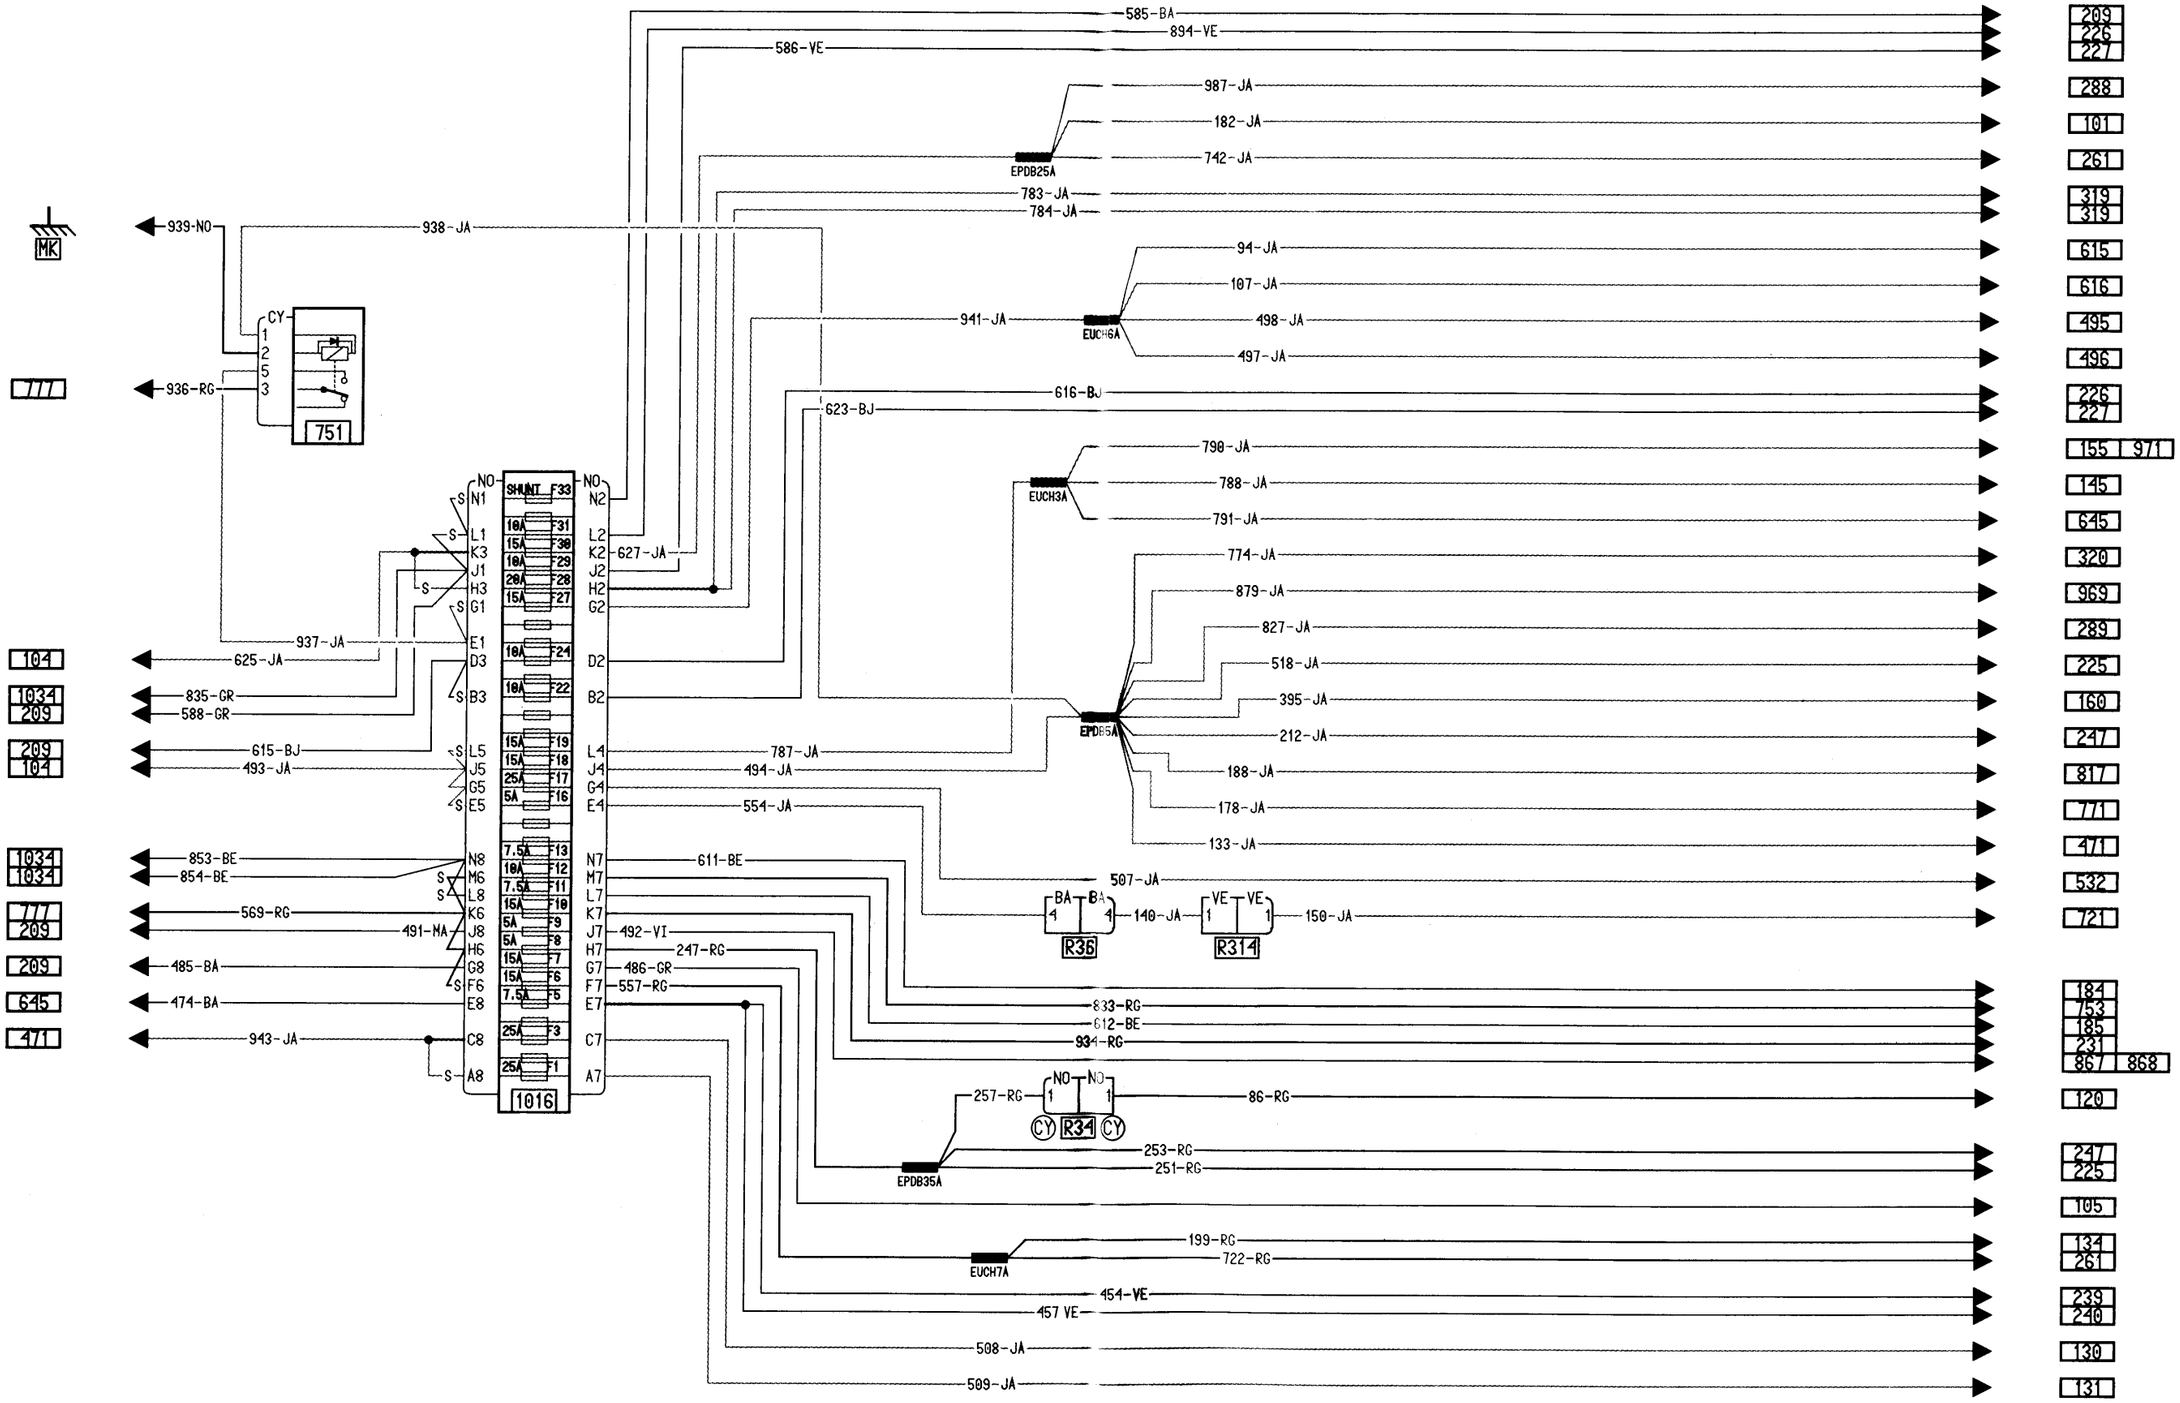

MK
939-NO
938-JA
936-RG
CY
751
937-JA
625-JA
835-GR
588-GR
615-BJ
493-JA
853-BE
854-BE
569-RG
491-MA
485-BA
474-BA
943-JA
1016
585-BA
894-VE
586-VE
987-JA
182-JA
742-JA
EPDB25A
783-JA
784-JA
941-JA
EUCH6A
94-JA
107-JA
498-JA
497-JA
616-BJ
623-BJ
EUCH3A
798-JA
788-JA
791-JA
774-JA
879-JA
827-JA
518-JA
395-JA
212-JA
188-JA
178-JA
133-JA
EPDB5A
627-JA
787-JA
494-JA
554-JA
611-BE
507-JA
140-JA
150-JA
R36
R314
492-VI
247-RG
486-GR
557-RG
833-RG
612-BE
934-RG
257-RG
86-RG
R34
253-RG
251-RG
EPDB35A
199-RG
722-RG
EUCH7A
454-VE
457 VE
508-JA
509-JA
209
226
227
288
101
261
319
319
615
616
495
496
226
227
155
971
145
645
320
969
289
225
160
247
817
771
471
532
721
184
753
185
231
867
868
120
247
225
105
134
261
239
240
130
131
104
1034
209
209
104
1034
1034
777
209
209
645
471
777

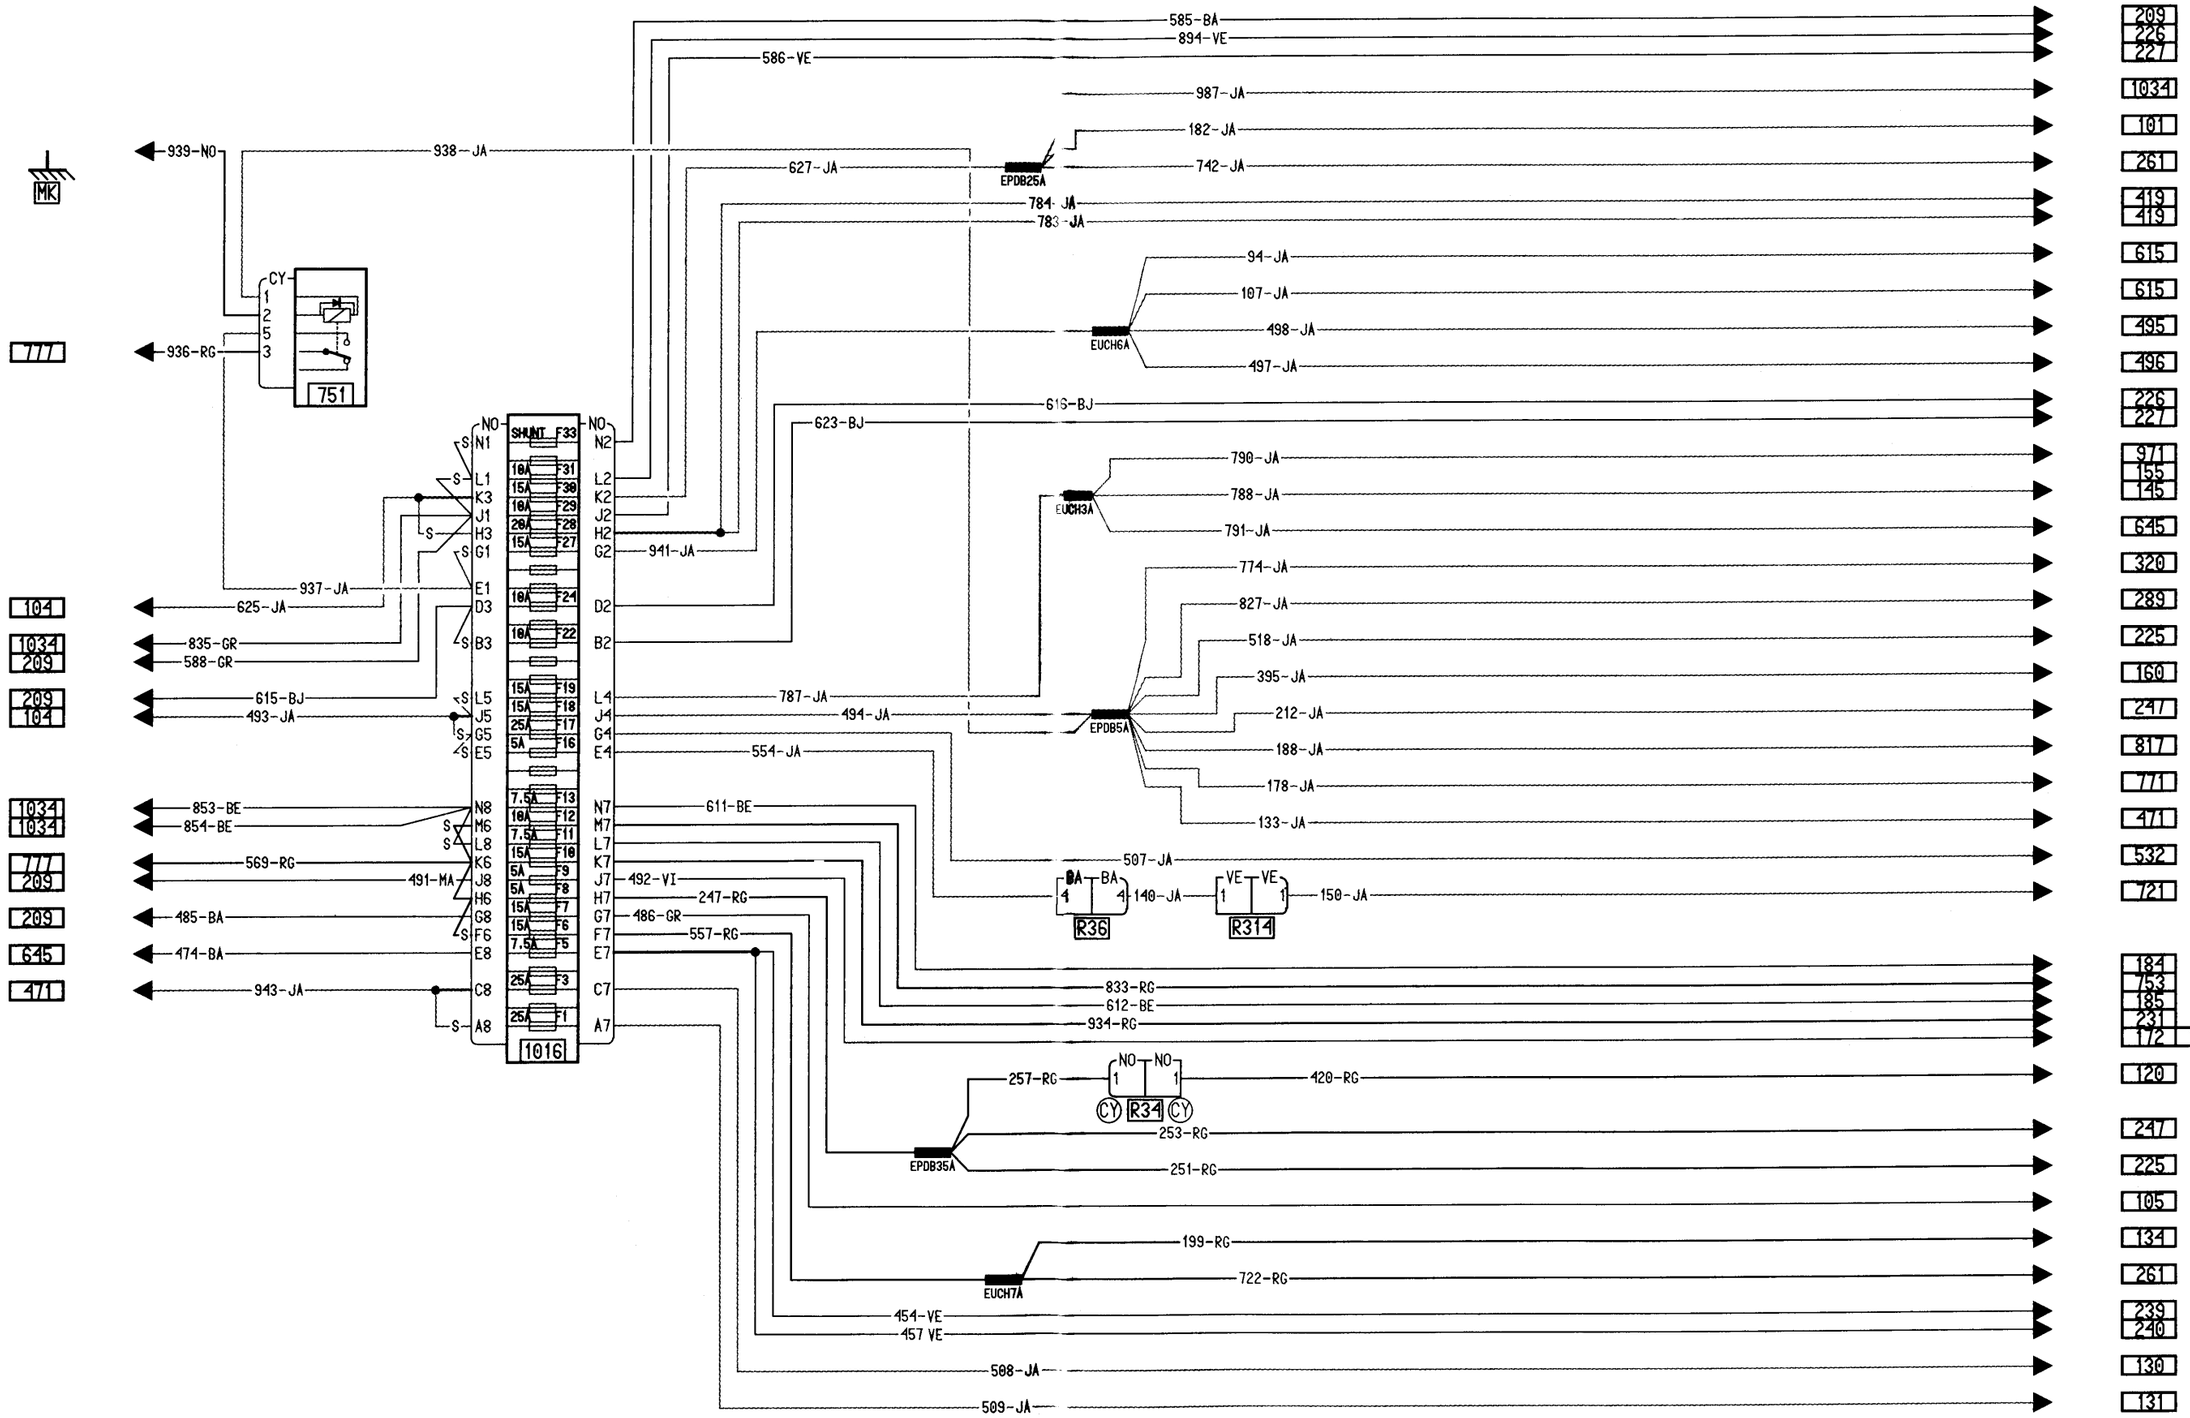

MK
939-NO
938-JA
777
936-RG
CY
751
104
625-JA
1034
209
835-GR
588-GR
209
104
615-BJ
493-JA
1034
1034
853-BE
854-BE
777
209
569-RG
491-MA
209
485-BA
645
474-BA
471
943-JA
NO
SHUNT F33
N1
L1
K3
J1
H3
G1
E1
D3
B3
L5
J5
G5
E5
N8
M6
L8
K6
J8
H6
G8
F6
E8
C8
A8
1016
NO
N2
L2
K2
J2
H2
G2
D2
B2
L4
J4
G4
E4
N7
M7
L7
K7
J7
H7
G7
F7
E7
C7
A7
585-BA
894-VE
586-VE
987-JA
182-JA
742-JA
627-JA
EPDB25A
784-JA
783-JA
94-JA
107-JA
498-JA
497-JA
EUCH6A
618-BJ
623-BJ
790-JA
788-JA
791-JA
EUCH3A
941-JA
774-JA
827-JA
518-JA
395-JA
212-JA
188-JA
178-JA
133-JA
787-JA
494-JA
EPDB5A
554-JA
611-BE
507-JA
BA
BA
140-JA
R36
VE
VE
150-JA
R314
492-VI
247-RG
486-GR
557-RG
833-RG
612-BE
934-RG
257-RG
NO
NO
CY
R34
CY
420-RG
253-RG
251-RG
EPDB35A
199-RG
722-RG
EUCH7A
454-VE
457-VE
508-JA
509-JA
209
226
227
1034
101
261
419
419
615
615
495
496
226
227
971
155
145
645
320
289
225
160
247
817
771
471
532
721
184
753
185
231
172
173
120
247
225
105
134
261
239
240
130
131

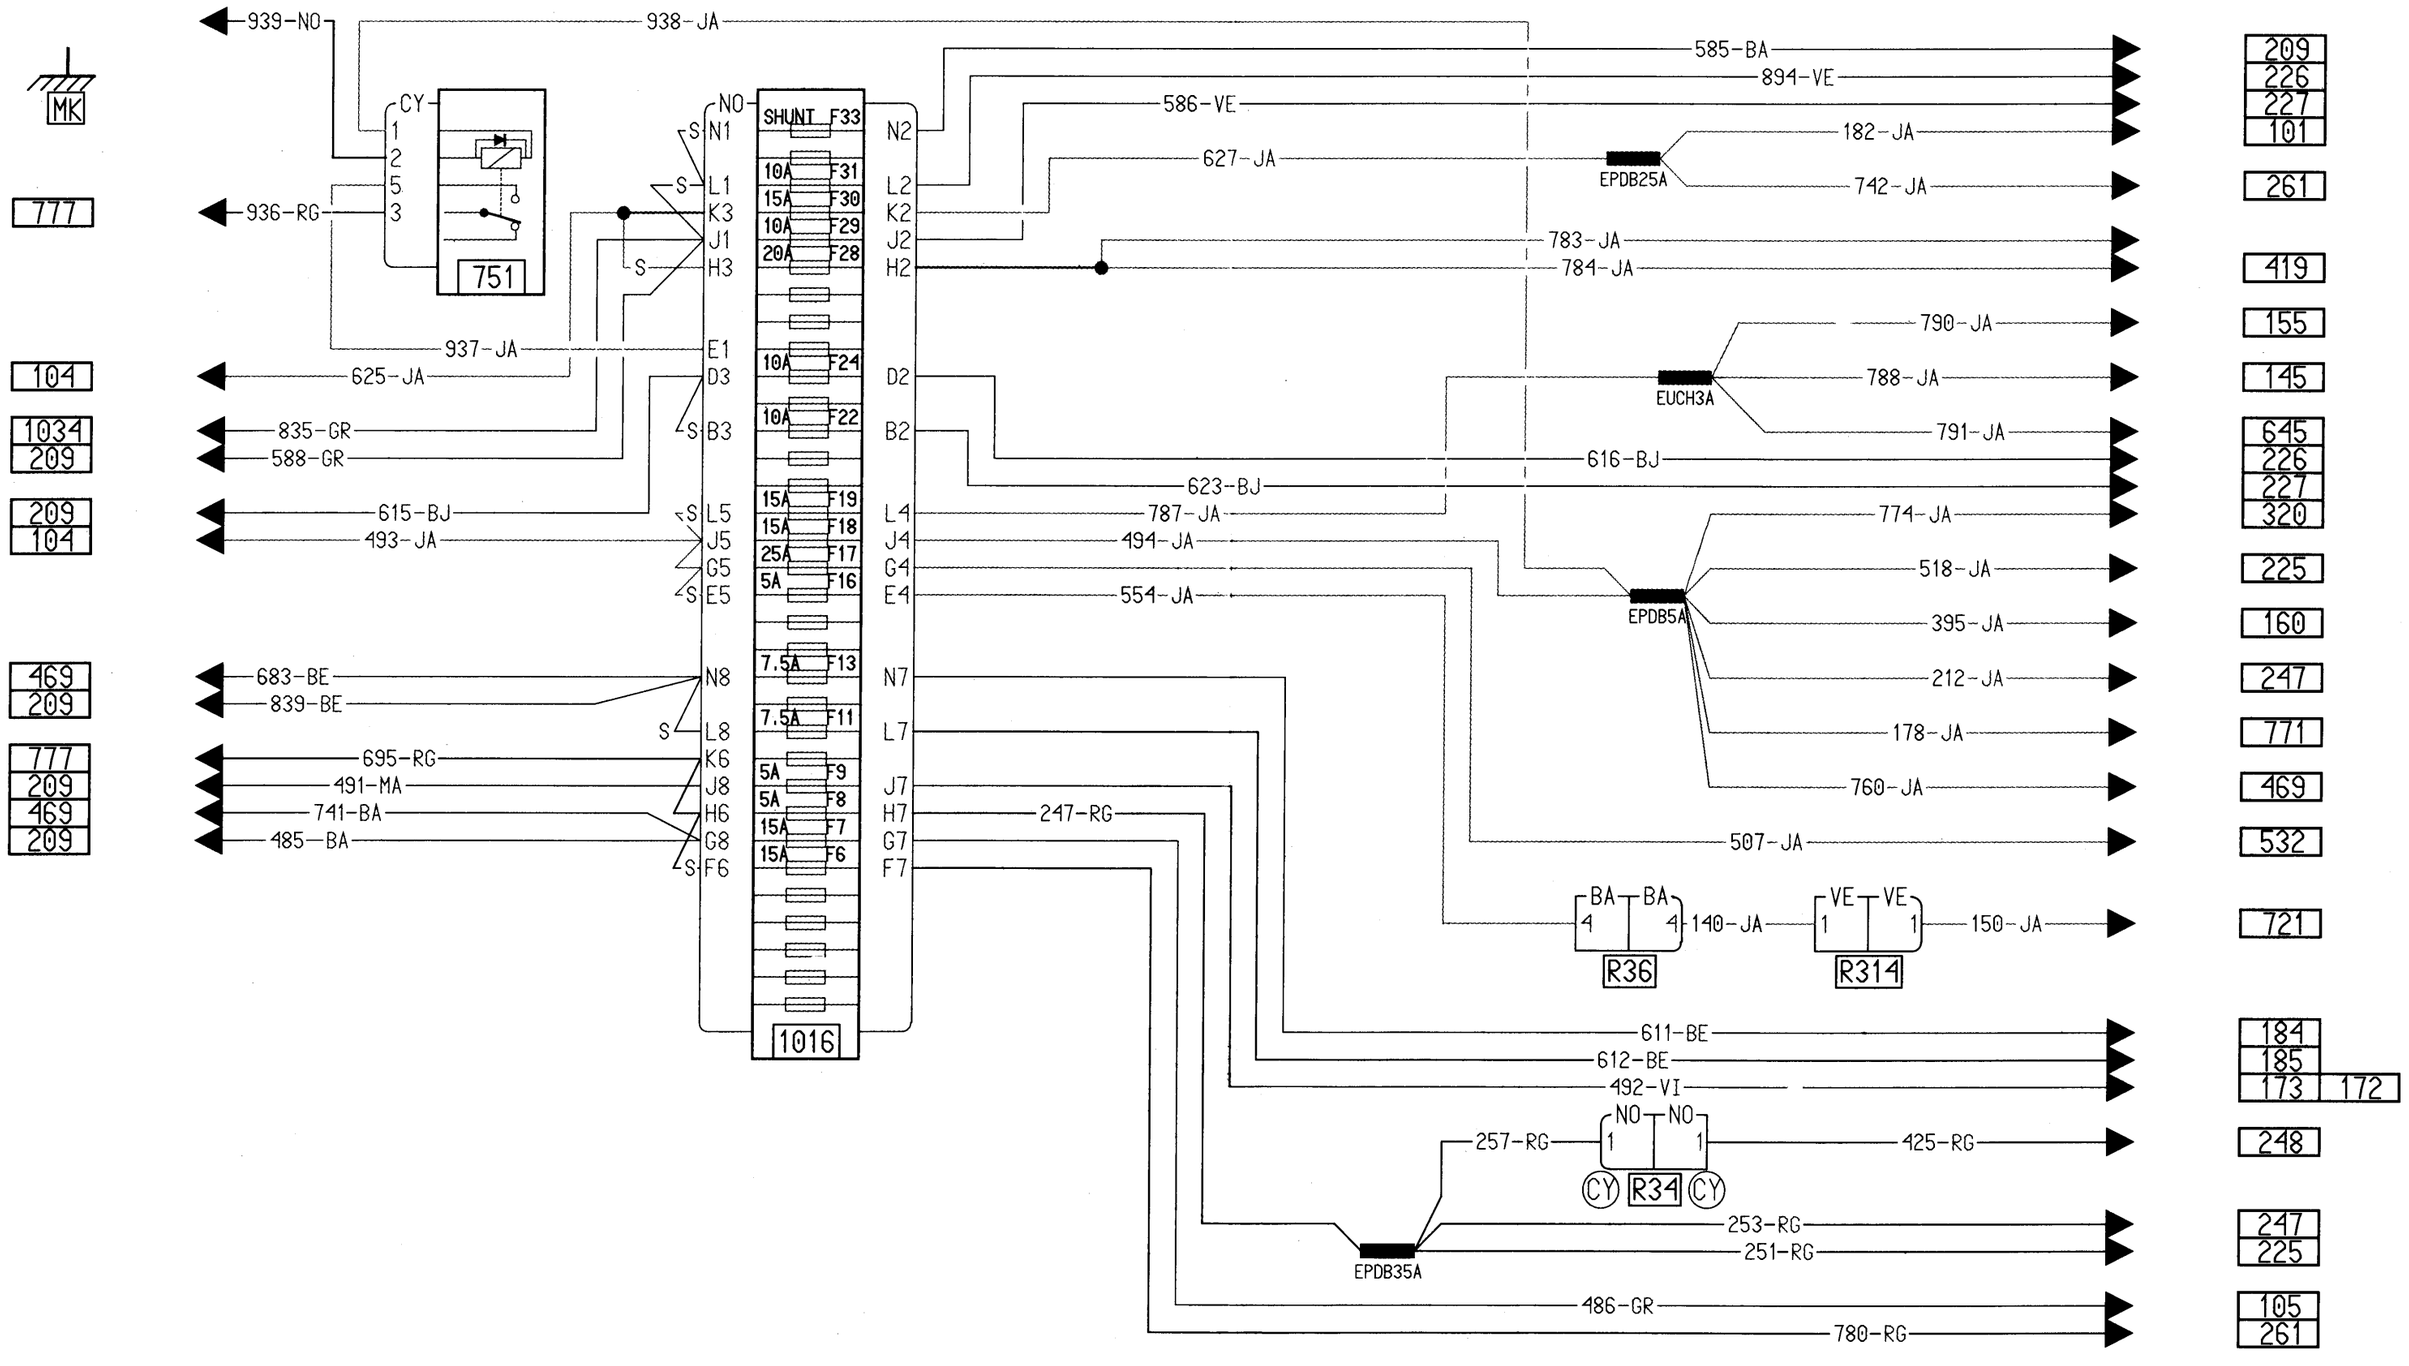

MK
777
104
1034
209
209
104
469
209
777
209
469
209
939-NO
938-JA
CY
1
2
5
3
751
936-RG
937-JA
625-JA
835-GR
588-GR
615-BJ
493-JA
683-BE
839-BE
695-RG
491-MA
741-BA
485-BA
NO
S N1
S L1
K3
J1
S H3
E1
D3
S B3
S L5
J5
G5
S E5
N8
S L8
K6
J8
H6
G8
S F6
SHUNT F33
10A F31
15A F30
10A F29
20A F28
10A F24
10A F22
15A F19
15A F18
25A F17
5A F16
7.5A F13
7.5A F11
5A F9
5A F8
15A F7
15A F6
1016
N2
L2
K2
J2
H2
D2
B2
L4
J4
G4
E4
N7
L7
J7
H7
G7
F7
585-BA
894-VE
586-VE
627-JA
182-JA
742-JA
EPDB25A
783-JA
784-JA
790-JA
788-JA
791-JA
EUCH3A
616-BJ
623-BJ
787-JA
494-JA
554-JA
774-JA
518-JA
395-JA
212-JA
178-JA
760-JA
EPDB5A
507-JA
BA BA
4 4
140-JA
R36
VE VE
1 1
150-JA
R314
247-RG
611-BE
612-BE
492-VI
NO NO
1 1
257-RG
425-RG
CY R34 CY
253-RG
251-RG
EPDB35A
486-GR
780-RG
209
226
227
101
261
419
155
145
645
226
227
320
225
160
247
771
469
532
721
184
185
173
172
248
247
225
105
261

MJ
777
104
1034
209
209
104
1034
1034
777
209
209
645
471
1016
751
CY
939-NO
936-RG
938-JA
937-JA
625-JA
835-GR
588-GR
615-BJ
493-JA
853-BE
854-BE
569-RG
491-MA
485-BA
474-BA
943-JA
SHUNT F33
941-JA
787-JA
494-JA
554-JA
611-BE
492-VI
247-RG
486-GR
557-RG
585-BA
894-VE
586-VE
627-JA
EPDB25A
987-JA
10-JA
97-JA
182-JA
742-JA
783-JA
784-JA
EUCH6A
107-JA
94-JA
498-JA
497-JA
83-JA
616-BJ
623-BJ
EUCH3A
152-JA
230-JA
788-JA
791-JA
507-JA
R36
140-JA
R314
150-JA
EPDB5A
774-JA
827-JA
518-JA
395-JA
212-JA
178-JA
133-JA
833-RG
612-BE
934-RG
EPDB35A
257-RG
R34
419-RG
EBP37A
421-RG
420-RG
253-RG
251-RG
EUCH7A
199-RG
995-RG
722-RG
17-RG
R279
98-RG
454-VE
457-VE
508-JA
509-JA
209
226
227
288
653
101
261
419
419
616
615
495
496
304
226
227
885
145
645
532
721
320
289
225
160
247
771
471
184
753
185
231
173
172
310
120
247
225
105
403
134
394
261
653
239
240
130
131

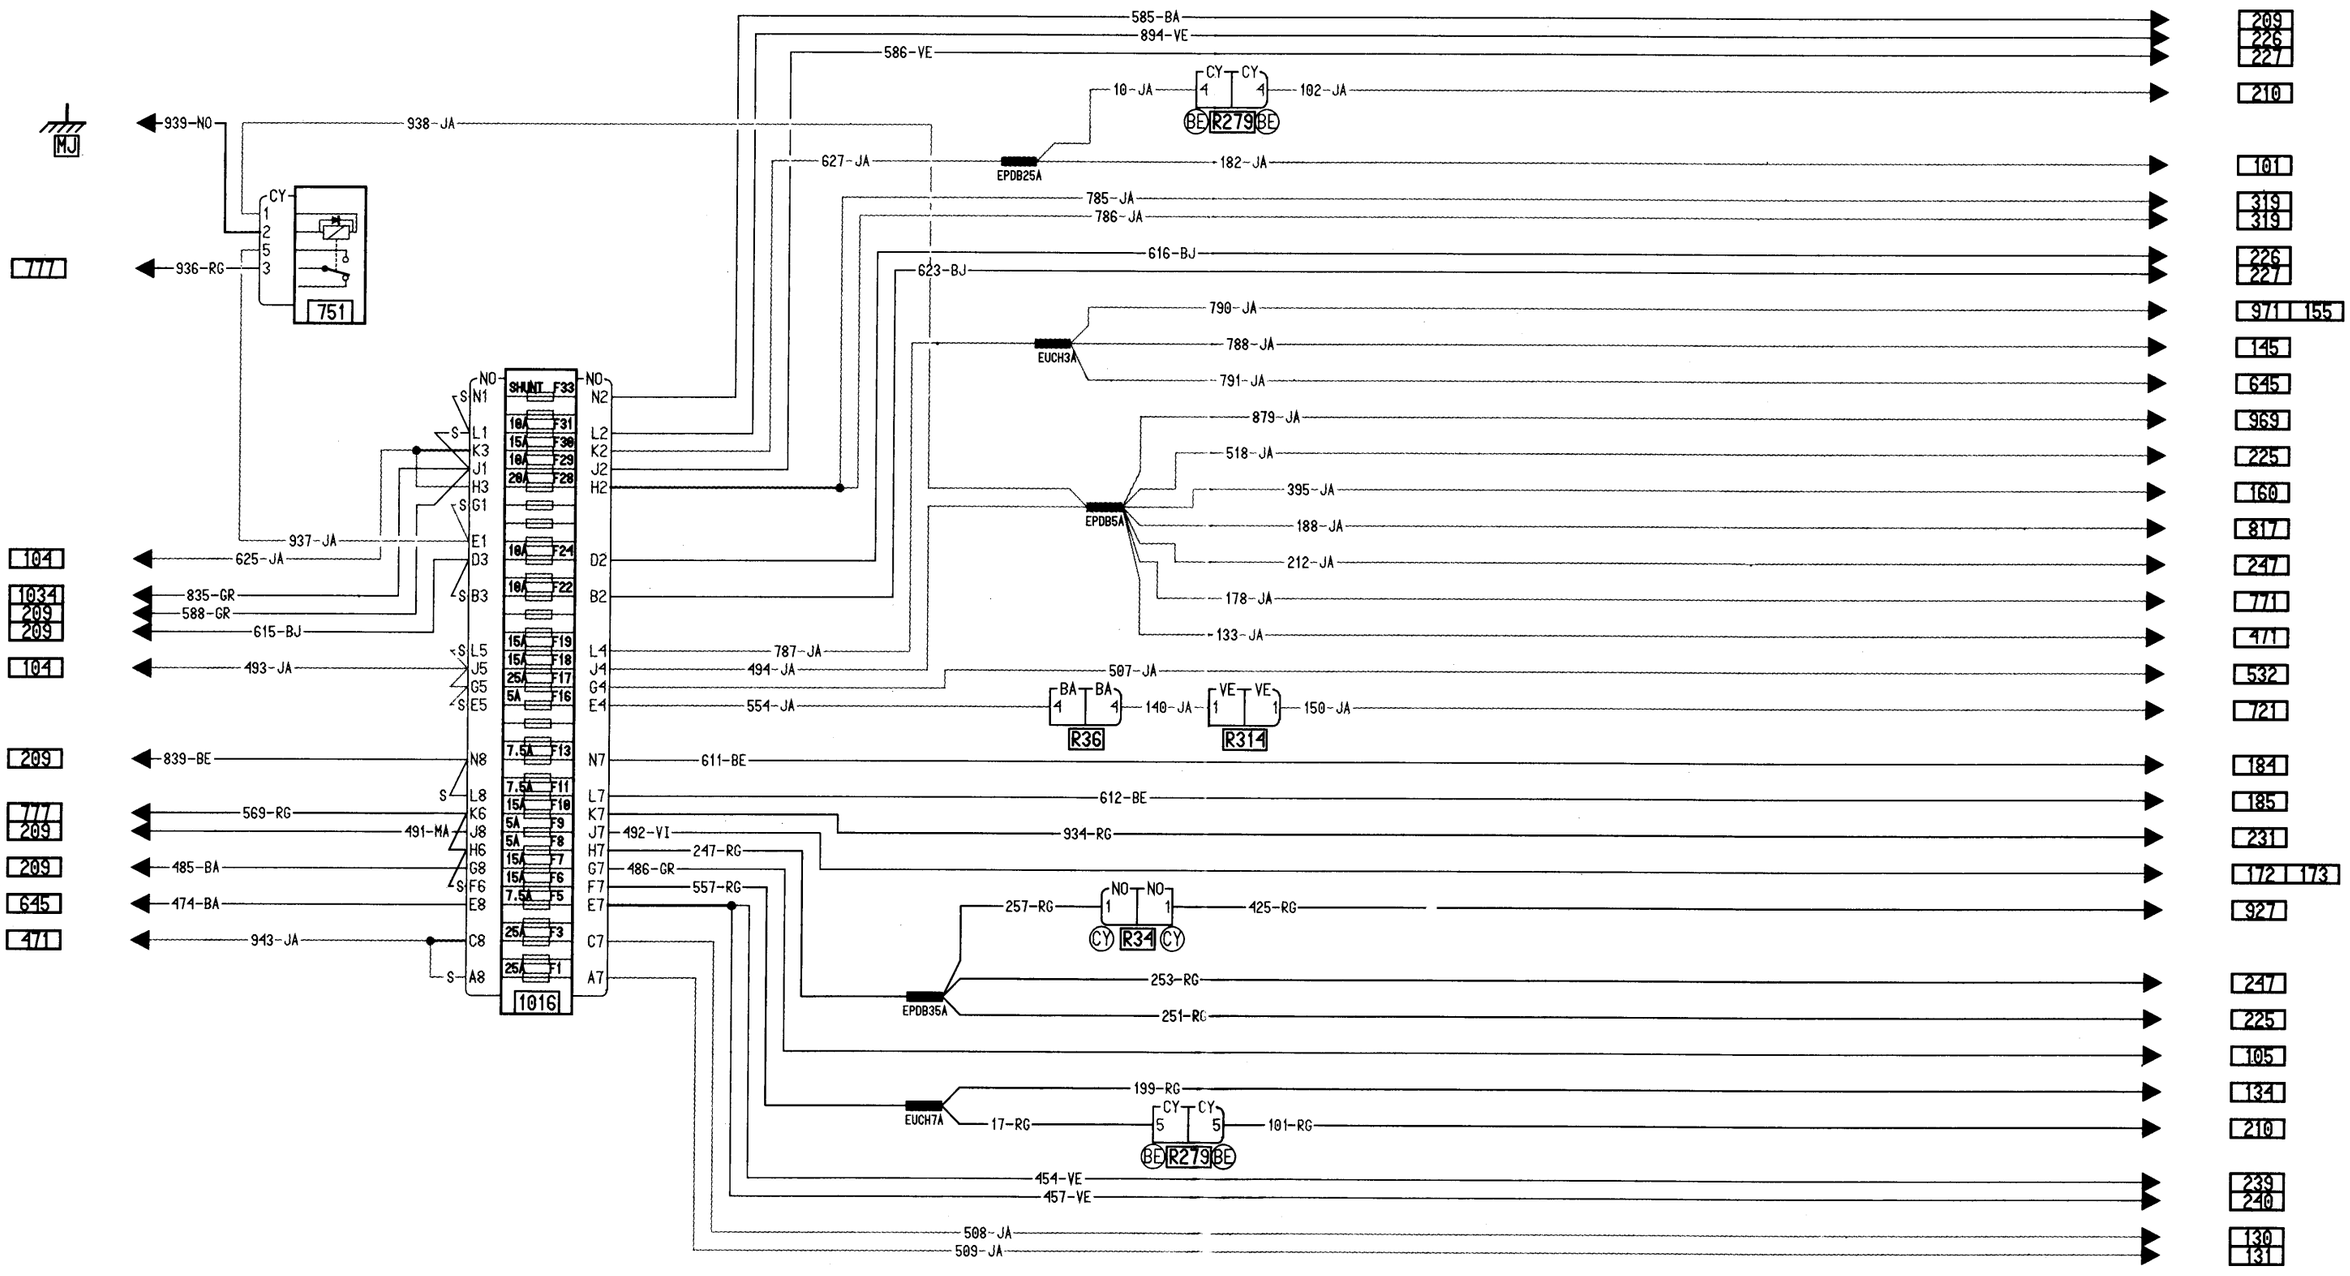
MJ
939-NO
938-JA
936-RG
751
777
CY
1
2
5
3
937-JA
625-JA
835-GR
588-GR
615-BJ
493-JA
839-BE
569-RG
491-MA
485-BA
474-BA
943-JA
104
1034
209
209
104
209
777
209
209
645
471
NO
N1
S
L1
K3
J1
H3
G1
E1
D3
B3
L5
J5
G5
E5
N8
L8
K6
J8
H6
G8
F6
E8
C8
A8
SHUNT F33
10A F31
15A F30
10A F29
20A F28
10A F24
10A F22
15A F19
15A F18
25A F17
5A F16
7.5A F13
7.5A F11
15A F10
5A F9
5A F8
15A F7
15A F6
7.5A F5
25A F3
25A F1
1016
N2
L2
K2
J2
H2
D2
B2
L4
J4
G4
E4
N7
L7
K7
J7
H7
G7
F7
E7
C7
A7
585-BA
894-VE
586-VE
627-JA
785-JA
786-JA
623-BJ
616-BJ
787-JA
494-JA
554-JA
611-BE
612-BE
934-RG
492-VI
247-RG
486-GR
557-RG
454-VE
457-VE
508-JA
509-JA
10-JA
102-JA
CY
BE
R279
EPDB25A
182-JA
790-JA
788-JA
791-JA
EUCH3A
879-JA
518-JA
395-JA
188-JA
212-JA
178-JA
133-JA
EPDB85A
507-JA
BA
140-JA
150-JA
R36
VE
R314
257-RG
425-RG
NO
R34
253-RG
251-RG
EPDB35A
199-RG
17-RG
101-RG
EUCH7A
209
226
227
210
101
319
319
226
227
971
155
145
645
969
225
160
817
247
771
471
532
721
184
185
231
172
173
927
247
225
105
134
210
239
240
130
131

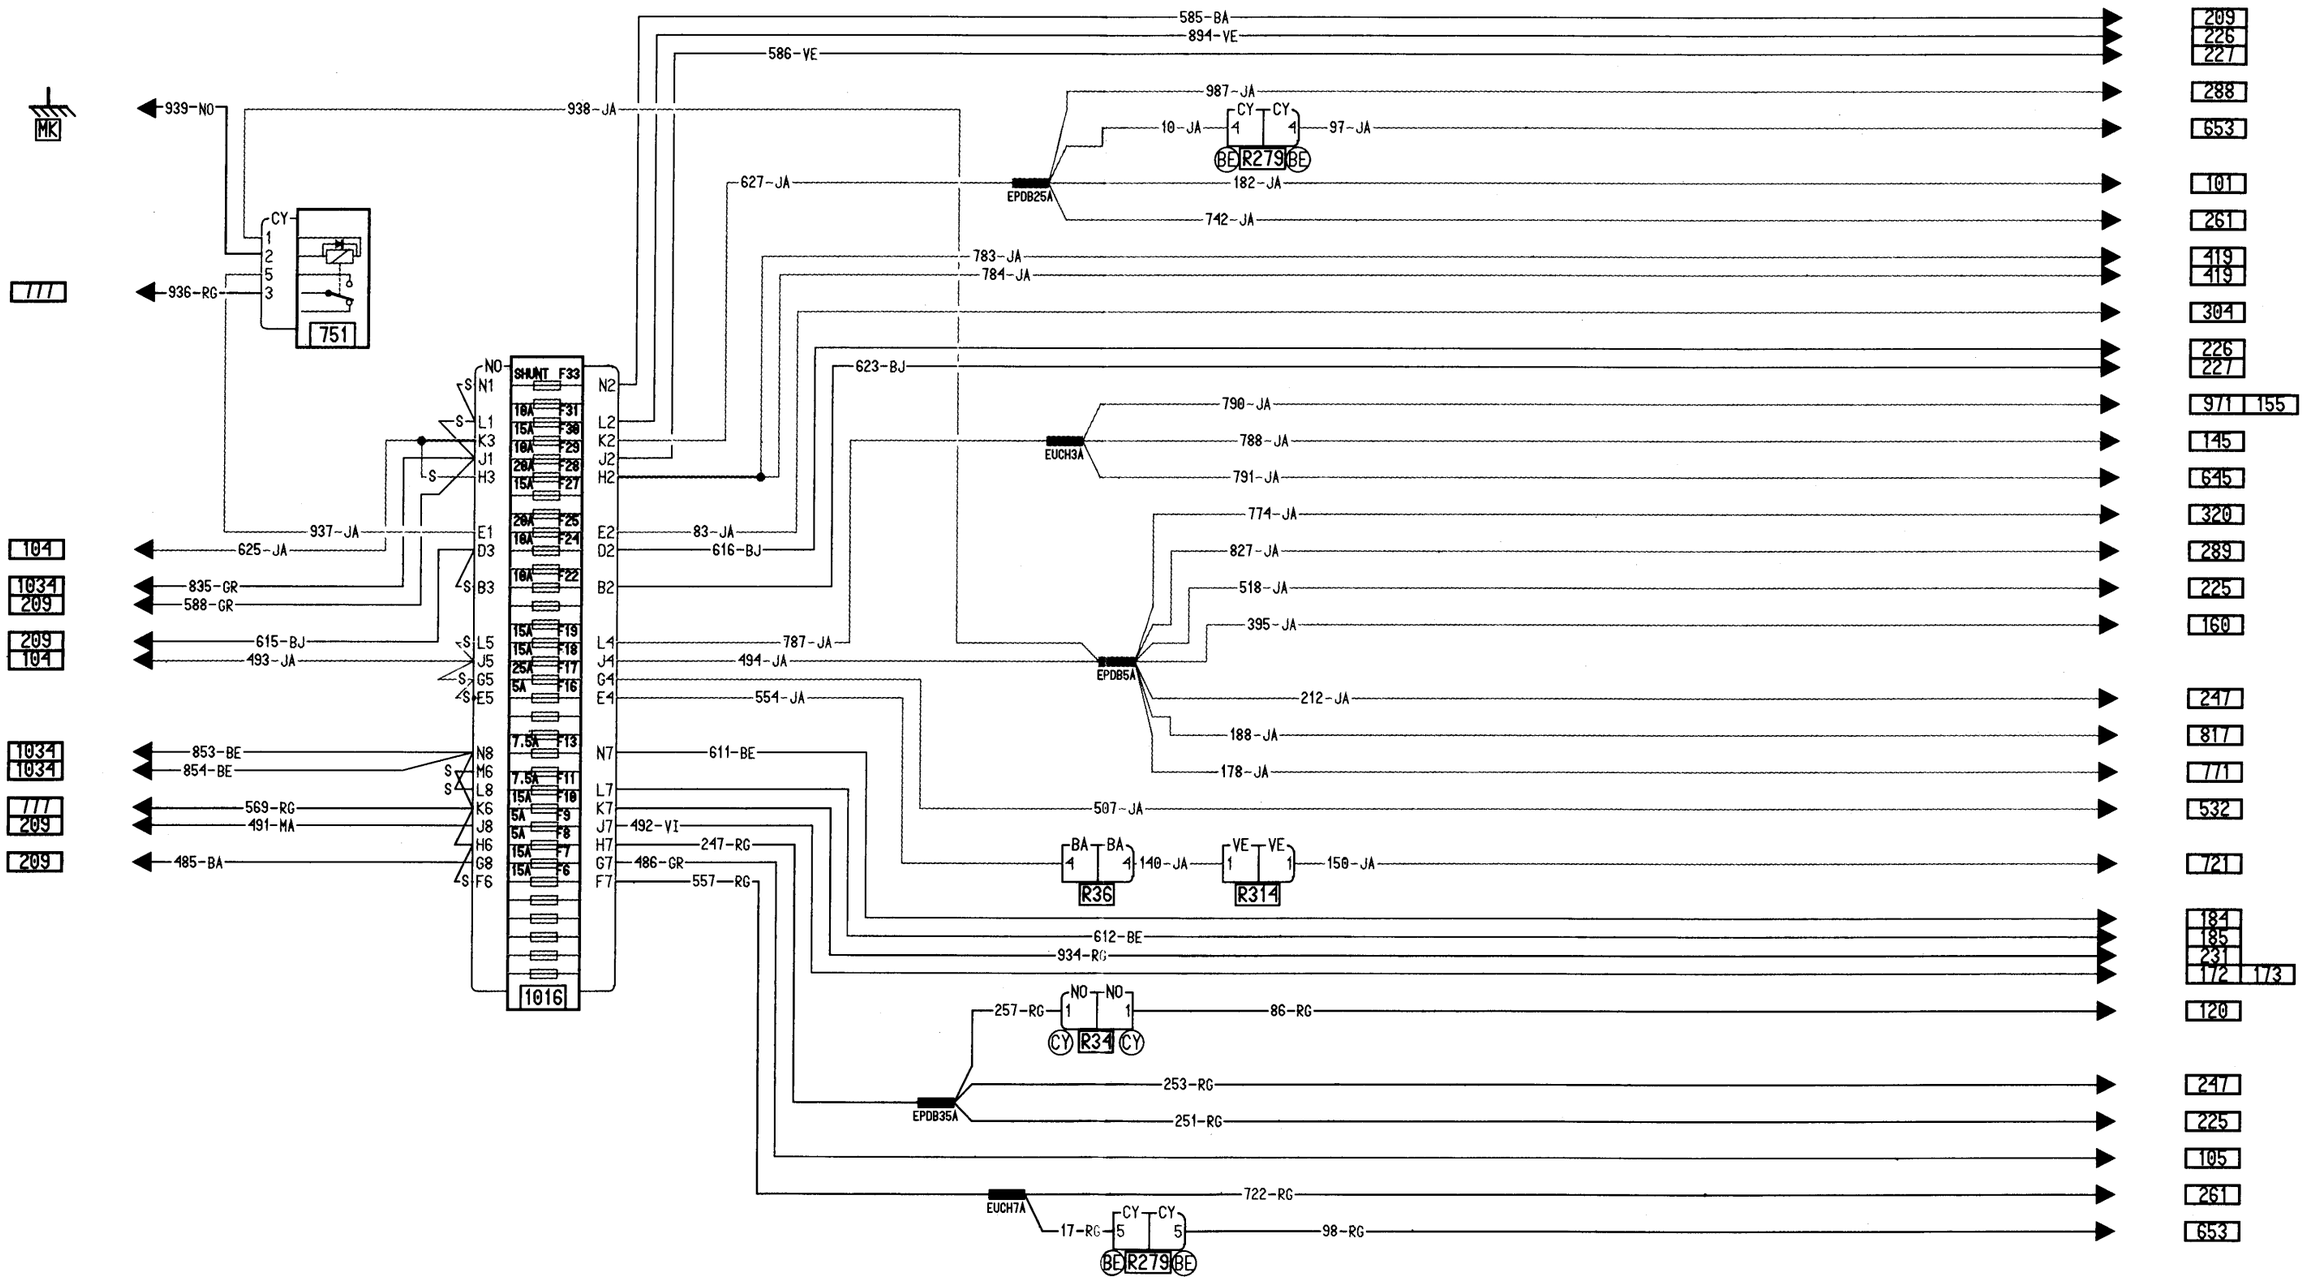
MK
939-NO
938-JA
936-RG
CY
751
777
SHUNT F33
1016
585-BA
894-VE
586-VE
987-JA
10-JA
97-JA
R279
627-JA
EPDB25A
182-JA
742-JA
783-JA
784-JA
623-BJ
790-JA
788-JA
791-JA
EUCH3A
774-JA
827-JA
518-JA
395-JA
EPDB5A
212-JA
188-JA
178-JA
937-JA
625-JA
83-JA
616-BJ
835-GR
588-GR
615-BJ
493-JA
787-JA
494-JA
554-JA
853-BE
854-BE
611-BE
569-RG
491-MA
507-JA
492-VI
247-RG
485-BA
486-GR
557-RG
R36
140-JA
R314
150-JA
612-BE
934-RG
257-RG
R34
86-RG
253-RG
EPDB35A
251-RG
722-RG
EUCH7A
17-RG
98-RG
209
226
227
288
653
101
261
419
419
304
226
227
971
155
145
645
320
289
225
160
247
817
771
532
721
184
185
231
172
173
120
247
225
105
261
653
104
1034
209
209
104
1034
1034
777
209
209

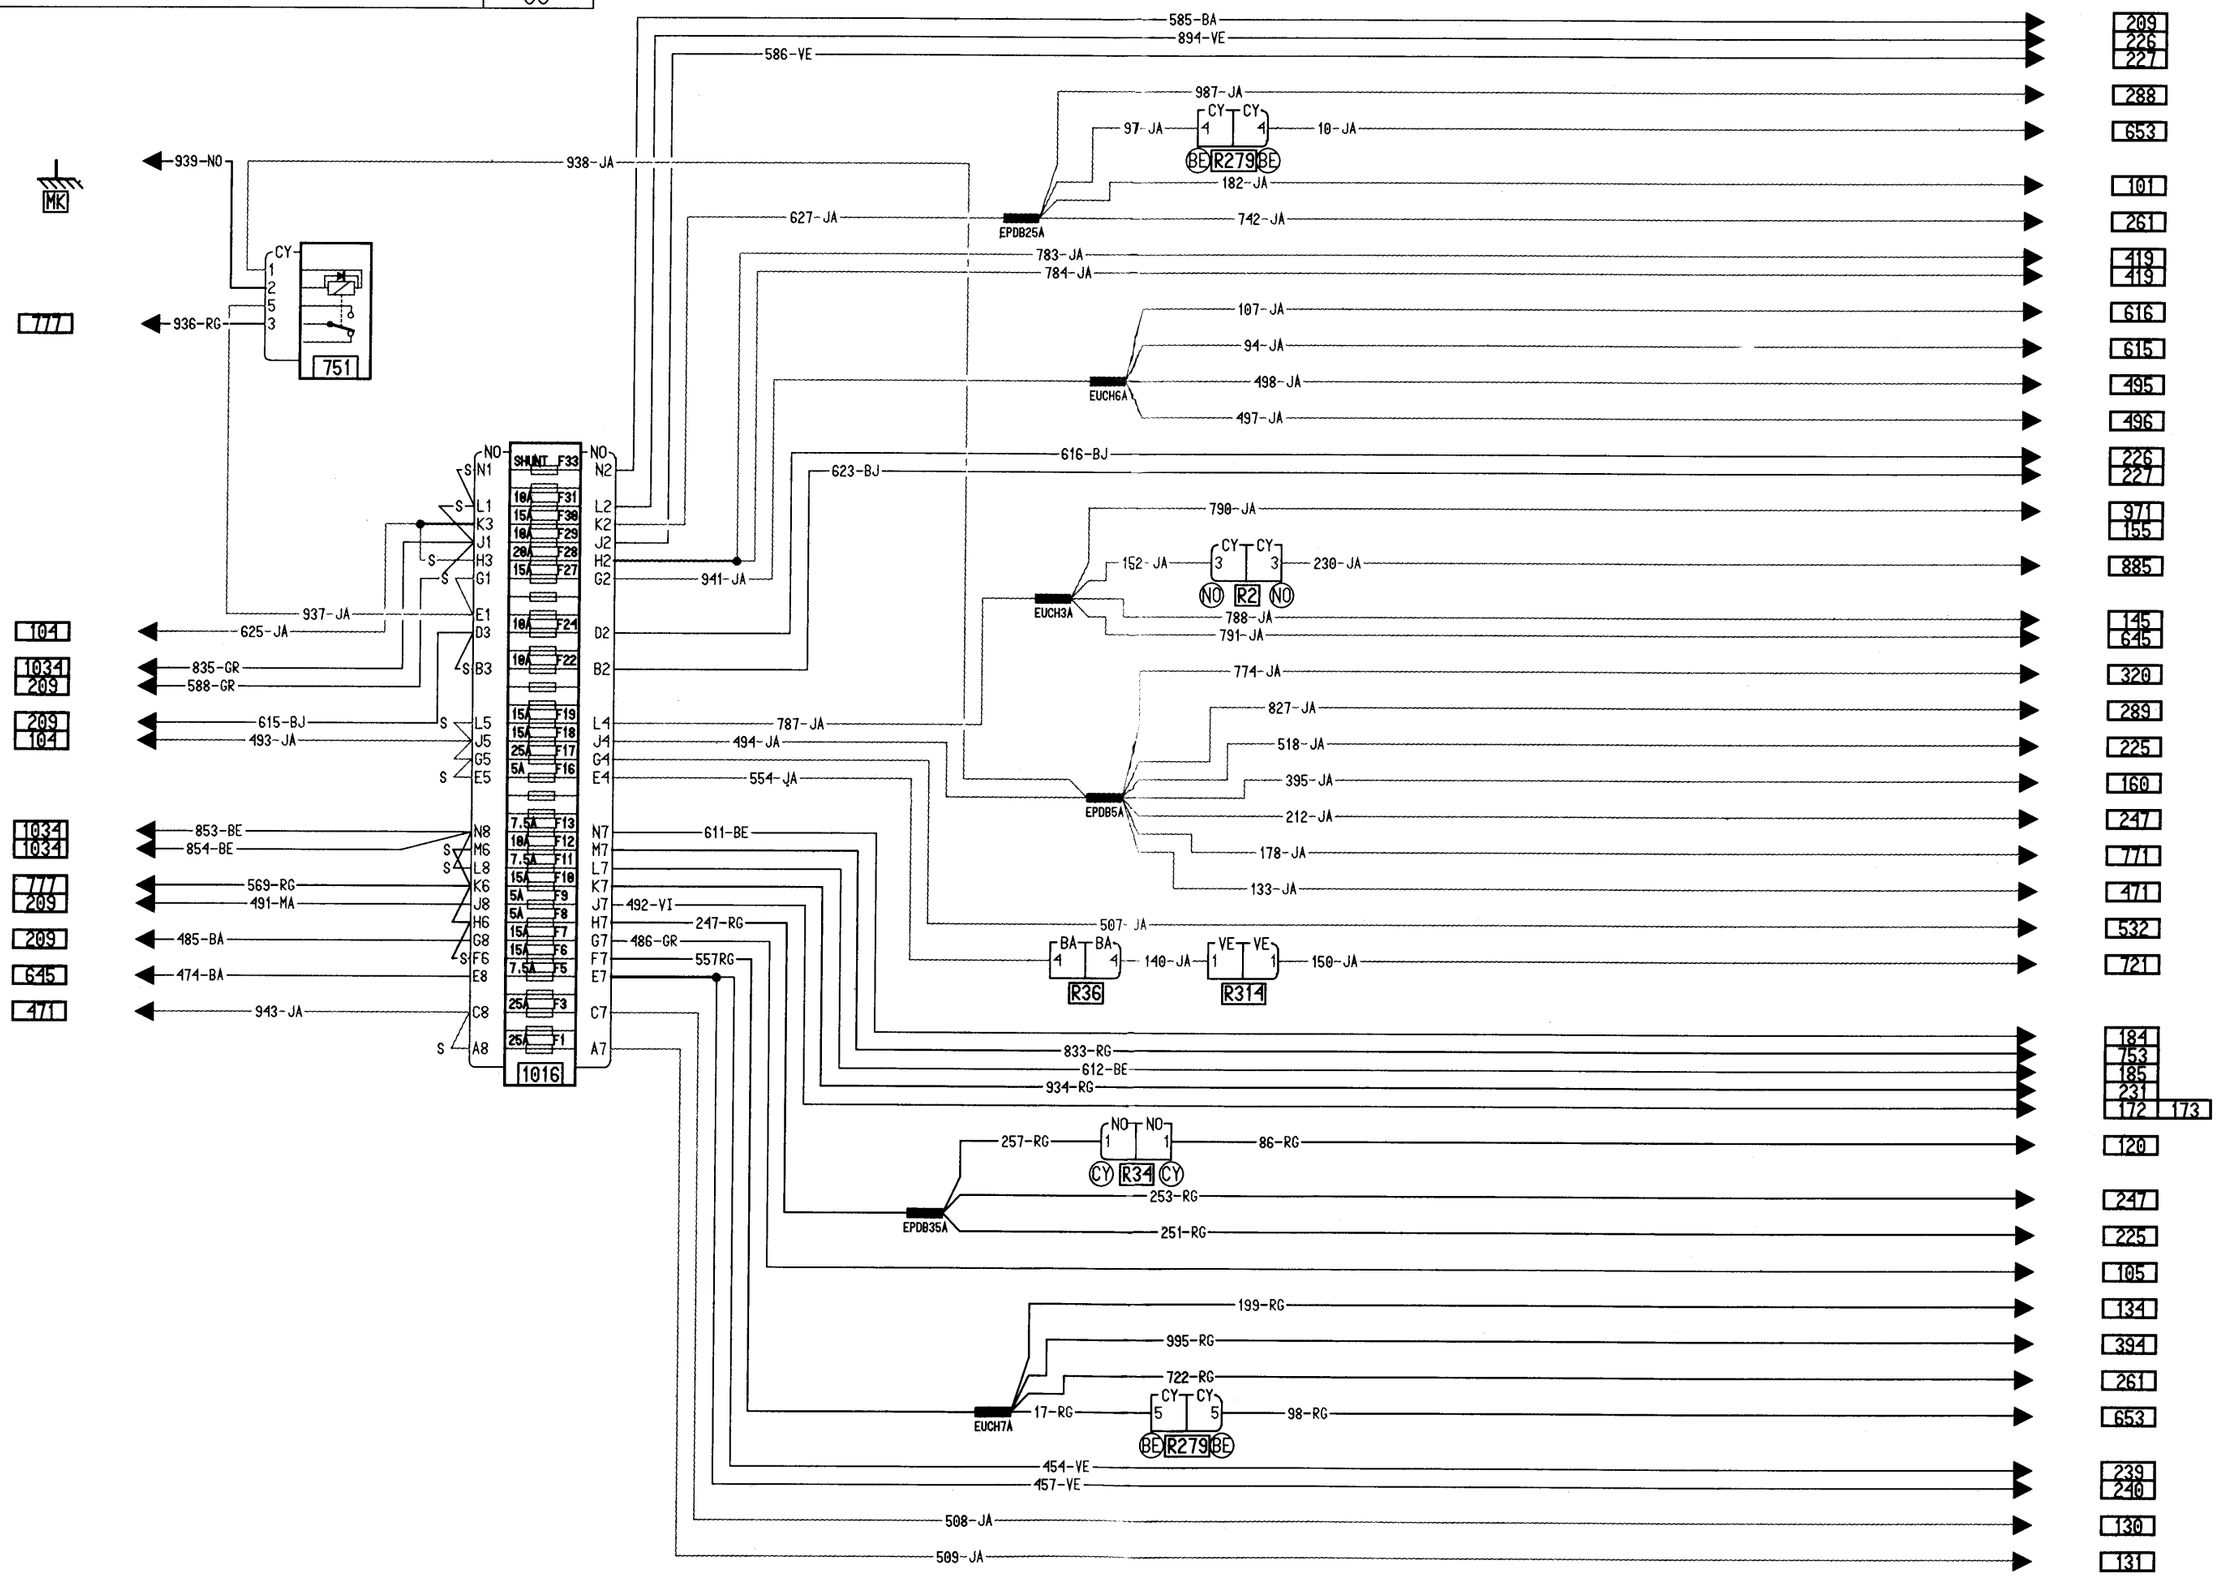

MK
777
939-NO
938-JA
936-RG
CY
1
2
5
3
751
937-JA
104
625-JA
1034
209
835-GR
588-GR
209
104
615-BJ
493-JA
1034
1034
853-BE
854-BE
777
209
569-RG
491-MA
209
485-BA
645
474-BA
471
943-JA
NO
S
SHUNT F33
N1
L1
K3
J1
H3
G1
E1
D3
B3
L5
J5
G5
E5
N8
M6
L8
K6
J8
H6
G8
F6
E8
C8
A8
10A F31
15A F30
10A F29
20A F28
15A F27
10A F21
10A F22
15A F19
15A F18
25A F17
5A F16
7.5A F13
10A F12
7.5A F11
15A F10
5A F9
5A F8
15A F7
15A F6
7.5A F5
25A F3
25A F1
1016
N2
L2
K2
J2
H2
G2
941-JA
D2
B2
L4
J4
G4
E4
554-JA
N7
M7
L7
K7
J7
H7
G7
F7
E7
C7
A7
611-BE
492-VI
247-RG
486-GR
557RG
585-BA
894-VE
586-VE
627-JA
987-JA
97-JA
CY
4
BE
R279
10-JA
182-JA
742-JA
EPDB25A
783-JA
784-JA
107-JA
94-JA
498-JA
497-JA
EUCH6A
616-BJ
623-BJ
790-JA
152-JA
3
NO
R2
230-JA
EUCH3A
788-JA
791-JA
774-JA
827-JA
518-JA
395-JA
212-JA
178-JA
133-JA
EPDB5A
507-JA
BA
4
140-JA
R36
VE
1
150-JA
R314
833-RG
612-BE
934-RG
257-RG
NO
1
CY
R34
86-RG
253-RG
251-RG
EPDB35A
199-RG
995-RG
722-RG
17-RG
5
98-RG
EUCH7A
454-VE
457-VE
508-JA
509-JA
209
226
227
288
653
101
261
419
419
616
615
495
496
226
227
971
155
885
145
645
320
289
225
160
247
771
471
532
721
184
753
185
231
172
173
120
247
225
105
134
394
261
653
239
240
130
131

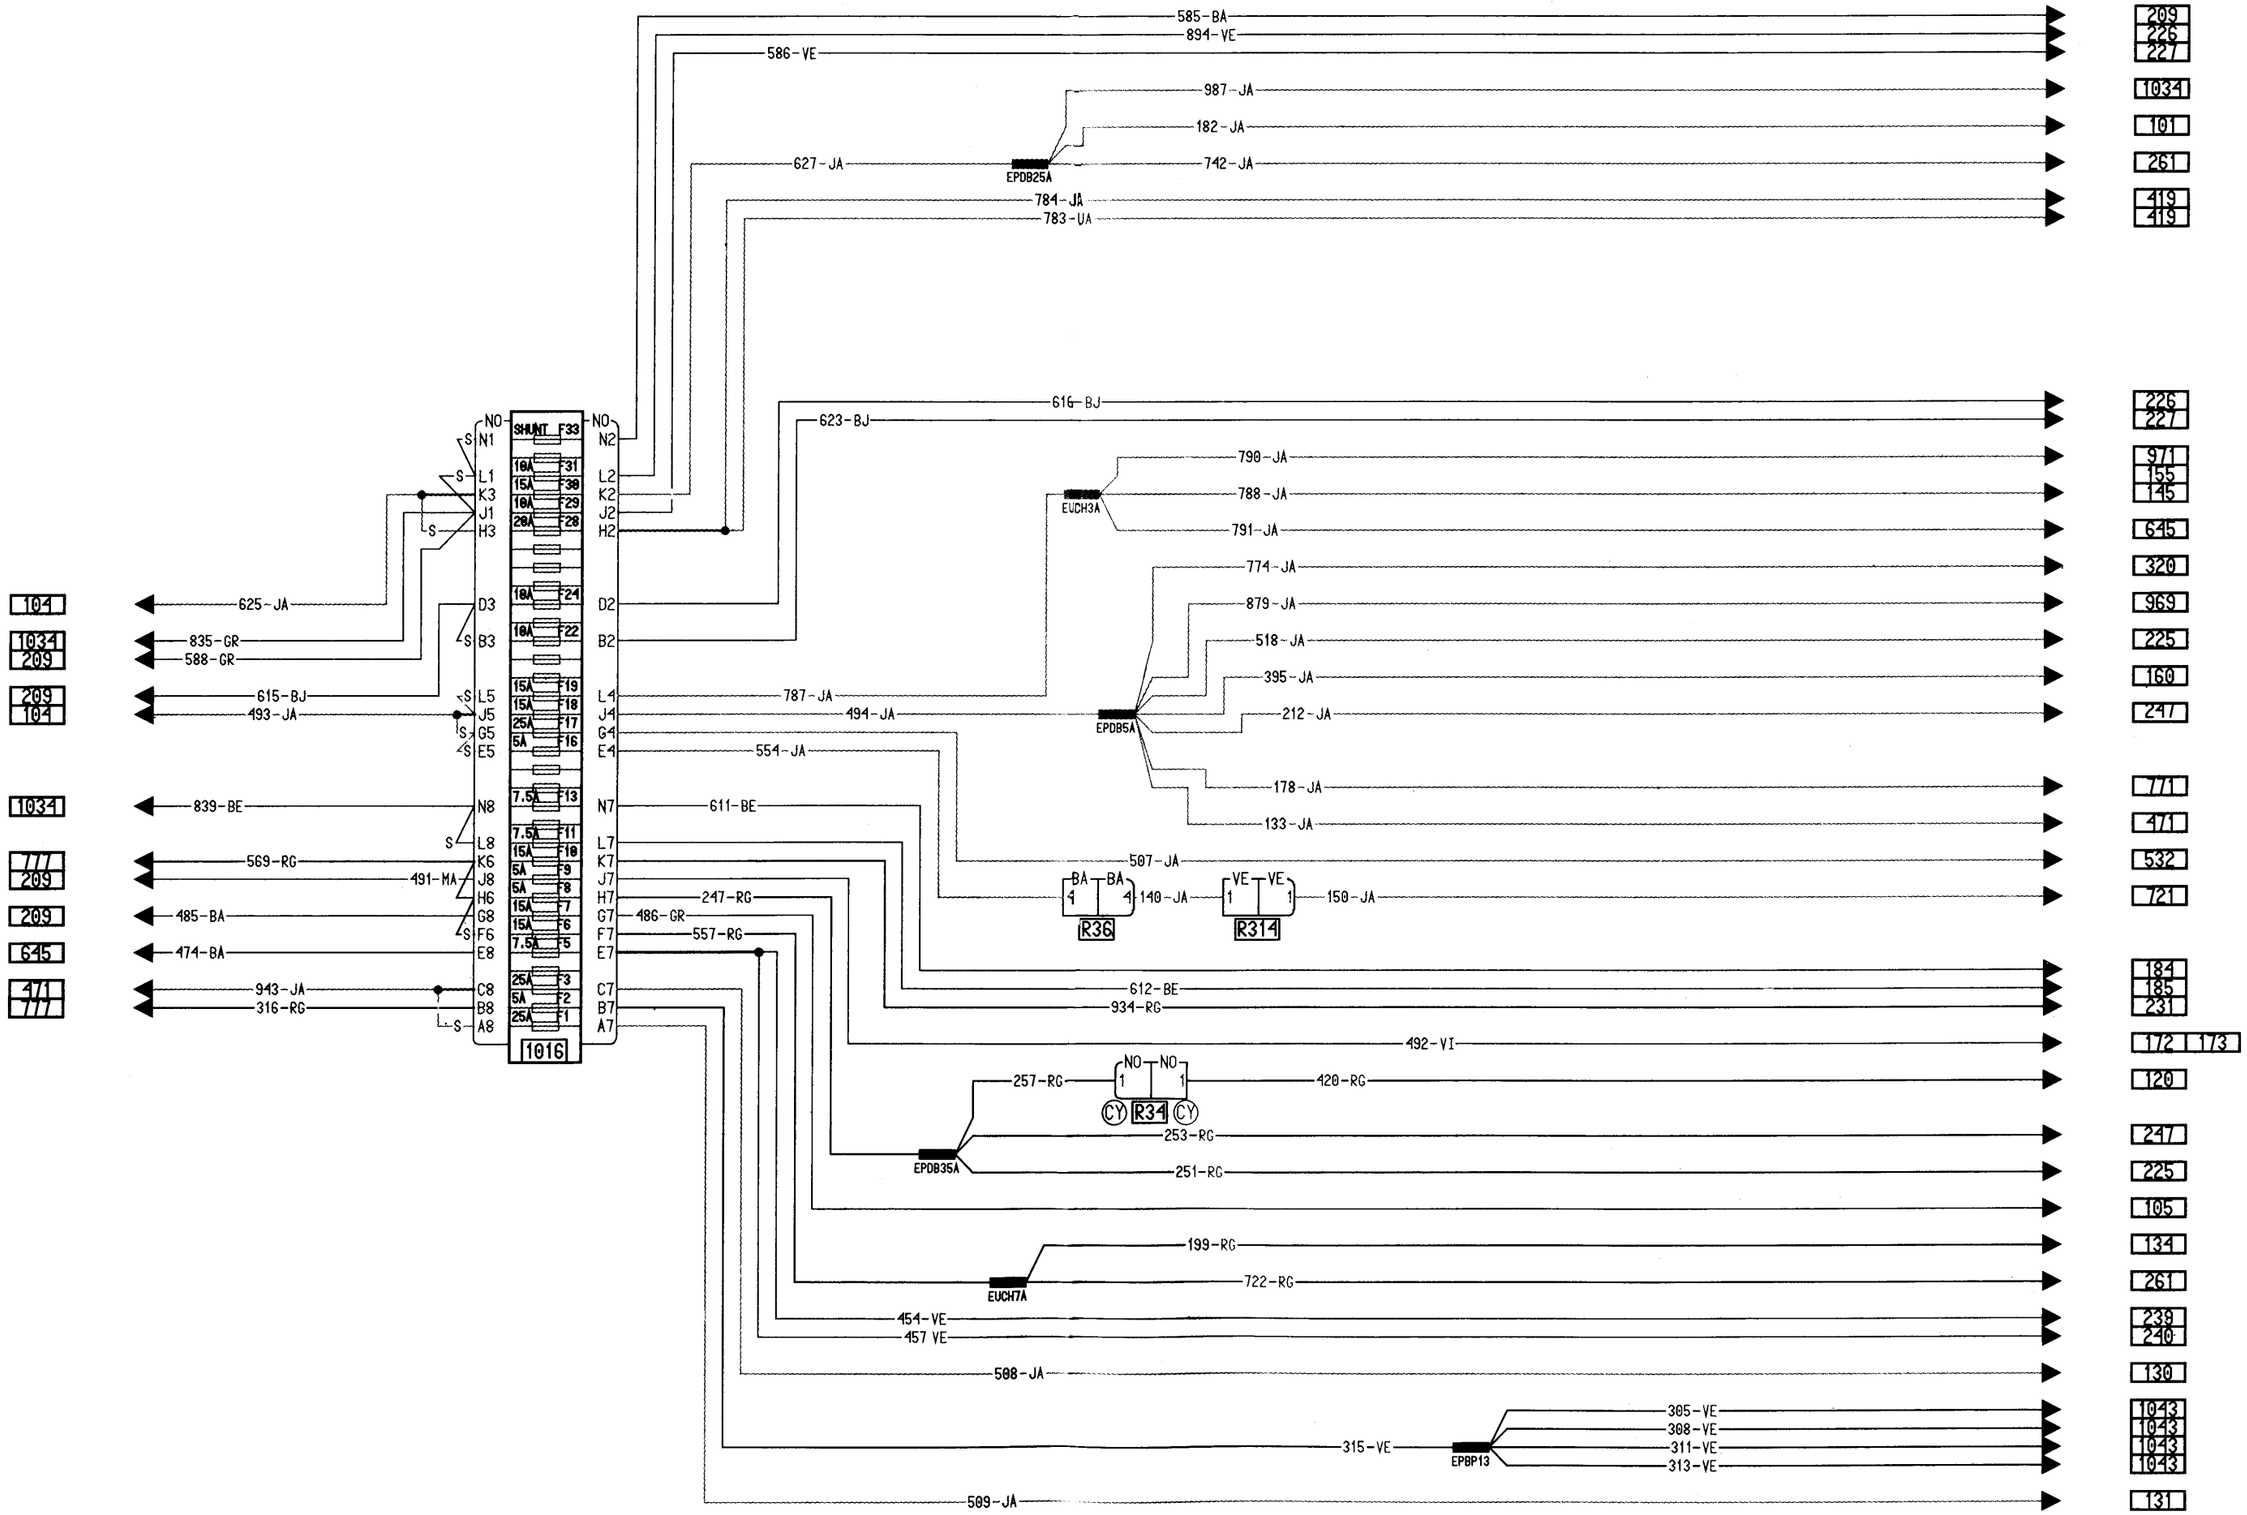

SHUNT F33
1016
585-BA
894-VE
586-VE
987-JA
182-JA
627-JA
742-JA
784-JA
783-UA
616-BJ
623-BJ
790-JA
788-JA
791-JA
774-JA
879-JA
518-JA
395-JA
212-JA
178-JA
133-JA
787-JA
494-JA
554-JA
507-JA
140-JA
150-JA
611-BE
247-RG
486-GR
557-RG
612-BE
934-RG
492-VI
257-RG
420-RG
253-RG
251-RG
199-RG
722-RG
454-VE
457 VE
508-JA
315-VE
305-VE
308-VE
311-VE
313-VE
509-JA
625-JA
835-GR
588-GR
615-BJ
493-JA
839-BE
569-RG
491-MA
485-BA
474-BA
943-JA
316-RG
EPDB25A
EUCH3A
EPDB5A
R36
R314
EPDB35A
EUCH7A
EPBP13
R34
209 226 227
1034
101
261
419 419
226 227
971 155 145
645
320
969
225
160
247
771
471
532
721
184 185 231
172 173
120
247
225
105
134
261
239 240
130
1043 1043 1043 1043
131
1034 209
209 104
1034
777 209
209
645
471 777
104


ENGINE FUSE BOARD

F8Q622/CA/BVM5

X642
00

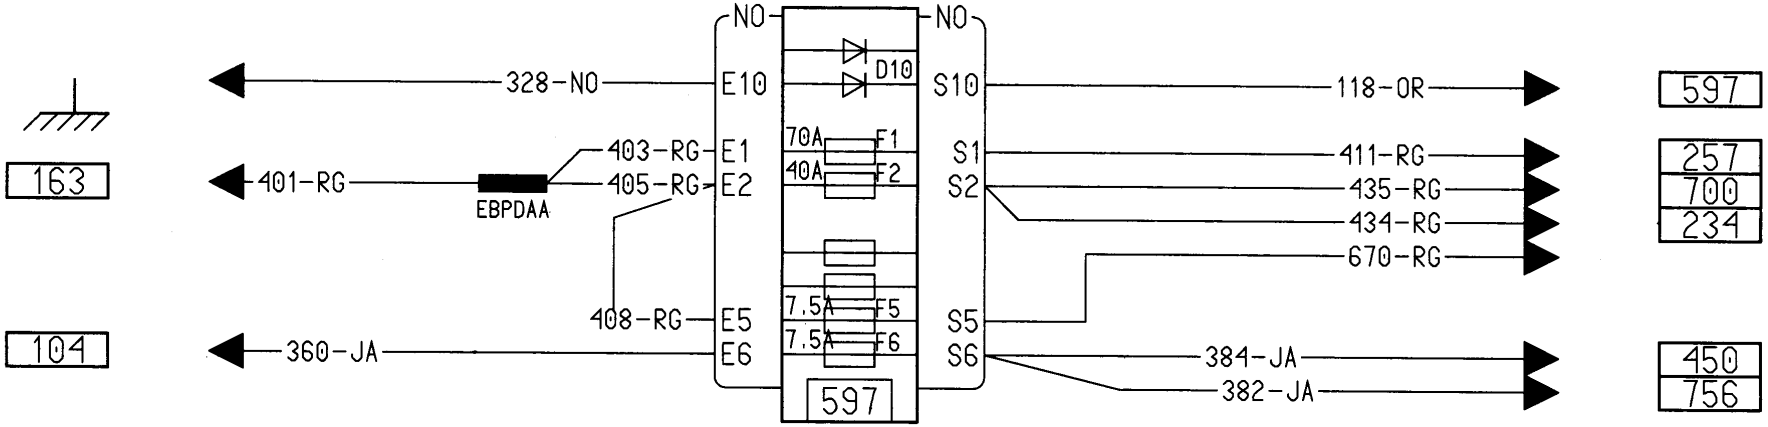

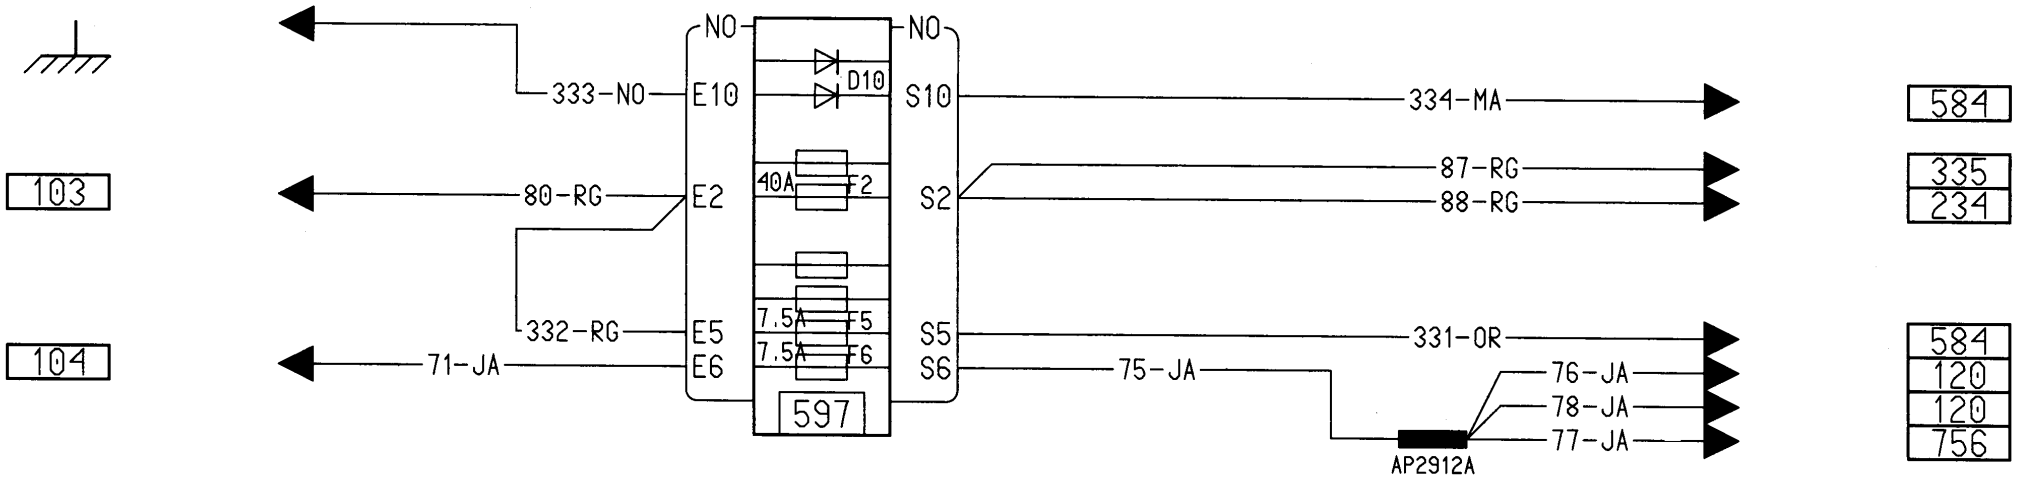

NO
NO
D10
333-NO
E10
S10
334-MA
584
103
80-RG
E2
40A
F2
S2
87-RG
88-RG
335
234
332-RG
E5
7.5A
F5
S5
331-OR
584
104
71-JA
E6
7.5A
F6
S6
75-JA
76-JA
78-JA
77-JA
120
120
756
597
AP2912A

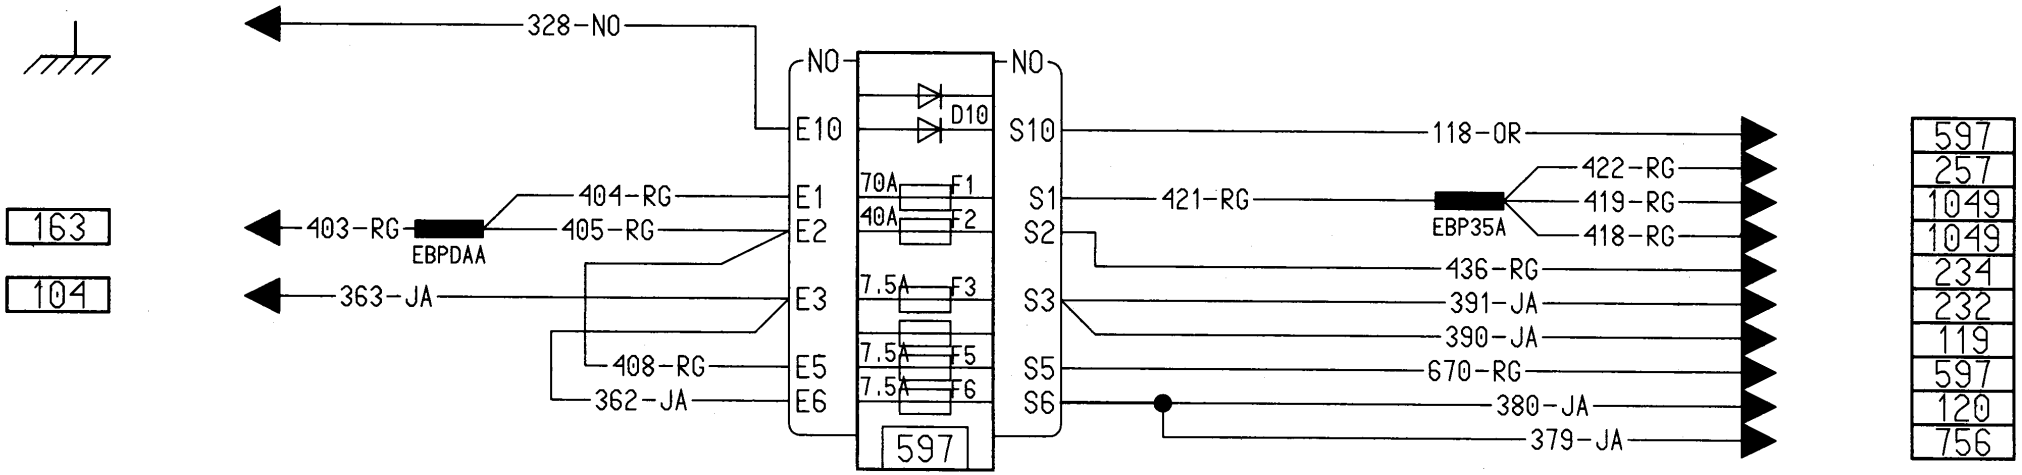
328-NO
NO
E10
D10
NO
S10
118-OR
597
257
1049
1049
234
232
119
597
120
756
422-RG
419-RG
418-RG
421-RG
EBP35A
S1
S2
S3
S5
S6
436-RG
391-JA
390-JA
670-RG
380-JA
379-JA
163
104
403-RG
EBPDAA
404-RG
405-RG
363-JA
408-RG
362-JA
E1
E2
E3
E5
E6
70A
F1
40A
F2
7.5A
F3
7.5A
F5
7.5A
F6
597

ENGINE FUSE BOARD

F4R741,K4M701/CA/BVA4


X642
00

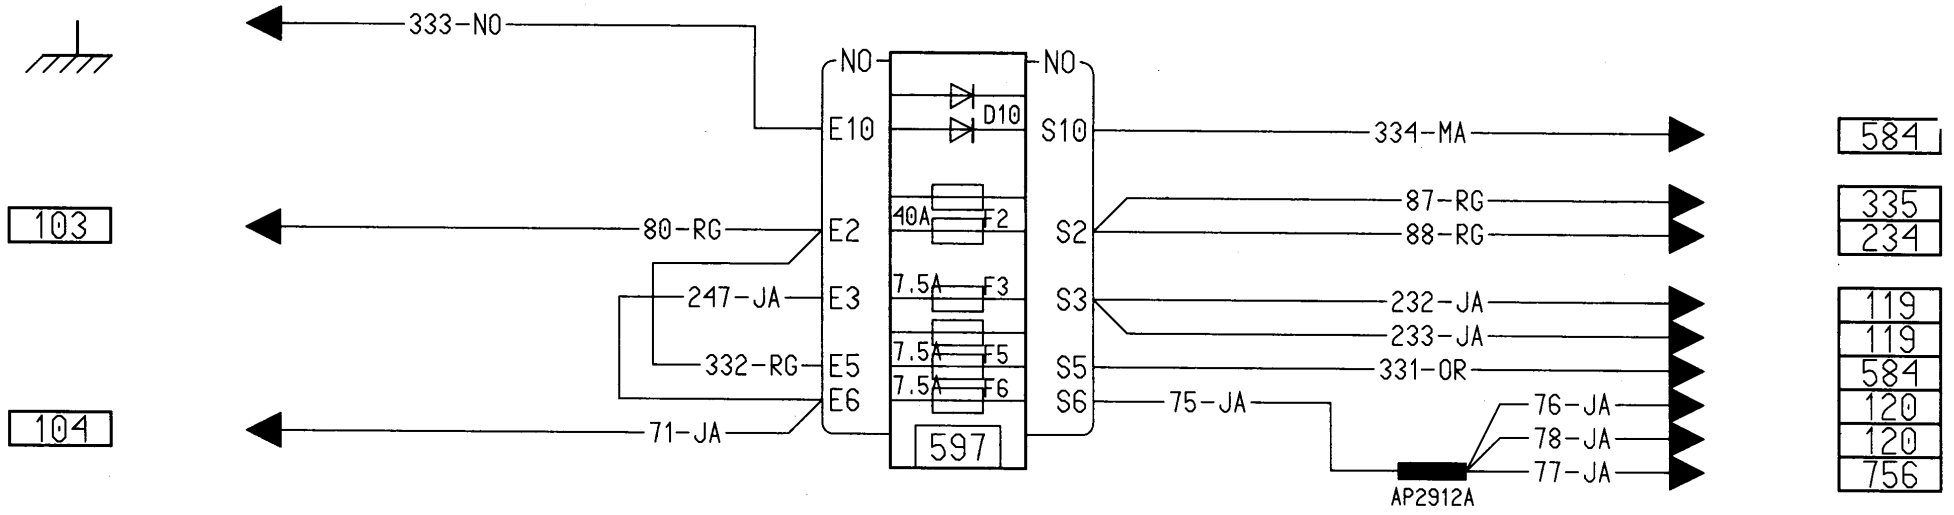

ENGINE FUSE BOARD

E7J626/CA/BVM5


X642
00

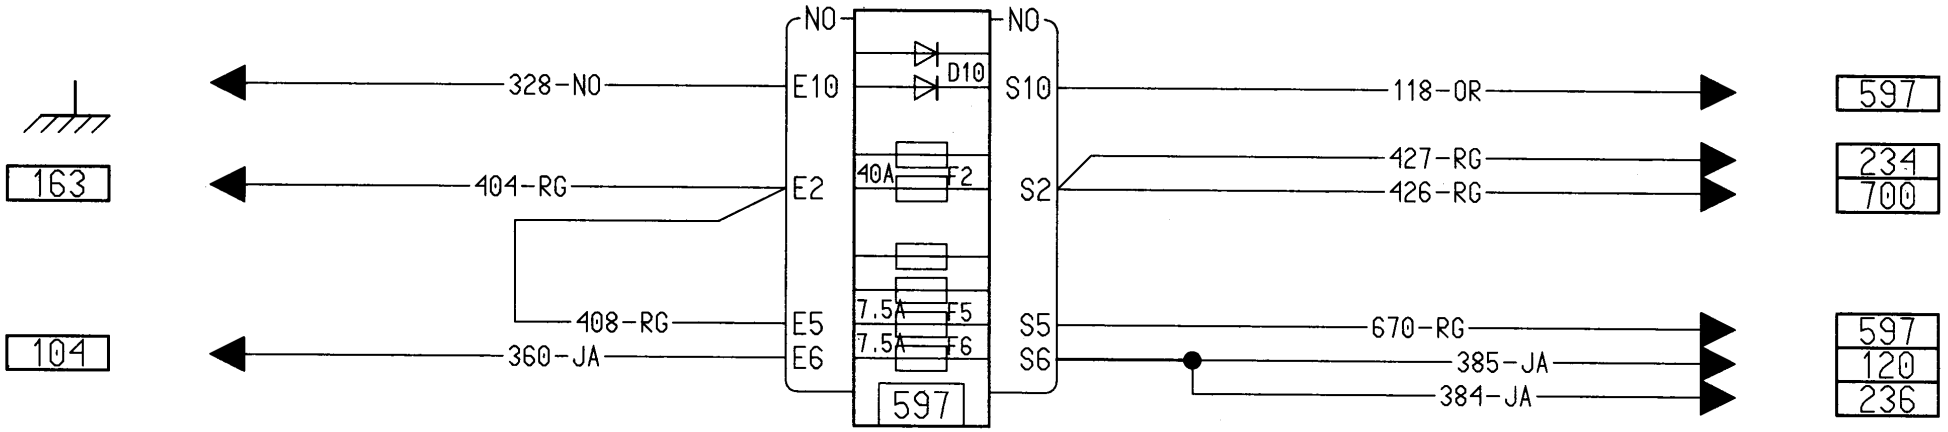

ENGINE FUSE BOARD

F5R740/CA/BVM5


X642
00

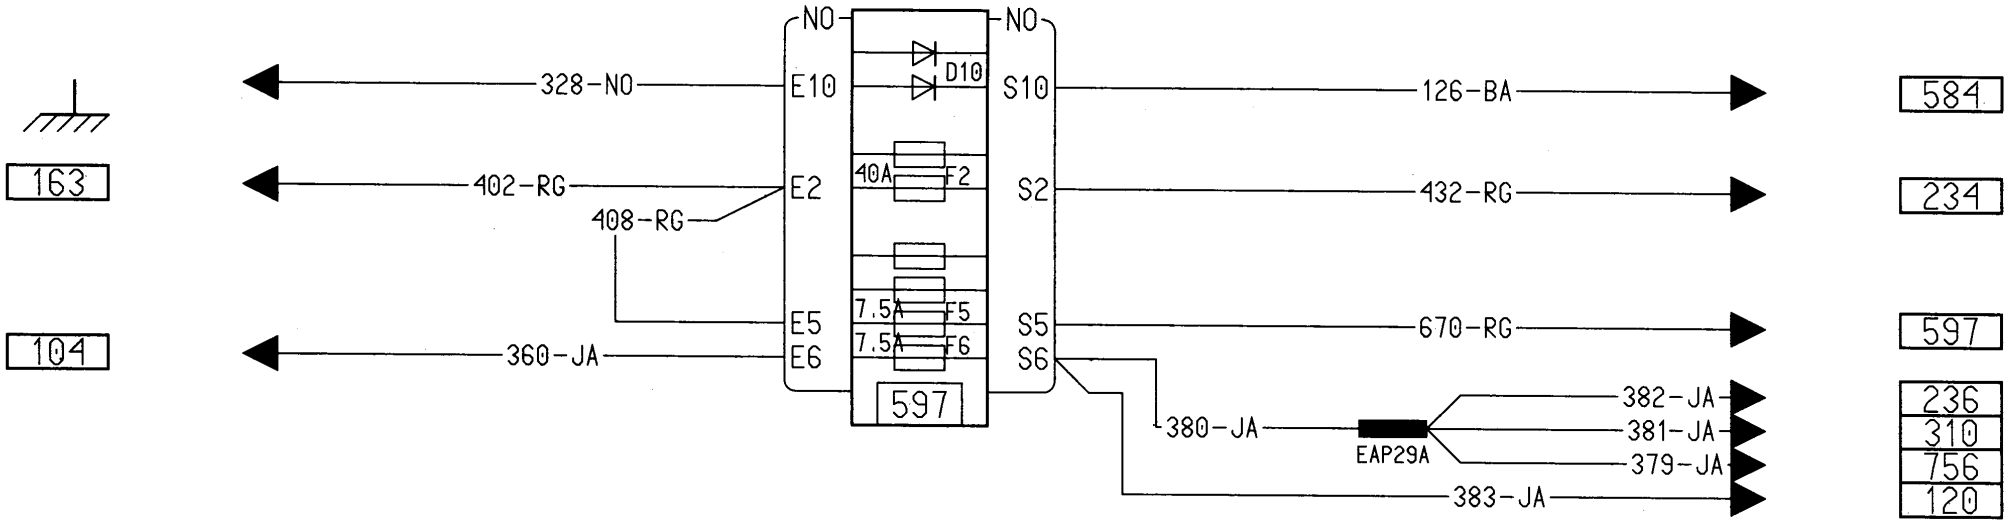

ENGINE FUSE BOARD

F8Q790/CA/BVM5


X642
00

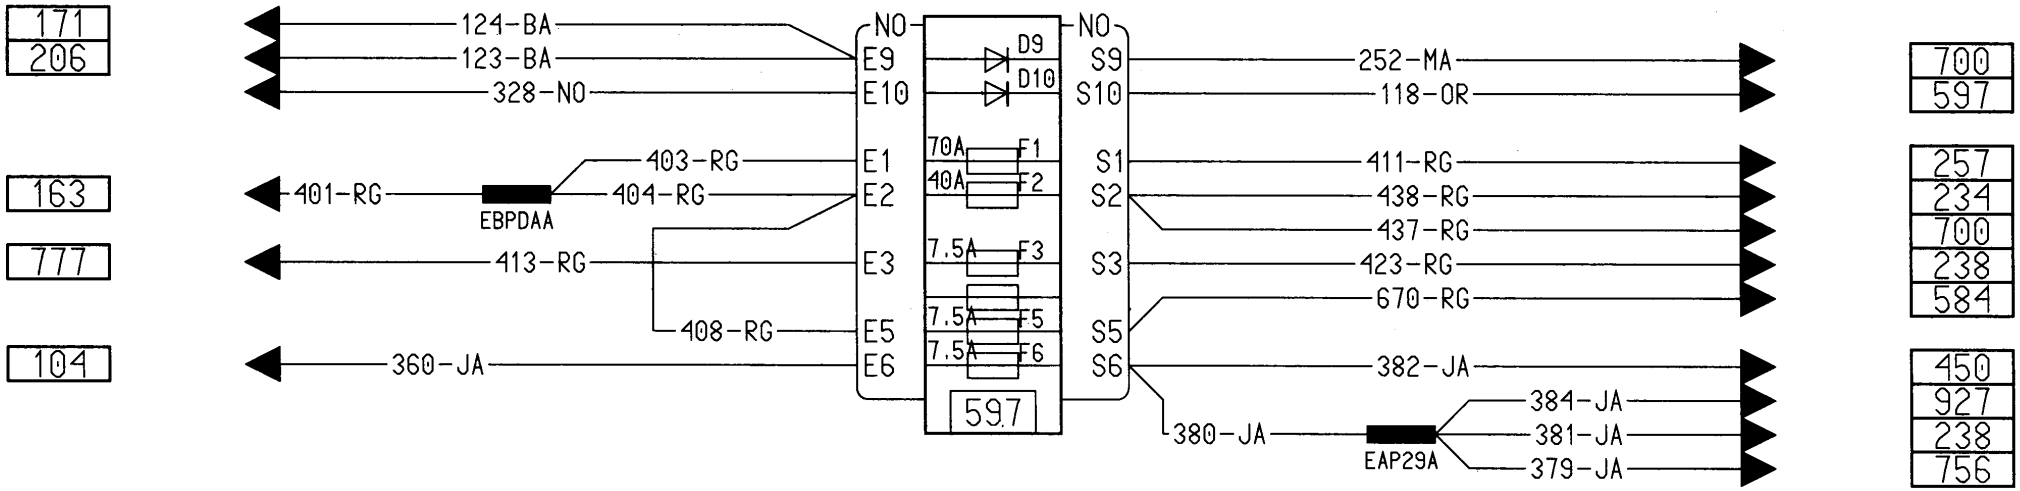

ENGINE FUSE BOARD

F9Q731/CHAUFO/THEPLG/BVA4


X642
00

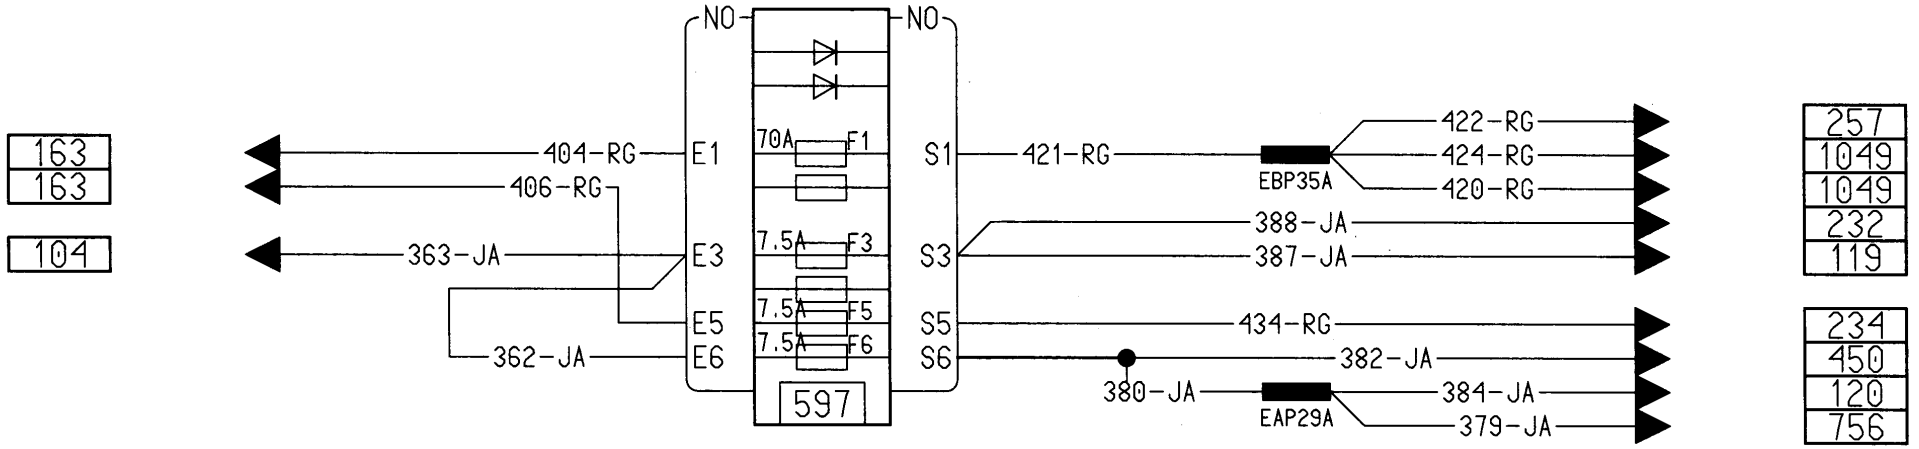

ENGINE FUSE BOARD

K4J714/CA


X642
00

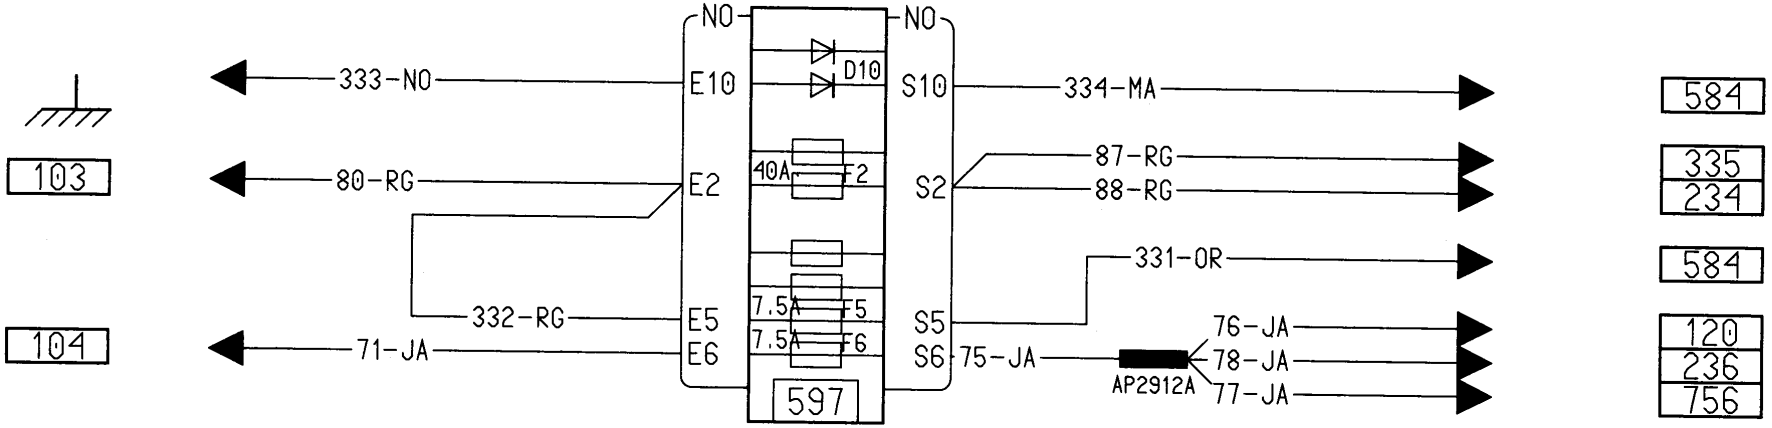



ENGINE FUSE BOARD


K4M712/CA/EQGPL/BVM5


X642
00

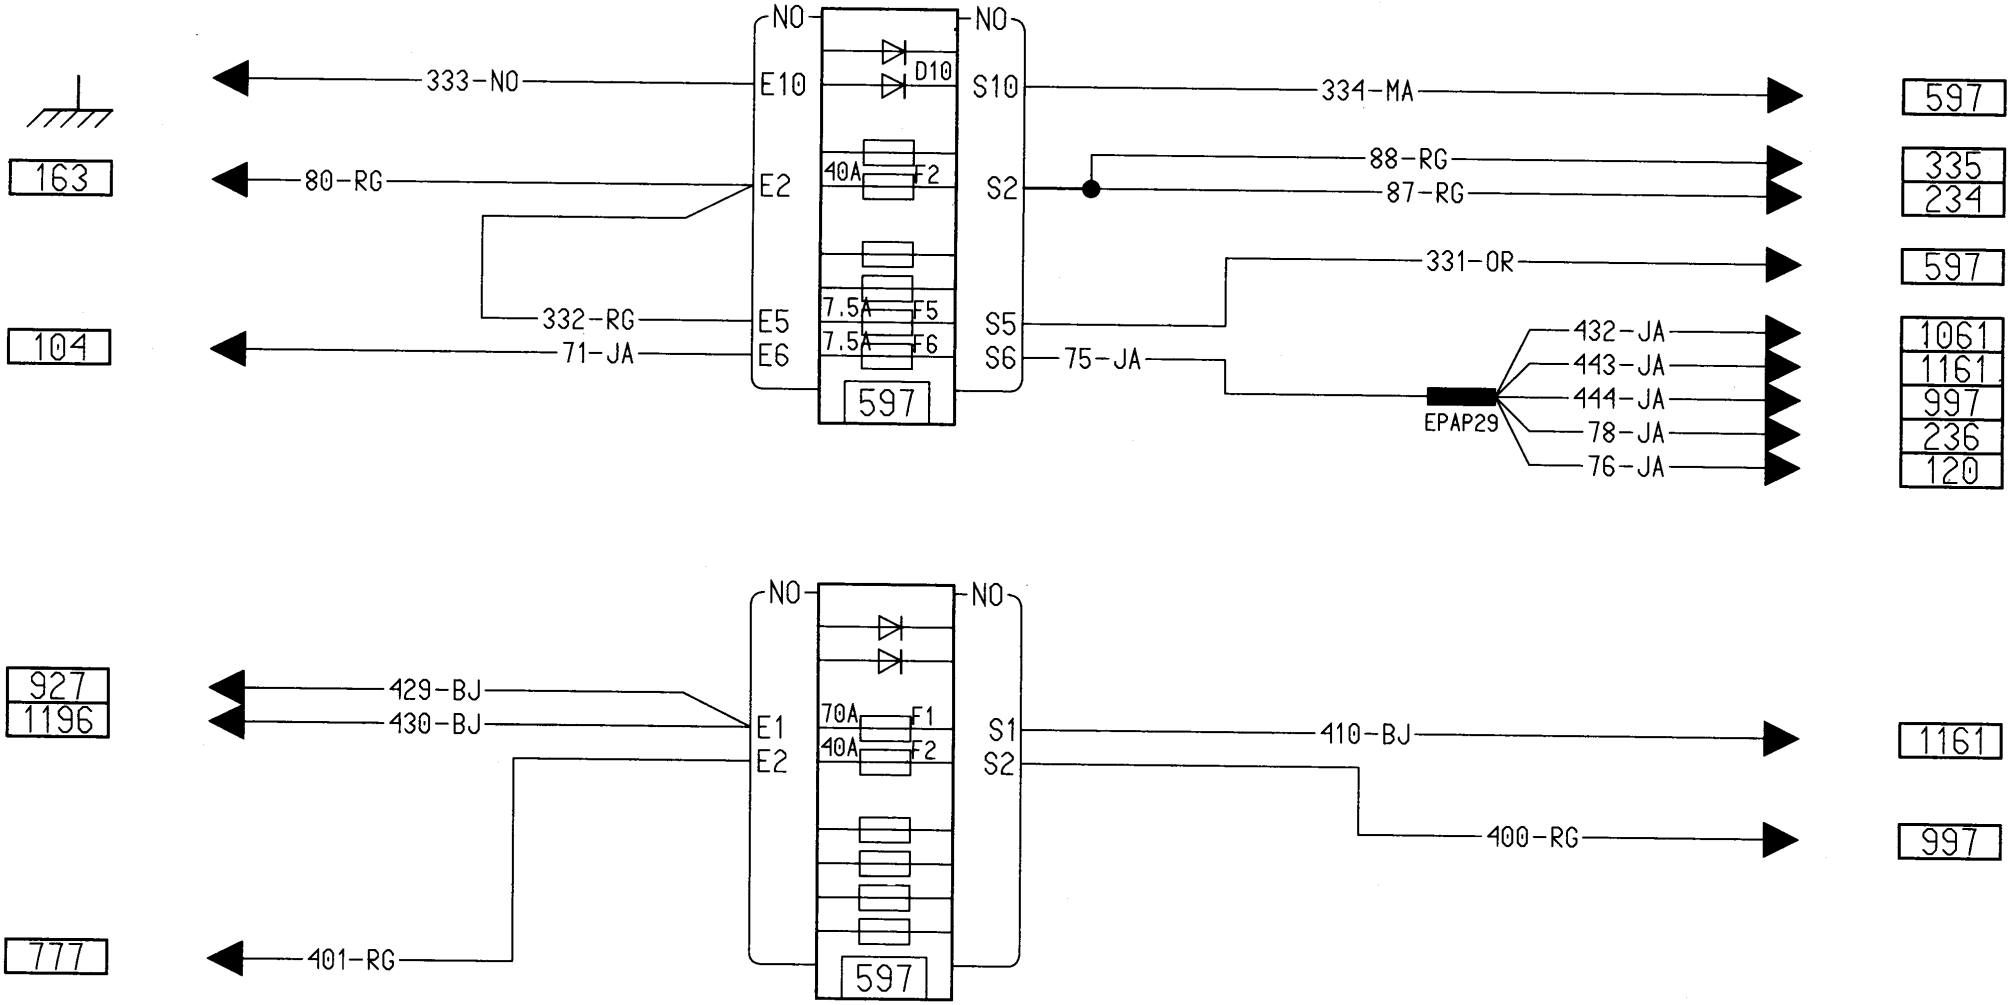


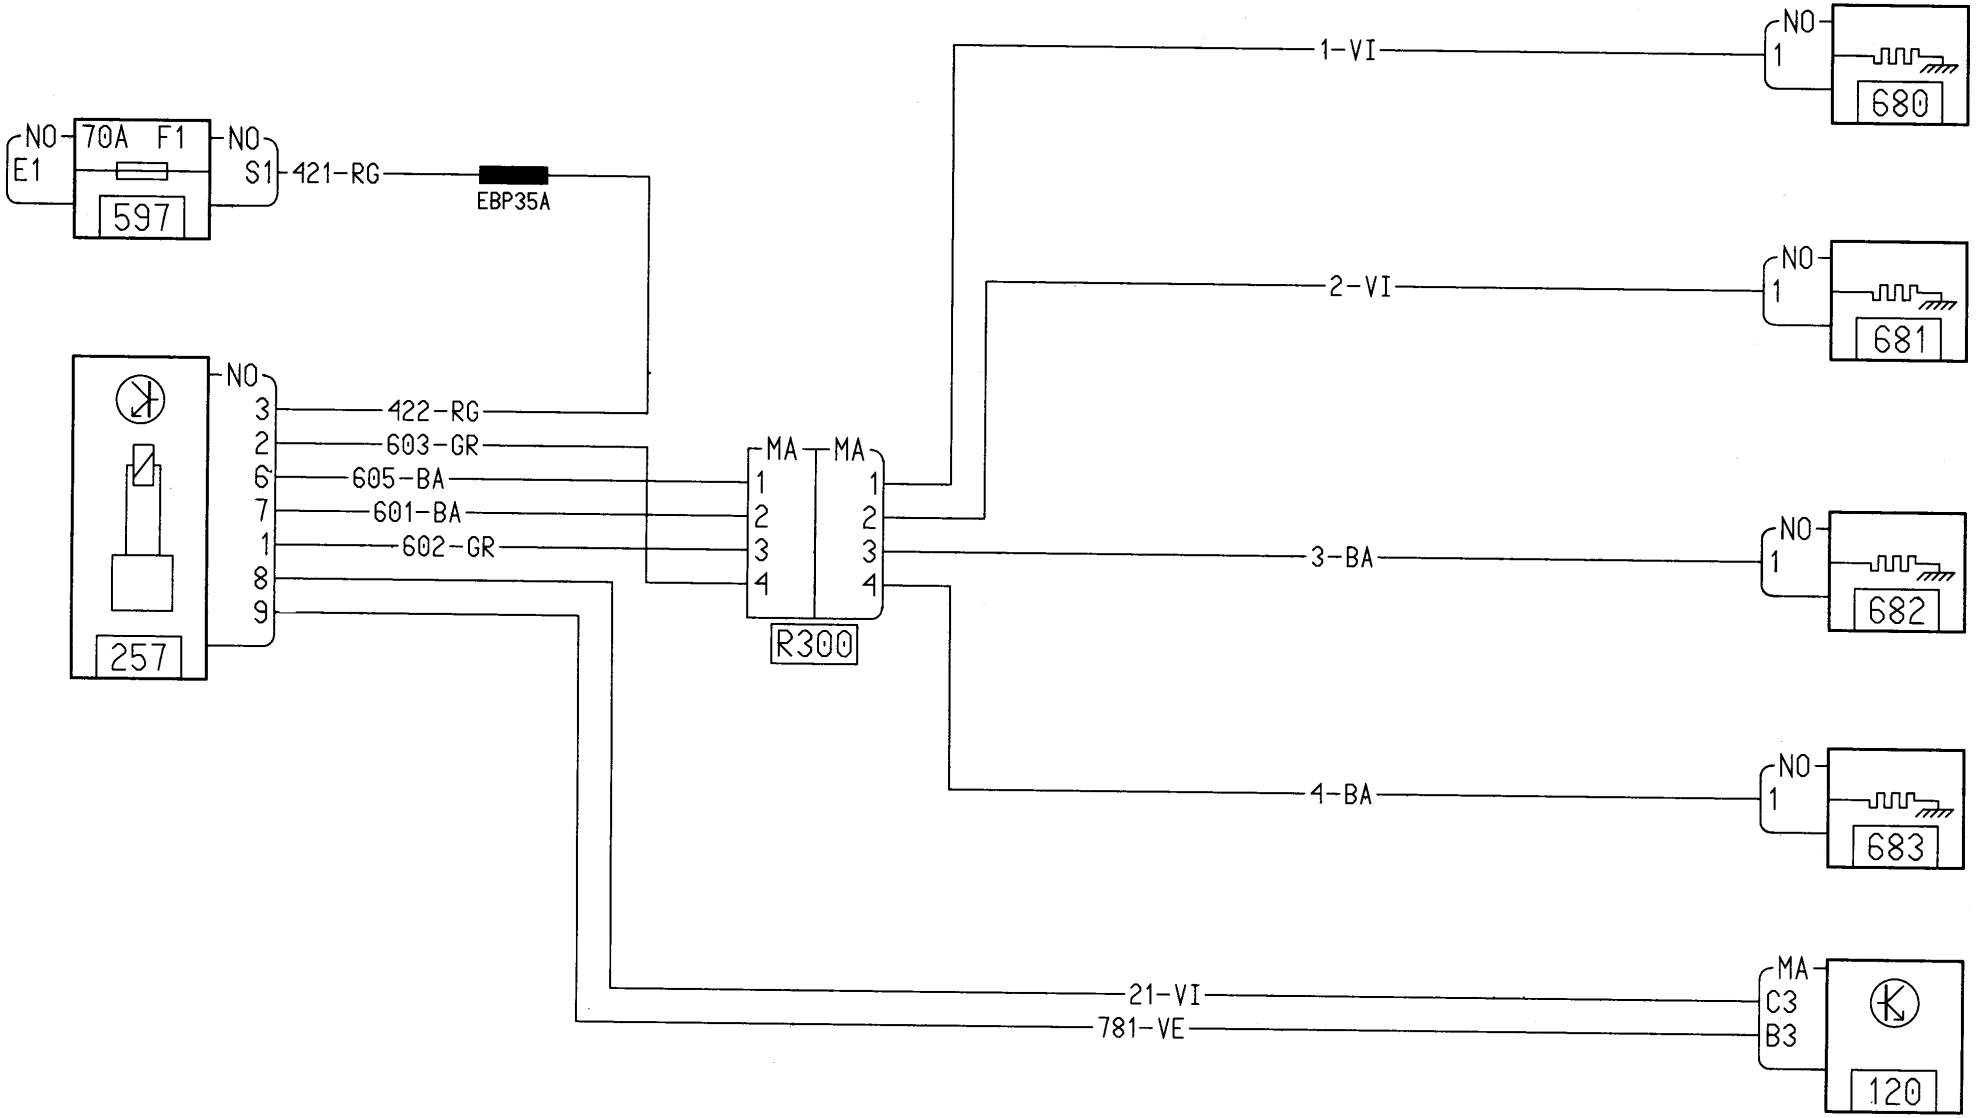
NO
E1
70A F1
597
NO
S1
421-RG
EBP35A
257
NO
3
2
6
7
1
8
9
422-RG
603-GR
605-BA
601-BA
602-GR
MA
1
2
3
4
MA
1
2
3
4
R300
1-VI
2-VI
3-BA
4-BA
21-VI
781-VE
NO
1
680
NO
1
681
NO
1
682
NO
1
683
MA
C3
B3
120

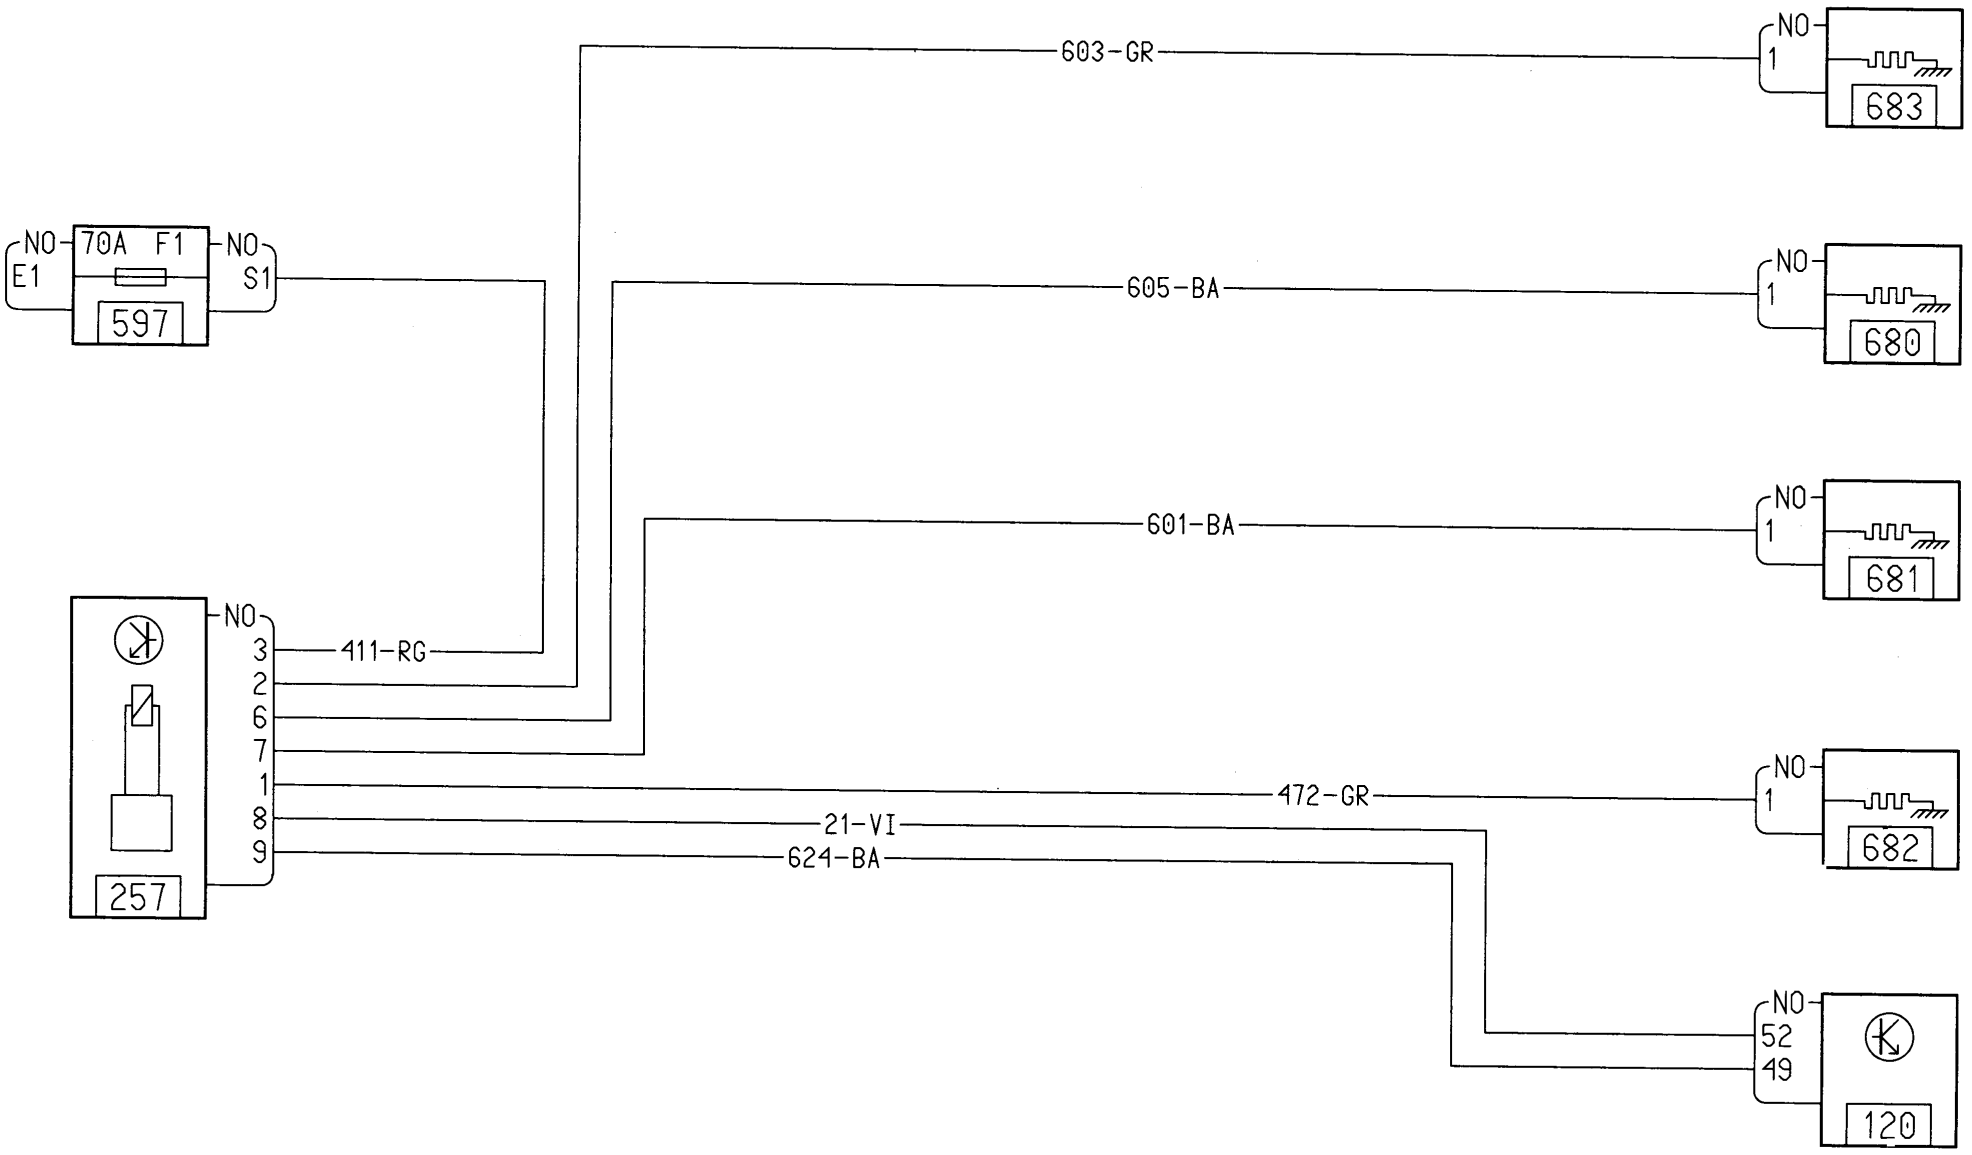
NO
E1
70A F1
NO
S1
597
603-GR
605-BA
601-BA
411-RG
472-GR
21-VI
624-BA
NO
3
2
6
7
1
8
9
257
NO
1
683
NO
1
680
NO
1
681
NO
1
682
NO
52
49
120

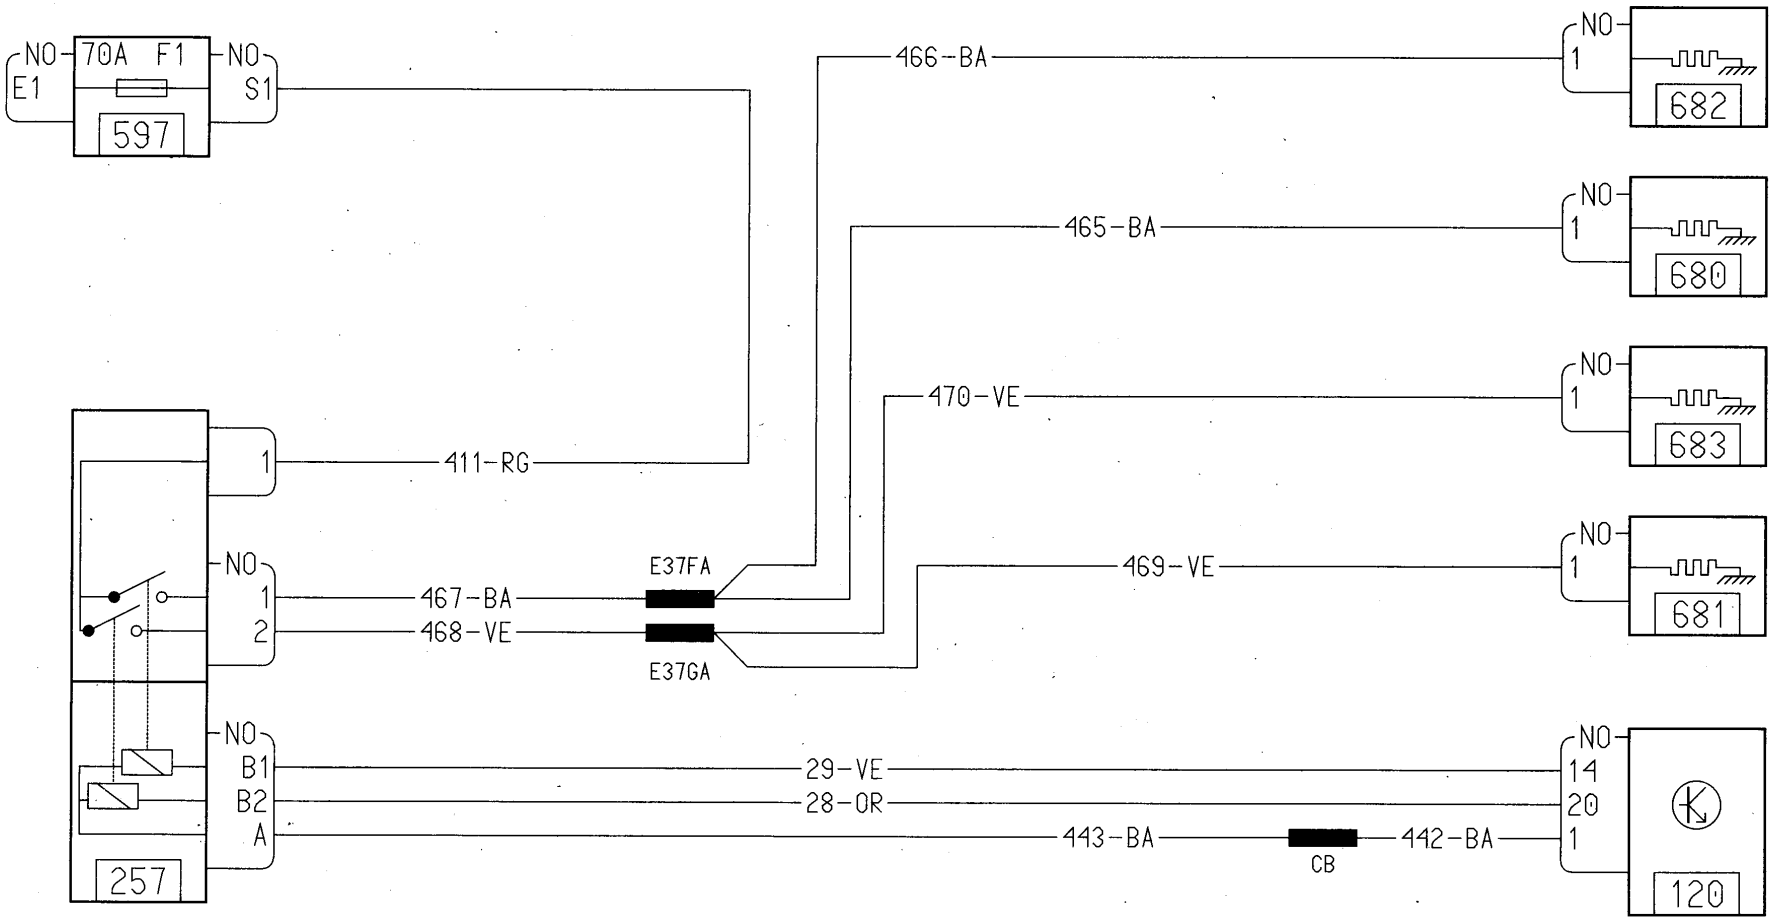
NO
E1
70A F1
NO
S1
597
466-BA
NO
1
682
465-BA
680
470-VE
683
469-VE
681
411-RG
1
NO
1
2
467-BA
468-VE
E37FA
E37GA
NO
B1
B2
A
257
29-VE
28-OR
443-BA
CB
442-BA
14
20
1
120

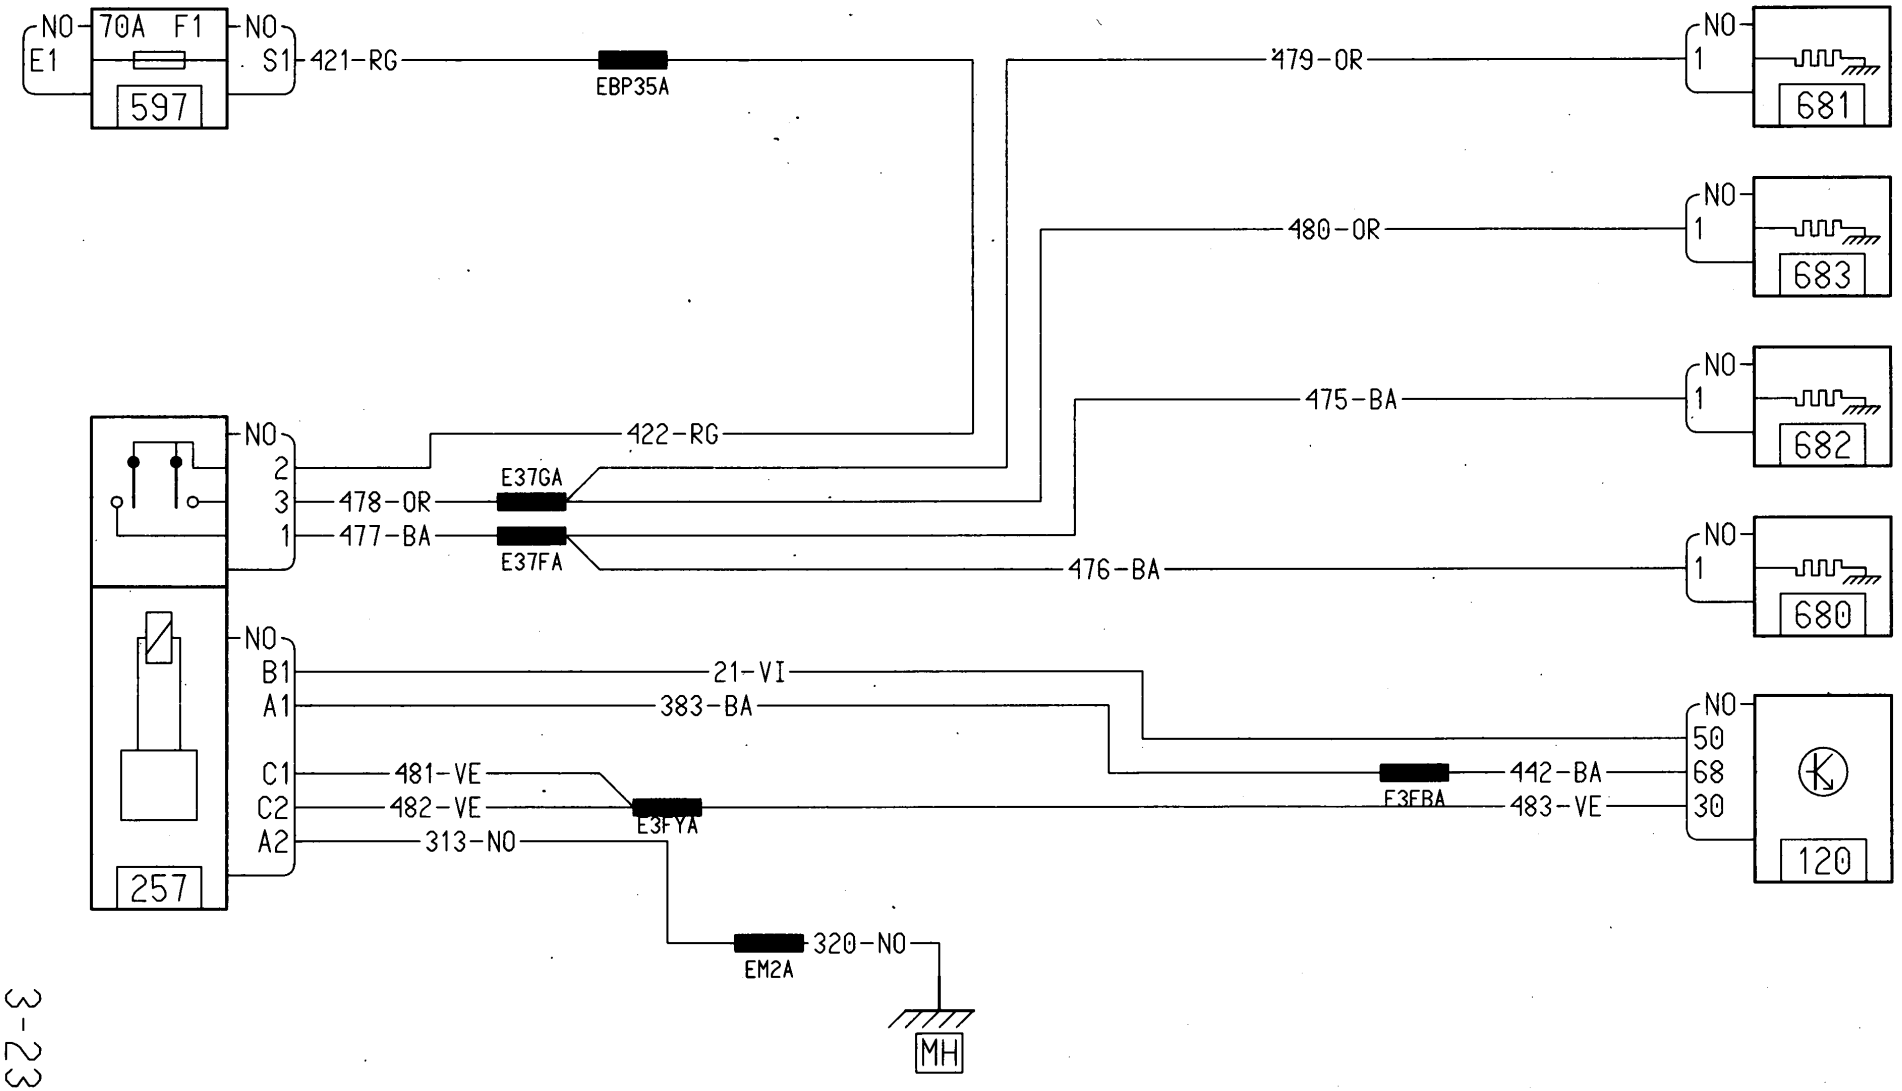

NO
E1
70A F1
597
NO
S1
421-RG
EBP35A
479-OR
NO
1
681
480-OR
683
475-BA
682
422-RG
NO
2
3
1
478-OR
477-BA
E37GA
E37FA
476-BA
680
257
B1
A1
C1
C2
A2
21-VI
383-BA
481-VE
482-VE
313-NO
E3FYA
E3FBA
442-BA
483-VE
50
68
30
120
320-NO
EM2A
MH

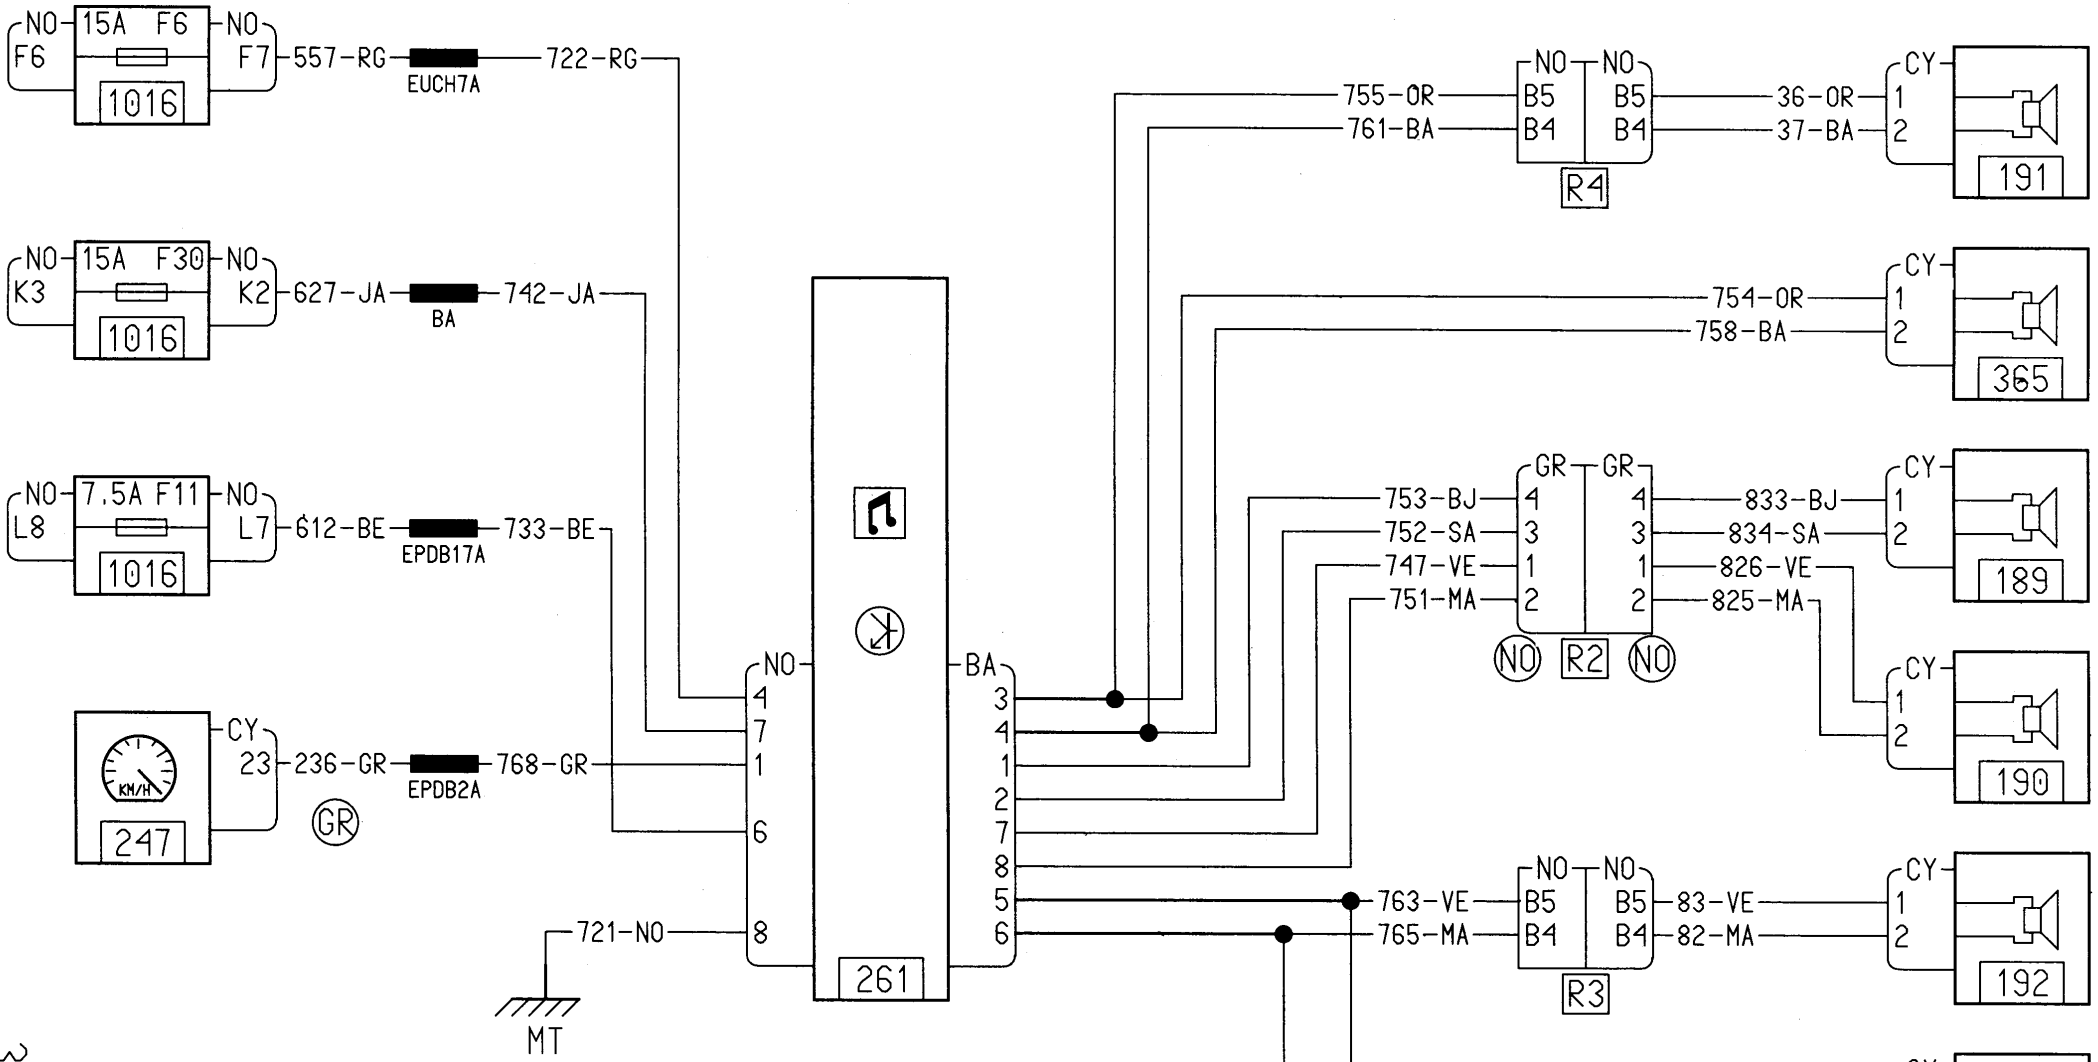
NO F6
15A F6
1016
NO F7
557-RG
EUCH7A
722-RG
NO K3
15A F30
1016
NO K2
627-JA
BA
742-JA
NO L8
7.5A F11
1016
NO L7
612-BE
EPDB17A
733-BE
CY 23
KM/H
247
236-GR
EPDB2A
768-GR
GR
721-NO
MT
NO 4 7 1 6 8
261
BA 3 4 1 2 7 8 5 6
755-OR
761-BA
NO B5 B4
R4
36-OR
37-BA
CY 1 2
191
754-OR
758-BA
365
753-BJ
752-SA
747-VE
751-MA
GR 4 3 1 2
R2
833-BJ
834-SA
826-VE
825-MA
189
190
763-VE
765-MA
R3
83-VE
82-MA
192
764-VE
767-MA
366

DIAGNOSTICS SOCKET

B64,L64/K4M706,K7M704/MERCOS/BVM5


X642
00

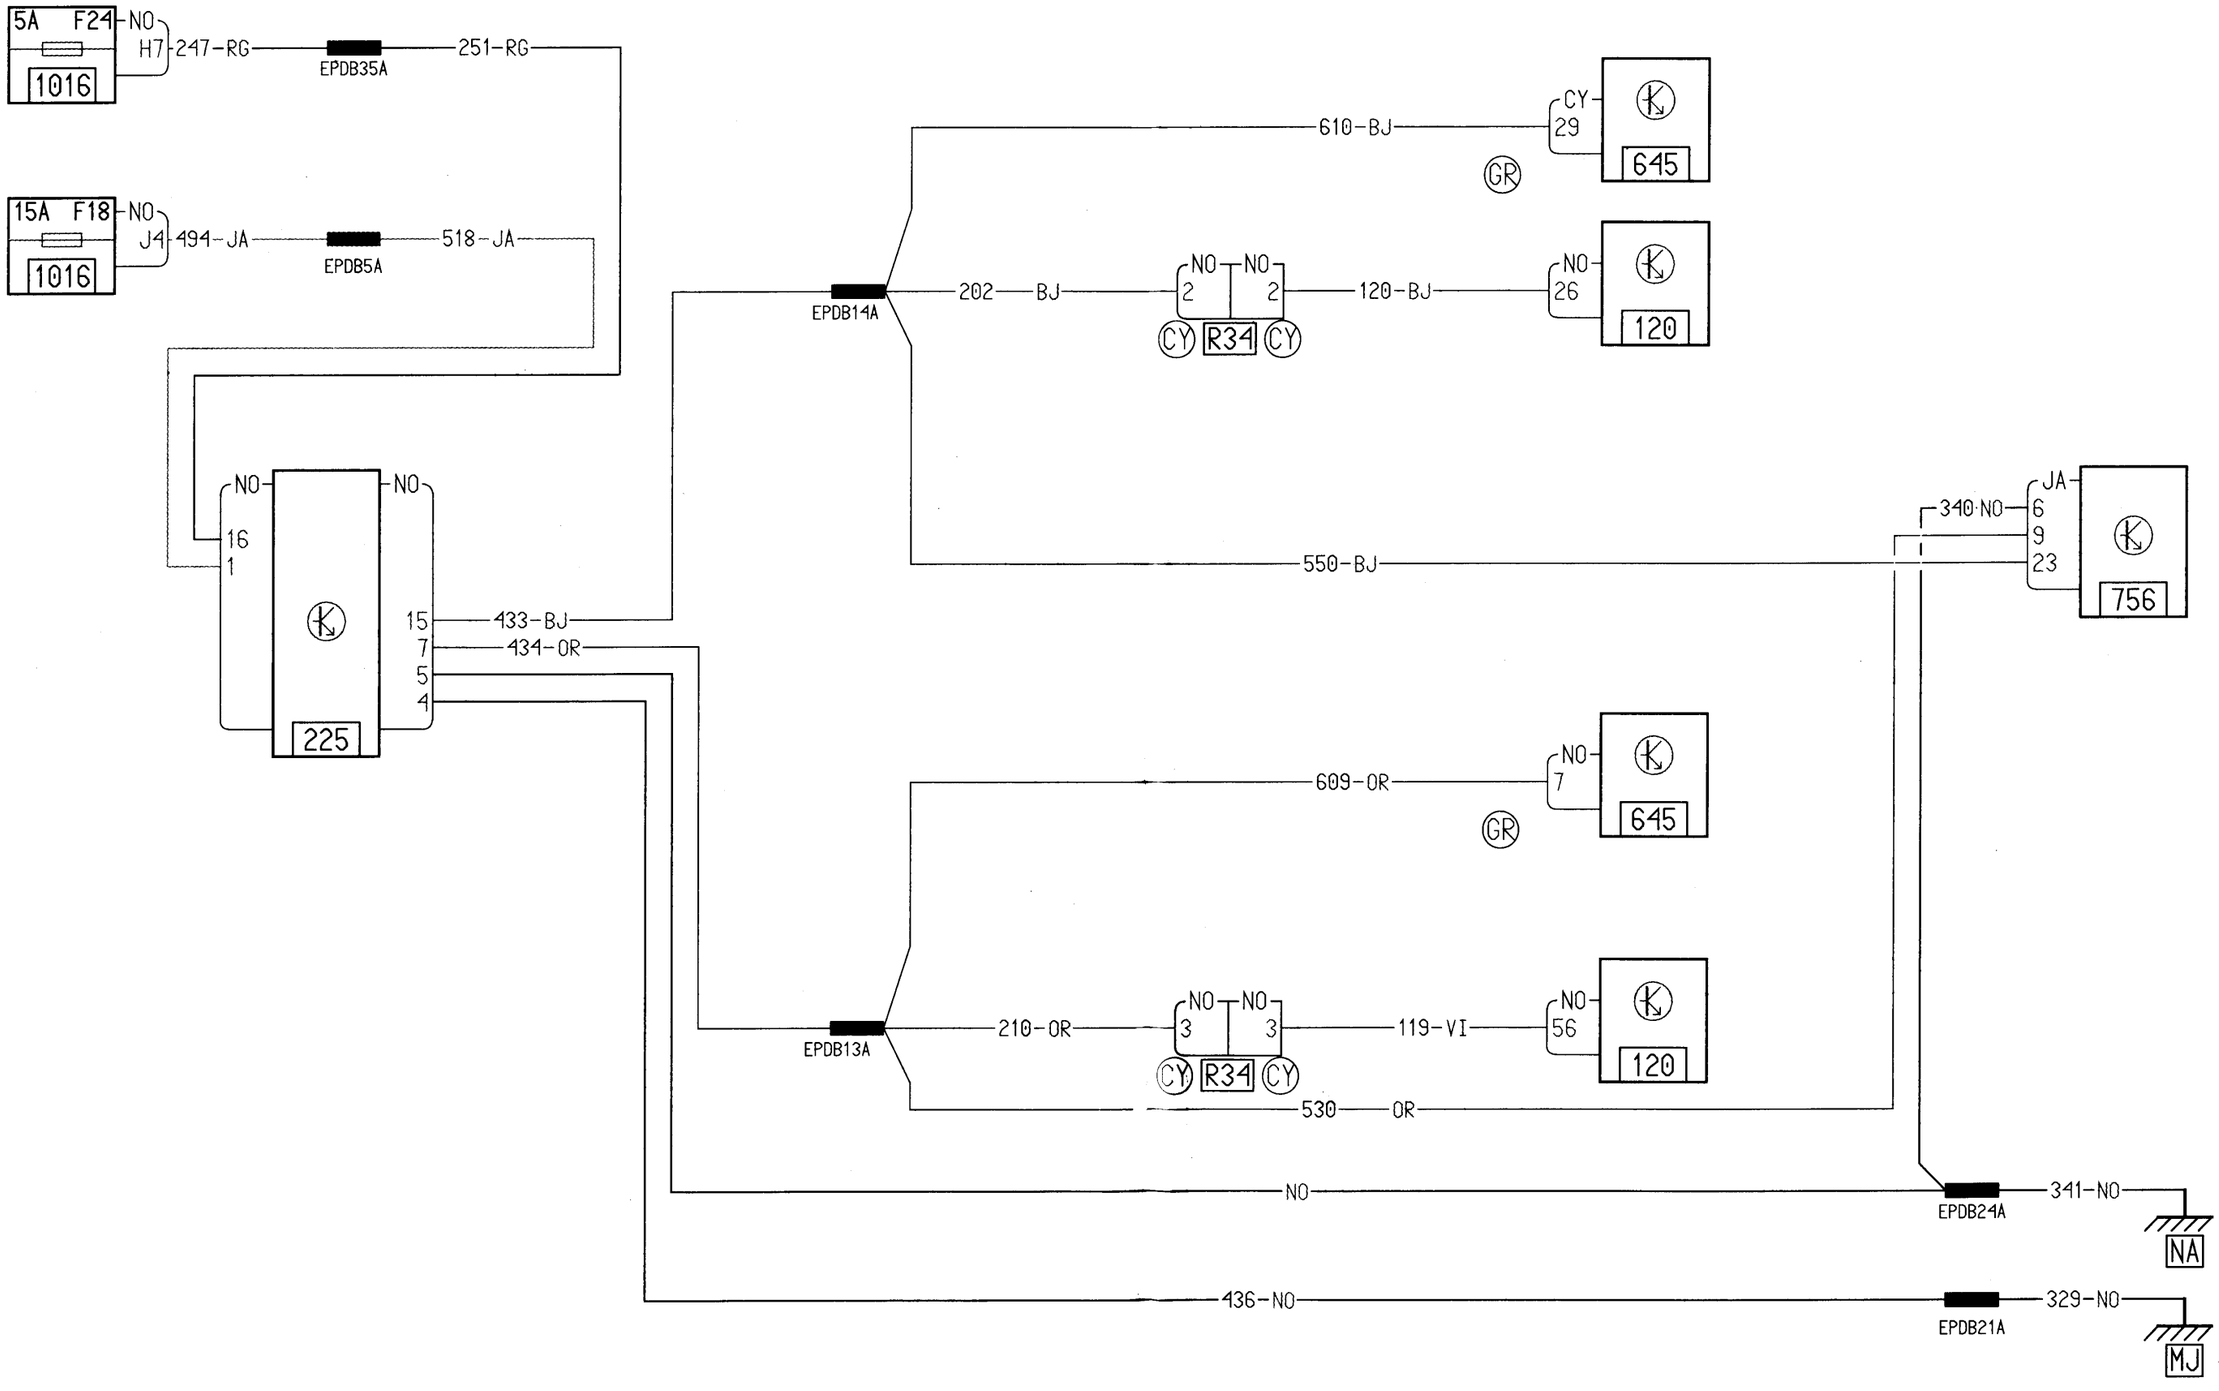

PRISE DIAGNOSTIQUE OBD2

E7J626,F4P722,F4R740,F5R740,F8Q622,F8Q790,K4J714,K4J750

X642
00

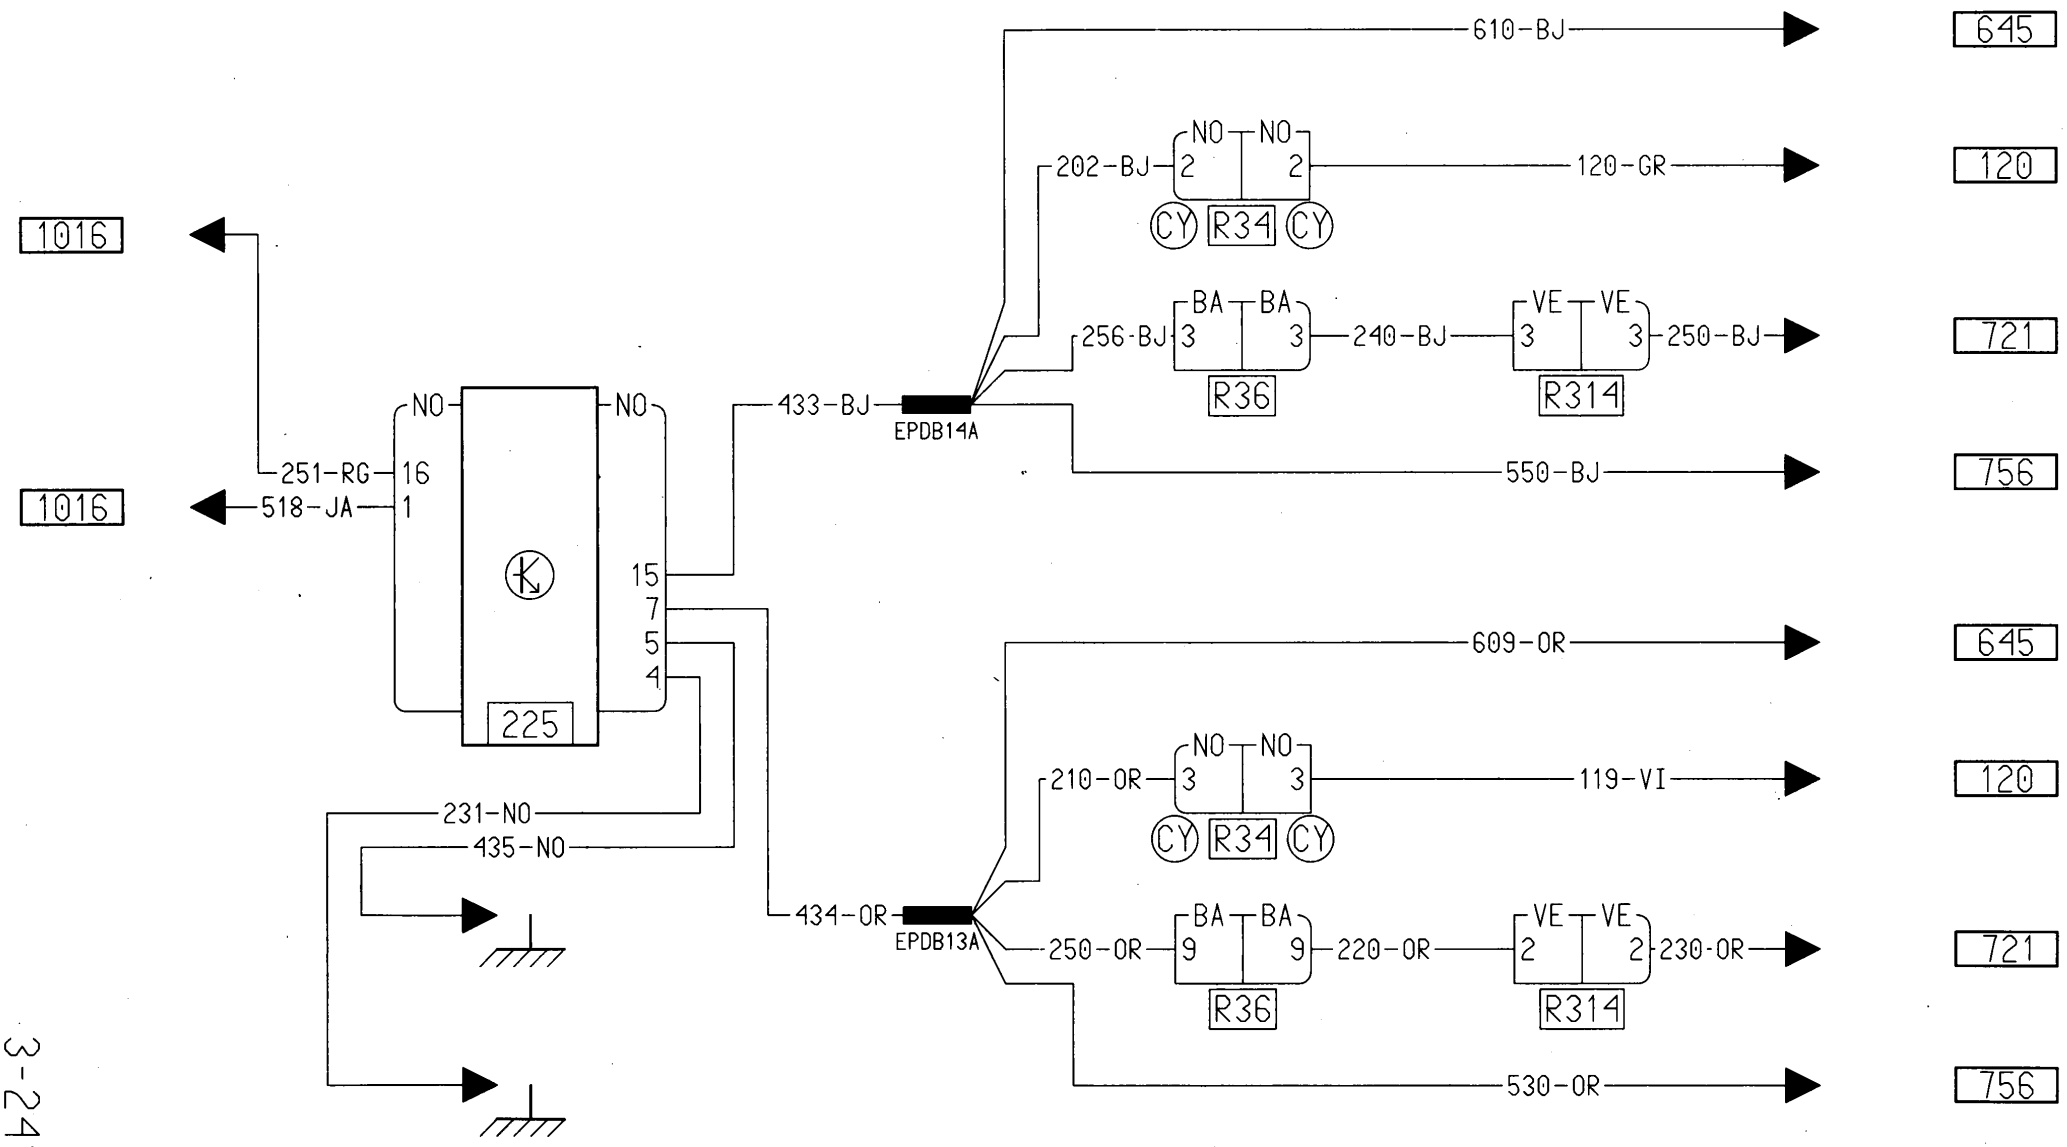


PRISE DIAGNOSTIQUE OBD2

F9Q733/BVA4

X642


00

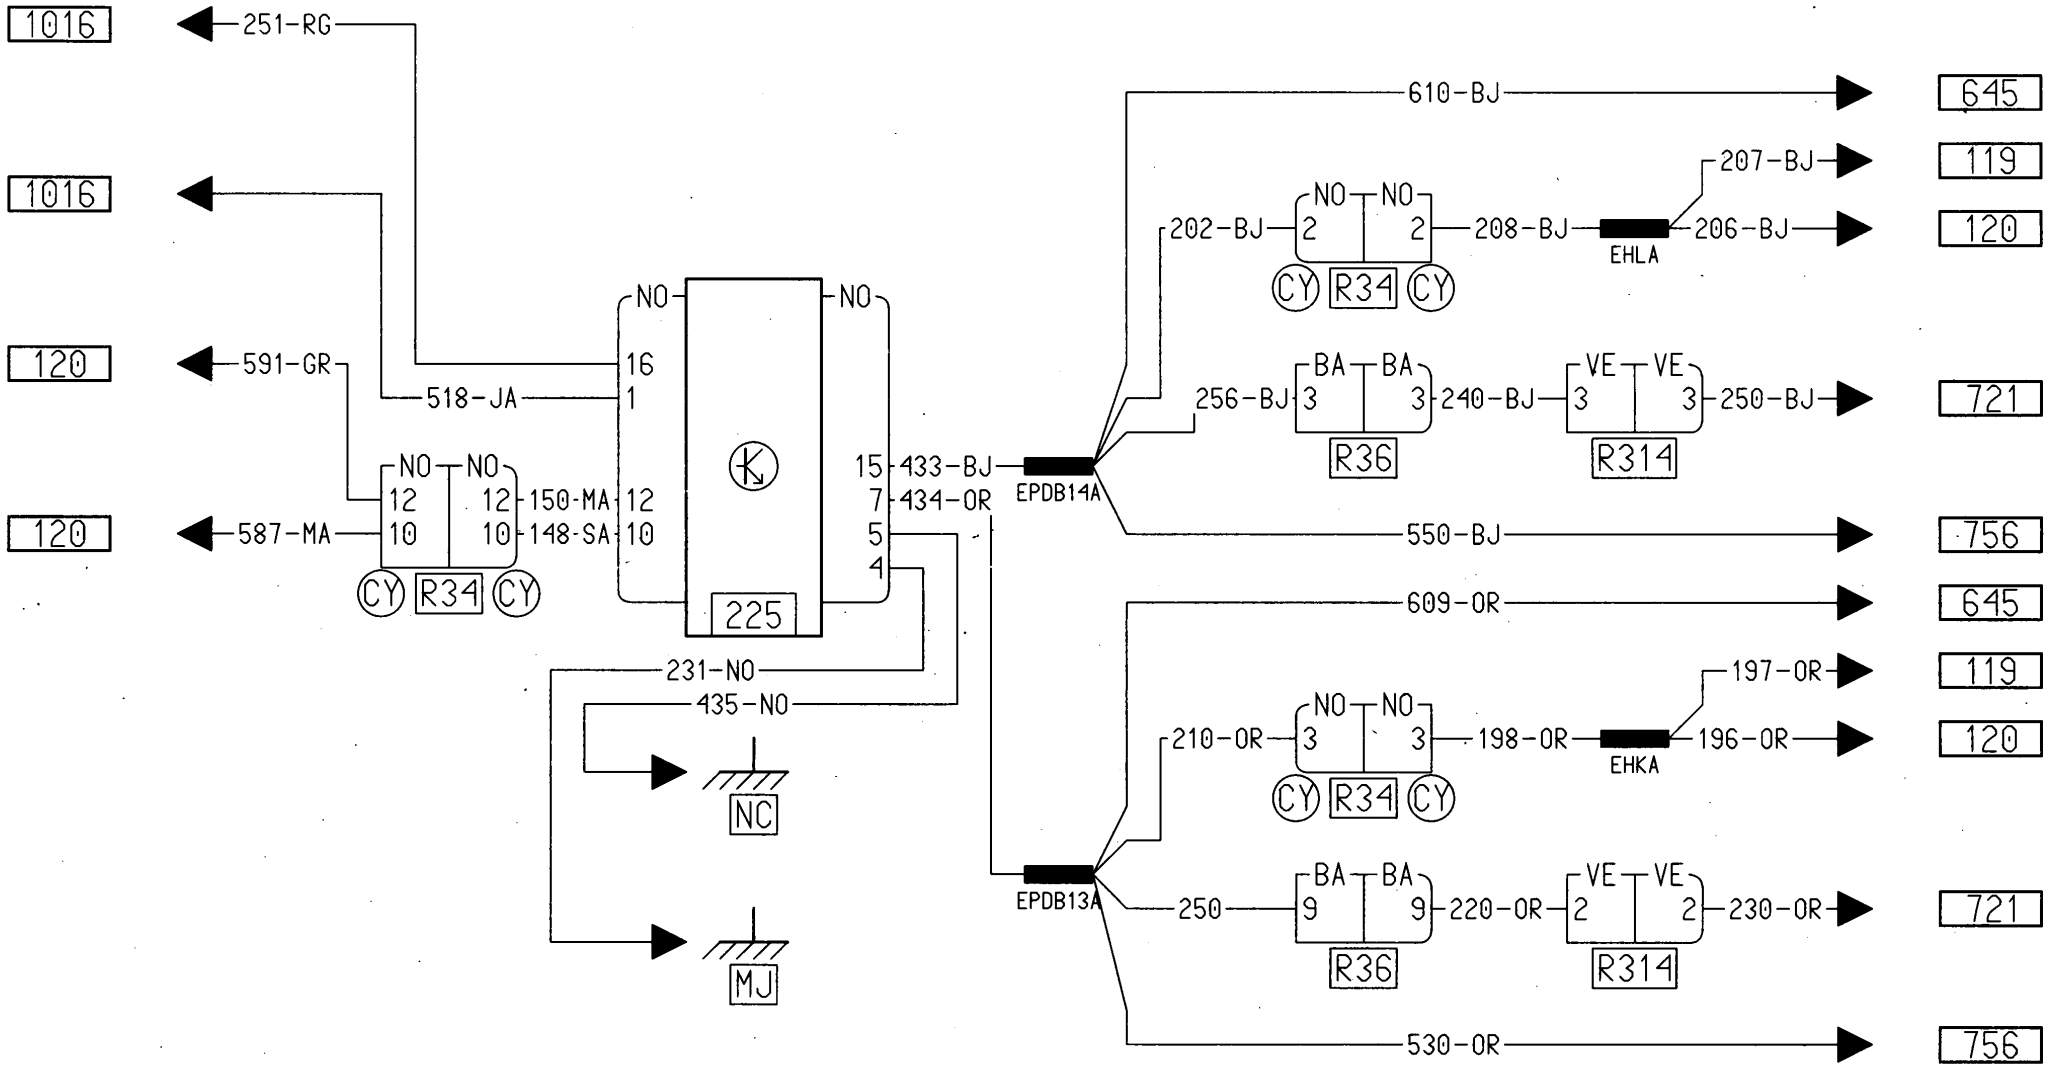

OBD2 DIAGNOSTICS SOCKET

F4P720


X642
00

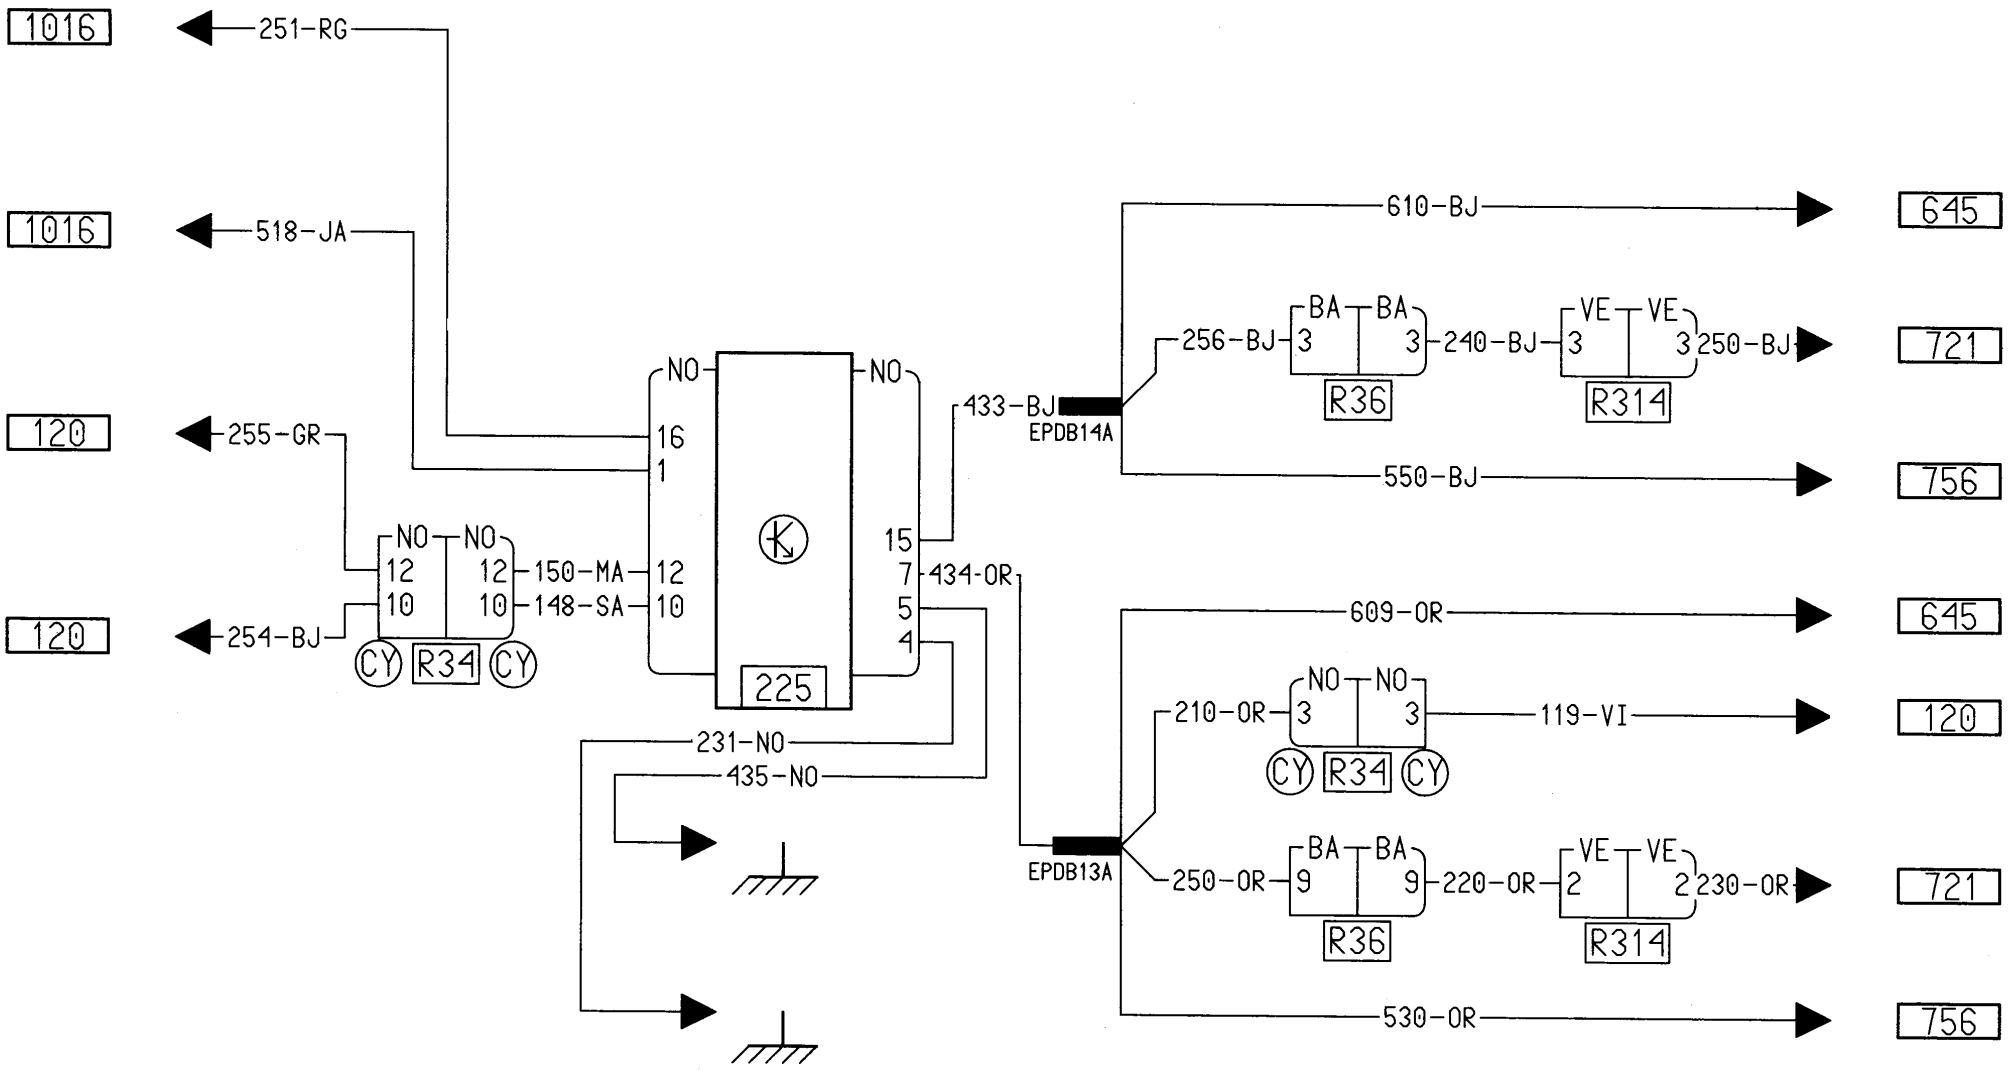

OBD2 DIAGNOSTICS SOCKET

F4R741,F9Q731,K4M701


X642
00

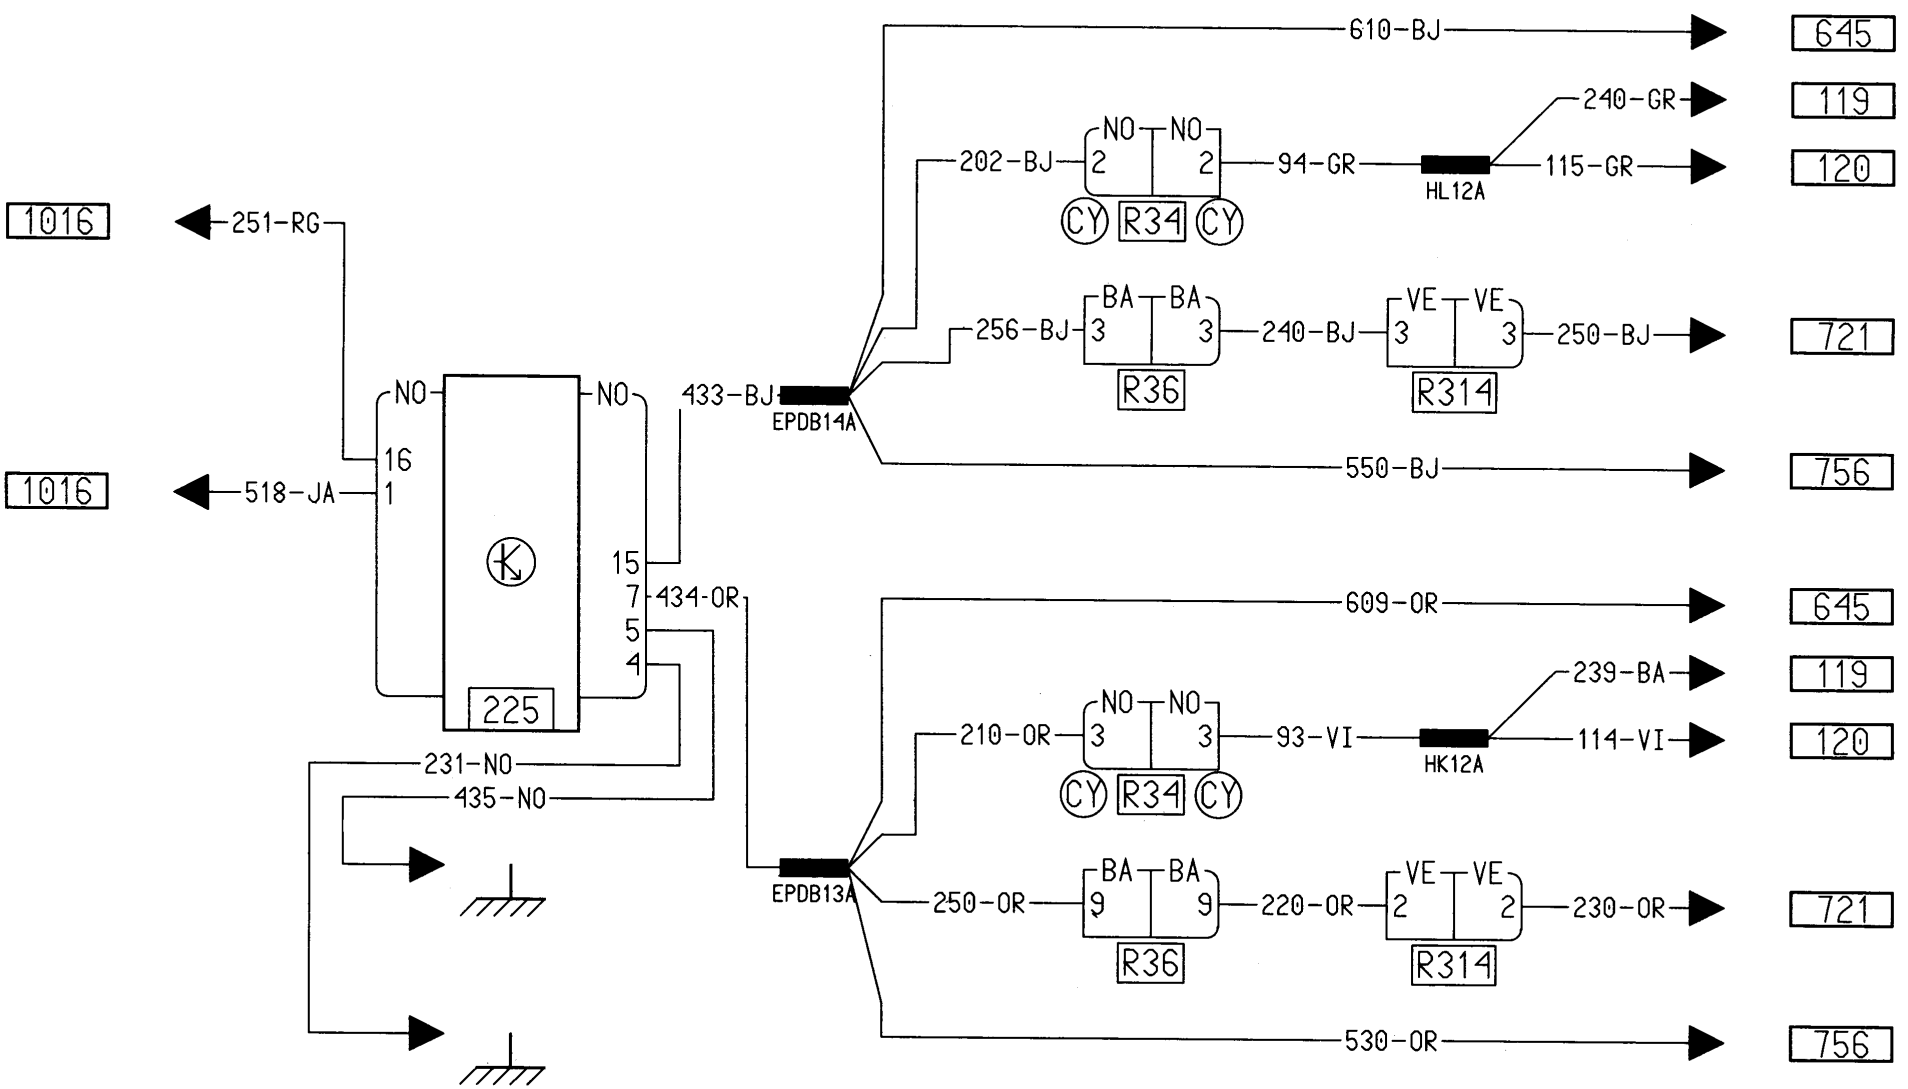



OBD2 DIAGNOSTICS SOCKET


K4M712/EQGPL

X642
00

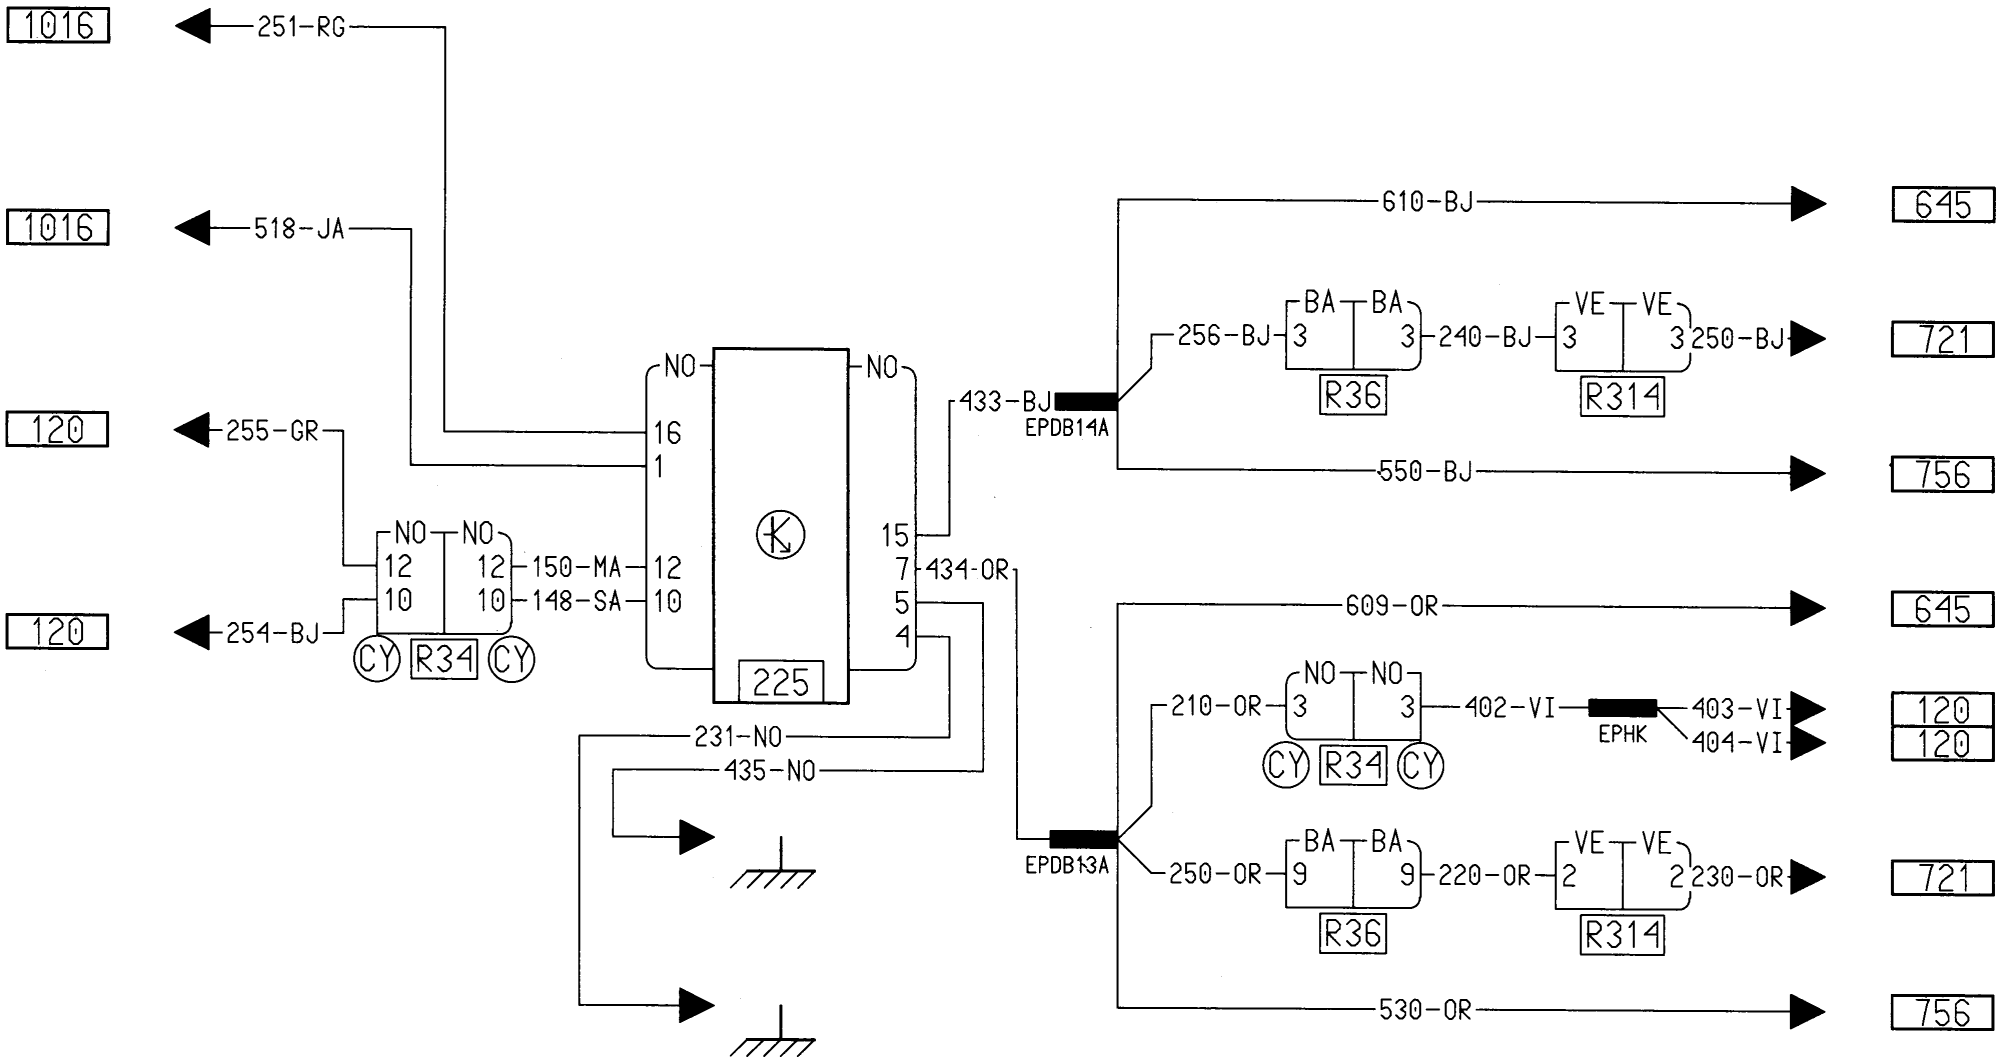

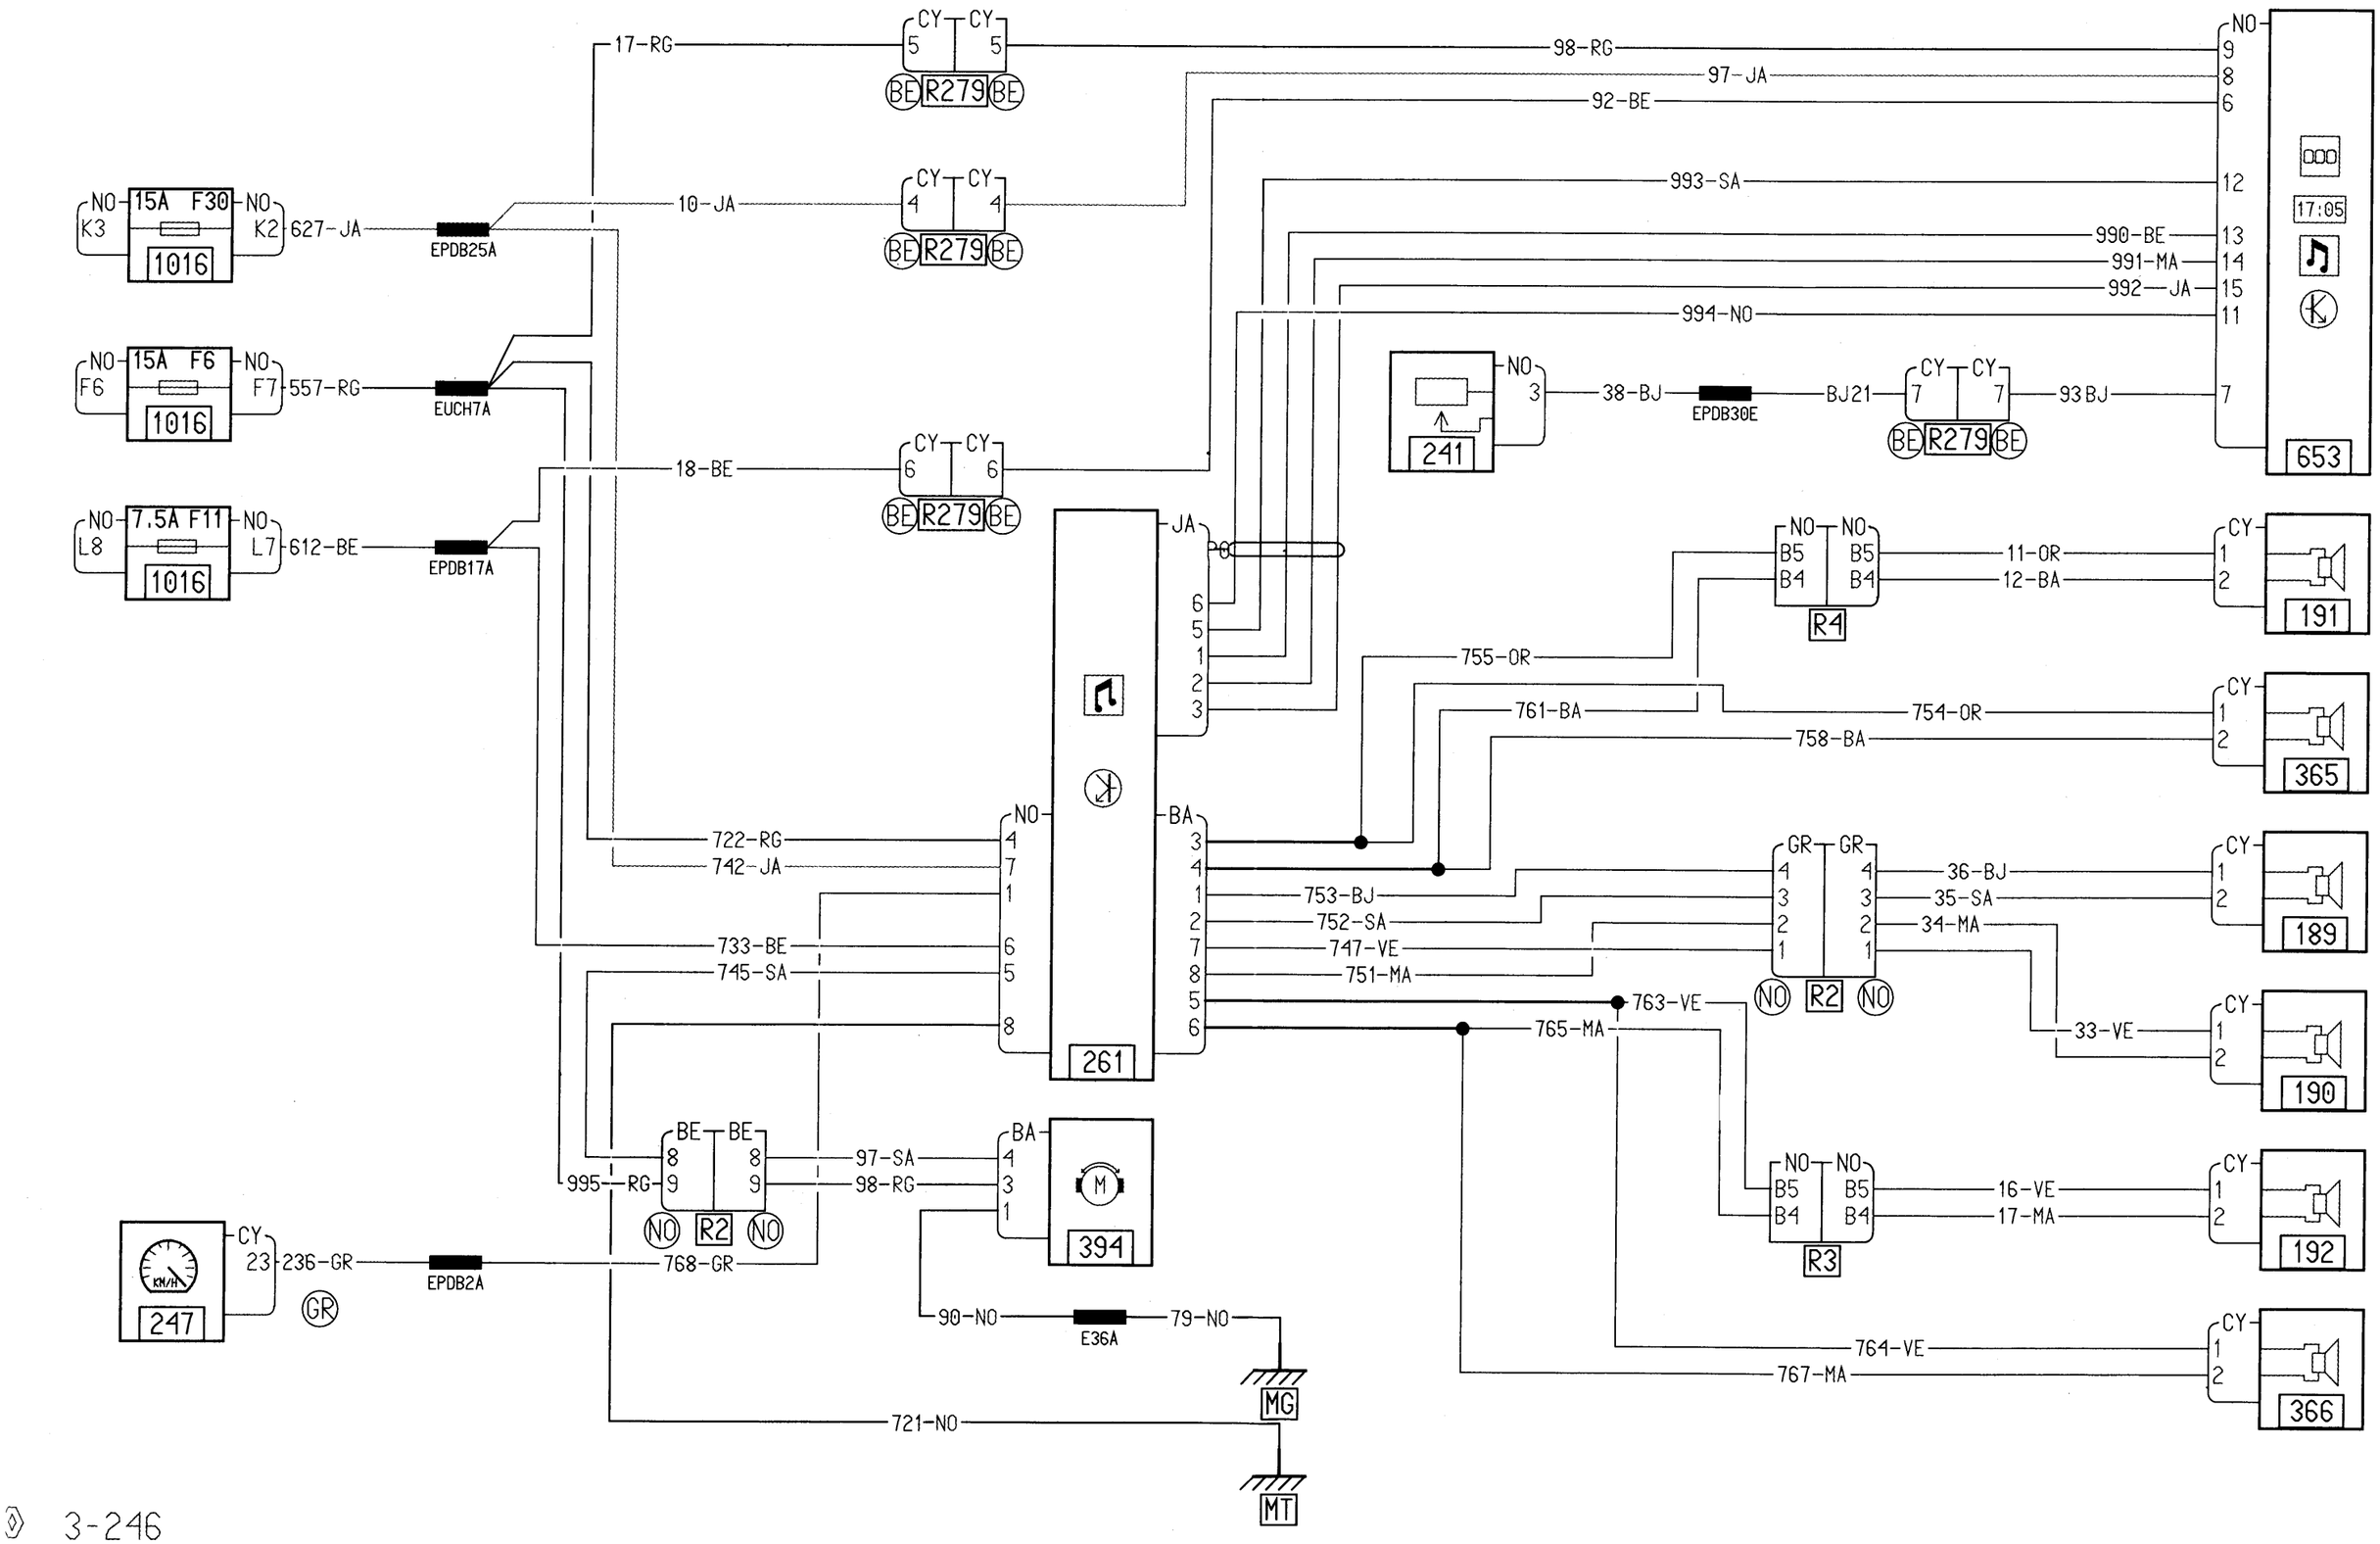
NO 15A F30 NO
K3 K2
1016
627-JA
EPDB25A
NO 15A F6 NO
F6 F7
1016
557-RG
EUCH7A
NO 7.5A F11 NO
L8 L7
1016
612-BE
EPDB17A
17-RG
10-JA
18-BE
CY CY
5 5
BE R279 BE
CY CY
4 4
BE R279 BE
CY CY
6 6
BE R279 BE
98-RG
97-JA
92-BE
993-SA
990-BE
991-MA
992-JA
994-NO
NO
9
8
6
12
13
14
15
11
7
653
17:05
NO
3
241
38-BJ
EPDB30E
BJ21
CY CY
7 7
BE R279 BE
93 BJ
JA
6
5
1
2
3
261
722-RG
742-JA
733-BE
745-SA
NO
4
7
1
6
5
8
BA
3
4
1
2
7
8
5
6
755-OR
761-BA
758-BA
753-BJ
752-SA
747-VE
751-MA
763-VE
765-MA
NO NO
B5 B5
B4 B4
R4
11-OR
12-BA
CY
1
2
191
754-OR
365
GR GR
4 4
3 3
2 2
1 1
NO R2 NO
36-BJ
35-SA
34-MA
33-VE
189
190
BE BE
8 8
9 9
NO R2 NO
995-RG
97-SA
98-RG
BA
4
3
1
394
M
NO NO
B5 B5
B4 B4
R3
16-VE
17-MA
192
764-VE
767-MA
366
CY
23
247
KM/H
236-GR
GR
EPDB2A
768-GR
90-NO
E36A
79-NO
MG
721-NO
MT

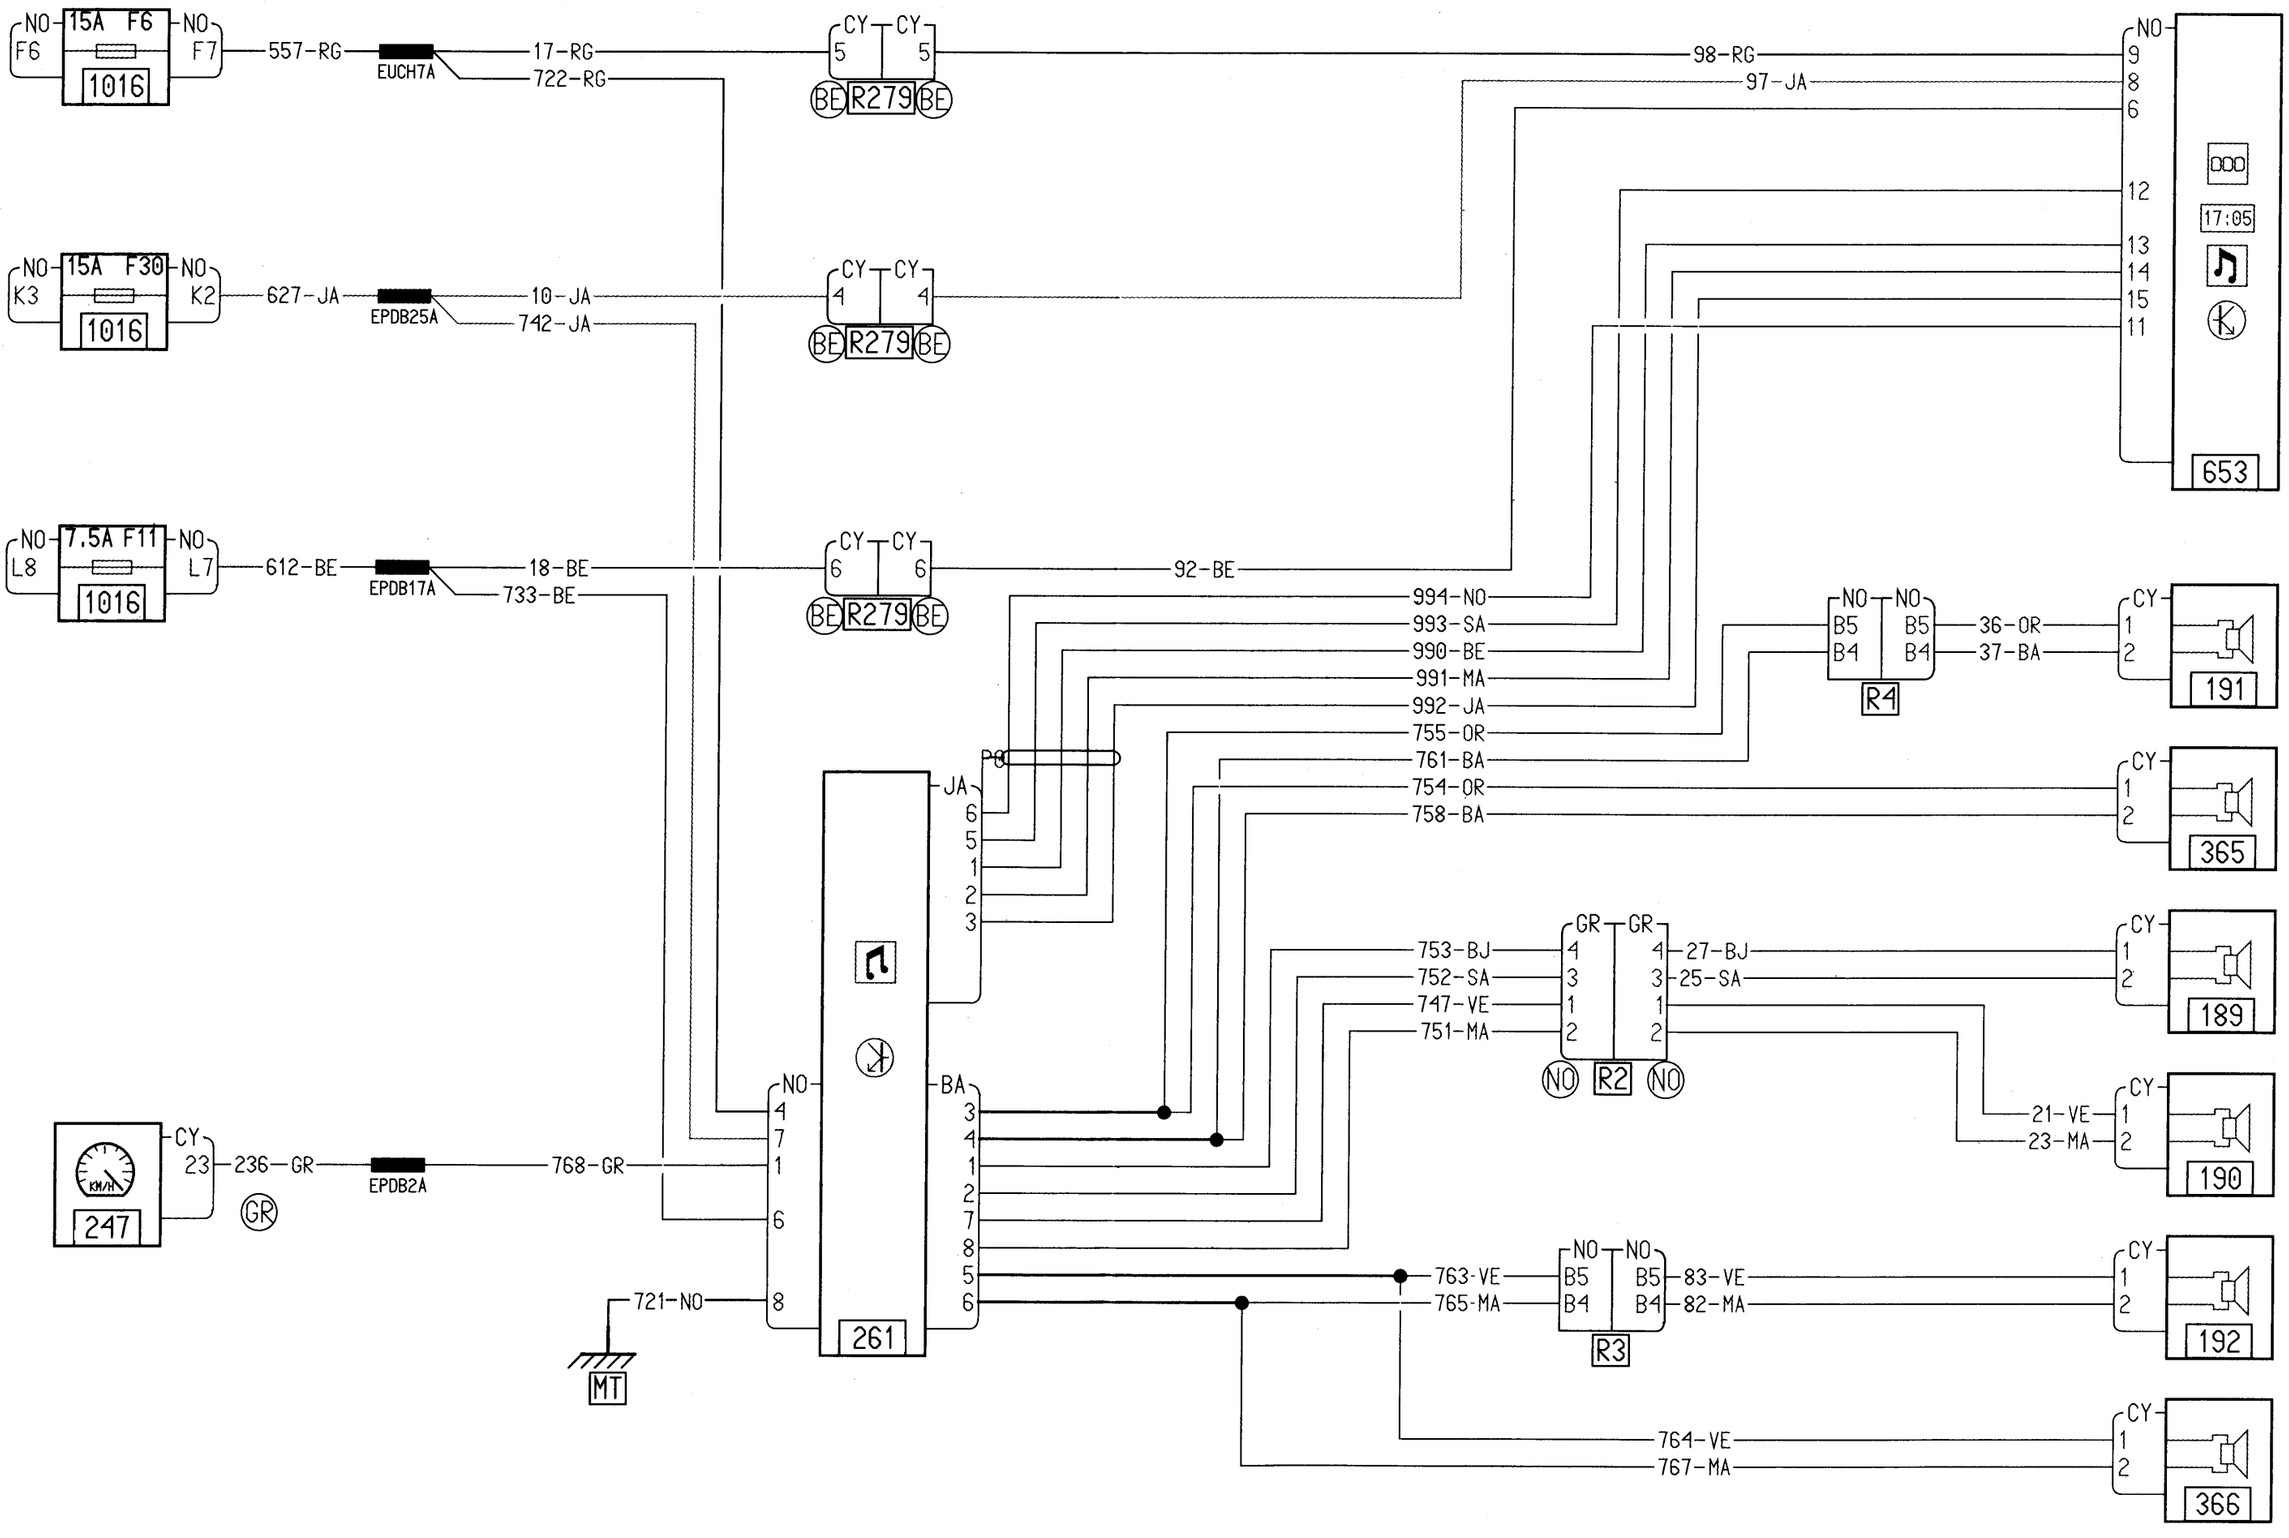

NO 15A F6 NO
F6 F7
1016
557-RG
EUCH7A
17-RG
722-RG
CY CY
5 5
BE R279 BE
98-RG
97-JA
NO
9
8
6
12
13
14
15
11
653
17:05
NO 15A F30 NO
K3 K2
1016
627-JA
EPDB25A
10-JA
742-JA
CY CY
4 4
BE R279 BE
NO 7.5A F11 NO
L8 L7
1016
612-BE
EPDB17A
18-BE
733-BE
CY CY
6 6
BE R279 BE
92-BE
994-NO
993-SA
990-BE
991-MA
992-JA
755-OR
761-BA
754-OR
758-BA
NO NO
B5 B5
B4 B4
R4
36-OR
37-BA
CY
1
2
191
365
JA
6
5
1
2
3
BA
3
4
1
2
7
8
5
6
753-BJ
752-SA
747-VE
751-MA
GR GR
4 4
3 3
1 1
2 2
NO R2 NO
27-BJ
25-SA
189
21-VE
23-MA
190
NO
4
7
1
6
8
261
CY
23
236-GR
GR
EPDB2A
768-GR
247
721-NO
MT
763-VE
765-MA
NO NO
B5 B5
B4 B4
R3
83-VE
82-MA
192
764-VE
767-MA
366

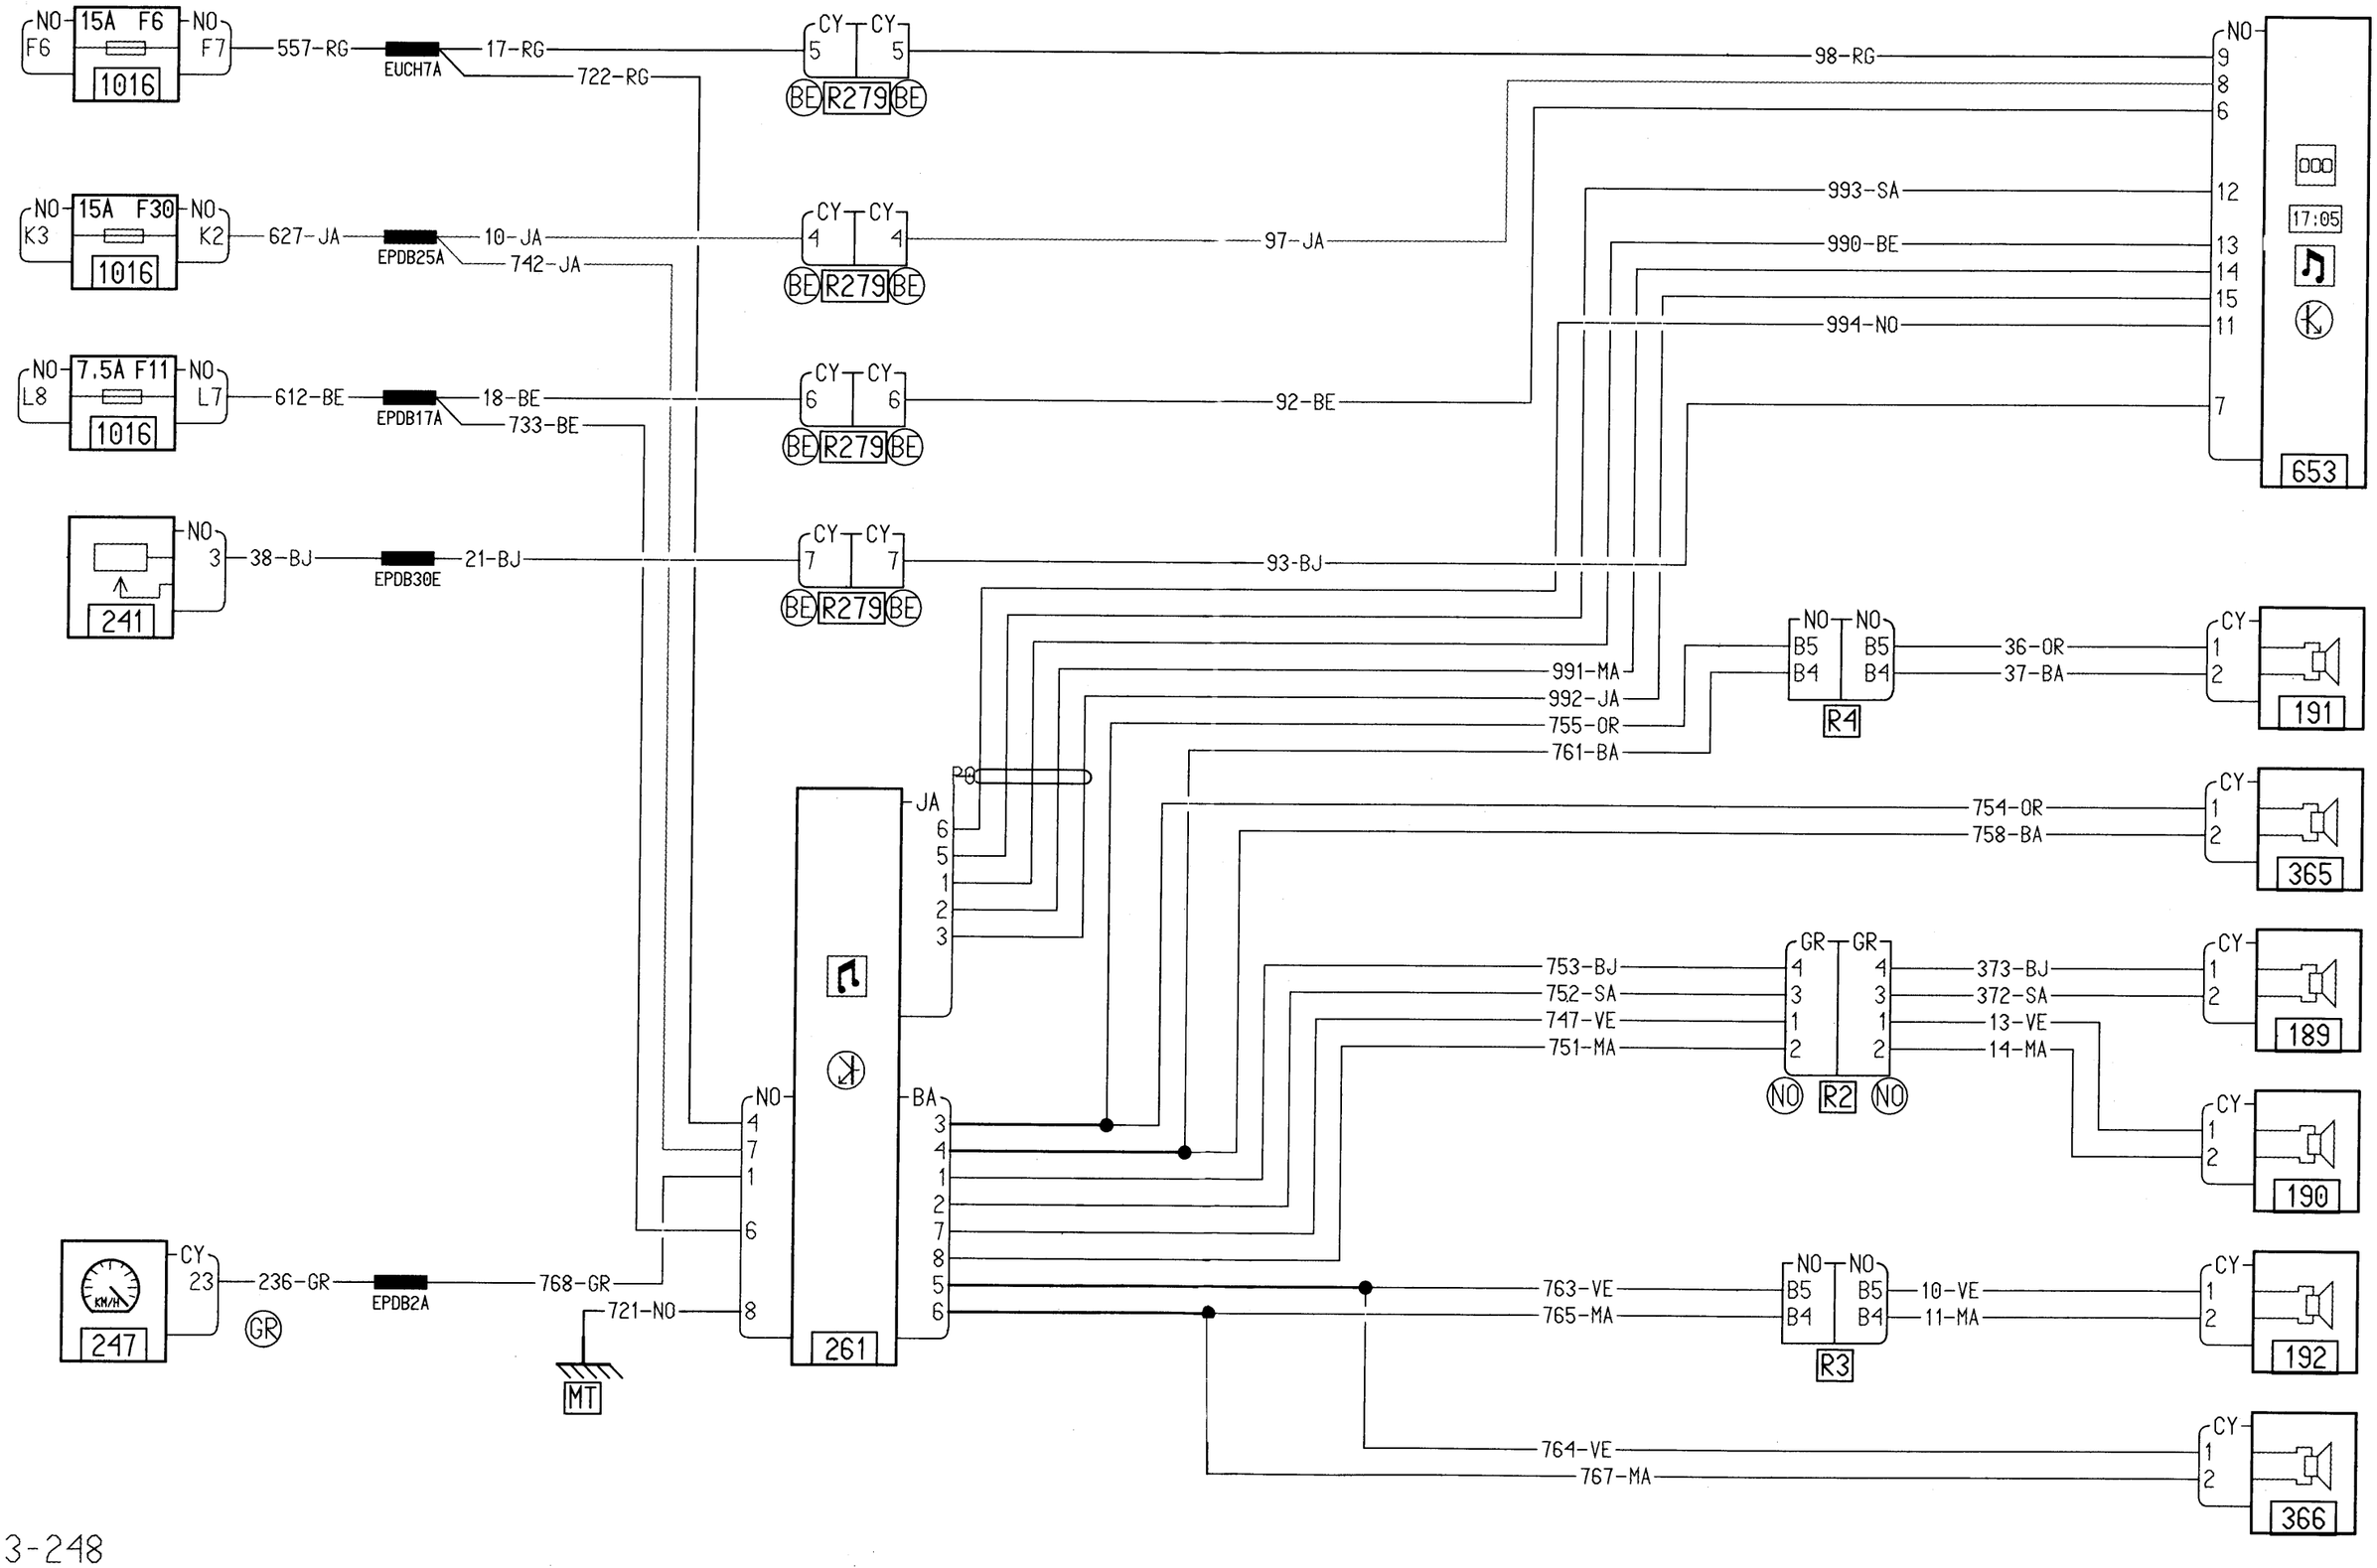
NO 15A F6 NO
F6 F7
1016
557-RG
EUCH7A
17-RG
722-RG
CY CY
5 5
BE R279 BE
98-RG
NO
9
8
6
653
NO 15A F30 NO
K3 K2
1016
627-JA
EPDB25A
10-JA
742-JA
CY CY
4 4
BE R279 BE
97-JA
993-SA
12
990-BE
13
14
15
994-NO
11
NO 7,5A F11 NO
L8 L7
1016
612-BE
EPDB17A
18-BE
733-BE
CY CY
6 6
BE R279 BE
92-BE
7
NO
3
241
38-BJ
EPDB30E
21-BJ
CY CY
7 7
BE R279 BE
93-BJ
991-MA
992-JA
755-OR
761-BA
NO NO
B5 B5
B4 B4
R4
36-OR
37-BA
CY
1
2
191
P0
JA
6
5
1
2
3
754-OR
758-BA
CY
1
2
365
753-BJ
752-SA
747-VE
751-MA
GR GR
4 4
3 3
1 1
2 2
NO R2 NO
373-BJ
372-SA
13-VE
14-MA
CY
1
2
189
CY
1
2
190
NO
4
7
1
6
8
BA
3
4
1
2
7
8
5
6
261
CY
23
236-GR
EPDB2A
768-GR
721-NO
247
GR
MT
763-VE
765-MA
NO NO
B5 B5
B4 B4
R3
10-VE
11-MA
CY
1
2
192
764-VE
767-MA
CY
1
2
366

DIESEL FUEL FILTER HEATER

F8Q622


X642
00

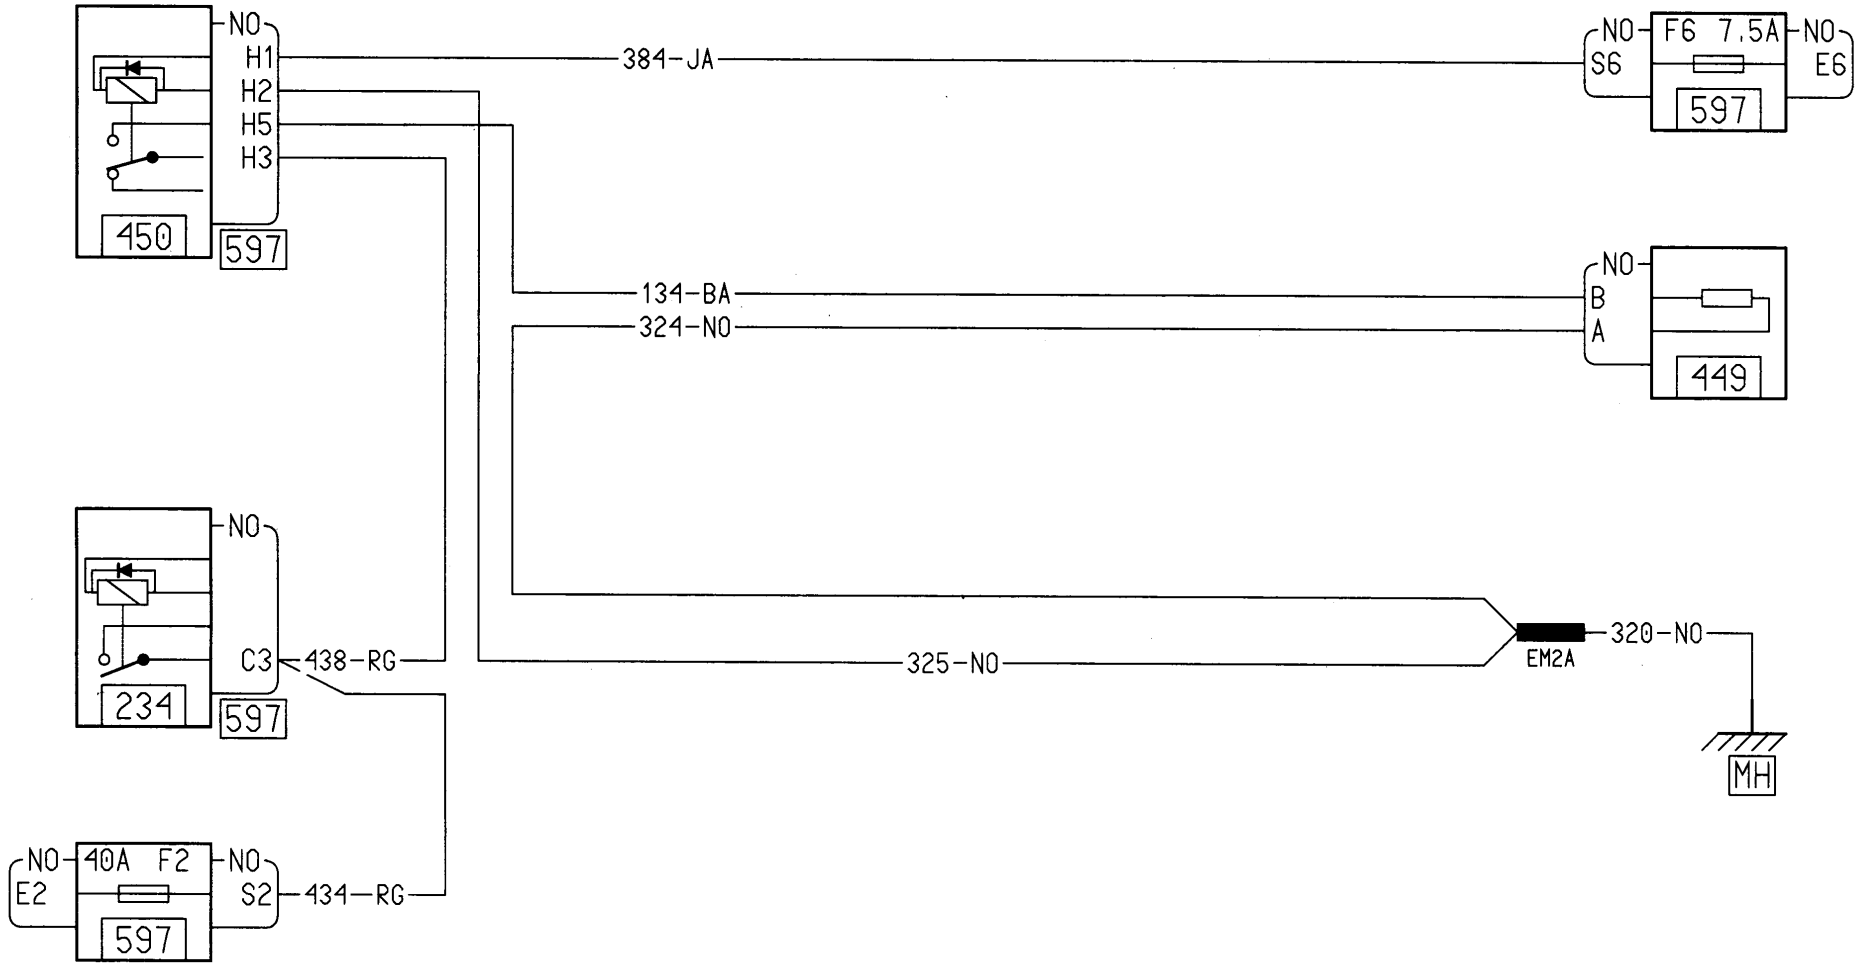



DIESEL FUEL FILTER HEATER


F8Q790,F9Q731


X642
00

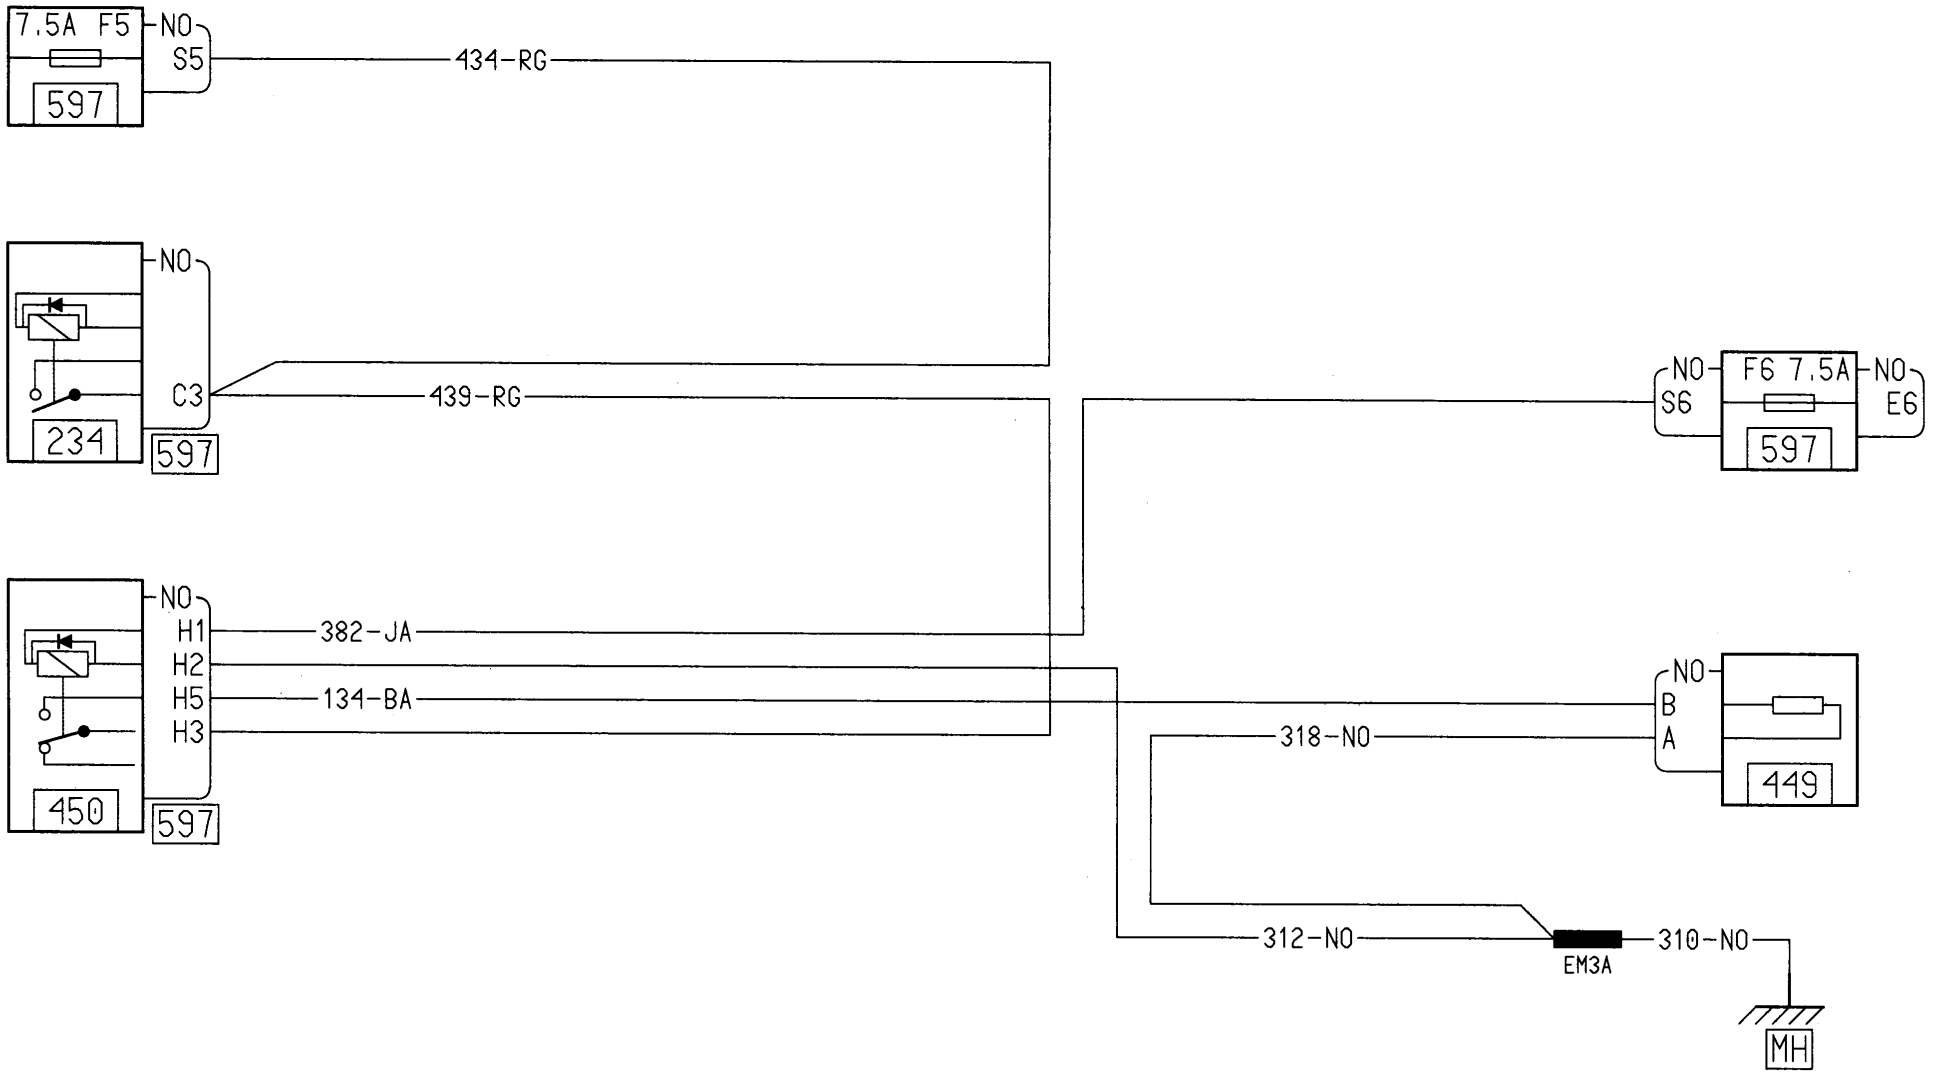


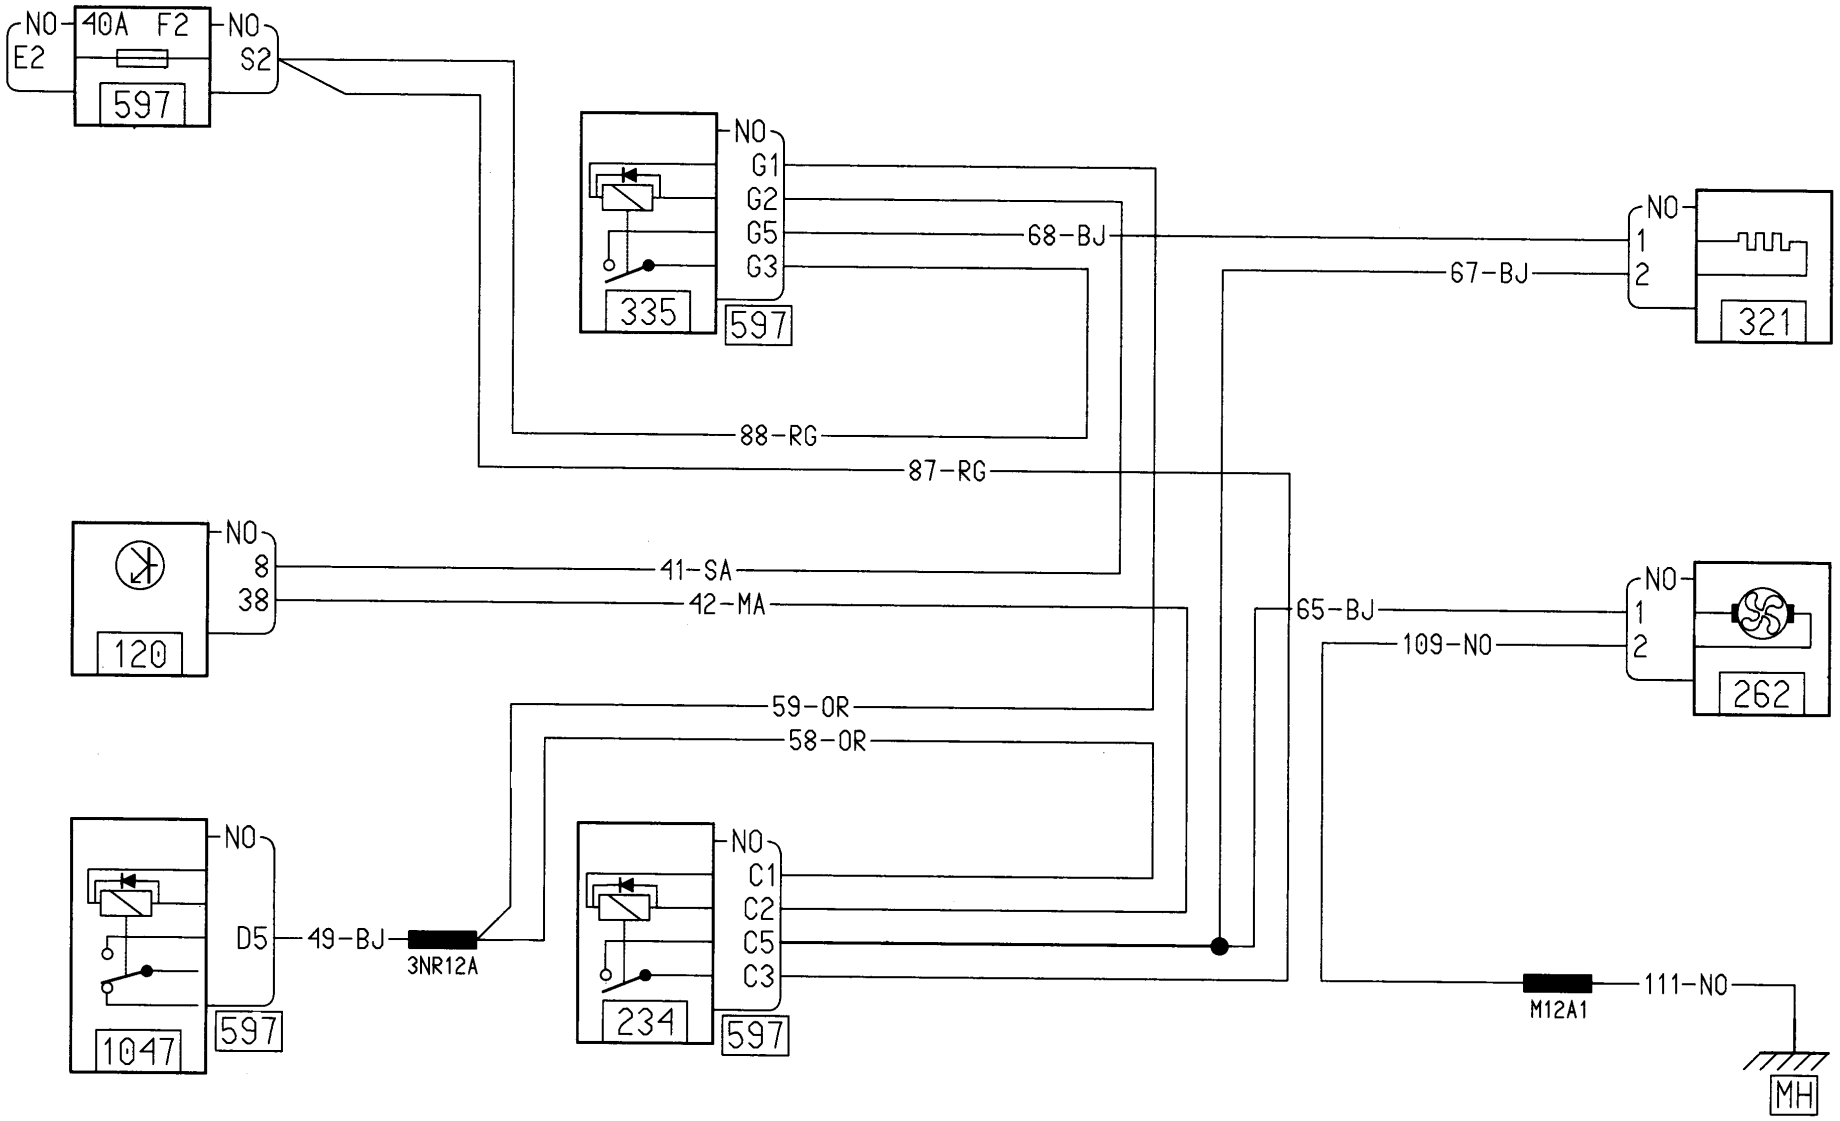
NO
E2
40A F2
NO
S2
597
NO
G1
G2
G5
G3
335
597
68-BJ
67-BJ
NO
1
2
321
88-RG
87-RG
NO
8
38
120
41-SA
42-MA
65-BJ
109-NO
NO
1
2
262
59-OR
58-OR
NO
D5
49-BJ
3NR12A
1047
597
NO
C1
C2
C5
C3
234
597
M12A1
111-NO
MH

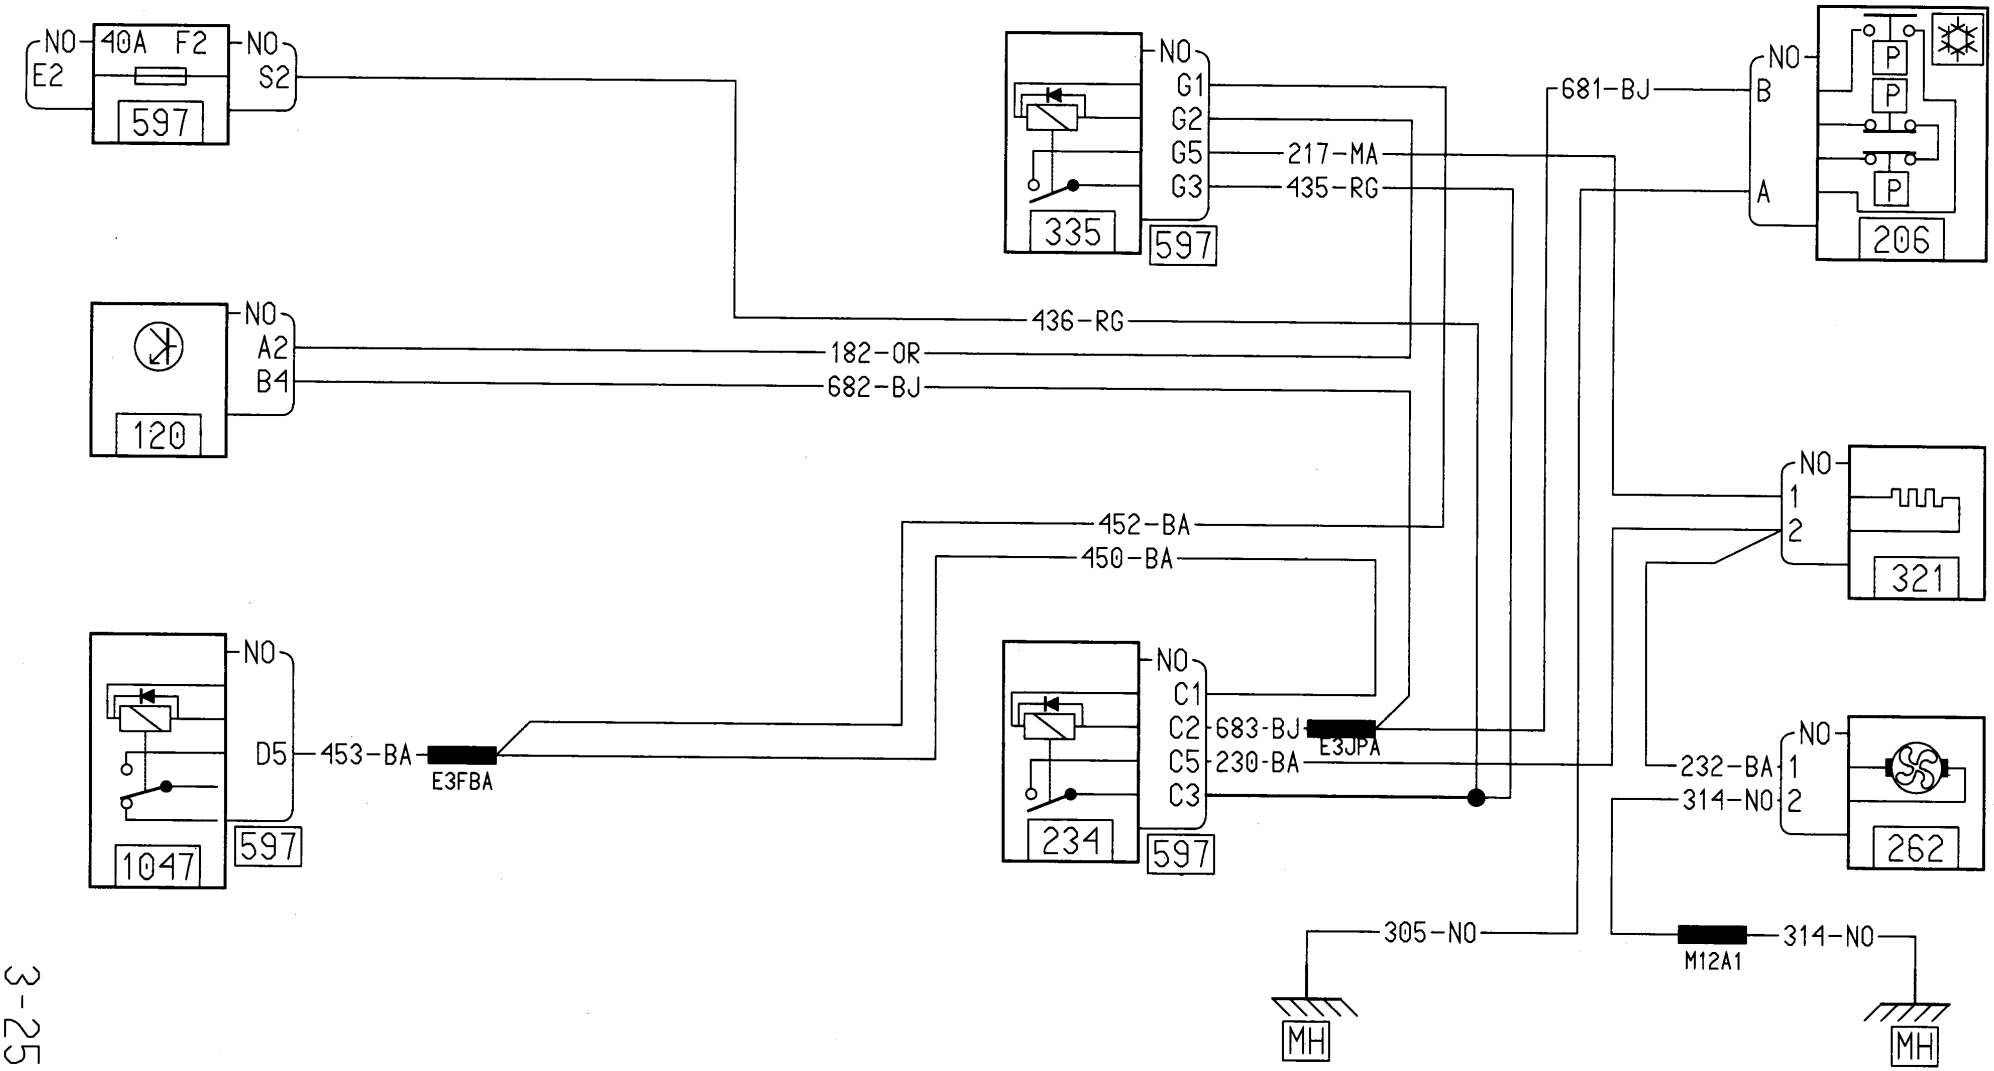
NO
E2
40A F2
NO
S2
597
NO
G1
G2
G5
G3
217-MA
435-RG
335
597
681-BJ
NO
B
A
P
P
P
206
436-RG
NO
A2
B4
182-OR
682-BJ
120
452-BA
450-BA
NO
1
2
321
NO
D5
453-BA
E3FBA
1047
597
NO
C1
C2
C5
C3
683-BJ
E3JPA
230-BA
234
597
232-BA
314-NO
NO
1
2
262
305-NO
M12A1
314-NO
MH
MH

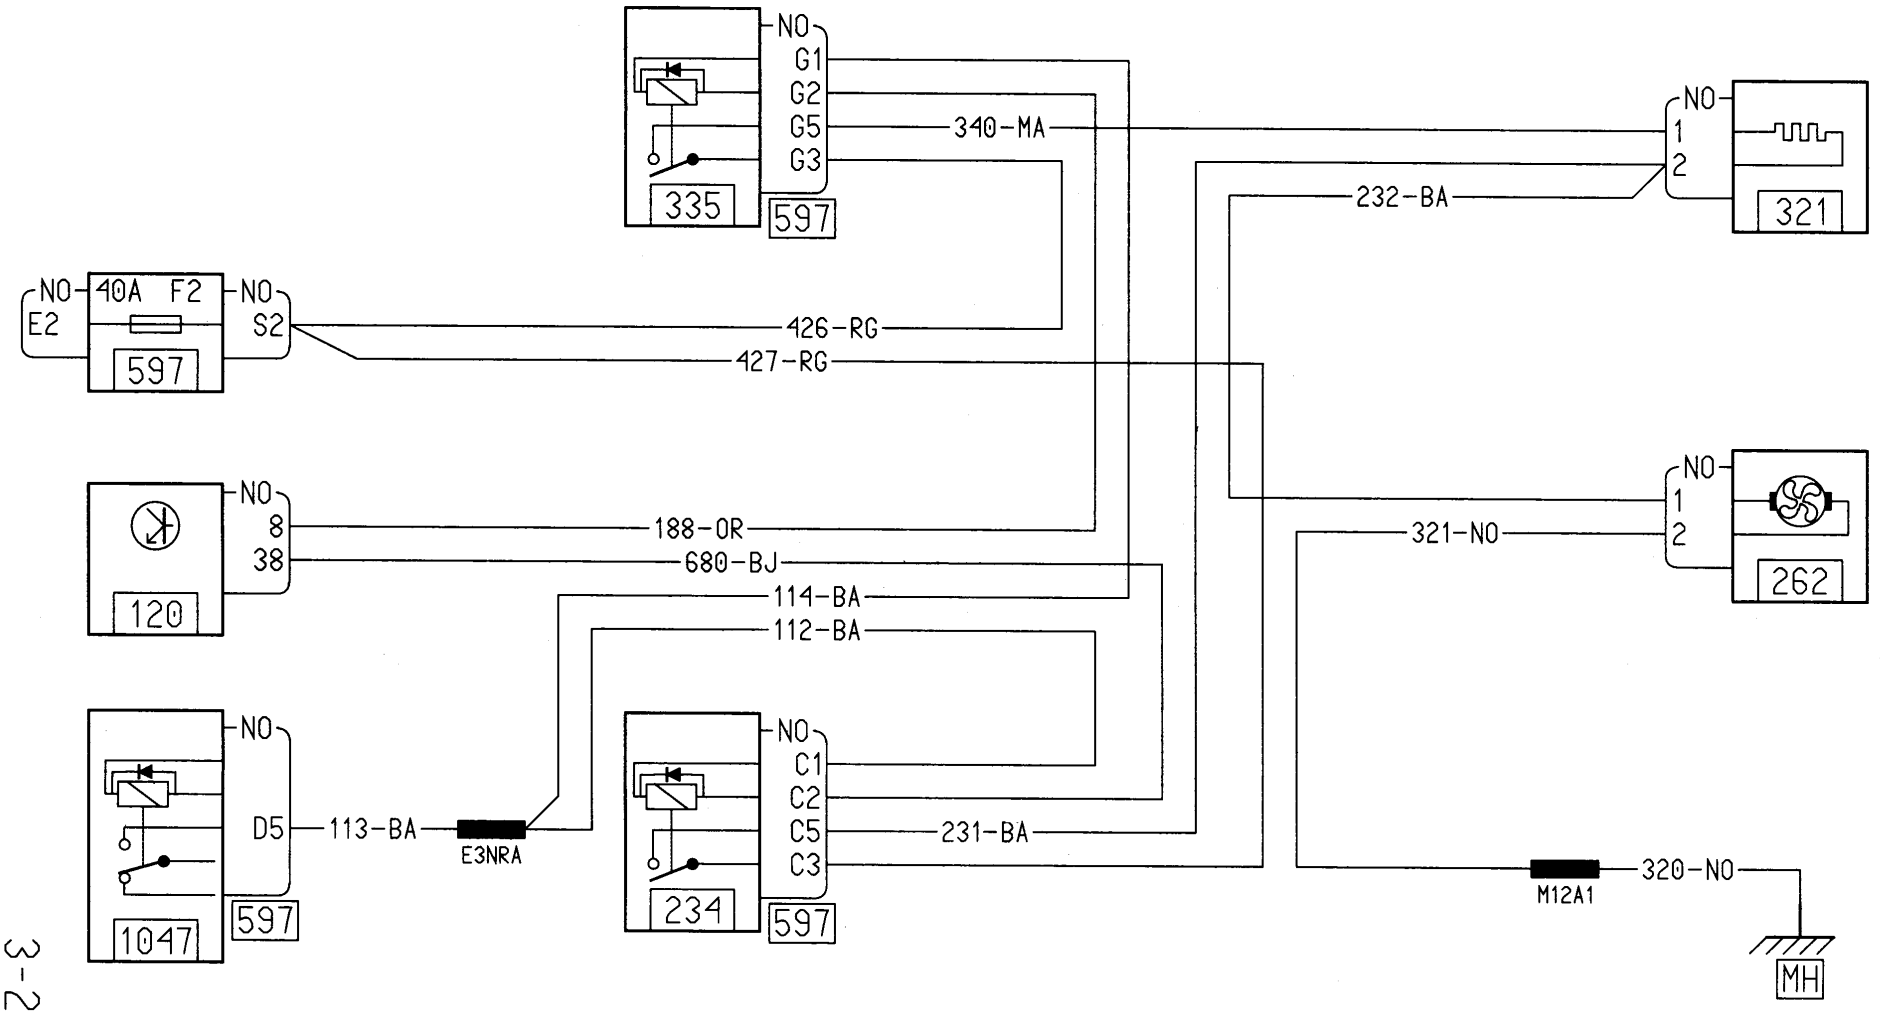
NO
G1
G2
G5
G3
340-MA
335
597
NO
1
2
321
232-BA
NO
40A F2
NO
E2
S2
426-RG
427-RG
597
NO
1
2
262
321-NO
NO
8
38
188-OR
680-BJ
114-BA
112-BA
120
NO
D5
113-BA
E3NRA
1047
597
NO
C1
C2
C5
C3
231-BA
234
597
M12A1
320-NO
MH

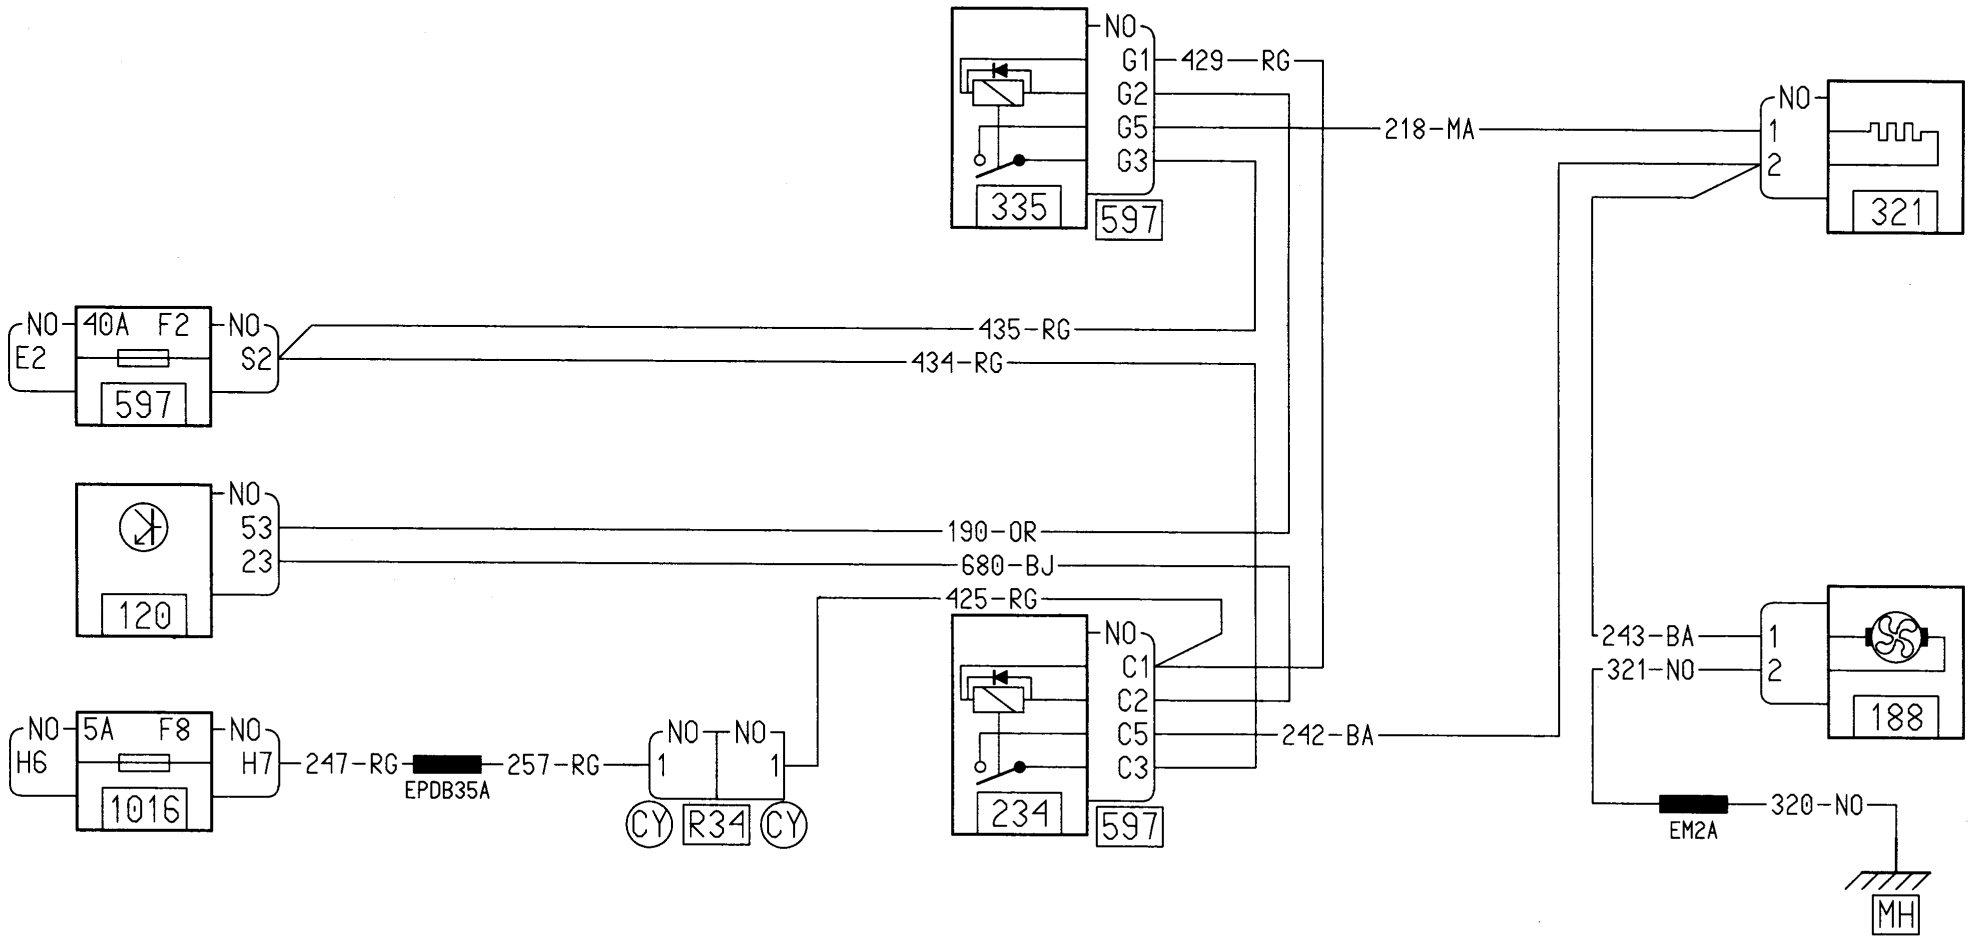

NO
G1
G2
G5
G3
429-RG
218-MA
335
597
NO
1
2
321
NO
E2
40A F2
597
NO
S2
435-RG
434-RG
120
NO
53
23
190-OR
680-BJ
425-RG
NO
C1
C2
C5
C3
242-BA
234
597
243-BA
321-NO
188
NO
H6
5A F8
1016
NO
H7
247-RG
EPDB35A
257-RG
NO
1
NO
1
CY
R34
CY
EM2A
320-NO
MH

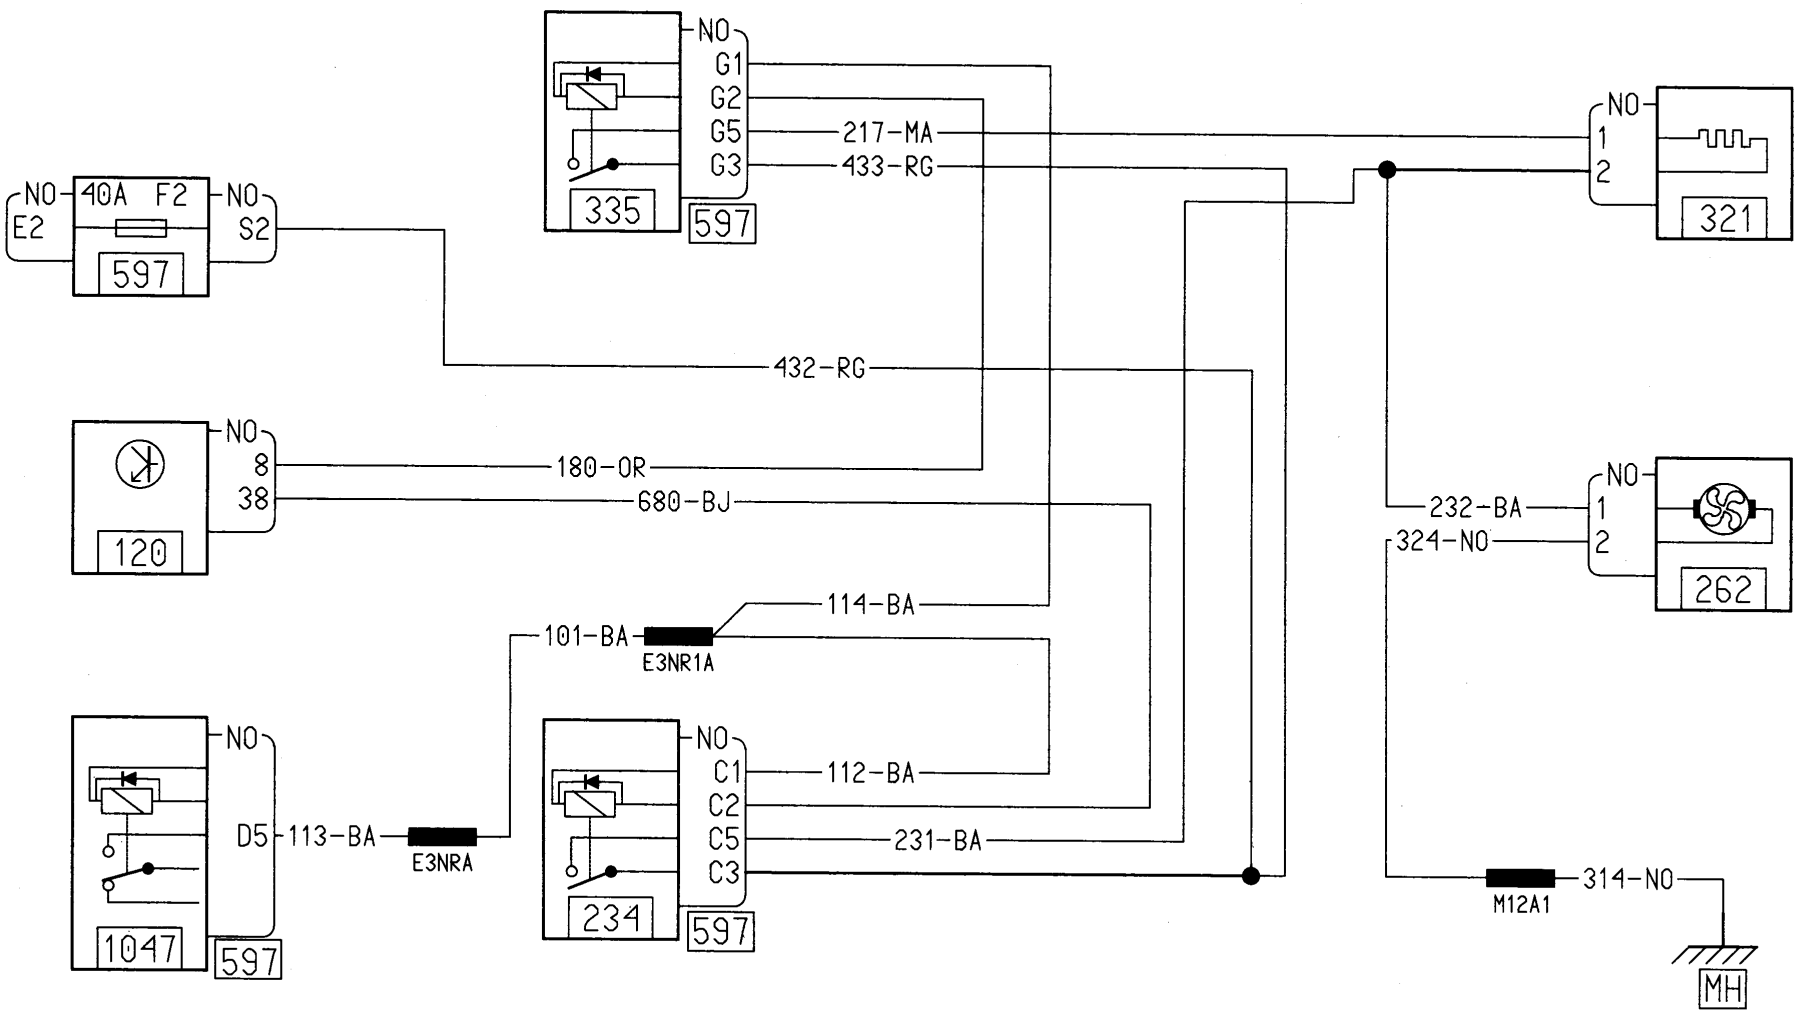

NO
G1
G2
G5
G3
217-MA
433-RG
335
597
NO
E2
40A F2
NO
S2
597
432-RG
NO
1
2
321
NO
8
38
180-OR
680-BJ
120
NO
1
2
232-BA
324-NO
262
114-BA
101-BA
E3NR1A
NO
D5
113-BA
E3NRA
1047
597
NO
C1
C2
C5
C3
112-BA
231-BA
234
597
M12A1
314-NO
MH

ENGINE COOLING SYSTEM

F8Q790/CA

X642
00

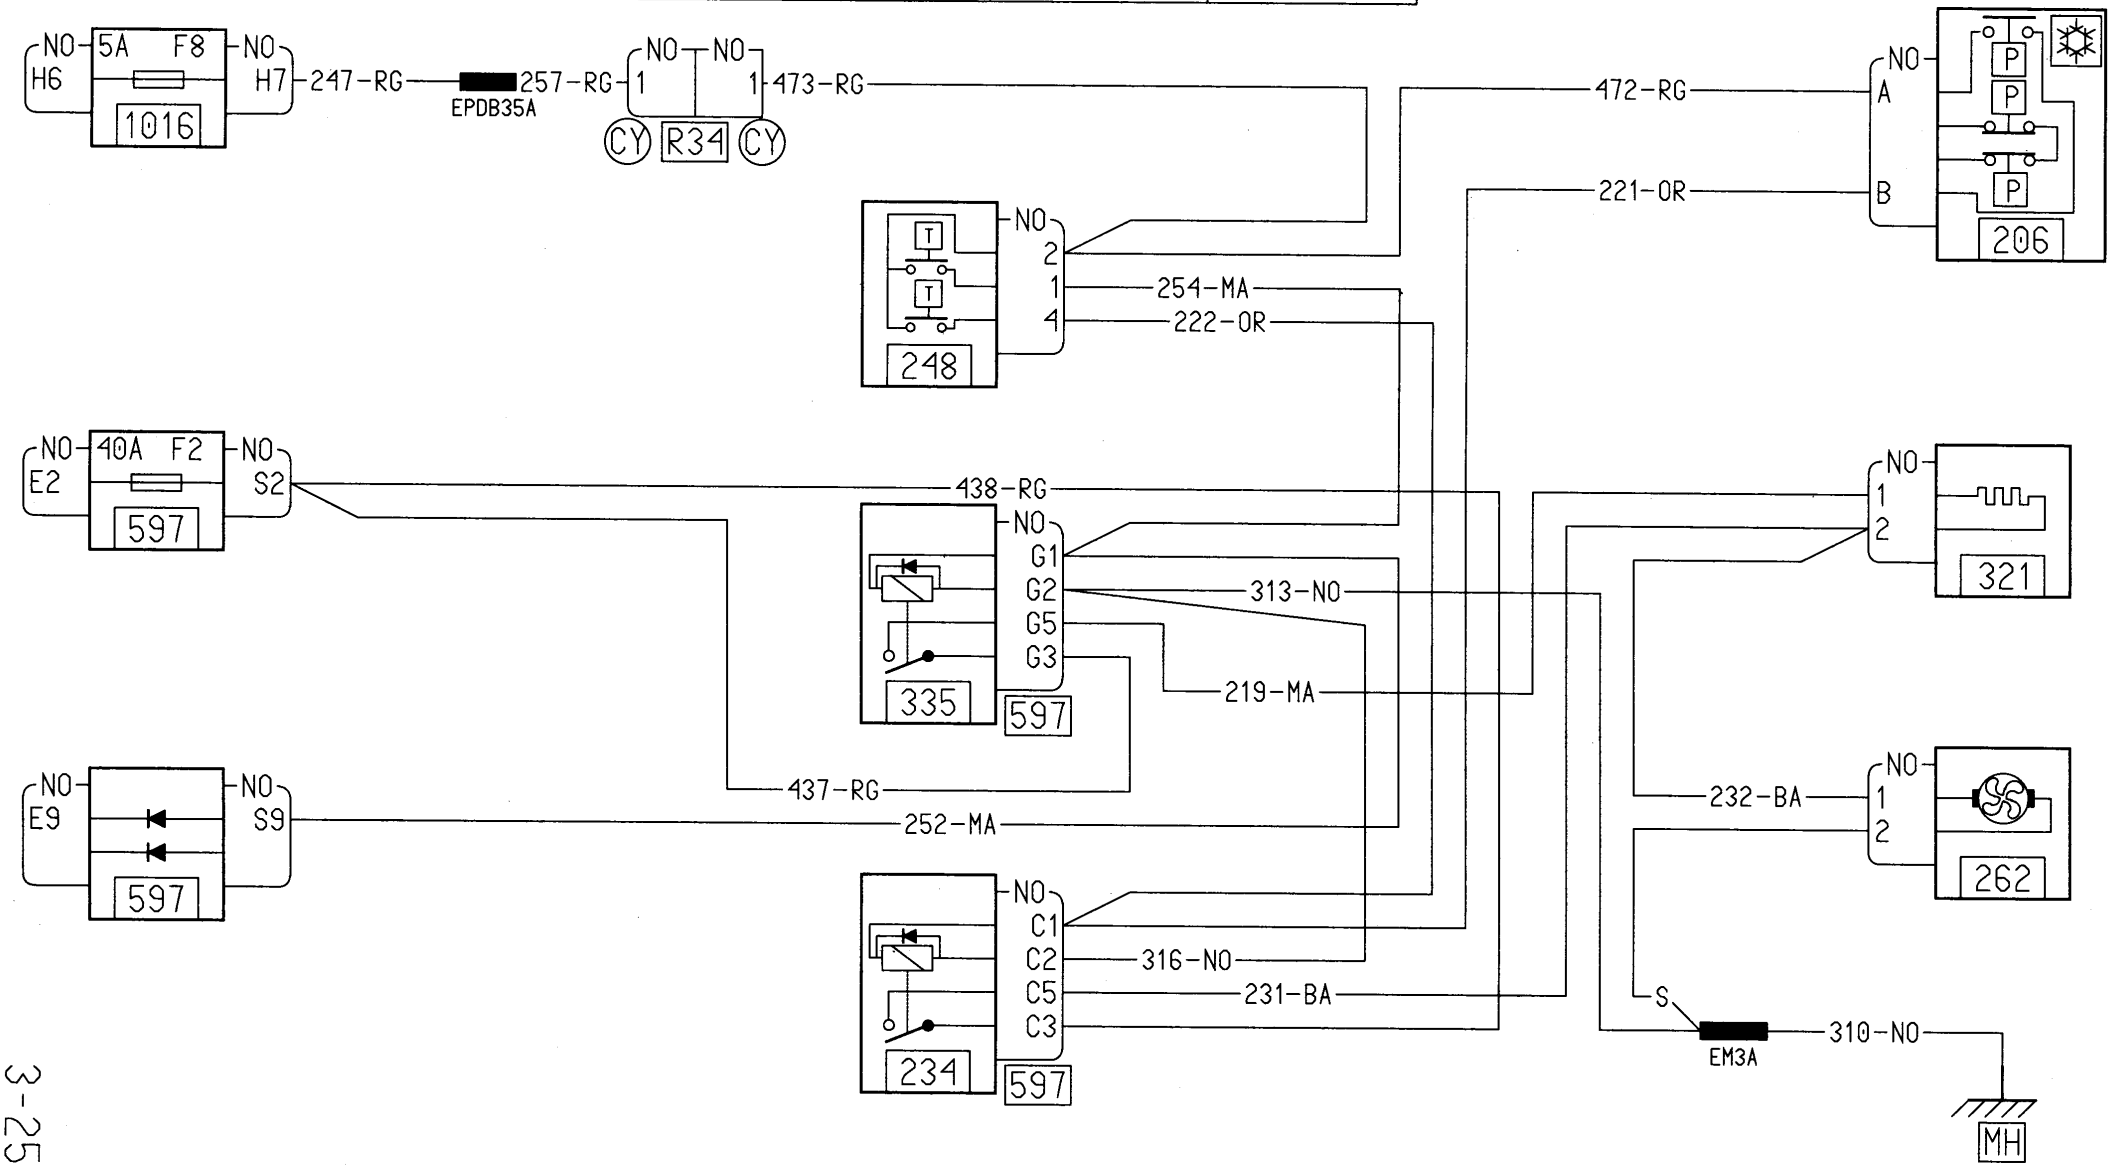


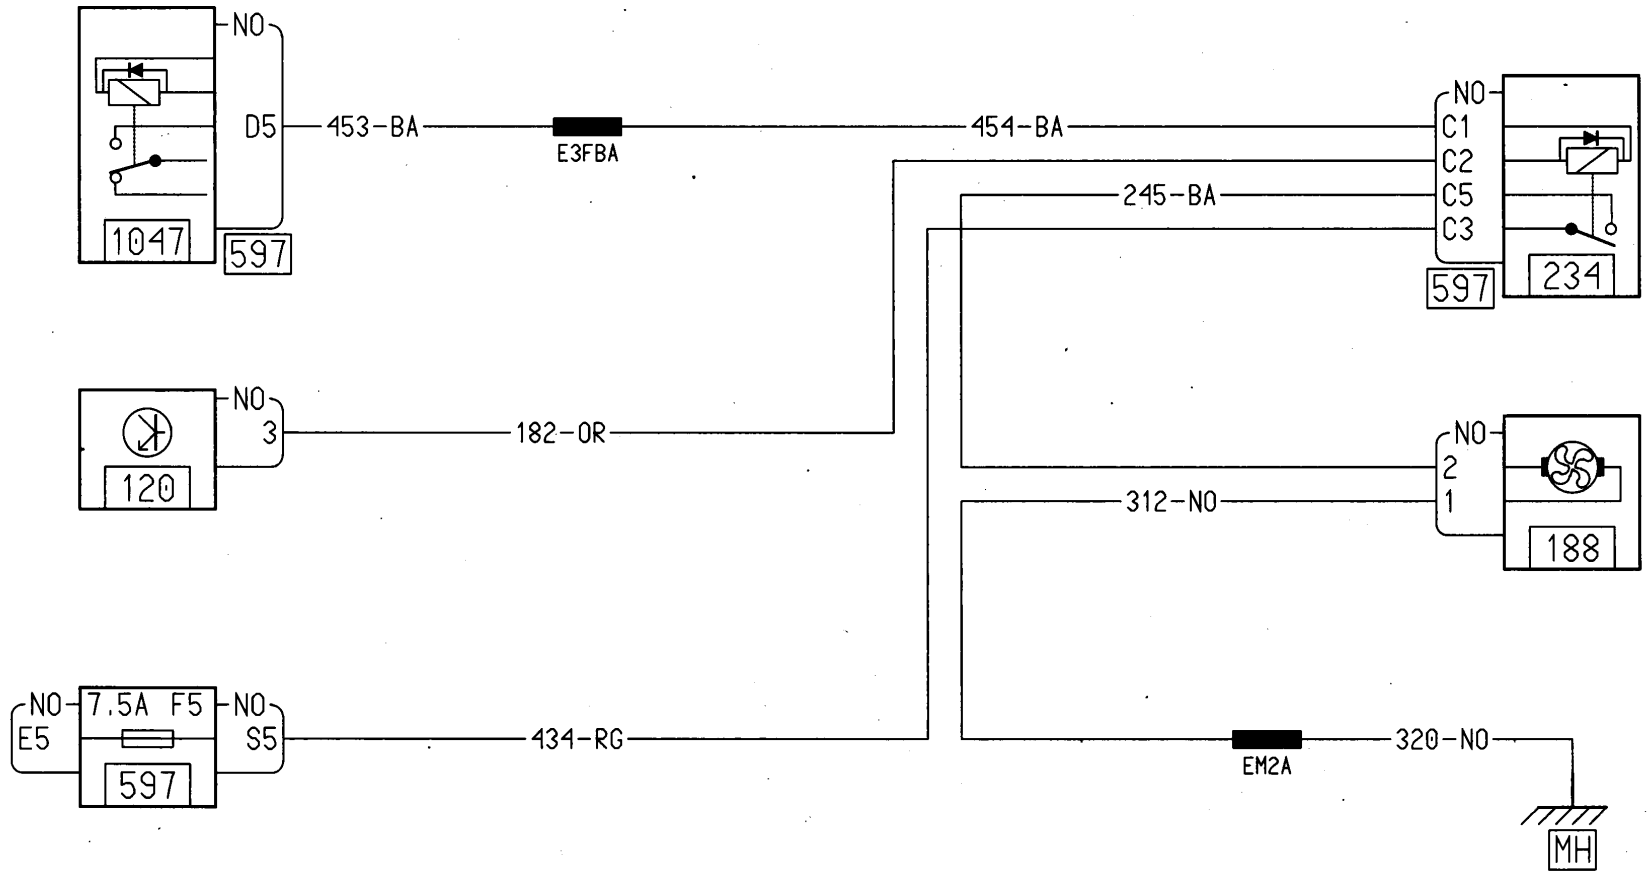

NO
D5
453-BA
E3FBA
1047
597
454-BA
NO
C1
C2
C5
C3
245-BA
597
234
NO
3
182-OR
120
NO
2
1
312-NO
188
NO
E5
7.5A F5
597
NO
S5
434-RG
EM2A
320-NO
MH


REFROIDISSEMENT MOTEUR

B64,L64/K4M706/CA/MERCOS/BVM5

X642
00

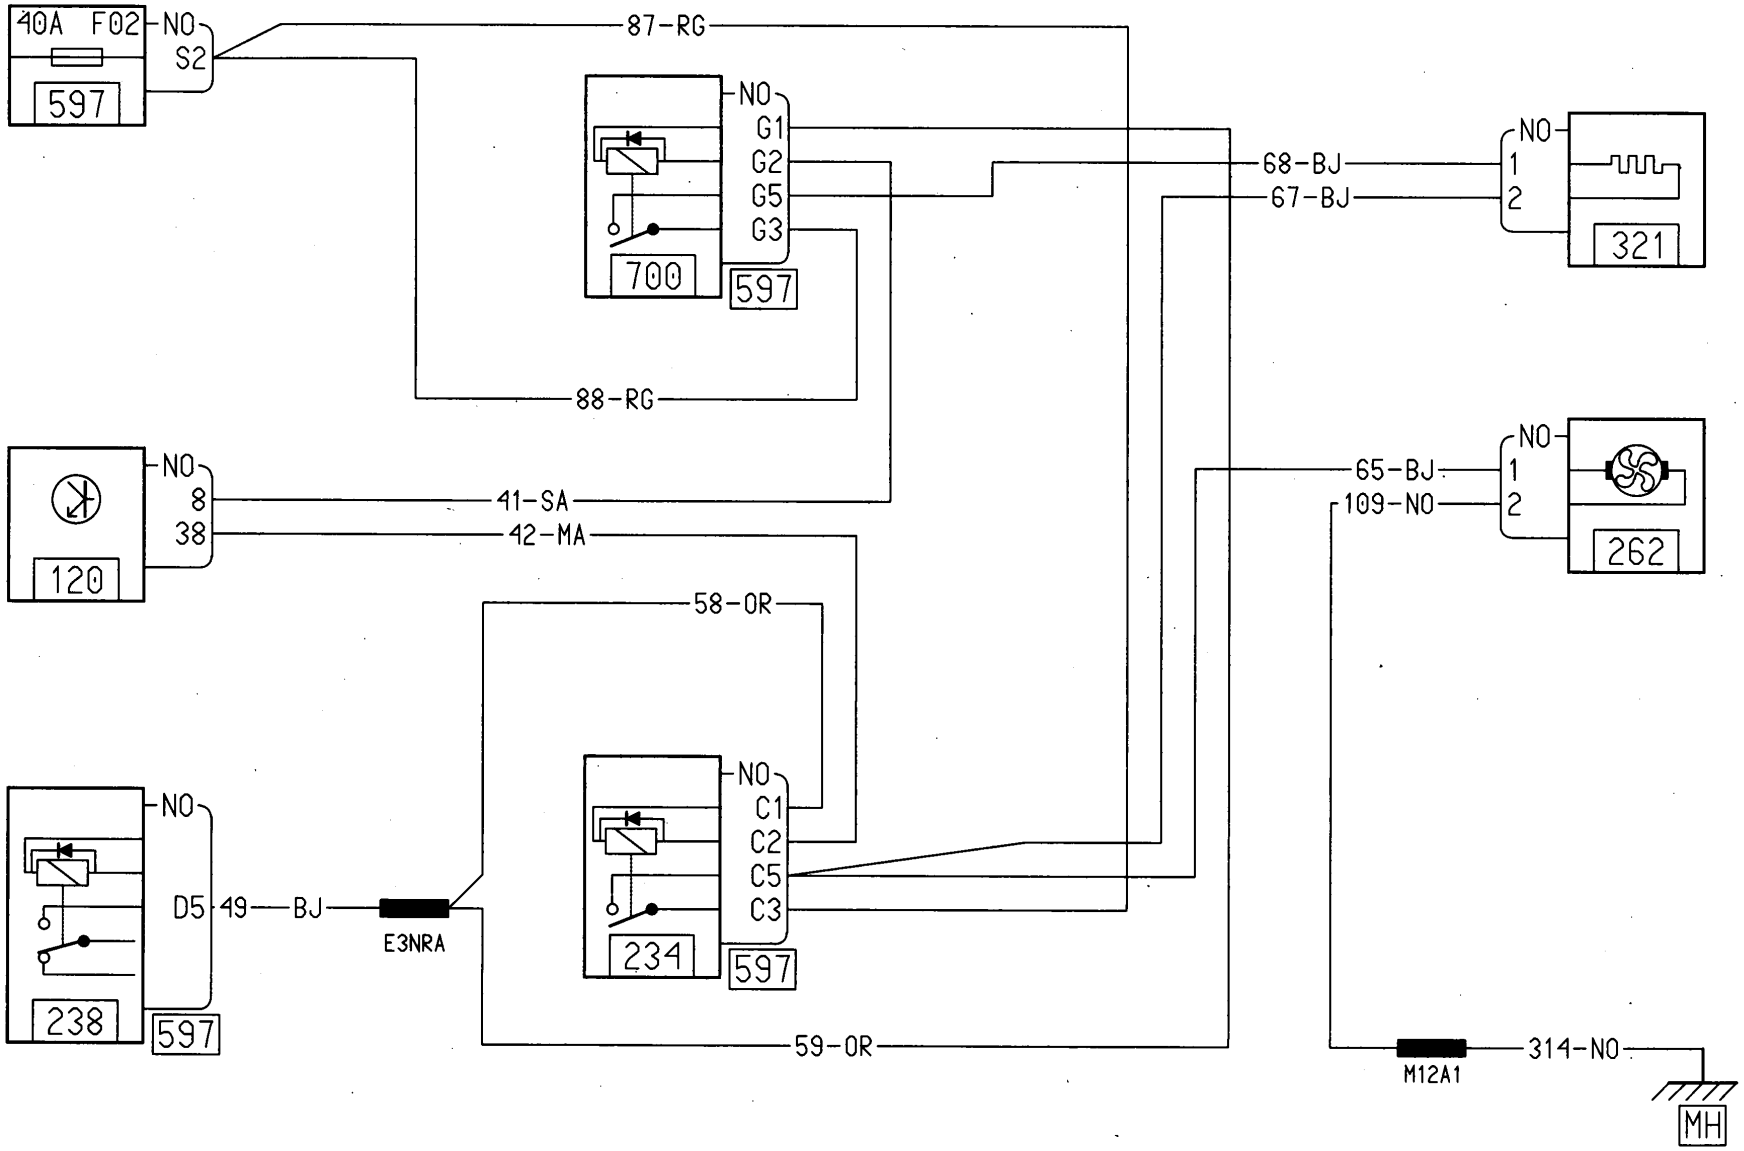

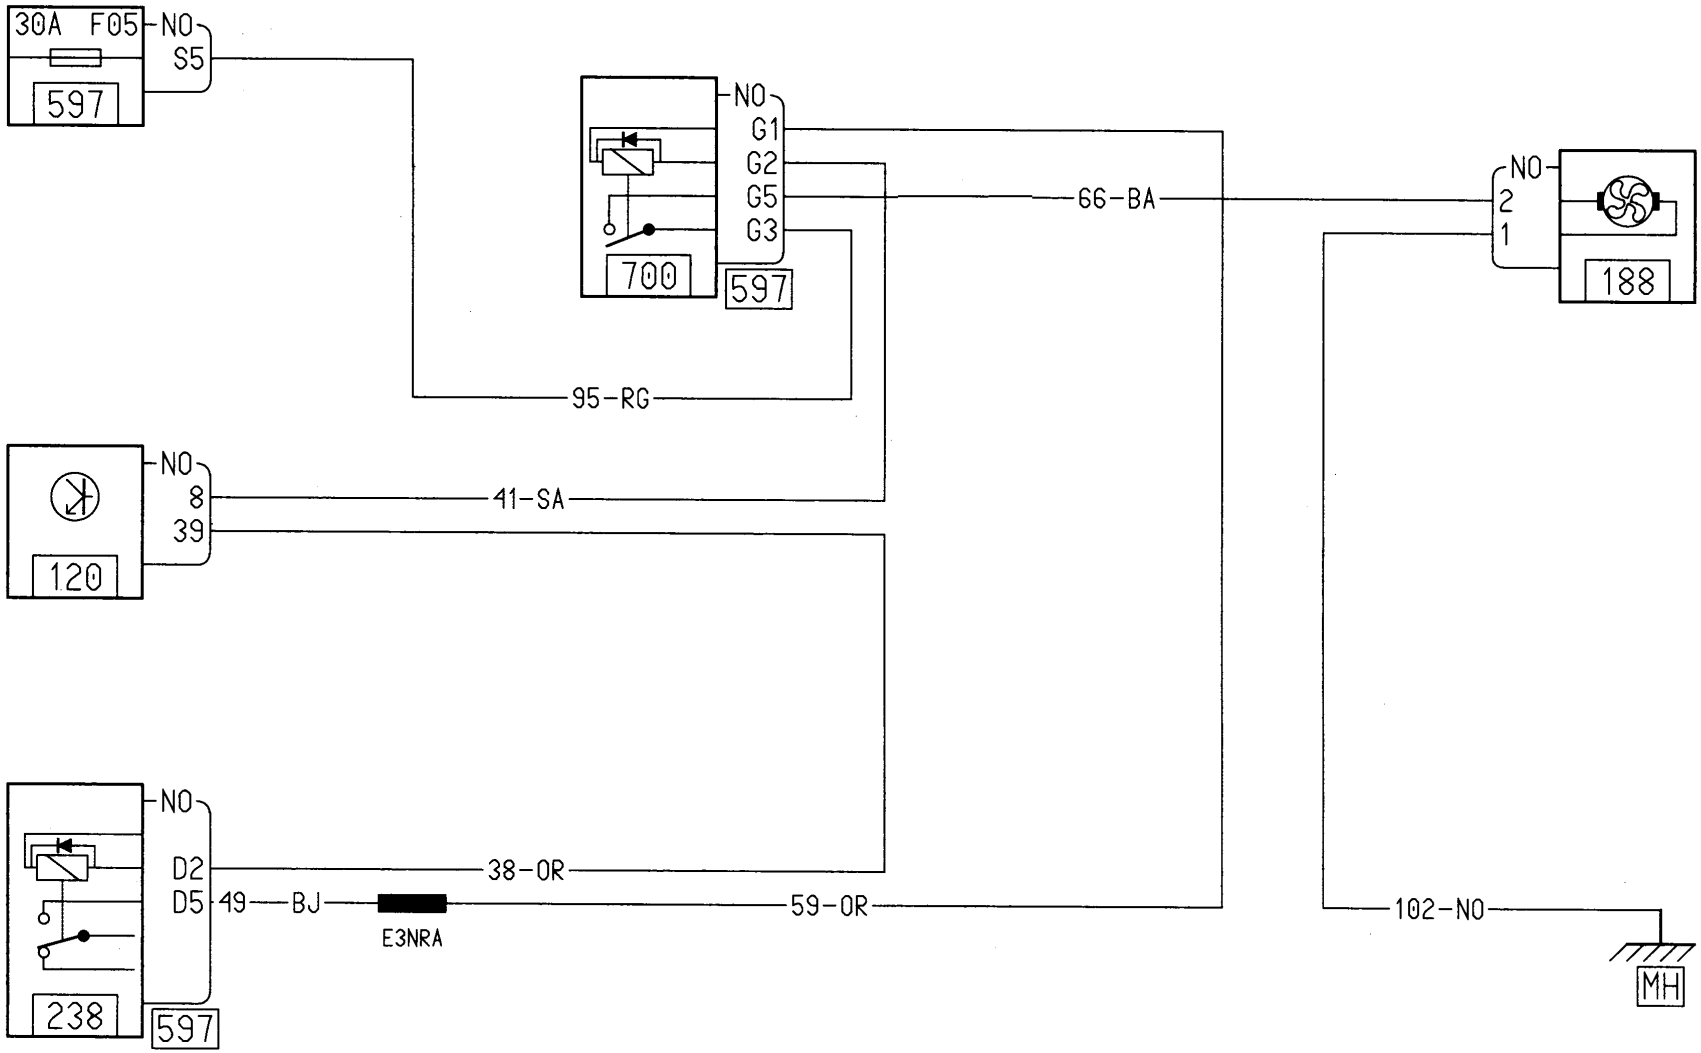
30A F05
597
NO
S5
95-RG
700
NO
G1
G2
G5
G3
597
66-BA
NO
2
1
188
120
NO
8
39
41-SA
238
NO
D2
D5
597
49
BJ
E3NRA
38-OR
59-OR
102-NO
MH

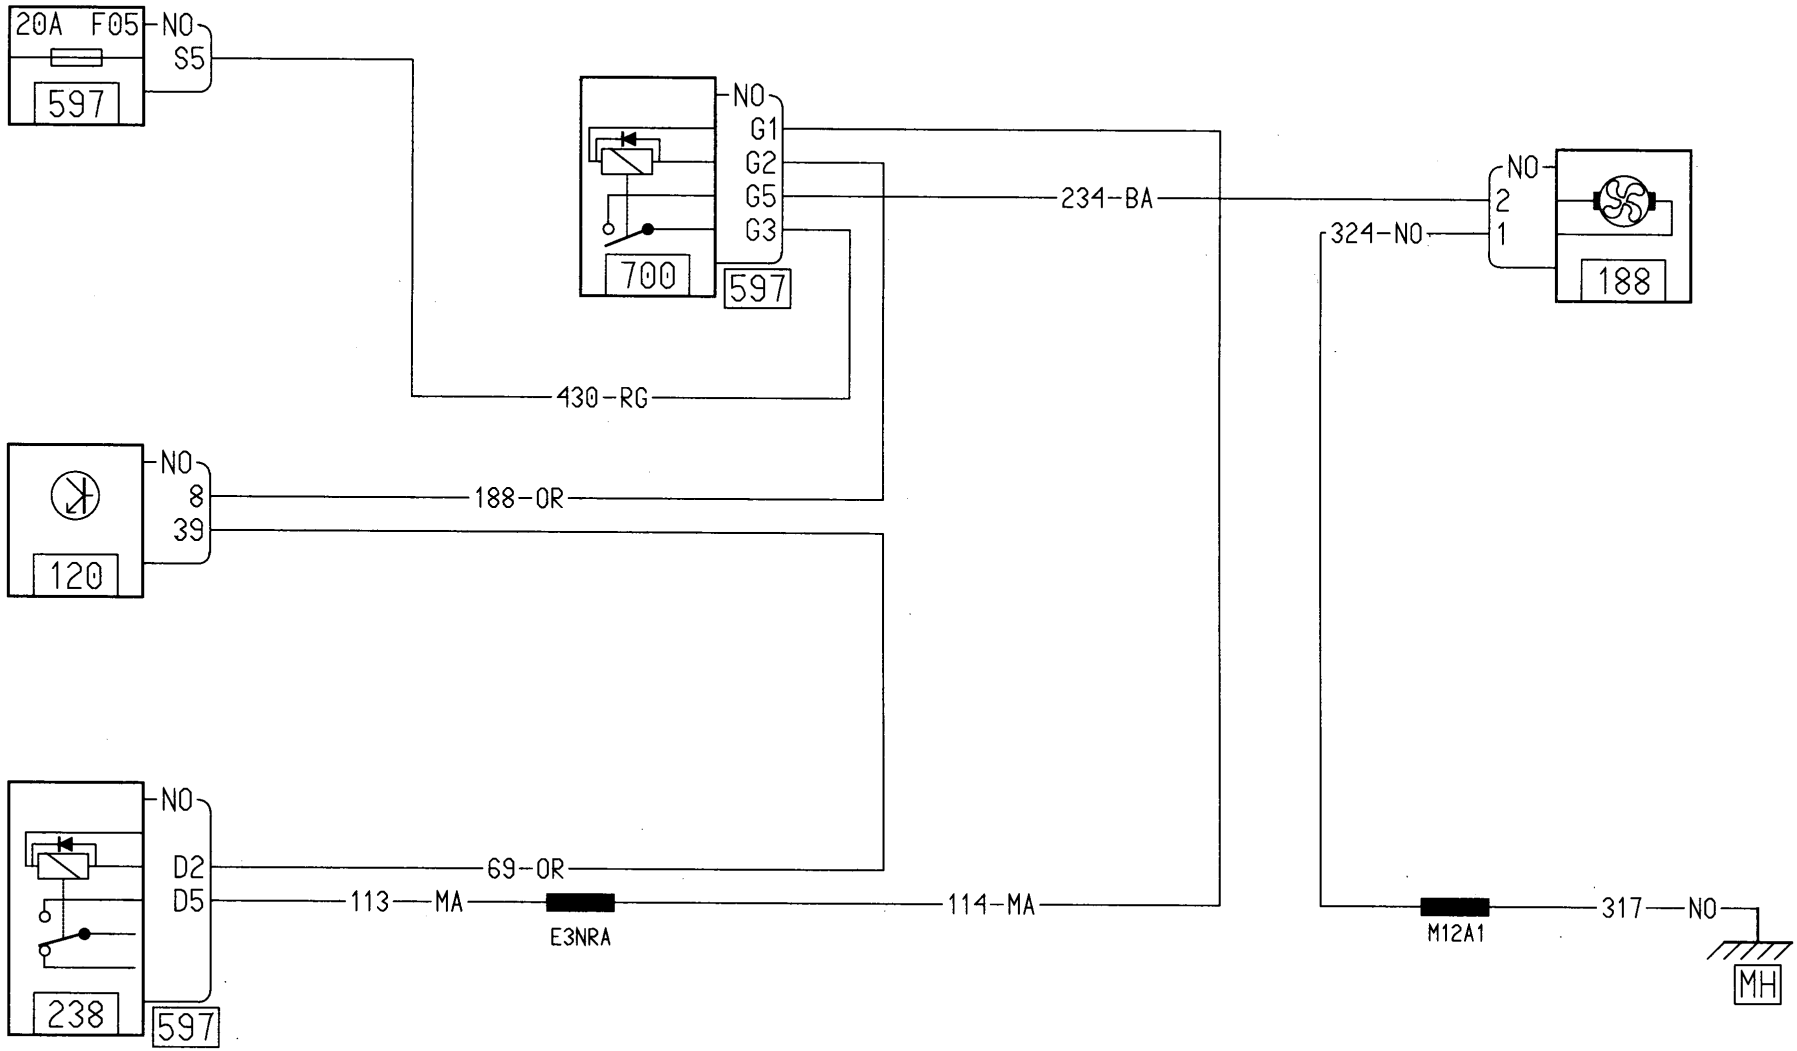

20A F05
NO
S5
597
NO
G1
G2
G5
G3
700
597
234-BA
NO
2
1
324-NO
188
430-RG
NO
8
39
120
188-OR
NO
D2
D5
238
597
69-OR
113-MA
E3NRA
114-MA
M12A1
317-NO
MH


ELECTRIC REAR-VIEW MIRRORS


E2/RETROE


X642


00

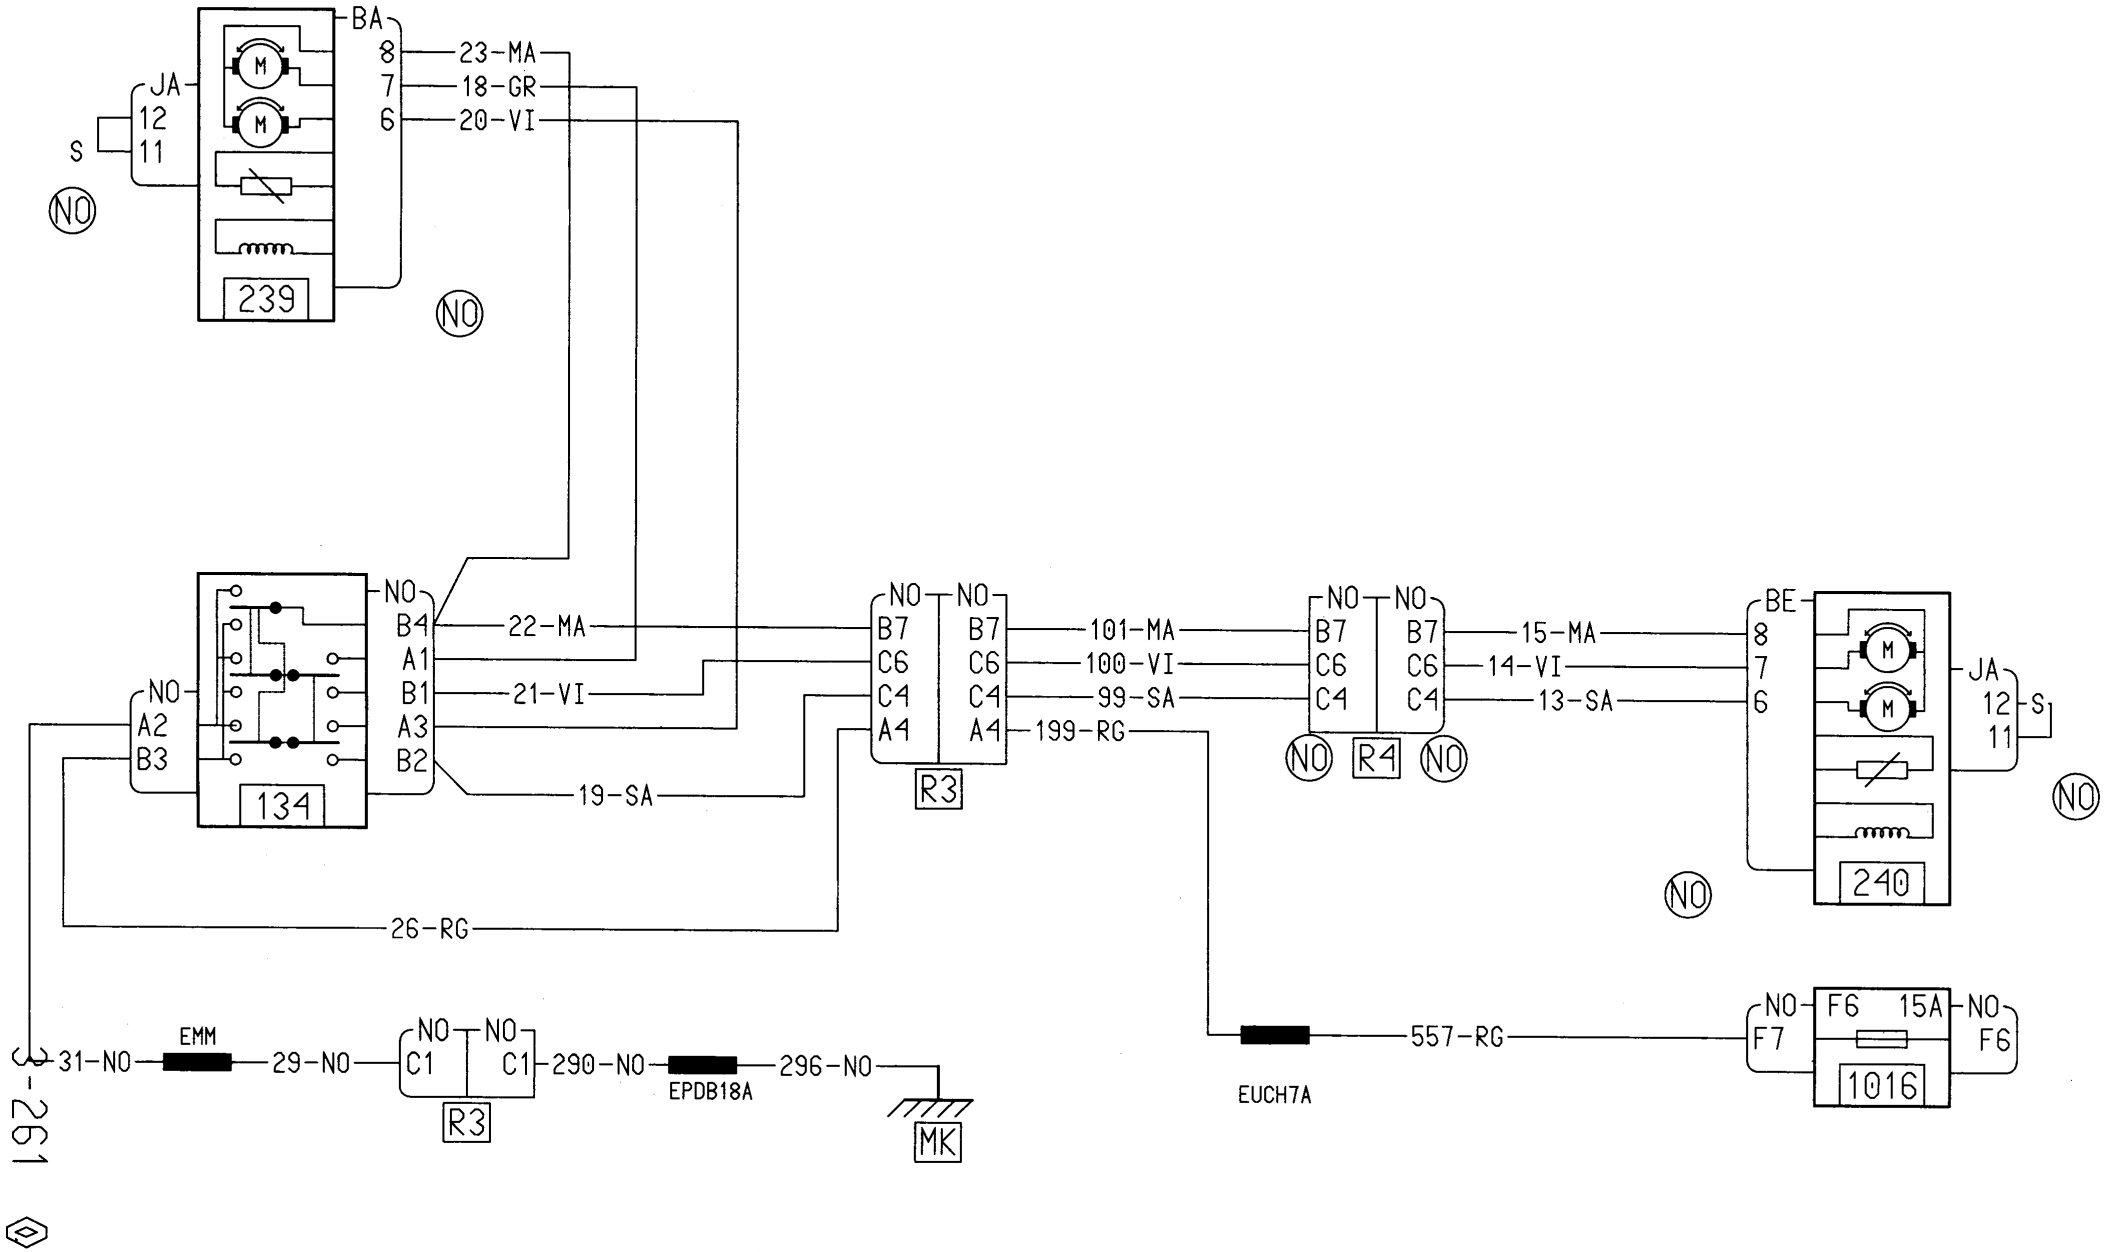


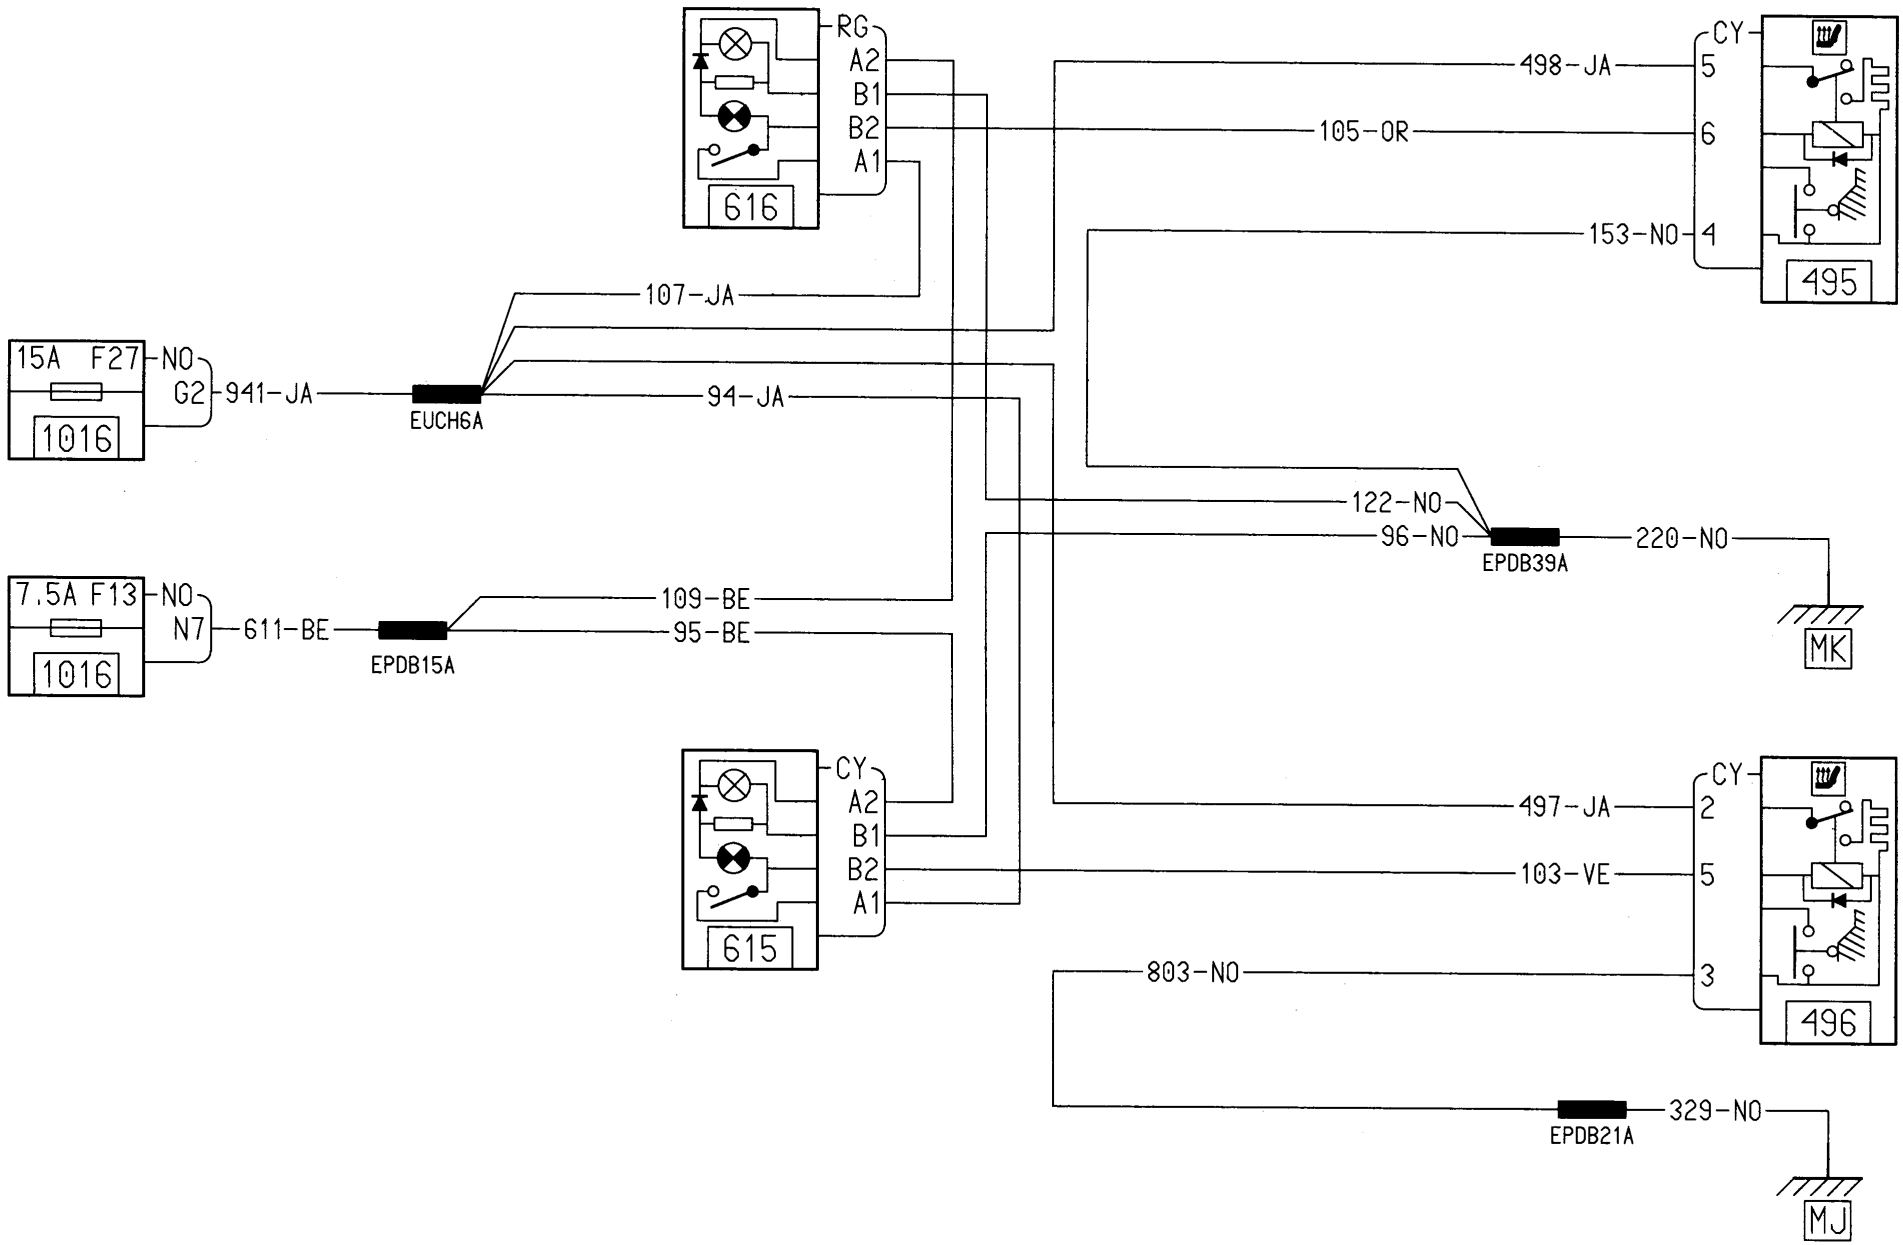

RG
A2
B1
B2
A1
616
CY
498-JA
5
105-OR
6
153-NO
4
495
107-JA
15A F27
NO
G2
941-JA
1016
EUCH6A
94-JA
122-NO
96-NO
EPDB39A
220-NO
MK
7.5A F13
NO
N7
611-BE
1016
EPDB15A
109-BE
95-BE
CY
A2
B1
B2
A1
615
497-JA
2
103-VE
5
803-NO
3
496
EPDB21A
329-NO
MJ

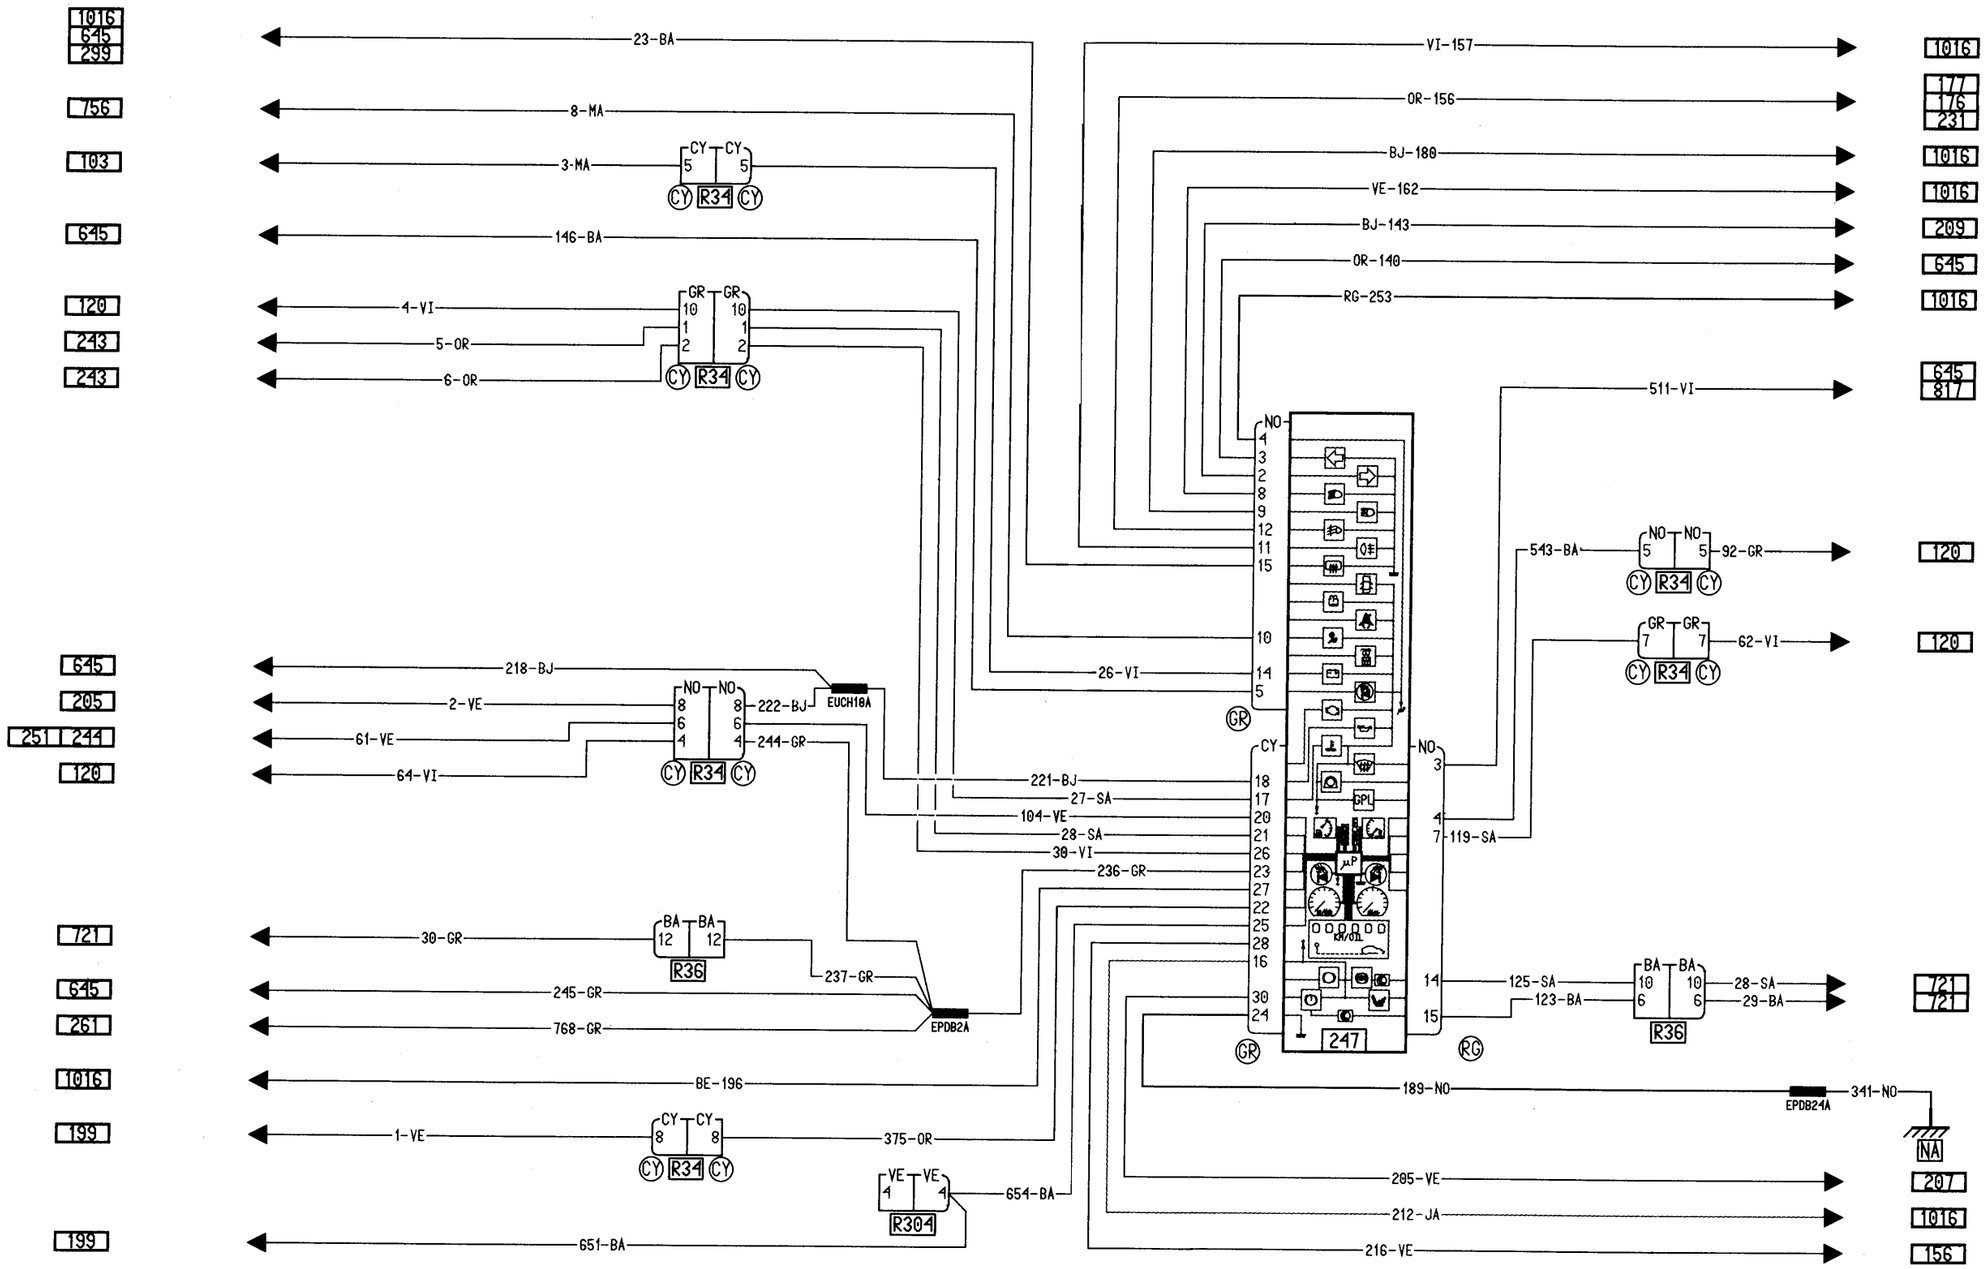

1016 645 299
756
103
645
120
243
243
23-BA
8-MA
3-MA
146-BA
4-VI
5-OR
6-OR
CY 5 5 CY
CY R34 CY
GR 10 10 GR
1 1
2 2
CY R34 CY
VI-157
OR-156
BJ-180
VE-162
BJ-143
OR-140
RG-253
511-VI
1016
177 176 231
1016
1016
209
645
1016
645 817
NO
4 3 2 8 9 12 11 15 10 14 5
GR
CY 18 17 20 21 26 23 27 22 25 28 16 30 24
NO 3 4 7 14 15
247
GR
RG
543-BA
NO 5 5 NO
92-GR
CY R34 CY
120
GR 7 7 GR
62-VI
CY R34 CY
120
645
205
251 244
120
218-BJ
2-VE
61-VE
64-VI
NO 8 6 4 8 6 4 NO
222-BJ
244-GR
EUCH18A
CY R34 CY
26-VI
221-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
721
645
261
1016
199
30-GR
245-GR
768-GR
BE-196
1-VE
BA 12 12 BA
R36
237-GR
EPDB2A
CY 8 8 CY
CY R34 CY
375-OR
VE 4 4 VE
R304
654-BA
199
651-BA
125-SA
123-BA
BA 10 6 6 10 BA
28-SA
29-BA
R36
721 721
189-NO
EPDB24A
341-NO
NA
205-VE
212-JA
216-VE
207
1016
156

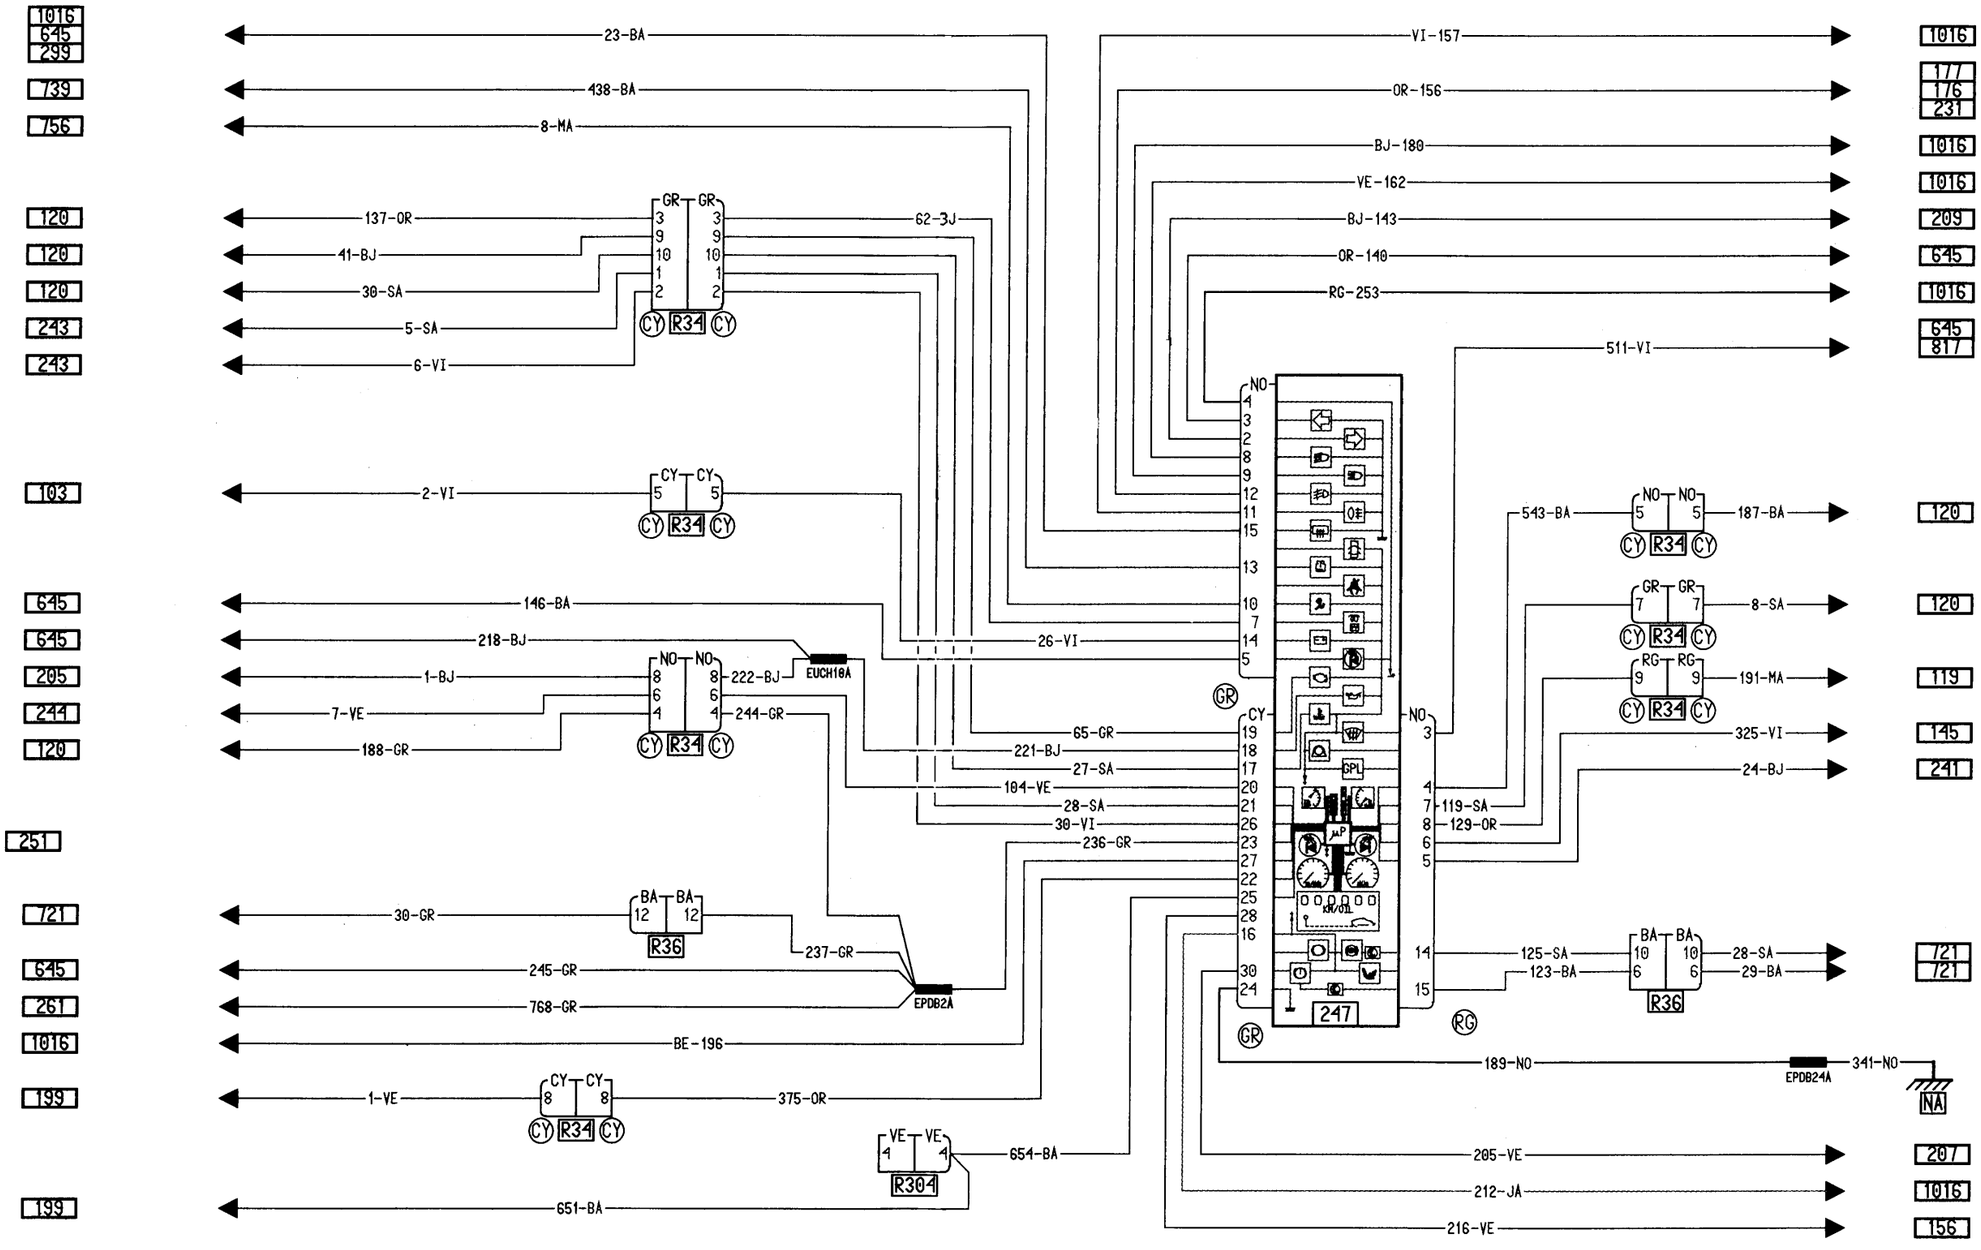

1016 645 299
739
756
120 120 120 243 243
103
645 645 205 244 120
251
721 645 261 1016
199 199
23-BA
438-BA
8-MA
137-OR
41-BJ
30-SA
5-SA
6-VI
62-3J
2-VI
146-BA
218-BJ
1-BJ
7-VE
188-GR
222-BJ
EUCH18A
244-GR
65-GR
221-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
26-VI
30-GR
237-GR
245-GR
768-GR
EPDB2A
BE-196
1-VE
375-OR
654-BA
651-BA
VI-157
OR-156
BJ-180
VE-162
BJ-143
OR-140
RG-253
511-VI
543-BA
187-BA
8-SA
191-MA
325-VI
24-BJ
119-SA
129-OR
125-SA
123-BA
28-SA
29-BA
189-NO
EPDB24A
341-NO
205-VE
212-JA
216-VE
1016 177 176 231 1016 1016 209 645 1016 645 817
120 120 119 145 241 721 721 207 1016 156
R34
R36
R304
247
EPDB24A
NA

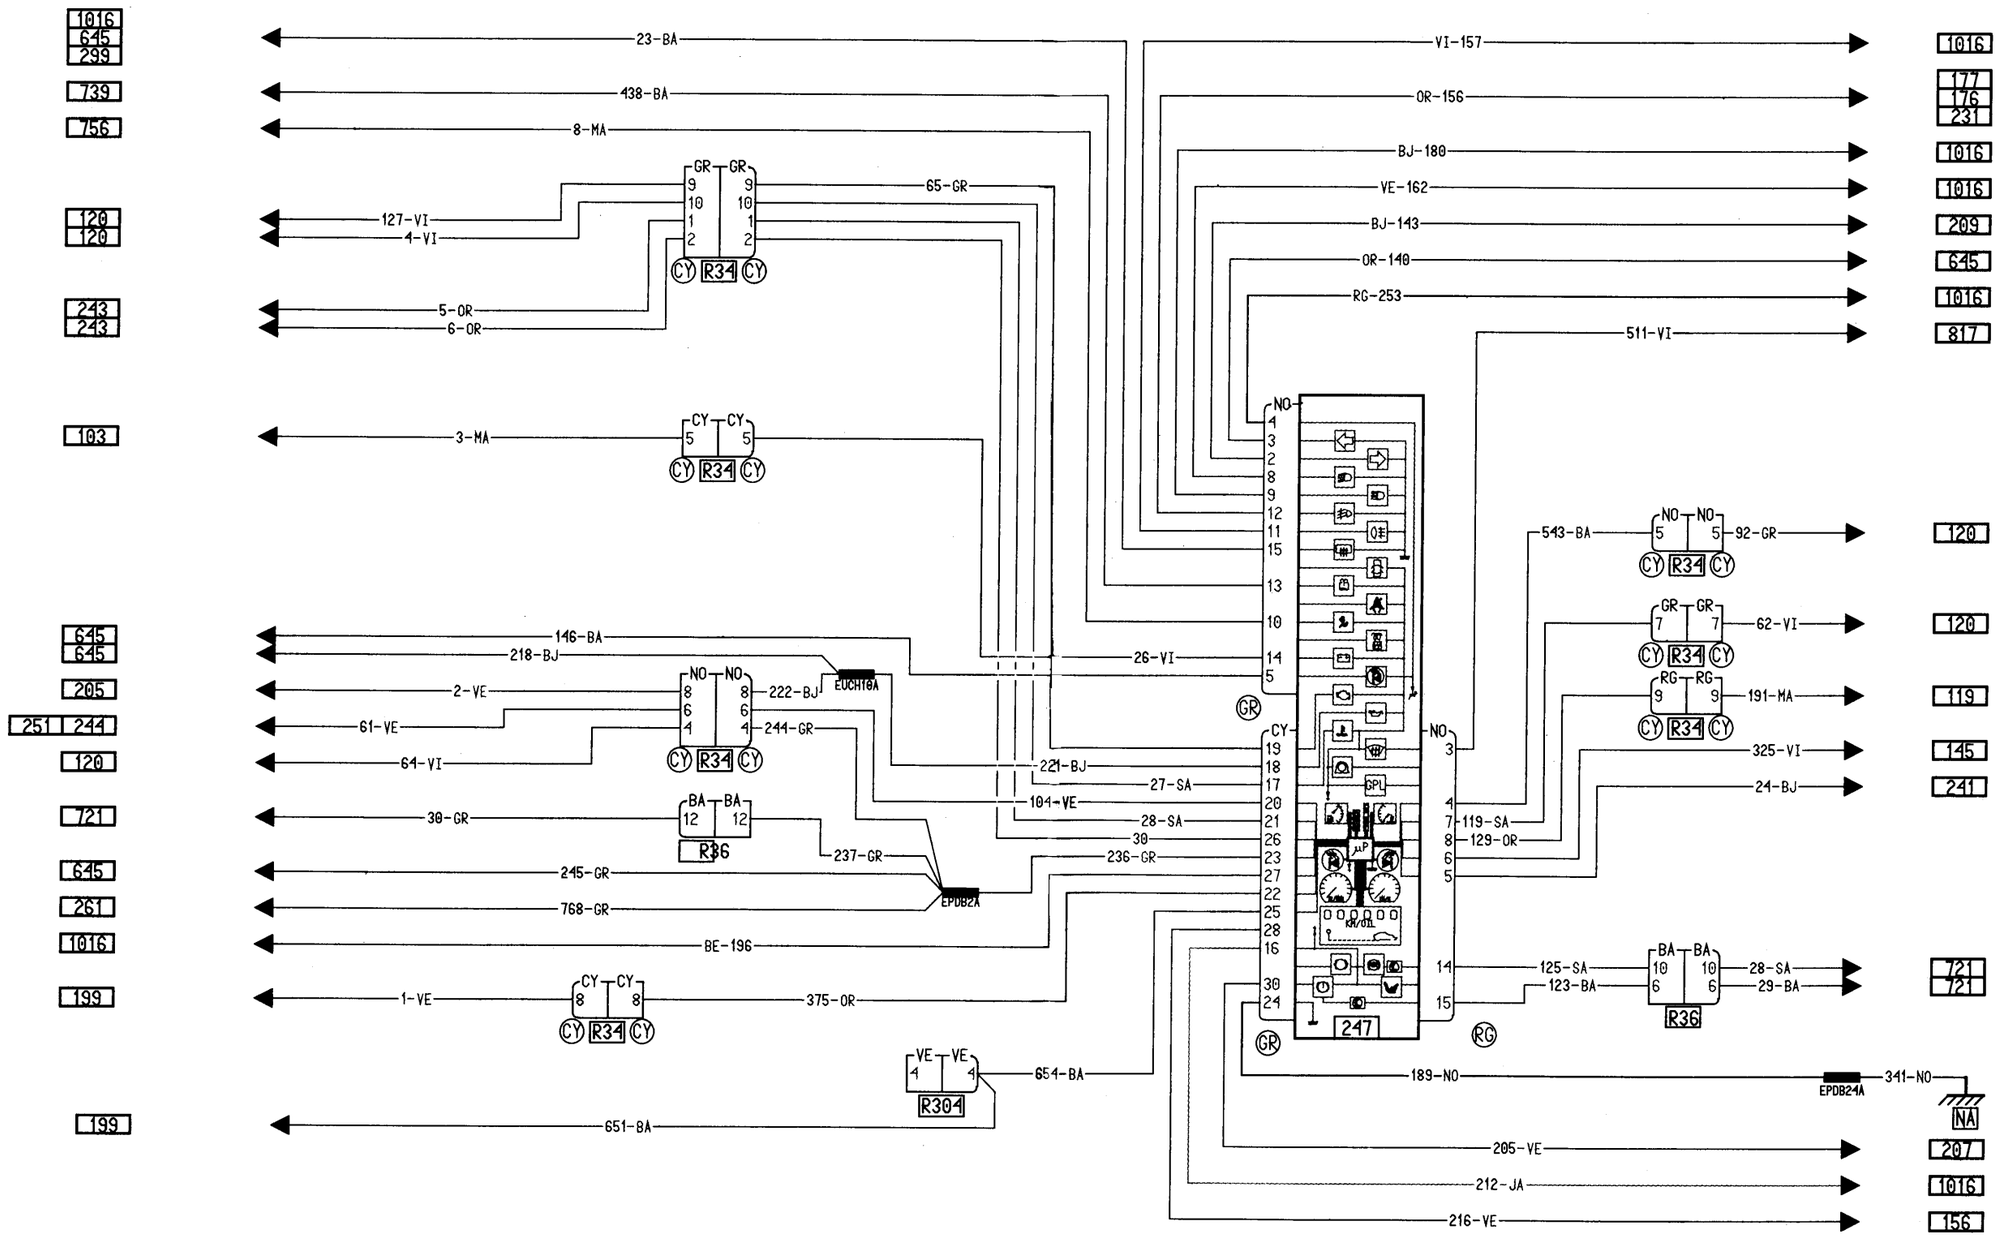

1016 645 299
739
756
120 120
243 243
103
645 645
205
251 244
120
721
645
261
1016
199
199
23-BA
438-BA
8-MA
127-VI
4-VI
65-GR
5-OR
6-OR
3-MA
146-BA
218-BJ
2-VE
61-VE
64-VI
222-BJ
244-GR
30-GR
237-GR
245-GR
768-GR
BE-196
1-VE
375-OR
654-BA
651-BA
EUCHT8A
EPDB2A
R34
R36
R304
247
VI-157
OR-156
BJ-180
VE-162
BJ-143
OR-140
RG-253
511-VI
543-BA
92-GR
62-VI
191-MA
325-VI
24-BJ
119-SA
129-OR
125-SA
123-BA
28-SA
29-BA
26-VI
221-BJ
27-SA
104-VE
28-SA
30
236-GR
189-NO
341-NO
EPDB24A
205-VE
212-JA
216-VE
1016
177 176 231
1016
1016
209
645
1016
817
120
120
119
145
241
721 721
207
1016
156

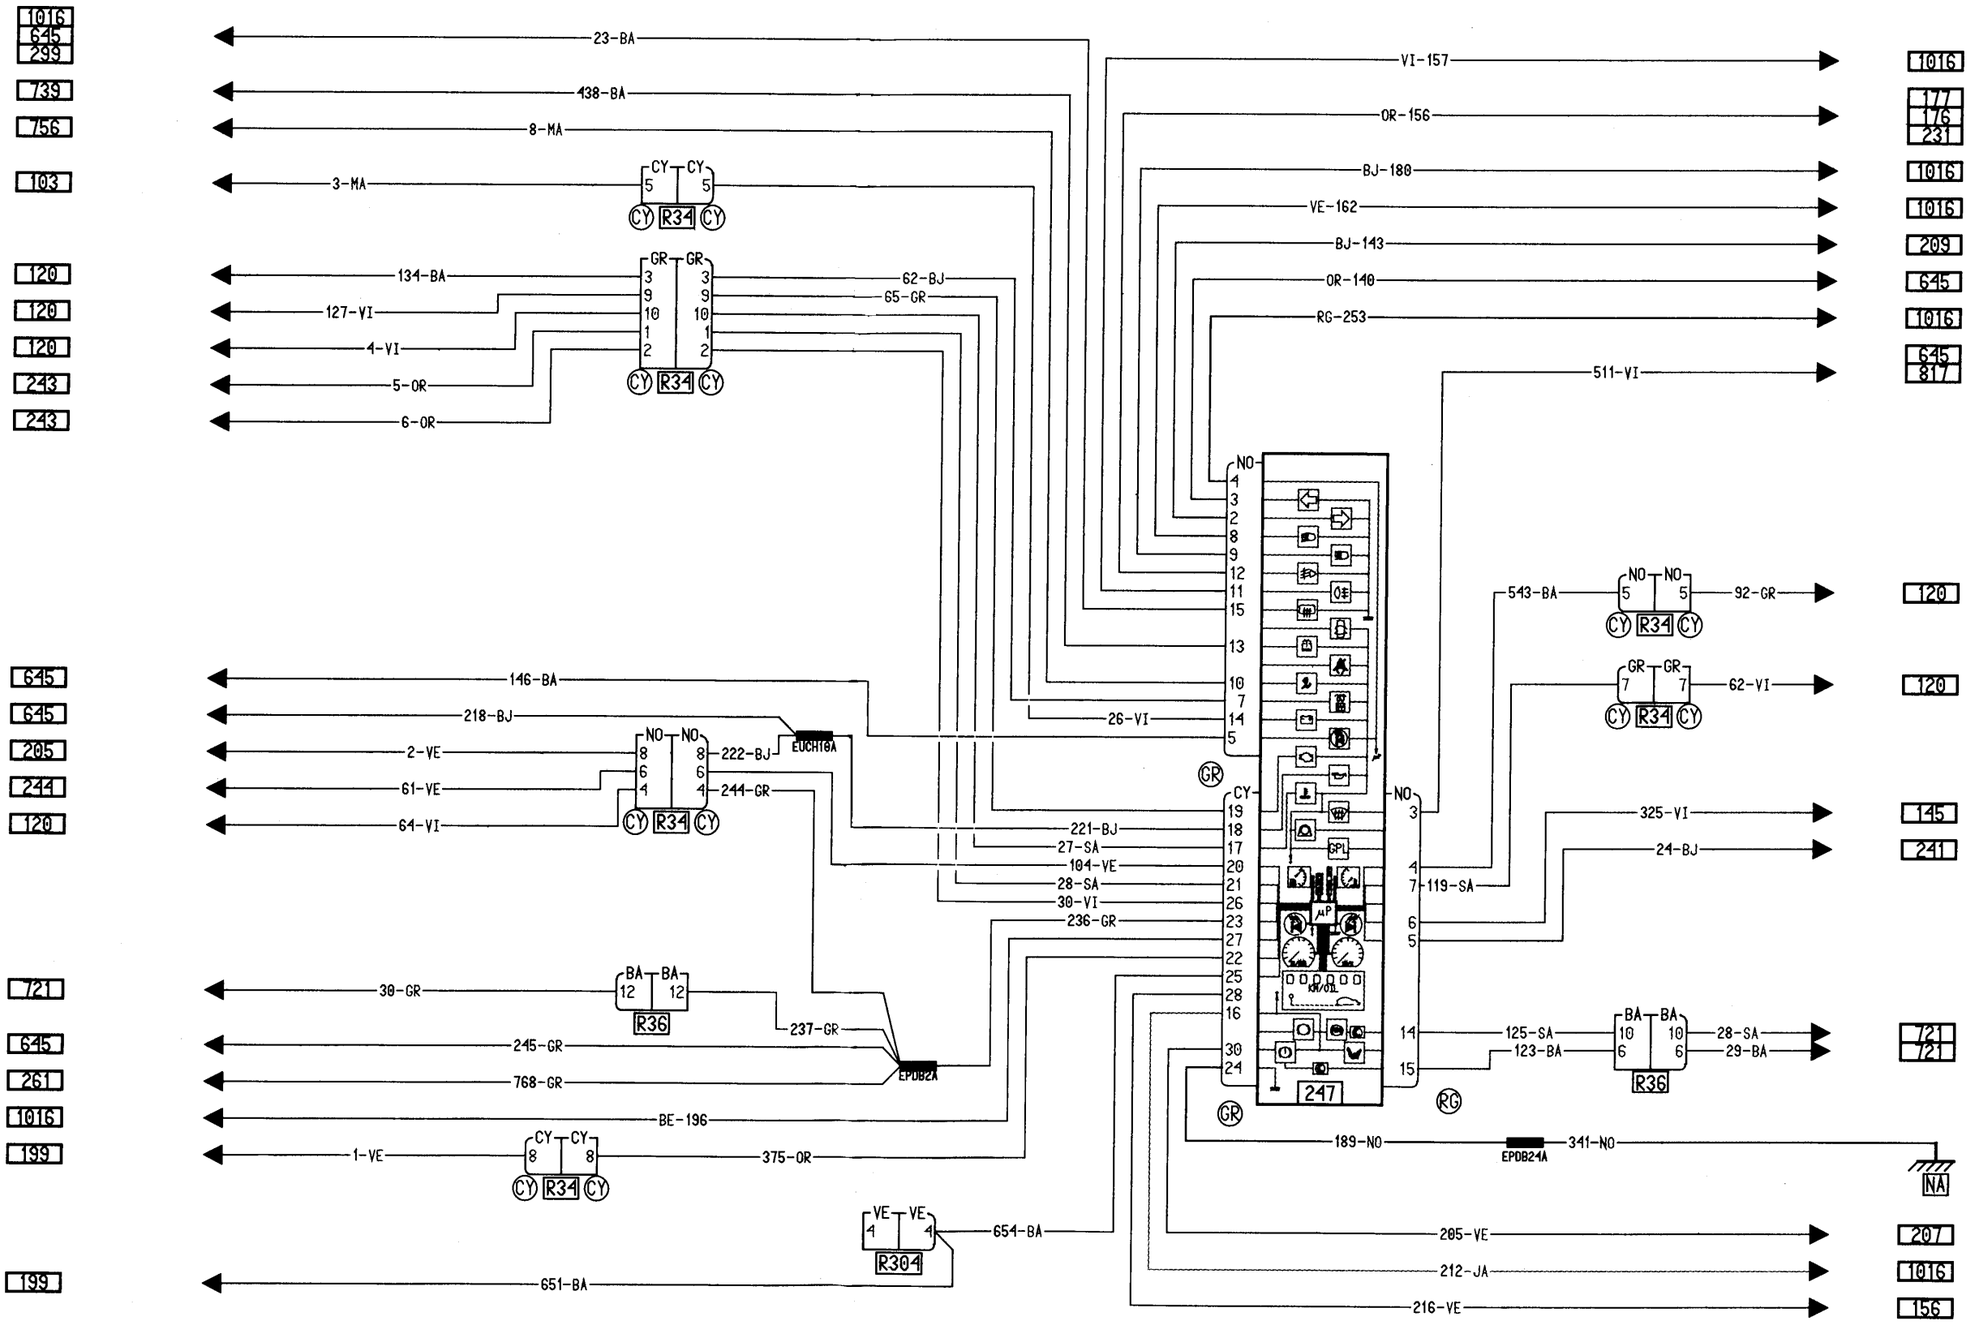

1016 645 299
739
756
103
120
120
120
243
243
23-BA
438-BA
8-MA
3-MA
CY CY 5 5 CY R34 CY
134-BA
127-VI
4-VI
5-OR
6-OR
GR GR 3 3 9 9 10 10 1 1 2 2 CY R34 CY
62-BJ
65-GR
VI-157
OR-156
BJ-180
VE-162
BJ-143
OR-140
RG-253
511-VI
1016
177 176 231
1016
1016
209
645
1016
645 817
NO 4 3 2 8 9 12 11 15 13 10 7 14 5
26-VI
543-BA
NO NO 5 5 CY R34 CY
92-GR
120
GR GR 7 7 CY R34 CY
62-VI
120
645
645
205
244
120
146-BA
218-BJ
2-VE
61-VE
64-VI
NO NO 8 8 6 6 4 4 CY R34 CY
222-BJ
244-GR
EUCH18A
221-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
CY 19 18 17 20 21 26 23 27 22 25 28 16 30 24
GR
247
NO 3 4 7 6 5 14 15
119-SA
325-VI
24-BJ
145
241
125-SA
123-BA
BA BA 10 10 6 6 R36
28-SA
29-BA
721
721
721
645
261
1016
199
30-GR
BA BA 12 12 R36
237-GR
245-GR
768-GR
BE-196
EPDB2A
1-VE
CY CY 8 8 CY R34 CY
375-OR
189-NO
341-NO
EPDB24A
NA
VE VE 4 4 R304
654-BA
199
651-BA
205-VE
212-JA
216-VE
207
1016
156

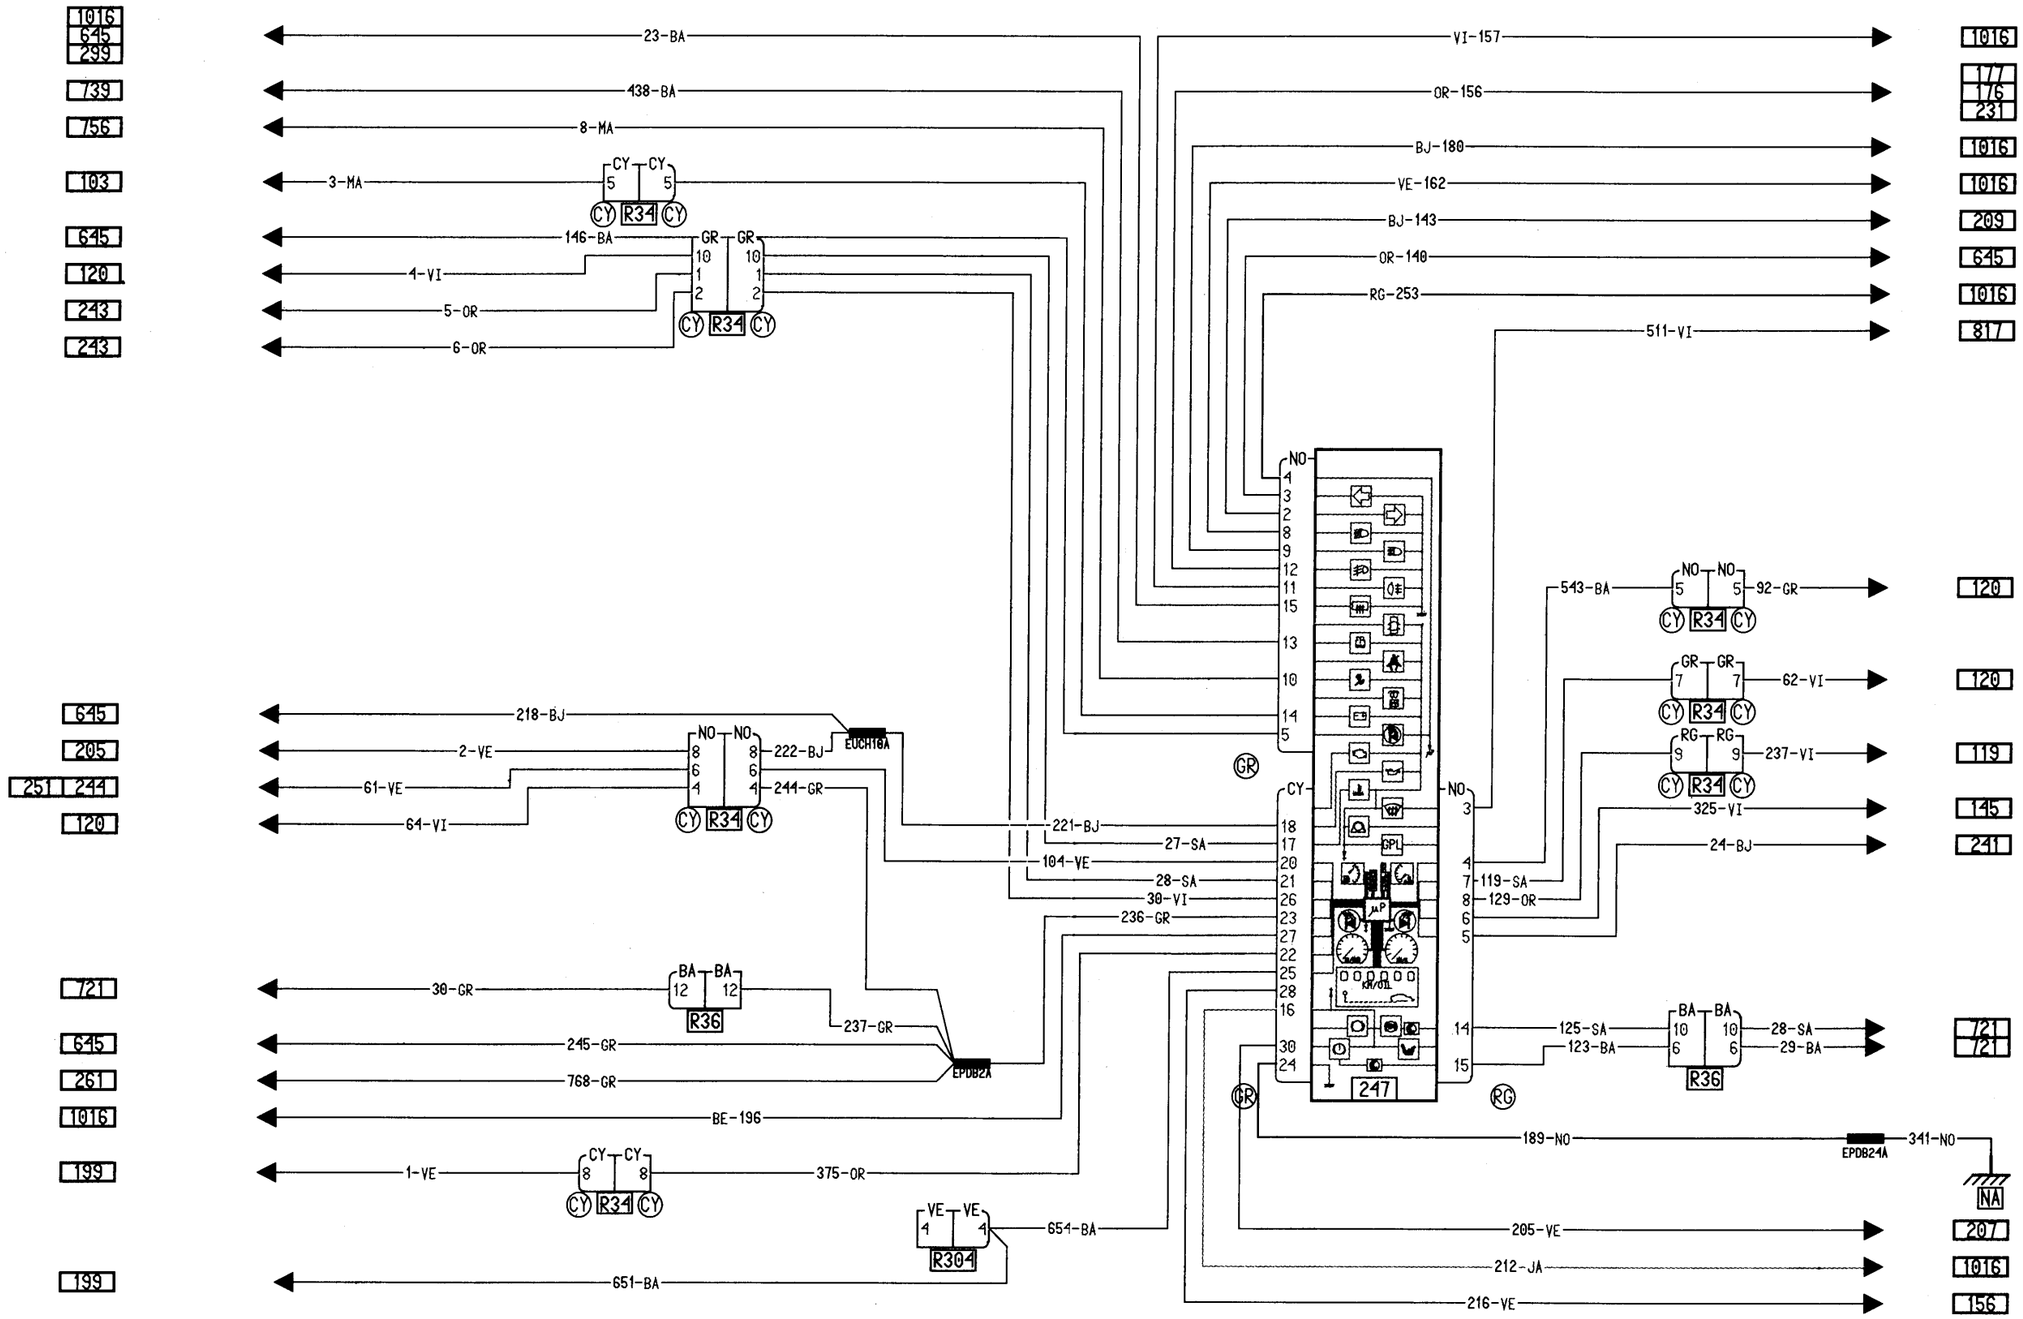

1016 645 299
739
756
103
645
120
243
243
23-BA
438-BA
8-MA
3-MA
146-BA
4-VI
5-OR
6-OR
CY 5 5 CY
CY R34 CY
GR 10 1 2
GR 10 1 2
CY R34 CY
VI-157
OR-156
BJ-180
VE-162
BJ-143
OR-140
RG-253
511-VI
1016
177 176 231
1016
1016
209
645
1016
817
NO 4 3 2 8 9 12 11 15 13 10 14 5
CY 18 17 20 21 26 23 27 22 25 28 16 30 24
NO 3 4 7 8 6 5 14 15
GR
RG
247
645
205
251 244
120
218-BJ
2-VE
61-VE
64-VI
NO NO 8 6 4 8 6 4
222-BJ
244-GR
EUCH16A
CY R34 CY
221-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
721
645
261
1016
199
30-GR
245-GR
768-GR
BE-196
1-VE
375-OR
BA 12 12
R36
237-GR
EPDB2A
CY 8 8 CY
CY R34 CY
VE 1 1
R304
654-BA
651-BA
199
543-BA
NO 5 5 92-GR
CY R34 CY
120
GR 7 7 62-VI
CY R34 CY
120
RG 9 9 237-VI
CY R34 CY
119
325-VI
145
24-BJ
241
125-SA
123-BA
BA 10 6 10 6
R36
28-SA
29-BA
721
721
189-NO
EPDB24A
341-NO
NA
205-VE
207
212-JA
1016
216-VE
156

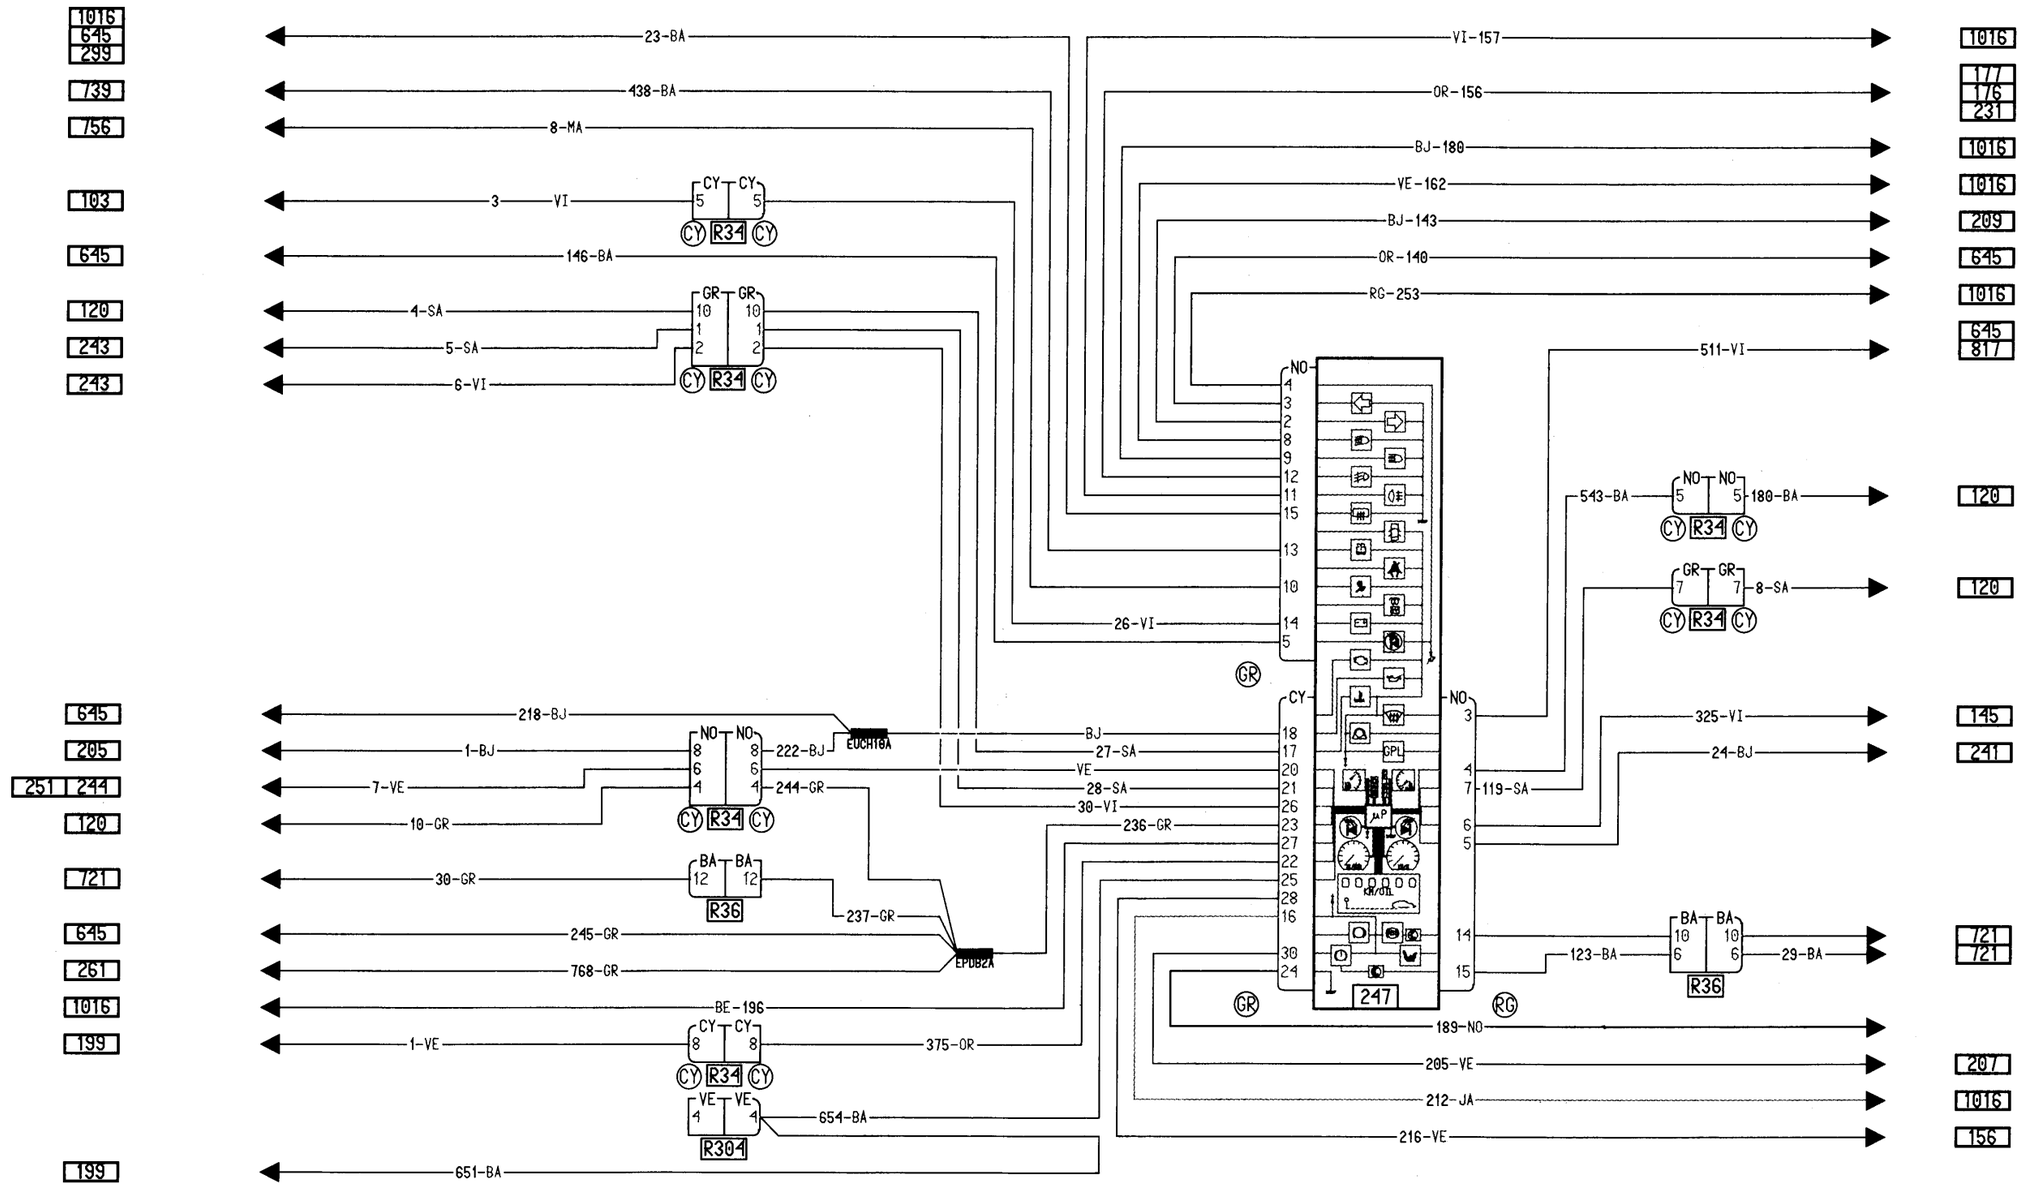

1016 645 299
739
756
103
645
120
243
243
23-BA
438-BA
8-MA
3 VI
146-BA
4-SA
5-SA
6-VI
CY 5 5 CY
CY R34 CY
GR 10 1 2 10 1 2 GR
CY R34 CY
VI-157
OR-156
BJ-180
VE-162
BJ-143
OR-140
RG-253
511-VI
26-VI
NO
4 3 2 8 9 12 11 15 13 10 14 5
GR
CY
18 17 20 21 26 23 27 22 25 28 16 30 24
NO
3 4 7 6 5 14 15
μP
247
1016
177 176 231
1016
1016
209
645
1016
645 817
543-BA
NO 5 5 NO
180-BA
CY R34 CY
120
GR 7 7 GR
8-SA
CY R34 CY
120
645
205
251 244
120
721
645
261
1016
199
218-BJ
1-BJ
7-VE
10-GR
NO 8 6 4 NO 8 6 4
222-BJ
244-GR
CY R34 CY
EUCH10A
30-GR
BA 12 12 BA
R36
237-GR
245-GR
768-GR
EPDB2A
BE-196
1-VE
CY 8 8 CY
CY R34 CY
375-OR
VE 4 4 VE
R304
654-BA
651-BA
199
BJ
27-SA
VE
28-SA
30-VI
236-GR
325-VI
24-BJ
119-SA
123-BA
BA 10 6 10 6 BA
R36
29-BA
189-NO
205-VE
212-JA
216-VE
145
241
721 721
207
1016
156

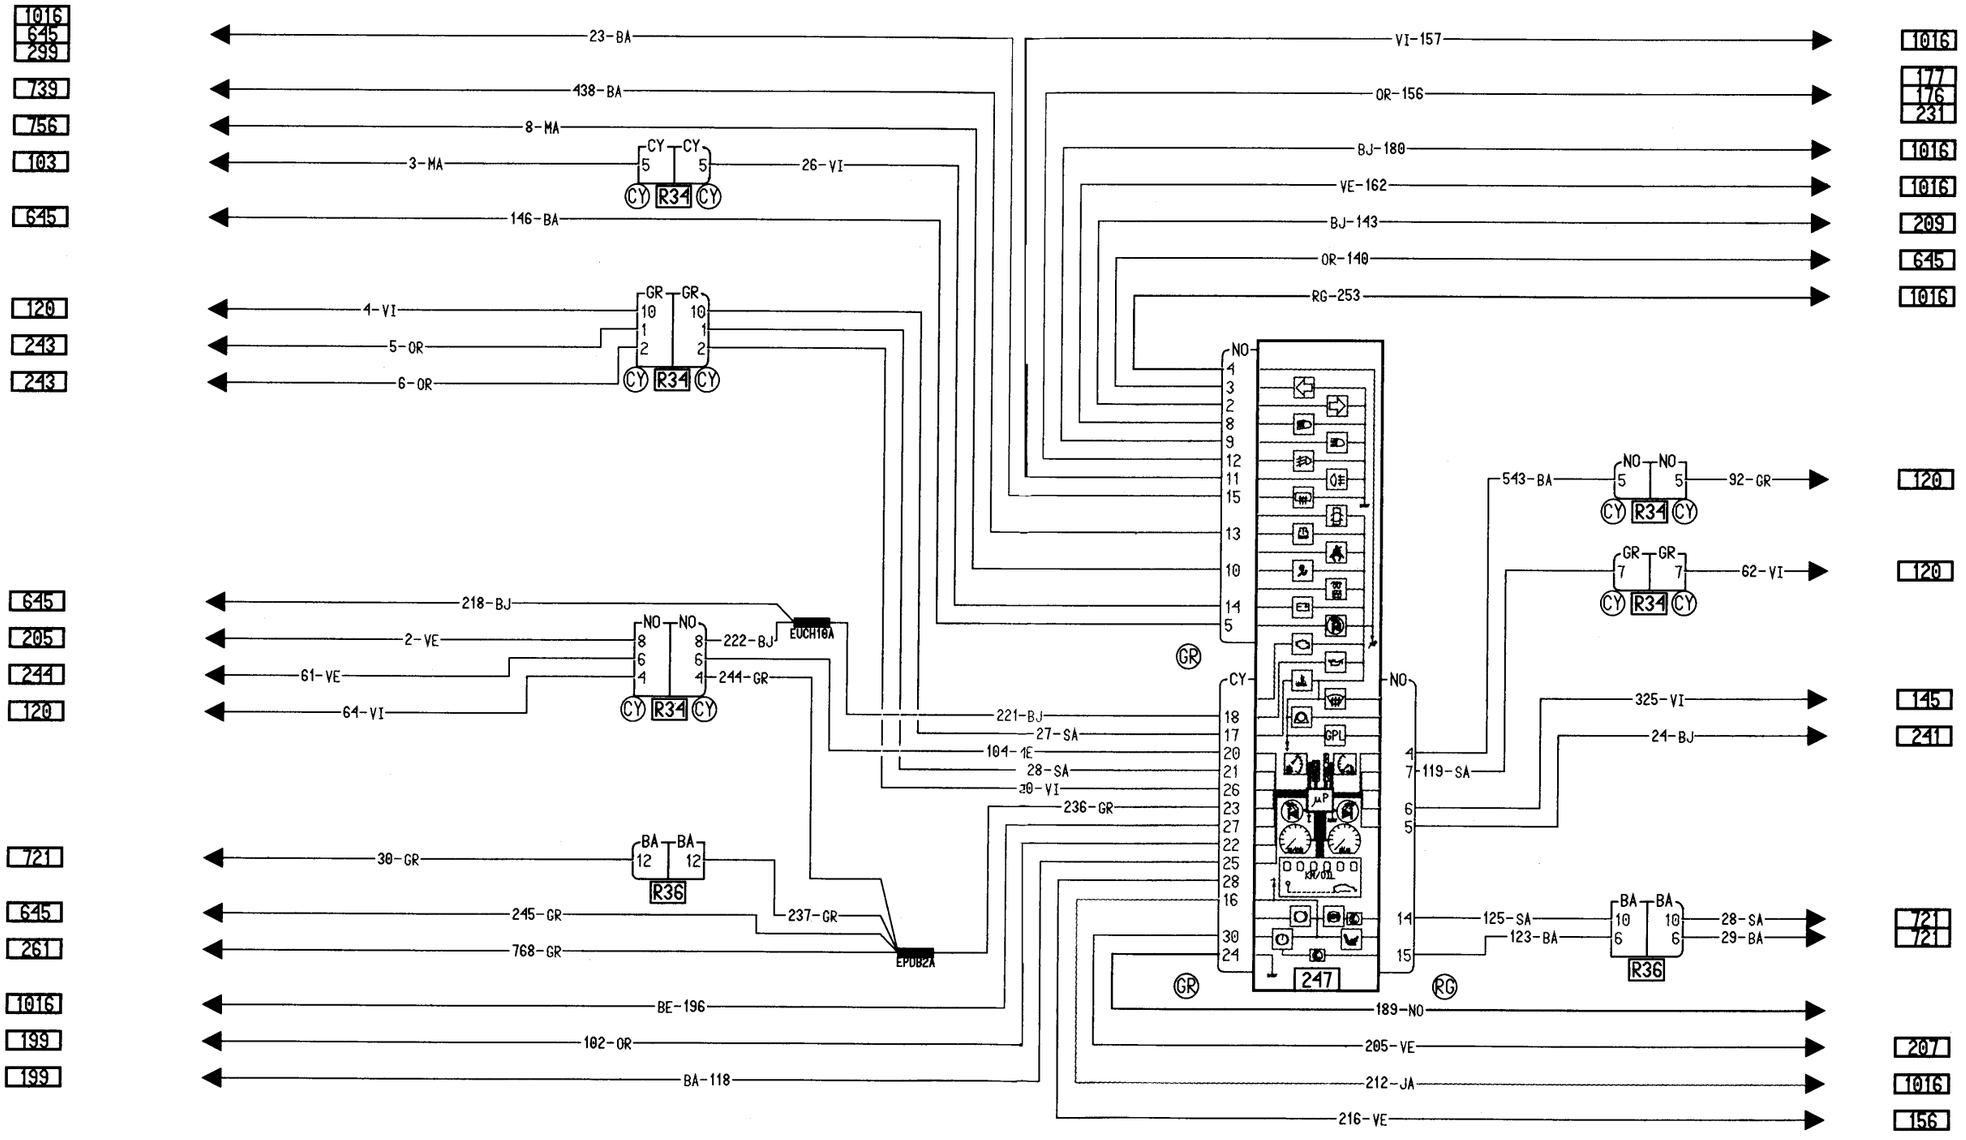

1016 645 239
739
756
103
645
120 243 243
645 205 244 120
721 645 261
1016 199 199
23-BA
438-BA
8-MA
3-MA
26-VI
146-BA
1-VI
5-OR
6-OR
218-BJ
2-VE
61-VE
64-VI
222-BJ
244-GR
221-BJ
27-SA
104-1E
28-SA
30-VI
236-GR
30-GR
245-GR
768-GR
237-GR
BE-196
102-OR
BA-118
VI-157
OR-156
BJ-180
VE-162
BJ-143
OR-140
RG-253
543-BA
92-GR
62-VI
325-VI
24-BJ
119-SA
125-SA
123-BA
28-SA
29-BA
189-NO
205-VE
212-JA
216-VE
1016 177 176 231 1016 1016 209 645 1016
120
120
145 241
721 721
207 1016 156
R34
R36
EUCH10A
EPDB2A
247
GR
RG
CY
NO
BA

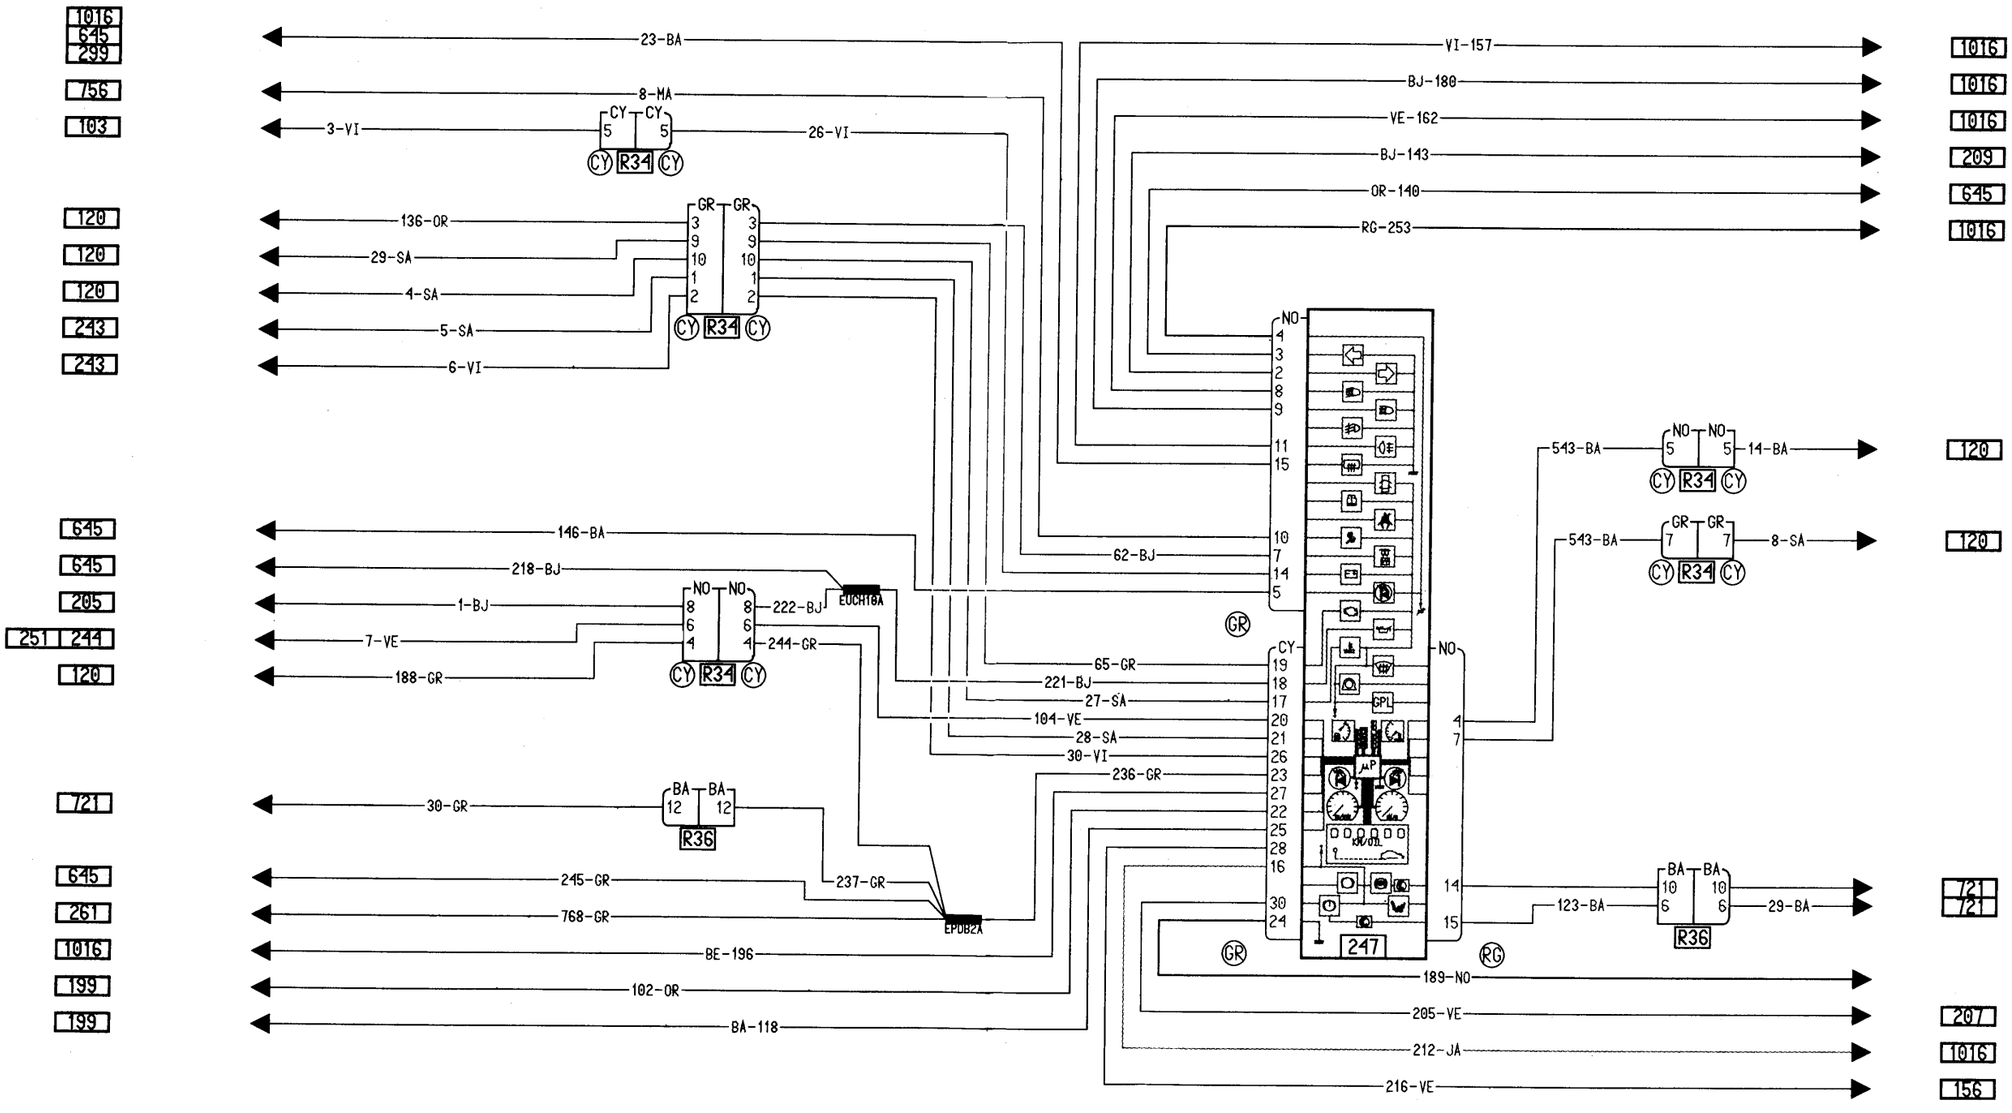

1016
S45
299
756
103
120
120
120
243
243
645
645
645
205
251 244
120
721
645
261
1016
199
199
23-BA
8-MA
3-VI
26-VI
136-OR
29-SA
4-SA
5-SA
6-VI
146-BA
218-BJ
1-BJ
7-VE
188-GR
222-BJ
244-GR
30-GR
245-GR
768-GR
237-GR
BE-196
102-OR
BA-118
VI-157
BJ-180
VE-162
BJ-143
OR-140
RG-253
62-BJ
65-GR
221-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
189-NO
205-VE
212-JA
216-VE
543-BA
14-BA
8-SA
123-BA
29-BA
1016
1016
1016
209
645
1016
120
120
721
721
207
1016
156
CY
GR
NO
BA
R34
R36
EUCH18A
EPDB2A
247
GPL
μP

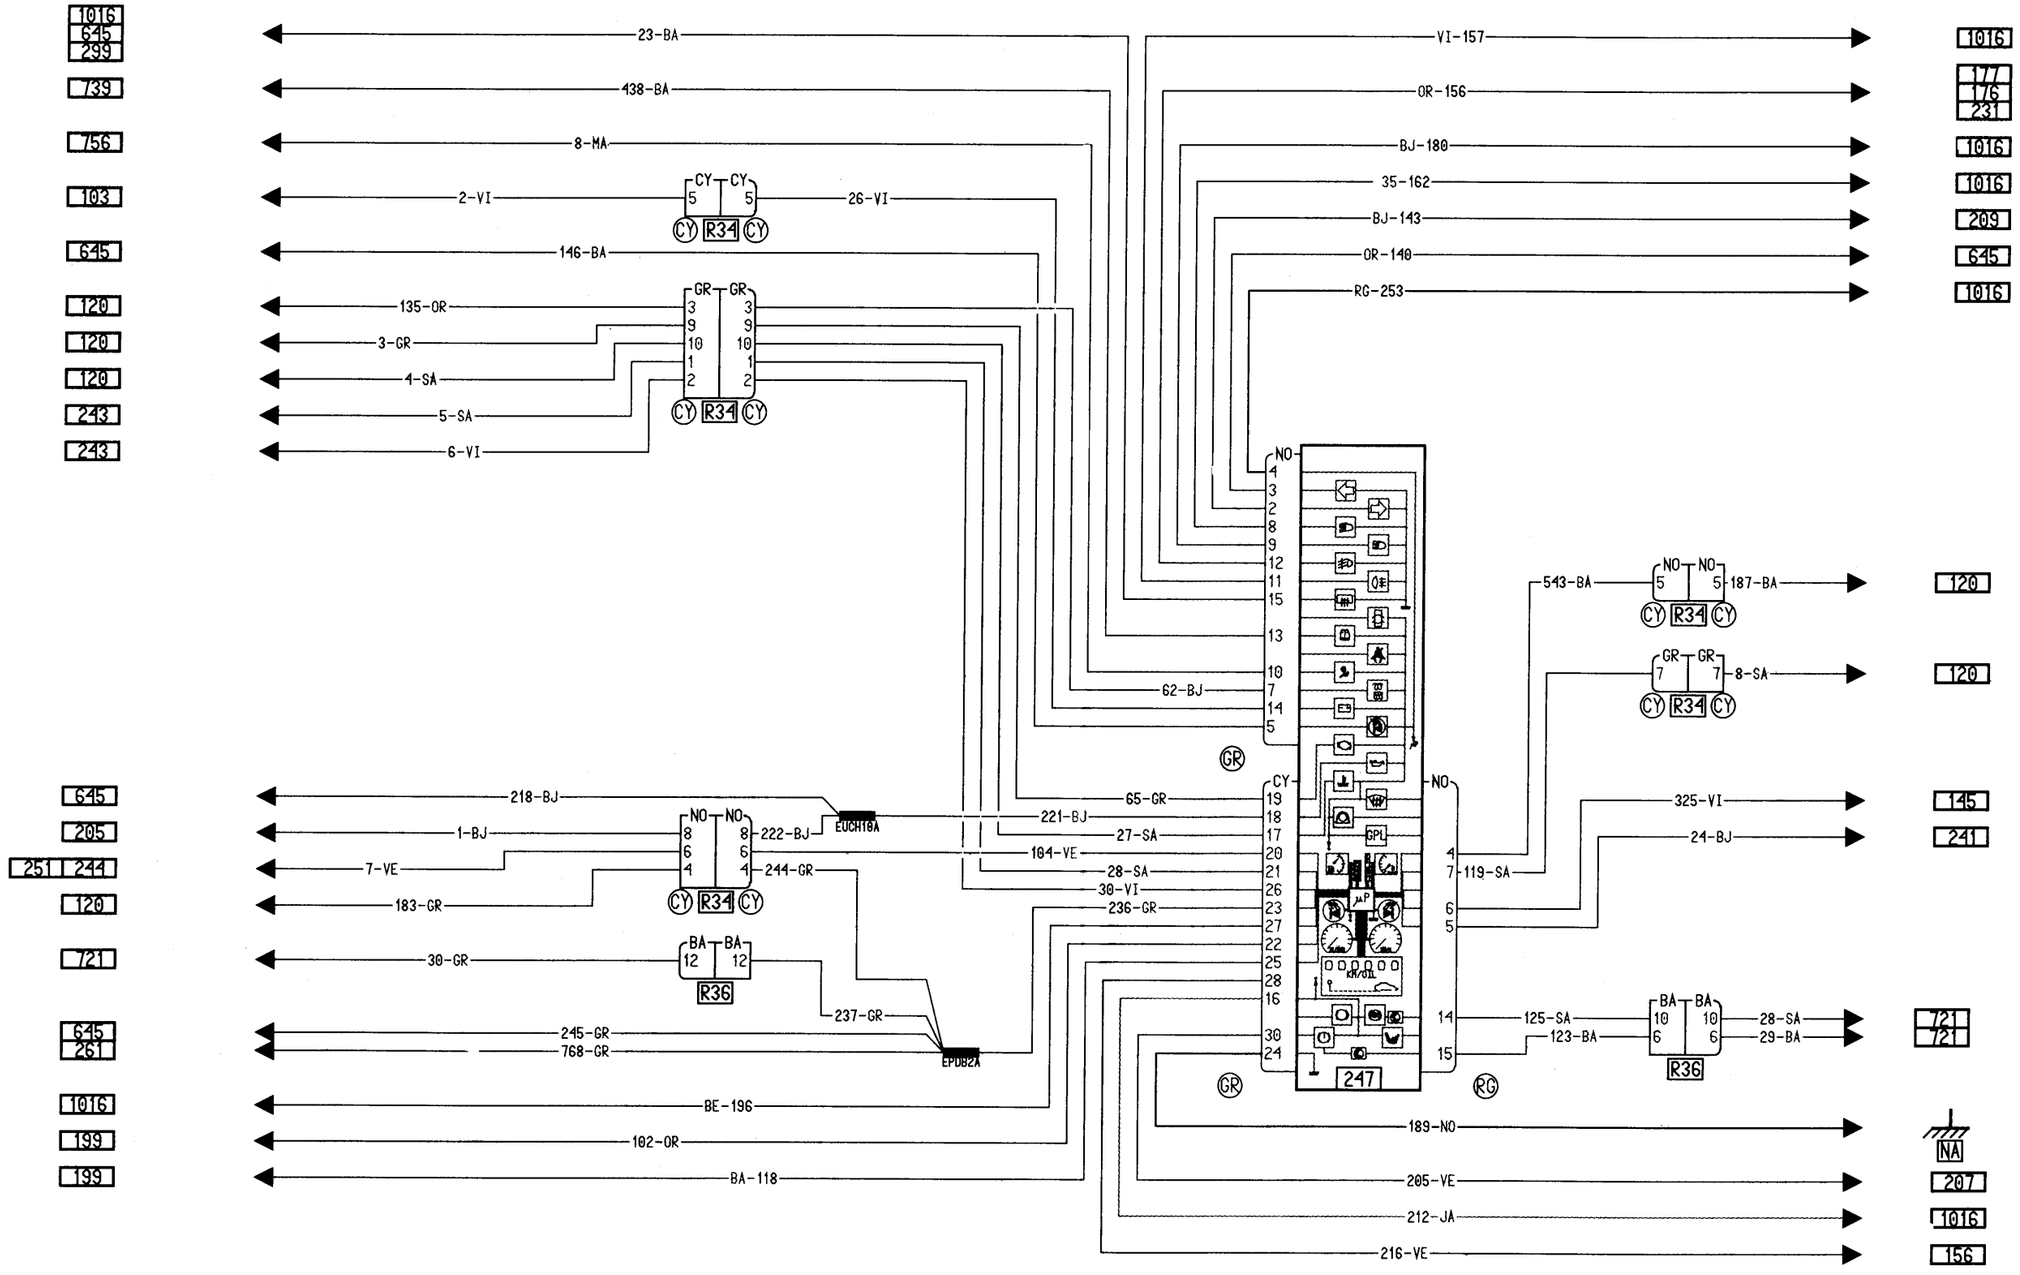
1016 645 299
739
756
103
645
120
120
120
243
243
23-BA
438-BA
8-MA
2-VI
26-VI
146-BA
135-OR
3-GR
4-SA
5-SA
6-VI
CY 5 5 CY
R34
GR 3 9 10 1 2 3 9 10 1 2 GR
VI-157
OR-156
BJ-180
35-162
BJ-143
OR-140
RG-253
1016
177 176 231
1016
1016
209
645
1016
NO
4 3 2 8 9 12 11 15 13 10 7 14 5
62-BJ
65-GR
221-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
CY 19 18 17 20 21 26 23 27 22 25 28 16 30 24
GR
247
NO 4 7 6 5 14 15
119-SA
125-SA
123-BA
543-BA
187-BA
NO 5 5 NO
R34
120
GR 7 7 GR
8-SA
120
325-VI
24-BJ
145
241
BA 10 6 6 10 BA
R36
28-SA
29-BA
721
721
RG
189-NO
205-VE
212-JA
216-VE
NA
207
1016
156
645
205
251 244
120
721
645 261
1016
199
199
218-BJ
1-BJ
7-VE
183-GR
NO 8 6 4 NO
EUCH18A
222-BJ
244-GR
R34
30-GR
BA 12 12 BA
R36
237-GR
245-GR
768-GR
EPDB2A
BE-196
102-OR
BA-118

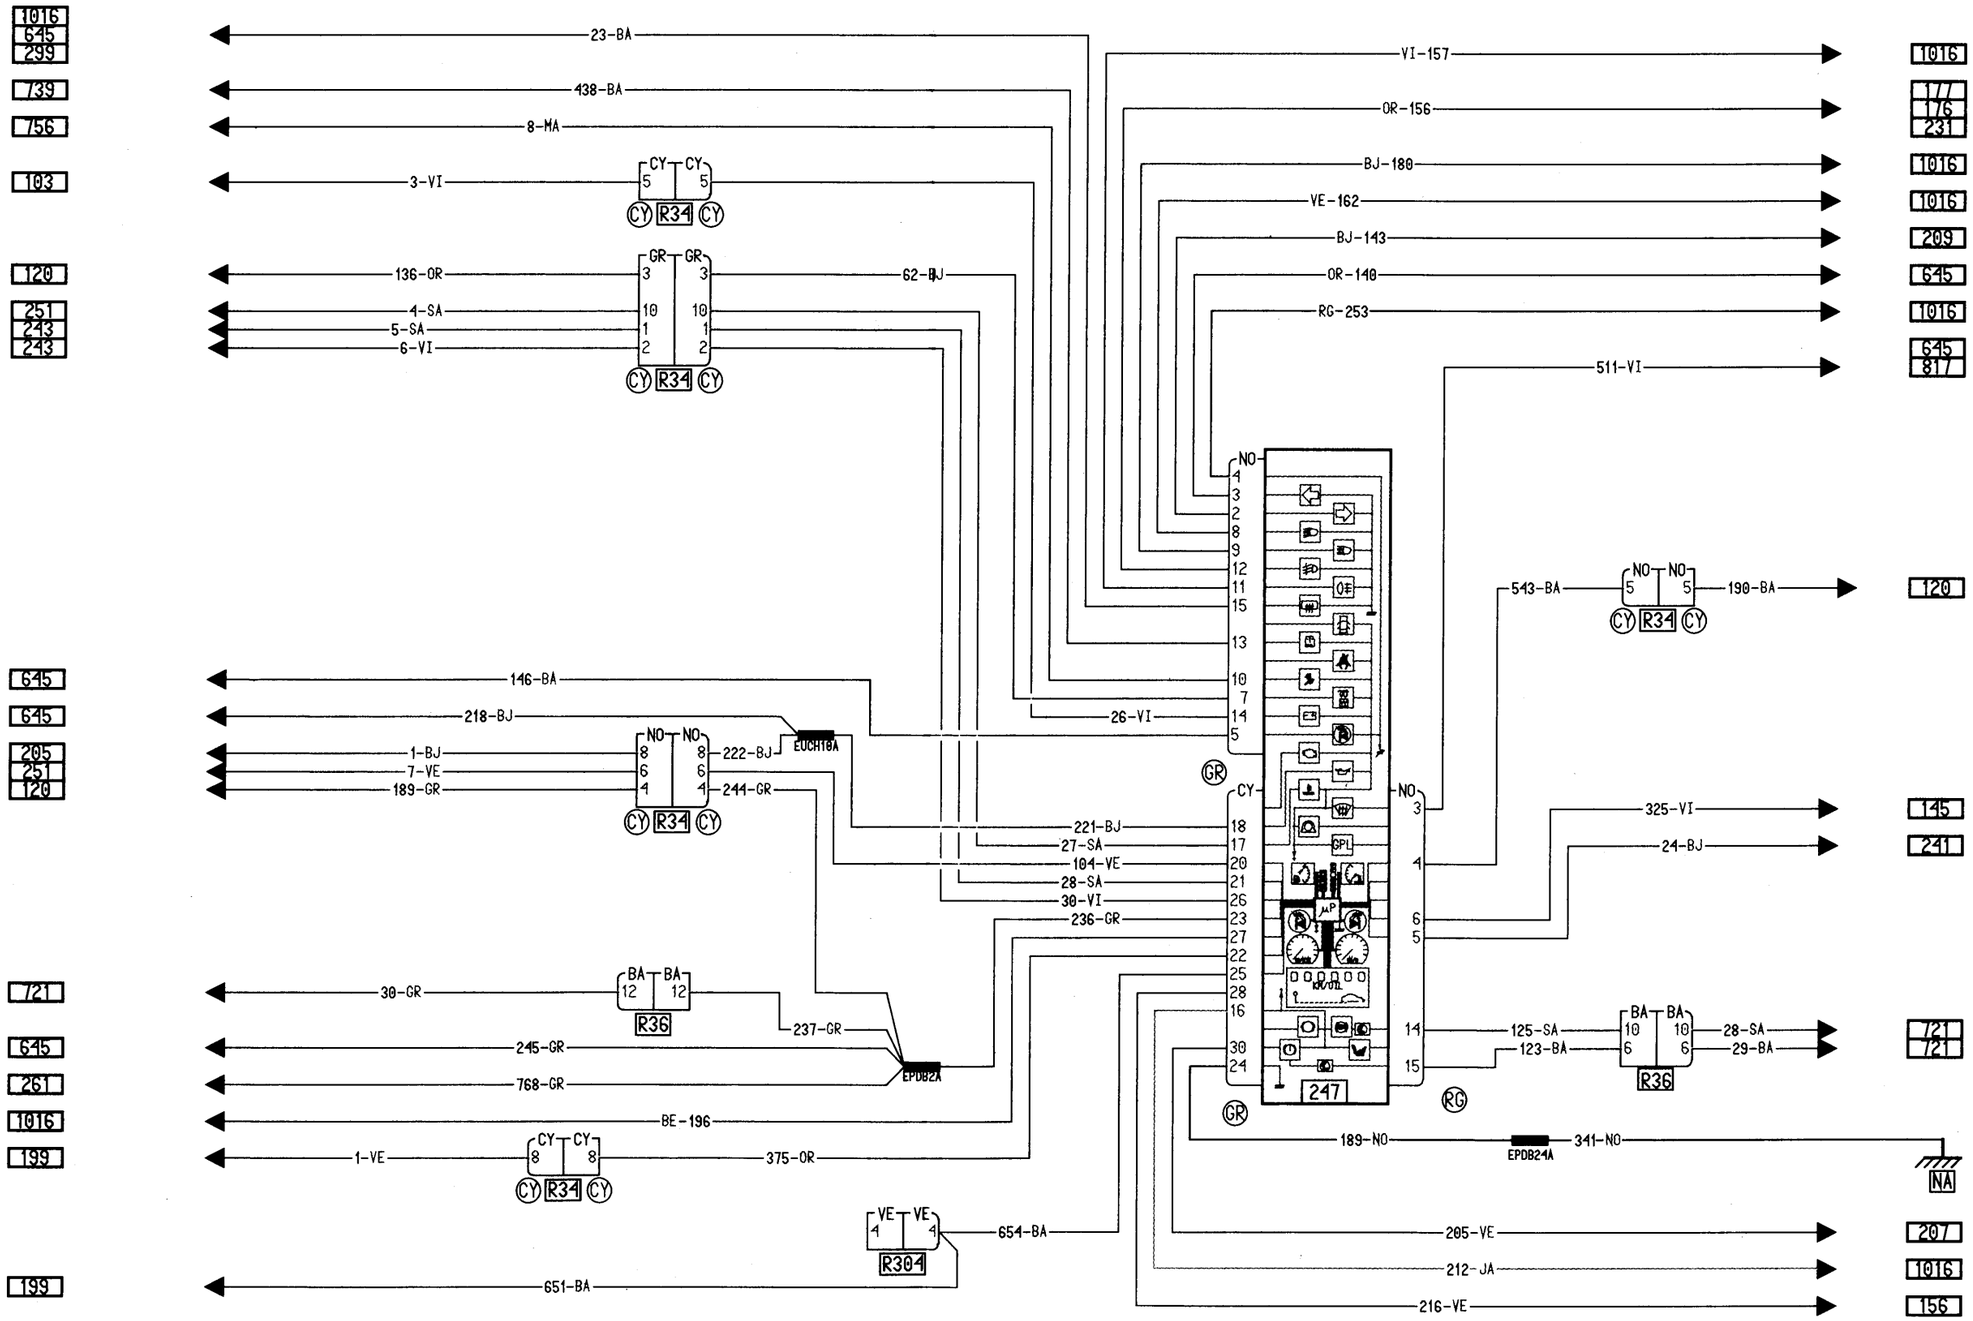
1016
645
299
739
756
103
120
251
243
243
645
645
205
251
120
721
645
251
1016
199
199
23-BA
438-BA
8-MA
3-VI
136-OR
4-SA
5-SA
6-VI
62-BJ
146-BA
218-BJ
1-BJ
7-VE
189-GR
222-BJ
244-GR
EUCH10A
30-GR
237-GR
245-GR
768-GR
EPDB2A
BE-196
1-VE
375-OR
654-BA
651-BA
26-VI
221-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
VI-157
OR-156
BJ-180
VE-162
BJ-143
OR-140
RG-253
511-VI
543-BA
190-BA
325-VI
24-BJ
125-SA
123-BA
28-SA
29-BA
189-NO
341-NO
EPDB21A
205-VE
212-JA
216-VE
1016
177
176
231
1016
1016
209
645
1016
645
817
120
145
241
721
721
207
1016
156
NA
247
R34
R36
R304
CY
GR
NO
BA
VE
RG

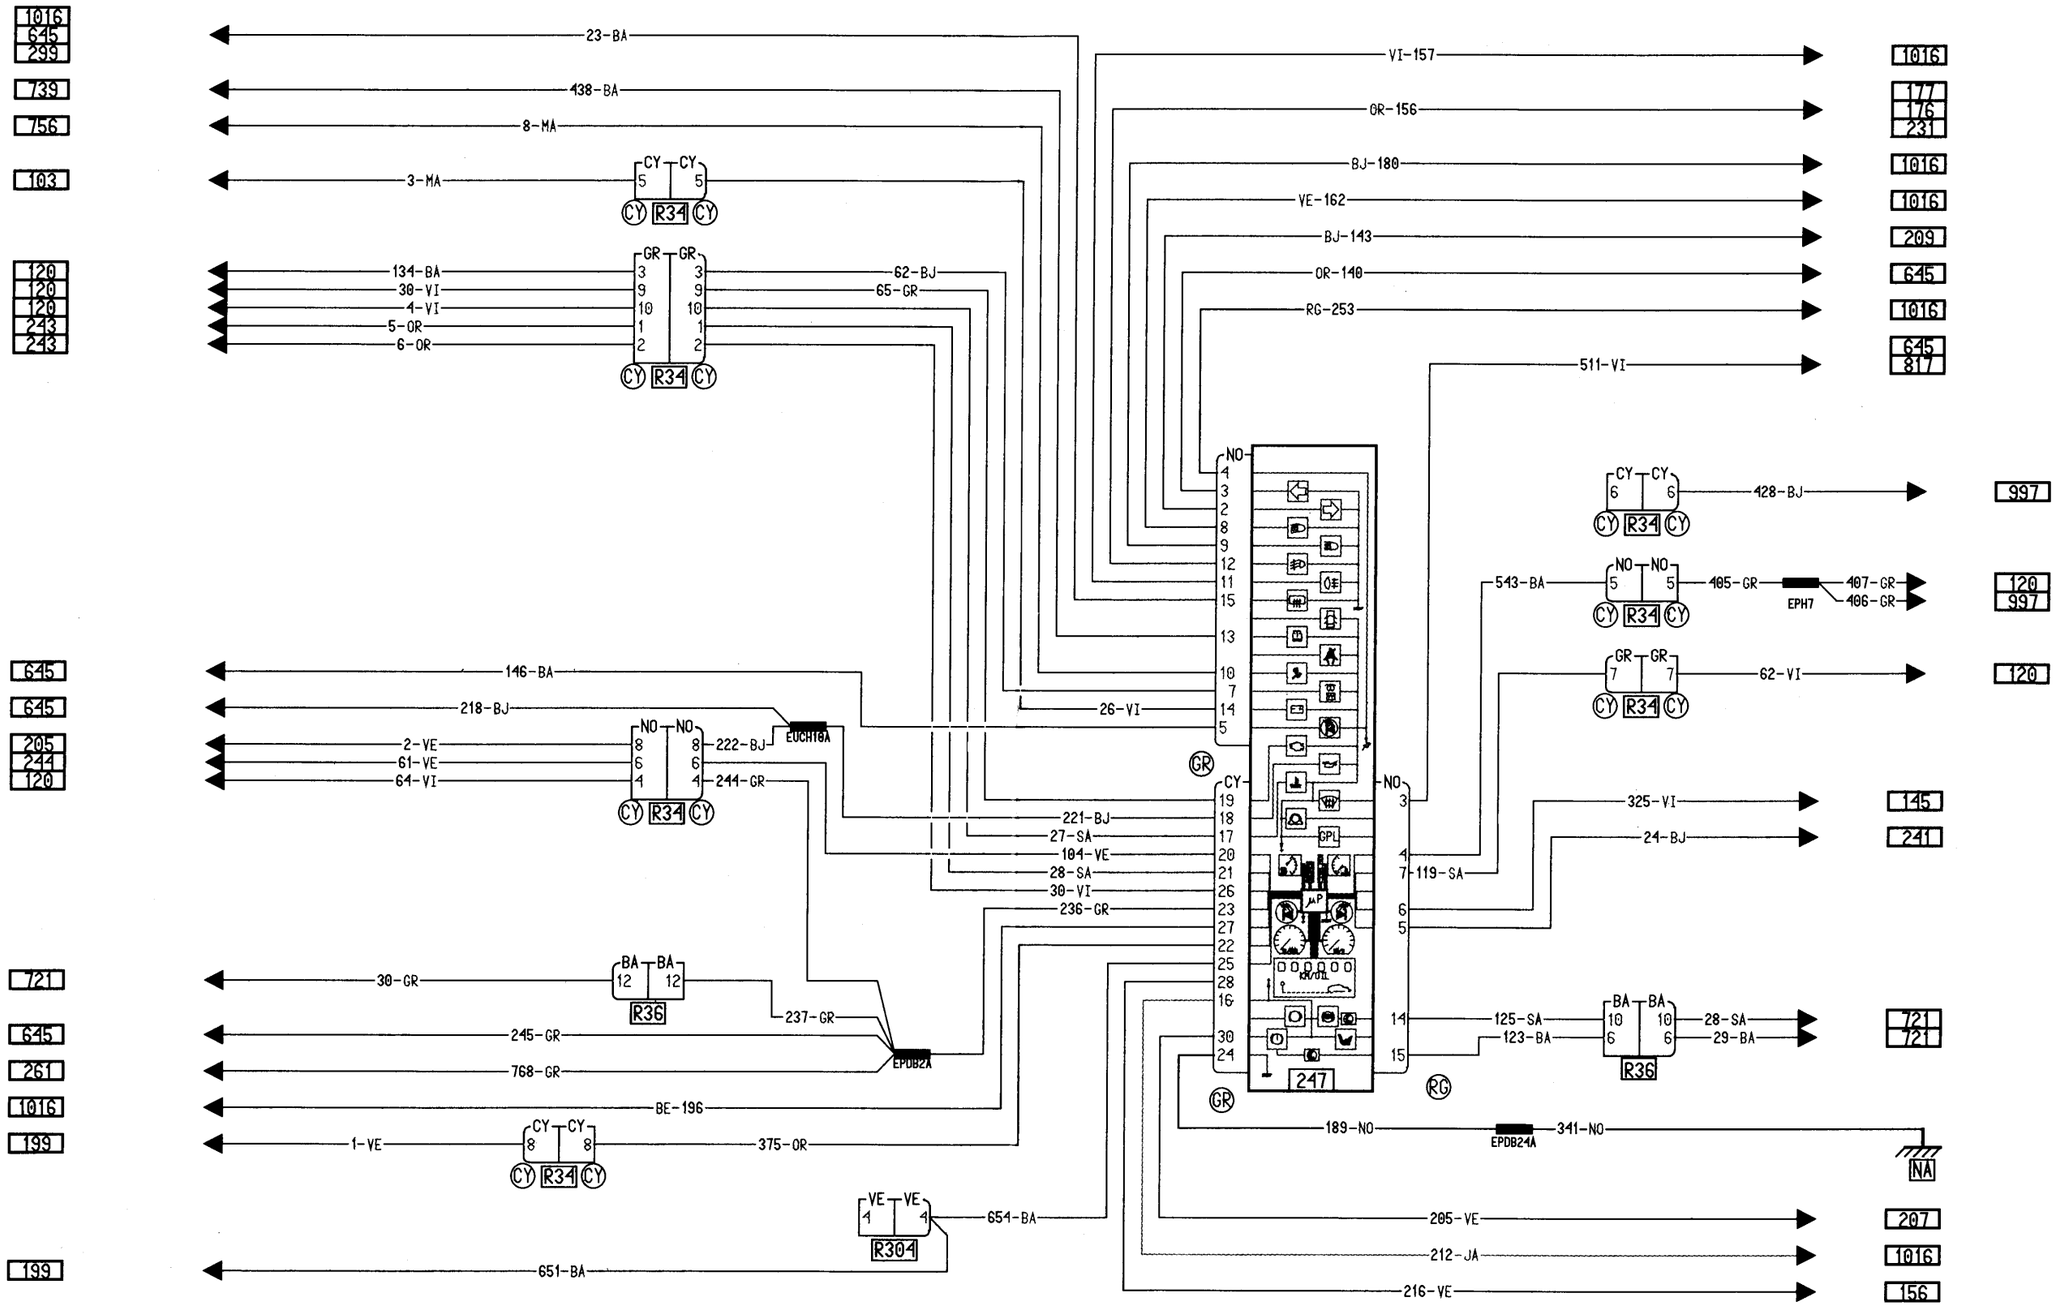

1016 645 299
739
756
103
120 120 120 243 243
645 645 205 244 120
721
645 261 1016 199
199
23-BA
438-BA
8-MA
3-MA
134-BA
30-VI
4-VI
5-OR
6-OR
146-BA
218-BJ
2-VE
61-VE
64-VI
30-GR
245-GR
768-GR
1-VE
651-BA
CY 5 5 CY R34
GR 3 9 10 1 2 3 9 10 1 2 GR R34
NO 8 6 4 8 6 4 NO R34
BA 12 12 BA R36
CY 8 8 CY R34
VE 1 4 VE R304
EUCH18A
EPDB2A
62-BJ
65-GR
222-BJ
244-GR
237-GR
654-BA
VI-157
OR-156
BJ-180
VE-162
BJ-143
OR-140
RG-253
511-VI
221-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
26-VI
375-OR
BE-196
NO 4 3 2 8 9 12 11 15 13 10 7 14 5
CY 19 18 17 20 21 26 23 27 22 25 28 16 30 24
NO 3 4 7 6 5 14 15
247
GR
RG
1016
177 176 231
1016
1016
209
645
1016
645 817
CY 6 6 CY R34
428-BJ
997
NO 5 5 NO R34
543-BA
105-GR
EPH7
407-GR
406-GR
120 997
GR 7 7 GR R34
62-VI
120
325-VI
24-BJ
145
241
119-SA
BA 10 6 10 6 BA R36
125-SA
123-BA
28-SA
29-BA
721 721
189-NO
EPDB24A
341-NO
NA
205-VE
212-JA
216-VE
207
1016
156

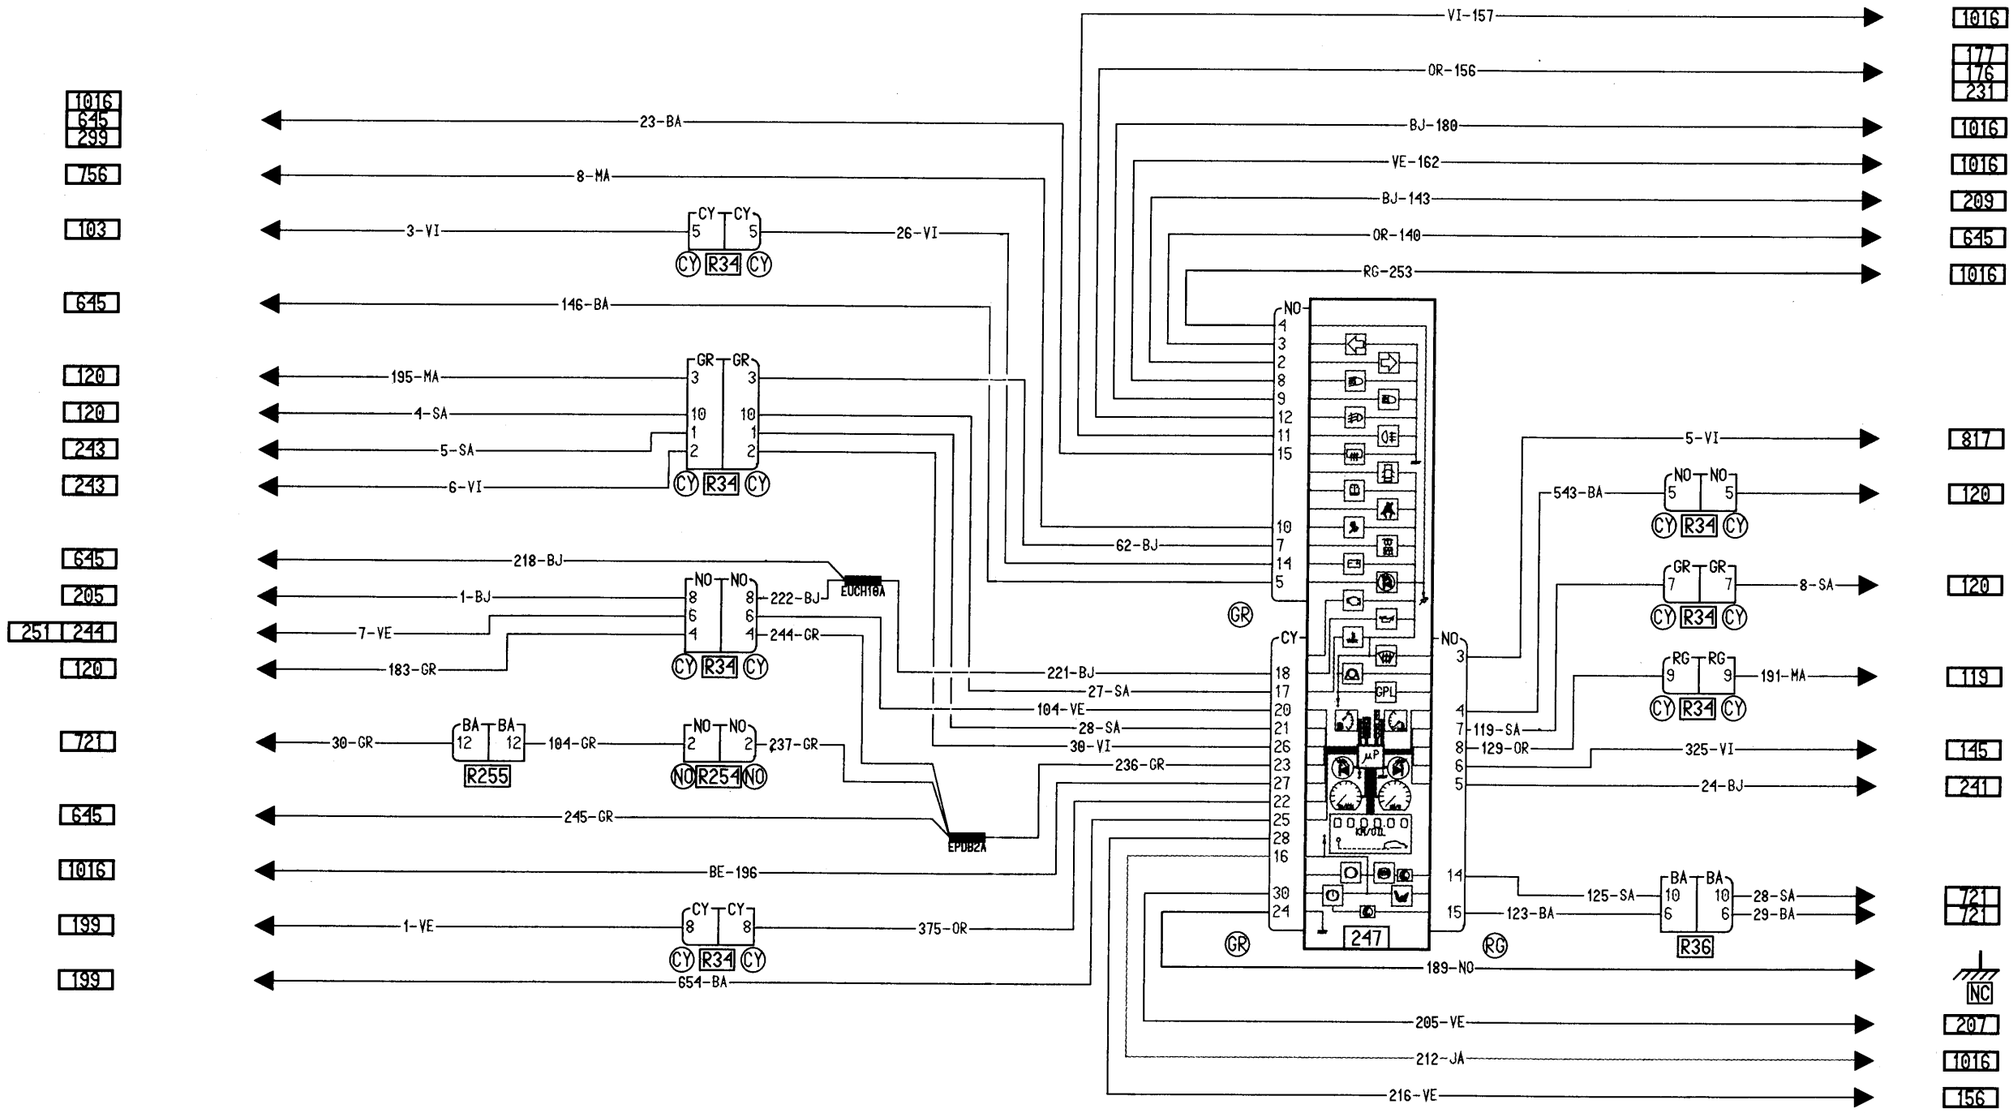
1016
645
239
756
103
645
120
120
243
243
645
205
251 244
120
721
645
1016
199
199
23-BA
8-MA
3-VI
26-VI
CY CY
5 5
CY R34 CY
146-BA
GR GR
195-MA
4-SA
5-SA
6-VI
3 3
10 10
1 1
2 2
CY R34 CY
218-BJ
1-BJ
7-VE
183-GR
222-BJ
244-GR
NO NO
8 8
6 6
4 4
CY R34 CY
EUCH10A
30-GR
BA BA
12 12
R255
104-GR
NO NO
2 2
NO R254 NO
237-GR
245-GR
EPDB2A
BE-196
1-VE
CY CY
8 8
CY R34 CY
375-OR
654-BA
VI-157
OR-156
BJ-180
VE-162
BJ-143
OR-140
RG-253
62-BJ
221-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
NO
4
3
2
8
9
12
11
15
10
7
14
5
GR
CY
18
17
20
21
26
23
27
22
25
28
16
30
24
GPL
μP
KM/OIL
247
1016
177
176
231
1016
1016
209
645
1016
5-VI
543-BA
NO NO
5 5
CY R34 CY
GR GR
7 7
8-SA
CY R34 CY
RG RG
9 9
191-MA
CY R34 CY
NO
3
4
7 119-SA
8 129-OR
6
5
325-VI
24-BJ
14
15
125-SA
123-BA
RG
BA BA
10 10
6 6
28-SA
29-BA
R36
189-NO
205-VE
212-JA
216-VE
817
120
120
119
145
241
721
721
NC
207
1016
156

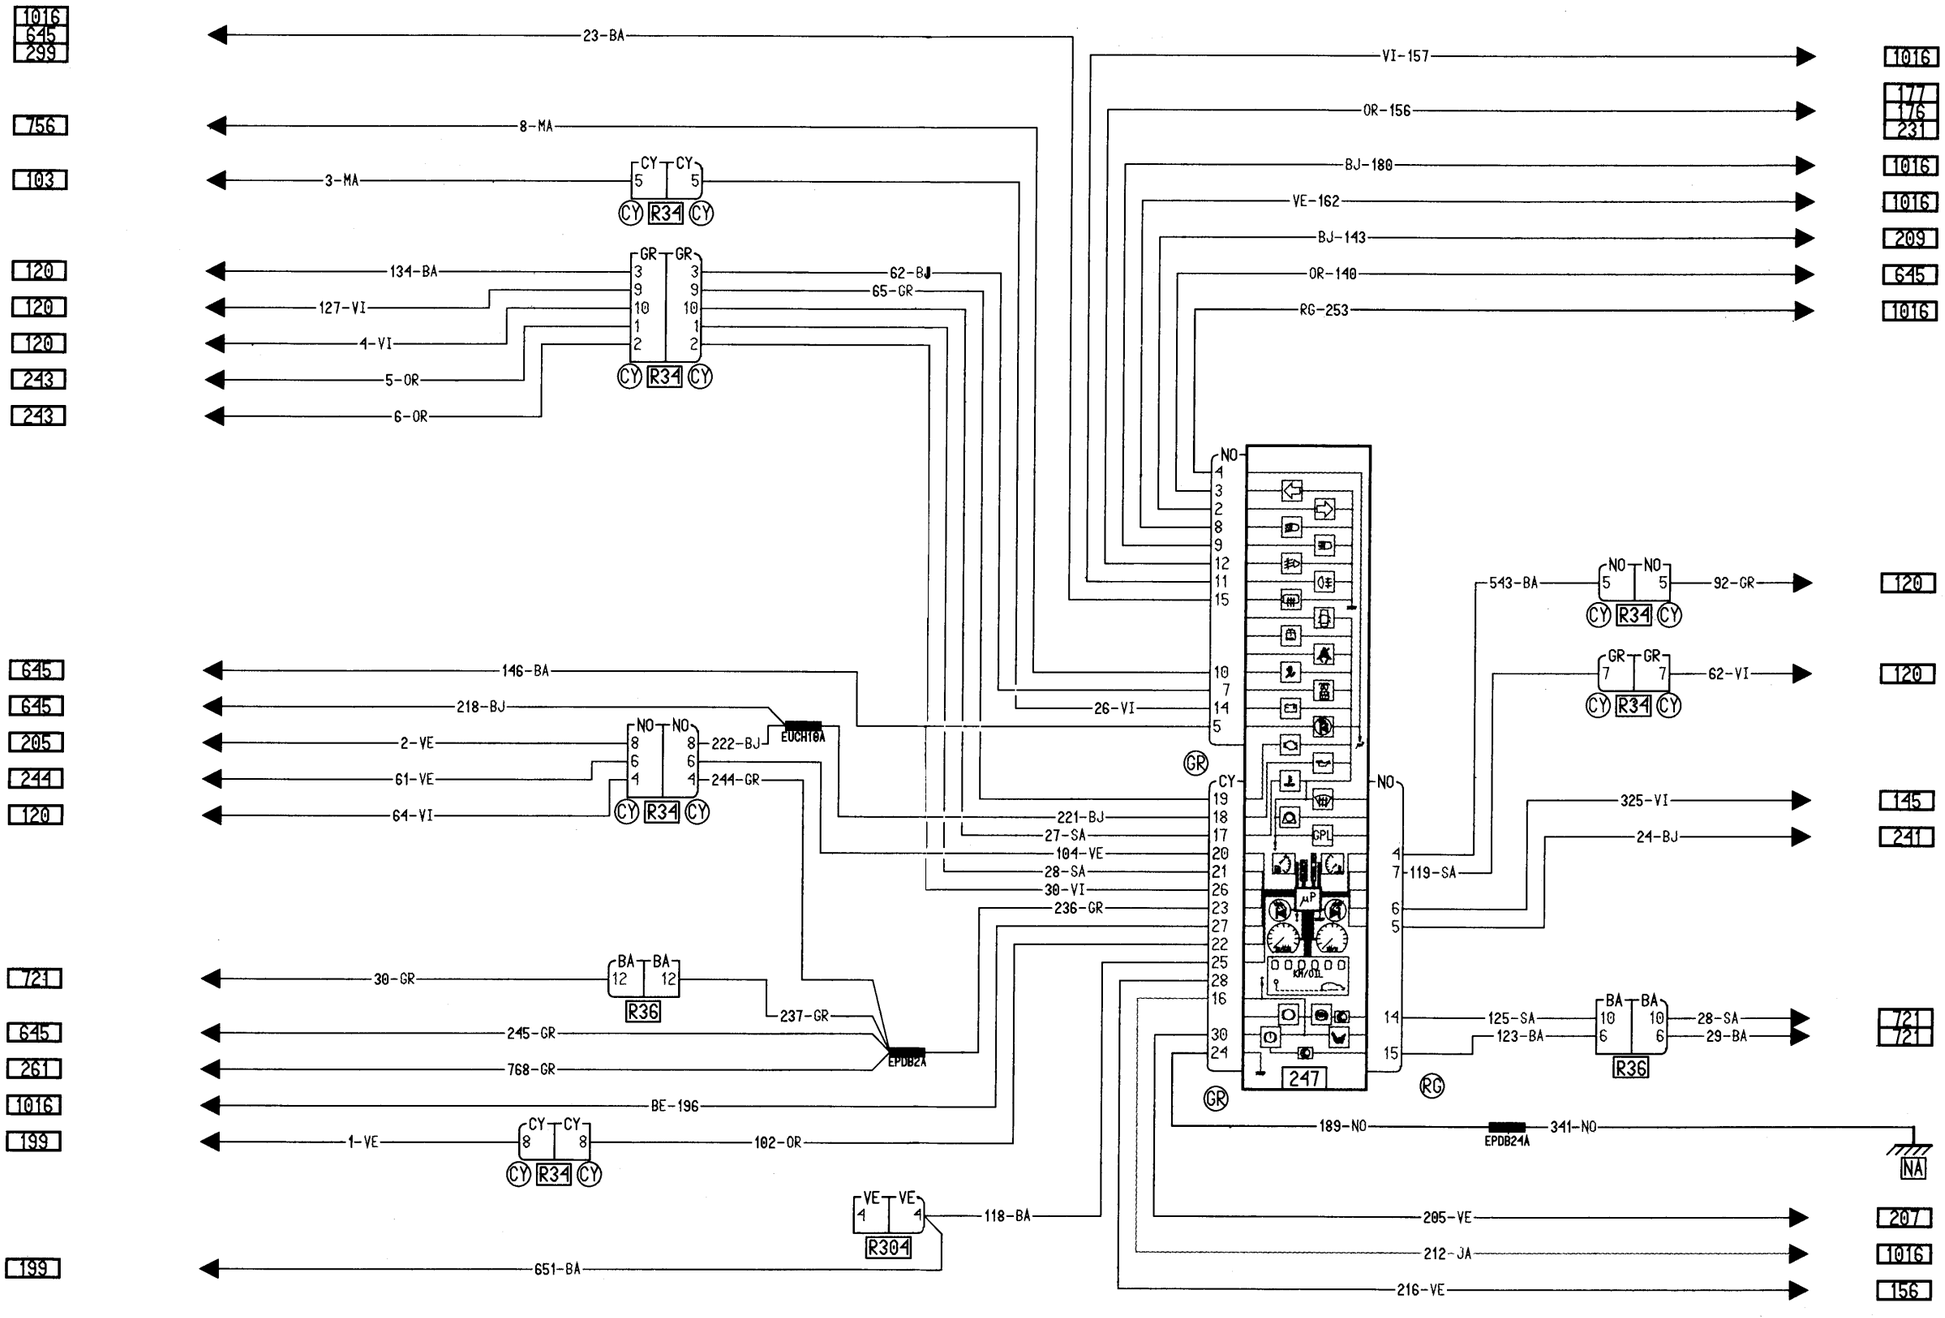
1016
645
299
756
103
120
120
120
243
243
23-BA
8-MA
3-MA
CY 5 CY 5
CY R34 CY
134-BA
127-VI
4-VI
5-OR
6-OR
GR 3 GR 3
9 9
10 10
1 1
2 2
CY R34 CY
62-BJ
65-GR
VI-157
OR-156
BJ-180
VE-162
BJ-143
OR-140
RG-253
1016
177
176
231
1016
1016
209
645
1016
NO
4
3
2
8
9
12
11
15
10
7
14
5
GR
CY
19
18
17
20
21
26
23
27
22
25
28
16
30
24
247
NO
4
7
6
5
14
15
RG
GR
26-VI
221-BJ
27-SA
104-VE
28-SA
30-VI
236-GR
543-BA
NO 5 NO 5
CY R34 CY
92-GR
120
GR 7 GR 7
CY R34 CY
62-VI
120
325-VI
24-BJ
145
241
119-SA
645
645
205
244
120
146-BA
218-BJ
2-VE
61-VE
64-VI
NO 8 NO 8
6 6
4 4
CY R34 CY
222-BJ
244-GR
EUCH10A
721
645
261
1016
199
30-GR
245-GR
768-GR
BE-196
1-VE
BA 12 BA 12
R36
237-GR
EPDB2A
CY 8 CY 8
CY R34 CY
102-OR
BA 10 BA 10
6 6
R36
125-SA
123-BA
28-SA
29-BA
721
721
189-NO
341-NO
EPDB24A
NA
VE 4 VE 4
R304
118-BA
199
651-BA
205-VE
212-JA
216-VE
207
1016
156


SEATBELT LIGHT

X642
00

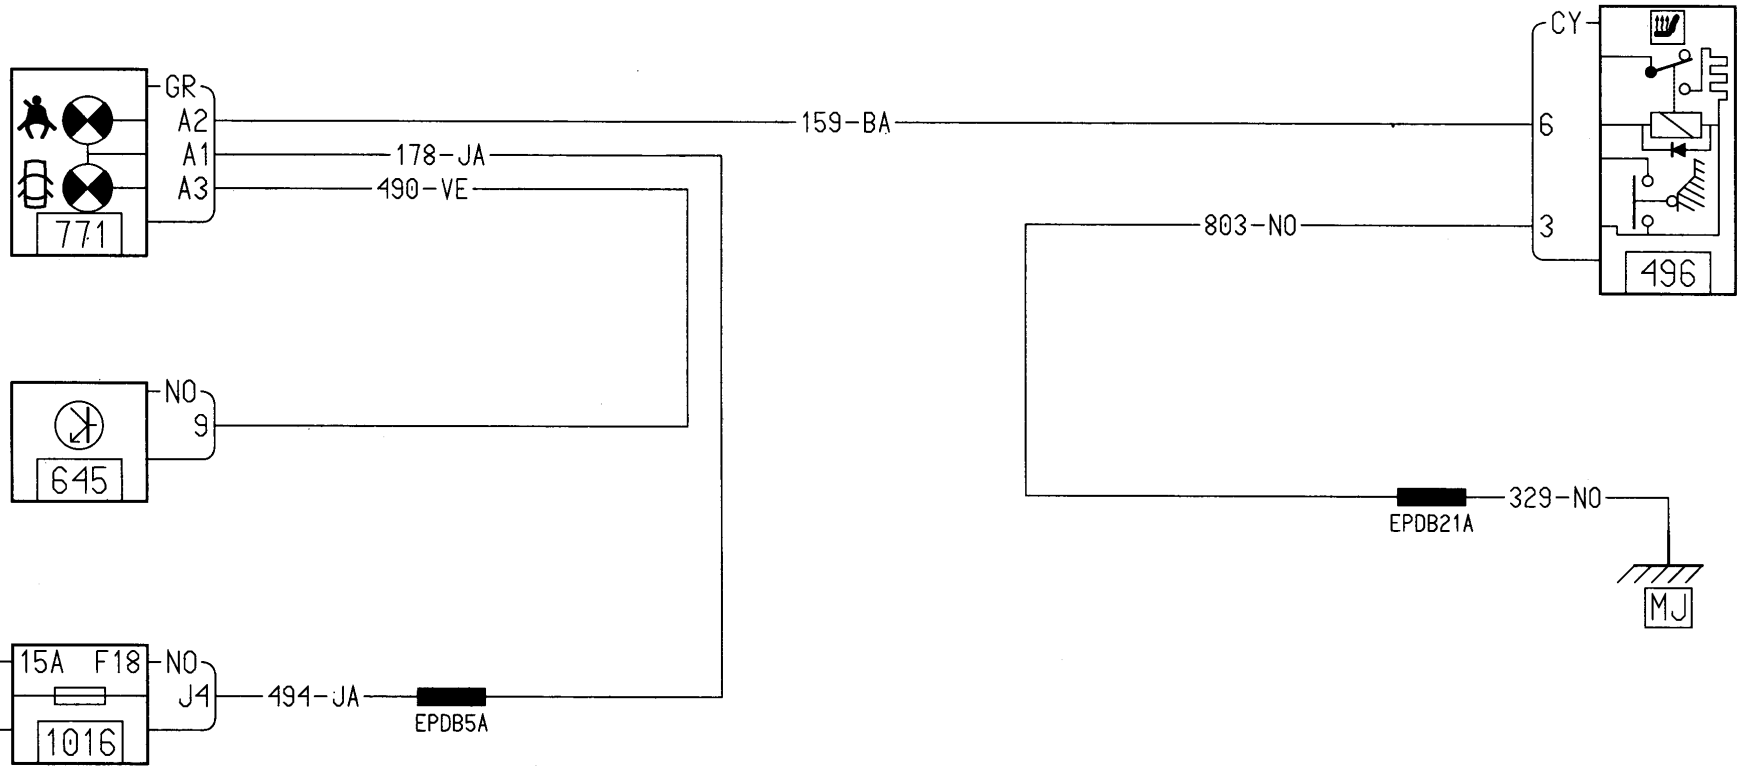

MIN WASHER LIQUID WARNING LIGHT

X642
00

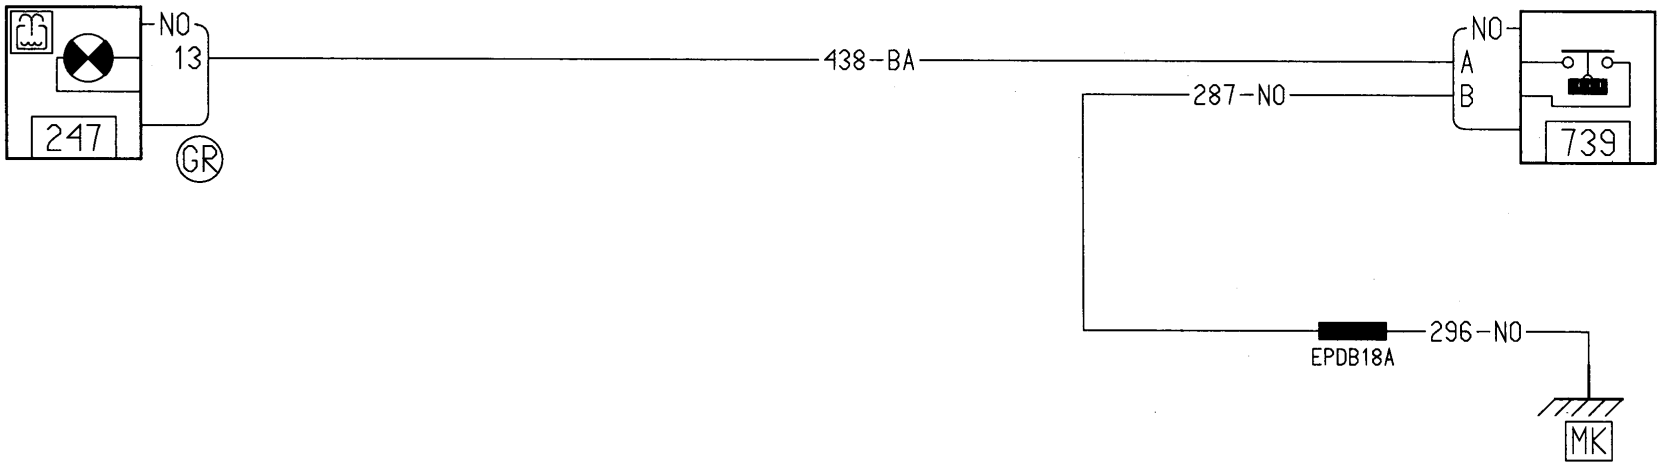


HAND BRAKE AND MIN BRAKE FLUID WARNING LIGHTS

B64,D64,K25,L64


X642

00

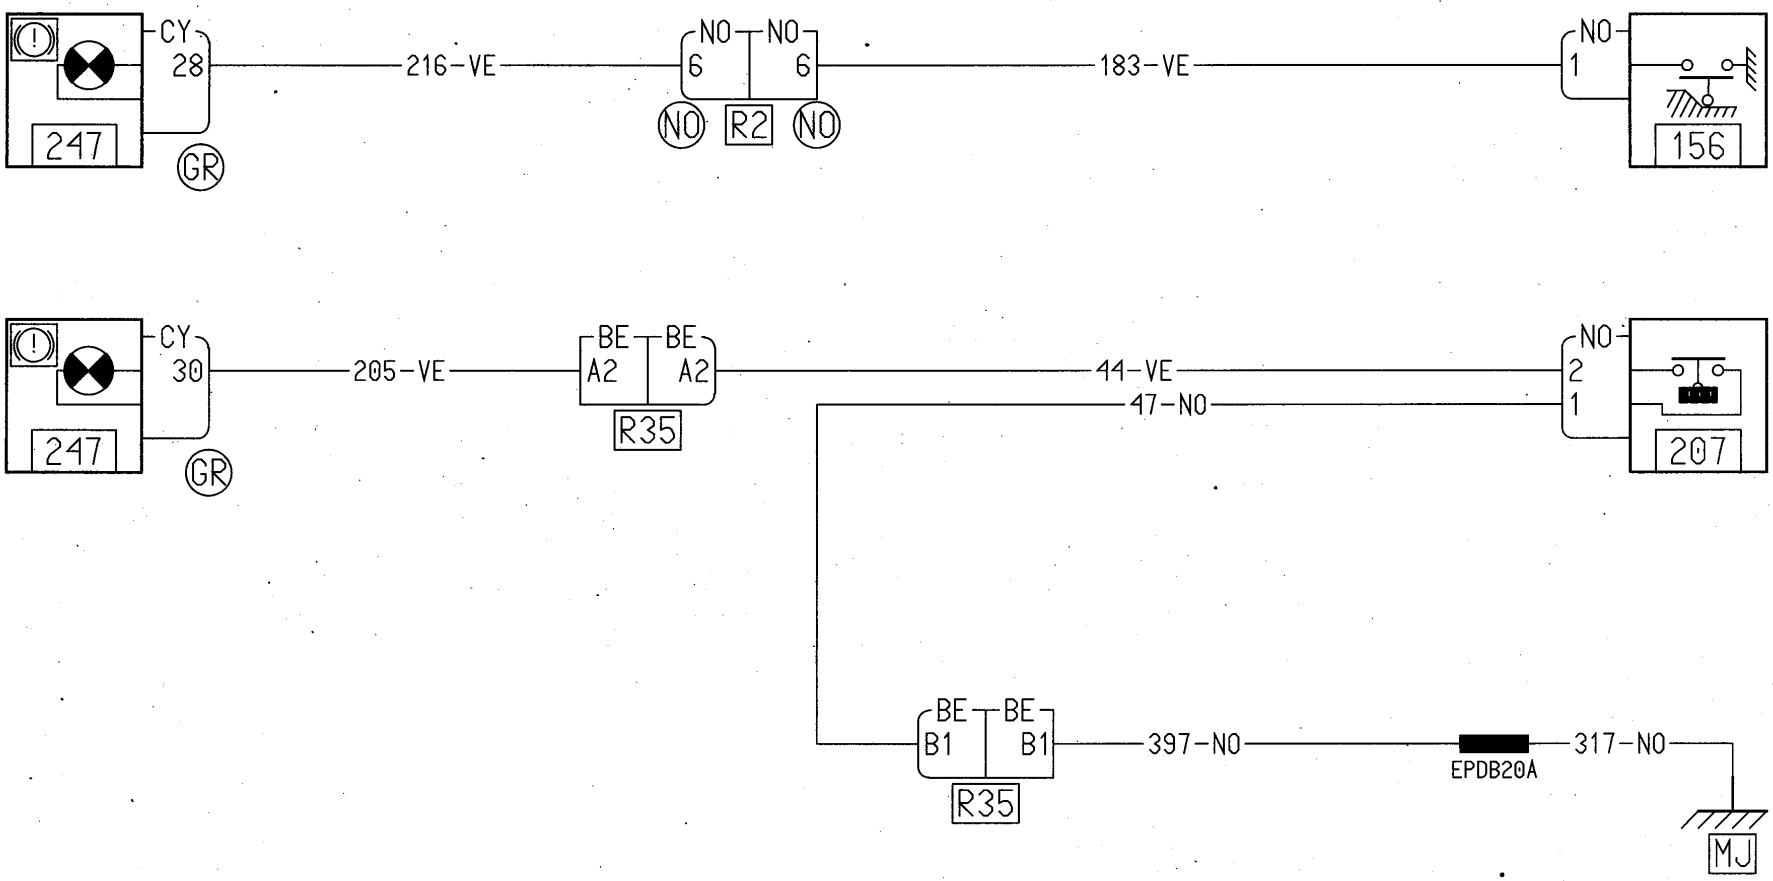

HAND BRAKE AND MIN BRAKE FLUID WARNING LIGHTS


X642
00

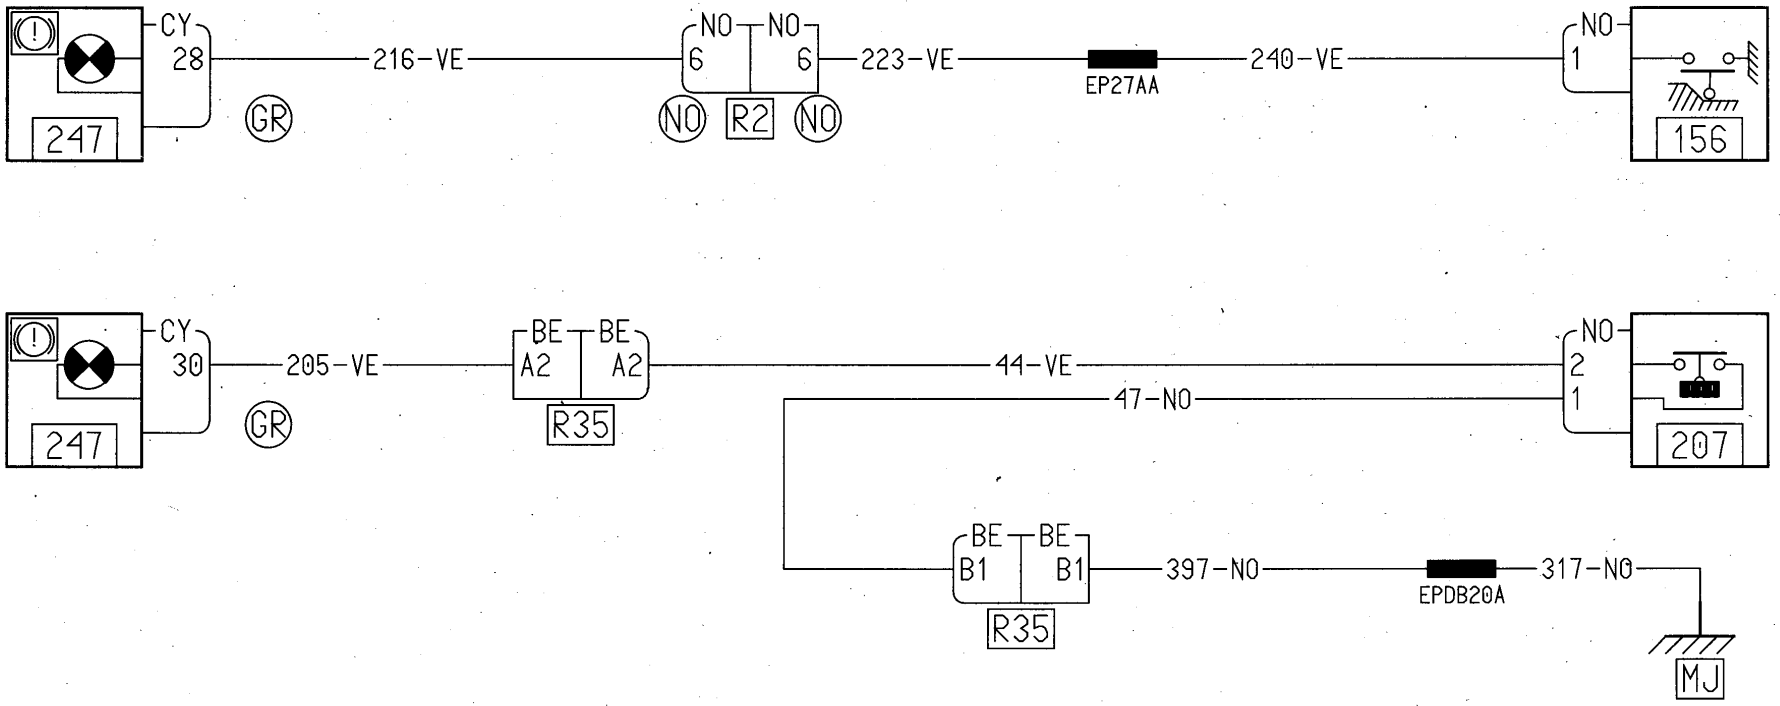



HAND BRAKE AND MIN BRAKE FLUID WARNING LIGHTS

E64/CATOEL

X642
00

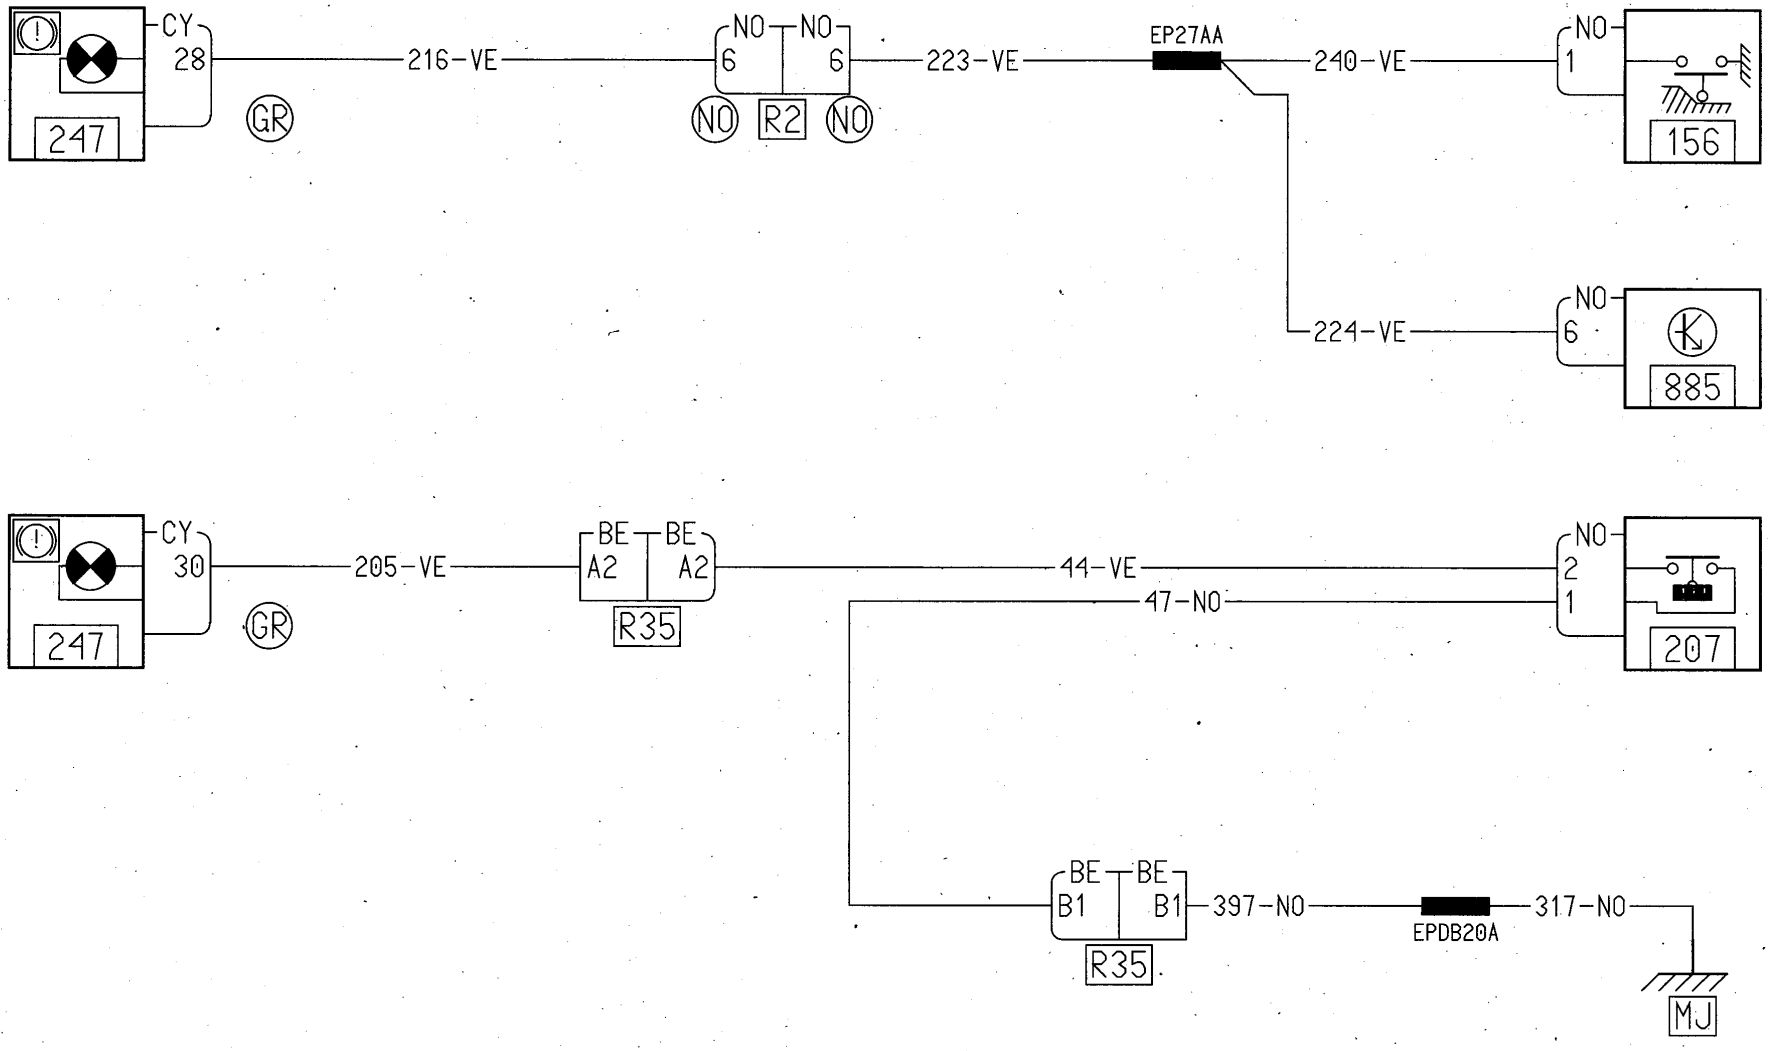

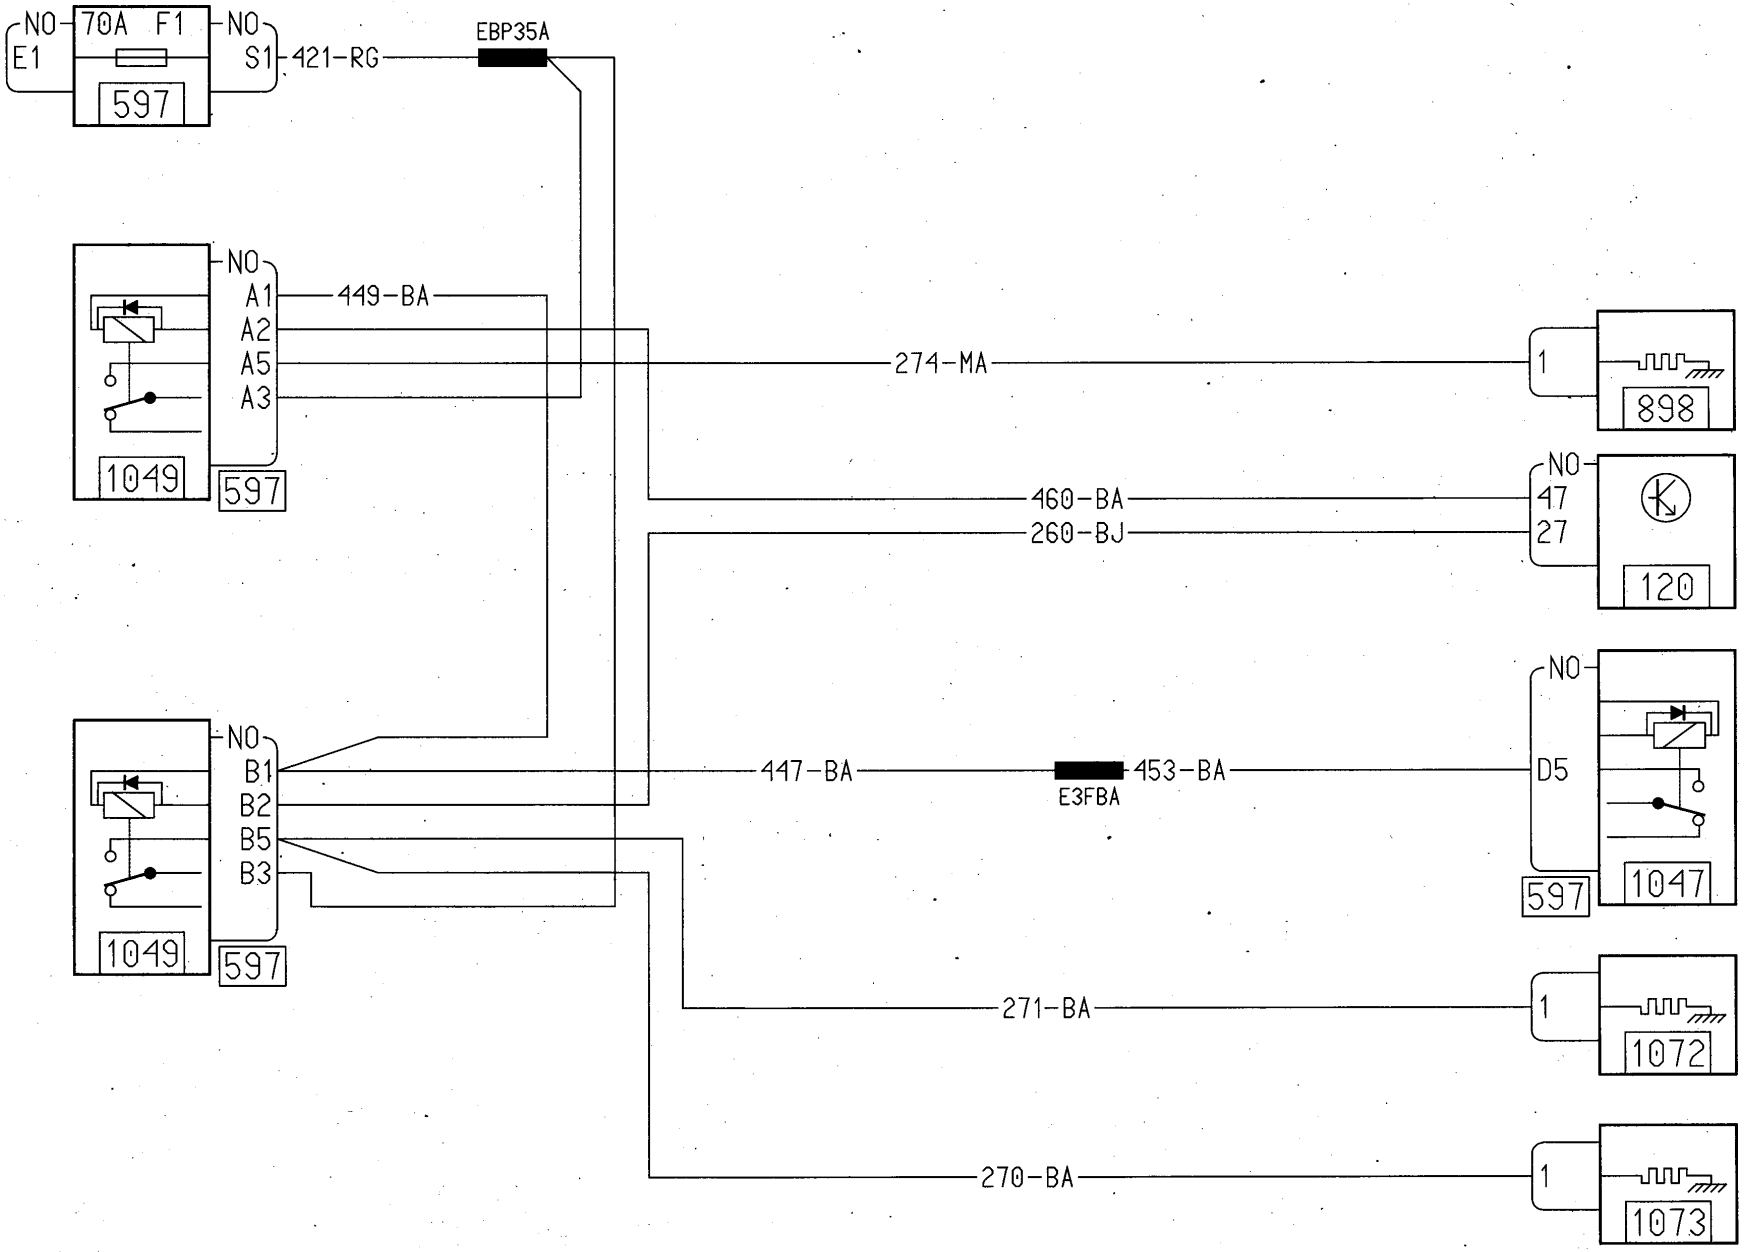

NO
E1
70A F1
NO
S1
421-RG
597
EBP35A
NO
A1
A2
A5
A3
449-BA
1049
597
274-MA
460-BA
260-BJ
1
898
NO
47
27
120
NO
B1
B2
B5
B3
1049
597
447-BA
453-BA
E3FBA
NO
D5
597
1047
271-BA
1
1072
270-BA
1
1073

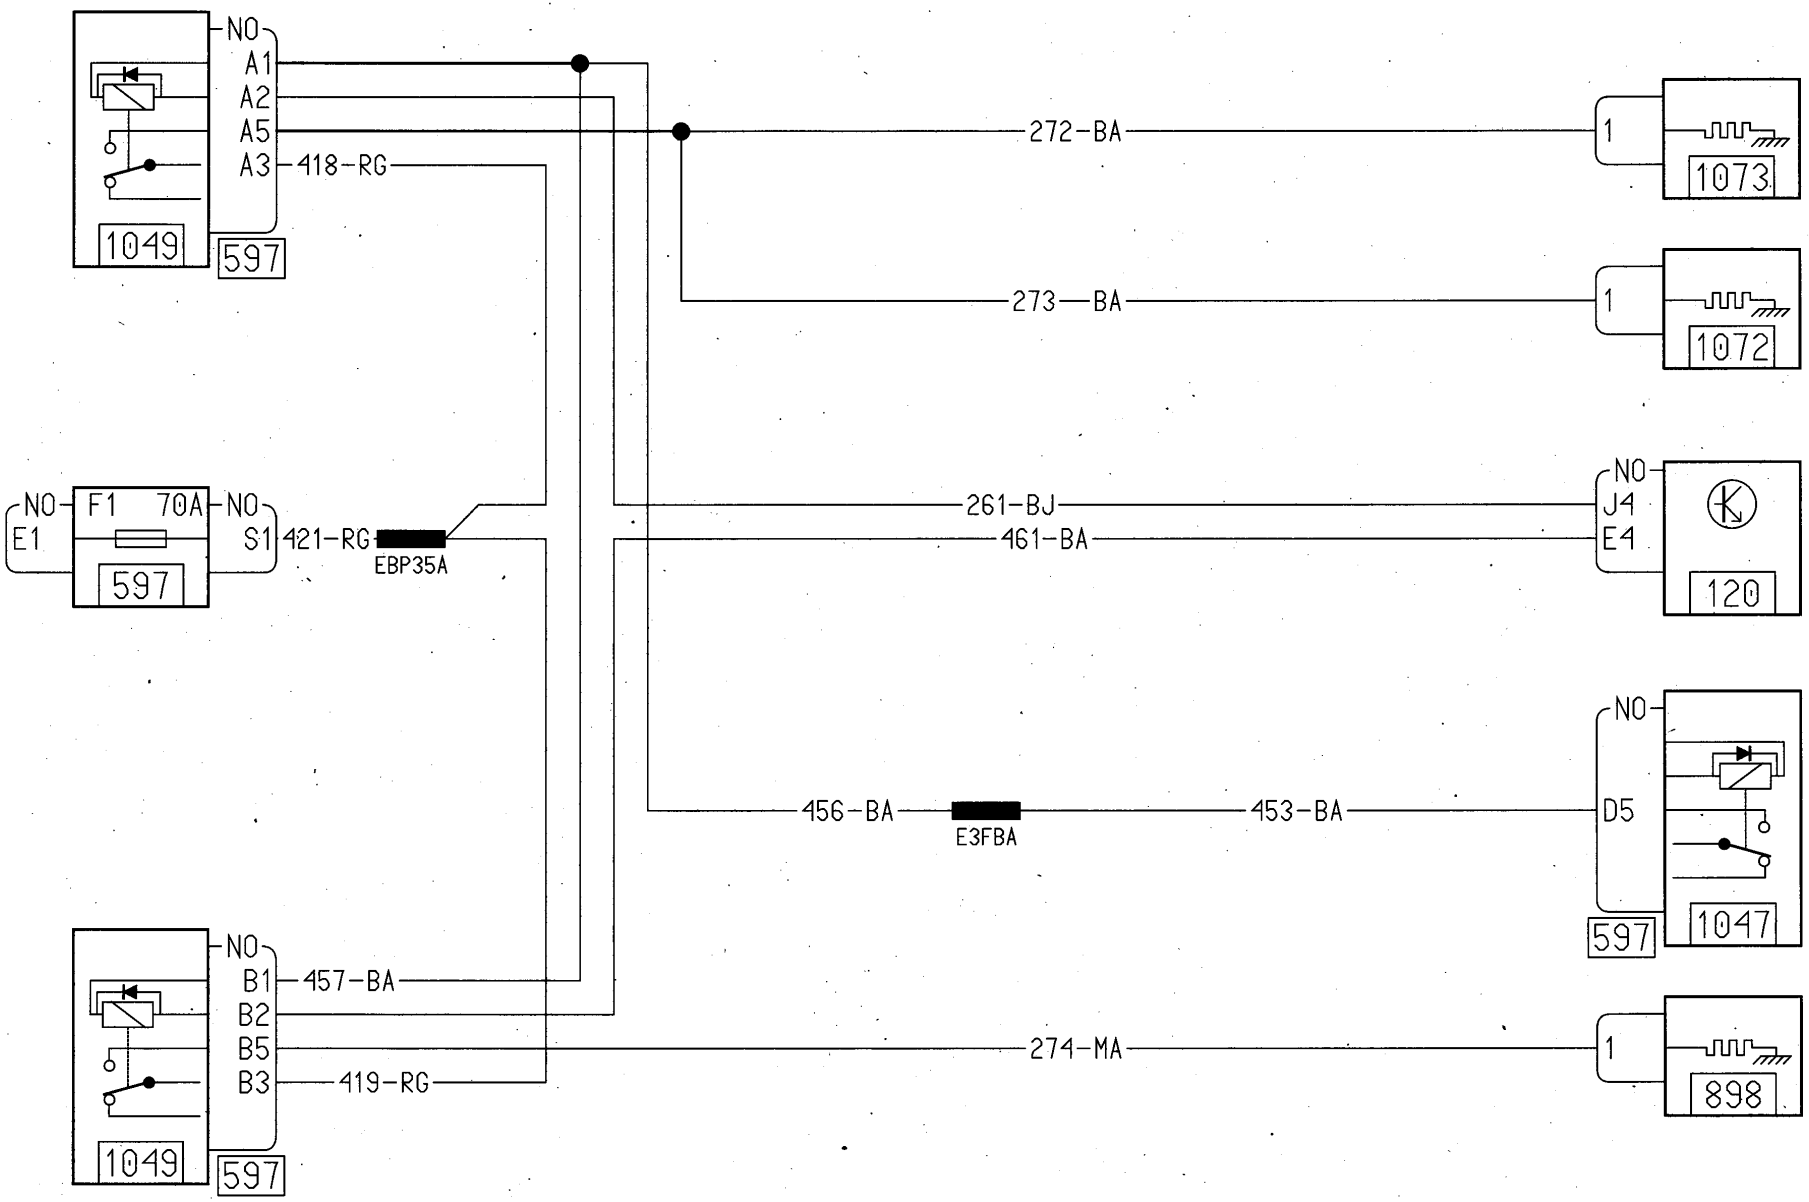
NO
A1
A2
A5
A3
418-RG
1049
597
272-BA
1
1073
273-BA
1
1072
NO
F1 70A
NO
E1
S1
421-RG
EBP35A
597
261-BJ
461-BA
NO
J4
E4
120
456-BA
E3FBA
453-BA
NO
D5
597
1047
NO
B1
B2
B5
B3
457-BA
419-RG
1049
597
274-MA
1
898


SUNROOF

B64/E2/CATOEL

X642

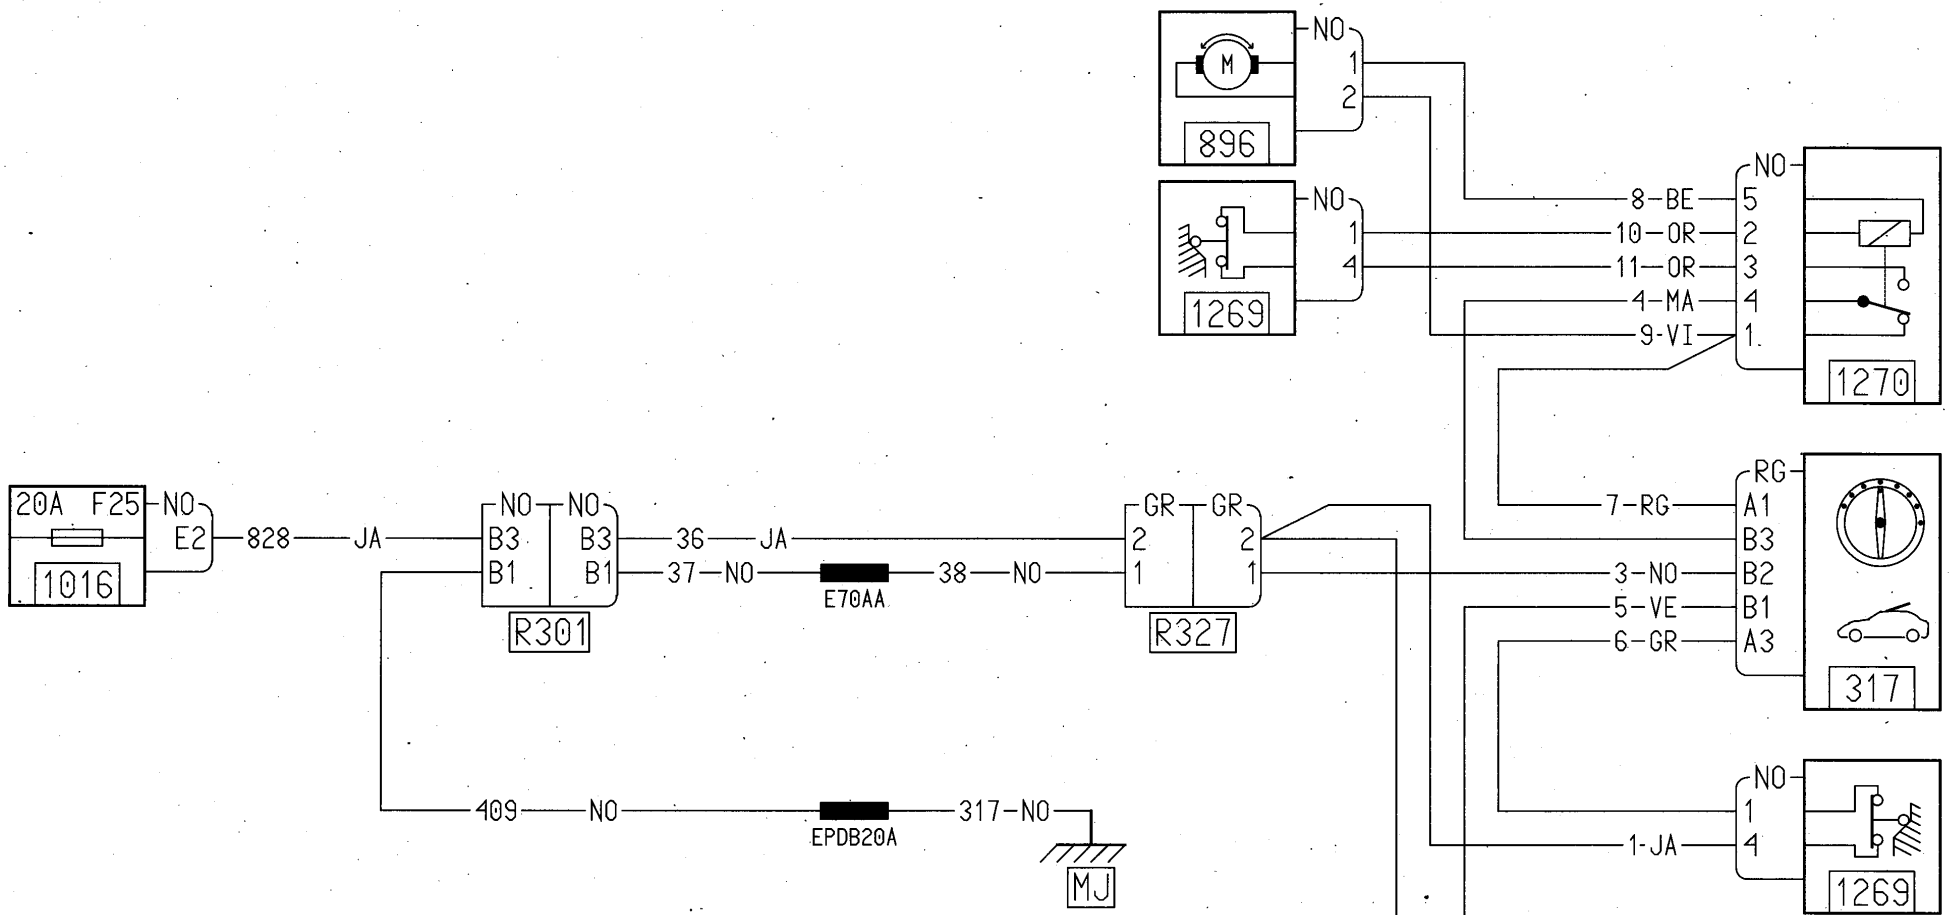

	ELECTRIC SUNROOF	X642
	TO	00

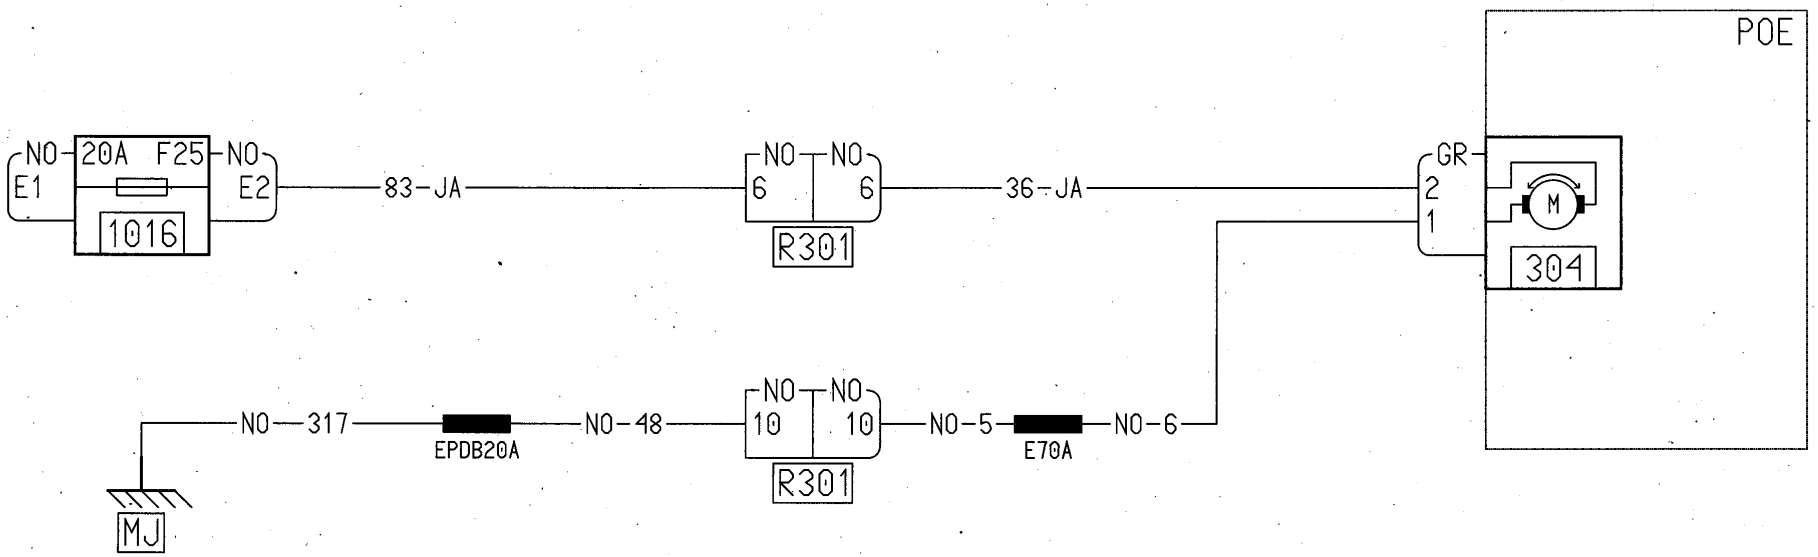


БЛОК ПРЕДОХРАНИТЕЛЕЙ В САЛОНЕ (1016)


Расположение


Блок расположен в салоне со стороны водителя.

Обозначение предохранителей

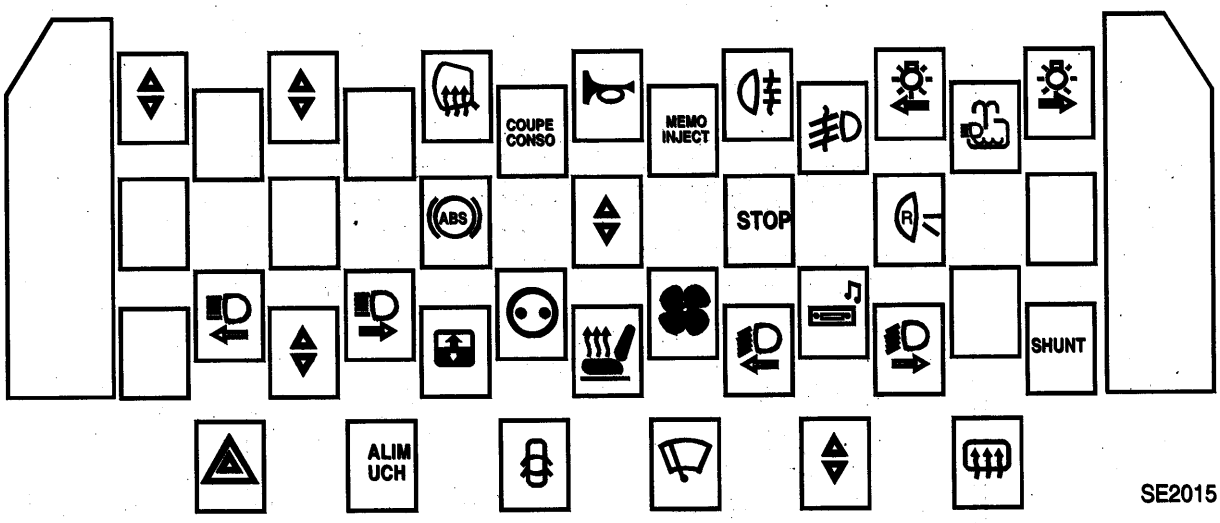

SE2015

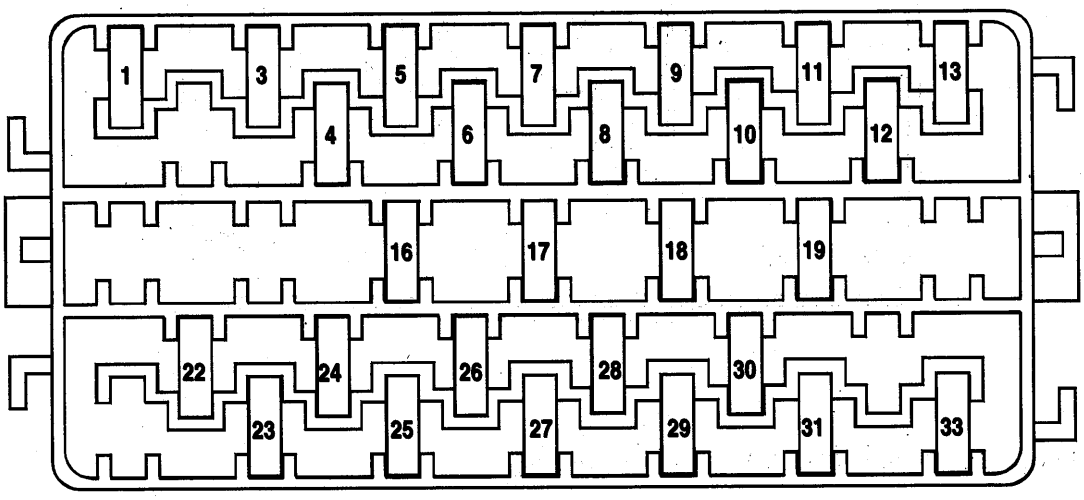

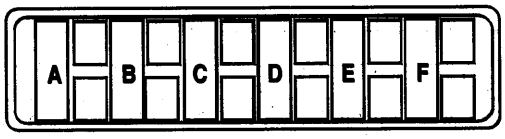

SE2016

ПРЕДОХРАНИТЕЛИ И РЕЛЕ

Цепи, защищаемые плавкими предохранителями (в зависимости от уровня комплектации)


№	Обозначение	Сила тока	Защищаемые цепи
F1		25 А	Электростеклоподъемник левой задней двери
F2		—	Не используется
F3		25 А	Электростеклоподъемник правой задней двери
F4		—	Не используется
F5		7,5 А	Элемент обогрева наружного зеркала заднего вида
F6	COUPE CONSO	15 А	Предохранитель потребителей электроэнергии — Наружные зеркала заднего вида с электроприводом — Часы — Аудиосистема — Дисплей — Дисплей аудиосистемы — Антенна с электроприводом (E64)
F7		15 А	Звуковой сигнал
F8	MEMO INJECT	5 А	ЭБУ системы впрыска — Реле электровентилятора системы охлаждения двигателя — Диагностический разъем — ЭБУ АКП — Щиток приборов
F9		5 А	Задний противотуманный фонарь
F10		15 А	Противотуманные фары
F11		7,5 А	Левые габаритные огни
F12		10 А	Электродвигатель омывателя фар
F13		7,5 А	Правые габаритные огни
F14			Не используется
F15			Не используется
F16		5 А	ЭБУ АБС
F17		25 А	Электростеклоподъемник двери пассажира
F18	STOP	15 А	Стоп-сигналы — Освещение дневного движения — Выключатель блокировки задних электростеклоподъемников — Диагностический разъем — Щиток приборов — Сигнальные лампы указателей поворота на учебном автомобиле — Реле «+» после замка зажигания — Сигнальная лампа включения экономичного спортивного режима АКП — Сигнальная лампа незастегнутого ремня безопасности и незакрытых открывающихся элементов кузова — Реле обогрева ветрового стекла
F19		15 А	ЦЭКБС (цепи «+» после замка зажигания, питания и электромагнитного реверса торможения электродвигателя очистителя заднего стекла, насоса омывателя стекол) — Лампы света заднего хода — ЭБУ электропривода складной крыши (E64)
F20		—	Не используется
F21		—	Не используется
F22		10 А	Дальний свет левой фары

№	Обозначение	Сила тока	Защищаемые цепи
F23		25 А	Электростеклоподъемник двери водителя (только при уровне комплектации 1)
F24		10 А	Дальний свет правой фары
F25		20 А	Люк крыши
F26		—	Не используется
F27		15 А	Элементы обогрева сидений
F28		20 А	Система отопления и вентиляции салона
F29		10 А	Ближний свет левой фары
F30		15 А	Часы — Прикуриватель — Освещение дневного движения — Аудиосистема — Дисплей аудиосистемы
F31		10 А	Ближний свет правой фары
F32		—	Не используется
F33	**SHUNT**	Шунт	Сдвоенные фары (BDE64)
FA		15 А	Указатели поворота в режимах указания поворота и аварийной сигнализации
FB	**ALIM UCH**	5 А	Цепь питания ЦЭКБС
FC		20 А	Центральный замок
FD		20 А	Электродвигатель очистителя ветрового стекла
FE		25 А	Импульсный электростеклоподъемник двери водителя (только при уровне комплектации 2)
FF		30 А	Элемент обогрева заднего стекла — Элемент обогрева наружных зеркал заднего вида

БЛОК РЕЛЕ В САЛОНЕ (645)

Расположение

Блок расположен в салоне со стороны водителя.

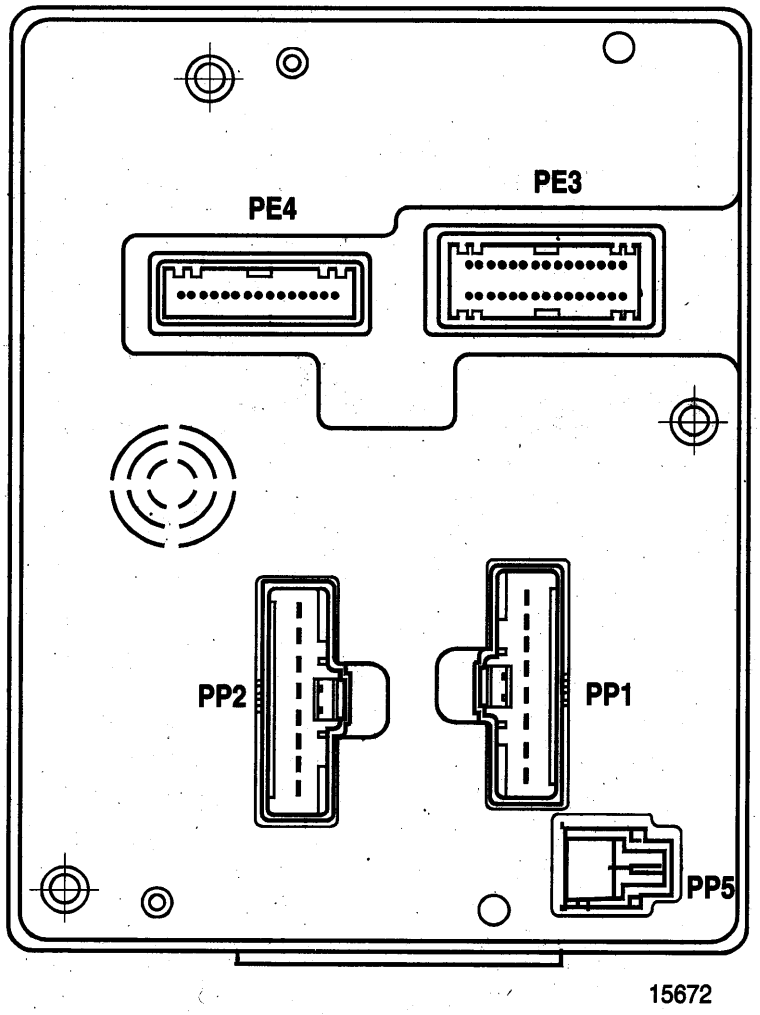

Назначение (в зависимости от уровня комплектации автомобиля)

PP1 (8-контактный разъем)

№ контакта	Назначение
1	Электронная «масса»
2	Выход электродвигателя очистителя заднего стекла
3	Вход «+» после замка зажигания стеклоочистителя заднего и «+» после замка зажигания ЦЭКБС
4	Электрическая «масса»
5	Выход электродвигателей при разблокировке ручек дверей
6	Выход электродвигателей при блокировке замков дверей
7	Выход сигнальной лампы обогрева и предохранителя элемента обогрева наружных зеркал заднего вида
8	Выход электрообогрева заднего стекла

PP2 (12-контактный разъем)

№ контакта	Назначение
1	Выход малой скорости очистителя ветрового стекла
2	Плафоны освещения
3	Выход большой скорости очистителя ветрового стекла
4	Выход указателя правого поворота
5	Не подключен
6	Выход управления подъемом стекла двери водителя
7	Не подключен
8	Выход указателя левого поворота
9	Сигнальная лампа незакрытых открывающихся элементах кузова
10	Выход управления опусканием стекла двери водителя
11	Не подключен
12	Выход питания реле времени плафона освещения салона и фонаря освещения багажного отделения

PE3 (30-контактный разъем)

№ контакта	Назначение
1	Вход реле-прерывателя очистителя ветрового стекла
2	Выход сигнала запроса приемного кольца (системы электронной противоугонной блокировки запуска двигателя)
3	Выход сигнала ответа приемного кольца (системы электронной противоугонной блокировки запуска двигателя)
4	Вход информации об ударе через ЭБУ подушки безопасности
5	Вход сигнала электромагнитного реверса торможения электродвигателя очистителя заднего стекла
6	Вход управления большой скоростью очистителя ветрового стекла
7	Вход управления малой скоростью очистителя ветрового стекла
8	Вход информации от габаритных огней
9	Вход управления очистителем заднего стекла
10	Не подключен
11	Выход временной задержки реле омывателя фар
12	Вход информации о скорости движения автомобиля
13	Вход управления указателем правого поворота
14	Вход управления указателем левого поворота
15	Вход выключателя обогрева
16	Выход кодированной линии к ЭБУ системы впрыска (система электронной противоугонной блокировки запуска двигателя)
17	Не подключен
18	Вход выключателя подъема стекла двери водителя
19	Выход сигнальной лампы незакрытых открывающихся элементов кузова
20	Выход сигнала ламы блокировки ПО к щитку приборов
21	Выход информации обогревателя заднего стекла к ЭБУ системы впрыска
22	Выход питания приемного кольца
23	Вход информации от омывателя заднего стекла
24	Вход информации о выключении передачи заднего хода
25	Информация от омывателя ветрового стекла
26	Специальная «масса» переключателя очистителя ветрового стекла и приемного кольца (система электронной противоугонной блокировки запуска двигателя)
27	Вход сигнала датчика давления масла (на работающем двигателе)

№ контакта	Назначение
28	Сигнал электромагнитного реверса торможения электродвигателя очистителя ветрового стекла
29	Диагностическая линия L
30	Вход выключателя опускания стекла двери водителя

PE4 (15-контактынй разъем)

№ контакта	Назначение
1	Не подключен («+» аккумуляторной батареи для установки охранной сигнализации)
2	Не подключено (для установки охранной сигнализации в багажном отделении)
3	Вход выключателя аварийной сигнализации
4	Вход модульного переключателя (автомобиль с кузовом типа кабриолет)
5	Вход выключателя блокировки замков дверей
6	Вход выключателя разблокировки замков двери
7	Диагностическая линия K
8	Вход концевых выключателей передних дверей
9	Вход концевого выключателя задних дверей и двери задка
10	Вход ближнего света фар для системы освещения дневного движения
11	Не подключен
12	Вход дальнего света фар для системы освещения дневного движения
13	Выход правого реле обогрева ветрового стекла
14	Выход левого реле электрообогрева ветрового стекла
15	Вход выключателя обогрева ветрового стекла


PP5 (1-контактный разъем)

№ контакта	Назначение
1	Напряжение аккумуляторной батареи

БЛОК РЕЛЕ И ПРЕДОХРАНИТЕЛЕЙ В САЛОНЕ (1016) (299)

Расположение

Блок расположен в салоне со стороны водителя.

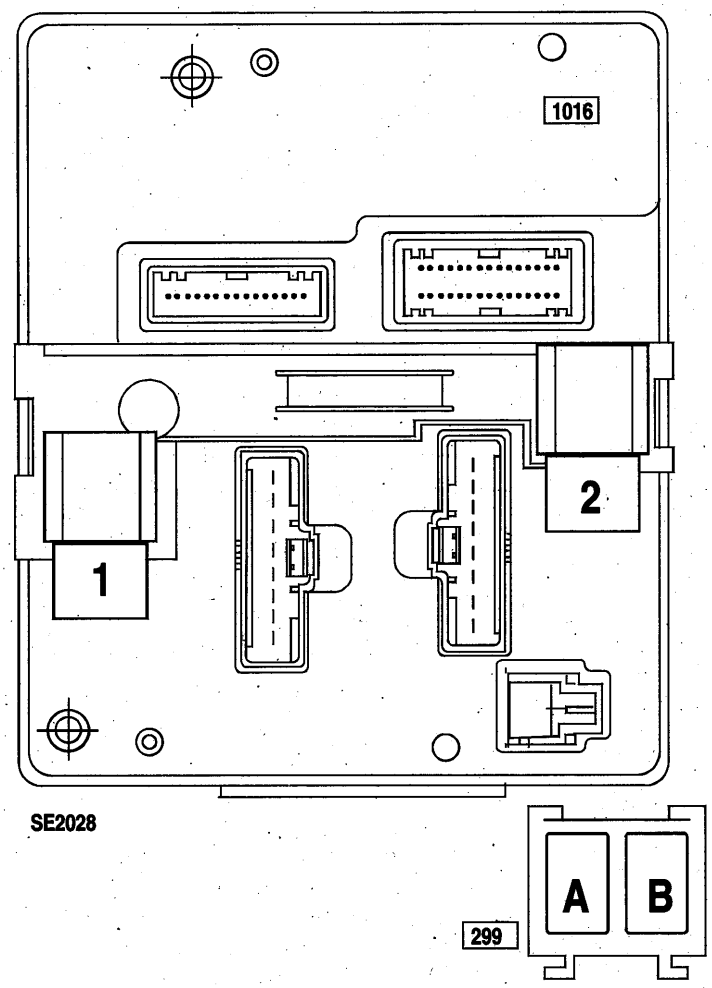


Назначение (в зависимости от уровня комплектации автомобиля)

№ контакта	Назначение
1	**Реле** «+» после замка зажигания (751) (Электродвигатель привода люка крыши и элементы обогрева задних сидений)
2	**Реле** разрешения включения электростеклоподъемников задних дверей (471)
A	**Реле** противотуманных фар (231)
B	**Реле** датчика количества сжиженного газа в баллоне (1061)

БЛОК РЕЛЕ ОСВЕЩЕНИЯ ДНЕВНОГО ДВИЖЕНИЯ (ГАБАРИТНЫЕ + ЗАДНИЕ ОГНИ) (1034)

Расположение

Блок расположен над ЦЭКБС.

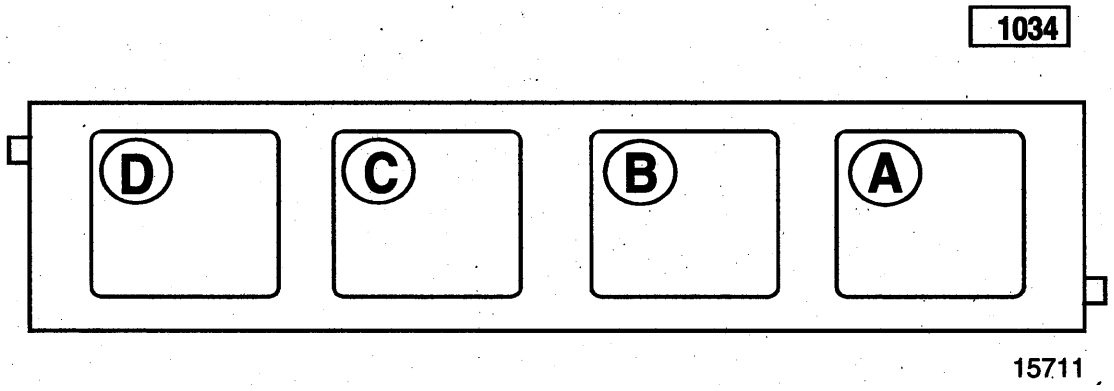


Назначение (в зависимости от уровня комплектации автомобиля)

№ контакта	Назначение
A	**Реле** насоса омывателя фар (753)
B	**Реле** ближнего света фар для режима постоянного включенного ближнего света фар (290)
C	**Реле** габаритных огней в режиме дневного движения (289)
D	Главное **реле** освещения в режиме дневного движения (288)

БЛОК РЕЛЕ, ИСПОЛНЕНИЕ ДЛЯ МЕКСИКИ (1043)

Расположение

Блок расположен над ЦЭКБС.

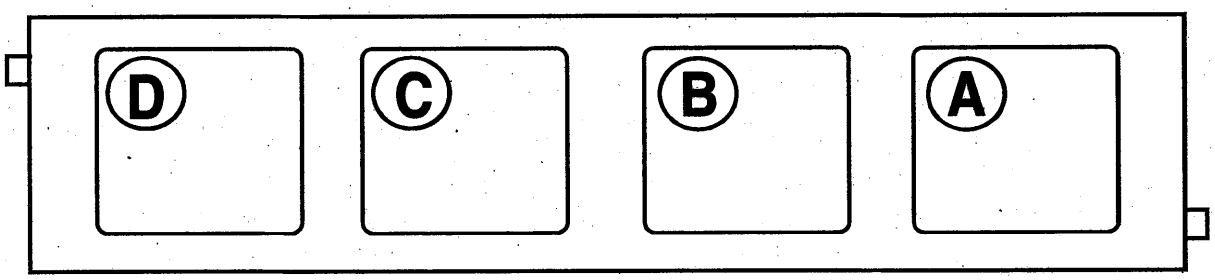


SE2061

Назначение (в зависимости от уровня комплектации автомобиля)

№ контакта	Назначение
A	**Реле** разблокировки замков дверей (1043)
B	**Реле** блокировки замков дверей (1042)
C	**Реле** звукового сигнала (229) при установке системы охранной сигнализации
D	Не используется

БЛОК РЕЛЕ И ПРЕДОХРАНИТЕЛЕЙ В МОТОРНОМ ОТСЕКЕ (597)

Блок реле и предохранителей в моторном отсеке (со стороны двигателя)

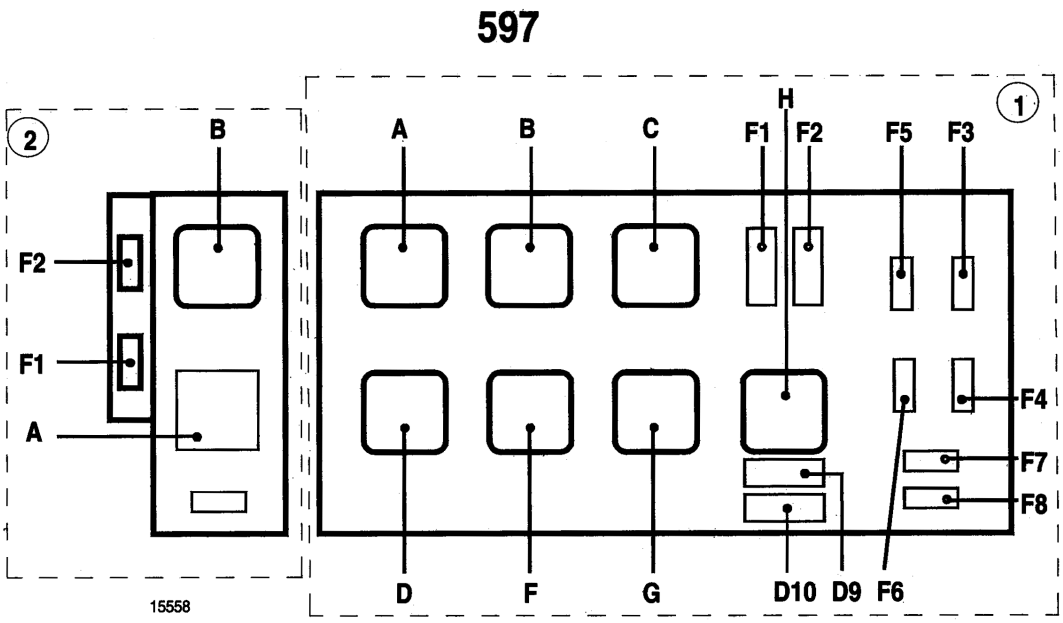

Расположение (зависит от уровня комплектации) **ПАНЕЛЬ 1**

№ контакта	Сила тока	Назначение
A		**Реле** компрессора кондиционера (584) или реле погружного подогревателя № 1 (1049)
B		**Реле** погружного подогревателя № 2 (1049)
C		**Реле** односкоростного электровентилятора 180 Вт (234) или реле большой скорости группы электровентиляторов 340/550 Вт
D		**Реле** системы впрыска 1047
F		**Реле** блокировки стартера АКП (232) или реле высотного корректора (743)
G		**Реле** односкоростного электровентилятора 100 Вт (234) или реле малой скорости группы электровентиляторов 340/550 Вт (335)
H		**Реле** топливного насоса (236) или реле подогревателя дизельного двигателя (450)
F1	**70 A**	**Предохранитель** предпускового подогревателя и погружных подогревателей
F2	**40-50 A**	**Предохранитель** двухскоростного электровентилятора (340-550 Вт)
F3	**7,5 A**	**Предохранитель** ЭБУ системы впрыска дизельного топлива/или ЭБУ АКП или ЭБУ системы питания сжиженным газом
F4	**—**	Не используется
F5	**7,5-30 A**	**Предохранитель** односкоростного электровентилятора (100-180 Вт) на 30 А или реле компрессора кондиционера на 7,5 А
F6	**7,5 A**	**Предохранитель** цепей защиты двигателя и подушек безопасности («+» после замка зажигания ЭБУ системы впрыска, катушки зажигания и ЭБУ подушек безопасности)
F7		Запасной **предохранитель**
F8		Запасной **предохранитель**
D9		Управляющий **диод** Малой Скорости электровентилятора ЭБУ кондиционера на автомобилях с двигателем F8Q 790
D10		**Диод** муфты компрессора кондиционера

Расположение (зависит от уровня комплектации) **ПАНЕЛЬ 2**


№ контакта	Сила тока	Назначение
A		**Реле** погружных подогревателей № 2 (автомобили с двигателем F9Q с системой кондиционирования воздуха)
B		**Реле** топливного насоса (236) или реле погружных подогревателей №°1 (автомобили с двигателем F9Q с системой кондиционирования воздуха)
F1	**—**	Не используется
F2	**7,5 A**	**Предохранители** цепей защиты двигателя и системы впрыска («+» после замка зажигания ЭБУ системы впрыска, катушка замка зажигания и ЭБУ подушки безопасности) (автомобили с двигателями F3R и K7M)

БЛОК ПРЕДОХРАНИТЕЛЕЙ В МОТОРНОМ ОТСЕКЕ (777)

Плата предохранителей защиты цепей (в моторном отсеке)


Расположение

Плата расположена в нише воздухозабора, со стороны аккумуляторной батареи.

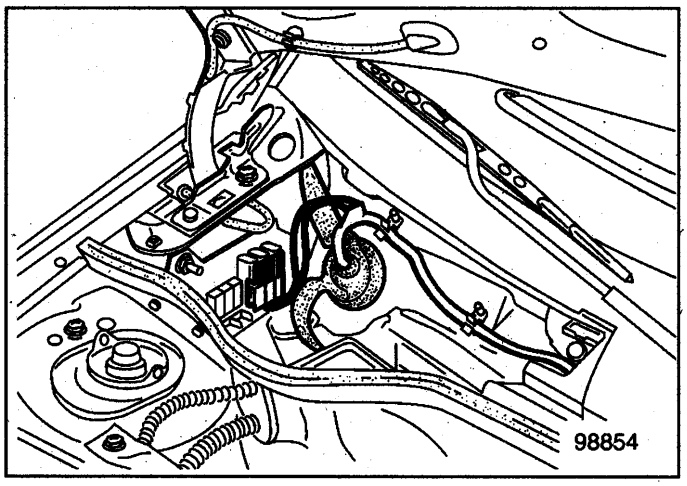


Назначение (в зависимости от уровня комплектации)

Цвет держателя	Сила тока	Назначение
Коричневый или зеленый	**30 А**	Предохранитель системы впрыска бензинового или дизельного двигателя (Зеленый)
Зеленый	**60 А**	**Предохранитель** цепи питания ЦЭКБС («+» аккумуляторной батареи на ЦЭКБС, электродвигатель привода люка крыши и элементы обогрева сидений)
Оранжевый	**60 А**	**Предохранитель** цепи питания блока предохранителей защиты коммутационных цепей и переключателей освещения
Оранжевый	**60 А**	**Предохранитель** выключателя зажигания и переключателей наружного освещения
Белый	**60 А-40 А**	**Предохранитель** (60 А) электрообогрева ветрового стекла или электропривода складной крыши (E64) (40 А)
Красный	**—**	Не используется

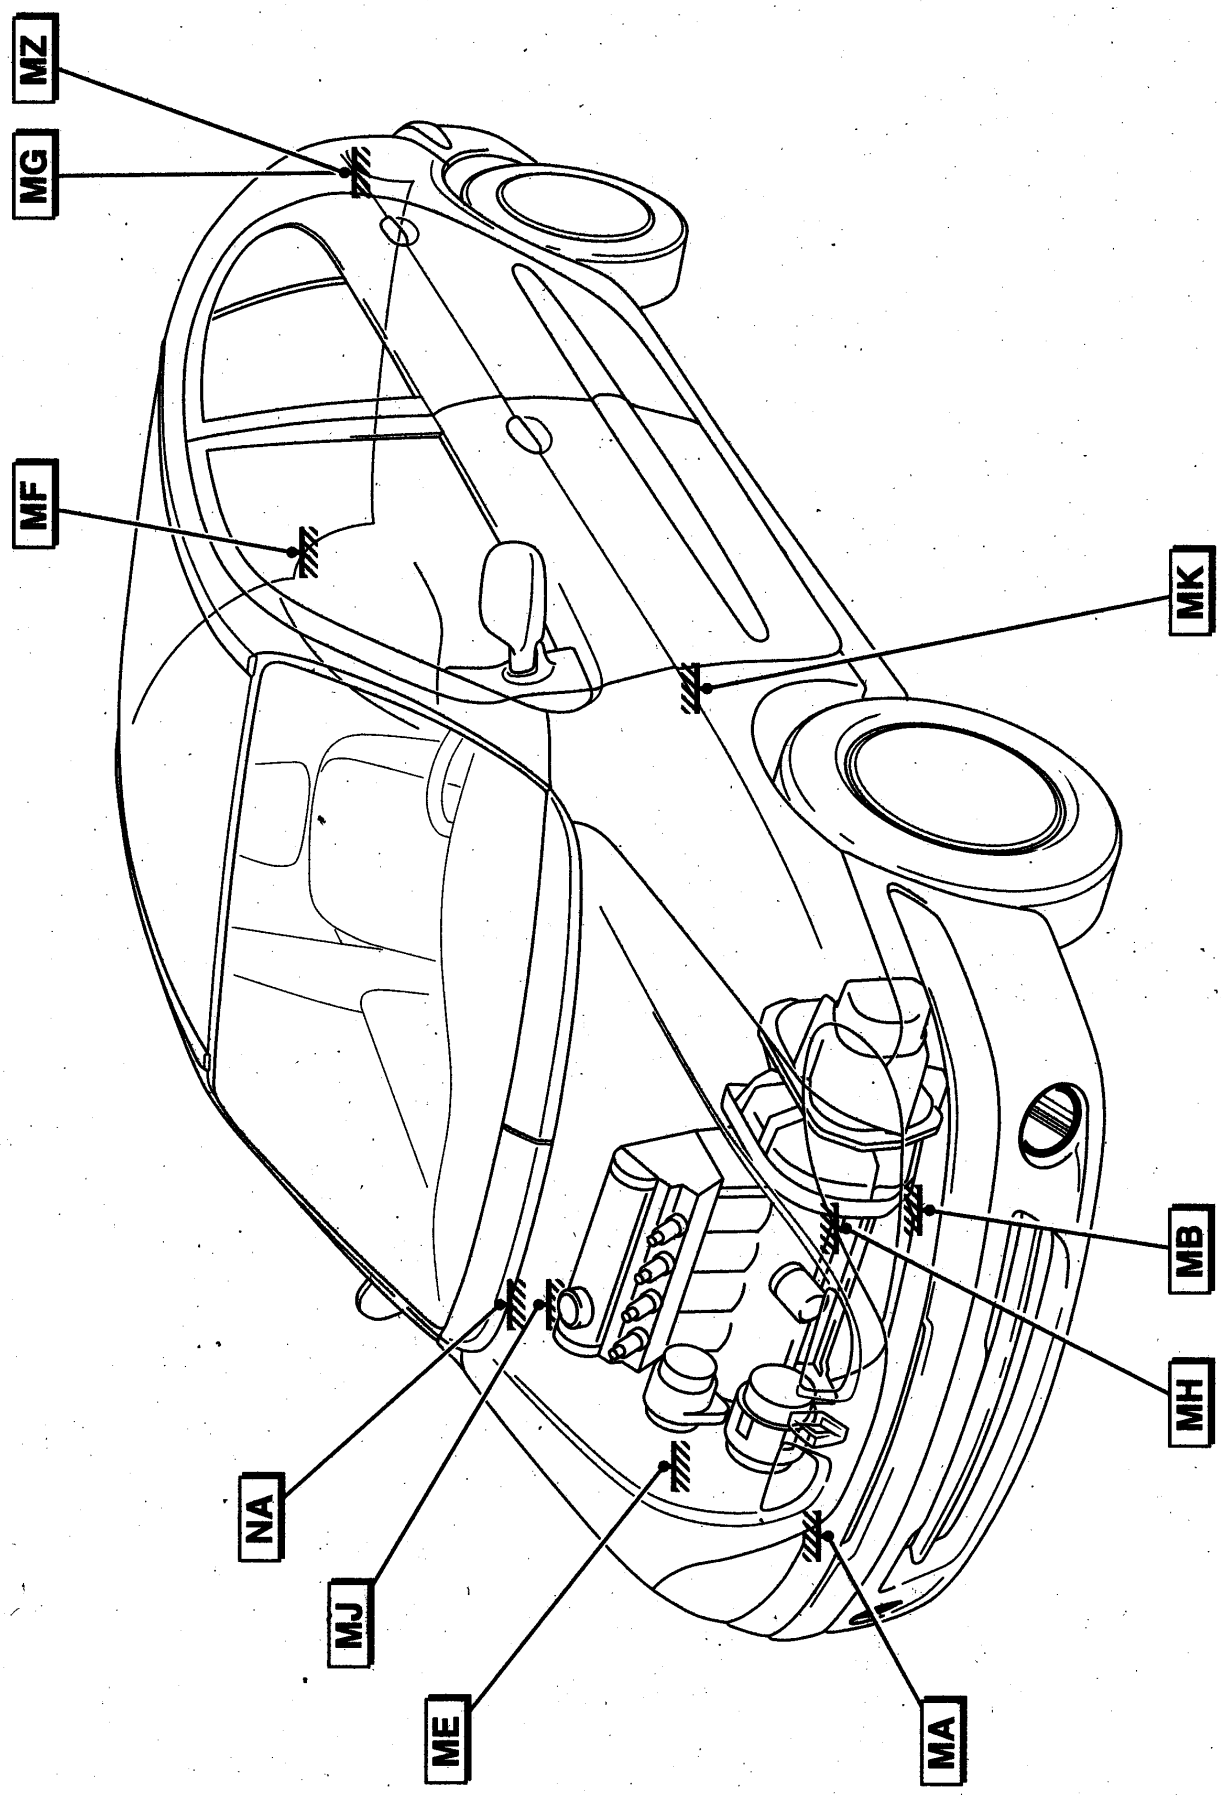

K4M / K4J / F5R / F8Q

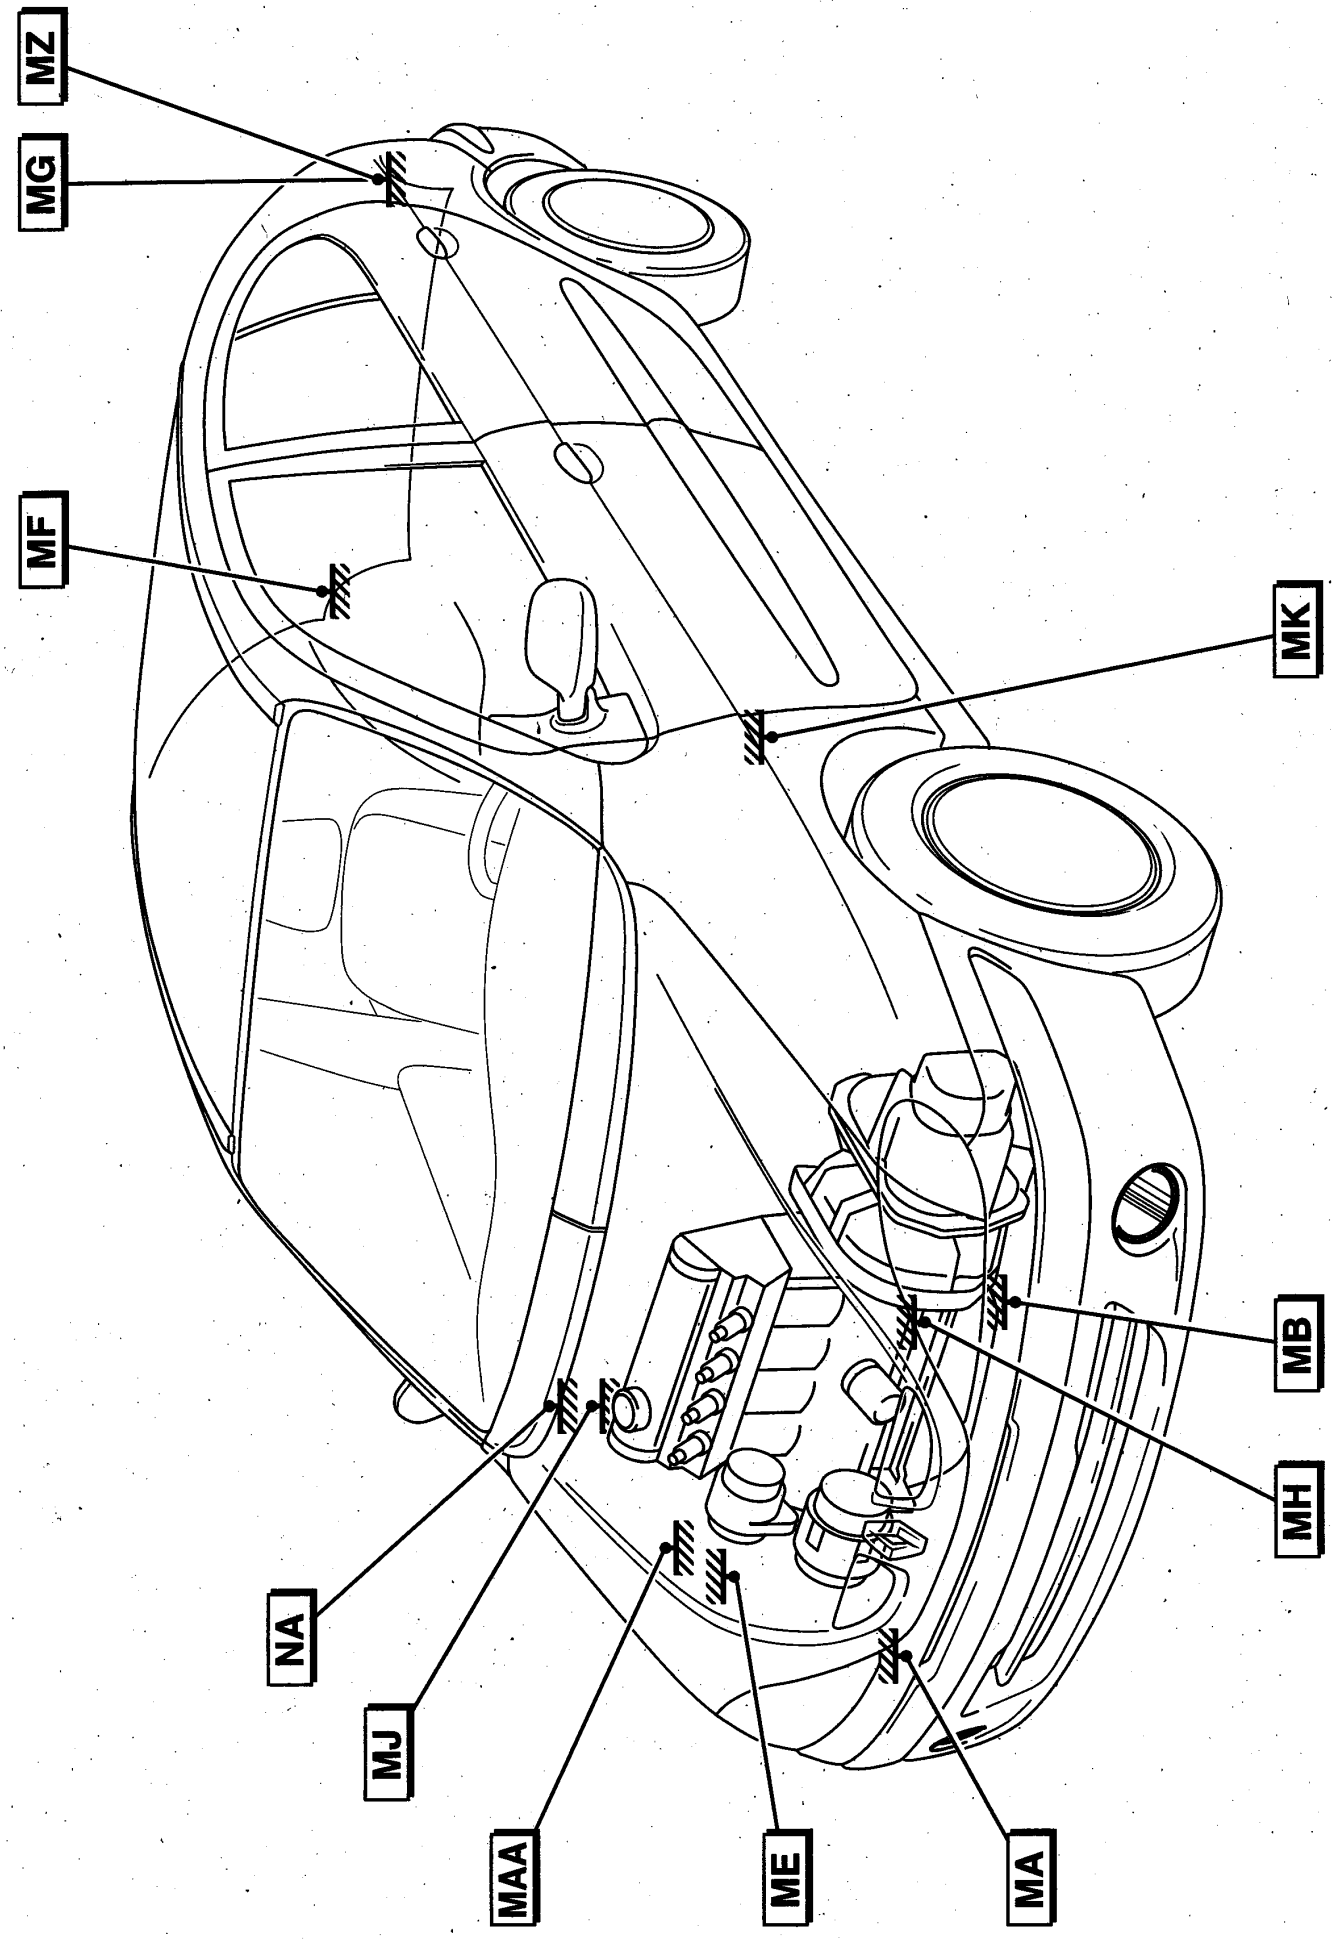

F9Q

Указатель электрических разъемов и соединений

№ ЭЛЕКТРОПРИБОРА/ РАЗЪЕМА	№ СХЕМЫ НОМЕНКЛАТУРЫ РАЗЪЕМОВ	№ СХЕМЫ ПРОКЛАДКИ ЖГУТОВ
101	115-116-117	S6-S8
103	052-053-054-055	S28-S29-S31-S32-S33-S35
104	115-116-117-118-119-120	S4
105	036	S1-S27
120	055-056-058-060-062	S28-S29-S31-S32-S33-S35
123	118-119-120	S5
125	121-122-123	S5
128	122	
130	193	S5-S8
131	193	S5-S8
132	197	
133	208-209-210	S11
134	197-198-199	S10
135	194	S5
138	004	S9-S13
139	004-196	S8
140	198-199-200	S10
141	208-209-210	S11
142	043-044-046-047-207	S15-S18-S20-S23-S26
145	121-123-124	S4
146	064-065	S28-S29-S33-S35
147	064-065	S28-S29-S31-S33-S35
149	064-065-066-067	S28-S29-S30-S31-S32-S34-S35
150	050-051	S3
151	050-051	S3
152	002	S3
153	002	S3-S27
154	043-044-046-047-207	S15-S18-S20-S23-S26
155	066-067-068-069	S28-S29-S31-S32-S33
160	114	
165	004-005-006-007-008	S14-S17-S19-S23-S24
168	124-125-126	S6
171	068-069-070-071	S28-S29-S31-S32-S33-S35
172	005-006-007-008-009	S16-S17-S20-S23-S25
173	006-009-010-011-012	S14-S15-S19-S21-S23-S24
176	036	S1
177	037	S1
178	009-010-013	S16-S20-S25
179	010-013-014	S14-S19-S24
180	011-012-013-014-015	S8-S17-S21
181	011-014-015-016-017	S9-S17-S22
184	037	
185	038	
188	070	
189	015-016-017-018-019	S16-S17-S19-S22-S25
190	016-017-018-019-020	S14-S17-S19-S21-S24
191	208-209-210	S11
192	198-199-200	S10
193	072-073	S28-S29-S30-S31-S33
194	072-073	S28-S29-S31-S33
195	072-073	S28-S29-S31-S33
196	074-075	S28-S29-S31-S33


№ ЭЛЕКТРОПРИБОРА/ РАЗЪЕМА	№ СХЕМЫ НОМЕНКЛАТУРЫ РАЗЪЕМОВ	№ СХЕМЫ ПРОКЛАДКИ ЖГУТОВ
199	018-019-020-021-022	S16-S17-S22-S34
201	022-023	S13-S22
202	022-023-196	S12-S21
203	201-202-203	S10
204	211-212-213	S11
206	071	S32
207	114	S1
209	125-126-127	S4
211	024-046-047	S15-S17-S26
212	127-128-214	S2
213	112	S7
214	020-021-023	S16-S19-S25
215	021-025-026	S14-S19-S24
219	128	S1
221	001	S1
222	074-075	S28-S29-S33-S35
224	075-076	S28-S29-S33-S35
225	129-130-131	S1-S4
226	038-039	S1
227	039-040	S1
231	129-131	S6
239	201-202-203	S10
240	211-212-213	S2-S11
241	132-133	S4
243	070-071-076-077	S28-S29-S30-S31-S35
244	077-078-079-080	S27
247	130-132-133-134-135-136	S4-S5
248	080	S32
251	081	S32
255	040	S1
256	041	S1
257	078-081-082-083	S31-S32
261	137-138-139	S4
262	079-083-084	S28-S29-S31-S32-S33-S35
265	112	
267	001	S1
268	140-141-142	S1
272	082-083-084-085	S28-S29-S32-S33-S35
282	024-025-026-027-028	S16-S17-S20-S23-S25
299	143	
304	113	S7
319	140-142-145	S4-S5-S6-S7
320	146-147-214	S2-S6
321	082-084-085-086	S28-S29-S31-S32-S33-S35
365	146-147-148	S6
366	148-149-150	S4
371	085-087	S28-S29-S33-S35
394	028	S23
398	086-088	S31-S32-S35
411	087-088-089	S28-S29-S31-S33-S35
412	086	S32
419	148-149-150-151-152-153	S7-S32
440	194	
444	113	S4-S7
449	090-091	
471	151-153	S6-S21
495	152-154-155	S9
496	152-154-155-156	S8
503	157	

Указатель электрических разъемов и соединений

№ ЭЛЕКТРОПРИБОРА/ РАЗЪЕМА	№ СХЕМЫ НОМЕНКЛАТУРЫ РАЗЪЕМОВ	№ СХЕМЫ ПРОКЛАДКИ ЖГУТОВ
529	024	S17
532	204-205-206	S10
537	041	S1
538	042	S1
562	155-156-157	S4
597	092-094-096-098	S27-S28-S29-S31-S32-S33-S35
639	027-044-048-049-207	S15-S18-S19-S23-S24-S26
645	158-159-160-161-162-163	S6
649	100-101	S28-S29-S33-S35
689	160-163-164	S4-S6
704	028-029	S21
706	029	S21
711	102-103	S32
721	003	S3
734	204-205-206	S10
738	103	S32
739	165	S1
751	165-166	S6
755	166-167	S5-S8
756	168-169-170	S5
757	171-172-173	S8
758	171-172-173	S5-S9
760	171-173	S5
771	172-174-175	S5
777	174-176-215	S2-S3-S6-S28-S29-S31-S32-S33-S35
778	101	S35
791	100	S28-S29-S33
792	104	S28-S29-S33
793	104	S28-S29-S33
794	105	S28-S29-S33
809	175-176-177	S5-S6
841	030	
842	030	
867	043	S20
868	045	S20
882	195	
883	031	S21
884	032	S21
885	032-033	S23
887	101-105	S34
921	102	S31
927	106-107-108-109	S28-S29-S31-S32-S33-S35
948	034	S21
949	034	S22
950	035	S21
951	035	S23
969	177-178	S8
997	110	S33
1003	179	S4
1016	180-182-184	S1-S6-S10-S11
1026	186-187-188	S8
1027	186-187-188	
1028	186-187-188	
1029	189-190-191	
1034	189-190	S6
1035	111	S33
1062	192	
1089	111	S33
1090	111	S33
R2	216-217-218-219-220-221	S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-
		S23
R3	222-223-224-225-226-227	S4-S10
R4	228-229-230-231-232	S5-S6-S7-S9-S11
R9	233-234-235	S1-S27
R13	236	S8-S12
R15	237-238-239	S8-S14-S15-S24-S26
R34	240-241-242-243-244	S1-S4-S6-S27-S28-S29-S31-S32-S33-S35
R35	244-245	S6
R36	245-246	S2-S3
R108	247-248	S5-S8
R227	249	S1
R236	250	S19
R237	251	S3
R240	252	
R243	252	S8-S9
R244	253-254-255	S18-S19-S20-S21-S23
R250	256-257	S15-S18-S23-S26
R254	258-259-260-261	
R255	262	
R279	262-263	S4
R280	263	S22
R301	264-265	S4-S7
R304	266	S4
R314	266-267	

FRONT WASHER PUMP


S1

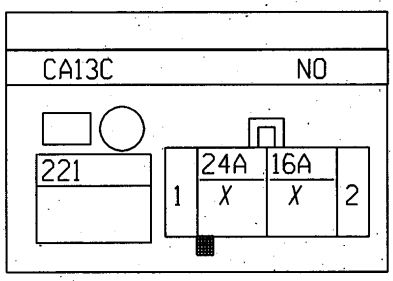

N°	mm²		... → ...
.6	24A		+ REAR SCREEN WASHER PUMP CONTROL
.6	16A		+ FRONT SCREEN WASIIER PUMP CONTROL

RIGHT REPEATER


S1

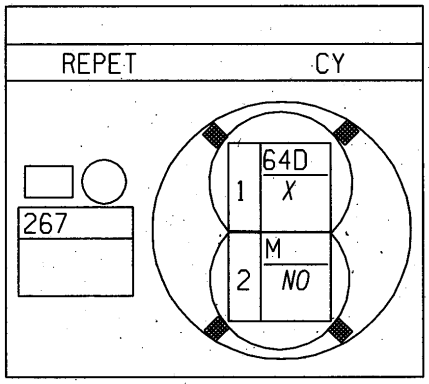

N°	mm²		... → ...
.6	64D		RH FRONT INDICATOR CONTROL
.6	M		EARTH

WASHER PUMP


S1

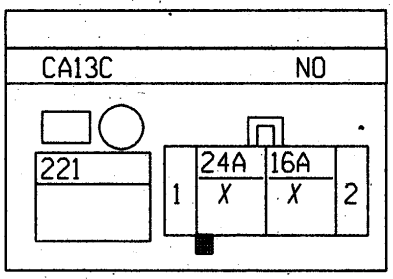

N°	mm²		... ⟶ ...
1	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
2	.35	16A	+ FRONT SCREEN WASIIER PUMP CONTROL


RIGHT REPEATER

S1

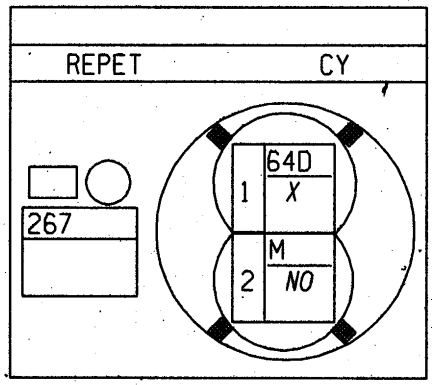


N°	mm²		... ⟶ ...
1	.6	64D	RH FRONT INDICATOR CONTROL
2	.6	M	EARTH

RIGHT FRONT WHEEL SENSOR
ABS
S3

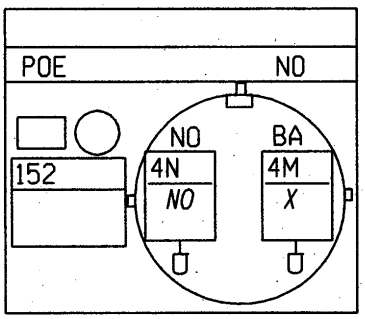

N°	mm²		... → ...
A	.5	4M	RH FRONT WHEEL SENSOR SIGNAL
0	.5	4N	+RH FRONT WHEEL SENSOR

LEFT FRONT WHEEL SENSOR
ABS
S3-S27

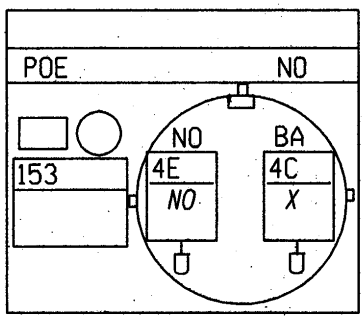


N°	mm²		... → ...
A	.5	4C	LH FRONT WHEEL SENSOR SIGNAL
G	.5	4E	+LH FRONT WHEEL SENSOR

ECU BLOCK FOR ABS + ABS HYDRAULIC UNIT


ABS

S3

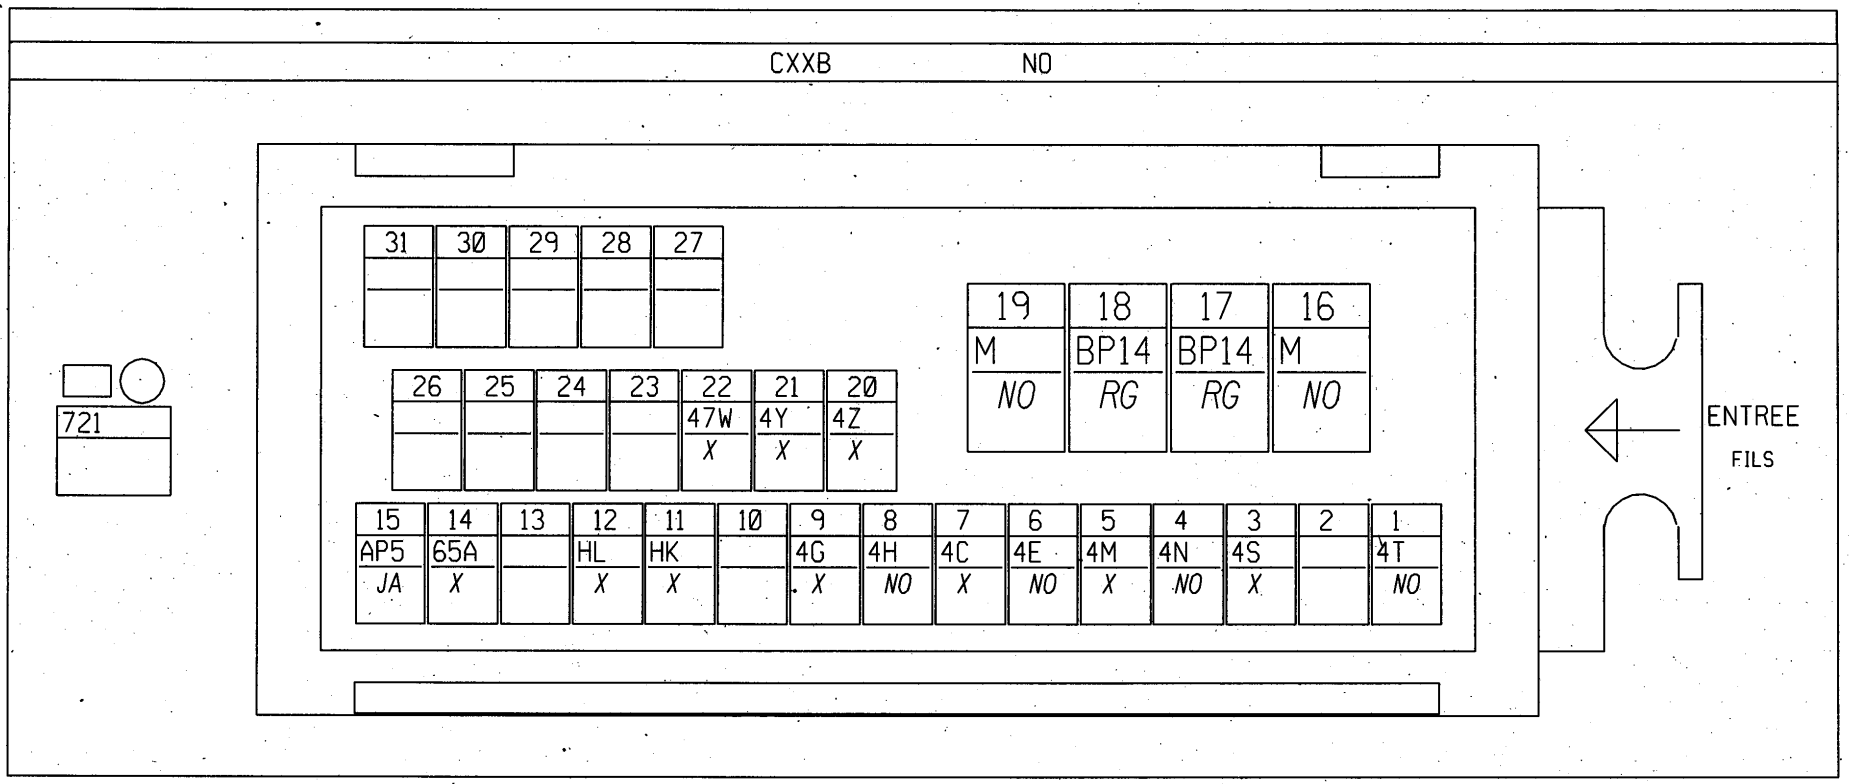


N°	mm²		... → ...
1	.6	4T	+RH REAR WHEEL SENSOR
3	.6	4S	RH REAR WHEEL SENSOR SIGNAL
4	.5	4N	+RH FRONT WHEEL SENSOR
5	.5	4M	RH FRONT WHEEL SENSOR SIGNAL
6	.5	4E	+LH FRONT WHEEL SENSOR
7	.5	4C	LH FRONT WHEEL SENSOR SIGNAL
8	.6	4H	+LH REAR WHEEL SENSOR
9	.6	4G	LH REAR WHEEL SENSOR SIGNAL
11	.35	HK	DIAGNOSTIC SIGNAL K
12	.35	HL	DIAGNOSTIC SIGNAL L
14	.35	65A	+ BRAKE LIGHTS CONTROL
15	.35	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
16	4	M	EARTH
17	4	BP14	PROTECTED BATTERY > ABS SYSTEM
18	4	BP14	PROTECTED BATTERY > ABS SYSTEM
19	4	M	EARTH
20	.35	4Z	- ABS WARNING LIGHT
21	.35	4Y	- BRAKE FAULT WARNING LIGHT
22	.35	47W	SECONDARY SPEED SIGNAL

REAR RIGHT ELECTRIC DOOR LOCKING
LVARMA LVAREL
S9-S13

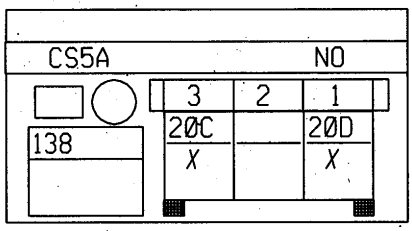


N°	mm²		... ⟶ ...
.6	20D		+ CLOSE CENTRAL DOOR LOCKING CONTROL
.6	20C		+ OPEN CENTRAL DOOR LOCKING CONTROL

REAR LEFT ELECTRIC DOOR LOCKING
LVARMA LVAREL
S8

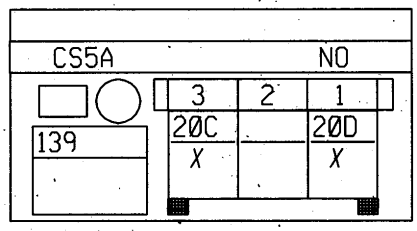


N°	mm²		... ⟶ ...
.6	20D		+ CLOSE CENTRAL DOOR LOCKING CONTROL
.6	20C		+ OPEN CENTRAL DOOR LOCKING CONTROL

BOOT LIGHTING
LVARMA LVAREL
S14-S17-S19-S23-S24

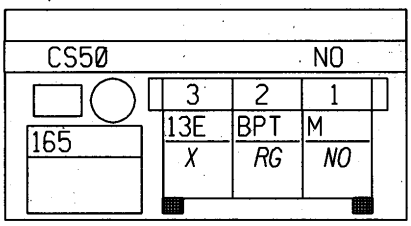


N°	mm²		... ⟶ ...
.35	M		EARTH
.35	BPT		+ TIMER SWITCH PROTECTED BATTERY
.35	13E		COURTESY LIGHT > TIMER SWITCH - CONTROL

BOOT LIGHTING
B64/LVAREL B64,S64/SSLVRA,LVRARMA
S14-S17-S19-S23-S24

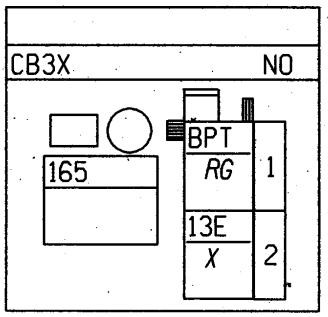


N°	mm²		... → ...
1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
2	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL

RIGHT REAR LIGHT
B64/LVAREL
S16-S17-S20-S23-S25

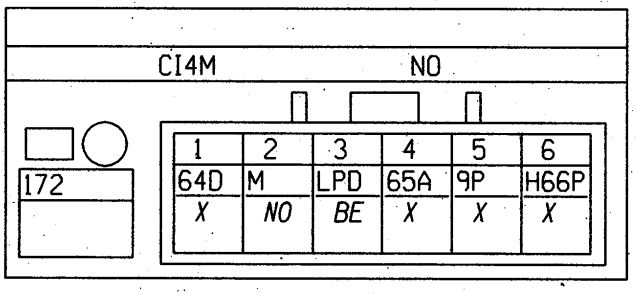


N°	mm²		... → ...
1	.6	64D	RH FRONT INDICATOR CONTROL
2	1	M	EARTH
3	.6	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
4	.6	65A	+ BRAKE LIGHTS CONTROL
5	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
6	.6	H66P	+ REVERSING LIGHTS CONTROL

BOOT LIGHTING
LVAREL/SAUF TUR LVARMA/SAUF TUR
S14-S17-S19-S23-S24

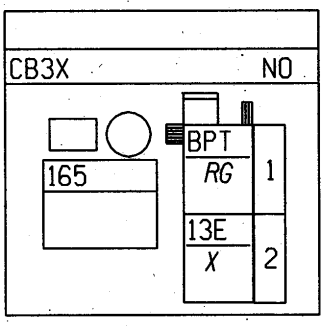


N°	mm²		... ⟶ ...
.35	BPT		+ TIMER SWITCH PROTECTED BATTERY
.35	13E		COURTESY LIGHT > TIMER SWITCH - CONTROL

RIGHT REAR LIGHT
LVAREL/SAUF TUR LVARMA/SAUF TUR
S16-S17-S20-S23-S25

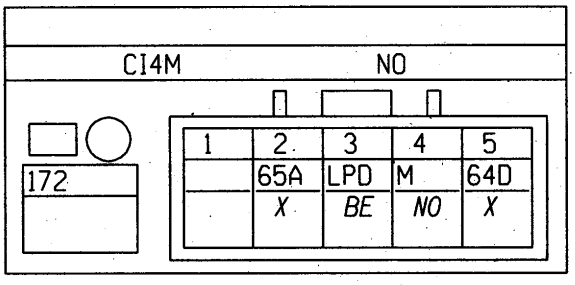

N°	mm²		... ⟶ ...
.6	65A		+ BRAKE LIGHTS CONTROL
.6	LPD		RIGHT HAND SIDE LIGHT PROTECTED +
.6	M		EARTH
.6	64D		RH FRONT INDICATOR CONTROL


LEFT REAR LIGHT
LVAREL/SAUF TUR LVARMA/SAUF TUR
S14-S15-S19-S21-S23-S24

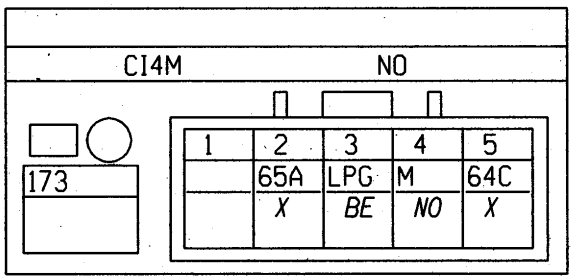

N°	mm²		... ⟶ ...
.6	65A		+ BRAKE LIGHTS CONTROL
.6	LPG		LEFT HAND SIDE LIGHT PROTECTED +
.6	M		EARTH
.6	64C		LH INDICATOR CONTROL

BOOT LIGHTING


S14-S17-S19-S23-S24

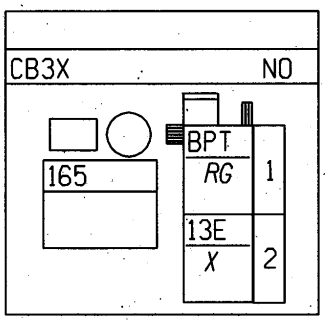

N°	mm²		... → ...
1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
2	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL


RIGHT REAR LIGHT

S16-S17-S20-S23-S25

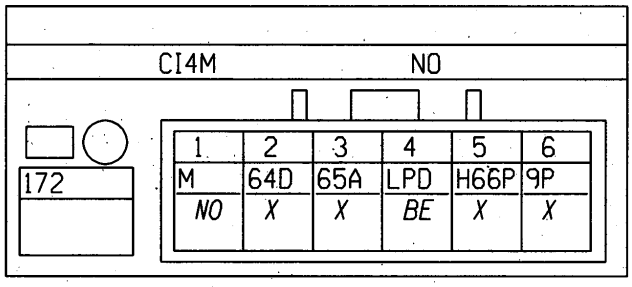


N°	mm²		... → ...
1	1	M	EARTH
2	.6	64D	RH FRONT INDICATOR CONTROL
3	.6	65A	+ BRAKE LIGHTS CONTROL
4	.6	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
5	.6	H66P	+ REVERSING LIGHTS CONTROL
6	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

BOOT LIGHTING
CATOMA CATOEL
S14-S17-S19-S23-S24

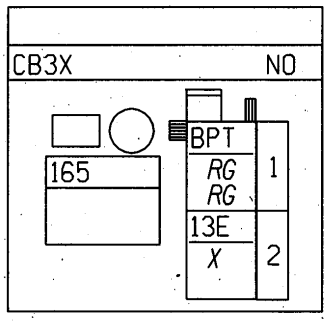


N°	mm²		... → ...
	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL

RIGHT REAR LIGHT
CATOMA CATOEL
S16-S17-S20-S23-S25

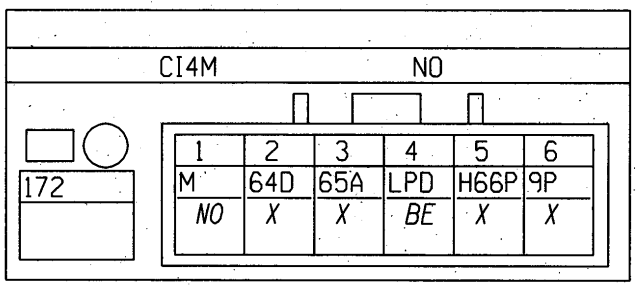


N°	mm²		... → ...
	1	M	EARTH
	.6	64D	RH FRONT INDICATOR CONTROL
	.6	65A	+ BRAKE LIGHTS CONTROL
	.6	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	.6	H66P	+ REVERSING LIGHTS CONTROL
	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

RIGHT REAR LIGHT
B64,S64/SSLVRA,LVRARMA
S16-S17-S20-S23-S25

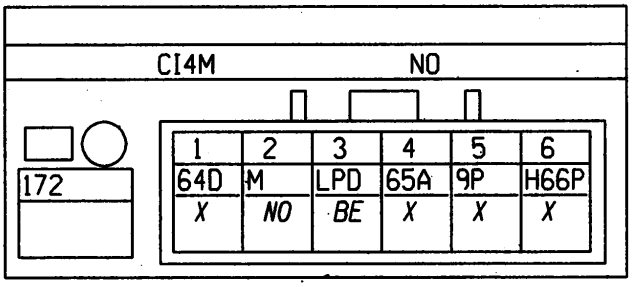


N°	mm²		... → ...
1	.5	64D	RH FRONT INDICATOR CONTROL
2	1	M	EARTH
3	.5	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
4	.5	65A	+ BRAKE LIGHTS CONTROL
5	.5	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
6	.5	H66P	+ REVERSING LIGHTS CONTROL

LEFT REAR LIGHT
B64/LVAREL
S14-S15-S19-S21-S23-S24

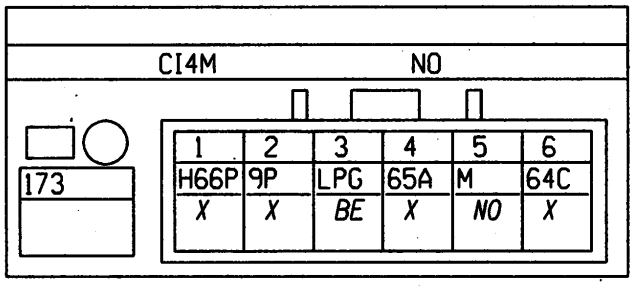


N°	mm²		... → ...
1	.6	H66P	+ REVERSING LIGHTS CONTROL
2	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
3	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
4	.6	65A	+ BRAKE LIGHTS CONTROL
5	1	M	EARTH
6	.6	64C	LH INDICATOR CONTROL

RIGHT REAR LIGHT
LVARMA LVAREL
S16-S17-S20-S23-S25

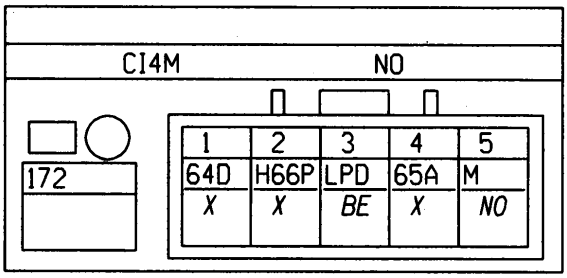


N°	mm²		... → ...
	.6	64D	RH FRONT INDICATOR CONTROL
	.6	H66P	+ REVERSING LIGHTS CONTROL
	.6	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	.6	65A	+ BRAKE LIGHTS CONTROL
	1	M	EARTH

LEFT REAR LIGHT
LVARMA LVAREL
S14-S15-S19-S21-S23-S24

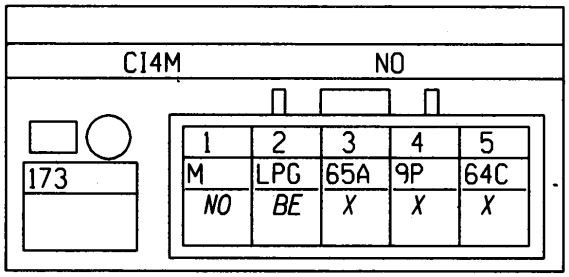


N°	mm²		... → ...
	1	M	EARTH
	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
	.6	65A	+ BRAKE LIGHTS CONTROL
	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
	.6	64C	LH INDICATOR CONTROL

RIGHT REAR RABBET SWITCH
LVARMA LVAREL
S16-S20-S25

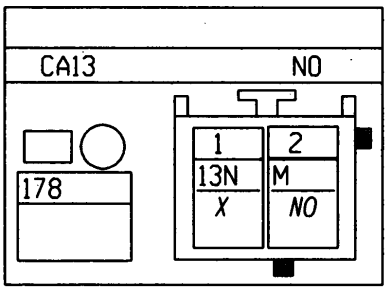


N°	mm²		... → ...
	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
	.35	M	EARTH

LEFT REAR LIGHT
B64,S64/SSLVRA,LVRARMA
S14-S15-S19-S21-S23-S24

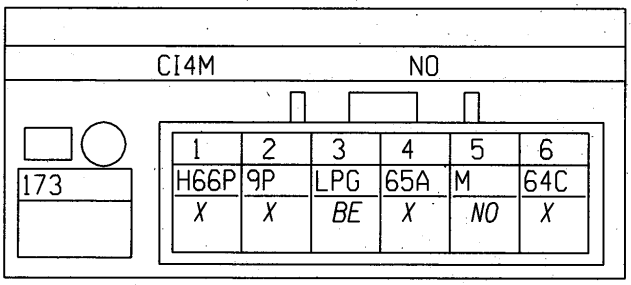


N°	mm²		... → ...
1	.5	H66P	+ REVERSING LIGHTS CONTROL
2	.5	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
3	.5	LPG	LEFT HAND SIDE LIGHT PROTECTED +
4	.5	65A	+ BRAKE LIGHTS CONTROL
5	1	M	EARTH
6	.5	64C	LH INDICATOR CONTROL

RIGHT REAR RABBET SWITCH
B64/LVAREL
S16-S20-S25

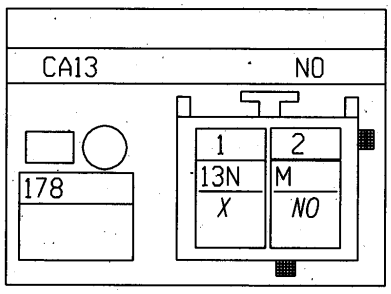

N°	mm²		... → ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.6	M	EARTH


RIGHT REAR RABBET SWITCH
B64,S64/SSLVRA,LVRARMA
S16-S20-S25

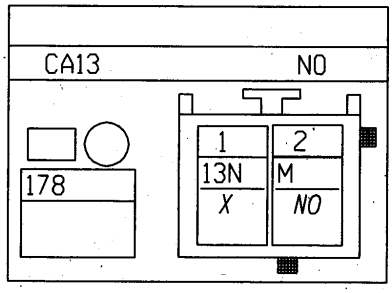

N°	mm²		... → ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.5	M	EARTH

LEFT REAR LIGHT


S14-S15-S19-S21-S23-S24

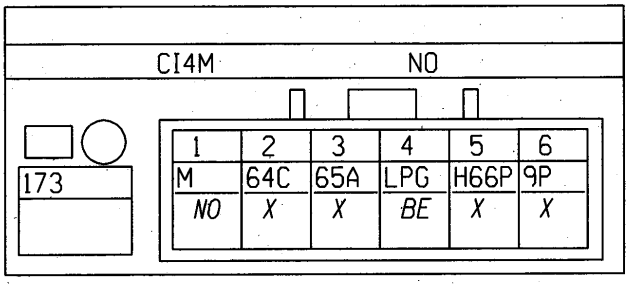

N°	mm²		... → ...
1	M		EARTH
.6	64C		LH INDICATOR CONTROL
.6	65A		+ BRAKE LIGHTS CONTROL
.6	LPG		LEFT HAND SIDE LIGHT PROTECTED +
.6	H66P		+ REVERSING LIGHTS CONTROL
.6	9P		+ PROTECTED REAR FOG LIGHTS CONTROL

DRIVER'S RABBET SWITCH


S8-S17-S21

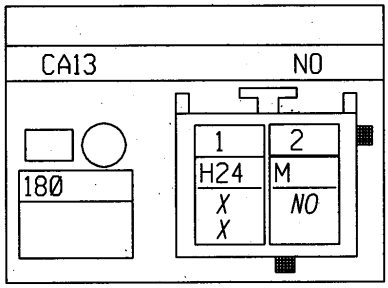

N°	mm²		... → ...
.35	H24		- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
.35	H24		- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
.6	M		EARTH


PASSENGER'S RABBET SWITCH

S9-S17-S22

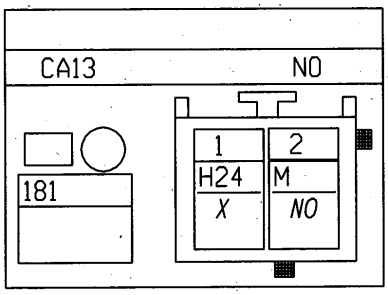


N°	mm²		... → ...
.35	H24		- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
.6	M		EARTH

LEFT REAR LIGHT
CATOMA CATOEL
S14-S15-S19-S21-S23-S24

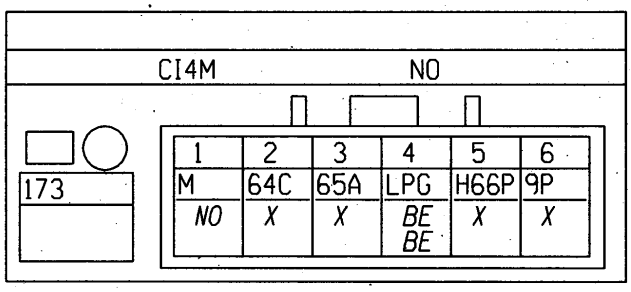


N°	mm²		··· ⟶ ···
1	1	M	EARTH
2	.6	64C	LH INDICATOR CONTROL
3	.6	65A	+ BRAKE LIGHTS CONTROL
4	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
4	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
5	.6	H66P	+ REVERSING LIGHTS CONTROL
6	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

DRIVER'S RABBET SWITCH
CATOMA CATOEL
S8-S17-S21

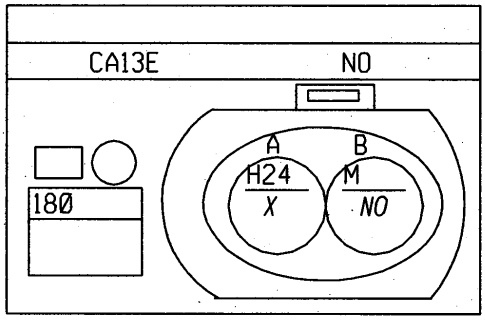


N°	mm²		··· ⟶ ···
A	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
B	.35	M	EARTH

RIGHT REAR RABBET SWITCH
LVAREL/SAUF TUR LVARMA/SAUF TUR
S16-S20-S25

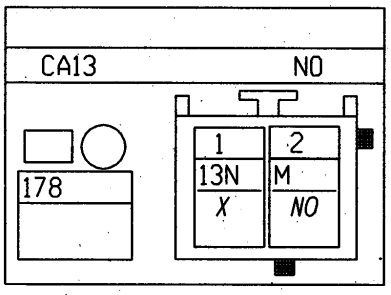


N°	mm²		... → ...
.35	13N		- INTERIOR LIGHTING > REAR REBATE CONTROL
.35	M		EARTH

LEFT REAR RABBET SWITCH
LVAREL/SAUF TUR LVARMA/SAUF TUR
S14-S19-S24

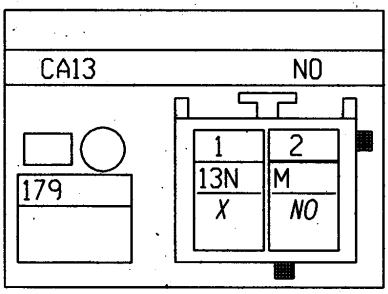


N°	mm²		... → ...
.35	13N		- INTERIOR LIGHTING > REAR REBATE CONTROL
.35	M		EARTH

DRIVER'S RABBET SWITCH
LVAREL/SAUF TUR LVARMA/SAUF TUR
S8-S17-S21

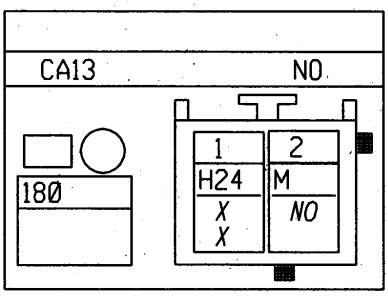


N°	mm²		... → ...
.35	H24		- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
.35	H24		- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
.35	M		EARTH

LEFT REAR RABBET SWITCH
B64/LVAREL
S14-S19-S24

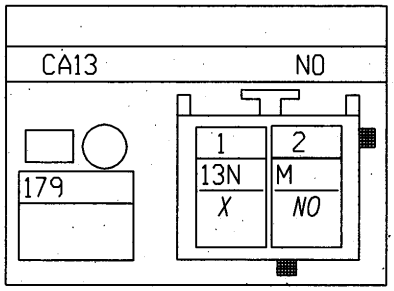


N°	mm²		··· ⟶ ···
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.6	M	EARTH

LEFT REAR RABBET SWITCH
B64,S64/SSLVRA,LVRARMA
S14-S19-S24

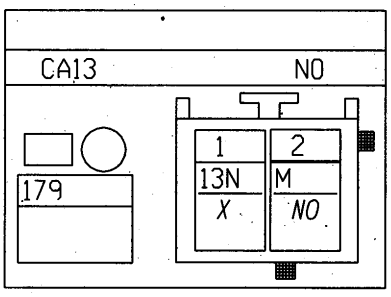


N°	mm²		··· ⟶ ···
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.5	M	EARTH

DRIVER'S RABBET SWITCH
B64/LVAREL
S8-S17-S21

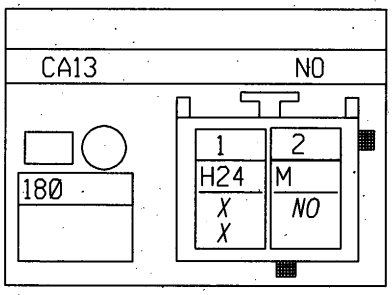


N°	mm²		··· ⟶ ···
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
2	.6	M	EARTH

LEFT REAR RABBET SWITCH
LVARMA LVAREL
S14-S19-S24

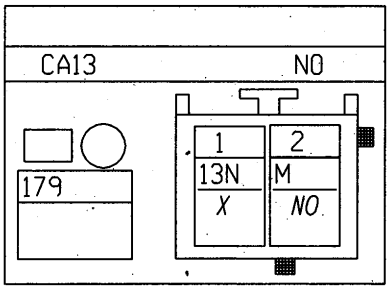


N°	mm²		... → ...
.35	13N		- INTERIOR LIGHTING > REAR REBATE CONTROL
.35	M		EARTH

DRIVER'S RABBET SWITCH
LVARMA LVAREL
S8-S17-S21

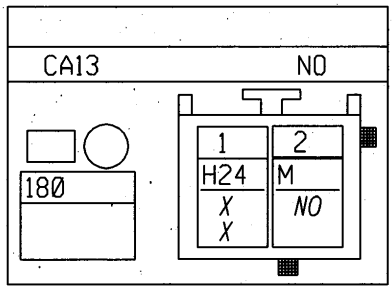


N°	mm²		... → ...
.35	H24		- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
.35	H24		- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
.35	M		EARTH

PASSENGER'S RABBET SWITCH
LVARMA LVAREL
S9-S17-S22

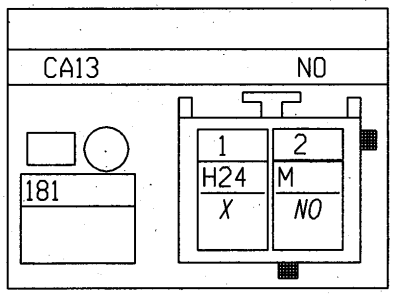


N°	mm²		... → ...
.35	H24		- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
.35	M		EARTH

DRIVER'S RABBET SWITCH
B64,S64/SSLVRA,LVRARMA
S8-S17-S21

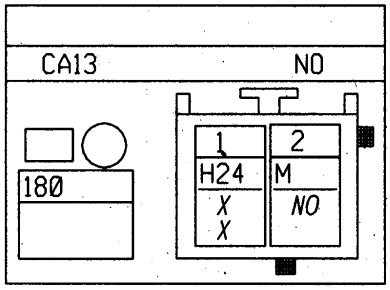


N°	mm²		··· ⟶ ···
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
2	.5	M	EARTH

PASSENGER'S RABBET SWITCH
B64/LVAREL
S9-S17-S22

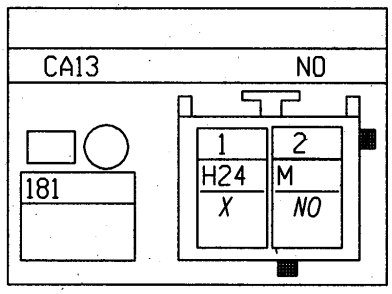


N°	mm²		··· ⟶ ···
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
2	.6	M	EARTH

PASSENGER'S RABBET SWITCH
B64,S64/SSLVRA,LVRARMA
S9-S17-S22

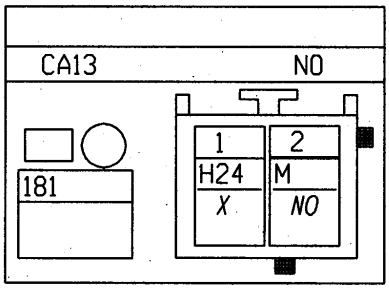


N°	mm²		··· ⟶ ···
1	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
2	.5	M	EARTH

PASSENGER'S RABBET SWITCH
LVAREL/SAUF TUR LVARMA/SAUF TUR
S9-S17-S22

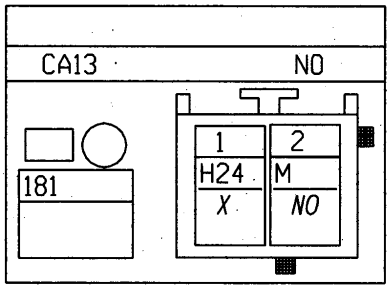


N°	mm²		... → ...
	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
	.35	M	EARTH

RIGHT REAR SPEAKER
LVAREL/SAUF TUR LVARMA/SAUF TUR
S16-S17-S19-S22-S25

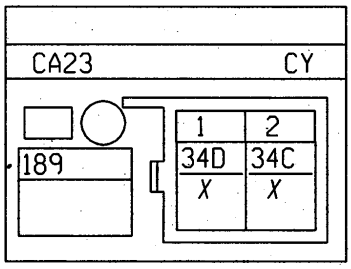


N°	mm²		... → ...
	1	34D	SIGNAL+ RH REAR SPEAKER
	1	34C	SIGNAL- RH REAR SPEAKER

LEFT REAR SPEAKER
LVAREL/SAUF TUR LVARMA/SAUF TUR
S14-S17-S19-S21-S24

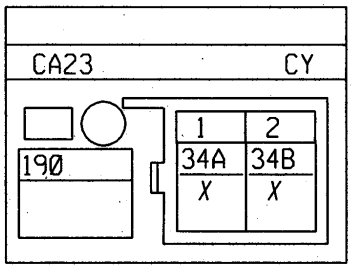


N°	mm²		... → ...
	1	34A	SIGNAL+ LH REAR SPEAKER
	1	34B	SIGNAL- LH REAR SPEAKER

PASSENGER'S RABBET SWITCH
CATOMA CATOEL
S9-S17-S22

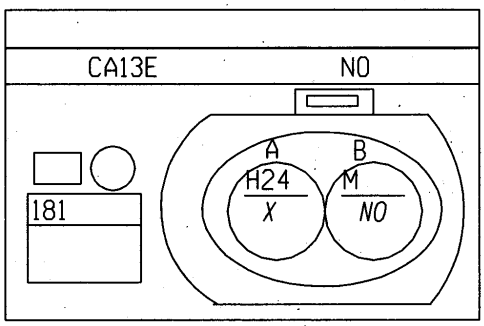


N°	mm²		... → ...
A	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
B	.35	M	EARTH

RIGHT REAR SPEAKER
CATOMA CATOEL
S16-S17-S19-S22-S25

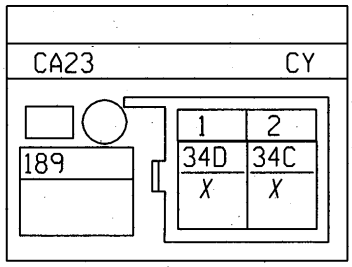


N°	mm²		... → ...
1	1	34D	SIGNAL+ RH REAR SPEAKER
2	1	34C	SIGNAL- RH REAR SPEAKER

LEFT REAR SPEAKER
CATOMA CATOEL
S14-S17-S19-S21-S24

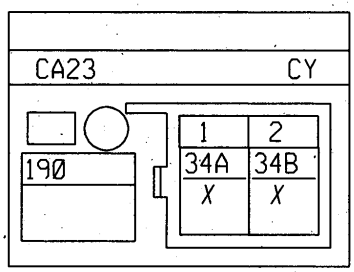


N°	mm²		... → ...
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER

RIGHT REAR SPEAKER
B64/LVAREL B64,S64/SSLVRA,LVRARMA
S16-S17-S19-S22-S25

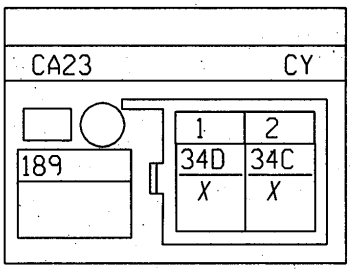


N°	mm²		... → ...
1	34D		SIGNAL+ RH REAR SPEAKER
1	34C		SIGNAL- RH REAR SPEAKER

LEFT REAR SPEAKER
B64/LVAREL B64,S64/SSLVRA,LVRARMA
S14-S17-S19-S21-S24

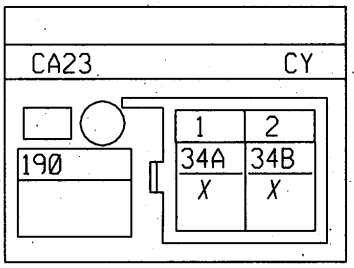


N°	mm²		... → ...
1	34A		SIGNAL+ LH REAR SPEAKER
1	34B		SIGNAL- LH REAR SPEAKER

FUEL GAUGE
B64/LVAREL B64,S64/SSLVRA,LVRARMA
S16-S17-S22-S34

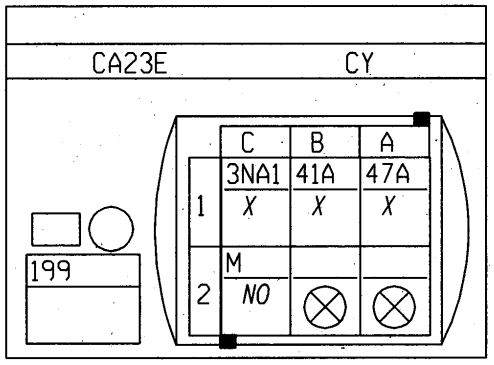


N°	mm²		... → ...
1	.35	47A	- FUEL LEVEL GAUGE >
1	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
2	1.4	M	EARTH

RIGHT REAR SPEAKER
LVARMA LVAREL
S16-S17-S19-S22-S25

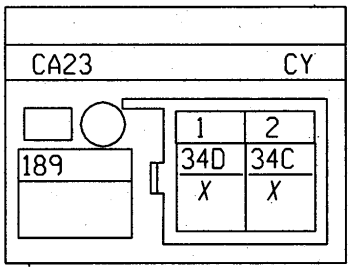


N°	mm²		... ⟶ ...
1	1	34D	SIGNAL+ RH REAR SPEAKER
2	1	34C	SIGNAL- RH REAR SPEAKER

LEFT REAR SPEAKER
LVARMA LVAREL
S14-S17-S19-S21-S24

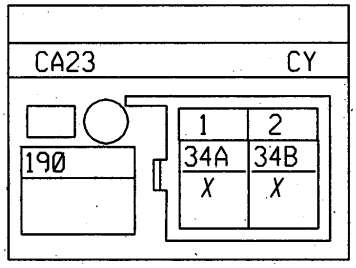

N°	mm²		... ⟶ ...
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER


FUEL GAUGE
LVARMA LVAREL
S16-S17-S22-S34

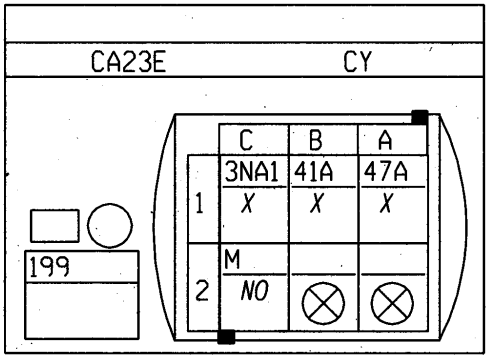

N°	mm²		... ⟶ ...
A1	.35	47A	- FUEL LEVEL GAUGE >
B1	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
C1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
C2	1.4	M	EARTH

RIGHT REAR SPEAKER


S16-S17-S19-S22-S25

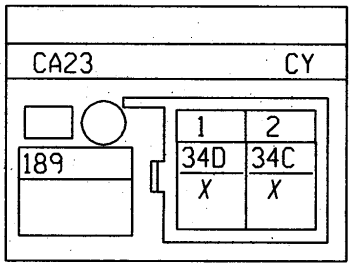

N°	mm²		... → ...
1	34D		SIGNAL+ RH REAR SPEAKER
1	34C		SIGNAL- RH REAR SPEAKER

LEFT REAR SPEAKER


S14-S17-S19-S21-S24

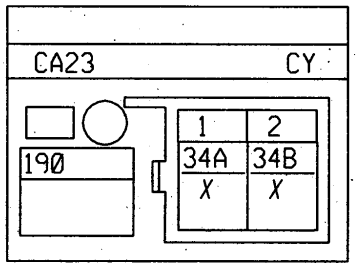

N°	mm²		... → ...
1	34A		SIGNAL+ LH REAR SPEAKER
1	34B		SIGNAL- LH REAR SPEAKER


FUEL GAUGE

S16-S17-S22-S34

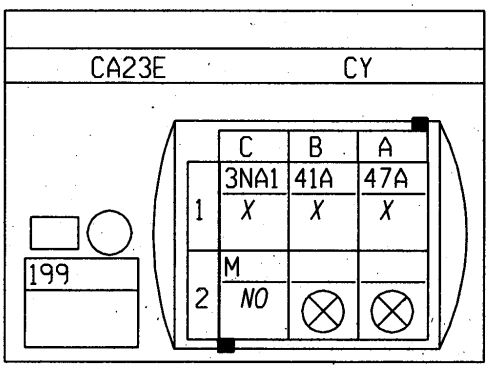


N°	mm²		... → ...
1	.35	47A	- FUEL LEVEL GAUGE >
1	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
2	1.4	M	EARTH

FUEL GAUGE
LVAREL/SAUF TUR LVARMA/SAUF TUR
S16-S17-S22-S34

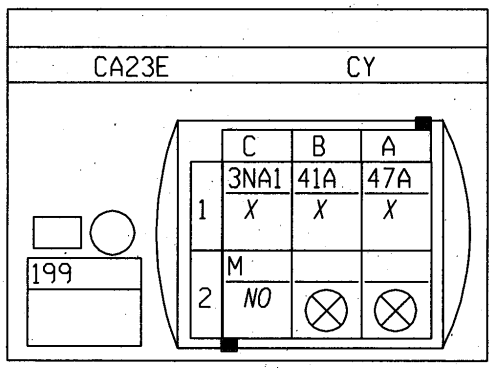


N°	mm²		... → ...
A1	.35	47A	- FUEL LEVEL GAUGE >
B1	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
C1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
C2	1.4	M	EARTH

REAR RIGHT-HAND COURTESY LIGHTS
LVAREL/SAUF TUR LVARMA/SAUF TUR
S16-S19-S25

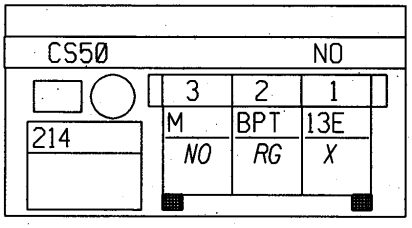


N°	mm²		... → ...
1	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	M	EARTH

REAR LEFT-HAND COURTESY LIGHTS
LVAREL/SAUF TUR LVARMA/SAUF TUR
S14-S19-S24

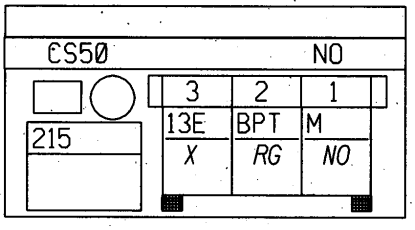


N°	mm²		... → ...
1	.35	M	EARTH
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL

FUEL GAUGE
CATOMA CATOEL
S16-S17-S22-S34

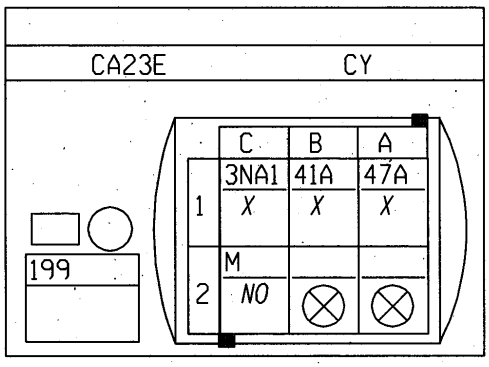


N°	mm²		... → ...
1	.35	47A	- FUEL LEVEL GAUGE >
1	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
2	1.4	M	EARTH

REAR RIGHT-HAND WINDOW WINDER MOTOR
CATOMA CATOEL
S13-S22

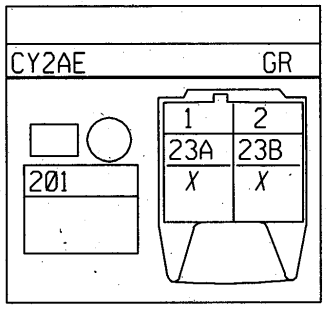


N°	mm²		... → ...
	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT PANEL CLOSURE
	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING

LEFT-HAND REAR WINDOW WINDER MOTOR
CATOMA CATOEL
S12-S21

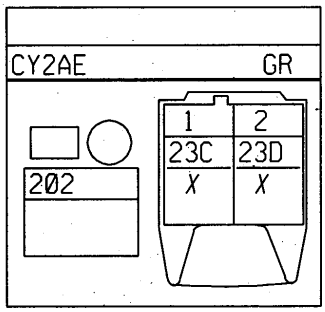


N°	mm²		... → ...
	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL

REAR RIGHT-HAND WINDOW WINDER MOTOR
LVAREL
S13-S22

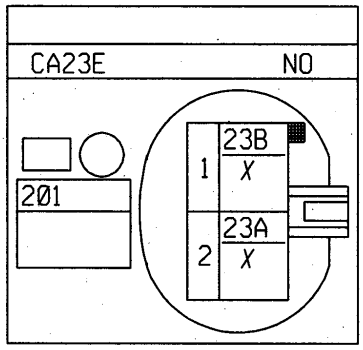


N°	mm²		... ⟶ ...
1	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING
2	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT PANEL CLOSURE

LEFT-HAND REAR WINDOW WINDER MOTOR
LVAREL
S12-S21

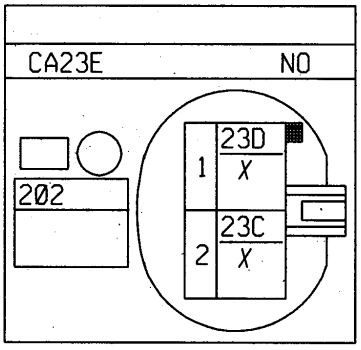

N°	mm²		... ⟶ ...
1	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
2	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL


REAR RIGHT-HAND COURTESY LIGHTS
LVARMA LVAREL
S16-S19-S25

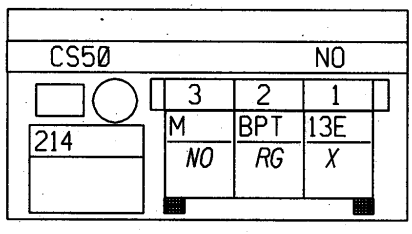

N°	mm²		... ⟶ ...
1	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	M	EARTH

REAR WINDOW WIPER MOTOR


S15-S17-S26

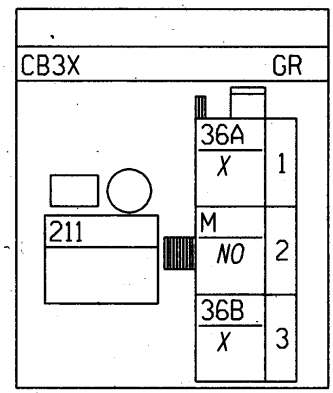

N°	mm²		... → ...
1	36A		+ REAR WIPER CONTROL
1	M		EARTH
.35	36B		+ REAR WIPER PARK POSITION CONTROL

FUEL FILLER FLAP ELECTRIC LOCKING CONTROL


S16-S17-S20-S23-S25

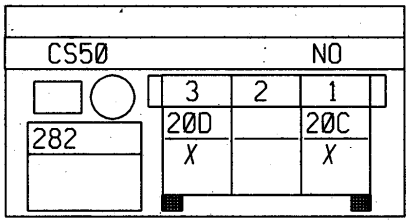

N°	mm²		... → ...
.6	20C		+ OPEN CENTRAL DOOR LOCKING CONTROL
.6	20D		+ CLOSE CENTRAL DOOR LOCKING CONTROL


CENTRAL COURTESY LIGHT

S17

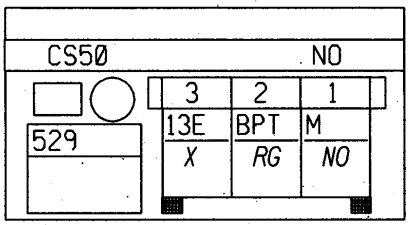


N°	mm²		... → ...
.35	M		EARTH
.35	BPT		+ TIMER SWITCH PROTECTED BATTERY
.35	13E		COURTESY LIGHT > TIMER SWITCH - CONTROL

REAR RIGHT-HAND COURTESY LIGHTS
B64/LVAREL B64,S64/SSLVRA,LVRARMA
S16-S19-S25

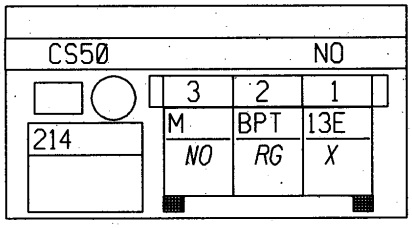


N°	mm²		··· → ···
1	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	M	EARTH

REAR LEFT-HAND COURTESY LIGHTS
B64/LVAREL B64,S64/SSLVRA,LVRARMA
S14-S19-S24

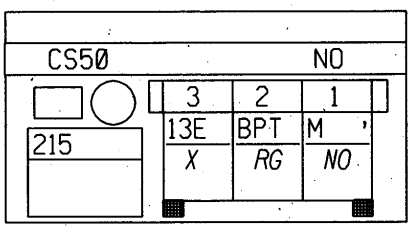


N°	mm²		··· → ···
1	.35	M	EARTH
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL

FUEL FILLER FLAP ELECTRIC LOCKING CONTROL
B64/LVAREL
S16-S17-S20-S23-S25

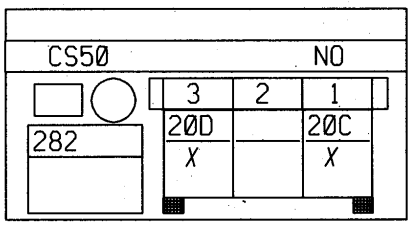


N°	mm²		··· → ···
1	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

REAR LEFT-HAND COURTESY LIGHTS
LVARMA LVAREL
S14-S19-S24

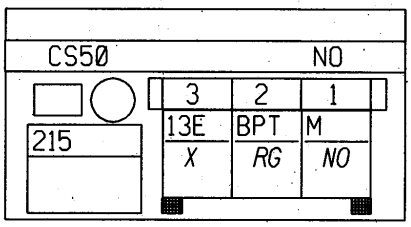


N°	mm²		... → ...
	.35	M	EARTH
	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL

FUEL FILLER FLAP ELECTRIC LOCKING CONTROL
LVARMA LVAREL
S16-S17-S20-S23-S25

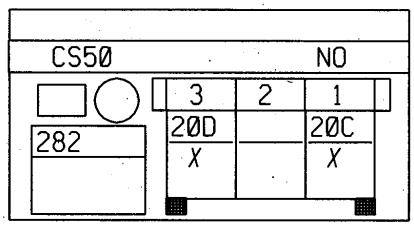


N°	mm²		... → ...
	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

FUEL FILLER FLAP ELECTRIC LOCKING CONTROL
B64,S64/SSLVRA,LVRARMA
S16-S17-S20-S23-S25

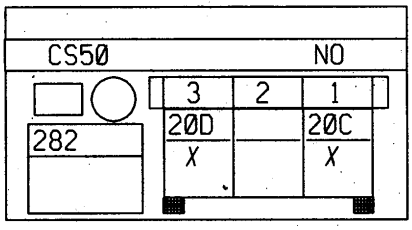


N°	mm²		... → ...
1	.5	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.5	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

FUEL FILLER FLAP ELECTRIC LOCKING CONTROL
LVAREL/SAUF TUR LVARMA/SAUF TUR
S16-S17-S20-S23-S25

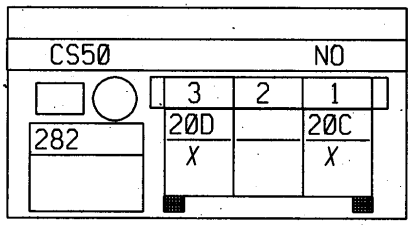


N°	mm²		... → ...
	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

RAISED BRAKE LIGIITS
LVAREL/SAUF TUR LVARMA/SAUF TUR
S15-S18-S19-S23-S24-S26

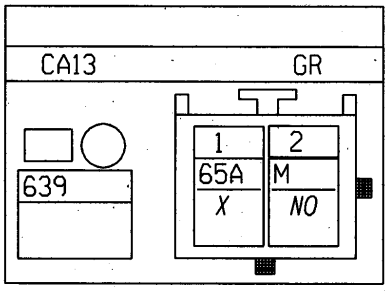


N°	mm²		... → ...
1	.35	65A	+ BRAKE LIGHTS CONTROL
2	.35	M	EARTH

FUEL FILLER FLAP ELECTRIC LOCKING CONTROL
CATOMA CATOEL
S16-S17-S20-S23-S25

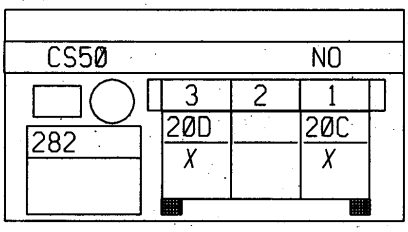


N°	mm²		··· → ···
1	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

ELECTRIC AERIAL
CATOMA CATOEL
S23

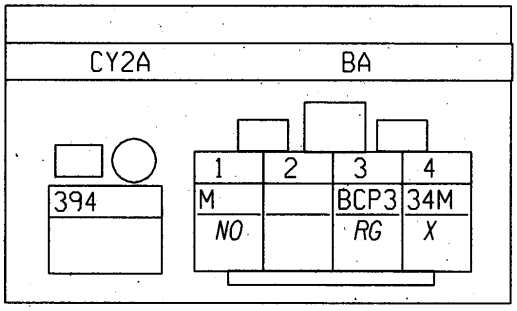


N°	mm²		··· → ···
1	.35	M	EARTH
3	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
4	.35	34M	+ ANTENNA CONTROL

HOOD WARNING BUZZER
CATOMA
S21

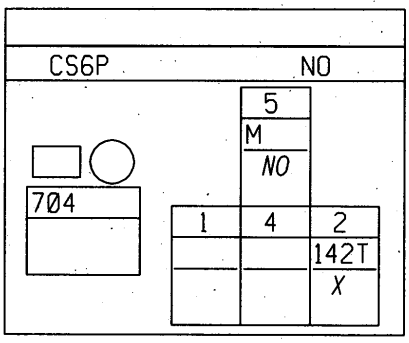


N°	mm²		··· → ···
2	.35	142T	+ HOOD WARNING BUZZER
5	.35	M	EARTH

HOOD WARNING BUZZER
CATOEL
S21

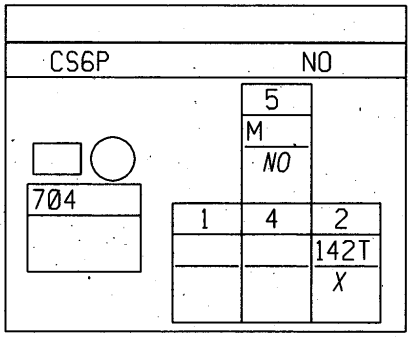


N°	mm²		··· → ···
2	.6	142T	+ HOOD WARNING BUZZER
5	.35	M	EARTH

HOOD SWITCH
CATOMA CATOEL
S21

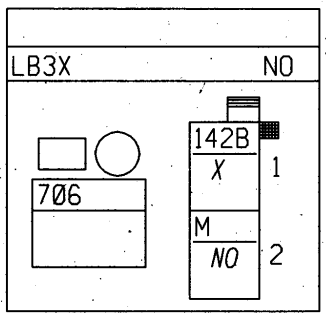


N°	mm²		··· → ···
1	.35	142B	HOOD TOP DEAD CENTRE SENSOR > HOOD - SIGNAL
2	.35	M	EARTH

LEFT-HAND ELECTRIC PANEL OP/CLOS MOTOR

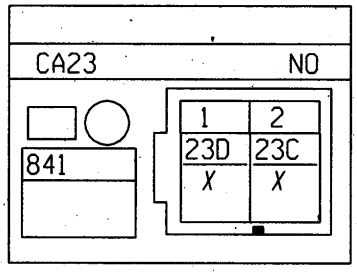


N°	mm²		... → ...
1	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
2	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL

RIGHT-HAND ELECTRIC PANEL OP/CLOS MOTOR

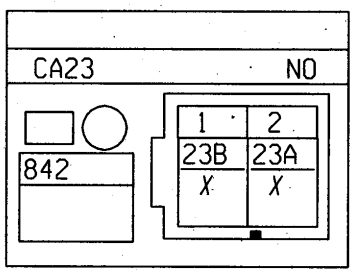


N°	mm²		... → ...
1	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING
2	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT PANEL CLOSURE

HOOD COVER LOCK
CATOEL
S21

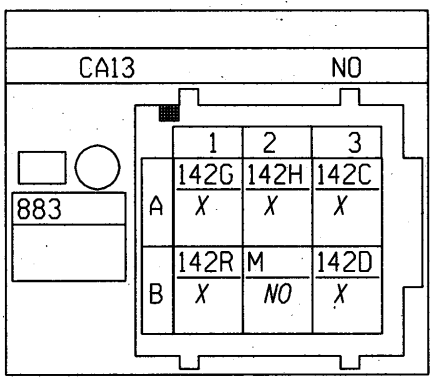


N°	mm²		... ⟶ ...
1	.6	142G	+ CENTRAL DOOR LOCKING OPENING HOOD COVER LOCK > C CONTROL
1	.35	142R	- HOOD COVER 3 LOCK SWITCH > HOOD SIGNAL
2	.6	142H	+ CENTRAL DOOR LOCKING CLOSURE HOOD COVER LOCK > C CONTROL
2	.35	M	EARTH
3	.35	142C	- HOOD COVER 1 LOCK SWITCH > HOOD SIGNAL
3	.35	142D	- HOOD COVER 2 LOCK SWITCH > HOOD SIGNAL

HOOD COVER LOCK
CATOMA
S21

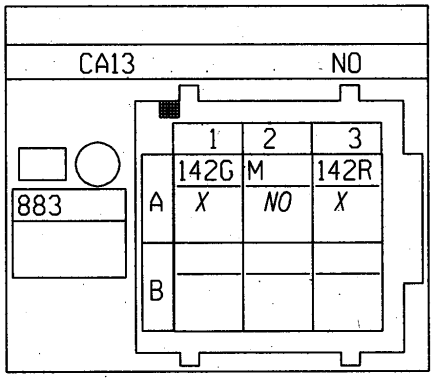


N°	mm²		... ⟶ ...
1	.6	142G	+ CENTRAL DOOR LOCKING OPENING HOOD COVER LOCK > C CONTROL
2	.6	M	EARTH
3	.35	142R	- HOOD COVER 3 LOCK SWITCH > HOOD SIGNAL

OPTIONAL MALLEABLE MODULE
CATOMA CATOEL
S21

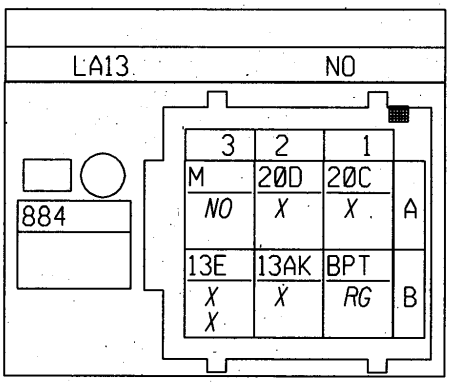


N°	mm²		··· → ···
A1	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
A2	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
B2	.35	13AK	BOOT LATCH MODULE SIGNAL 1
A3	.35	M	EARTH
B3	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
B3	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL

ELECTRIC HOOD
CATOEL
S23

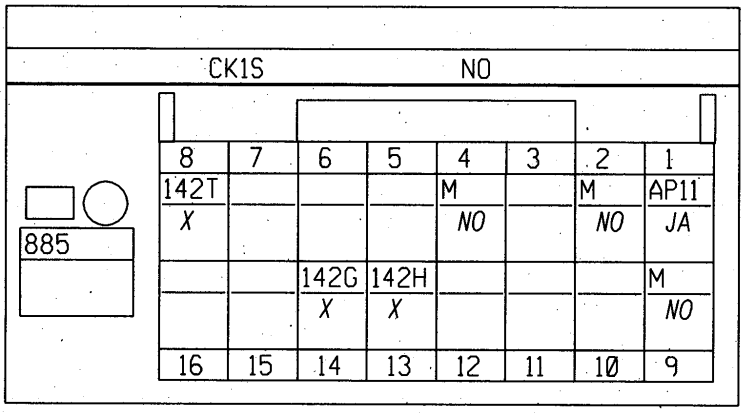


N°	mm²		··· → ···
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.6	M	EARTH
4	.6	M	EARTH
8	.6	142T	+ HOOD WARNING BUZZER
9	.6	M	EARTH
13	.6	142H	+ CENTRAL DOOR LOCKING CLOSURE HOOD COVER LOCK > C CONTROL
14	.6	142G	+ CENTRAL DOOR LOCKING OPENING HOOD COVER LOCK > C CONTROL

ELECTRIC HOOD
CATOEL
S23

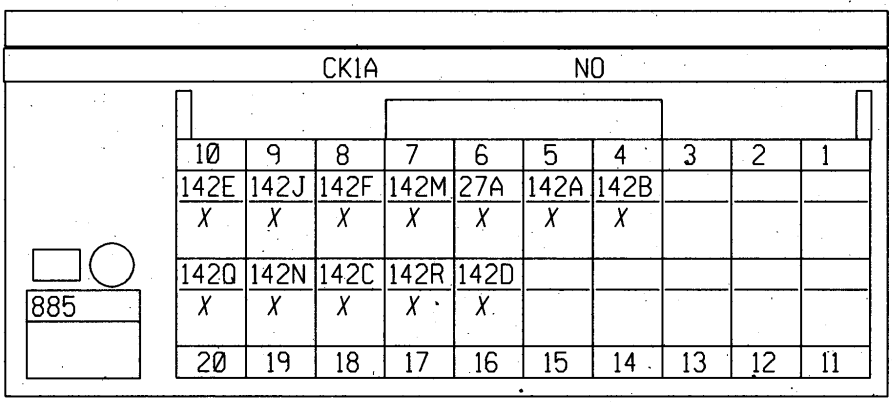


N°	mm²		... → ...
	.35	142B	HOOD TOP DEAD CENTRE SENSOR > HOOD - SIGNAL
	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL
	.35	27A	- HANDBRAKE WARNING LIGHT CONTROL
	.35	142M	- ELECTRIC HOOD CLOSURE CONTROL
	.35	142F	- MASTER CYLINDER OPENING SIGNAL
	.35	142J	- MASTER CYLINDER CLOSING SIGNAL
0	.35	142E	- HOOD COVER CYLINDER OPENING > HOOD SIGNAL
6	.35	142D	- HOOD COVER 2 LOCK SWITCH > HOOD SIGNAL
7	.35	142R	- HOOD COVER 3 LOCK SWITCH > HOOD SIGNAL
8	.35	142C	- HOOD COVER 1 LOCK SWITCH > HOOD SIGNAL
9	.35	142N	- 5TH ARCH CYLINDER CLOSURE SIGNAL
0	.35	142Q	- 5TH ARCH CYLINDER OPENING SIGNAL

ELECTRIC HOOD
CATOMA
S23

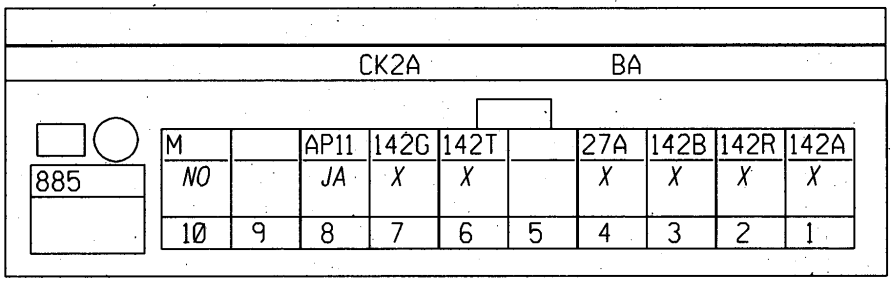


N°	mm²		... → ...
	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL
	.35	142R	- HOOD COVER 3 LOCK SWITCH > HOOD SIGNAL
	.35	142B	HOOD TOP DEAD CENTRE SENSOR > HOOD - SIGNAL
	.35	27A	- HANDBRAKE WARNING LIGHT CONTROL
	.35	142T	+ HOOD WARNING BUZZER
	.6	142G	+ CENTRAL DOOR LOCKING OPENING HOOD COVER LOCK > C CONTROL
	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
0	1	M	EARTH

BONNET COVER CYLINDER SWITCH
CATOEL
S21

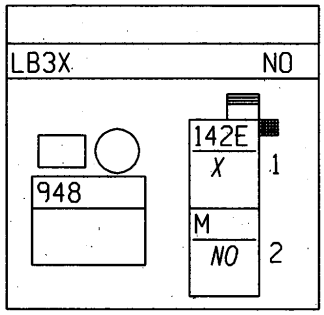


N°	mm²		··· ⟶ ···
1	.35	142E	- HOOD COVER CYLINDER OPENING > HOOD SIGNAL
2	.35	M	EARTH

5TH ARCH CYLINDER SWITCH
CATOEL
S22

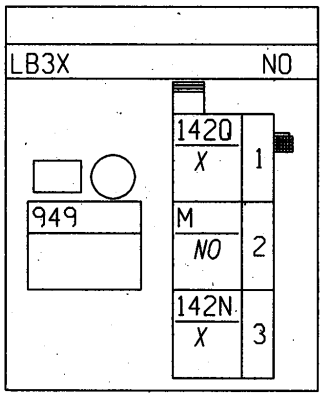


N°	mm²		··· ⟶ ···
1	.35	142Q	- 5TH ARCH CYLINDER OPENING SIGNAL
2	.35	M	EARTH
3	.35	142N	- 5TH ARCH CYLINDER CLOSURE SIGNAL

MASTER CYLINDER SWITCH
CATOEL
S21

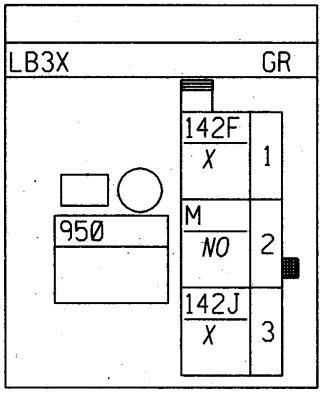

N°	mm²		... → ...
.35	142F		- MASTER CYLINDER OPENING SIGNAL
.35	M		EARTH
.35	142J		- MASTER CYLINDER CLOSING SIGNAL


HYDRAULIC PUMP RELAY SUPPLY CONNECTION
CATOEL
S23

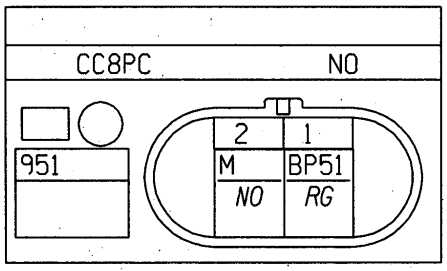

N°	mm²		... → ...
4	BP51		+ BATTERY PROTECTION > HOOD
4	M		EARTH

LPG TANK

S34

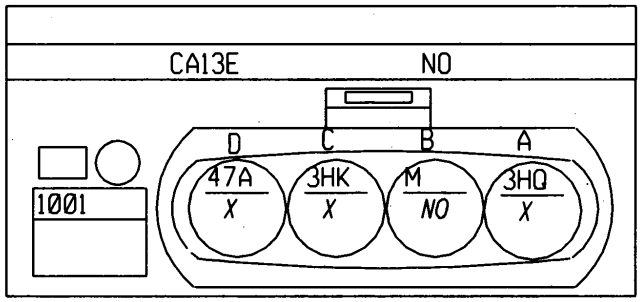


N°	mm²		... ⟶ ...
A	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
B	.6	M	EARTH
C	.35	3HK	- SOLENOID VALVE CONTROLS TURBOCHARGER BYPASS CONTROL
D	.35	47A	- FUEL LEVEL GAUGE >

MAIN ELECTROMAGNETIC HORN

K25,V25,B64,D64,S64,L64,E64/PROJSO/SAUF MERCOS,TUR,COL B64,D64,L64,E64

S1-S27

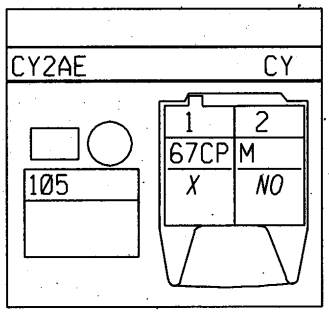


N°	mm²		... → ...
1	2	67CP	+ HORN > FUSE CONTROL
2	2	M	EARTH

RIGHT FRONT FOGLIGHT

K25,V25,B64,D64,S64,L64,E64/PROJSO/SAUF MERCOS,TUR,COL B64,D64,L64,E64

S1

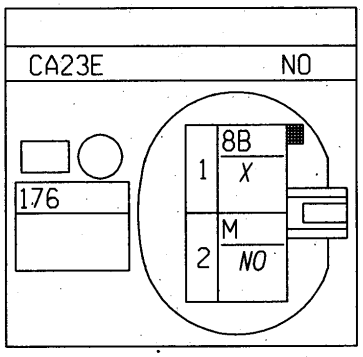


N°	mm²		... → ...
1	.6	8B	+ FRONT FOG LIGHTS > RELAY
2	.6	M	EARTH

LEFT FRONT FOGLIGHT

K25,V25,B64,D64,S64,L64.E64/PROJSO/SAUF MERCOS,TUR,COL B64,D64,L64.E64


S1

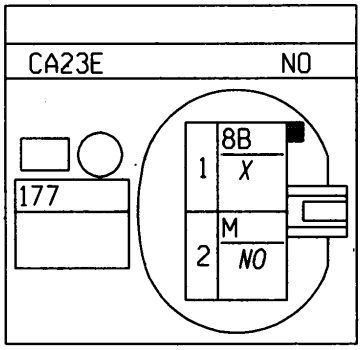

N°	mm²		··· ⟶ ···
1	.6	8B	+ FRONT FOG LIGHTS > RELAY
2	.6	M	EARTH

RIGHT HEADLIGHT


K25,V25,B64,D64,S64,L64,E64/PROJSO/SAUF MERCOS,TUR,COL

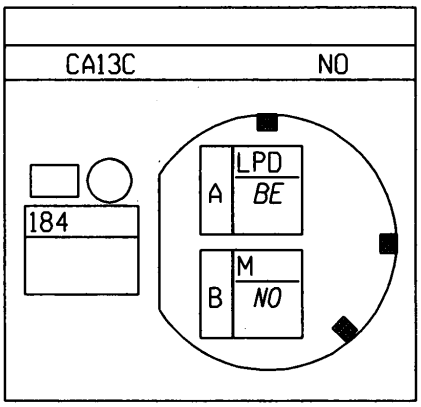

N°	mm²		··· ⟶ ···
A	.6	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
B	.6	M	EARTH

LEFT HEADLIGHT

K25,V25,B64,D64,S64,L64,E64/PROJSO/SAUF MERCOS,TUR,COL

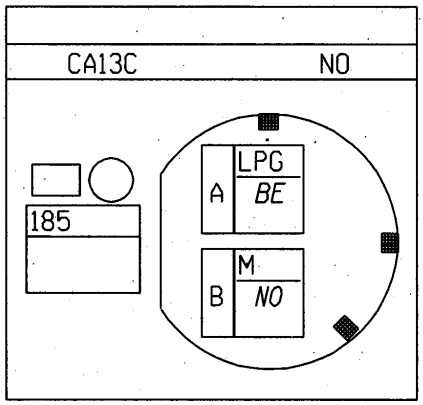


N°	mm²		··· → ···
1	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
3	.6	M	EARTH

RIGHT HEADLIGHT

B64,D64,L64,E64/F5R K25,B64,D64,L64,E64/PROJDO/SAUF MERCOS,TUR

S1

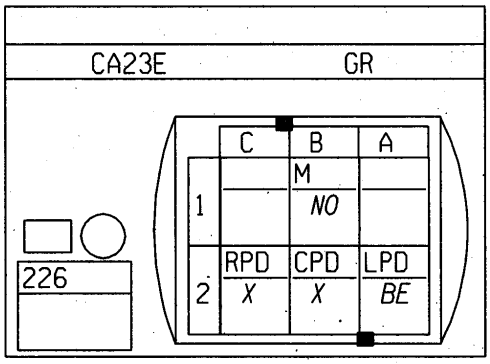


N°	mm²		··· → ···
31	2	M	EARTH
42	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
32	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
22	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT

RIGHT HEADLIGHT

K25,V25,B64,D64,S64,L64,E64/PROJSO/SAUF MERCOS,TUR,COL

S1

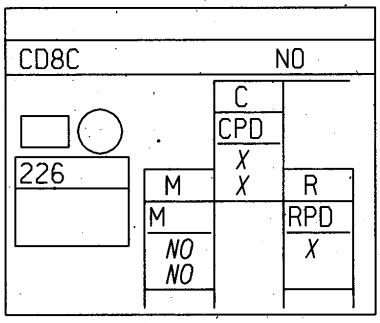


N°	mm²		··· ⟶ ···
C	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
C	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
M	.6	M	EARTH
M	1	M	EARTH
R	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT

LEFT HEADLIGHT

B64,D64,L64,E64/F5R K25,B64,D64,L64,E64/PROJDO/SAUF MERCOS,TUR

S1

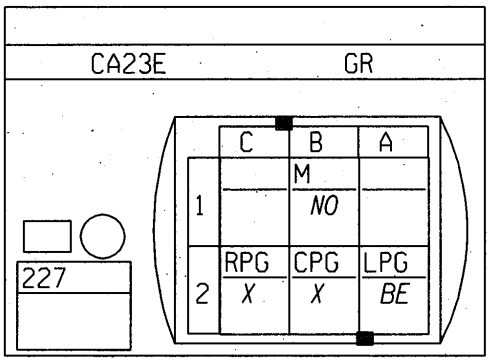


N°	mm²		··· ⟶ ···
B1	2	M	EARTH
A2	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
B2	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
C2	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT

LEFT HEADLIGHT

K25,V25,B64,D64,S64,L64,E64/PROJSO/SAUF MERCOS,TUR,COL

S1

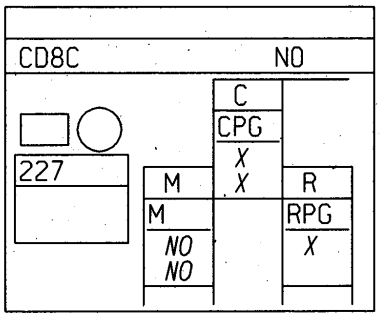


N°	mm²		... → ...
3	.6	CPG	+ LH PROTECTED DIPPED HEADLIGHT
3	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
4	.6	M	EARTH
4	1	M	EARTH
5	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT

RIGHT FRONT FLASHING LIGHT

K25,V25,B64,D64,S64,L64,E64/PROJSO/SAUF MERCOS,TUR,COL B64,D64,L64,E64

S1

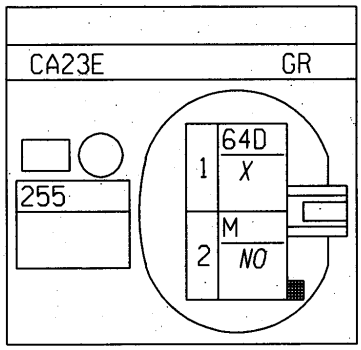


N°	mm²		... → ...
1	.35	64D	RH FRONT INDICATOR CONTROL
2	.35	M	EARTH

LEFT FRONT FLASHING LIGHT

K25,V25,B64,D64,S64,L64.E64/PROJSO/SAUF MERCOS,TUR,COL B64,D64,L64,E64

S1

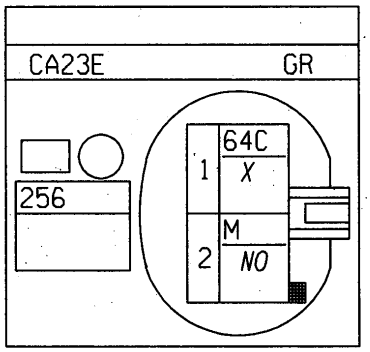


N°	mm²		... ⟶ ...
1	.35	64C	LH INDICATOR CONTROL
2	.35	M	EARTH

SECONDARY ELECTRO-MAGNETIC WARNING BUZZER

B64,D64,L64,E64/F5R

S1

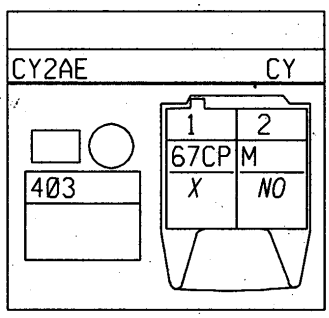


N°	mm²		... ⟶ ...
1	2	67CP	+ HORN > FUSE CONTROL
2	2	M	EARTH

LEFT HEADLIGHT CORRECTOR MOTOR

K25,V25,B64,D64,S64,L64,E64/PROJSO/SAUF MERCOS,TUR,COL B64,D64,L64,E64

S1

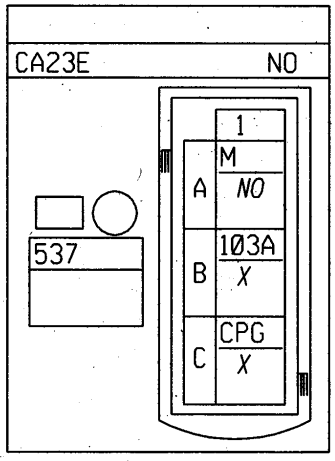


N°	mm²		··· ⟶ ···
1	.6	M	EARTH
1	.6	103A	HEADLAMP POSITIONING CONTROL
1	.6	CPG	+ LH PROTECTED DIPPED HEADLIGHT

RIGHT HEADLIGHT CORRECTOR MOTOR

K25,V25,B64,D64,S64,L64,E64/PROJSO/SAUF MERCOS,TUR,COL B64,D64,L64,E64


S1

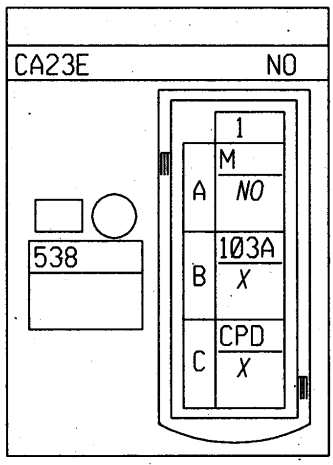

N°	mm²		··· ⟶ ···
1	.6	M	EARTH
1	.6	103A	HEADLAMP POSITIONING CONTROL
1	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT

ELECTRICAL BOOT LOCKING


S15-S18-S20-S23-S26

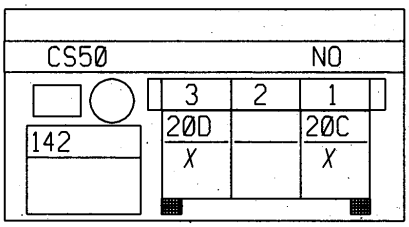

N°	mm²		... ⟶ ...
1	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

BOOT SWITCII


S15-S18-S20-S23-S26

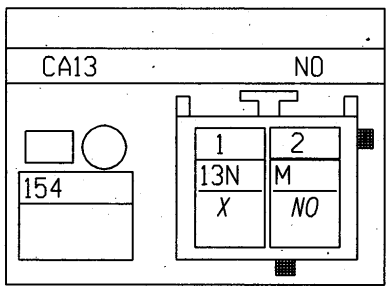

N°	mm²		... ⟶ ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.35	M	EARTH

REAR FOG LIGHT AND REAR RH REVERSE LIGHT


S20

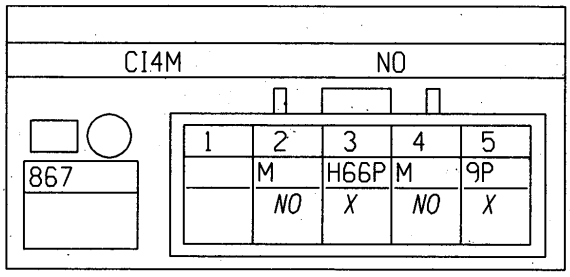

N°	mm²		... ⟶ ...
2	.6	M	EARTH
3	.6	H66P	+ REVERSING LIGHTS CONTROL
4	.6	M	EARTH
5	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

REAR FOG LIGHT AND REAR LH REVERSE LIGHT


S20

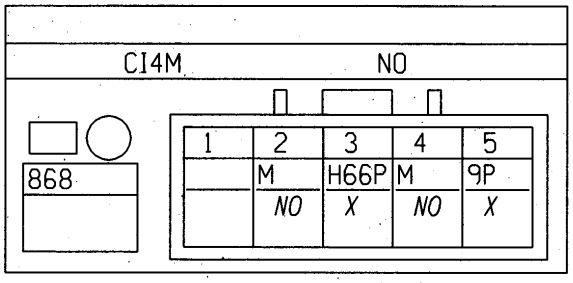

N°	mm²		... → ...
	.6	M	EARTH
	.6	H66P	+ REVERSING LIGHTS CONTROL
	.6	M	EARTH
	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

ELECTRICAL BOOT LOCKING


S15-S18-S20-S23-S26

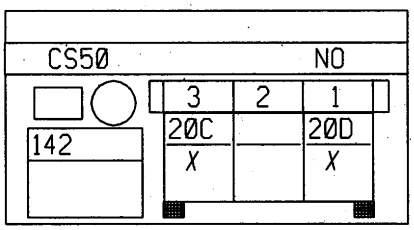

N°	mm²		... → ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

BOOT SWITCII


S15-S18-S20-S23-S26

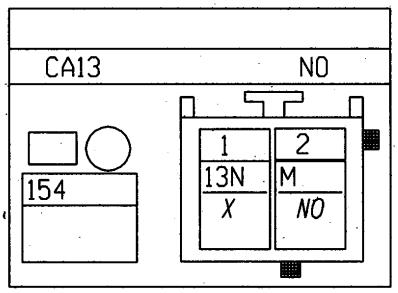

N°	mm²		... → ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.35	M	EARTH

REAR WINDOW WIPER MOTOR


S15-S17-S26

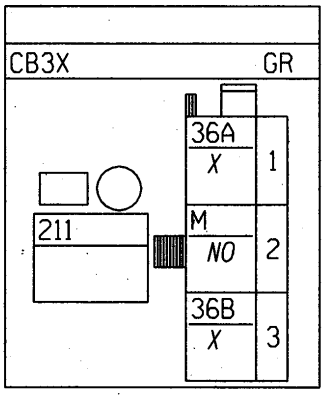

N°	mm²		... → ...
1	1	36A	+ REAR WIPER CONTROL
2	1	M	EARTH
3	.35	36B	+ REAR WIPER PARK POSITION CONTROL

ELECTRICAL BOOT LOCKING


S15-S18-S20-S23-S26

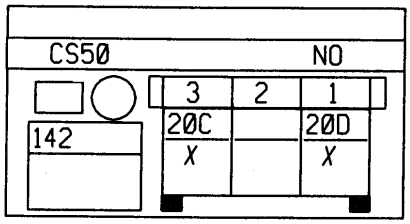

N°	mm²		... ⟶ ...
.6	20D		+ CLOSE CENTRAL DOOR LOCKING CONTROL
.6	20C		+ OPEN CENTRAL DOOR LOCKING CONTROL

BOOT SWITCH


S15-S18-S20-S23-S26

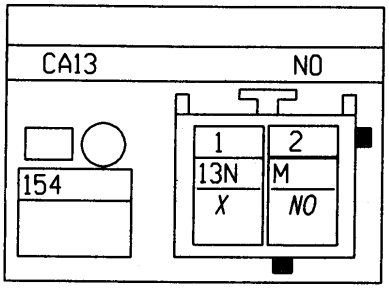

N°	mm²		... ⟶ ...
.35	13N		- INTERIOR LIGHTING > REAR REBATE CONTROL
.35	M		EARTH

REAR WINDOW WIPER MOTOR


S15-S17-S26

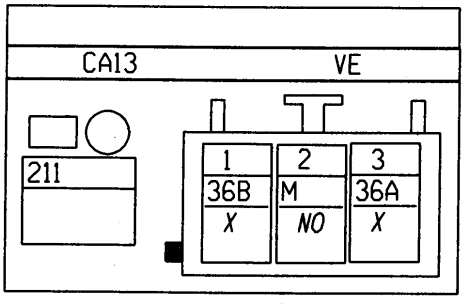

N°	mm²		... ⟶ ...
.35	36B		+ REAR WIPER PARK POSITION CONTROL
1	M		EARTH
1	36A		+ REAR WIPER CONTROL

RAISED BRAKE LIGHTS


S15-S18-S19-S23-S24-S26

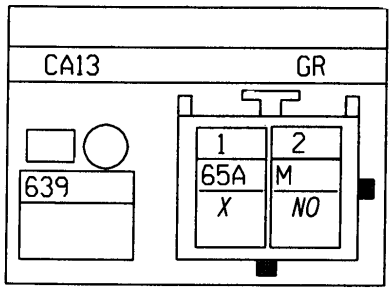

N°	mm²		... ⟶ ...
1	.35	65A	+ BRAKE LIGHTS CONTROL
2	.35	M	EARTH

RAISED BRAKE LIGHTS


S15-S18-S19-S23-S24-S26

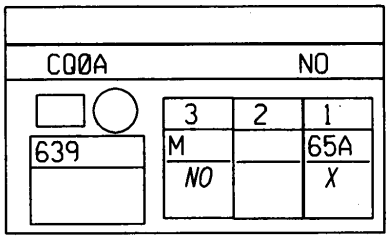

N°	mm²		... → ...
	.35	65A	+ BRAKE LIGHTS CONTROL
	.35	M	EARTH


DIGITAL OR ANALOGUE CLOCK

S5

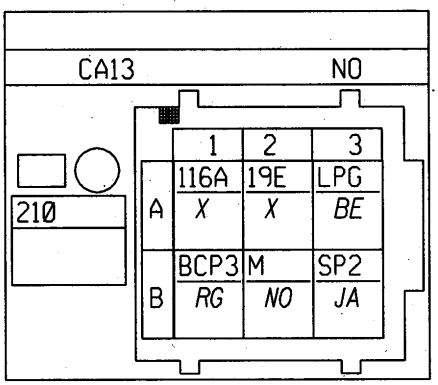

N°	mm²		... ⟶ ...
A1	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
B1	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
A2	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
B2	.35	M	EARTH
A3	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
B3	.35	SP2	+ PROTECTED CONTROL > RADIO >

RADIO
SSNAV
S4

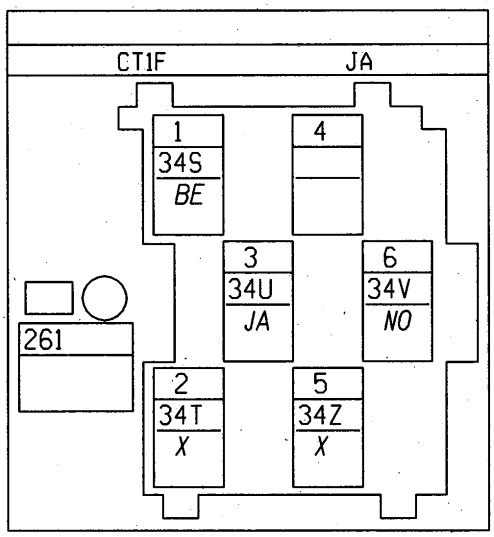

N°	mm²		... ⟶ ...
1	.35	34S	I2C RADIO DATA BUS SIGNAL
2	.35	34T	I2C RADIO CLOCK SIGNAL
3	.35	34U	MARKING SIGNAL - MARK RADIO I2C
5	.35	34Z	RADIO OPERATION SIGNAL
6	.35	34V	EARTH SHIELDING I2C SIGNAL

MULTIFUNCTION DISPLAY
SSNAV
S4


653 COØM NO

15	14	13	12	11	1Ø	9	8	7	6	5	4	3	2	1
34U	34T	34S	34Z	34V	47X	BCP3	SP2	19E	LPG	M			M	116A
JA	*X*	*BE*	*X*	*NO*	*X*	*RG*	*JA*	*X*	*BE*	*NO*			*NO*	*X*

N°	mm²		... → ...
	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
	.35	M	EARTH
	.35	M	EARTH
	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
	.35	SP2	+ PROTECTED CONTROL > RADIO >
	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
0	.35	47X	EXTERNAL TEMPERATURE DISPLAY OUTPUT SIGNAL
1	.35	34V	EARTH SHIELDING I2C SIGNAL
2	.35	34Z	RADIO OPERATION SIGNAL
3	.35	34S	I2C RADIO DATA BUS SIGNAL
4	.35	34T	I2C RADIO CLOCK SIGNAL
5	.35	34U	MARKING SIGNAL - MARK RADIO I2C

RIGHT REAR WHEEL SENSOR


S3

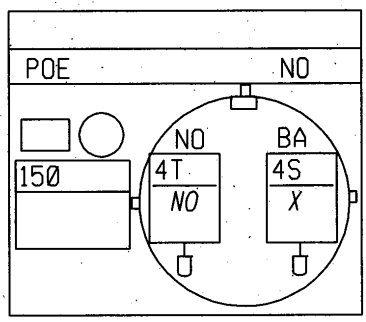

N°	mm²		... ⟶ ...
BA	.5	4S	RH REAR WHEEL SENSOR SIGNAL
NO	.5	4T	+RH REAR WHEEL SENSOR

LEFT REAR WHEEL SENSOR


S3

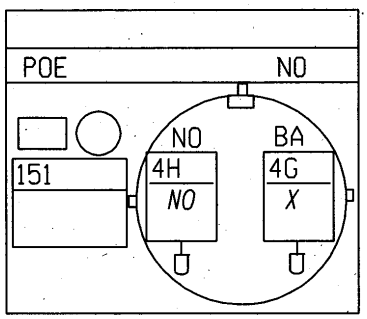

N°	mm²		... ⟶ ...
BA	.5	4G	LH REAR WHEEL SENSOR SIGNAL
NO	.5	4H	+LH REAR WHEEL SENSOR

RIGHT REAR WHEEL SENSOR


S3

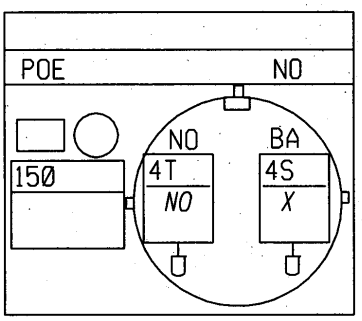

N°	mm²		... → ...
BA	.5	4S	RH REAR WHEEL SENSOR SIGNAL
NO	.5	4T	+RH REAR WHEEL SENSOR

LEFT REAR WHEEL SENSOR


S3

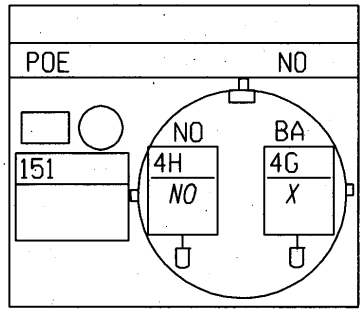

N°	mm²		... → ...
BA	.5	4G	LH REAR WHEEL SENSOR SIGNAL
NO	.5	4H	+LH REAR WHEEL SENSOR

ALTERNATOR


S28-S29-S31-S32-S33-S35

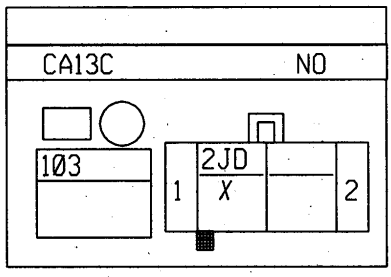

N°	mm²		... → ...
1	.6	2JD	+ ALTERNATOR EXCITATION

ALTERNATOR

S28-S29-S31-S32-S33-S35

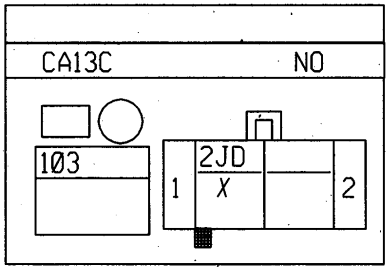


N°	mm²		··· ⟶ ···
.6	2JD		+ ALTERNATOR EXCITATION

ALTERNATOR

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M


S28-S29-S31-S32-S33-S35

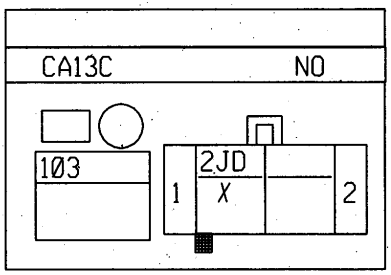

N°	mm²		··· ⟶ ···
1	.6	2JD	+ ALTERNATOR EXCITATION


ALTERNATOR

S28-S29-S31-S32-S33-S35

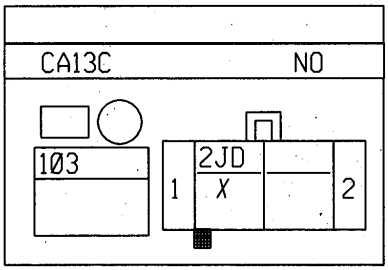

N°	mm²		··· → ···
	.6	2JD	+ ALTERNATOR EXCITATION


ALTERNATOR
BVM5 BVA4
S28-S29-S31-S32-S33-S35

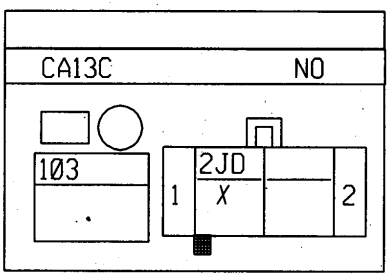

N°	mm²		... → ...
1	.6	2JD	+ ALTERNATOR EXCITATION

ALTERNATOR


S28-S29-S31-S32-S33-S35

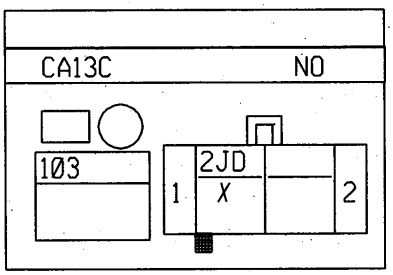

N°	mm²		... → ...
	.6	2JD	+ ALTERNATOR EXCITATION

ELECTRONIC CONTROL UNIT INJECTION


S28-S29-S31-S32-S33-S35

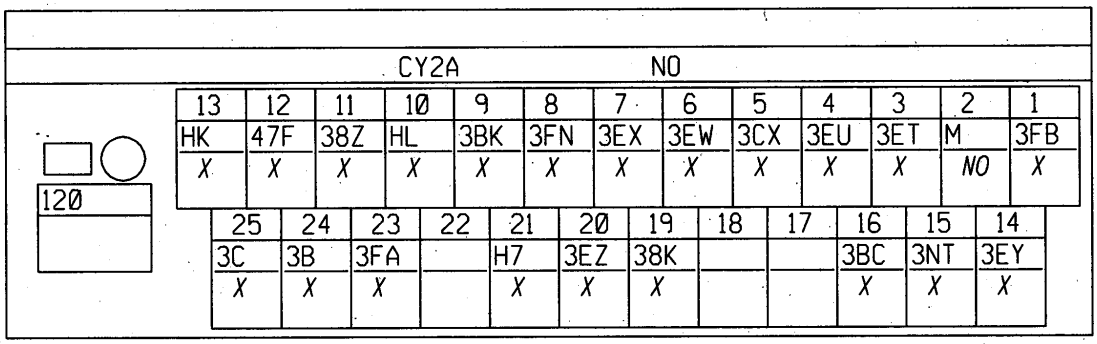

N°	mm²		... → ...
	.6	3FB	+ INJECTION > PROTECTION RELAY
	3	M	EARTH
	.6	3ET	AIR-WATER REGULATION NEEDLE POTENTIOMETER EARTH SENSOR
	.6	3EU	+ POTENTIOMETER CHARGE 1
	.6	3CX	- EGR SOLENOID VALVE CONTROL
	.6	3EW	- CAM SOLENOID VALVE > COMPUTER CONTROL
	.5	3EX	RH LIFT SIGNAL
	.6	3FN	ENGINE SPEED SENSOR SIGNAL
	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
0	.35	HL	DIAGNOSTIC SIGNAL L
1	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
2	.35	47F	VEHICLE SPEED SIGNAL
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.6	3EY	- SPARK PLUG COIL RELAY 1 (1-3) CONTROL
5	.6	3NT	ALTIMETRIC CORRECTION RELAY CONTROL
6	.6	3BC	- IDLING REGULATION SOLENOID > INJECTION COMPUTER CONTROL
9	.6	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
0	.6	3EZ	- SPARK PLUG COIL RELAY 2 (2-4) CONTROL
1	.6	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
3	.6	3FA	POTENTIOMETER CHARGE 1 + SIGNAL
4	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
5	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR

ALTERNATOR


S28-S29-S31-S32-S33-S35

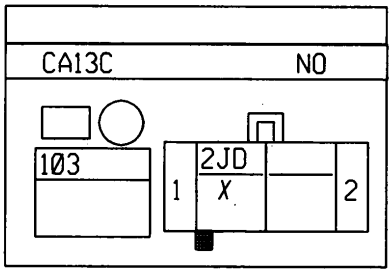

N°	mm²		... → ...
1	.6	2JD	+ ALTERNATOR EXCITATION


ELECTRIC PUMP REGULATOR UNIT

S35

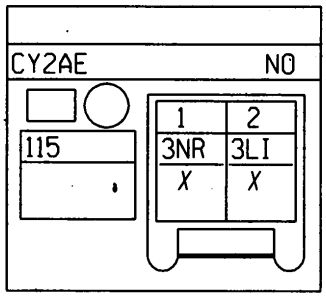


N°	mm²		... → ...
1	1	3NR	+ INJECTOR >
2	1	3LI	- FUEL PRESSURE REGULATION SOLENOID VALVE CONTROL

ALTERNATOR
F4P720 F4P722
S28-S29-S31-S32-S33-S35

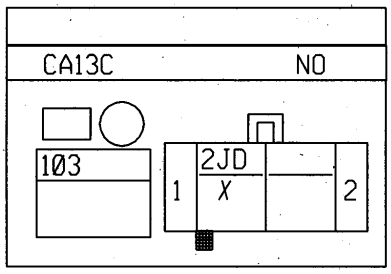


N°	mm²		··· ⟶ ···
.6	2JD		+ ALTERNATOR EXCITATION

ECU GEARBOX

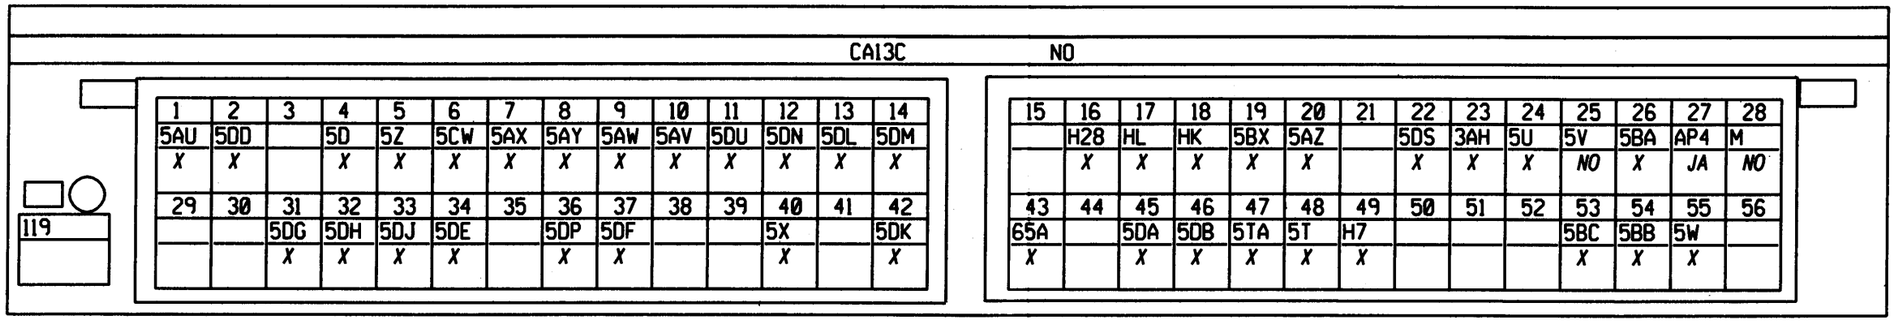


N°	mm²		... → ...
1	1	5AU	+ SEQUENCE SOLENOID VALVE
2	.6	5DD	EXCHANGER FLOW METER SOLENOID VALVE + CONTROL
4	.35	5D	- AUTOMATIC TRANSMISSION FAULT WARNING LIGHT CONTROL
5	.35	5Z	AUTOMATIC TRANSMISSION TORQUE REDUCTION CONTROL
6	.35	5CW	GEARBOX FAST IDLING CONTROL
7	.6	5AX	- SEQUENCE 3 SOLENOID VALVE CONTROL
8	.6	5AY	- SEQUENCE 4 SOLENOID VALVE CONTROL
9	.6	5AW	- SEQUENCE 2 SOLENOID VALVE CONTROL
10	.6	5AV	- SEQUENCE 1 SOLENOID VALVE CONTROL
11	.6	5DU	- GEAR CHANGE LEVER LOCK CONTROL
12	.6	5DN	EXCHANGER FLOW METER SOLENOID VALVE - CONTROL
13	.6	5DL	MODULATION SOLENOID "ALVE 3 CONTROL
14	.6	5DM	MODULATION SOLENOID VALVE 4 CONTROL
16	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL
17	.35	HL	DIAGNOSTIC SIGNAL L
18	.35	HK	DIAGNOSTIC SIGNAL K
19	1	5BX	SOLENOID VALVE MODULATION LOCK-UP CONTROL
20	1	5AZ	- SEQUENCE 5 SOLENOID VALVE CONTROL
22	.35	5DS	TORQUE SIGNAL > PULSE AMPLITUDE MODULATION
23	.35	3AH	THROTTLE POSITION SIGNAL - PULSE AMPLITUDE MODULATION
24	.35	5U	+SENSOR LINE PRESSURE
25	.35	5V	-SENSOR LINE PRESSURE
26	1	5BA	MODULATION SOLENOID VALVE +
27	2	AP4	+ AFTER IGNITION AUTOMATIC TRANSMISSION PROTECTED FUSE
28	2	M	EARTH
31	.35	5DG	SIGNAL 2 MULTIFUNCTION SWITCH
32	.35	5DH	SIGNAL 3 MULTIFUNCTION SWITCH
33	.35	5DJ	SIGNAL 4 MULTIFUNCTION SWITCH
34	.35	5DE	- MULTIFUNCTION SWITCH - CONTACT PARK NEUTRAL CONTROL
36	.35	5DP	1ST GEAR CONTROL > N-1 PULSE CONTROL
37	.35	5DF	SIGNAL 1 MULTIFUNCTION SWITCH
40	.35	5X	- POOR GRIP STARTING CONTROL
42	.35	5DK	- MULTIFUNCTION SWITCH > AUTOMATIC TRANSMISSION COMPUTER
43	.35	65A	+ BRAKE LIGHTS CONTROL
45	.35	5DA	SIGNAL+ GEARBOX INPUT SPEED SENSOR
46	.35	5DB	SIGNAL - GEARBOX INPUT SPEED SENSOR
47	.6	5TA	-SENSOR GEARBOX OUTPUT SPEED
48	.6	5T	+SENSOR GEARBOX OUTPUT SPEED
49	.6	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
53	.35	5BC	"""- PRESSURE 1" SOLENOID VALVE
54	.35	5BB	- SEQUENCE 6 SOLENOID VALVE CONTROL
55	.35	5W	SIGNAL+ LINE PRESSURE SENSOR

ECU GEARBOX
K4M700-701-704

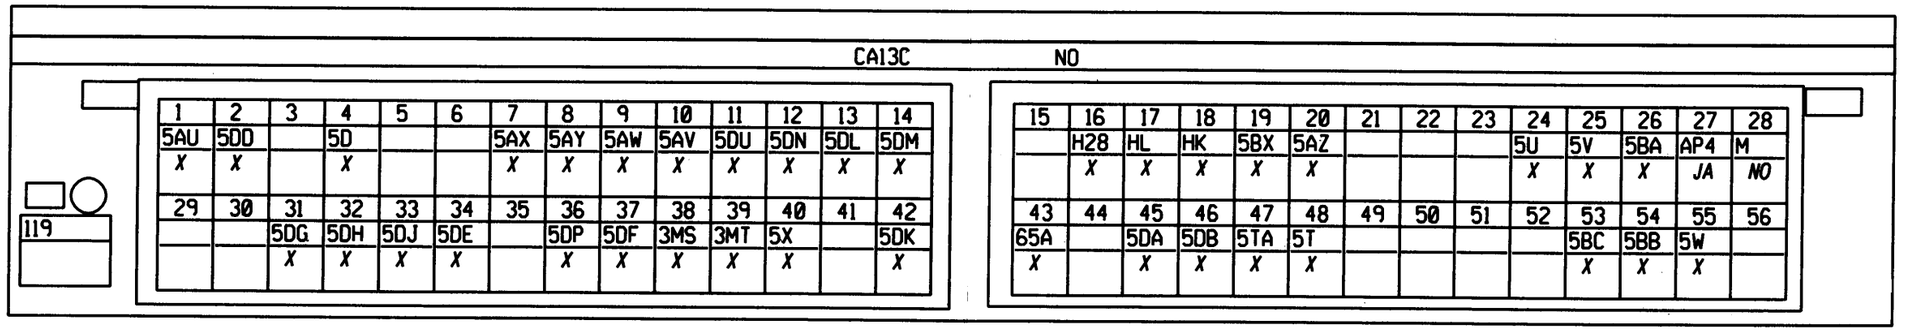

N°	mm²		... ⟶ ...
1	1	5AU	+ SEQUENCE SOLENOID VALVE
2	.6	5DD	EXCHANGER FLOW METER SOLENOID VALVE + CONTROL
4	.35	5D	- AUTOMATIC TRANSMISSION FAULT WARNING LIGHT CONTROL
7	.6	5AX	- SEQUENCE 3 SOLENOID VALVE CONTROL
8	.6	5AY	- SEQUENCE 4 SOLENOID VALVE CONTROL
9	.6	5AW	- SEQUENCE 2 SOLENOID VALVE CONTROL
10	.6	5AV	- SEQUENCE 1 SOLENOID VALVE CONTROL
11	.6	5DU	- GEAR CHANGE LEVER LOCK CONTROL
12	.6	5DN	EXCHANGER FLOW METER SOLENOID VALVE - CONTROL
13	.6	5DL	MODULATION SOLENOID VALVE 3 CONTROL
14	.6	5DM	MODULATION SOLENOID VALVE 4 CONTROL
16	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL
17	.35	HL	DIAGNOSTIC SIGNAL L
18	.35	HK	DIAGNOSTIC SIGNAL K
19	1	5BX	SOLENOID VALVE MODULATION LOCK-UP CONTROL
20	1	5AZ	- SEQUENCE 5 SOLENOID VALVE CONTROL
24	.35	5U	+SENSOR LINE PRESSURE
25	.35	5V	-SENSOR LINE PRESSURE
26	1	5BA	MODULATION SOLENOID VALVE +
27	2	AP4	+ AFTER IGNITION AUTOMATIC TRANSMISSION PROTECTED FUSE
28	2	M	EARTH
31	.35	5DG	SIGNAL 2 MULTIFUNCTION SWITCH
32	.35	5DH	SIGNAL 3 MULTIFUNCTION SWITCH
33	.35	5DJ	SIGNAL 4 MULTIFUNCTION SWITCH
34	.35	5DE	- MULTIFUNCTION SWITCH - CONTACT PARK NEUTRAL CONTROL
36	.35	5DP	1ST GEAR CONTROL > N-1 PULSE CONTROL
37	.35	5DF	SIGNAL 1 MULTIFUNCTION SWITCH
38	.35	3MS	ENGINE CANH SIGNAL
39	.35	3MT	ENGINE CANL SIGNAL
40	.35	5X	- POOR GRIP STARTING CONTROL
42	.35	5DK	- MULTIFUNCTION SWITCH > AUTOMATIC TRANSMISSION COMPUTER
43	.35	65A	+ BRAKE LIGHTS CONTROL
45	.35	5DA	SIGNAL+ GEARBOX INPUT SPEED SENSOR
46	.35	5DB	SIGNAL - GEARBOX INPUT SPEED SENSOR
47	.6	5TA	-SENSOR GEARBOX OUTPUT SPEED
48	.6	5T	+SENSOR GEARBOX OUTPUT SPEED
53	.35	5BC	"""- PRESSURE 1" SOLENOID VALVE
54	.35	5BB	- SEQUENCE 6 SOLENOID VALVE CONTROL
55	.35	5W	SIGNAL+ LINE PRESSURE SENSOR

ECU GEARBOX
BVA4

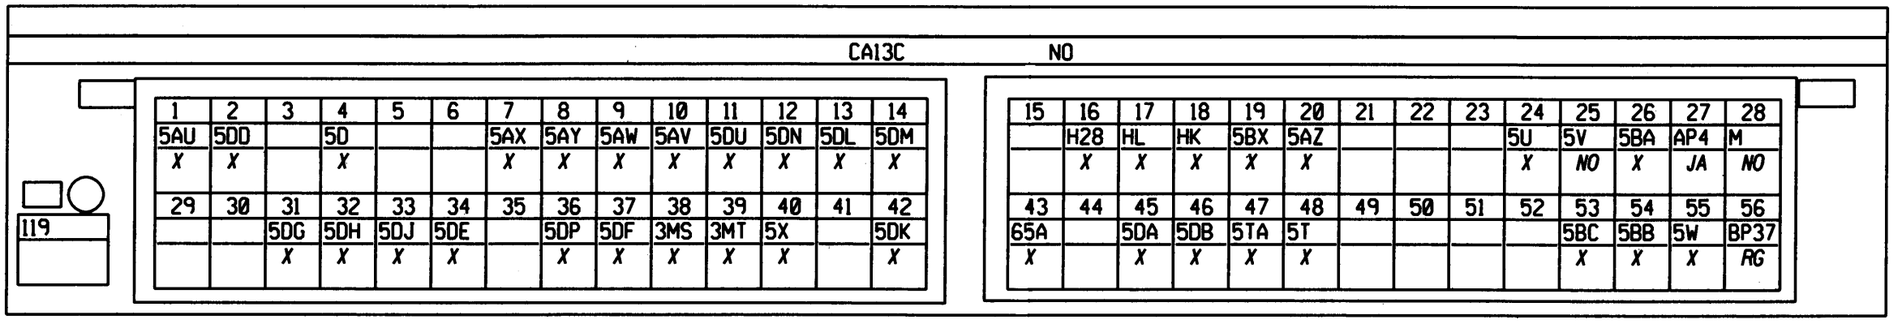


N°	mm²		... ⟶ ...
1	1	5AU	+ SEQUENCE SOLENOID VALVE
2	.6	5DD	EXCHANGER FLOW METER SOLENOID VALVE + CONTROL
4	.35	5D	- AUTOMATIC TRANSMISSION FAULT WARNING LIGHT CONTROL
7	.6	5AX	- SEQUENCE 3 SOLENOID VALVE CONTROL
8	.6	5AY	- SEQUENCE 4 SOLENOID VALVE CONTROL
9	.6	5AW	- SEQUENCE 2 SOLENOID VALVE CONTROL
10	.6	5AV	- SEQUENCE 1 SOLENOID VALVE CONTROL
11	.6	5DU	- GEAR CHANGE LEVER LOCK CONTROL
12	.6	5DN	EXCHANGER FLOW METER SOLENOID VALVE - CONTROL
13	.6	5DL	MODULATION SOLENOID VALVE 3 CONTROL
14	.6	5DM	MODULATION SOLENOID VALVE 4 CONTROL
16	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL
17	.35	HL	DIAGNOSTIC SIGNAL L
18	.35	HK	DIAGNOSTIC SIGNAL K
19	1	5BX	SOLENOID VALVE MODULATION LOCK-UP CONTROL
20	1	5AZ	- SEQUENCE 5 SOLENOID VALVE CONTROL
24	.6	5U	+SENSOR LINE PRESSURE
25	.6	5V	-SENSOR LINE PRESSURE
26	1	5BA	MODULATION SOLENOID VALVE +
27	2	AP4	+ AFTER IGNITION AUTOMATIC TRANSMISSION PROTECTED FUSE
28	2	M	EARTH
31	.35	5DG	SIGNAL 2 MULTIFUNCTION SWITCH
32	.35	5DH	SIGNAL 3 MULTIFUNCTION SWITCH
33	.35	5DJ	SIGNAL 4 MULTIFUNCTION SWITCH
34	.35	5DE	- MULTIFUNCTION SWITCH - CONTACT PARK NEUTRAL CONTROL
36	.35	5DP	1ST GEAR CONTROL > N-1 PULSE CONTROL
37	.35	5DF	SIGNAL 1 MULTIFUNCTION SWITCH
38	.35	3MS	ENGINE CANH SIGNAL
39	.35	3MT	ENGINE CANL SIGNAL
40	.35	5X	- POOR GRIP STARTING CONTROL
42	.35	5DK	- MULTIFUNCTION SWITCH > AUTOMATIC TRANSMISSION COMPUTER
43	.35	65A	+ BRAKE LIGHTS CONTROL
45	.35	5DA	SIGNAL+ GEARBOX INPUT SPEED SENSOR
46	.35	5DB	SIGNAL - GEARBOX INPUT SPEED SENSOR
47	.6	5TA	-SENSOR GEARBOX OUTPUT SPEED
48	.6	5T	+SENSOR GEARBOX OUTPUT SPEED
53	.35	5BC	"""- PRESSURE 1" SOLENOID VALVE
54	.35	5BB	- SEQUENCE 6 SOLENOID VALVE CONTROL
55	.6	5W	SIGNAL+ LINE PRESSURE SENSOR
56	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING

ELECTRONIC CONTROL UNIT INJECTION


S28-S29-S31-S32-S33-S35

CA13C NO



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		HL	3KQ	38Z	38X		3LS	TB9		3BL	3KB	3KC	3KT	3KR
		X	X	X	X		X	X		X	X	X	X	X
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
		HK	3C	3EL	3FAB	3LW		3KH		3LR	3LU	38Y		
		X	X	X	X	X		X		X	X	X		
61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
3LT	3LV	3JM		3JQ	3JK	3KP	38W						3BG	
X	X	X		X	X	X	X						X	

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
	47F	123N		H17			3JP	3BK		H7				3FW
	X	X		X			X	X		X				X
46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
65A			3FY		3KL	3FF	3JN	3MW					3CX	3KU
X			X		X	X	X	X					X	X
76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
3FB	3FB	M	M		AP29	3FAC	3FH		47H			38K	3FZ	3KV
X	X	NO	NO		JA	X	X		X			X	X	X

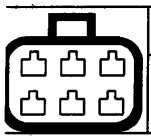

N°	mm²		... ⟶ ...
3	.35	HL	DIAGNOSTIC SIGNAL L
4	.6	3KQ	AIR TEMPERATURE SIGNAL
5	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
6	.6	38X	FREON PRESSURE SENSOR SIGNAL
8	.6	3LS	POTENTIOMETER CHARGE 1 + SIGNAL
9	.6	TB9	INJECTION PUMP SCREENING BRAID
11	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL
12	.6	3KB	ROTOR COMPENSATION SIGNAL
13	.6	3KC	CAM SENSOR SIGNAL
14	.6	3KT	DIESEL PUMP ROTOR SENSOR SIGNAL
15	.6	3KR	INDUCTANCE SWITCH SIGNAL
17	.35	47F	VEHICLE SPEED SIGNAL
18	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
20	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
23	.6	3JP	FAN 2 CONTROL RELAY
24	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
26	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
30	1	3FW	- ELECTRIC CUT-OUT SOLENOID VALVE CONTROL
33	.35	HK	DIAGNOSTIC SIGNAL K
34	.35	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
35	.6	3EL	SIGNAL+ EGR POTENTIOMETER
36	.6	3FAB	SIGNAL+ FUEL TEMPERATURE
37	.35	3LW	POTENTIOMETER CHARGE 2 + SIGNAL
39	.6	3KH	EGR + COPY
41	.35	3LR	+ POTENTIOMETER CHARGE 1
42	.35	3LU	POTENTIOMETER CHARGE 2 +
43	.6	38Y	+FREON PRESSURE SENSOR
46	.35	65A	+ BRAKE LIGHTS CONTROL
49	.35	3FY	PREHEATER RELAY DIAGNOSTIC SIGNAL
51	.6	3KL	FOR DIESEL PUMP MEMORY SIGNAL
52	.35	3FF	- PREHEATER RELAY CONTROL
53	.6	3JN	FAN CONTROL RELAY 1
54	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
59	1	3CX	- EGR SOLENOID VALVE CONTROL
60	.6	3KU	DIESEL PUMP ROTOR B CONTROL
61	.35	3LT	POTENTIOMETER CHARGE 1 -
62	.35	3LV	POTENTIOMETER CHARGE 2 -
63	.6	3JM	- EGR SOLENOID VALVE
65	.6	3JQ	- AIR TEMPERATURE
66	.35	3JK	- COOLANT TEMPERATURE
67	.6	3KP	- DIESEL FUEL TEMPERATURE > DIESEL PUMP MEMORY
68	.6	38W	- FREON PRESSURE SENSOR (AC)
74	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
76	1	3FB	+ INJECTION > PROTECTION RELAY
77	1	3FB	+ INJECTION > PROTECTION RELAY
78	2	M	EARTH
79	2	M	EARTH
81	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
82	.6	3FAC	INJECTION COMPUTER SUPPLY CONTROL RELAY
83	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
85	.35	47H	FUEL FLOW RATE SIGNAL
88	.6	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
89	.6	3FZ	- SOLENOID VALVE ADVANCE CONTROL
90	.6	3KV	DIESEL PUMP ROTOR CONTROL

ELECTRONIC CONTROL UNIT INJECTION

S28-S29-S31-S32-S33-S35

CXXAE NO

120

46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68
M	3JAA	3MW	3FP	3FF	3FZ	3FQ	3FW	3BK	3KM		3EU		H17		HK		3FAB	3B	3AY	HL		3FB
NO	X	X	X	X	X	X	X	X	X		X		X		X		X	X	X	X		X

24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
M	3CX	3BK	3JA		3FS	3FY	3AH	47H	3FL		123N			AP29	5Z			3FAC	47F	65A	3FB
NO	X	X	X		X	X	X	X	NO		X			JA	X			X	X	X	X


1
M
NO

2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
H7	3JN	3FP	3FP		3FR	3FN	5DS		3FV	3FU	3DV	3C	3FA	5CW	H66P		3FM	H28	3JR	
X	X	X	X		X	X	X		X	X	X	X	X	X	X		X	X	X	

23
3FB
X

N°	mm²		... → ...
1	3	M	EARTH
2	.6	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
3	.6	3JN	FAN CONTROL RELAY 1
4	1	3FP	- FLOW REGULATOR CONTROL
5	1	3FP	- FLOW REGULATOR CONTROL
7	.6	3FR	FLOW REGULATOR CENTRE POINT SENSOR
8	.6	3FN	ENGINE SPEED SENSOR SIGNAL
9	.35	5DS	TORQUE SIGNAL > PULSE AMPLITUDE MODULATION
11	.5	3FV	- NEEDLE LIFT SENSOR
12	.5	3FU	NEEDLE LIFT SENSOR SIGNAL
13	.6	3DV	SIGNAL+ AIR FLOW METER
14	.35	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
15	.35	3FA	POTENTIOMETER CHARGE 1 + SIGNAL
16	.35	5CW	GEARBOX FAST IDLING CONTROL
17	.35	H66P	+ REVERSING LIGHTS CONTROL
19	.6	3FM	AIR FLOW METER SUPPLY
20	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL
21	.6	3JR	ATMOSPHERIC THROTTLE ENGINE CONTROL FLOWMETER SENSOR EARTH
23	3	3FB	+ INJECTION > PROTECTION RELAY
24	1	M	EARTH
25	1	3CX	- EGR SOLENOID VALVE CONTROL
26	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
27	.6	3JA	ADDITIONAL HEATING 1 RELAY COIL CONTROL
29	.6	3FS	FLOW REGULATOR POSITION SENSOR SUPPLY
30	.35	3FY	PREHEATER RELAY DIAGNOSTIC SIGNAL
31	.35	3AH	THROTTLE POSITION SIGNAL - PULSE AMPLITUDE MODULATION
32	.35	47H	FUEL FLOW RATE SIGNAL
33	.6	3FL	- ANALOG > SENSOR
35	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
38	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
39	.35	5Z	AUTOMATIC TRANSMISSION TORQUE REDUCTION CONTROL
42	.6	3FAC	INJECTION COMPUTER SUPPLY CONTROL RELAY
43	.35	47F	VEHICLE SPEED SIGNAL
44	.35	65A	+ BRAKE LIGHTS CONTROL
45	1	3FB	+ INJECTION > PROTECTION RELAY
46	1	M	EARTH
47	.6	3JAA	ADDITIONAL HEATING 2 RELAY COIL CONTROL
48	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
49	1	3FP	- FLOW REGULATOR CONTROL
50	.6	3FF	- PREHEATER RELAY CONTROL
51	1	3FZ	- SOLENOID VALVE ADVANCE CONTROL
52	.6	3FQ	FLOW REGULATOR POSITION REFERENCE SENSOR
53	1	3FW	- ELECTRIC CUT-OUT SOLENOID VALVE CONTROL
54	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
55	.35	3KM	POTENTIOMETER CHARGE 1 -
57	.35	3EU	+ POTENTIOMETER CHARGE 1
59	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
61	.35	HK	DIAGNOSTIC SIGNAL K
63	.6	3FAB	SIGNAL+ FUEL TEMPERATURE
64	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
65	.35	3AY	SIGNAL- NO LOAD POSITION SWITCH
66	.35	HL	DIAGNOSTIC SIGNAL L
68	1	3FB	+ INJECTION > PROTECTION RELAY

ELECTRONIC CONTROL UNIT INJECTION
K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL
S28-S29-S31-S32-S33-S35



CA13C NO

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
3CW		M	3BB				3JN	3MW	38K	47H	3BU	3C		3GN
X		NO	X				X	X	X	X	X	X		X

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
3F		38X	TB1	3S				3BL		HL	3MS	M	AP29	BP37
X		X	X	X				X		X	X	NO	JA	AG

31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	3CV	M					3JP	3GT		3BV	3BW	3AJ	3GL	3GK
	X	NO					X	X		X	X	X	X	X


46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
38Z			3B				47F	3BG		HK	3MT	H17	3CR	3CT
X			X				X	X		X	X	X	X	X

61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
		3GF		3GG	3NR		3AC		H7		3BX	3JK	3AQ	3UL
		X		X	X		X		X		X	X	X	X

76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
3GJ	3JQ	3D	3DQ	3GH		38W	38Y		3AW			123N	3CU	3CS
X	X	X	X	X		X	X		X			X	X	X

N°	mm²		... → ...
1	1	3CW	COIL INJECTOR 2-3 - CONTROL
3	1.4	M	EARTH
4	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL
8	.6	3JN	FAN CONTROL RELAY 1
9	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
10	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
11	.35	47H	FUEL FLOW RATE SIGNAL
12	.6	3BU	IDLING REGULATION CONTROL 1
13	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
15	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
16	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
18	.6	38X	FREON PRESSURE SENSOR SIGNAL
19	.5	TB1	PINKING SENSOR SHIELDING CABLE
20	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
24	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL
26	.35	HL	DIAGNOSTIC SIGNAL L
28	1.4	M	EARTH
29	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
30	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
32	1	3CV	COIL INJECTOR 1-4 - CONTROL
33	1.4	M	EARTH
38	.6	3JP	FAN 2 CONTROL RELAY
39	1	3GT	POWER LATCH ACTUATOR RELAY CONTROL
41	.6	3BV	IDLING REGULATION CONTROL 2
42	.6	3BW	IDLING REGULATION CONTROL 3
43	.6	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
45	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
46	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
49	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
53	.35	47F	VEHICLE SPEED SIGNAL
54	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
56	.35	HK	DIAGNOSTIC SIGNAL K
58	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
59	.6	3CR	INJECTOR 1 - CONTROL
60	.6	3CT	INJECTOR 3 - CONTROL
63	1	3GF	UPSTREAM OXYGEN SENSOR REHEATER - CONTROL
66	1	3NR	+ INJECTOR >
68	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
70	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
72	.6	3BX	IDLING REGULATION CONTROL 4
73	.6	3JK	- COOLANT TEMPERATURE
74	.6	3AQ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
75	.6	3JL	- THROTTLE POSITION POTENTIOMETER
77	.6	3JQ	- AIR TEMPERATURE
78	.35	3D	-SENSOR ASSEMBLY 4
79	.5	3DQ	- KNOCK SENSOR
80	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH
82	.6	38W	- FREON PRESSURE SENSOR (AC)
83	.6	38Y	+FREON PRESSURE SENSOR
85	.35	3AW	POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER + SIGNAL
88	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
89	.6	3CU	INJECTOR 4 - CONTROL
90	.6	3CS	INJECTOR 2 - CONTROL
27	.35	3MS	ENGINE CANH SIGNAL
57	.35	3MT	ENGINE CANL SIGNAL
44	.6	3GL	DOWNSTREAM OXYGEN SENSOR SIGNAL
65	1	3GG	DOWNSTREAM OXYGEN SENSOR REHEATER - CONTROL
76	.6	3GJ	DOWNSTREAM OXYGEN SENSOR EARTH

ELECTRONIC CONTROL UNIT INJECTION
K4M706 CA K4M706 CHAUFO
S28-S29-S31-S32-S33-S35



CA13C NO

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
3CW		M	3BB				3JN	3MW	38K	47H	3BU	3C		3GN
X		NO	X				X	X	X	X	X	X		X
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	3CV	M					3JP	3GT		3BV	3BW	3AJ	3GL	3GK
	X	NO					X	X		X	X	X	X	X
61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
		3GF			3NR		3AC		H7		3BX	3JK	3AQ	3JL
		X			X		X		X		X	X	X	X

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
3F		38X	TB1	3S				3BL		HL		M	AP29	BP37
X		X	X	X				X		X		NO	JA	RG
46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
38Z			3B				47F	3BG		HK		H17	3CR	3CT
X			X				X	X		X		X	X	X
76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
3GJ	3JQ	3D	3DQ			38W	38Y		3AW			123N	3CU	3CS
X	X	X	X			X	X		X			X	X	X

N°	mm²		... → ...
1	1	3CW	COIL INJECTOR 2-3 - CONTROL
3	1.4	M	EARTH
4	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL
8	.6	3JN	FAN CONTROL RELAY 1
9	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
10	.6	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
11	.35	47H	FUEL FLOW RATE SIGNAL
12	.6	3BU	IDLING REGULATION CONTROL 1
13	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
15	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
16	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
18	.6	38X	FREON PRESSURE SENSOR SIGNAL
19	.5	TB1	PINKING SENSOR SHIELDING CABLE
20	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
24	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL
26	.35	HL	DIAGNOSTIC SIGNAL L
28	1.4	M	EARTH
29	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
30	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
32	1	3CV	COIL INJECTOR 1-4 - CONTROL
33	1.4	M	EARTH
38	.6	3JP	FAN 2 CONTROL RELAY
39	1	3GT	POWER LATCH ACTUATOR RELAY CONTROL
41	.6	3BV	IDLING REGULATION CONTROL 2
42	.6	3BW	IDLING REGULATION CONTROL 3
43	.6	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
44	1	3GL	DOWNSTREAM OXYGEN SENSOR SIGNAL
45	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
46	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
49	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
53	.35	47F	VEHICLE SPEED SIGNAL
54	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
56	.35	HK	DIAGNOSTIC SIGNAL K
58	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
59	.6	3CR	INJECTOR 1 - CONTROL
60	.6	3CT	INJECTOR 3 - CONTROL
63	1	3GF	UPSTREAM OXYGEN SENSOR REHEATER - CONTROL
66	1	3NR	+ INJECTOR >
68	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
70	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
72	.6	3BX	IDLING REGULATION CONTROL 4
73	.6	3JK	- COOLANT TEMPERATURE
74	.6	3AQ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
75	.6	3JL	- THROTTLE POSITION POTENTIOMETER
76	1	3GJ	DOWNSTREAM OXYGEN SENSOR EARTH
77	.6	3JQ	- AIR TEMPERATURE
78	.35	3D	-SENSOR ASSEMBLY 4
79	.5	3DQ	- KNOCK SENSOR
82	.6	38W	- FREON PRESSURE SENSOR (AC)
83	.6	38Y	+FREON PRESSURE SENSOR
85	.35	3AW	POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER + SIGNAL
88	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
89	.6	3CU	INJECTOR 4 - CONTROL
90	.6	3CS	INJECTOR 2 - CONTROL

ELECTRONIC CONTROL UNIT INJECTION
K4M712 EQGPL
S28-S29-S31-S32-S33-S35

CA13C NO

120

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
3CW		M			3LR	3MN	3BB	3AC	3GT	3JN	3S	3MQ	3LS	3GN
X		NO			X	X	X	X	X	X	X	X	X	X
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	3CV	M					3MW	38K	3FH	H7	47H	3LW	3GL	3GK
	X	NO					X	X	X	X	X	X	X	X
61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
3AJB	3AJC			3GF	3NR	M	3GG	3JP	3BK	3LV	3DQ	3JK		3LT
X	X			X	X	NO	X	X	X	X	RG	X		X

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
3F	3MP	3B	TB1	38Z	H66P			3BL	3MT	3MS	CANH	M	AP29	BP37
X	X	X	X	X	X			X	X	X	X	NO	JA	RG
46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
3C	38X			123N	47F	H28	65A	3BG		HK	CANL		3CR	3CT
X	X			X	X	X	X	X		X	X		X	X
76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
3GJ		3D	38W	3GH		3MO	38Y	3JQ	3AW		3LV	H17	3CU	3CS
X		X	X	X		X	X	X	X		X	X	X	X

N°	mm²		... ⟶ ...
1	1	3CW	COIL INJECTOR 2-3 - CONTROL
3	1.4	M	EARTH
5	.35	3LR	+ POTENTIOMETER CHARGE 1
7	.6	3MN	MOTORISED THROTTLE POTENTIOMETER +5V
8	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL
9	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
10	1	3GT	POWER LATCH ACTUATOR RELAY CONTROL
11	.6	3JN	FAN CONTROL RELAY 1
12	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
13	.6	3MQ	MOTORISED THROTTLE POTENTIOMETER 2 SIGNAL
14	.35	3LS	POTENTIOMETER CHARGE 1 + SIGNAL
15	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
16	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
17	.6	3MP	MOTORISED THROTTLE POTENTIOMETER 1 SIGNAL
18	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
19	.5	TB1	PINKING SENSOR SHIELDING CABLE
20	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
21	.35	H66P	+ REVERSING LIGHTS CONTROL
24	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL
25	.35	3MT	ENGINE CANL SIGNAL
26	.35	3MS	ENGINE CANH SIGNAL
27	.35	CANH	CAN DIAGNOSTIC SIGNAL H
28	1.4	M	EARTH
29	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
30	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
32	1	3CV	COIL INJECTOR 1-4 - CONTROL
33	1.4	M	EARTH
38	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
39	.6	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
40	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
41	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
42	.35	47H	FUEL FLOW RATE SIGNAL
43	.35	3LW	POTENTIOMETER CHARGE 2 + SIGNAL
44	.6	3GL	DOWNSTREAM OXYGEN SENSOR SIGNAL
45	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
46	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
47	.6	38X	FREON PRESSURE SENSOR SIGNAL
50	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
51	.35	47F	VEHICLE SPEED SIGNAL
52	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL
53	.35	65A	+ BRAKE LIGHTS CONTROL
54	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
56	.35	HK	DIAGNOSTIC SIGNAL K
57	.35	CANL	CAN DIAGNOSTIC SIGNAL L
59	.6	3CR	INJECTOR 1 - CONTROL
60	.6	3CT	INJECTOR 3 - CONTROL
61	1.4	3AJB	+ ENGINE THROTTLE CONTROL
62	1.4	3AJC	- ENGINE THROTTLE CONTROL
65	1	3GF	UPSTREAM OXYGEN SENSOR REHEATER - CONTROL
66	1	3NR	+ INJECTOR >
67	1.4	M	EARTH
68	1	3GG	DOWNSTREAM OXYGEN SENSOR REHEATER - CONTROL
69	.6	3JP	FAN 2 CONTROL RELAY
70	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
71	.35	3LV	POTENTIOMETER CHARGE 2 -
72	.5	3DQ	- KNOCK SENSOR
73	.6	3JK	- COOLANT TEMPERATURE
75	.35	3LT	POTENTIOMETER CHARGE 1 -
76	.6	3GJ	DOWNSTREAM OXYGEN SENSOR EARTH
78	.35	3D	-SENSOR ASSEMBLY 4
79	.6	38W	- FREON PRESSURE SENSOR (AC)
80	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH
82	.6	3MO	MOTORISED THROTTLE POTENTIOMETER SENSOR -
83	.6	38Y	+FREON PRESSURE SENSOR
84	.6	3JQ	- AIR TEMPERATURE
85	.35	3AW	POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER + SIGNAL
87	.35	3LV	POTENTIOMETER CHARGE 2 -
88	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
89	.6	3CU	INJECTOR 4 - CONTROL
90	.6	3CS	INJECTOR 2 - CONTROL

UCE INJECTION

S28-S29-S31-S32-S33-S35

CA13C NO

120

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
3CW		M	3BB				3JN	3MW	38K	47H	3BU	3C		3GN
X		NO	X				X	X	X	X	X	X		X

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
3F		38X	TB1	3S				3BL		HL		M	AP29	BP37
X		X	X	X				X		X		NO	JA	AG

31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	3CV	M					3JP	3GT		3BV	3BW	3AJ		3GK
	X	NO					X	X		X	X	X		X


46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
38Z			3B				47F	3BG		HK		H17	3CR	3CT
X			X				X	X		X		X	X	X

61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
		3GF			3NR		3AC		H7		3BX	3JK	3AQ	3JL
		X			X		X		X		X	X	X	X

76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
	3JQ	3D	3DQ	3GH		38W	38Y		3AW			123N	3CU	3CS
	X	X	X	X		X	X		X			X	X	X

N°	mm²		... ⟶ ...
1	1	3CW	COIL INJECTOR 2-3 - CONTROL
3	2	M	EARTH
4	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL
8	.6	3JN	FAN CONTROL RELAY 1
9	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
10	.6	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
11	.35	47H	FUEL FLOW RATE SIGNAL
12	.6	3BU	IDLING REGULATION CONTROL 1
13	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
15	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
16	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
18	.6	38X	FREON PRESSURE SENSOR SIGNAL
19	.5	TB1	PINKING SENSOR SHIELDING CABLE
20	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
24	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL
26	.35	HL	DIAGNOSTIC SIGNAL L
28	2	M	EARTH
29	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
30	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
32	1	3CV	COIL INJECTOR 1-4 - CONTROL
33	2	M	EARTH
38	.6	3JP	FAN 2 CONTROL RELAY
39	.6	3GT	POWER LATCH ACTUATOR RELAY CONTROL
41	.6	3BV	IDLING REGULATION CONTROL 2
42	.6	3BW	IDLING REGULATION CONTROL 3
43	.6	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
45	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
46	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
49	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
53	.35	47F	VEHICLE SPEED SIGNAL
54	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
56	.35	HK	DIAGNOSTIC SIGNAL K
58	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
59	.6	3CR	INJECTOR 1 - CONTROL
60	.6	3CT	INJECTOR 3 - CONTROL
63	1	3GF	UPSTREAM OXYGEN SENSOR REHEATER - CONTROL
66	1	3NR	+ INJECTOR >
68	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
70	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
72	.6	3BX	IDLING REGULATION CONTROL 4
73	.6	3JK	- COOLANT TEMPERATURE
74	.6	3AQ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
75	.6	3JL	- THROTTLE POSITION POTENTIOMETER
77	.6	3JQ	- AIR TEMPERATURE
78	.35	3D	-SENSOR ASSEMBLY 4
79	.5	3DQ	- KNOCK SENSOR
80	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH
82	.6	38W	- FREON PRESSURE SENSOR (AC)
83	.6	38Y	+FREON PRESSURE SENSOR
85	.6	3AW	POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER + SIGNAL
88	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
89	.6	3CU	INJECTOR 4 - CONTROL
90	.6	3CS	INJECTOR 2 - CONTROL


ELECTRONIC CONTROL UNIT INJECTION
BVM5 BVA4
S28-S29-S31-S32-S33-S35

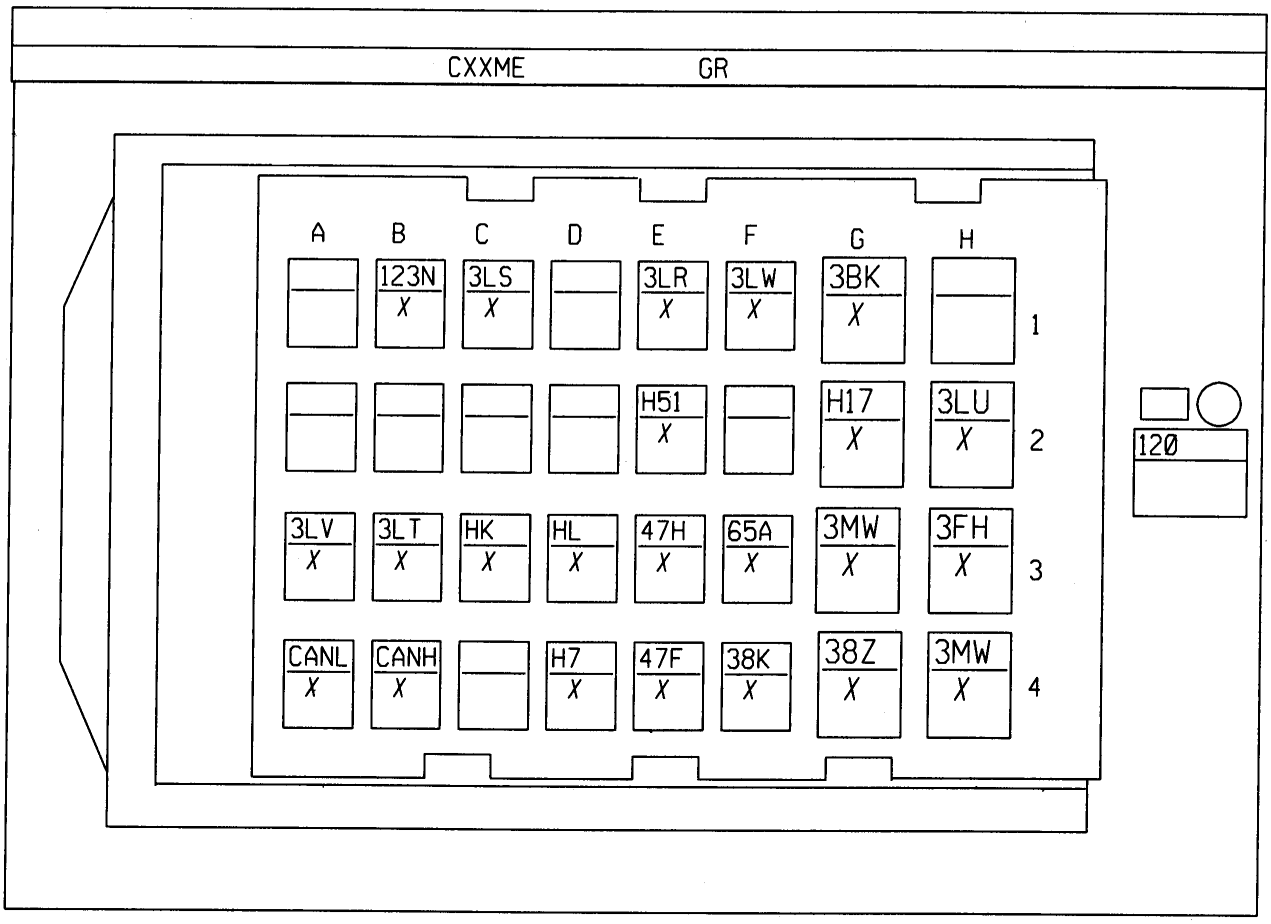

N°	mm²		... ⟶ ...
B1	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
C1	.35	3LS	POTENTIOMETER CHARGE 1 + SIGNAL
E1	.35	3LR	+ POTENTIOMETER CHARGE 1
F1	.35	3LW	POTENTIOMETER CHARGE 2 + SIGNAL
G1	1	3BK	-PREHEATER INDICATOR LIGHT > INJECTION FAULT
E2	.35	H51	LOWER CLUTCH PEDAL
G2	1	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
H2	1	3LU	POTENTIOMETER CHARGE 2 +
A3	.35	3LV	POTENTIOMETER CHARGE 2 -
B3	.35	3LT	POTENTIOMETER CHARGE 1 -
C3	.35	HK	DIAGNOSTIC SIGNAL K
D3	.35	HL	DIAGNOSTIC SIGNAL L
E3	.35	47H	FUEL FLOW RATE SIGNAL
F3	.35	65A	+ BRAKE LIGHTS CONTROL
G3	1	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
H3	1	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
A4	.35	CANL	CAN DIAGNOSTIC SIGNAL L
B4	.35	CANH	CAN DIAGNOSTIC SIGNAL H
D4	.6	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
E4	.35	47F	VEHICLE SPEED SIGNAL
F4	.6	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
G4	1	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
H4	1	3MW	ENGINE SAFETY WARNING LIGHT CONTROL

ELECTRONIC CONTROL UNIT INJECTION
BVM5 BVA4
S28-S29-S31-S32-S33-S35


CXXME MA

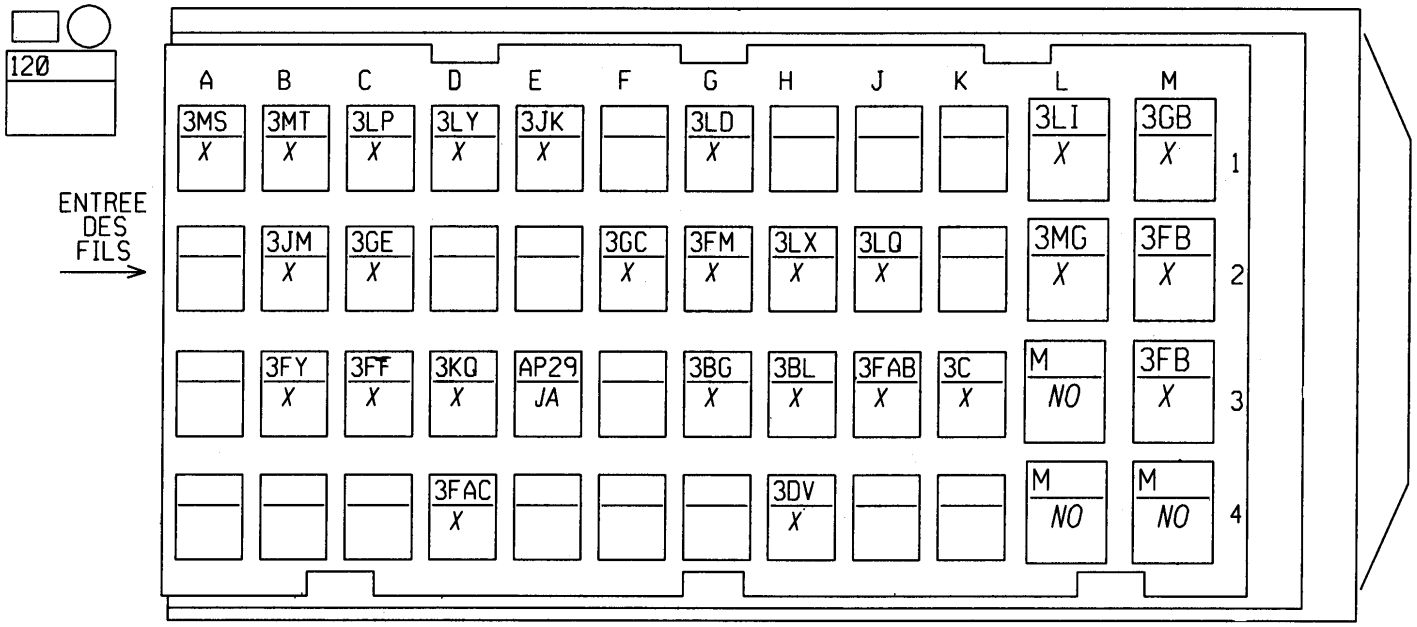

N°	mm²		... → ...
C1	.35	3LP	TURBOCHARGING PRESSURE SENSOR + SIGNAL
D1	.6	3LY	RAIL FUEL PRESSURE SENSOR + SIGNAL
E1	.35	3JK	- COOLANT TEMPERATURE
G1	.6	3LD	- FUEL TEMPERATURE SENSOR
L1	1	3LI	- FUEL PRESSURE REGULATION SOLENOID VALVE CONTROL
M1	1	3GB	- EGR SOLENOID VALVE CONTROL
B2	.6	3JM	- EGR SOLENOID VALVE
C2	.6	3GE	EGR SENSOR SIGNAL
F2	.6	3GC	+ GAS RECIRCULATION SENSOR
G2	.6	3FM	AIR FLOW METER SUPPLY
H2	.6	3LX	RAIL FUEL PRESSURE SENSOR +
J2	.35	3LQ	+TURBOCHARGING PRESSURE SENSOR
L2	1	3MG	TURBO PRESSURE SOLENOID VALVE - CONTROL
M2	2	3FB	+ INJECTION > PROTECTION RELAY
B3	.35	3FY	PREHEATER RELAY DIAGNOSTIC SIGNAL
C3	.35	3FF	- PREHEATER RELAY CONTROL
D3	.6	3KQ	AIR TEMPERATURE SIGNAL
E3	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
G3	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
H3	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL
J3	.6	3FAB	SIGNAL+ FUEL TEMPERATURE
K3	.35	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
L3	2	M	EARTH
M3	2	3FB	+ INJECTION > PROTECTION RELAY
D4	.6	3FAC	INJECTION COMPUTER SUPPLY CONTROL RELAY
H4	.6	3DV	SIGNAL+ AIR FLOW METER
L4	2	M	EARTH
M4	2	M	EARTH
A1	.35	3MS	ENGINE CANH SIGNAL
B1	.35	3MT	ENGINE CANL SIGNAL

ELECTRONIC CONTROL UNIT INJECTION
BVM5 BVA4
S28-S29-S31-S32-S33-S35

CXXME NO

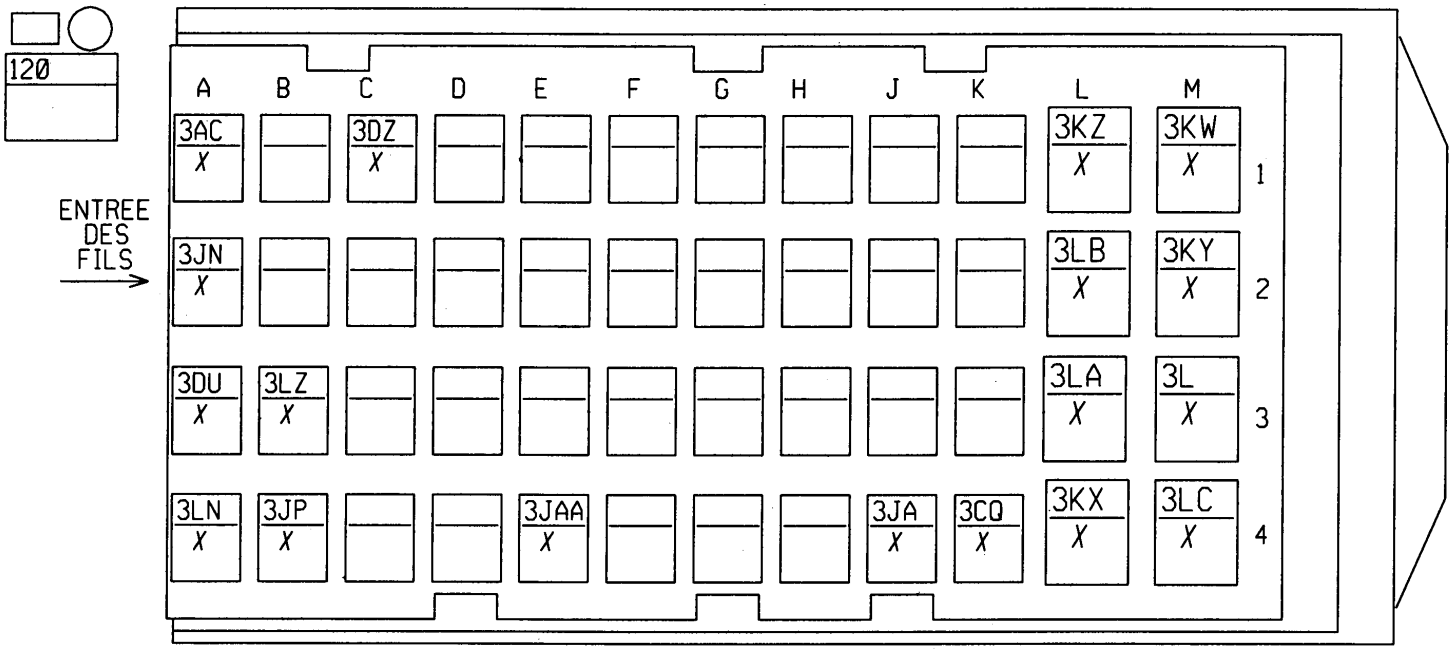

N°	mm²		... → ...
A1	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
C1	.35	3DZ	SENSOR EARTH
L1	2	3KZ	INJECTOR 4 CONTROL
M1	2	3KW	INJECTOR 1 CONTROL
A2	.6	3JN	FAN CONTROL RELAY 1
L2	2	3LB	+ INJECTOR 3
M2	2	3KY	INJECTOR 3 CONTROL
A3	.6	3DU	- AIR FLOW METER
B3	.6	3LZ	RAIL FUEL PRESSURE SENSOR -
L3	2	3LA	+ INJECTOR 2
M3	2	3L	+ INJECTOR 1
A4	.35	3LN	- TURBOCHARGING PRESSURE SENSOR
B4	.35	3JP	FAN 2 CONTROL RELAY
K4	.35	3CQ	CYLINDER 1 SENSOR SIGNAL
L4	2	3KX	INJECTOR 2 CONTROL
M4	2	3LC	+ INJECTOR 4
E4	.6	3JAA	ADDITIONAL HEATING 2 RELAY COIL CONTROL
J4	.6	3JA	ADDITIONAL HEATING 1 RELAY COIL CONTROL

ELECTRONIC CONTROL UNIT INJECTION

S28-S29-S31-S32-S33-S35

CA13C NO


120

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
3CW		M	3BB		3LI		3JN	3MW	38K	47H	3BU	3C	38Z	3GN
X		NO	X		X		X	X	X	X	X	X	X	X
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	3CV	M	3FH			3BK	3JP	3GT		3BV	3BW	3AJ	3GL	3GK
	X	NO	X			X	X	X		X	X	X	X	X
61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
	3GB	3GF		3GG	3NR		3AC		H7		3BX	3JK	3GR	3CJ
	X	X		X	X		X		X		X	X	X	X

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
3F	38X	3GE	TB1	3S				3BL		HL	3MS	M	AP29	BP37
X	X	X	X	X				X		X	X	NO	JA	RG
46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
3CQ		3LY	3B				47F	3BG		HK	3MT	H17	3KW	3KY
X		X	X				X	X		X	X	X	X	X
76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
3GJ	3JQ	3D	3DQ	3GH		3JM	3GC		3AW		3BH	123N	3KZ	3KX
X	X	X	X	X		X	X		X		X	X	X	X

N°	mm²		... → ...
1	1	3CW	COIL INJECTOR 2-3 - CONTROL
3	1.4	M	EARTH
4	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL
6	1	3LI	- FUEL PRESSURE REGULATION SOLENOID VALVE CONTROL
8	.6	3JN	FAN CONTROL RELAY 1
9	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
10	.6	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
11	.35	47H	FUEL FLOW RATE SIGNAL
12	.6	3BU	IDLING REGULATION CONTROL 1
13	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
14	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
15	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
16	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
17	.6	38X	FREON PRESSURE SENSOR SIGNAL
18	.6	3GE	EGR SENSOR SIGNAL
19	.5	TB1	PINKING SENSOR SHIELDING CABLE
20	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
24	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL
26	.35	HL	DIAGNOSTIC SIGNAL L
27	.35	3MS	ENGINE CANH SIGNAL
28	1.4	M	EARTH
29	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
30	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
32	1	3CV	COIL INJECTOR 1-4 - CONTROL
33	1.4	M	EARTH
34	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
37	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
38	.6	3JP	FAN 2 CONTROL RELAY
39	.6	3GT	POWER LATCH ACTUATOR RELAY CONTROL
41	.6	3BV	IDLING REGULATION CONTROL 2
42	.6	3BW	IDLING REGULATION CONTROL 3
43	.6	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
44	.6	3GL	DOWNSTREAM OXYGEN SENSOR SIGNAL
45	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
46	.35	3CQ	CYLINDER 1 SENSOR SIGNAL
48	.6	3LY	RAIL FUEL PRESSURE SENSOR + SIGNAL
49	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
53	.35	47F	VEHICLE SPEED SIGNAL
54	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
56	.35	HK	DIAGNOSTIC SIGNAL K
57	.35	3MT	ENGINE CANL SIGNAL
58	.35	H17	PETROL INJECTION CÒDE > DIESEL > SOFTWARE LOCK SIGNAL
59	.35	3KW	INJECTOR 1 CONTROL
60	.35	3KY	INJECTOR 3 CONTROL
62	1	3GB	- EGR SOLENOID VALVE CONTROL
63	1	3GF	UPSTREAM OXYGEN SENSOR REHEATER - CONTROL
65	1	3GG	DOWNSTREAM OXYGEN SENSOR REHEATER - CONTROL
66	1	3NR	+ INJECTOR >
68	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
70	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
72	.6	3BX	IDLING REGULATION CONTROL 4
73	.6	3JK	- COOLANT TEMPERATURE
74	.35	3GR	+ THROTTLE POSITION POTENTIOMETER > TANK PRESSURE SENSOR
75	.35	3CJ	GROUP 1 - SENSOR
76	.6	3GJ	DOWNSTREAM OXYGEN SENSOR EARTH
77	.6	3JQ	- AIR TEMPERATURE
78	.35	3D	-SENSOR ASSEMBLY 4
79	.5	3DQ	- KNOCK SENSOR
80	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH
82	.6	3JM	- EGR SOLENOID VALVE
83	.6	3GC	+ GAS RECIRCULATION SENSOR
85	.6	3AW	POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER + SIGNAL
87	1.4	3BH	DIAGNOSTIC L > INJECTION SIGNAL
88	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
89	.35	3KZ	INJECTOR 4 CONTROL
90	.35	3KX	INJECTOR 2 CONTROL

ELECTRONIC CONTROL UNIT INJECTION
F4P722
S28-S29-S31-S32-S33-S35

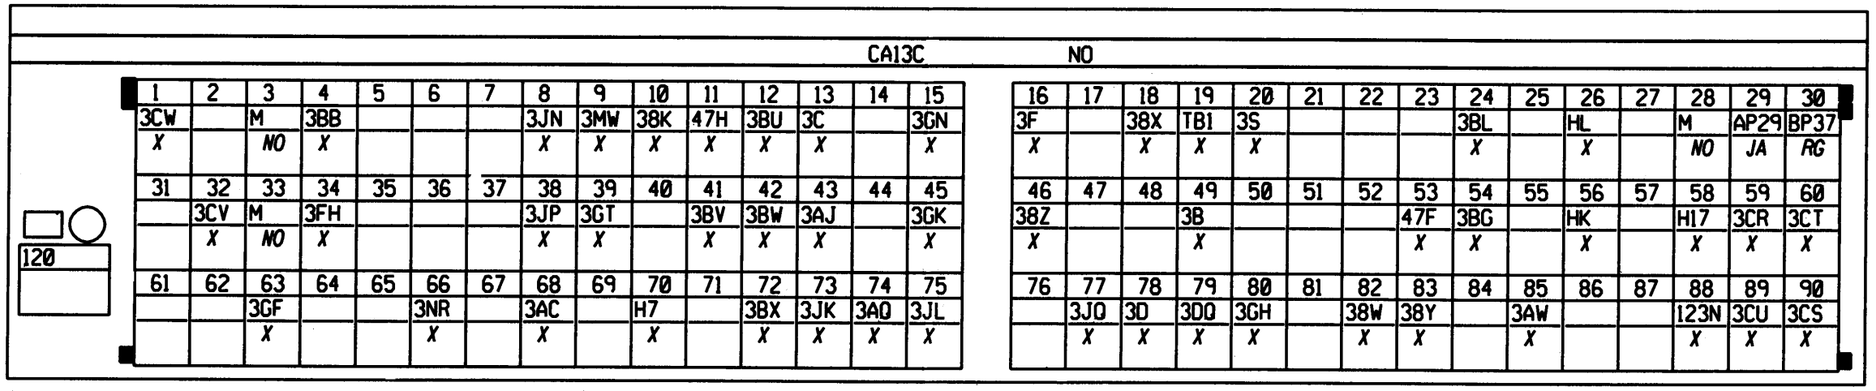

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
3CW		M	3BB				3JN	3MW	38K	47H	3BU	3C		3GN
X		NO	X				X	X	X	X	X	X		X
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	3CV	M	3FH				3JP	3GT		3BV	3BW	3AJ		3GK
	X	NO	X				X	X		X	X	X		X
61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
		3GF			3NR		3AC		H7		3BX	3JK	3AQ	3JL
		X			X		X		X		X	X	X	X

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
3F		38X	TB1	3S				3BL		HL		M	AP29	BP37
X		X	X	X				X		X		NO	JA	RG
46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
38Z			3B				47F	3BG		HK		H17	3CR	3CT
X			X				X	X		X		X	X	X
76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
	3JQ	3D	3DQ	3GH		38W	38Y		3AW			123N	3CU	3CS
	X	X	X	X		X	X		X			X	X	X

N°	mm²		... ⟶ ...
1	1	3CW	COIL INJECTOR 2-3 - CONTROL
3	1.4	M	EARTH
4	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL
8	.6	3JN	FAN CONTROL RELAY 1
9	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
10	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
11	.35	47H	FUEL FLOW RATE SIGNAL
12	.22	3BU	IDLING REGULATION CONTROL 1
13	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
15	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
16	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
18	.6	38X	FREON PRESSURE SENSOR SIGNAL
19	.5	TB1	PINKING SENSOR SHIELDING CABLE
20	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
24	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL
26	.22	HL	DIAGNOSTIC SIGNAL L
28	1.4	M	EARTH
29	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
30	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
32	1	3CV	COIL INJECTOR 1-4 - CONTROL
33	1.4	M	EARTH
34	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
38	.6	3JP	FAN 2 CONTROL RELAY
39	1	3GT	POWER LATCH ACTUATOR RELAY CONTROL
41	.22	3BV	IDLING REGULATION CONTROL 2
42	.22	3BW	IDLING REGULATION CONTROL 3
43	.22	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
45	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
46	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
49	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
53	.35	47F	VEHICLE SPEED SIGNAL
54	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
56	.35	HK	DIAGNOSTIC SIGNAL K
58	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
59	.6	3CR	INJECTOR 1 - CONTROL
60	.6	3CT	INJECTOR 3 - CONTROL
63	1	3GF	UPSTREAM OXYGEN SENSOR REHEATER - CONTROL
66	1.4	3NR	+ INJECTOR >
68	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
70	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
72	.22	3BX	IDLING REGULATION CONTROL 4
73	.6	3JK	- COOLANT TEMPERATURE
74	.22	3AQ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
75	.22	3JL	- THROTTLE POSITION POTENTIOMETER
77	.6	3JQ	- AIR TEMPERATURE
78	.35	3D	-SENSOR ASSEMBLY 4
79	.5	3DQ	- KNOCK SENSOR
80	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH
82	.6	38W	- FREON PRESSURE SENSOR (AC)
83	.6	38Y	+FREON PRESSURE SENSOR
85	.35	3AW	POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER + SIGNAL
88	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
89	.6	3CU	INJECTOR 4 - CONTROL
90	.6	3CS	INJECTOR 2 - CONTROL

ELECTRONIC CONTROL UNIT INJECTION
F4P720
S28-S29-S31-S32-S33-S35

CA13C NO


120

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
3CW		M			3LR	3MN	3BB	3AC	3GT	3JN	3S	3MQ	3LS	3QN
X		NO			X	X	X	X	X	X	X	X	X	X
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	3CV	M					3MW	3BK	3FH	H7	47H	3LW	3GL	3QK
	X	NO					X	X	X	X	X	X	X	X
61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
3AJB	3AJC			3GF	3NR	M	3GG	3JP	3BK	3LU	3DQ	3JK		3LT
X	X			X	X	NO	X	X	X	X	X	X		X

16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
3F	3MP	3B	TB1	38Z				3BL			CANH	M	AP29	BP37
X	X	X	X	X				X			X	NO	JA	RG
46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
3C	38X			123N	47F	H28	65A	3BG		HK	CANL		3CR	3CT
X	X			X	X	X	X	X		X	X		X	X
76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
3GJ		3D	38W	3GH		3MQ	38Y	3JQ	3AW		3LV	H17	3CU	3CS
X		X	X	X		X	X	X	X		X	X	X	X

N°	mm²		... ⟶ ...
1	1	3CW	COIL INJECTOR 2-3 - CONTROL
3	1.4	M	EARTH
6	.35	3LR	+ POTENTIOMETER CHARGE 1
7	.6	3MN	MOTORISED THROTTLE POTENTIOMETER +5V
8	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL
9	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
10	1	3GT	POWER LATCH ACTUATOR RELAY CONTROL
11	.6	3JN	FAN CONTROL RELAY 1
12	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
13	.6	3MQ	MOTORISED THROTTLE POTENTIOMETER 2 SIGNAL
14	.35	3LS	POTENTIOMETER CHARGE 1 + SIGNAL
15	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
16	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
17	.6	3MP	MOTORISED THROTTLE POTENTIOMETER 1 SIGNAL
18	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
19	.5	TB1	PINKING SENSOR SHIELDING CABLE
20	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
24	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL
27	.35	CANH	CAN DIAGNOSTIC SIGNAL H
28	1.4	M	EARTH
29	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
30	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
32	1	3CV	COIL INJECTOR 1-4 - CONTROL
33	1.4	M	EARTH
38	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
39	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
40	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
41	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
42	.35	47H	FUEL FLOW RATE SIGNAL
43	.35	3LW	POTENTIOMETER CHARGE 2 + SIGNAL
44	.6	3GL	DOWNSTREAM OXYGEN SENSOR SIGNAL
45	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
46	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
47	.6	38X	FREON PRESSURE SENSOR SIGNAL
50	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
51	.35	47F	VEHICLE SPEED SIGNAL
52	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL
53	.35	65A	+ BRAKE LIGHTS CONTROL
54	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
56	.35	HK	DIAGNOSTIC SIGNAL K
57	.35	CANL	CAN DIAGNOSTIC SIGNAL L
59	.6	3CR	INJECTOR 1 - CONTROL
60	.6	3CT	INJECTOR 3 - CONTROL
61	1.4	3AJB	+ ENGINE THROTTLE CONTROL
62	1.4	3AJC	- ENGINE THROTTLE CONTROL
65	1	3GF	UPSTREAM OXYGEN SENSOR REHEATER - CONTROL
66	1.4	3NR	+ INJECTOR >
67	1.4	M	EARTH
68	1	3GG	DOWNSTREAM OXYGEN SENSOR REHEATER - CONTROL
69	.6	3JP	FAN 2 CONTROL RELAY
70	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
71	.35	3LU	POTENTIOMETER CHARGE 2 +
72	.5	3DQ	- KNOCK SENSOR
73	.6	3JK	- COOLANT TEMPERATURE
75	.35	3LT	POTENTIOMETER CHARGE 1 -
76	.6	3GJ	DOWNSTREAM OXYGEN SENSOR EARTH
78	.35	3D	-SENSOR ASSEMBLY 4
79	.6	38W	- FREON PRESSURE SENSOR (AC)
80	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH
82	.6	3MO	MOTORISED THROTTLE POTENTIOMETER SENSOR
83	.6	38Y	+FREON PRESSURE SENSOR
84	.6	3JQ	- AIR TEMPERATURE
85	.35	3AW	POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER + SIGNAL
87	.35	3LV	POTENTIOMETER CHARGE 2 -
88	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
89	.6	3CU	INJECTOR 4 - CONTROL
90	.6	3CS	INJECTOR 2 - CONTROL

ELECTRONIC CONTROL UNIT INJECTION
CHAUFO
S28-S29-S31-S32-S33-S35

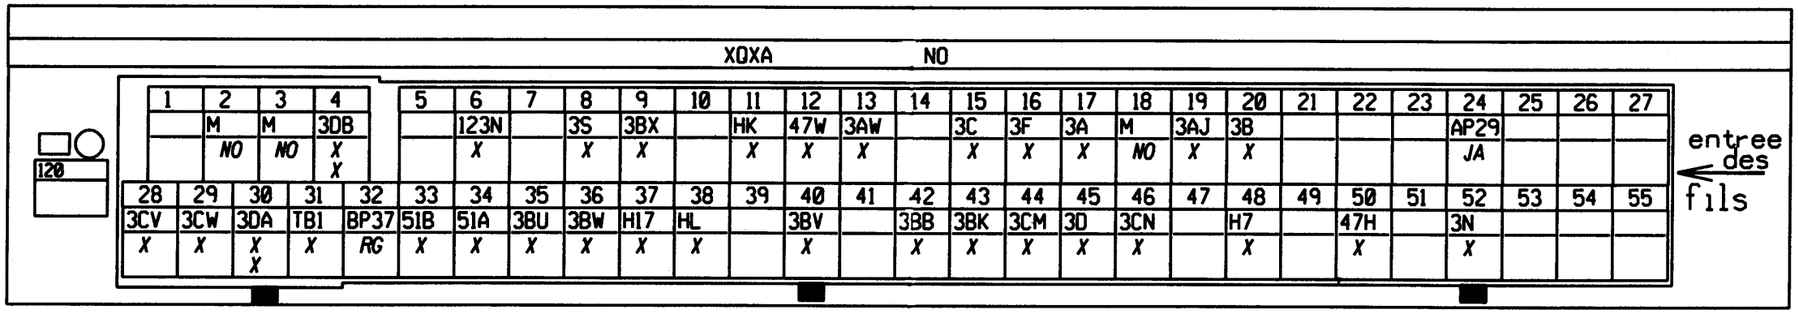


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27
	M	M	3DB		123N		3S	3BX		HK	47W	3AW		3C	3F	3A	M	3AJ	3B				AP29			
	NO	NO	X X		X		X	X		X	X	X		X	X	X	NO	X	X				JA			

28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55
3CV	3CW	3DA	TB1	BP37	51B	51A	3BU	3BW	H17	HL		3BV		3BB	3BK	3CM	3D	3CN		H7		47H		3N			
X	X	X X	X	RG	X	X	X	X	X	X		X		X	X	X	X	X		X		X		X			


N°	mm²		... → ...
2	2	M	EARTH
3	2	M	EARTH
4	1	3DB	INJECTOR 2-3 - CONTROL
4	1	3DB	INJECTOR 2-3 - CONTROL
6	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
8	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
9	1	3BX	IDLING REGULATION CONTROL 4
11	.35	HK	DIAGNOSTIC SIGNAL K
12	.35	47W	SECONDARY SPEED SIGNAL
13	.6	3AW	POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER + SIGNAL
15	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
16	.6	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
17	.6	3A	OXYGEN SENSOR SIGNAL
18	.6	M	EARTH
19	.6	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
20	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
24	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
28	1.4	3CV	COIL INJECTOR 1-4 - CONTROL
29	1.4	3CW	COIL INJECTOR 2-3 - CONTROL
30	1	3DA	INJECTOR 1-4 - CONTROL
30	1	3DA	INJECTOR 1-4 - CONTROL
31	.5	TB1	PINKING SENSOR SHIELDING CABLE
32	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
33	.6	51B	TDC SENSOR INFO 1
34	.6	51A	TDC SENSOR INFO 2
35	1	3BU	IDLING REGULATION CONTROL 1
36	1	3BW	IDLING REGULATION CONTROL 3
37	.35	1117	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
38	.35	11L	DIAGNOSTIC SIGNAL L
40	1	3BV	IDLING REGULATION CONTROL 2
42	1	3BB	CANISTER BLEED SOLENOID VALVE CONTROL
43	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
44	.6	3CM	-SENSOR ASSEMBLY 3
45	.6	3D	-SENSOR ASSEMBLY 4
46	.6	3CN	THROTTLE IDLING MIXTURE EARTH SENSOR
48	.35	117	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
50	.35	47H	FUEL FLOW RATE SIGNAL
52	1	3N	+ FUEL PUMP>

RATTLE SENSOR
K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M
S28-S29-S33-S35

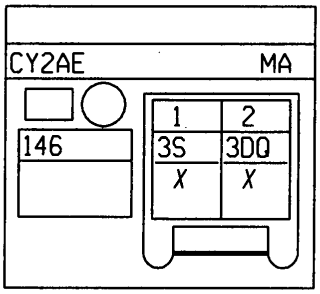


N°	mm²		... → ...
1	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
2	.5	3DQ	- KNOCK SENSOR

RATTLE SENSOR
K4M712 EQGPL
S28-S29-S33-S35

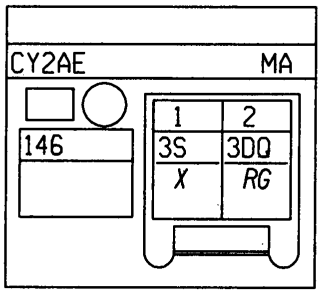

N°	mm²		... → ...
1	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
2	.5	3DQ	- KNOCK SENSOR


COLLECTOR PRESSURE SENSOR
K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M
S28-S29-S31-S33-S35

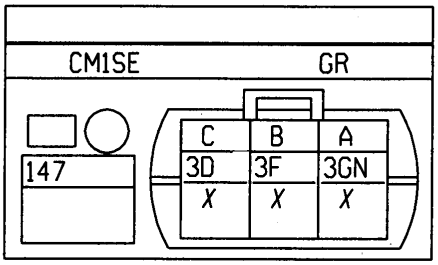

N°	mm²		... → ...
A	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
B	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
C	.35	3D	-SENSOR ASSEMBLY 4

RATTLE SENSOR


S28-S29-S33-S35

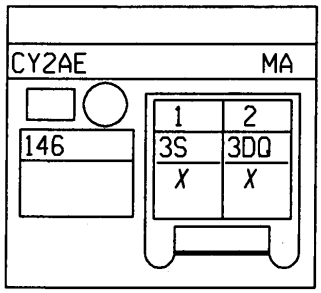

N°	mm²		... → ...
1	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
2	.5	3DQ	- KNOCK SENSOR

COLLECTOR PRESSURE SENSOR


S28-S29-S31-S33-S35

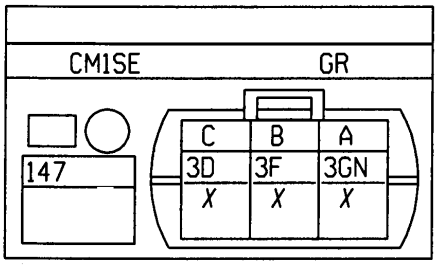

N°	mm²		... → ...
A	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
B	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
C	.35	3D	-SENSOR ASSEMBLY 4

TDC SENSOR


S28-S29-S30-S31-S32-S34-S35

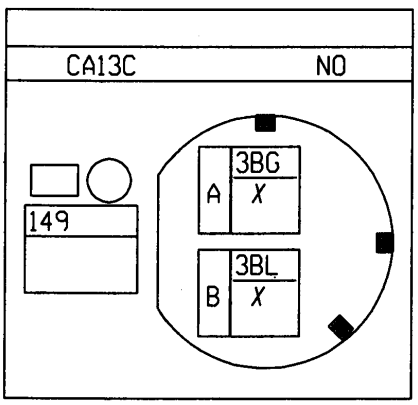

N°	mm²		... → ...
A	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
B	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL

RATTLE SENSOR


S28-S29-S33-S35

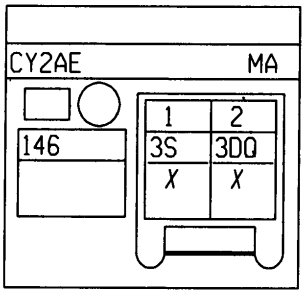

N°	mm²		... → ...
1	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
2	.5	3DQ	- KNOCK SENSOR

COLLECTOR PRESSURE SENSOR


S28-S29-S31-S33-S35

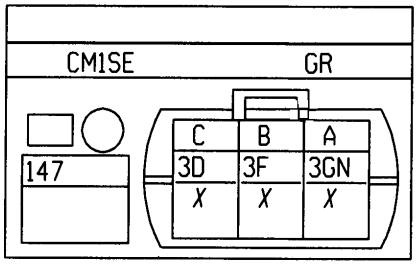

N°	mm²		... → ...
A	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
B	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
C	.35	3D	-SENSOR ASSEMBLY 4


TDC SENSOR

S28-S29-S30-S31-S32-S34-S35

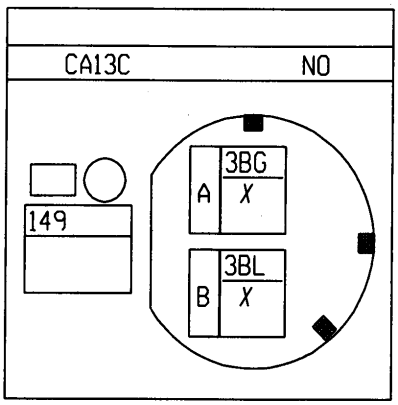


N°	mm²		... → ...
A	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
B	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL

RATTLE SENSOR
F4P720 F4P722
S28-S29-S33-S35

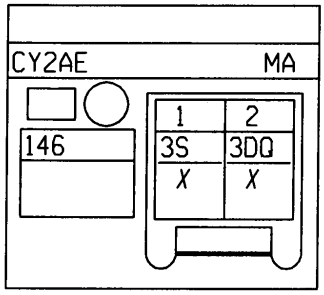


N°	mm²		... → ...
1	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT
2	.5	3DQ	- KNOCK SENSOR

COLLECTOR PRESSURE SENSOR
F4P720 F4P722
S28-S29-S31-S33-S35

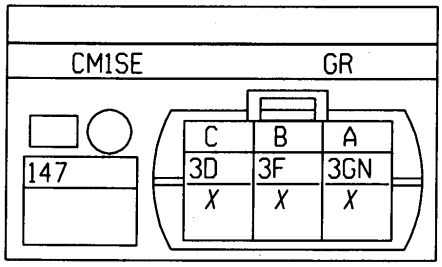


N°	mm²		... → ...
A	.35	3GN	MANIFOLD PRESSURE SENSOR EARTH
B	.35	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
C	.35	3D	-SENSOR ASSEMBLY 4

TDC SENSOR
F4P720 F4P722
S28-S29-S30-S31-S32-S34-S35

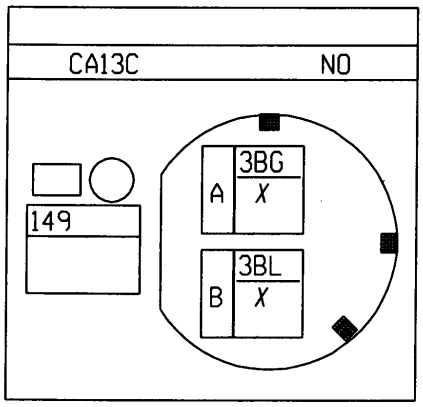


N°	mm²		... → ...
A	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
B	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL

RATTLE SENSOR
CHAUFO
S28-S29-S33-S35

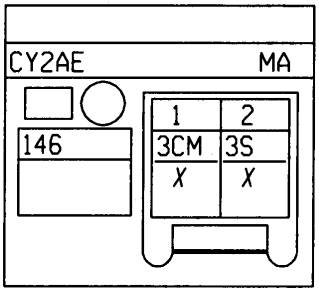


N°	mm²		... ⟶ ...
	.5	3CM	-SENSOR ASSEMBLY 3
	.5	3S	SIGNAL+ KNOCK SENSOR 1> FRONT

COLLECTOR PRESSURE SENSOR
CHAUFO
S28-S29-S31-S33-S35

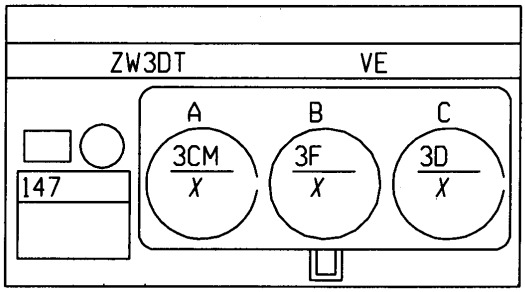


N°	mm²		... ⟶ ...
A	.6	3CM	-SENSOR ASSEMBLY 3
B	.6	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
C	.6	3D	-SENSOR ASSEMBLY 4

TDC SENSOR
CHAUFO
S28-S29-S30-S31-S32-S34-S35

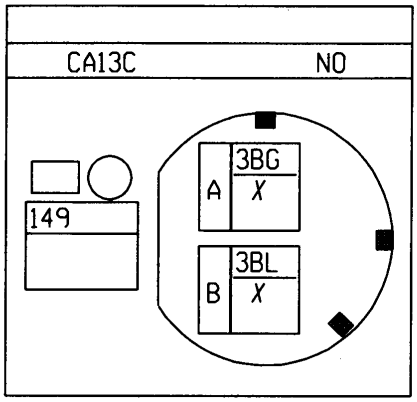


N°	mm²		... ⟶ ...
A	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
B	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL

COLLECTOR PRESSURE SENSOR
BVM5 BVA4
S28-S29-S31-S33-S35

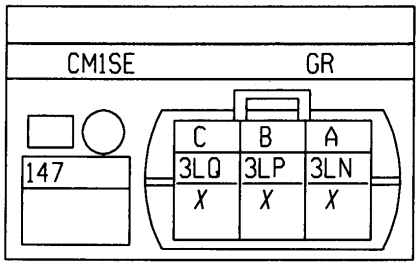

N°	mm²		... → ...
A	.35	3LN	- TURBOCHARGING PRESSURE SENSOR
B	.35	3LP	TURBOCHARGING PRESSURE SENSOR + SIGNAL
C	.35	3LQ	+TURBOCHARGING PRESSURE SENSOR


TDC SENSOR
BVM5 BVA4
S28-S29-S30-S31-S32-S34-S35

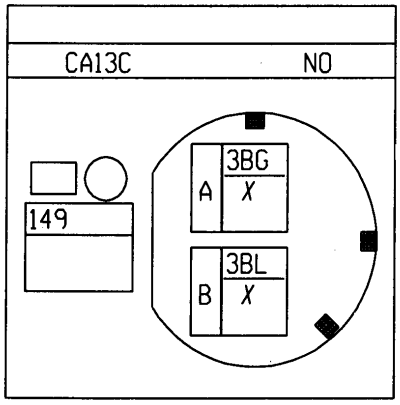

N°	mm²		... → ...
A	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
B	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL

TDC SENSOR


S28-S29-S30-S31-S32-S34-S35

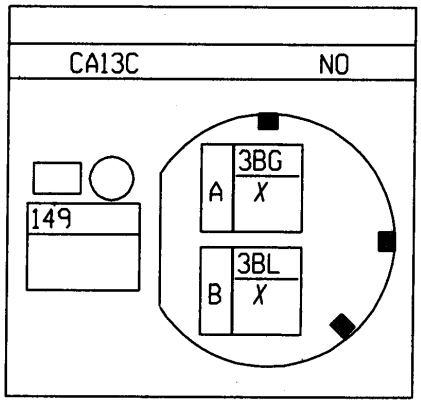

N°	mm²		... ⟶ ...
A	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
B	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL

REVERSING LIGHTS SWITCH


S28-S29-S31-S32-S33

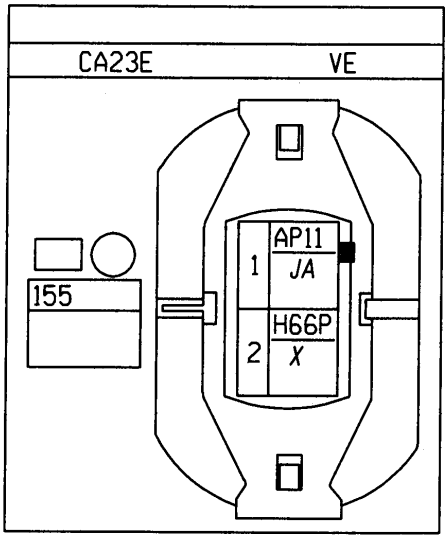

N°	mm²		... ⟶ ...
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.6	H66P	+ REVERSING LIGHTS CONTROL


TDC SENSOR

S28-S29-S30-S31-S32-S34-S35

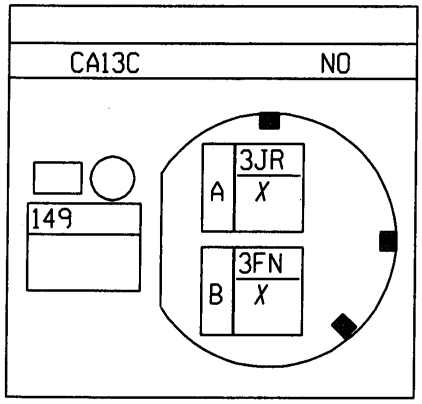

N°	mm²		... ⟶ ...
A	.6	3JR	ATMOSPHERIC THROTTLE ENGINE CONTROL FLOWMETER SENSOR EARTH
B	.6	3FN	ENGINE SPEED SENSOR SIGNAL

COOLING FAN GROUP

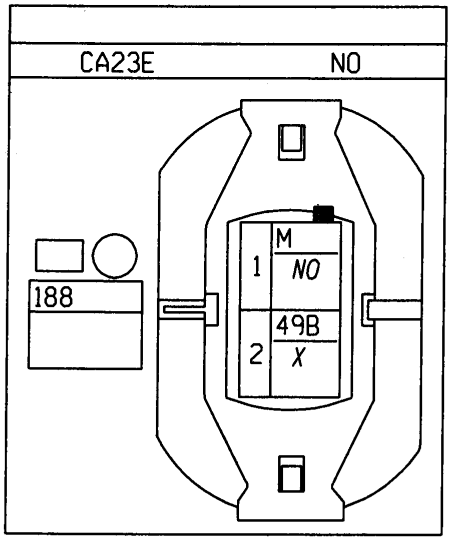


N°	mm²		... ⟶ ...
1	1.4	M	EARTH
2	1.4	49B	+ FAN CONTROL

TDC SENSOR

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M

S28-S29-S30-S31-S32-S34-S35

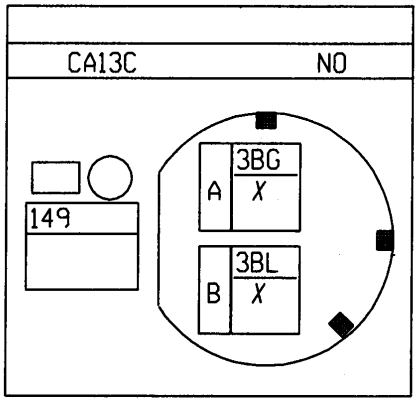


N°	mm²		... ⟶ ...
A	.6	3BG	ENGINE SPEED > TDC SENSOR SIGNAL
B	.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL

REVERSING LIGHTS SWITCH

K4J750 K4M701-708-712 K4J750-714 SAUF EQGPL K4M706 CA K4M706 C


S28-S29-S31-S32-S33

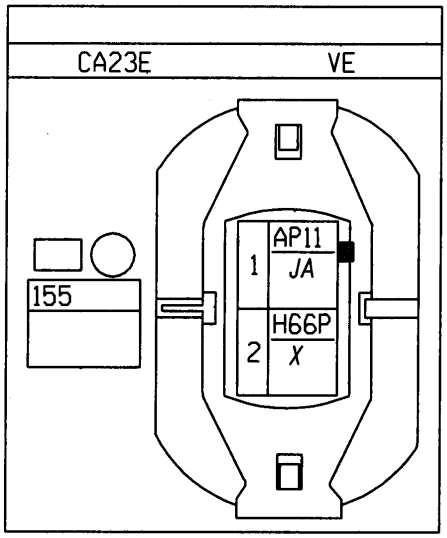

N°	mm²		... ⟶ ...
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.6	H66P	+ REVERSING LIGHTS CONTROL

TDC SENSOR


S28-S29-S30-S31-S32-S34-S35

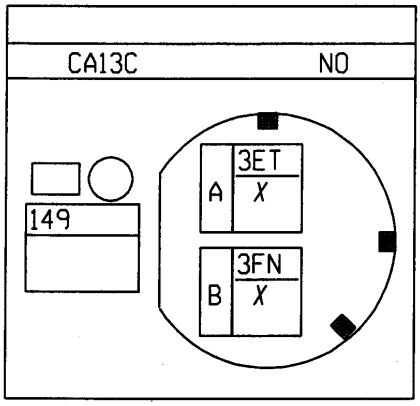

N°	mm²		... ⟶ ...
A	.6	3ET	AIR-WATER REGULATION NEEDLE POTENTIOMETER EARTH SENSOR
B	.6	3FN	ENGINE SPEED SENSOR SIGNAL

REVERSING LIGHTS SWITCH


S28-S29-S31-S32-S33

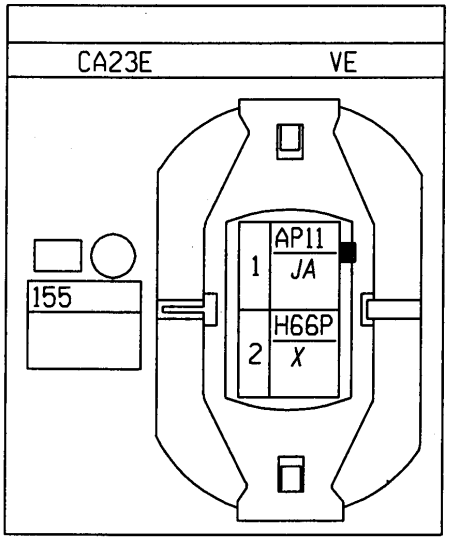

N°	mm²		... ⟶ ...
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.6	H66P	+ REVERSING LIGHTS CONTROL

REVERSING LIGHTS SWITCH


S28-S29-S31-S32-S33

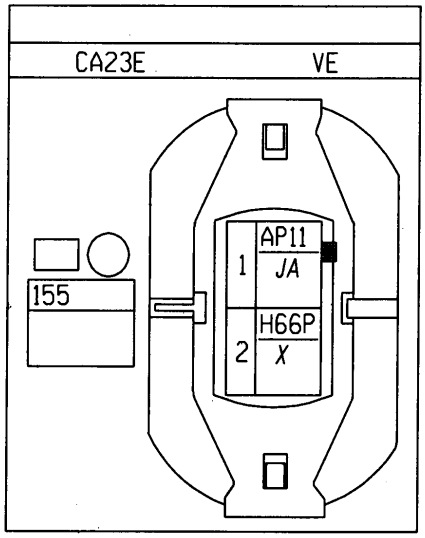

N°	mm²		... → ...
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.6	H66P	+ REVERSING LIGHTS CONTROL


AIR CONDITIONING CLUTCH

S28-S29-S31-S32-S33-S35

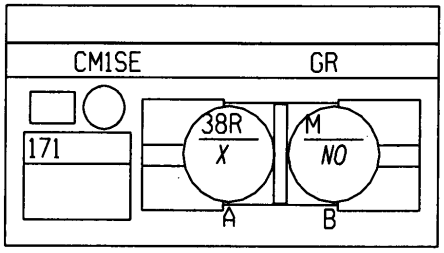


N°	mm²		... → ...
A	1	38R	AIR CONDITIONING CLUTCH + CONTROL
B	1	M	EARTH

REVERSING LIGHTS SWITCH
BVM5
S28-S29-S31-S32-S33

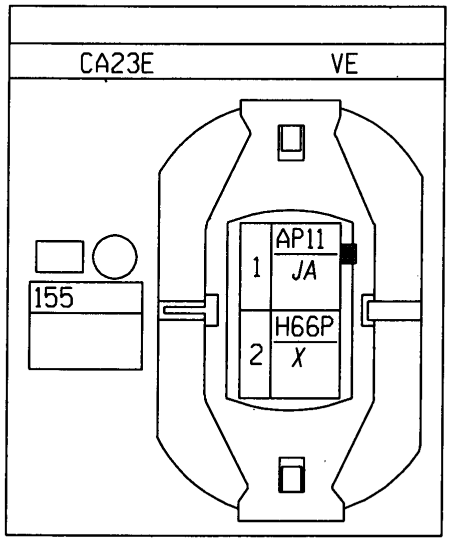

N°	mm²		... ⟶ ...
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.6	H66P	+ REVERSING LIGHTS CONTROL


AIR CONDITIONING CLUTCH
BVM5 BVA4
S28-S29-S31-S32-S33-S35

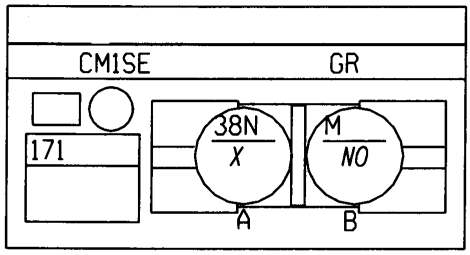

N°	mm²		... ⟶ ...
A	1	38N	+ AIR CONDITIONING CLUTCH RELAY > FUNCTION SENSOR 3 CONTROL
B	1	M	EARTH

REVERSING LIGHTS SWITCH


S28-S29-S31-S32-S33

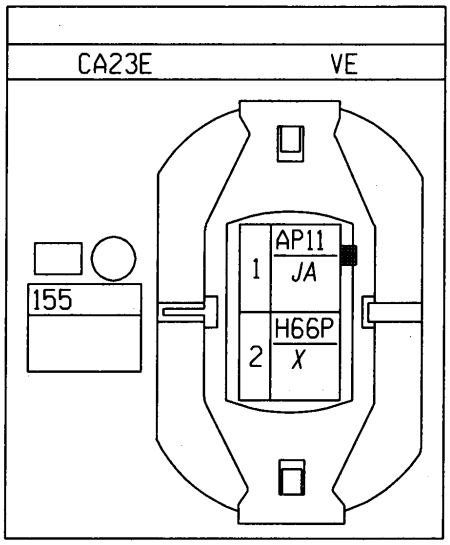

	mm²		... ⟶ ...
	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
	.6	H66P	+ REVERSING LIGHTS CONTROL


STARTER

S28-S29-S30-S32-S33-S34-S35

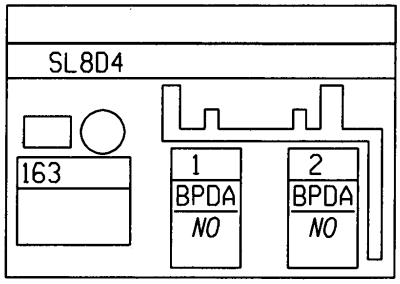


	mm²		... ⟶ ...
	16	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	16	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING

REVERSING LIGHTS SWITCH
F4P720
S28-S29-S31-S32-S33

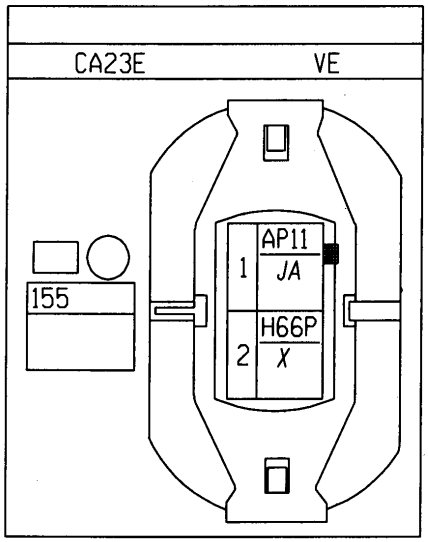


N°	mm²		... ⟶ ...
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.6	H66P	+ REVERSING LIGHTS CONTROL

REVERSING LIGHTS SWITCH
F4P722
S28-S29-S31-S32-S33

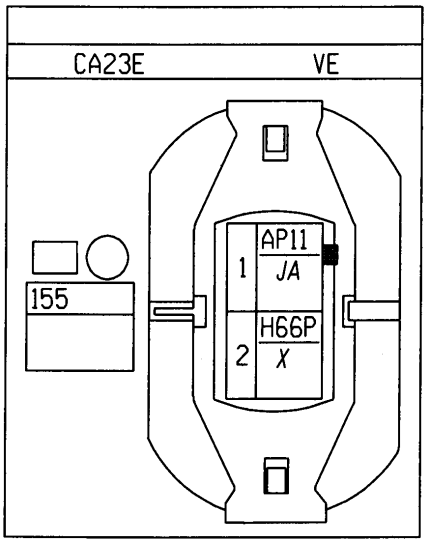


N°	mm²		... ⟶ ...
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.35	H66P	+ REVERSING LIGHTS CONTROL

REVERSING LIGHTS SWITCH
CHAUFO
S28-S29-S31-S32-S33

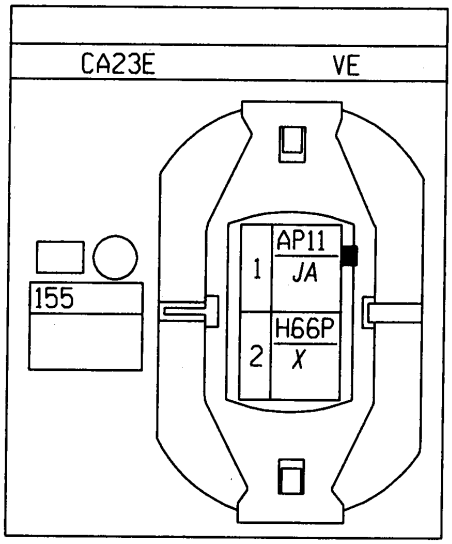

N°	mm²		... → ...
1	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
2	.6	H66P	+ REVERSING LIGHTS CONTROL

COOLING FAN GROUP
CHAUFO

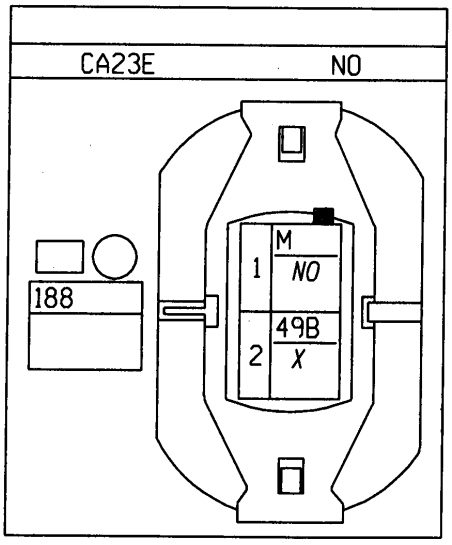


N°	mm²		... → ...
1	1	M	EARTH
2	1	49B	+ FAN CONTROL

STARTER

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M

S28-S29-S30-S32-S33-S34-S35

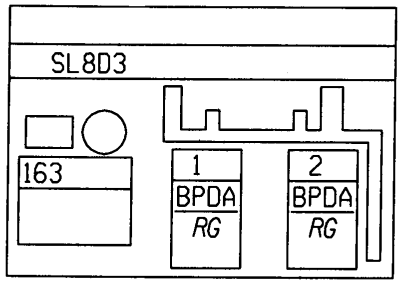


N°	mm²		... → ...
1	16	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
2	16	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING

AIR CONDITIONING CLUTCH


K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M

S28-S29-S31-S32-S33-S35

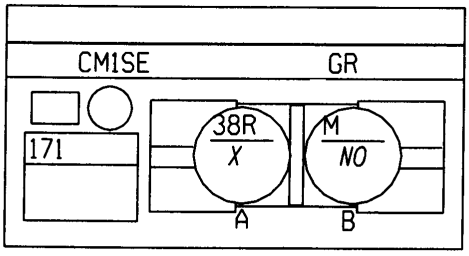


N°	mm²		... → ...
A	1	38R	AIR CONDITIONING CLUTCH + CONTROL
B	1	M	EARTH

STARTER
F4P720 F4P722
S28-S29-S30-S32-S33-S34-S35

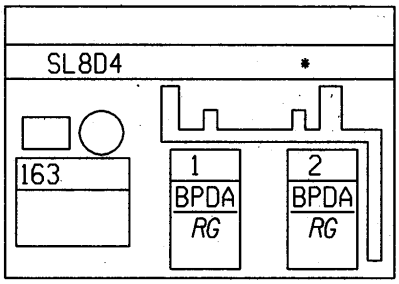


N°	mm²		... → ...
16	BPDA		PROTECTED BATTERY > ALTERNATOR STARTING
16	BPDA		PROTECTED BATTERY > ALTERNATOR STARTING

AIR CONDITIONING CLUTCH
F4P720 F4P722
S28-S29-S31-S32-S33-S35

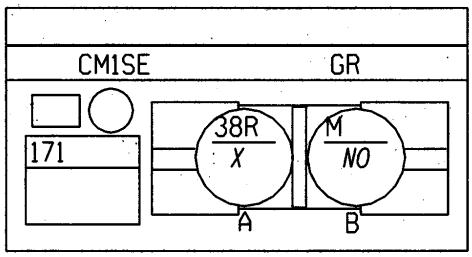

N°	mm²		... → ...
1	38R		AIR CONDITIONING CLUTCH + CONTROL
1	M		EARTH


INJECTOR 1
F4P720 F4P722
S28-S29-S30-S31-S33

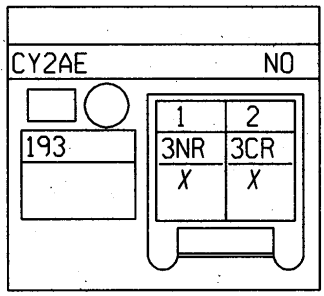

N°	mm²		... → ...
.6	3NR		+ INJECTOR >
.6	3CR		INJECTOR 1 - CONTROL


AIR CONDITIONING CLUTCH

S28-S29-S31-S32-S33-S35

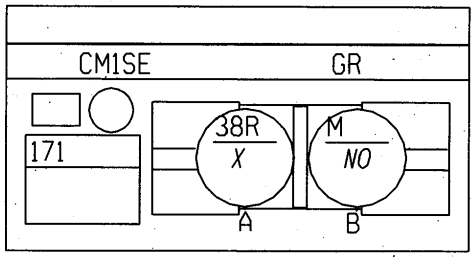

N°	mm²		... → ...
A	1	38R	AIR CONDITIONING CLUTCH + CONTROL
B	1	M	EARTH


COOLING FAN GROUP

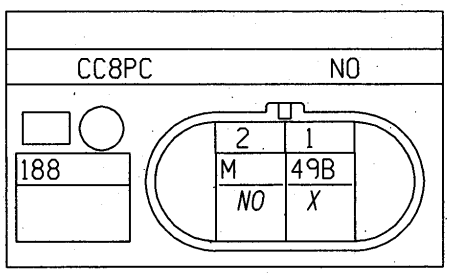

N°	mm²		... → ...
1	3	49B	+ FAN CONTROL
2	3	M	EARTH

OIL LEVEL SENSOR


S28-S29-S30-S31-S35

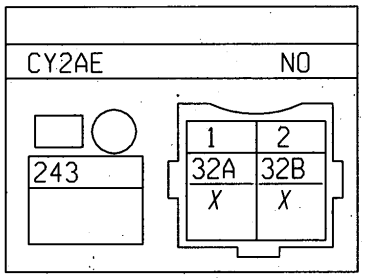

N°	mm²		... → ...
1	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1

AIR CONDITIONING CLUTCH


S28-S29-S31-S32-S33-S35

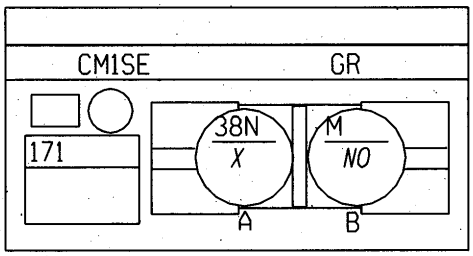

N°	mm²		... → ...
1	38N		+ AIR CONDITIONING CLUTCH RELAY > FUNCTION SENSOR 3 CONTROL
1	M		EARTH

AIR CONDITIONING SLECTION FUNCTION PRESSURE SWITCH


S32

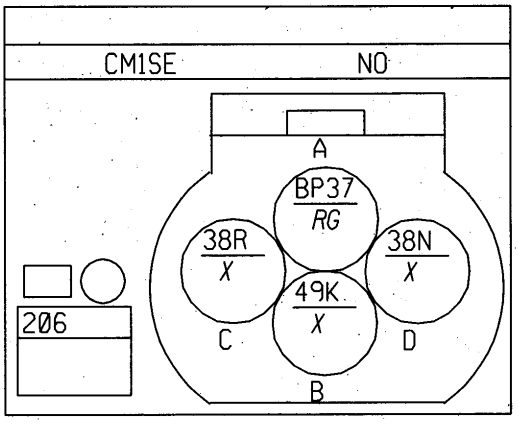

N°	mm²		... → ...
.35	BP37		PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
.35	49K		- HIGH SPEED FAN UNIT CONTROL
1	38R		AIR CONDITIONING CLUTCH + CONTROL
1	38N		+ AIR CONDITIONING CLUTCH RELAY > FUNCTION SENSOR 3 CONTROL

OIL LEVEL SENSOR


S28-S29-S30-S31-S35

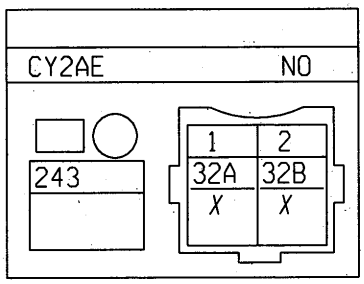

N°	mm²		... → ...
.6	32A		OIL LEVEL SENSOR - OIL SIGNAL 2
.6	32B		OIL LEVEL SENSOR - OIL SIGNAL 1

AIR CONDITIONING CLUTCH


S28-S29-S31-S32-S33-S35

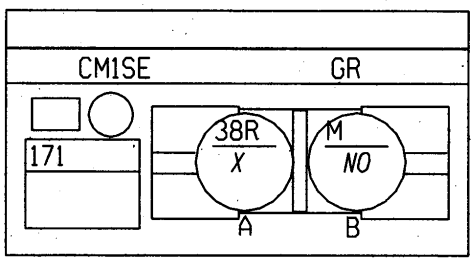

N°	mm²		... ⟶ ...
A	1	38R	AIR CONDITIONING CLUTCH + CONTROL
B	1	M	EARTH

THROTTLE POTENTIOMETER


S28-S29-S33-S35

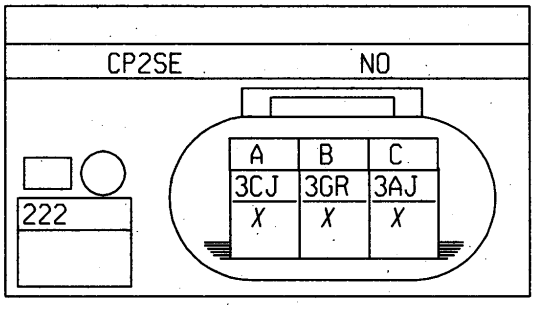

N°	mm²		... ⟶ ...
A	.6	3CJ	GROUP 1 - SENSOR
B	.6	3GR	+ THROTTLE POSITION POTENTIOMETER > TANK PRESSURE SENSOR
C	.6	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER


POWER ASSISTED STEERING PRESSOSTAT

S28-S29-S33-S35

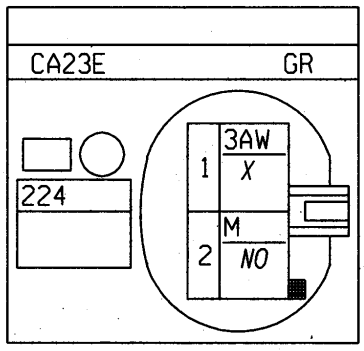


N°	mm²		... ⟶ ...
1	.6	3AW	POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER + SIGNAL
2	.6	M	EARTH

COOLING FAN GROUP
K4M706 CHAUFO

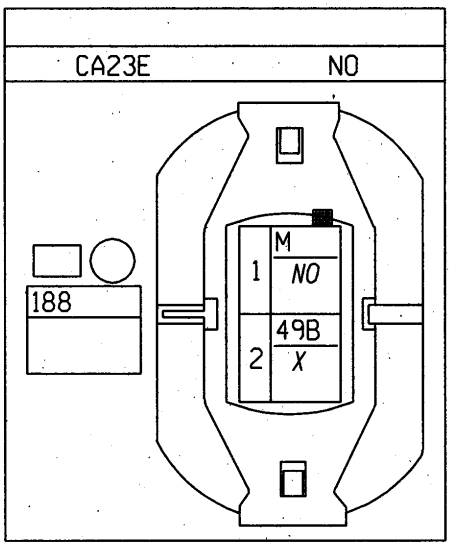

N°	mm²		... → ...
2	M		EARTH
1	49B		+ FAN CONTROL


INJECTOR 1
K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M S28-S29-S30-S31-S33

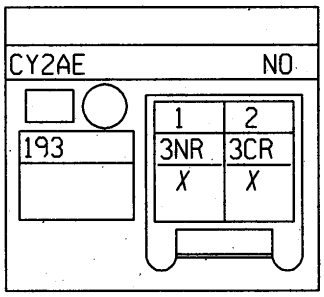

N°	mm²		... → ...
.6	3NR		+ INJECTOR >
.6	3CR		INJECTOR 1 - CONTROL

INJECTOR 1


S28-S29-S30-S31-S33

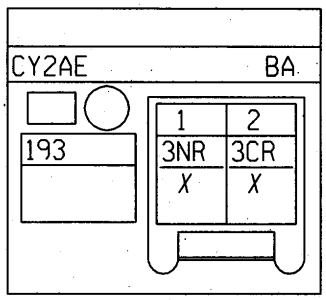

N°	mm²		... → ...
1	1	3NR	+ INJECTOR >
2	.6	3CR	INJECTOR 1 - CONTROL

INJECTOR 2


S28-S29-S31-S33

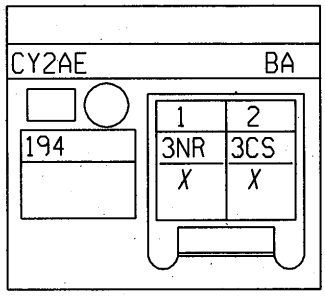

N°	mm²		... → ...
1	1	3NR	+ INJECTOR >
2	.6	3CS	INJECTOR 2 - CONTROL


INJECTOR 3

S28-S29-S31-S33

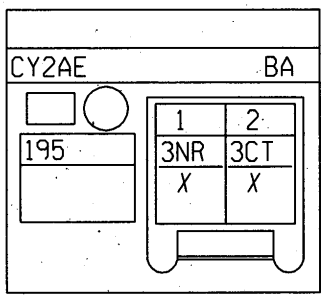


N°	mm²		... → ...
1	1	3NR	+ INJECTOR >
2	.6	3CT	INJECTOR 3 - CONTROL

INJECTOR 1
BVM5 BVA4
S28-S29-S30-S31-S33

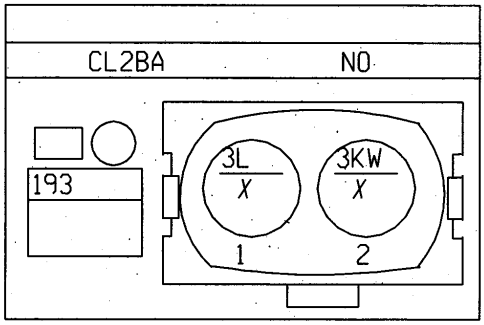


N°	mm²		
2	3L	... → ...	+ INJECTOR 1
2	3KW	... → ...	INJECTOR 1 CONTROL

INJECTOR 2
BVM5 BVA4
S28-S29-S31-S33

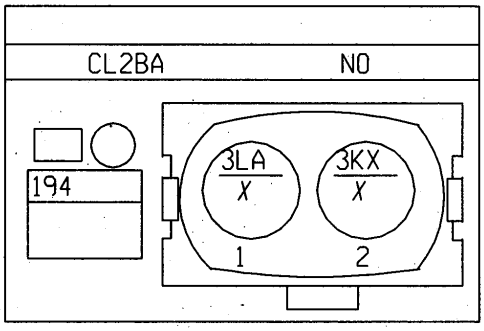


N°	mm²		
2	3LA	... → ...	+ INJECTOR 2
2	3KX	... → ...	INJECTOR 2 CONTROL

INJECTOR 3
BVM5 BVA4
S28-S29-S31-S33

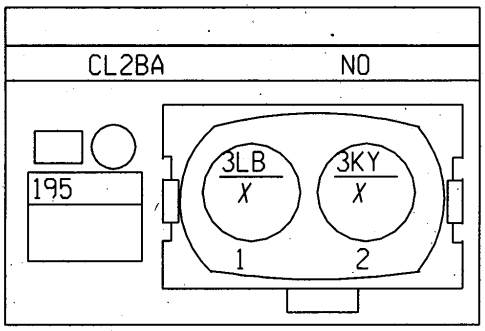


N°	mm²		
2	3LB	... → ...	+ INJECTOR 3
2	3KY	... → ...	INJECTOR 3 CONTROL

INJECTOR 1
CHAUFO
S28-S29-S30-S31-S33

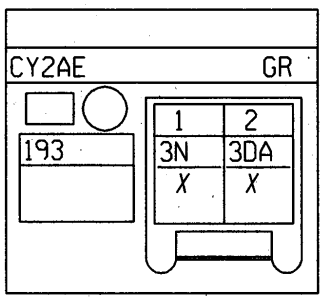


N°	mm²		... → ...
1	1	3N	+ FUEL PUMP>
2	1	3DA	INJECTOR 1-4 - CONTROL

INJECTOR 2
CHAUFO
S28-S29-S31-S33

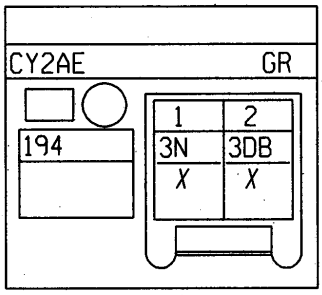

N°	mm²		... → ...
1	1	3N	+ FUEL PUMP>
2	1	3DB	INJECTOR 2-3 - CONTROL


INJECTOR 3
CHAUFO
S28-S29-S31-S33

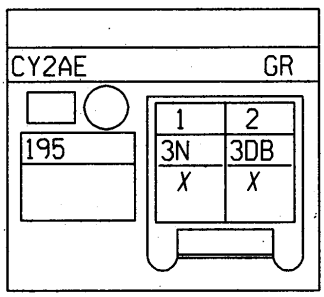

N°	mm²		... → ...
1	1	3N	+ FUEL PUMP>
2	1	3DB	INJECTOR 2-3 - CONTROL

INJECTOR 2


K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M S28-S29-S31-S33

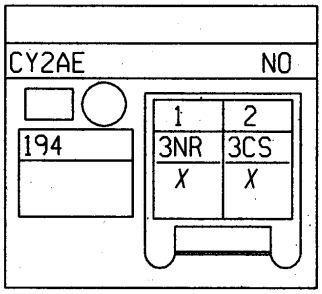

N°	mm²		... → ...
.6	3NR		+ INJECTOR >
.6	3CS		INJECTOR 2 - CONTROL

INJECTOR 3


K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M S28-S29-S31-S33

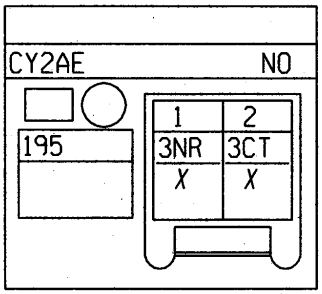

N°	mm²		... → ...
.6	3NR		+ INJECTOR >
.6	3CT		INJECTOR 3 - CONTROL


INJECTOR 4

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M S28-S29-S31-S33

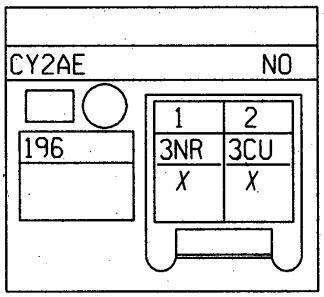


N°	mm²		... → ...
.6	3NR		+ INJECTOR >
.6	3CU		INJECTOR 4 - CONTROL

INJECTOR 2
F4P720 F4P722
S28-S29-S31-S33

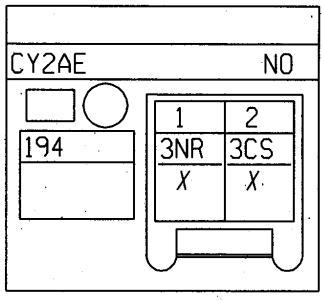


N°	mm²		··· ⟶ ···
1	.6	3NR	+ INJECTOR >
2	.6	3CS	INJECTOR 2 - CONTROL

INJECTOR 3
F4P720 F4P722
S28-S29-S31-S33

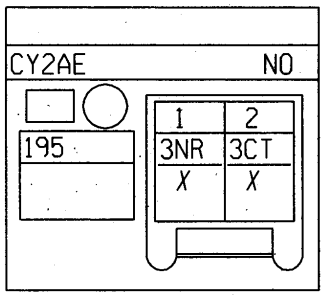

N°	mm²		··· ⟶ ···
1	.6	3NR	+ INJECTOR >
2	.6	3CT	INJECTOR 3 - CONTROL


INJECTOR 4
F4P720 F4P722
S28-S29-S31-S33

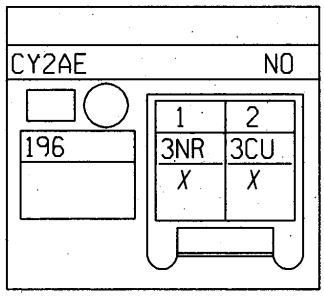

N°	mm²		··· ⟶ ···
1	.6	3NR	+ INJECTOR >
2	.6	3CU	INJECTOR 4 - CONTROL

INJECTOR 4


S28-S29-S31-S33

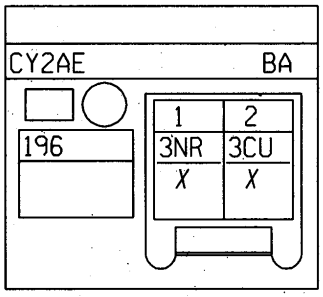

N°	mm²		... → ...
1		3NR	+ INJECTOR >
.6		3CU	INJECTOR 4 - CONTROL

THROTTLE POTENTIOMETER


S28-S29-S33-S35

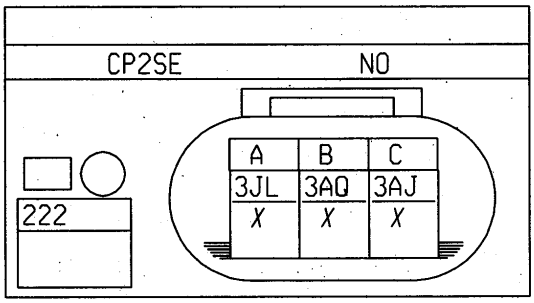

N°	mm²		... → ...
.6		3JL	- THROTTLE POSITION POTENTIOMETER
.6		3AQ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
.6		3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER


POWER ASSISTED STEERING PRESSOSTAT

S28-S29-S33-S35

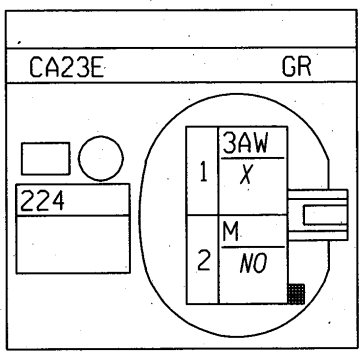


N°	mm²		... → ...
.6		3AW	POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER + SIGNAL
.6		M	EARTH

INJECTOR 4
BVM5 BVA4
S28-S29-S31-S33

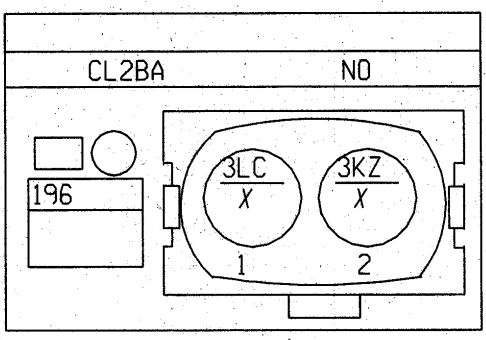


N°	mm²		... ⟶ ...
1	2	3LC	+ INJECTOR 4
2	2	3KZ	INJECTOR 4 CONTROL

AIR CONDITIONING SLECTION FUNCTION PRESSURE SWITCH
BVM5 BVA4
S32

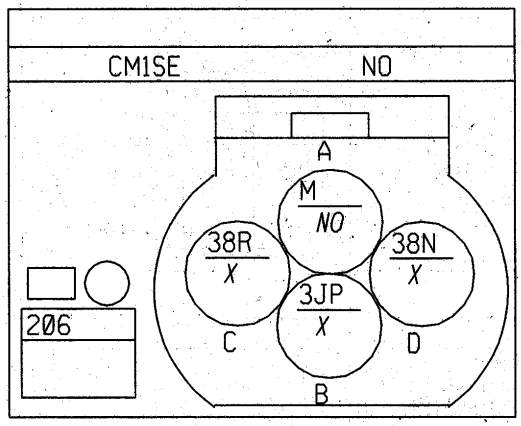


N°	mm²		... ⟶ ...
A	.6	M	EARTH
B	.6	3JP	FAN 2 CONTROL RELAY
C	1	38R	AIR CONDITIONING CLUTCH + CONTROL
D	1	38N	+ AIR CONDITIONING CLUTCH RELAY > FUNCTION SENSOR 3 CONTROL

INJECTOR 4
CHAUFO
S28-S29-S31-S33

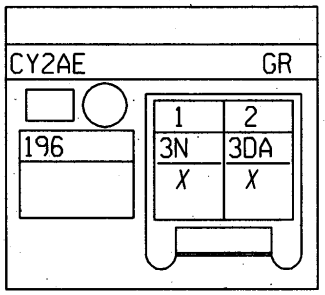


N°	mm²		... → ...
	1	3N	+ FUEL PUMP>
2	1	3DA	INJECTOR 1-4 - CONTROL

THROTTLE POTENTIOMETER
CHAUFO
S28-S29-S33-S35

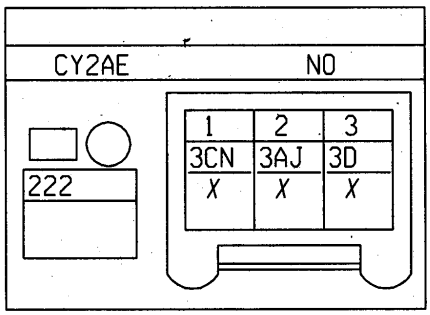

N°	mm²		... → ...
1	.6	3CN	THROTTLE IDLING MIXTURE EARTH SENSOR
2	.6	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
3	.6	3D	-SENSOR ASSEMBLY 4

POWER ASSISTED STEERING PRESSOSTAT
CHAUFO
S28-S29-S33-S35

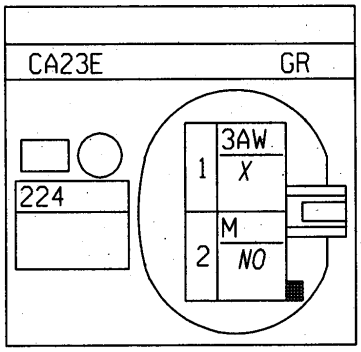


N°	mm²		... → ...
1	.6	3AW	POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER + SIGNAL
2	.6	M	EARTH

THROTTLE POTENTIOMETER

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M

S28-S29-S33-S35

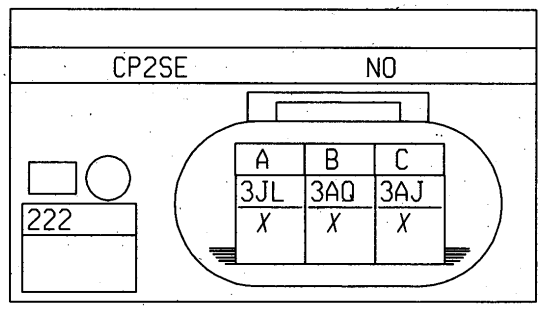


N°	mm²		... ⟶ ...
A	.6	3JL	- THROTTLE POSITION POTENTIOMETER
B	.6	3AQ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
C	.6	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER

POWER ASSISTED STEERING PRESSOSTAT

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M

S28-S29-S33-S35

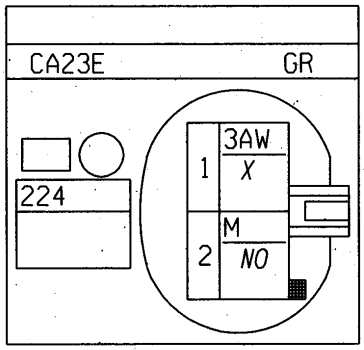


N°	mm²		... ⟶ ...
1	.35	3AW	POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER + SIGNAL
2	.6	M	EARTH

DOWNSTREAM OXYGEN SENSOR

K4M701-708-712 K4J750-714 SAUF EQGPL K4M712 EQGPL

S28-S29-S30-S34

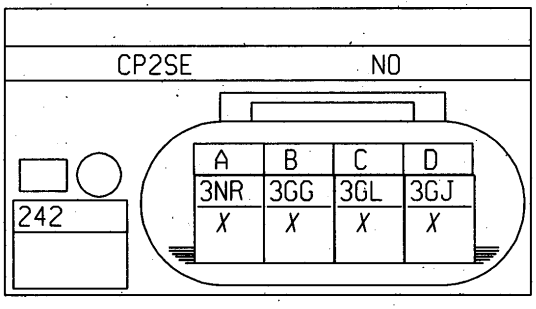


N°	mm²		... ⟶ ...
A	1	3NR	+ INJECTOR >
B	1	3GG	DOWNSTREAM OXYGEN SENSOR REHEATER - CONTROL
C	.6	3GL	DOWNSTREAM OXYGEN SENSOR SIGNAL
D	.6	3GJ	DOWNSTREAM OXYGEN SENSOR EARTH

THROTTLE POTENTIOMETER

F4P722

S28-S29-S33-S35

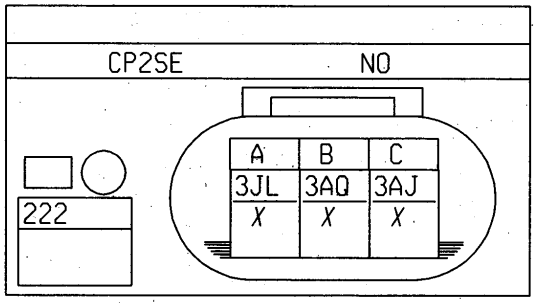


N°	mm²		... → ...
A	.22	3JL	- THROTTLE POSITION POTENTIOMETER
B	.22	3AQ	SIGNAL+ THROTTLE POSITION POTENTIOMETER
C	.22	3AJ	SIGNAL+ THROTTLE POSITION POTENTIOMETER

POWER ASSISTED STEERING PRESSOSTAT

F4P720 F4P722

S28-S29-S33-S35

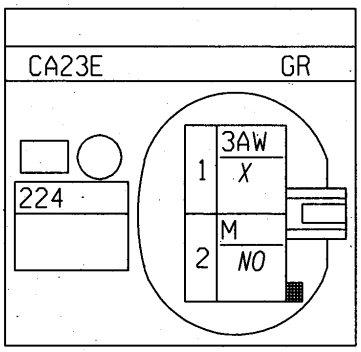


N°	mm²		... → ...
1	.35	3AW	POWER-ASSISTED STEERING PRESSURE SWITCH > INJECTION COMPUTER + SIGNAL
2	.6	M	EARTH

DOWNSTREAM OXYGEN SENSOR

F4P720


S28-S29-S30-S34

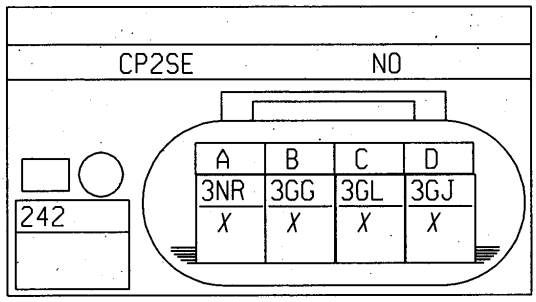

N°	mm²		... → ...
A	1	3NR	+ INJECTOR >
B	1	3GG	DOWNSTREAM OXYGEN SENSOR REHEATER - CONTROL
C	.6	3GL	DOWNSTREAM OXYGEN SENSOR SIGNAL
D	.6	3GJ	DOWNSTREAM OXYGEN SENSOR EARTH

DOWNSTREAM OXYGEN SENSOR


S28-S29-S30-S34

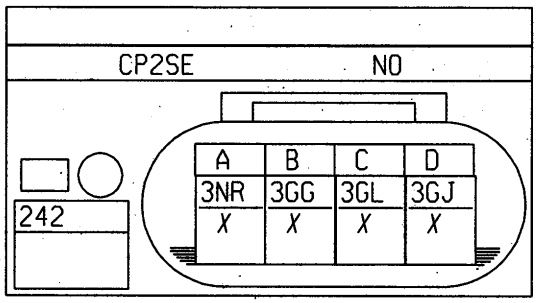

N°	mm²		... → ...
A	1	3NR	+ INJECTOR >
B	1	3GG	DOWNSTREAM OXYGEN SENSOR REHEATER - CONTROL
C	.6	3GL	DOWNSTREAM OXYGEN SENSOR SIGNAL
D	.6	3GJ	DOWNSTREAM OXYGEN SENSOR EARTH

OIL LEVEL SENSOR


S28-S29-S30-S31-S35

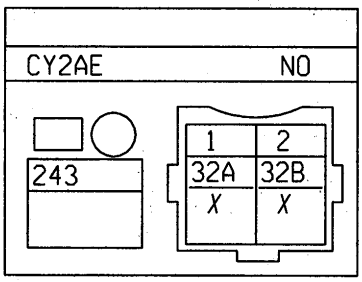

N°	mm²		... → ...
1	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1

OIL LEVEL SENSOR


S28-S29-S30-S31-S35

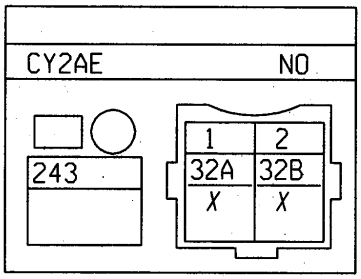

N°	mm²		... → ...
	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1

WATER INJECTION TEMPERATURE SENSOR

S27

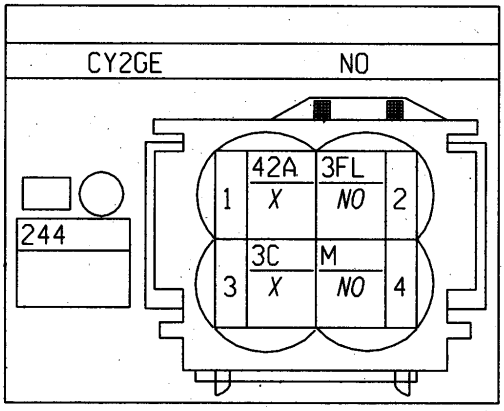


N°	mm²		... → ...
	.35	42A	SIGNAL+ COOLANT TEMPERATURE
	.35	3FL	- ANALOG > SENSOR
	.35	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
	.35	M	EARTH

OIL LEVEL SENSOR

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M

S28-S29-S30-S31-S35

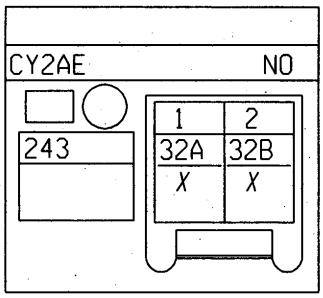


N°	mm²		··· ⟶ ···
1	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1

WATER INJECTION TEMPERATURE SENSOR

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M


S27

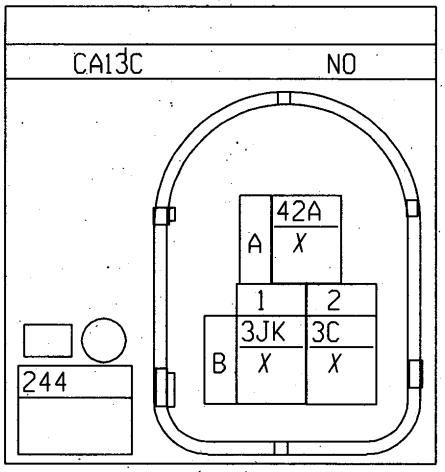

N°	mm²		··· ⟶ ···
A	.6	42A	SIGNAL+ COOLANT TEMPERATURE
B1	.6	3JK	- COOLANT TEMPERATURE
B2	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR

OIL LEVEL SENSOR


S28-S29-S30-S31-S35

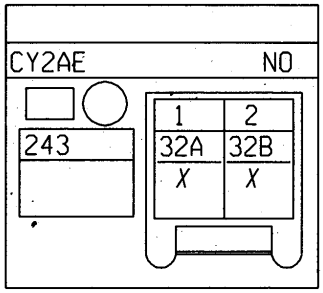

N°	mm²		... → ...
	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1


WATER INJECTION TEMPERATURE SENSOR

S27

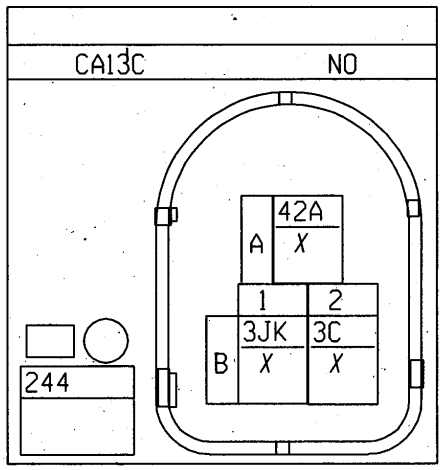


N°	mm²		... → ...
	.35	42A	SIGNAL+ COOLANT TEMPERATURE
1	.6	3JK	- COOLANT TEMPERATURE
2	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR

OIL LEVEL SENSOR
BVM5 BVA4
S28-S29-S30-S31-S35

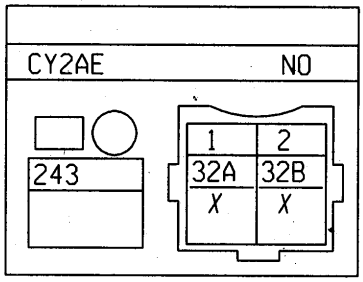


N°	mm²		... ⟶ ...
1	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1

WATER INJECTION TEMPERATURE SENSOR
BVM5 BVA4
S27

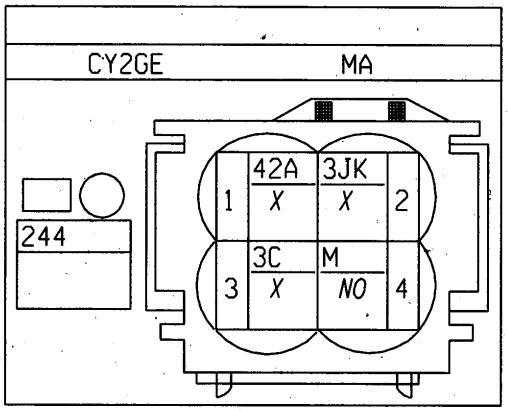


N°	mm²		... ⟶ ...
1	.35	42A	SIGNAL+ COOLANT TEMPERATURE
2	.35	3JK	- COOLANT TEMPERATURE
3	.35	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
4	.35	M	EARTH

OIL LEVEL SENSOR
F4P720 F4P722
S28-S29-S30-S31-S35

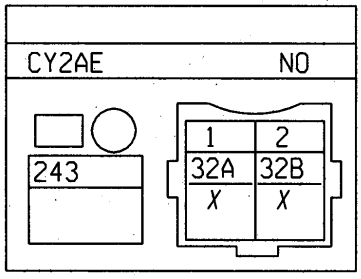

N°	mm²		... → ...
1	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1


WATER INJECTION TEMPERATURE SENSOR
F4P720 F4P722
S27

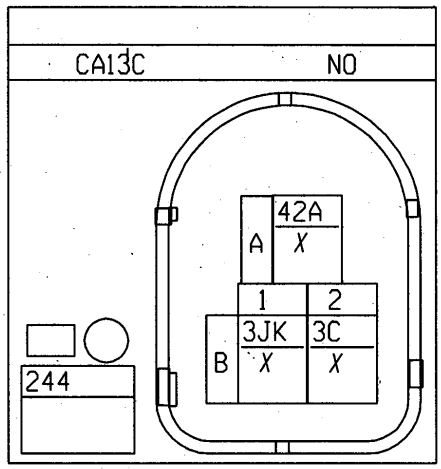

N°	mm²		... → ...
A	.6	42A	SIGNAL+ COOLANT TEMPERATURE
B1	.6	3JK	- COOLANT TEMPERATURE
B2	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR

WATER INJECTION TEMPERATURE SENSOR


S27

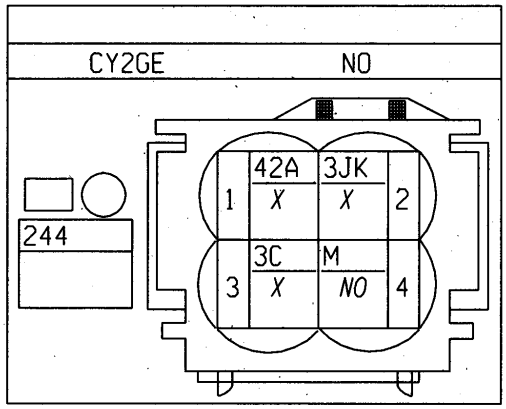

N°	mm²		... → ...
1	.35	42A	SIGNAL+ COOLANT TEMPERATURE
2	.35	3JK	- COOLANT TEMPERATURE
3	.35	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
4	.35	M	EARTH

WATER INJECTION TEMPERATURE SENSOR


S27

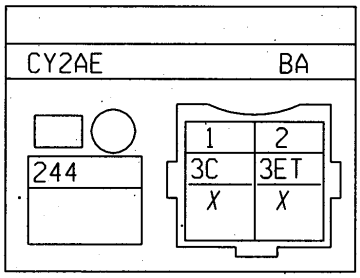

N°	mm²		... → ...
	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR
	.6	3ET	AIR-WATER REGULATION NEEDLE POTENTIOMETER EARTH SENSOR

FAN UNIT THERMAL SENSOR


S32

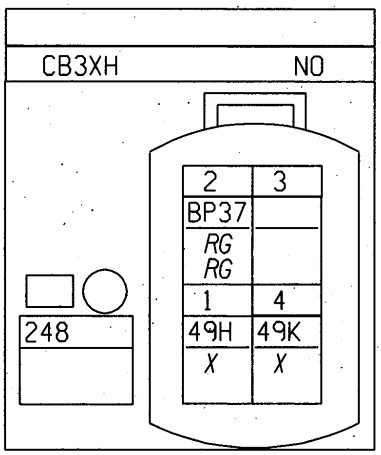

N°	mm²		... → ...
1	.35	49H	+ LOW SPEED FAN ASSEMBLY RELAY CONTROL
2	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
4	.35	49K	- HIGH SPEED FAN UNIT CONTROL

WATER INJECTION TEMPERATURE SENSOR


S27

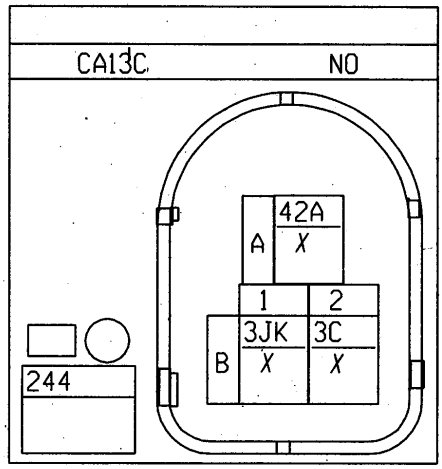

N°	mm²		... → ...
A	.6	42A	SIGNAL+ COOLANT TEMPERATURE
B1	.6	3JK	- COOLANT TEMPERATURE
B2	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR


COOLING FAN AND AIR CONDITIONING

S28-S29-S31-S32-S33-S35

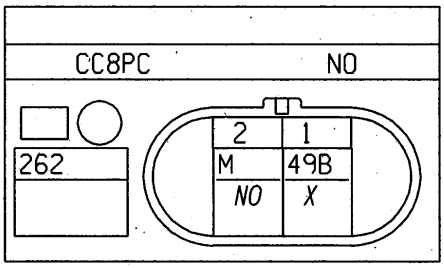


N°	mm²		... → ...
1	3	49B	+ FAN CONTROL
2	3	M	EARTH

WATER INJECTION TEMPERATURE SENSOR
CHAUFO
S27

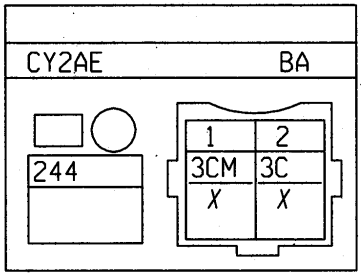


N°	mm²		... → ...
	.6	3CM	-SENSOR ASSEMBLY 3
	.6	3C	SIGNAL+ COOLANT TEMPERATURE SENSOR

FAN UNIT THERMAL SENSOR
CHAUFO
S32

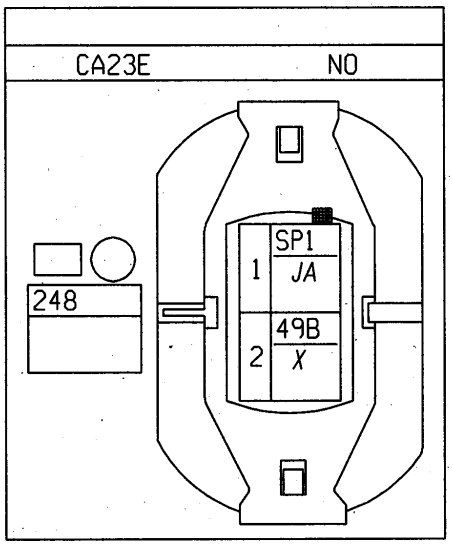


N°	mm²		... → ...
	1	SP1	+ PROTECTED CONTROL > FAN ASSEMBLY
	1	49B	+ FAN CONTROL

VEHICLE SPEED SENSOR (PASSENGER COMPARTMENT)
K4M706 CA K4M706 CHAUFO

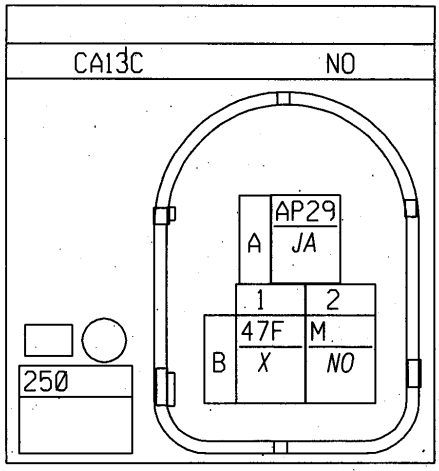


N°	mm²		... → ...
A	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
B1	.6	47F	VEHICLE SPEED SIGNAL
B2	.6	M	EARTH

COOLING FAN AND AIR CONDITIONING
K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M
S28-S29-S31-S32-S33-S35

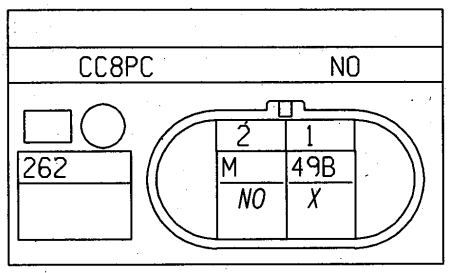


N°	mm²		... → ...
1	3	49B	+ FAN CONTROL
2	3	M	EARTH

VEHICLE SPEED SENSOR (PASSENGER COMPARTMENT)
CHAUFO

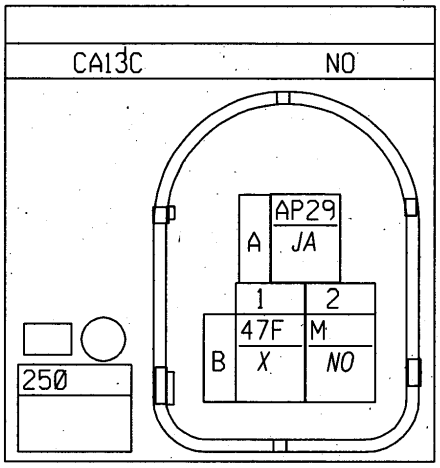

N°	mm²		... → ...
A	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
B1	.6	47F	VEHICLE SPEED SIGNAL
B2	.6	M	EARTH


BI-WATER THERMAL SENSOR
CHAUFO
S32

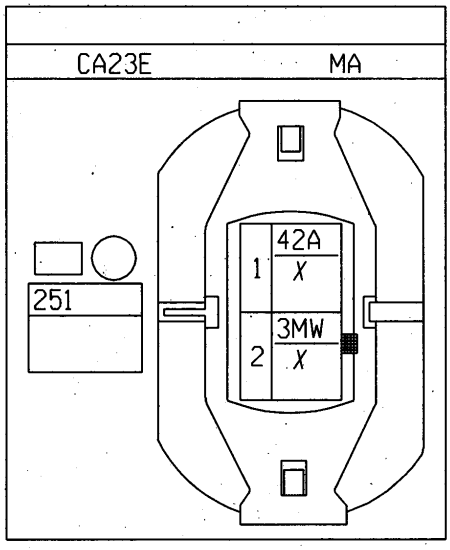

N°	mm²		... → ...
1	.6	42A	SIGNAL+ COOLANT TEMPERATURE
2	.6	3MW	ENGINE SAFETY WARNING LIGHT CONTROL

BI-WATER THERMAL SENSOR


S32

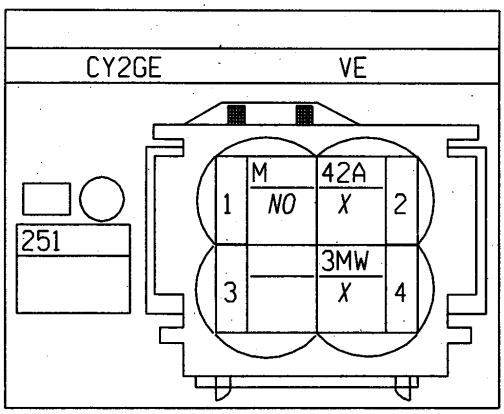

N°	mm²		... ⟶ ...
1	.35	M	EARTH
2	.35	42A	SIGNAL+ COOLANT TEMPERATURE
4	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL

PREHEATING UNIT


S31-S32

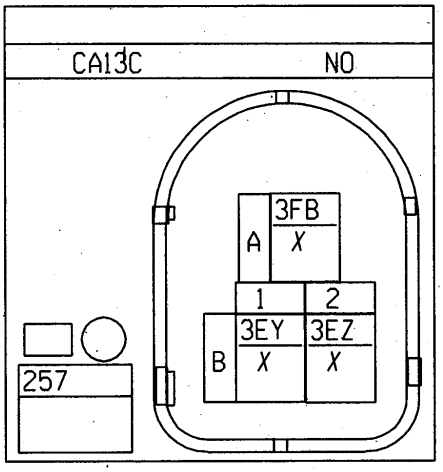

N°	mm²		... ⟶ ...
A	.6	3FB	+ INJECTION > PROTECTION RELAY
B1	.6	3EY	- SPARK PLUG COIL RELAY 1 (1-3) CONTROL
B2	.6	3EZ	- SPARK PLUG COIL RELAY 2 (2-4) CONTROL

PREHEATING UNIT


S31-S32

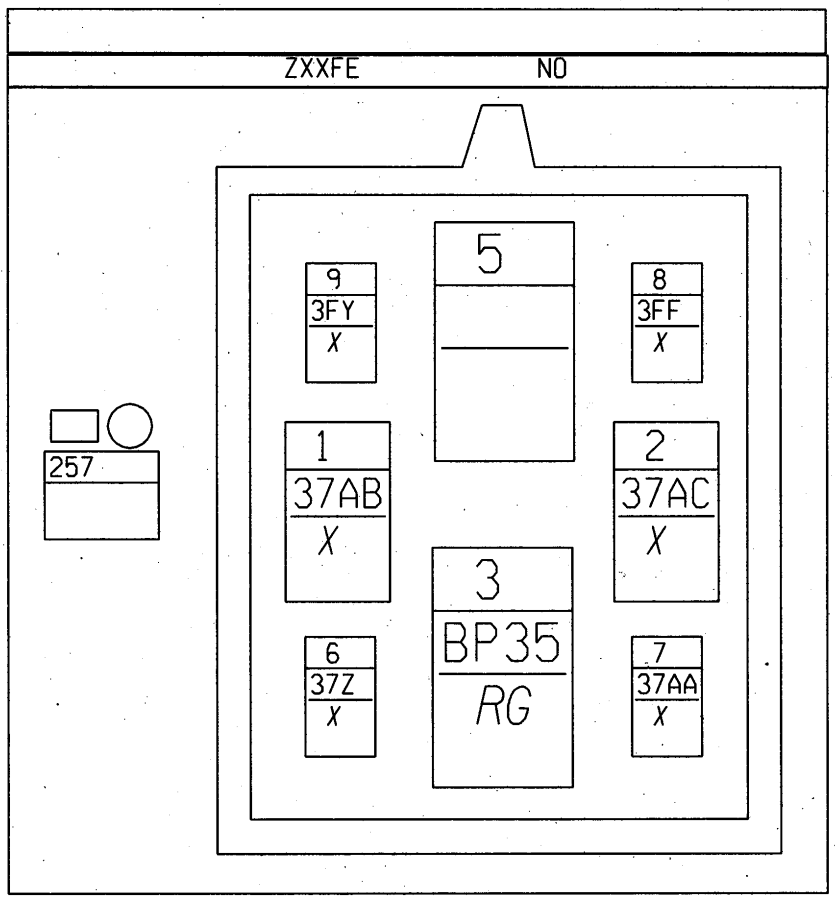

N°	mm²		... → ...
3	37AB		HEATER PLUG 3 CONTROL
3	37AC		HEATER PLUG 4 CONTROL
7	BP35		PROTECTED BATTERY FUSE PREHEATER UNIT
3	37Z		HEATER PLUG 1 CONTROL
3	37AA		HEATER PLUG 2 CONTROL
.35	3FF		- PREHEATER RELAY CONTROL
.35	3FY		PREHEATER RELAY DIAGNOSTIC SIGNAL

AIR INJECTION TEMPERATURE SENSOR


S28-S29-S32-S33-S35

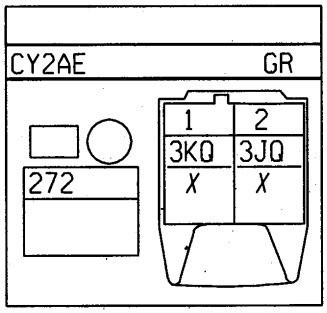

N°	mm²		... → ...
.6	3KQ		AIR TEMPERATURE SIGNAL
.6	3JQ		- AIR TEMPERATURE

PREHEATING UNIT


S31-S32

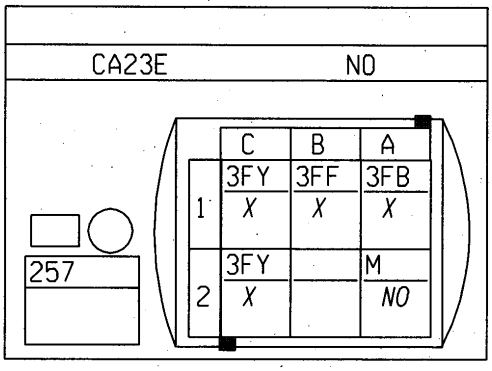

N°	mm²		... → ...
A1	.6	3FB	+ INJECTION > PROTECTION RELAY
B1	.6	3FF	- PREHEATER RELAY CONTROL
C1	.35	3FY	PREHEATER RELAY DIAGNOSTIC SIGNAL
A2	.6	M	EARTH
C2	.35	3FY	PREHEATER RELAY DIAGNOSTIC SIGNAL

PREHEATING UNIT


S31-S32

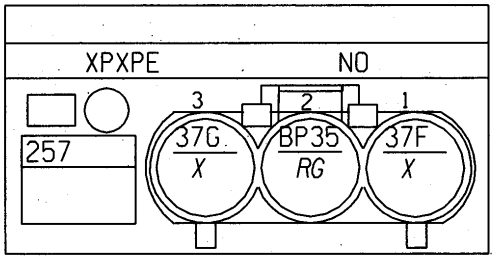

N°	mm²		... → ...
1	5	37F	+ SPARK PLUG 1> 3 CONTROL
2	7	BP35	PROTECTED BATTERY FUSE PREHEATER UNIT
3	5	37G	+ SPARK PLUG 2> 4 CONTROL


GAS RECYCLING SOLENOID VALVE (EGR)

S31-S32-S35

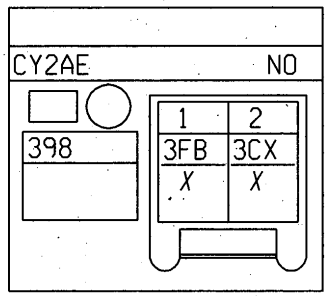


N°	mm²		... → ...
1	1	3FB	+ INJECTION > PROTECTION RELAY
2	1	3CX	- EGR SOLENOID VALVE CONTROL

PREHEATING UNIT
BVM5 BVA4
S31-S32

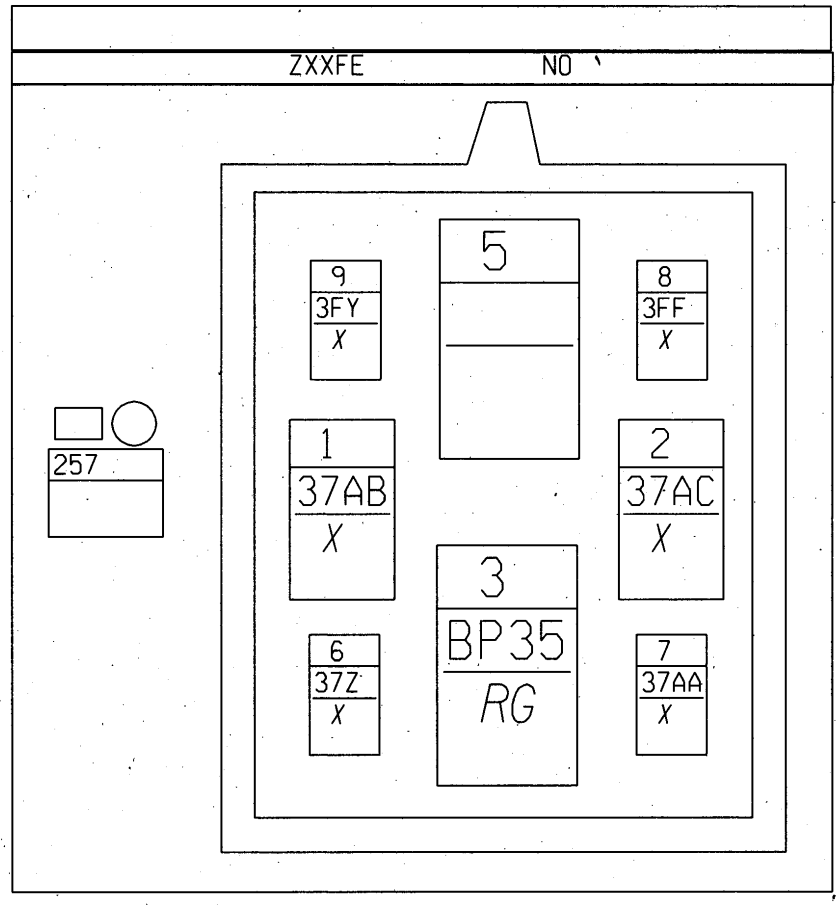

N°	mm²		... → ...
	3	37AB	HEATER PLUG 3 CONTROL
	3	37AC	HEATER PLUG 4 CONTROL
	7	BP35	PROTECTED BATTERY FUSE PREHEATER UNIT
	3	37Z	HEATER PLUG 1 CONTROL
	3	37AA	HEATER PLUG 2 CONTROL
	.35	3FF	- PREHEATER RELAY CONTROL
	.35	3FY	PREHEATER RELAY DIAGNOSTIC SIGNAL


THERMAL SENSOR
BVM5 BVA4
S31

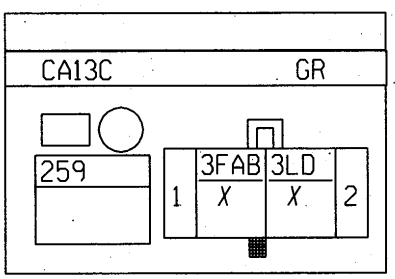

N°	mm²		... → ...
	.6	3FAB	SIGNAL+ FUEL TEMPERATURE
	.6	3LD	- FUEL TEMPERATURE SENSOR

PREHEATING UNIT


S31-S32

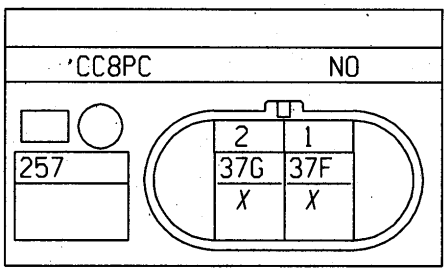

N°	mm²		... → ...
1	5	37F	+ SPARK PLUG 1> 3 CONTROL
2	5	37G	+ SPARK PLUG 2> 4 CONTROL

COOLING FAN AND AIR CONDITIONING


S28-S29-S31-S32-S33-S35

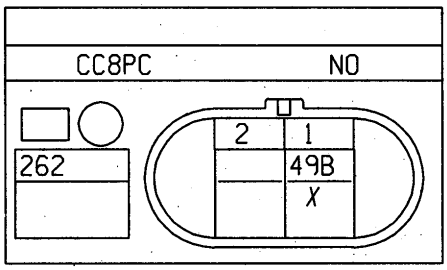

N°	mm²		... → ...
1	3	49B	+ FAN CONTROL

AIR INJECTION TEMPERATURE SENSOR


S28-S29-S32-S33-S35

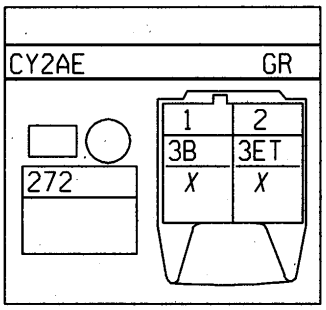

N°	mm²		... → ...
1	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
2	.6	3ET	AIR-WATER REGULATION NEEDLE POTENTIOMETER EARTH SENSOR

COOLING FAN AND AIR CONDITIONING


S28-S29-S31-S32-S33-S35

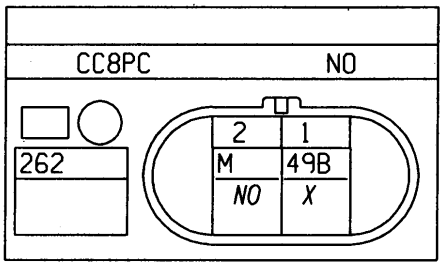

N°	mm²		... → ...
3	49B		+ FAN CONTROL
3	M		EARTH

AIR INJECTION TEMPERATURE SENSOR


S28-S29-S32-S33-S35

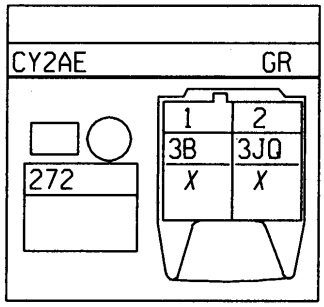

N°	mm²		... → ...
.6	3B		SIGNAL+ AIR TEMPERATURE SENSOR
.6	3JQ		- AIR TEMPERATURE


CONDITIONING FAN RESISTANCE

S28-S29-S31-S32-S33-S35

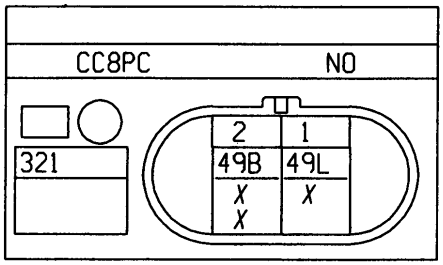


N°	mm²		... → ...
3	49L		LOW SPEED FAN + CONTROL RESISTANCE
3	49B		+ FAN CONTROL
3	49B		+ FAN CONTROL

COOLING FAN AND AIR CONDITIONING
BVM5 BVA4
S28-S29-S31-S32-S33-S35

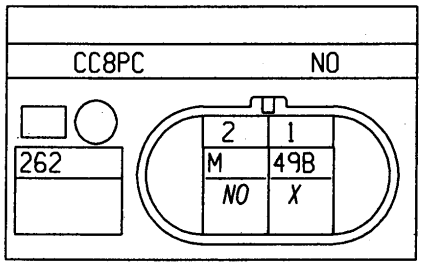


N°	mm²		... ⟶ ...
1	3	49B	+ FAN CONTROL
2	7	M	EARTH

CONDITIONING FAN RESISTANCE
BVM5 BVA4
S28-S29-S31-S32-S33-S35

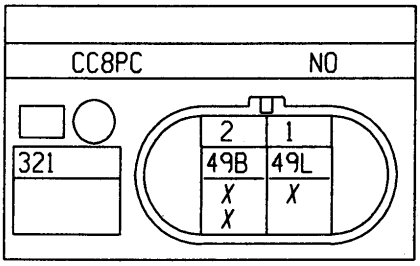


N°	mm²		... ⟶ ...
1	3	49L	LOW SPEED FAN + CONTROL RESISTANCE
2	3	49B	+ FAN CONTROL
2	3	49B	+ FAN CONTROL

TURBO PRESSURE REGULATOR
BVM5 BVA4
S31

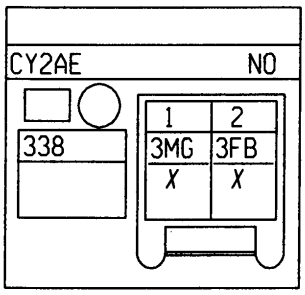


N°	mm²		... ⟶ ...
1	1	3MG	TURBO PRESSURE SOLENOID VALVE - CONTROL
2	.6	3FB	+ INJECTION > PROTECTION RELAY

COOLING FAN AND AIR CONDITIONING
F4P720 F4P722
S28-S29-S31-S32-S33-S35

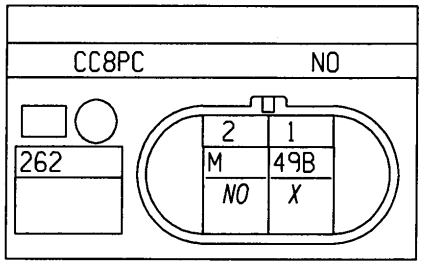


N°	mm²		··· → ···
1	3	49B	+ FAN CONTROL
2	3	M	EARTH

AIR INJECTION TEMPERATURE SENSOR
F4P720 F4P722
S28-S29-S32-S33-S35

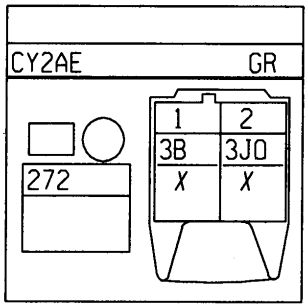

N°	mm²		··· → ···
1	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
2	.6	3JQ	- AIR TEMPERATURE

CONDITIONING FAN RESISTANCE
F4P720 F4P722
S28-S29-S31-S32-S33-S35

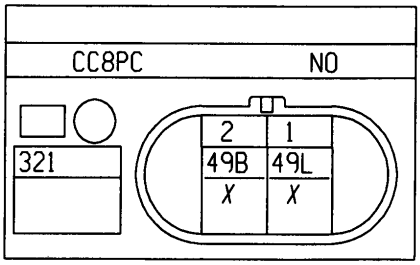


N°	mm²		··· → ···
1	3	49L	LOW SPEED FAN + CONTROL RESISTANCE
2	3	49B	+ FAN CONTROL

AIR INJECTION TEMPERATURE SENSOR

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M

S28-S29-S32-S33-S35

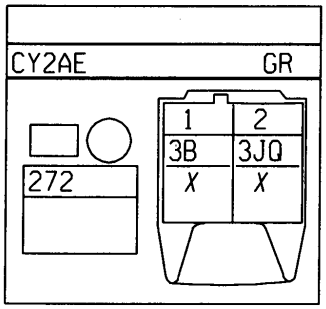


N°	mm²		... ⟶ ...
1	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
2	.6	3JQ	- AIR TEMPERATURE

CONDITIONING FAN RESISTANCE

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M

S28-S29-S31-S32-S33-S35

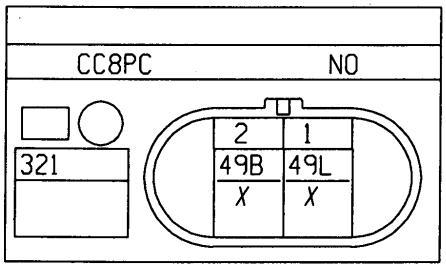


N°	mm²		... ⟶ ...
1	3	49L	LOW SPEED FAN + CONTROL RESISTANCE
2	3	49B	+ FAN CONTROL

PETROL VAPOUR ABSORBER

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M


S28-S29-S33-S35

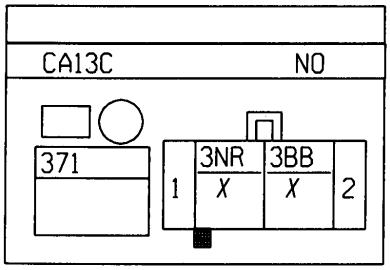

N°	mm²		... ⟶ ...
1	.6	3NR	+ INJECTOR >
2	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL


AIR INJECTION TEMPERATURE SENSOR

S28-S29-S32-S33-S35

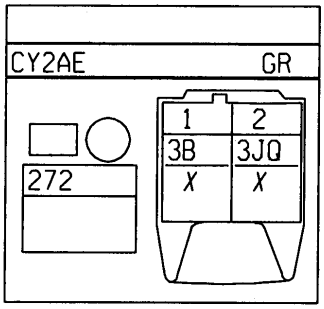


N°	mm²		... → ...
	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR
	.6	3JQ	- AIR TEMPERATURE

AIR INJECTION TEMPERATURE SENSOR
CHAUFO
S28-S29-S32-S33-S35

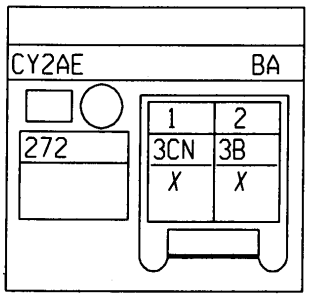

N°	mm²		... ⟶ ...
1	.6	3CN	THROTTLE IDLING MIXTURE EARTH SENSOR
2	.6	3B	SIGNAL+ AIR TEMPERATURE SENSOR


PETROL VAPOUR ABSORBER
CHAUFO
S28-S29-S33-S35

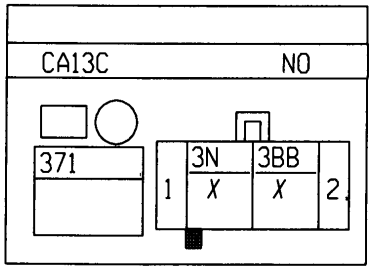

N°	mm²		... ⟶ ...
1	1	3N	+ FUEL PUMP>
2	1	3BB	CANISTER BLEED SOLENOID VALVE CONTROL

CONDITIONING FAN RESISTANCE


S28-S29-S31-S32-S33-S35

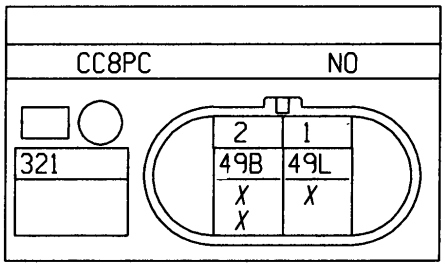

N°	mm²		... → ...
3	49L		LOW SPEED FAN + CONTROL RESISTANCE
3	49B		+ FAN CONTROL
3	49B		+ FAN CONTROL

GAS RECYCLING SOLENOID VALVE (EGR)


S31-S32-S35

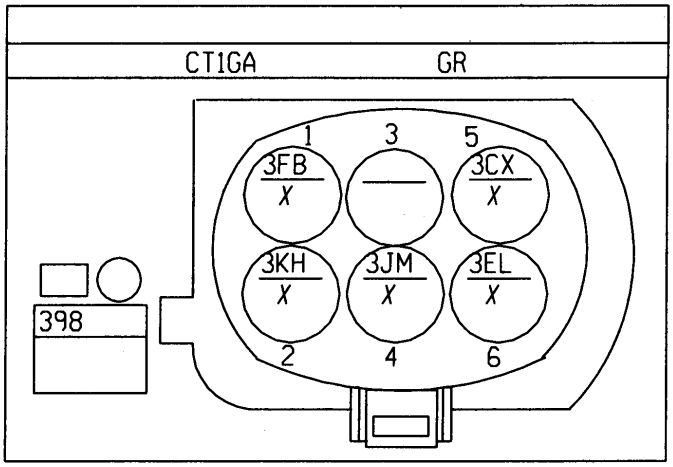

N°	mm²		... → ...
1	3FB		+ INJECTION > PROTECTION RELAY
.6	3KH		EGR + COPY
.6	3JM		- EGR SOLENOID VALVE
1	3CX		- EGR SOLENOID VALVE CONTROL
.6	3EL		SIGNAL+ EGR POTENTIOMETER

CONDITIONING FAN RESISTANCE


S28-S29-S31-S32-S33-S35

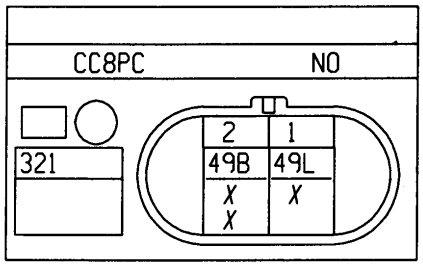

N°	mm²		... ⟶ ...
1	3	49L	LOW SPEED FAN + CONTROL RESISTANCE
2	3	49B	+ FAN CONTROL
2	5	49B	+ FAN CONTROL

GAS RECYCLING SOLENOID VALVE (EGR)


S31-S32-S35

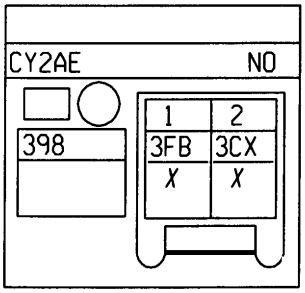

N°	mm²		... ⟶ ...
1	.6	3FB	+ INJECTION > PROTECTION RELAY
2	.6	3CX	- EGR SOLENOID VALVE CONTROL

FAST IDLE SOLENOID VALVE


S32

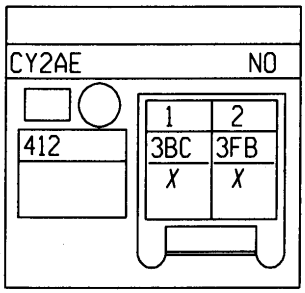

N°	mm²		... ⟶ ...
1	.6	3BC	- IDLING REGULATION SOLENOID > INJECTION COMPUTER CONTROL
2	.6	3FB	+ INJECTION > PROTECTION RELAY

CONDITIONING FAN RESISTANCE


S28-S29-S31-S32-S33-S35

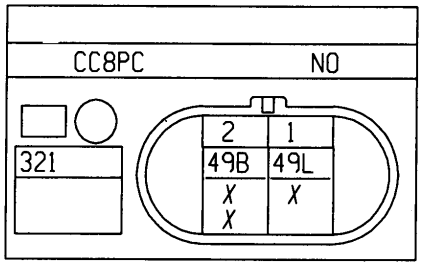

N°	mm²		... ⟶ ...
1	3	49L	LOW SPEED FAN + CONTROL RESISTANCE
2	3	49B	+ FAN CONTROL
2	3	49B	+ FAN CONTROL


PETROL VAPOUR ABSORBER

S28-S29-S33-S35

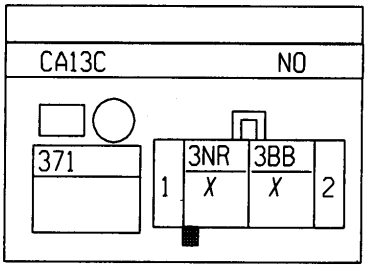


N°	mm²		... ⟶ ...
1	.6	3NR	+ INJECTOR >
2	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL

REGULATION PUMP SOLENOID VALVE
BVM5 BVA4
S31

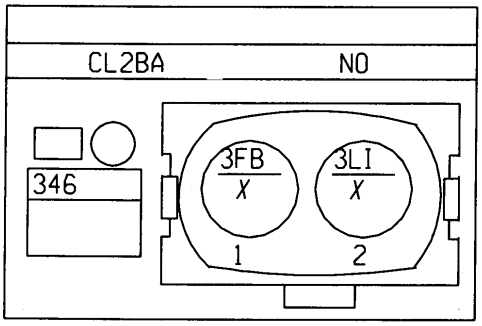

N°	mm²		... → ...
1	1	3FB	+ INJECTION > PROTECTION RELAY
2	1	3LI	- FUEL PRESSURE REGULATION SOLENOID VALVE CONTROL


GAS RECYCLING SOLENOID VALVE (EGR)
BVM5 BVA4
S31-S32-S35

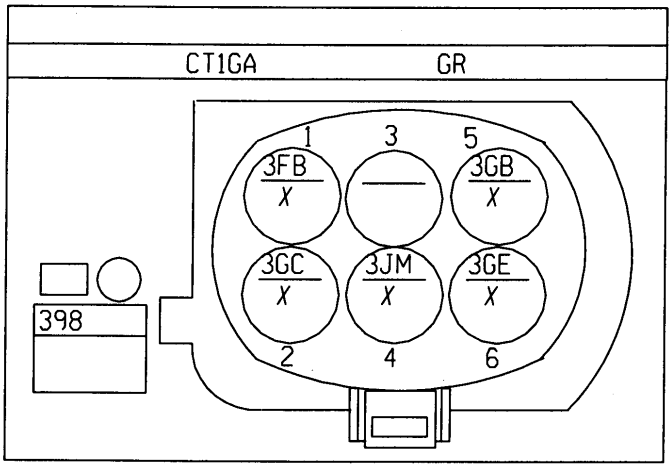

N°	mm²		... → ...
1	1	3FB	+ INJECTION > PROTECTION RELAY
2	.6	3GC	+ GAS RECIRCULATION SENSOR
4	.6	3JM	- EGR SOLENOID VALVE
5	1	3GB	- EGR SOLENOID VALVE CONTROL
6	.6	3GE	EGR SENSOR SIGNAL

PETROL VAPOUR ABSORBER


S28-S29-S33-S35

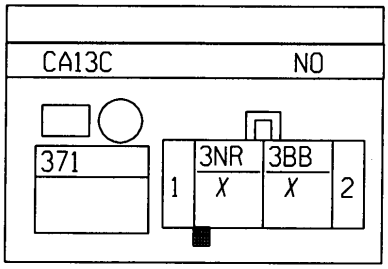

N°	mm²		... ⟶ ...
	.6	3NR	+ INJECTOR >
	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL


AIR CONDITIONING PRESSOSTAT

S28-S29-S31-S33-S35

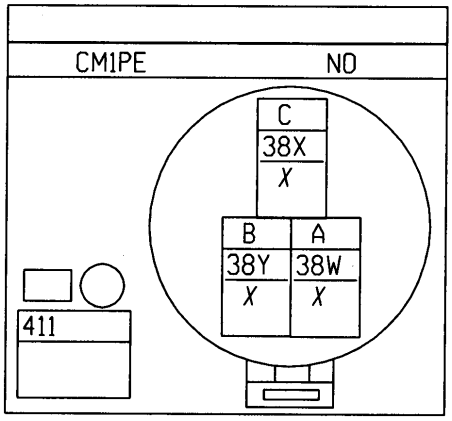


N°	mm²		... ⟶ ...
	.6	38W	- FREON PRESSURE SENSOR (AC)
	.6	38Y	+FREON PRESSURE SENSOR
	.6	38X	FREON PRESSURE SENSOR SIGNAL

PETROL VAPOUR ABSORBER
F4P720 F4P722
S28-S29-S33-S35

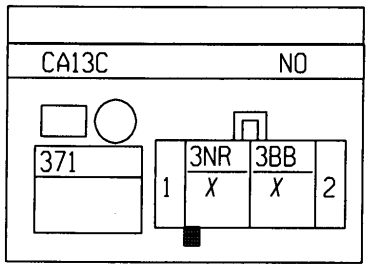

N°	mm²		... → ...
1	.6	3NR	+ INJECTOR >
2	.6	3BB	CANISTER BLEED SOLENOID VALVE CONTROL


AIR CONDITIONING PRESSOSTAT
F4P720 F4P722
S28-S29-S31-S33-S35

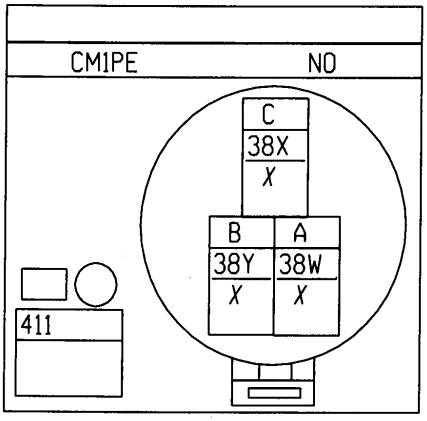

N°	mm²		... → ...
A	.6	38W	- FREON PRESSURE SENSOR (AC)
B	.6	38Y	+FREON PRESSURE SENSOR
C	.6	38X	FREON PRESSURE SENSOR SIGNAL

GAS RECYCLING SOLENOID VALVE (EGR)


S31-S32-S35

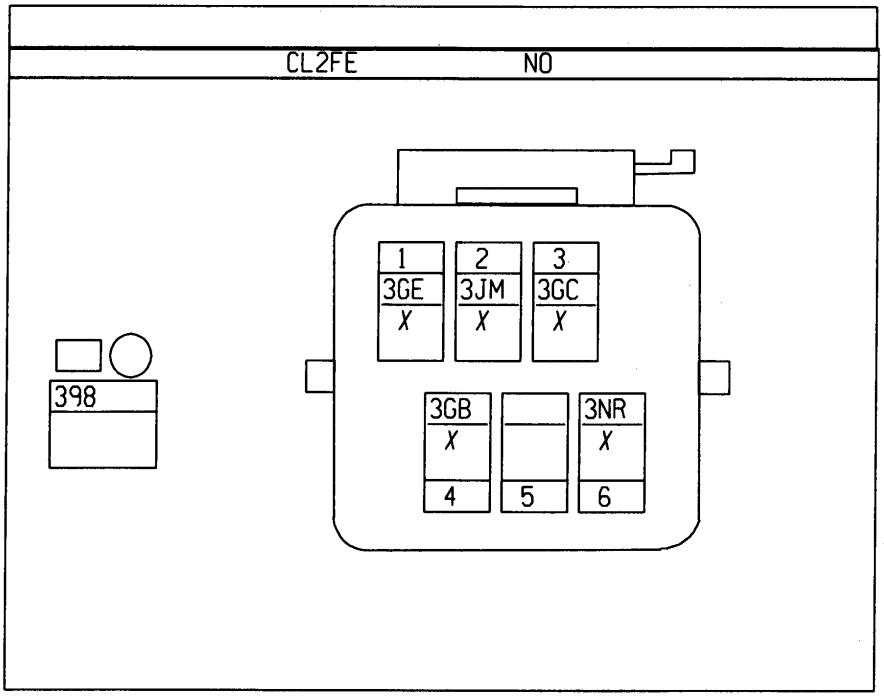

N°	mm²		... ⟶ ...
1	.6	3GE	EGR SENSOR SIGNAL
2	.6	3JM	- EGR SOLENOID VALVE
3	.6	3GC	+ GAS RECIRCULATION SENSOR
4	1	3GB	- EGR SOLENOID VALVE CONTROL
6	1	3NR	+ INJECTOR >

AIR CONDITIONING PRESSOSTAT


S28-S29-S31-S33-S35

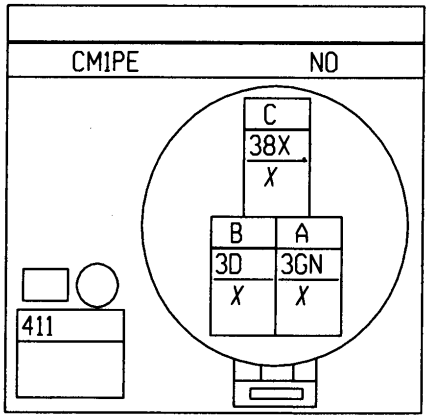

N°	mm²		... ⟶ ...
A	.6	3GN	MANIFOLD PRESSURE SENSOR EARTH
B	.6	3D	-SENSOR ASSEMBLY 4
C	.6	38X	FREON PRESSURE SENSOR SIGNAL

AIR CONDITIONING PRESSOSTAT


S28-S29-S31-S33-S35

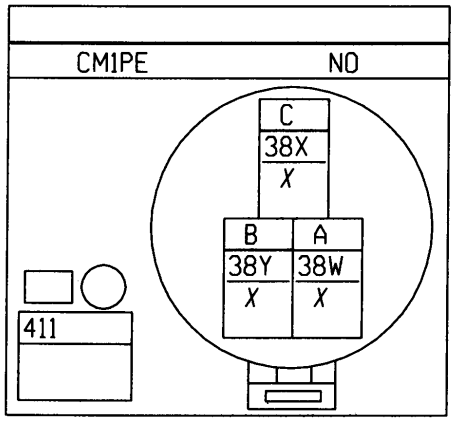

N°	mm²		... → ...
A	.6	38W	- FREON PRESSURE SENSOR (AC)
B	.6	38Y	+FREON PRESSURE SENSOR
C	.6	38X	FREON PRESSURE SENSOR SIGNAL

DERV RESISTANCE REHEATER


S32

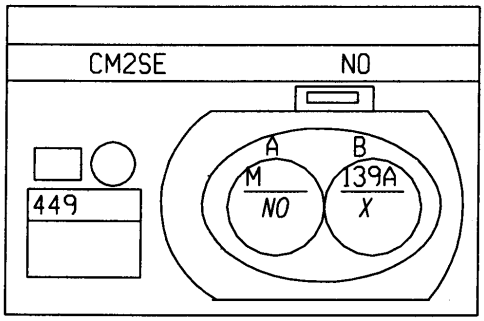

N°	mm²		... → ...
A	1.4	M	EARTH
B	1.4	139A	+ DIESEL FUEL FILTER HEATER CONTROL

AIR CONDITIONING PRESSOSTAT


K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M S28-S29-S31-S33-S35

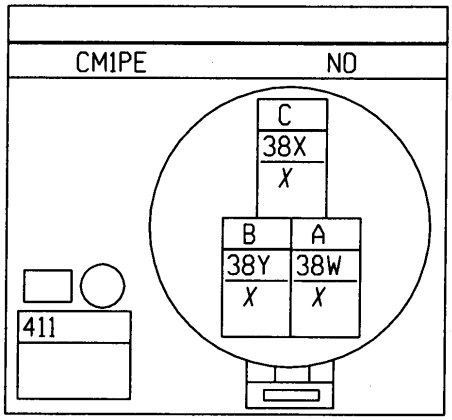

N°	mm²		... → ...
.6	38W		- FREON PRESSURE SENSOR (AC)
.6	38Y		+FREON PRESSURE SENSOR
.6	38X		FREON PRESSURE SENSOR SIGNAL

DERV RESISTANCE REHEATER


S32

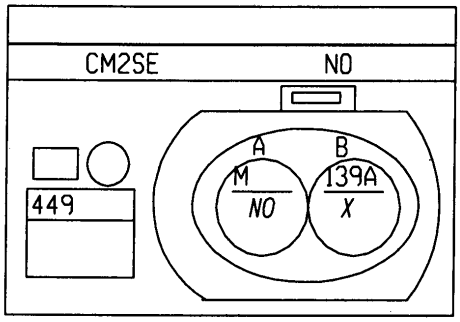

N°	mm²		... → ...
A	1.4	M	EARTH
B	1.4	139A	+ DIESEL FUEL FILTER HEATER CONTROL

DERV RESISTANCE REHEATER

S32

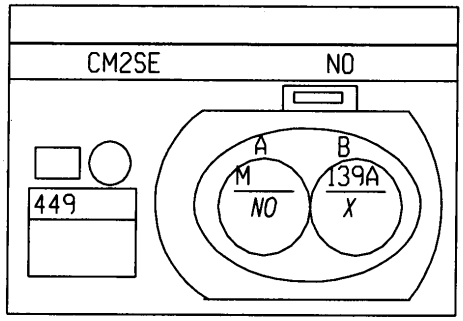


N°	mm²		... → ...
A	1.4	M	EARTH
B	1.4	139A	+ DIESEL FUEL FILTER HEATER CONTROL

MOTOR AND RELAY FUSE BOX

S27-S28-S29-S31-S32-S33-S35

MP+CF NO

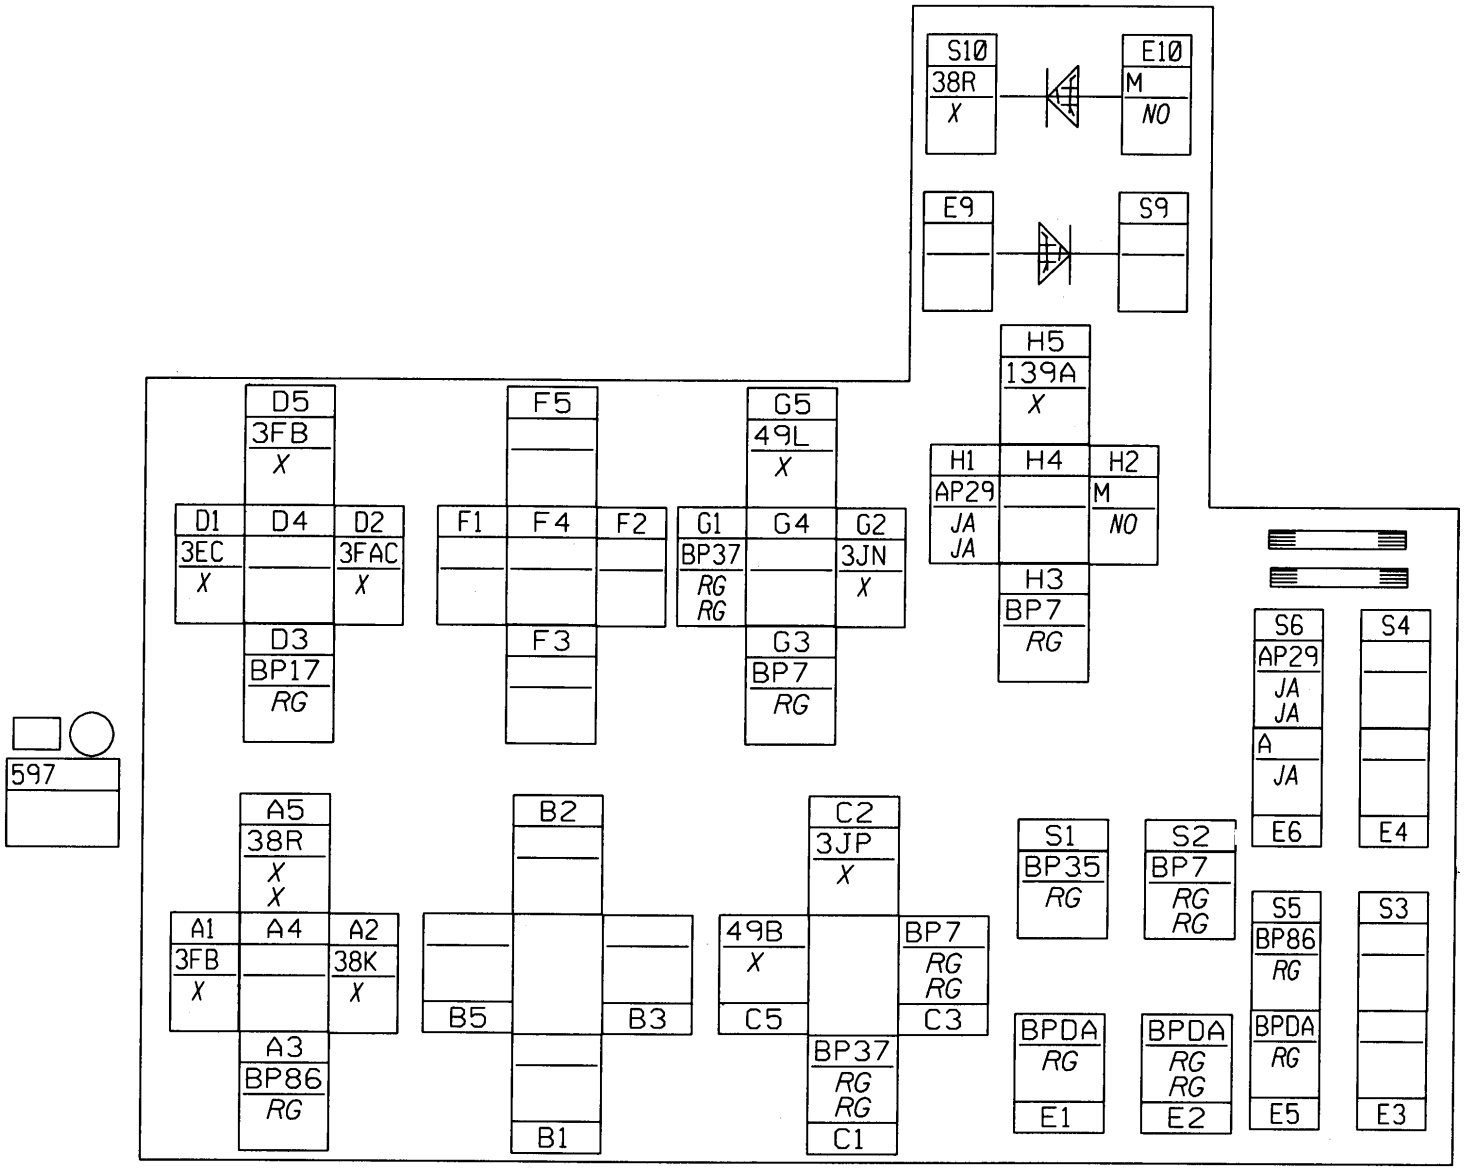


N°	mm²		... → ...
	.6	3FB	+ INJECTION > PROTECTION RELAY
	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
	.6	3EC	MAIN CONTROL RELAY > COMPUTER
	7	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
	7	BP35	PROTECTED BATTERY FUSE PREHEATER UNIT
	.6	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
	.6	3JP	FAN 2 CONTROL RELAY
	.6	3FAC	INJECTION COMPUTER SUPPLY CONTROL RELAY
	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	3	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	.6	3JN	FAN CONTROL RELAY 1
	.6	M	EARTH
	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
	1.4	BP7	PROTECTED BATTERY > FUSE 1 FAN
	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
	5	BP17	PROTECTED BATTERY > INJECTION PREHEATER
	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
	1.4	BP7	PROTECTED BATTERY > FUSE 1 FAN
	1	38R	AIR CONDITIONING CLUTCH + CONTROL
	1	38R	AIR CONDITIONING CLUTCH + CONTROL
	3	49B	+ FAN CONTROL
	2	3FB	+ INJECTION > PROTECTION RELAY
	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	3	49L	LOW SPEED FAN + CONTROL RESISTANCE
	1.4	139A	+ DIESEL FUEL FILTER HEATER CONTROL
	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
	2	A	+ AFTER IGNITION
	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
0	1	M	EARTH
0	1	38R	AIR CONDITIONING CLUTCH + CONTROL

MOTOR AND RELAY FUSE BOX

S27-S28-S29-S31-S32-S33-S35


MP+CF NO

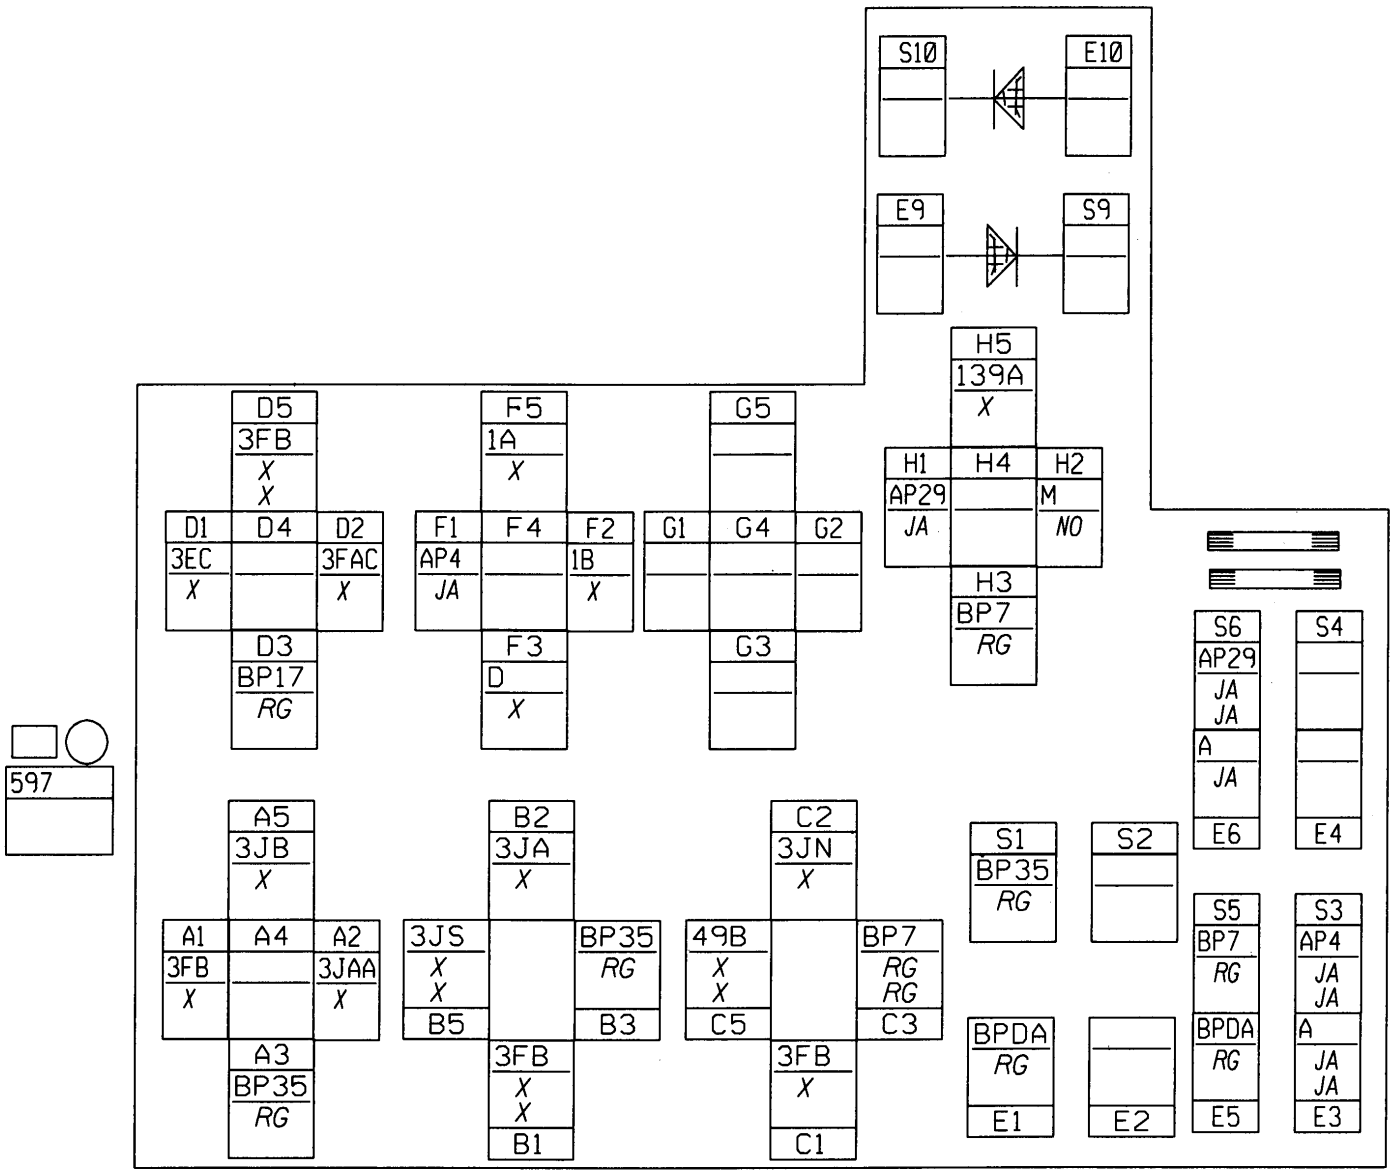

N°	mm²		... ⟶ ...
A1	.6	3FB	+ INJECTION > PROTECTION RELAY
B1	.6	3FB	+ INJECTION > PROTECTION RELAY
B1	.6	3FB	+ INJECTION > PROTECTION RELAY
C1	.6	3FB	+ INJECTION > PROTECTION RELAY
D1	.6	3EC	MAIN CONTROL RELAY > COMPUTER
E1	7	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
F1	.6	AP4	+ AFTER IGNITION AUTOMATIC TRANSMISSION PROTECTED FUSE
H1	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
S1	7	BP35	PROTECTED BATTERY FUSE PREHEATER UNIT
A2	.6	3JAA	ADDITIONAL HEATING 2 RELAY COIL CONTROL
B2	.6	3JA	ADDITIONAL HEATING 1 RELAY COIL CONTROL
C2	.6	3JN	FAN CONTROL RELAY 1
D2	.6	3FAC	INJECTION COMPUTER SUPPLY CONTROL RELAY
F2	.6	1B	- STARTING RELAY COIL CONTROL
H2	.6	M	EARTH
A3	3	BP35	PROTECTED BATTERY FUSE PREHEATER UNIT
B3	4	BP35	PROTECTED BATTERY FUSE PREHEATER UNIT
C3	1.4	BP7	PROTECTED BATTERY > FUSE 1 FAN
C3	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
D3	5	BP17	PROTECTED BATTERY > INJECTION PREHEATER
E3	1.4	A	+ AFTER IGNITION
E3	2	A	+ AFTER IGNITION
F3	3	D	+ STARTING
H3	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
S3	.6	AP4	+ AFTER IGNITION AUTOMATIC TRANSMISSION PROTECTED FUSE
S3	2	AP4	+ AFTER IGNITION AUTOMATIC TRANSMISSION PROTECTED FUSE
A5	3	3JB	ADDITIONAL HEATER PLUG 1 + CONTROL
B5	3	3JS	ADDITIONAL PLUG > ADDITIONAL HEATING RELAY SUPPLY
B5	3	3JS	ADDITIONAL PLUG > ADDITIONAL HEATING RELAY SUPPLY
C5	1.4	49B	+ FAN CONTROL
C5	2	49B	+ FAN CONTROL
D5	.6	3FB	+ INJECTION > PROTECTION RELAY
D5	4	3FB	+ INJECTION > PROTECTION RELAY
E5	1.4	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
F5	3	1A	+ STARTING SOLENOID > RELAY CONTROL
H5	1.4	139A	+ DIESEL FUEL FILTER HEATER CONTROL
S5	1.4	BP7	PROTECTED BATTERY > FUSE 1 FAN
E6	1.4	A	+ AFTER IGNITION
S6	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
S6	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION

MOTOR AND RELAY FUSE BOX
K4M712 EQGPL K4M706 CA
S27-S28-S29-S31-S32-S33-S35

MP+CF NO

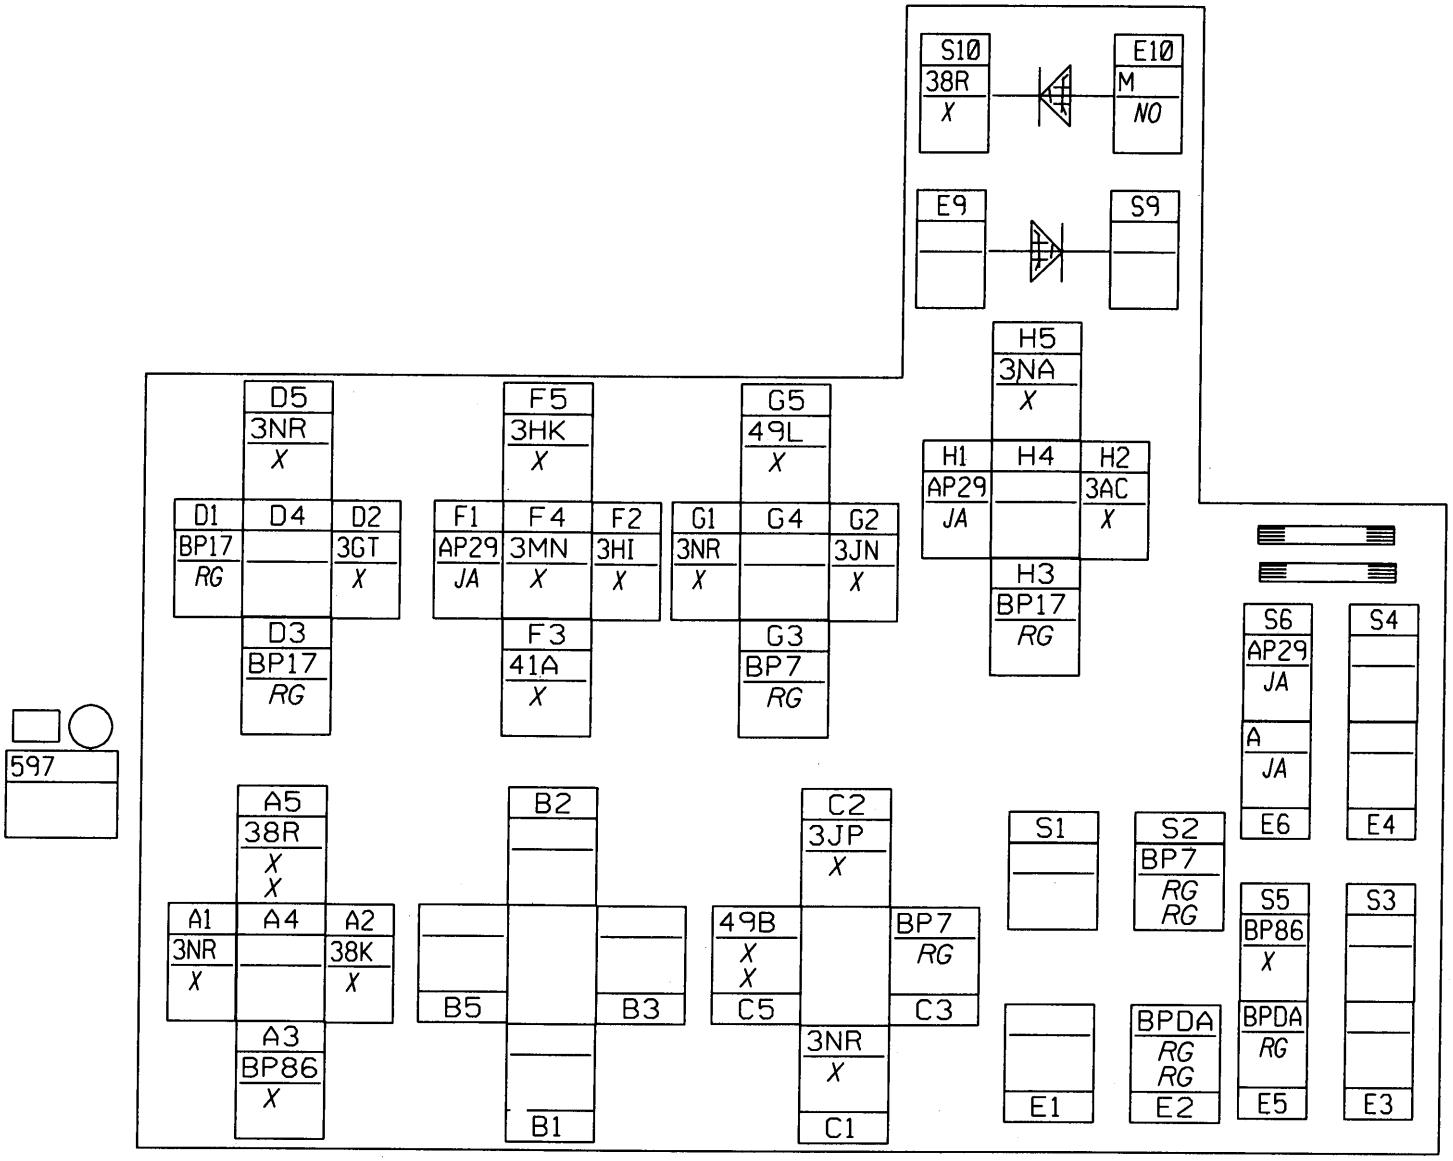


N°	mm²		... → ...
	1	3NR	+ INJECTOR >
	1	3NR	+ INJECTOR >
	1	BP17	PROTECTED BATTERY > INJECTION PREHEATER
	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
	1	3NR	+ INJECTOR >
	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
	.6	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
	.6	3JP	FAN 2 CONTROL RELAY
	1	3GT	POWER LATCH ACTUATOR RELAY CONTROL
	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	3	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	.6	3HI	- FUEL PRESSURE REGULATION SOLENOID VALVE CONTROL
	.6	3JN	FAN CONTROL RELAY 1
	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
	.6	41A	SIGNAL+ FUEL LEVEL GAUGE
	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
	.6	3MN	MOTORISED THROTTLE POTENTIOMETER +5V
	1	38R	AIR CONDITIONING CLUTCH + CONTROL
	1	38R	AIR CONDITIONING CLUTCH + CONTROL
	3	49B	+ FAN CONTROL
	3	49B	+ FAN CONTROL
	3	3NR	+ INJECTOR >
	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	.6	3HK	- SOLENOID VALVE CONTROLS TURBOCHARGER BYPASS CONTROL
	3	49L	LOW SPEED FAN + CONTROL RESISTANCE
	3	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY
	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
	2	A	+ AFTER IGNITION
	2	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
0	1	M	EARTH
0	1	38R	AIR CONDITIONING CLUTCH + CONTROL

MOTOR AND RELAY FUSE BOX

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL

S27-S28-S29-S31-S32-S33-S35


MP+CF NO

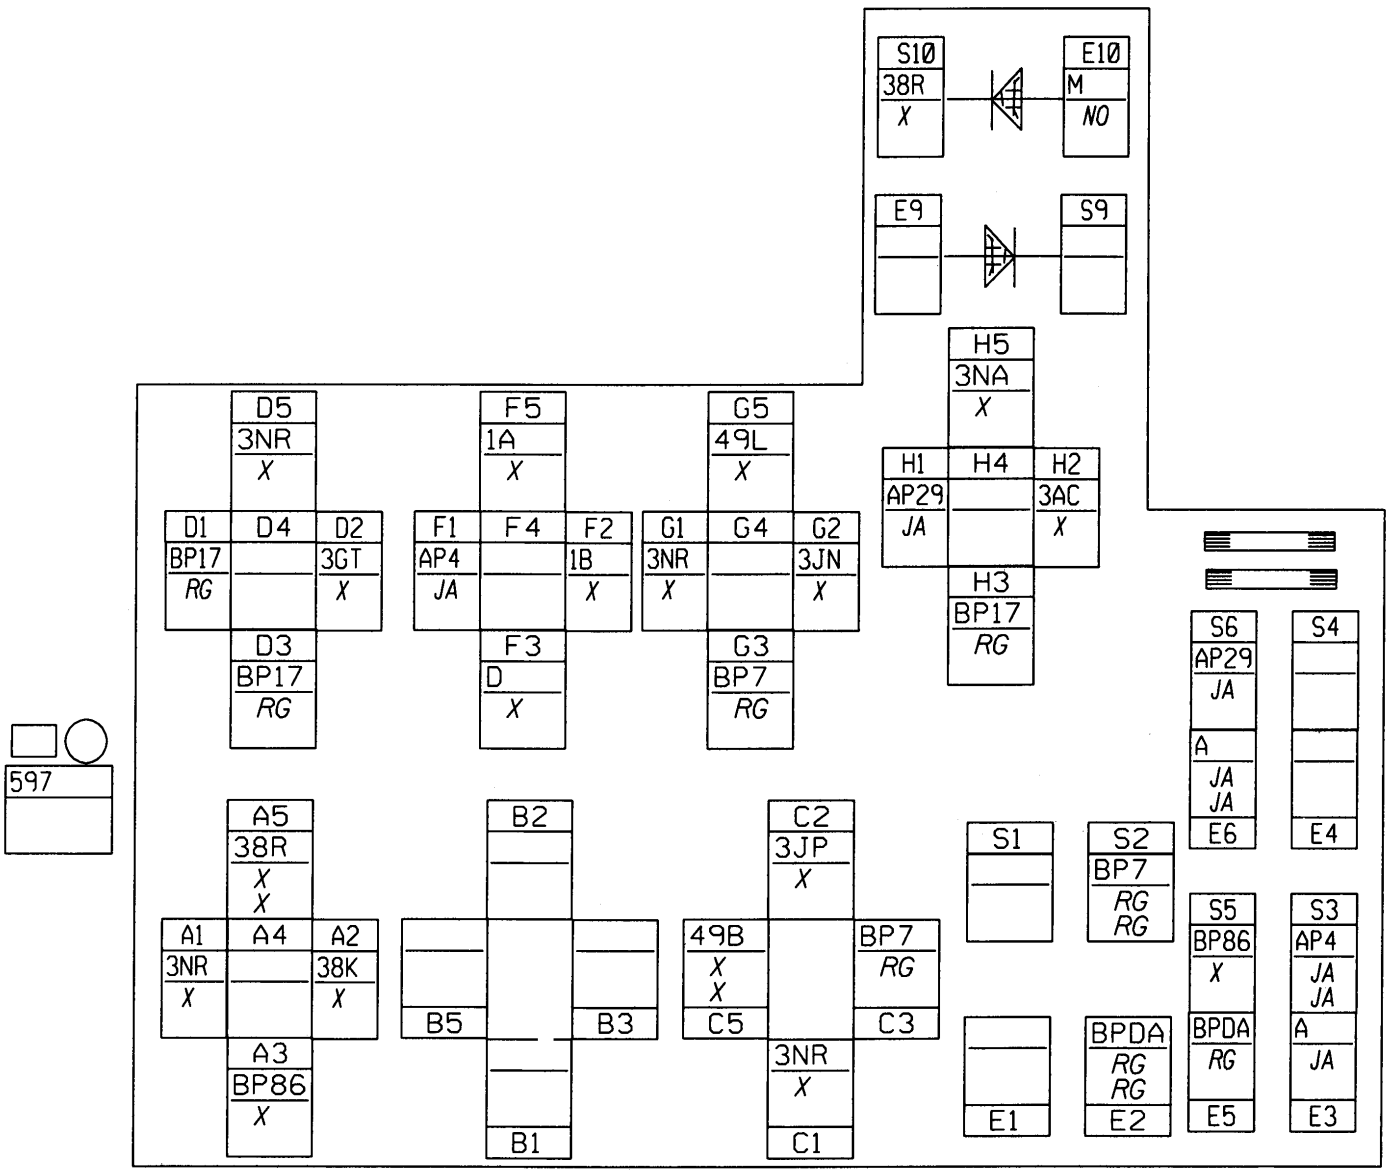

N°	mm²		... ⟶ ...
A1	1	3NR	+ INJECTOR >
C1	1	3NR	+ INJECTOR >
D1	1	BP17	PROTECTED BATTERY > INJECTION PREHEATER
G1	1	3NR	+ INJECTOR >
H1	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
A2	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
C2	.6	3JP	FAN 2 CONTROL RELAY
D2	1	3GT	POWER LATCH ACTUATOR RELAY CONTROL
E2	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
E2	3	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
G2	.6	3JN	FAN CONTROL RELAY 1
H2	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
S2	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
S2	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
A3	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
C3	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
D3	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
G3	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
H3	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
A5	1	38R	AIR CONDITIONING CLUTCH + CONTROL
A5	1	38R	AIR CONDITIONING CLUTCH + CONTROL
C5	3	49B	+ FAN CONTROL
C5	3	49B	+ FAN CONTROL
D5	3	3NR	+ INJECTOR >
E5	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
G5	3	49L	LOW SPEED FAN + CONTROL RESISTANCE
H5	3	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY
S5	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
E6	2	A	+ AFTER IGNITION
E6	2	A	+ AFTER IGNITION
S6	2	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
E10	1	M	EARTH
S10	1	38R	AIR CONDITIONING CLUTCH + CONTROL
F1	.6	AP4	+ AFTER IGNITION AUTOMATIC TRANSMISSION PROTECTED FUSE
F2	.6	1B	- STARTING RELAY COIL CONTROL
E3	2	A	+ AFTER IGNITION
F3	3	D	+ STARTING
S3	.6	AP4	+ AFTER IGNITION AUTOMATIC TRANSMISSION PROTECTED FUSE
S3	2	AP4	+ AFTER IGNITION AUTOMATIC TRANSMISSION PROTECTED FUSE
F5	3	1A	+ STARTING SOLENOID > RELAY CONTROL


MOTOR AND RELAY FUSE BOX
K4M706 CHAUFO
S27-S28-S29-S31-S32-S33-S35

MP+CF NO

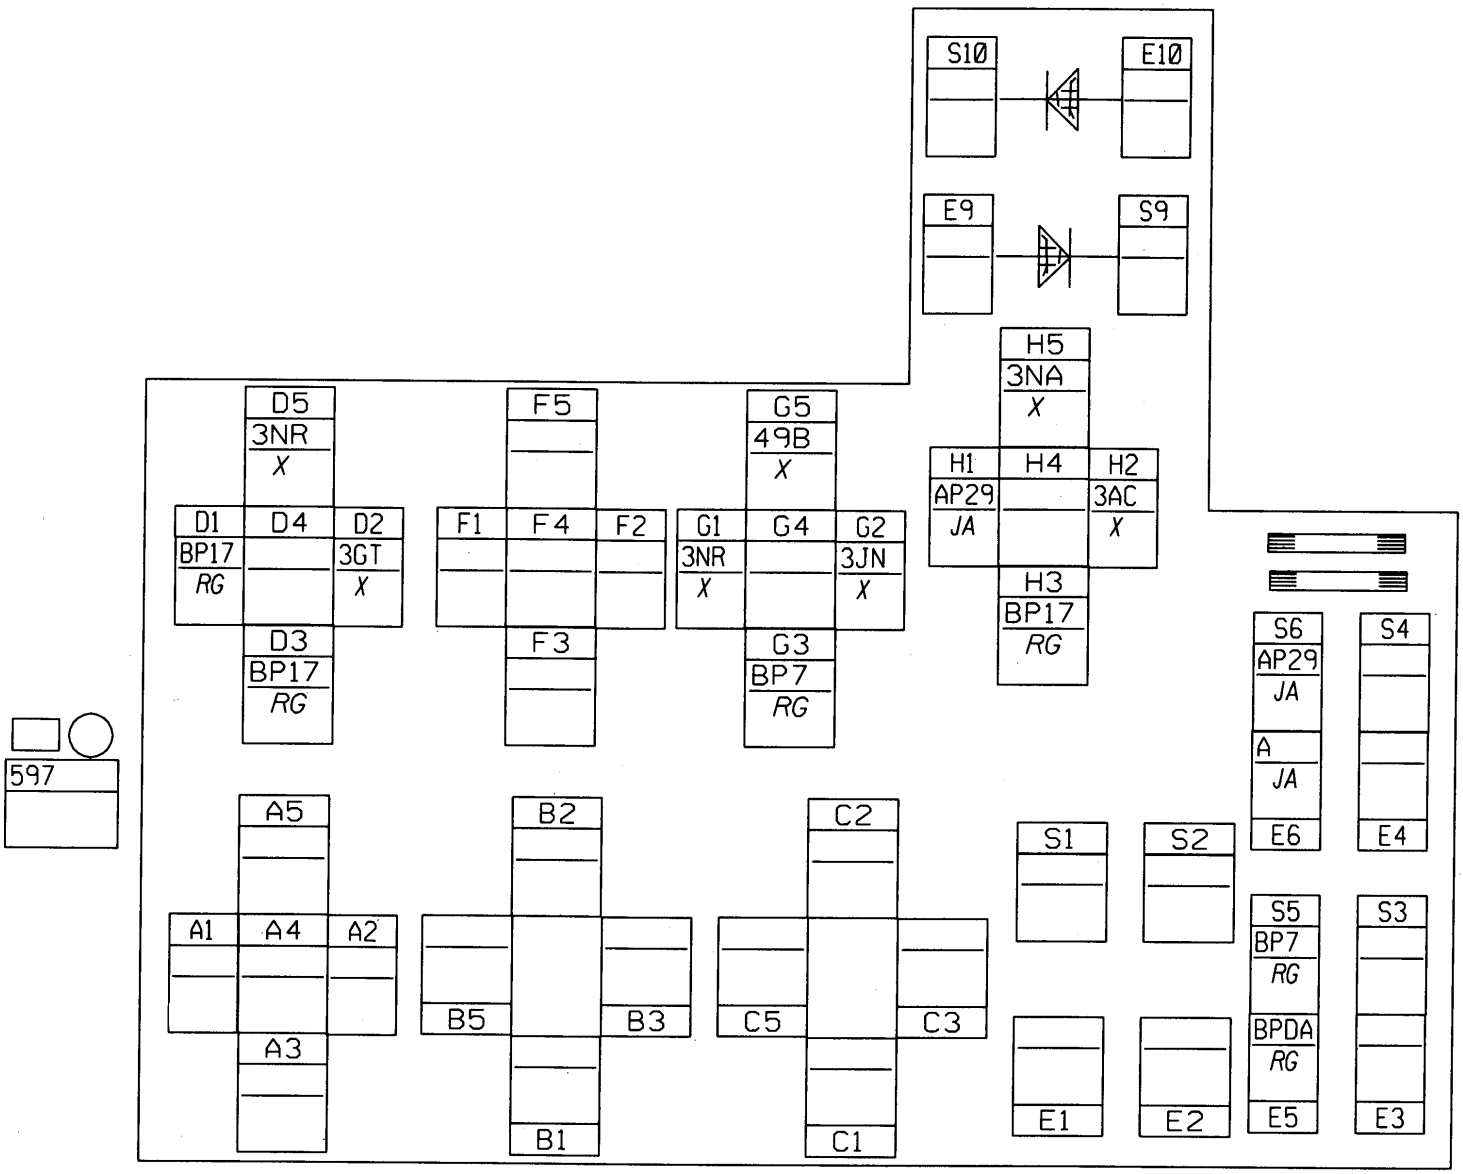

N°	mm²		... → ...
	1	BP17	PROTECTED BATTERY > INJECTION PREHEATER
	1	3NR	+ INJECTOR >
	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
	1	3GT	POWER LATCH ACTUATOR RELAY CONTROL
	.6	3JN	FAN CONTROL RELAY 1
	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
	1	BP7	PROTECTED BATTERY > FUSE 1 FAN
	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
	3	3NR	+ INJECTOR >
	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	1	49B	+ FAN CONTROL
	3	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY
	1	BP7	PROTECTED BATTERY > FUSE 1 FAN
	2	A	+ AFTER IGNITION
	2	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION

MOTOR AND RELAY FUSE BOX
K4M712 EQGPL
S27-S28-S29-S31-S32-S33-S35

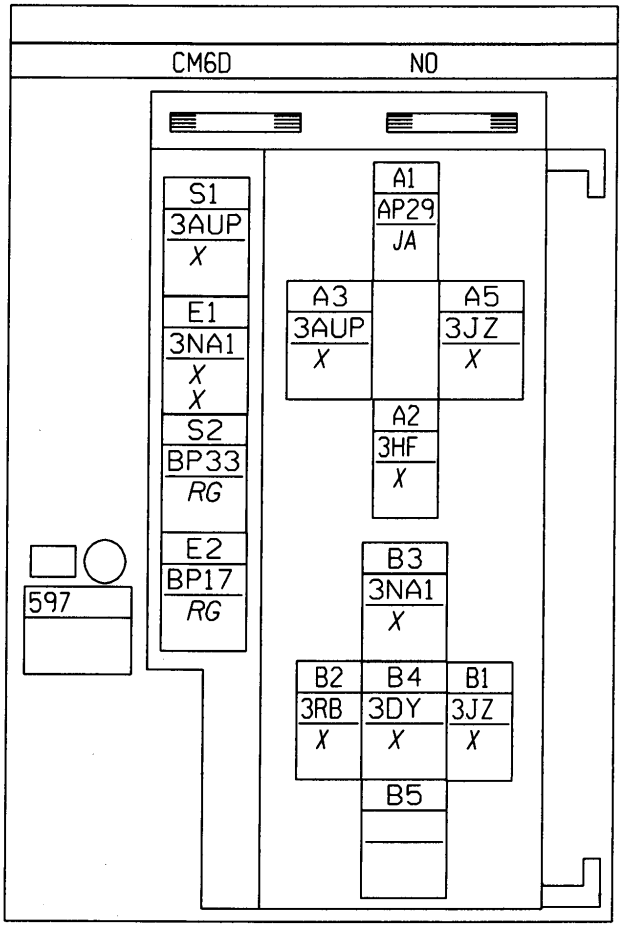


N°	mm²		... ⟶ ...
A1	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
B1	.6	3JZ	+ LIQUEFIED PETROLEUM GAS INJECTOR CONTROL
E1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
E1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
S1	3	3AUP	+ PROTECTED FUEL PUMP FEED > FUEL PUMP FUSE
A2	.6	3HF	- CENTRAL LPG UNIT SOLENOID VALVE CONTROL RELAY
B2	.6	3RB	LIQUEFIED PETROLEUM GAS ACTUATOR CONTROL RELAY
E2	1	BP17	PROTECTED BATTERY > INJECTION PREHEATER
S2	1	BP33	PROTECTED BATTERY FUSE LPG
A3	3	3AUP	+ PROTECTED FUEL PUMP FEED > FUEL PUMP FUSE
B3	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
B4	1.4	3DY	FUEL PUMP SUPPLY > FUEL PUMP RELAY
A5	3	3JZ	+ LIQUEFIED PETROLEUM GAS INJECTOR CONTROL

MOTOR AND RELAY FUSE BOX


S27-S28-S29-S31-S32-S33-S35

MP+CF NO

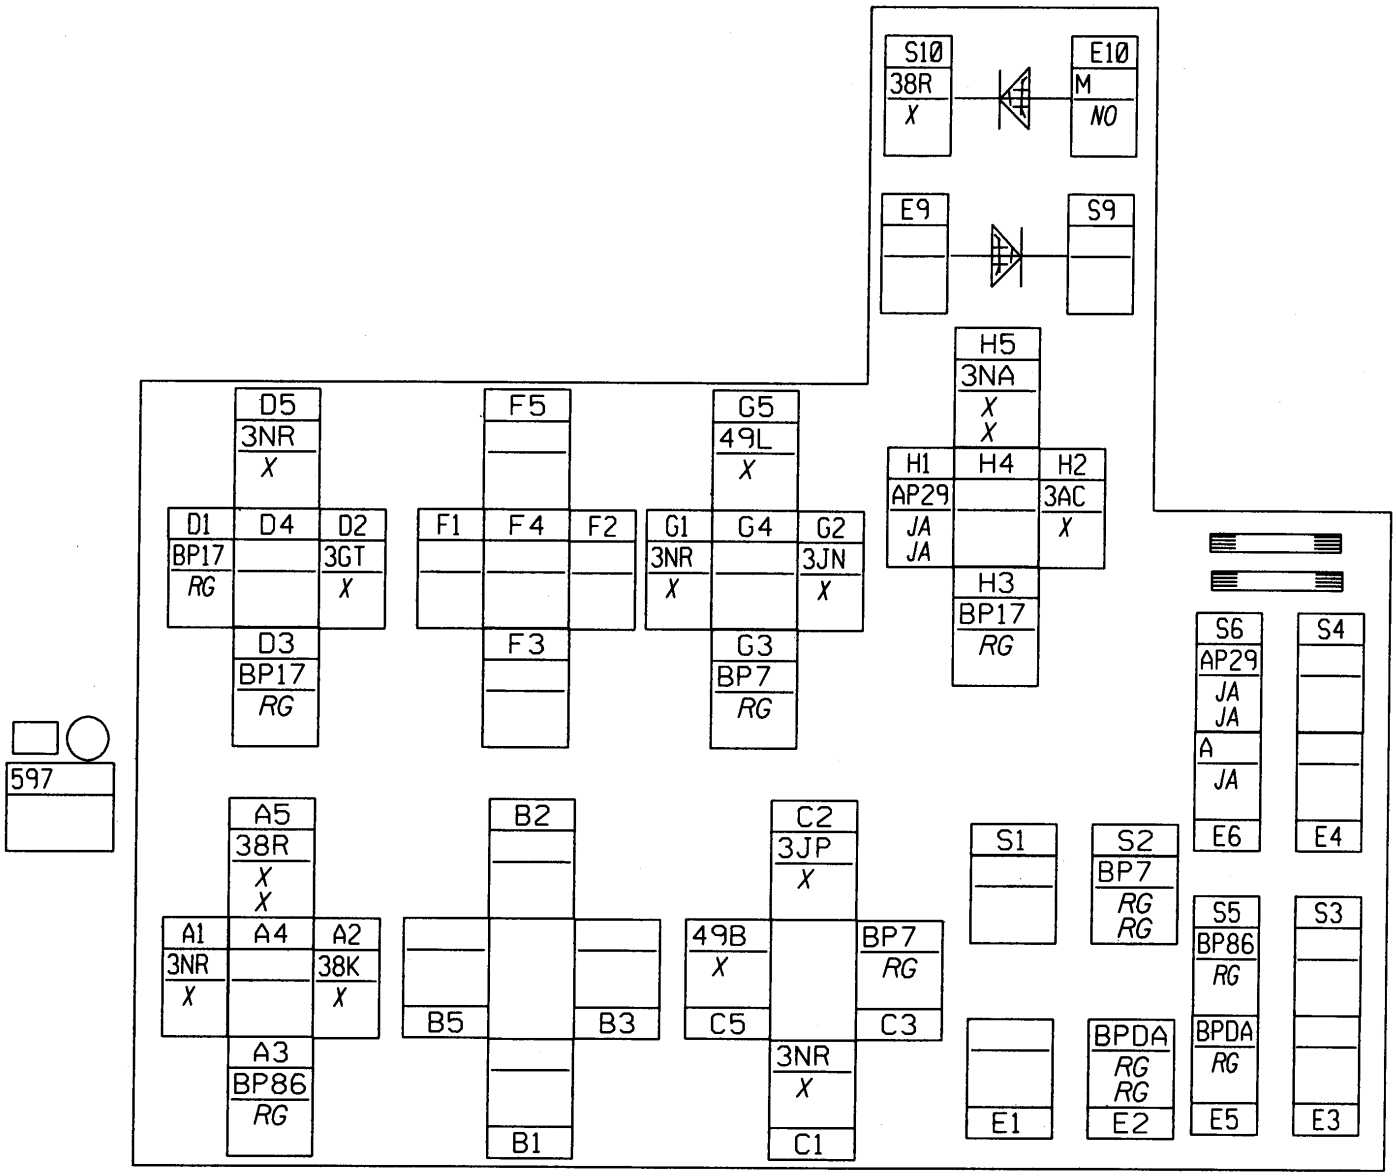

N°	mm²		... → ...
A1	1	3NR	+ INJECTOR >
C1	1	3NR	+ INJECTOR >
D1	1	BP17	PROTECTED BATTERY > INJECTION PREHEATER
G1	1	3NR	+ INJECTOR >
H1	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
H1	2	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
A2	.6	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
C2	.6	3JP	FAN 2 CONTROL RELAY
D2	.6	3GT	POWER LATCH ACTUATOR RELAY CONTROL
E2	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
E2	5	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
G2	.6	3JN	FAN CONTROL RELAY 1
H2	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
S2	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
S2	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
A3	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
C3	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
D3	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
G3	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
H3	5	BP17	PROTECTED BATTERY > INJECTION PREHEATER
A5	1	38R	AIR CONDITIONING CLUTCH + CONTROL
A5	1	38R	AIR CONDITIONING CLUTCH + CONTROL
C5	3	49B	+ FAN CONTROL
D5	3	3NR	+ INJECTOR >
E5	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
G5	3	49L	LOW SPEED FAN + CONTROL RESISTANCE
H5	1.4	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY
H5	2	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY
S5	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
E6	2	A	+ AFTER IGNITION
S6	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
S6	2	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
E10	1	M	EARTH
S10	1	38R	AIR CONDITIONING CLUTCH + CONTROL


MOTOR AND RELAY FUSE BOX
BVA4
S27-S28-S29-S31-S32-S33-S35

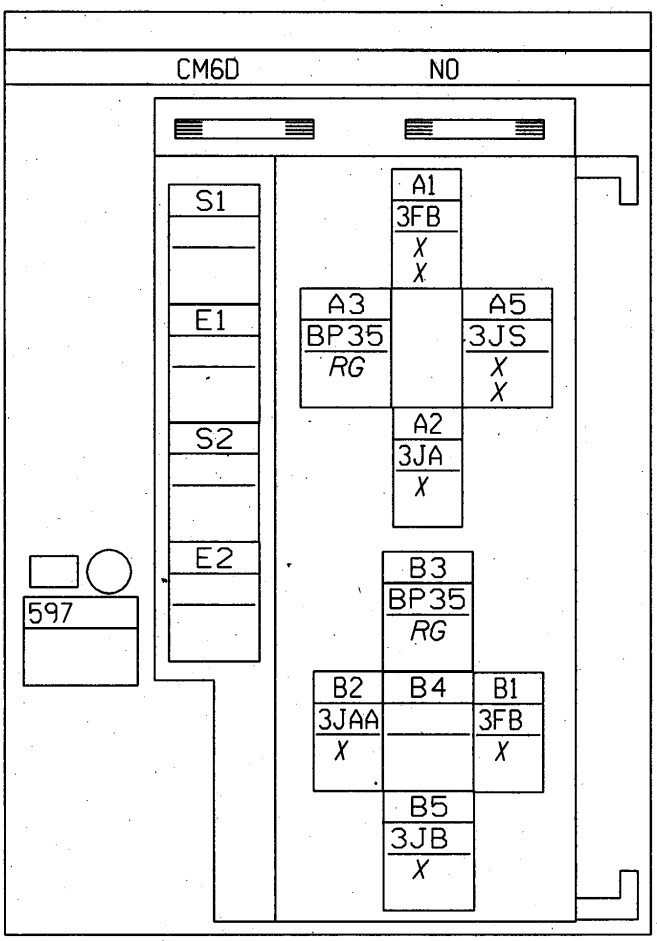

N°	mm²		... → ...
1	.6	3FB	+ INJECTION > PROTECTION RELAY
1	.6	3FB	+ INJECTION > PROTECTION RELAY
1	.6	3FB	+ INJECTION > PROTECTION RELAY
2	.6	3JA	ADDITIONAL HEATING 1 RELAY COIL CONTROL
2	.6	3JAA	ADDITIONAL HEATING 2 RELAY COIL CONTROL
3	4	BP35	PROTECTED BATTERY FUSE PREHEATER UNIT
3	3	BP35	PROTECTED BATTERY FUSE PREHEATER UNIT
5	3	3JS	ADDITIONAL PLUG > ADDITIONAL HEATING RELAY SUPPLY
5	3	3JS	ADDITIONAL PLUG > ADDITIONAL HEATING RELAY SUPPLY
5	3	3JB	ADDITIONAL HEATER PLUG 1 + CONTROL

MOTOR AND RELAY FUSE BOX
BVM5 BVA4
S27-S28-S29-S31-S32-S33-S35

MP+CF NO

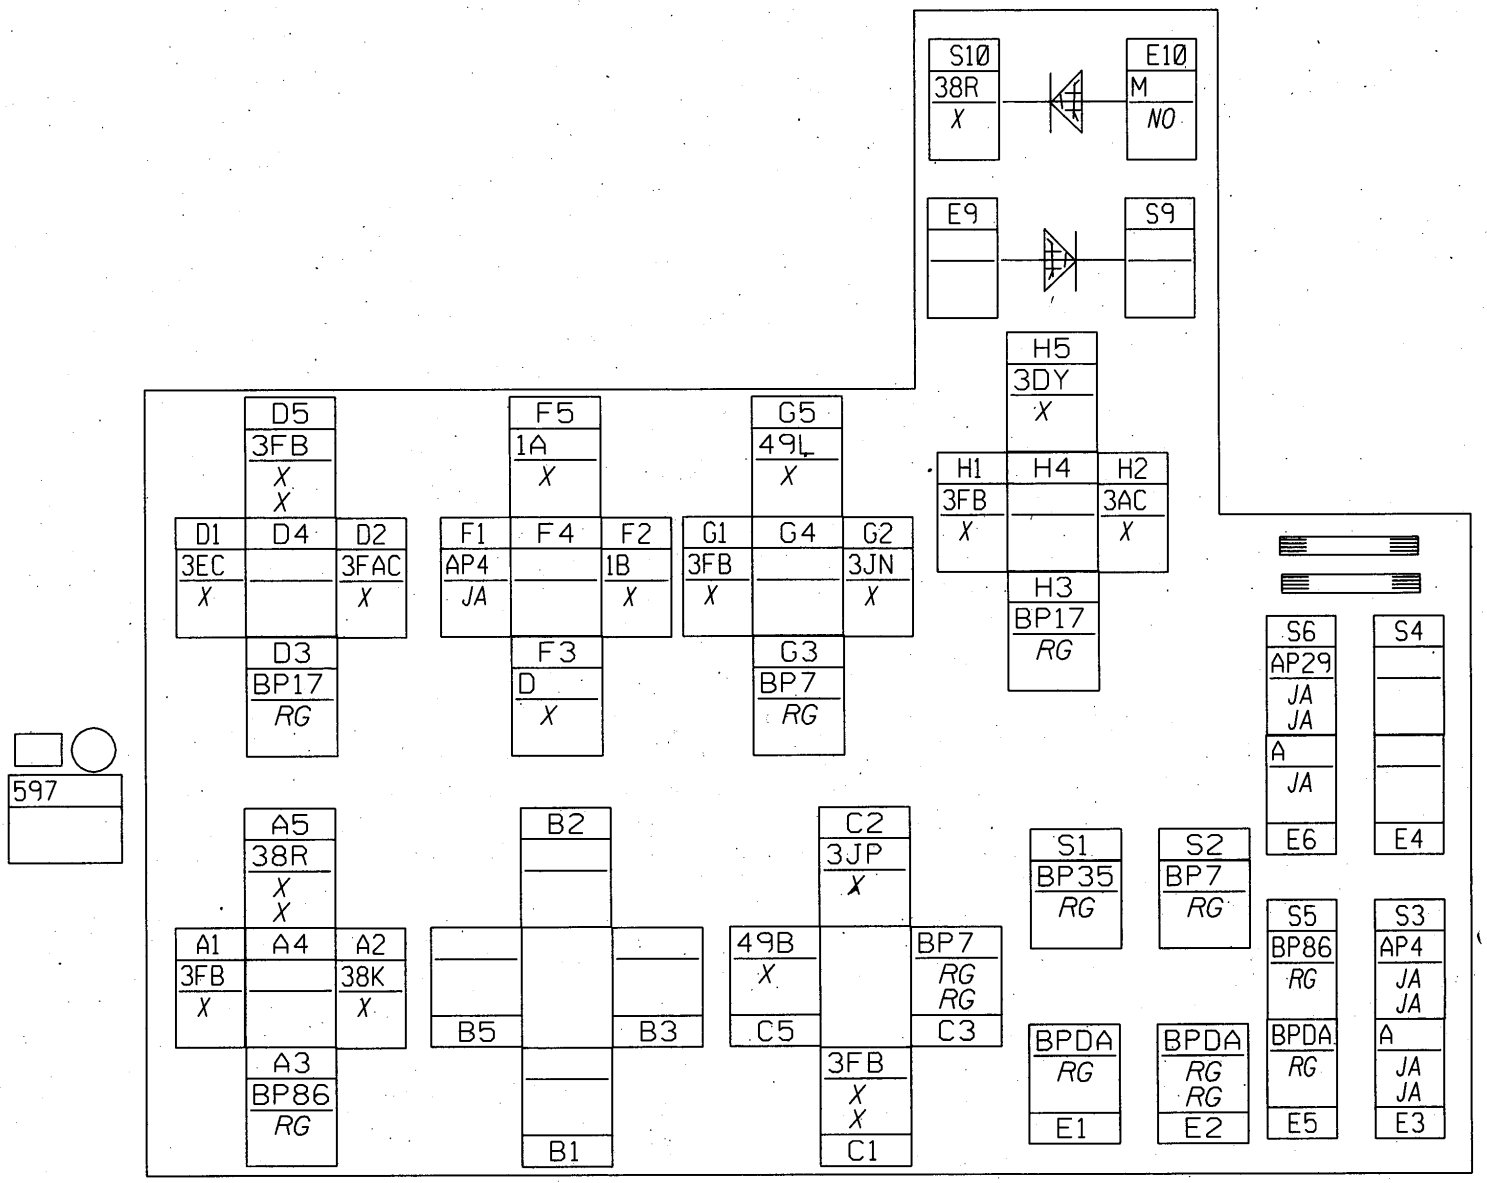


N°	mm²		... → ...
.1	.6	3FB	+ INJECTION > PROTECTION RELAY
1	.6	3FB	+ INJECTION > PROTECTION RELAY
1	.6	3FB	+ INJECTION > PROTECTION RELAY
1	.6	3EC	MAIN CONTROL RELAY > COMPUTER
1	7	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
1	.6	3FB	+ INJECTION > PROTECTION RELAY
11	.6	3FB	+ INJECTION > PROTECTION RELAY
1	7	BP35	PROTECTED BATTERY FUSE PREHEATER UNIT
.2	.6	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
2	.6	3JP	FAN 2 CONTROL RELAY
2	.6	3FAC	INJECTION COMPUTER SUPPLY CONTROL RELAY
2	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
2	7	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
2	.6	3JN	FAN CONTROL RELAY 1
2	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
2	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
.3	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
3	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
3	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
3	5	BP17	PROTECTED BATTERY > INJECTION PREHEATER
3	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
3	5	BP17	PROTECTED BATTERY > INJECTION PREHEATER
.5	1	38R	AIR CONDITIONING CLUTCH + CONTROL
.5	1	38R	AIR CONDITIONING CLUTCH + CONTROL
5	3	49B	+ FAN CONTROL
5	.6	3FB	+ INJECTION > PROTECTION RELAY
5	4	3FB	+ INJECTION > PROTECTION RELAY
5	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
5	3	49L	LOW SPEED FAN + CONTROL RESISTANCE
5	3	3DY	FUEL PUMP SUPPLY > FUEL PUMP RELAY
5	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
6	2	A	+ AFTER IGNITION
6	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
6	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
10	1	M	EARTH
10	1	38R	AIR CONDITIONING CLUTCH + CONTROL
1	.6	AP4	+ AFTER IGNITION AUTOMATIC TRANSMISSION PROTECTED FUSE
2	.6	1B	- STARTING RELAY COIL CONTROL
3	2	A	+ AFTER IGNITION
3	2	A	+ AFTER IGNITION
3	3	D	+ STARTING
3	.6	AP4	+ AFTER IGNITION AUTOMATIC TRANSMISSION PROTECTED FUSE
3	2	AP4	+ AFTER IGNITION AUTOMATIC TRANSMISSION PROTECTED FUSE
5	3	1A	+ STARTING SOLENOID > RELAY CONTROL

MOTOR AND RELAY FUSE BOX

S27-S28-S29-S31-S32-S33-S35

MP+CF NO

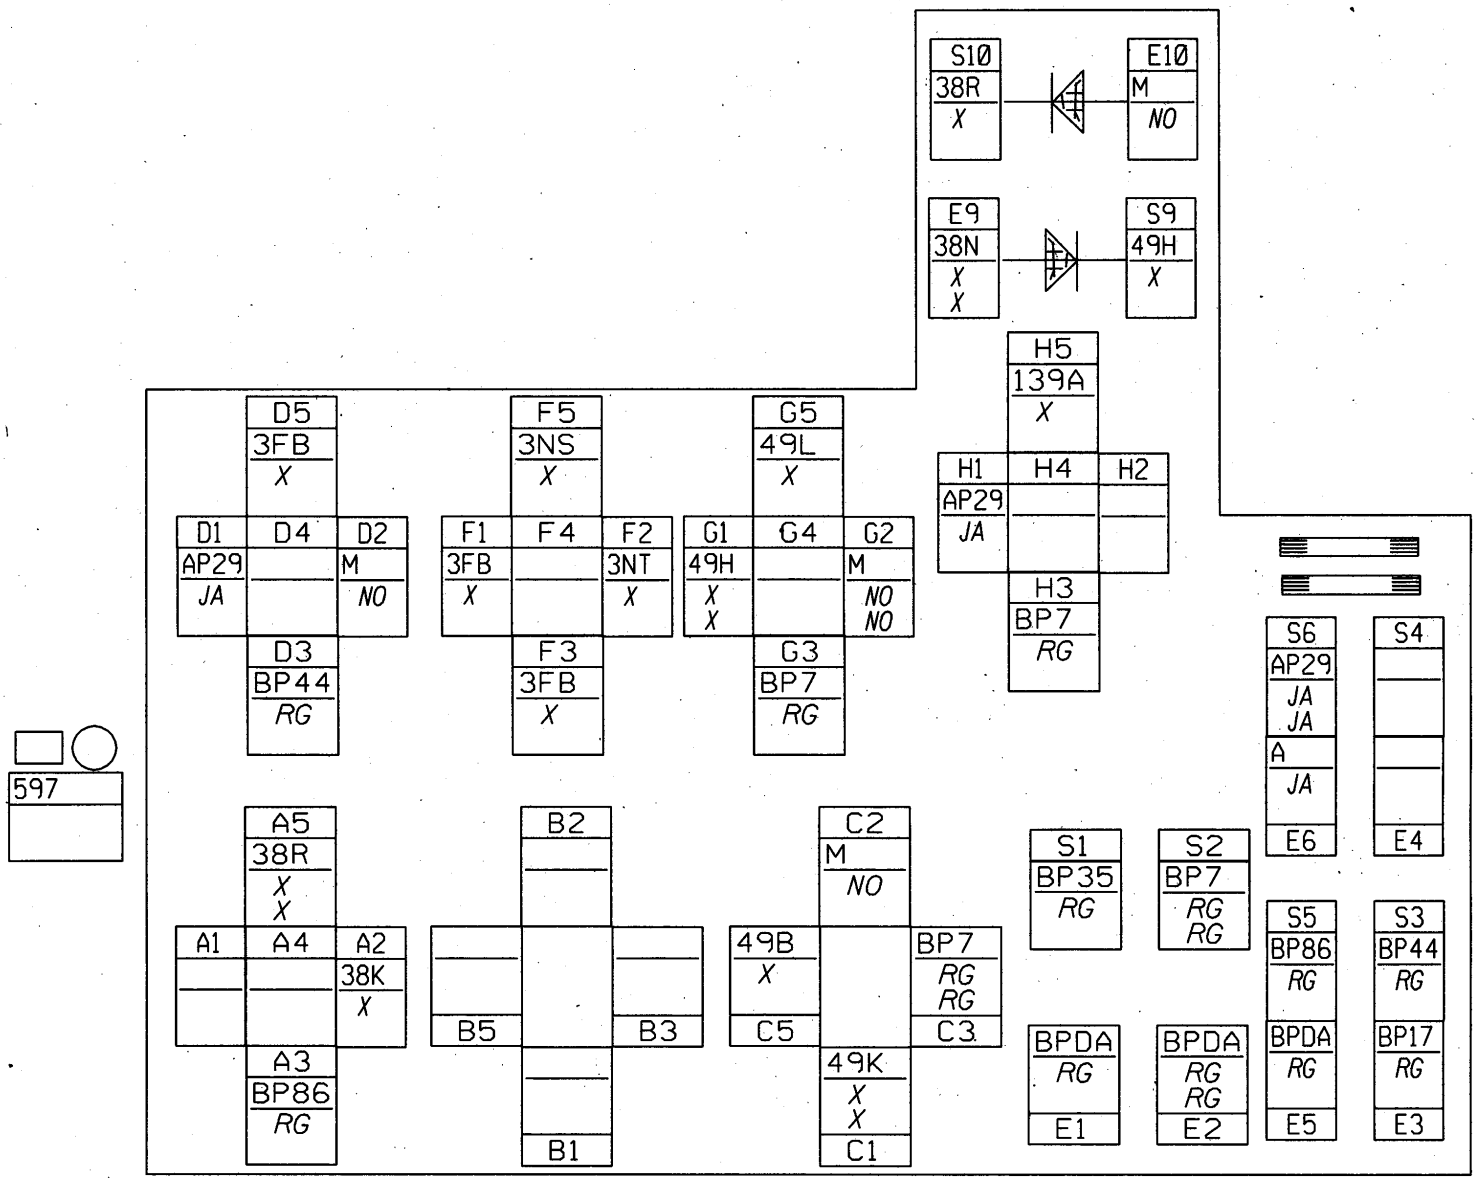


N°	mm²		... → ...
	.35	49K	- HIGH SPEED FAN UNIT CONTROL
	.35	49K	- HIGH SPEED FAN UNIT CONTROL
	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
	7	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	.6	3FB	+ INJECTION > PROTECTION RELAY
	.35	49H	+ LOW SPEED FAN ASSEMBLY RELAY CONTROL
	.35	49H	+ LOW SPEED FAN ASSEMBLY RELAY CONTROL
	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
	7	BP35	PROTECTED BATTERY FUSE PREHEATER UNIT
	.6	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
	.6	M	EARTH
	.6	M	EARTH
	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	5	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	.6	3NT	ALTIMETRIC CORRECTION RELAY CONTROL
	.6	M	EARTH
	.6	M	EARTH
	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
	5	BP7	PROTECTED BATTERY > FUSE 1 FAN
	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
	1.4	BP7	PROTECTED BATTERY > FUSE 1 FAN
	5	BP7	PROTECTED BATTERY > FUSE 1 FAN
	3	BP44	PROTECTED BATTERY > INJECTOR POWER
	5	BP17	PROTECTED BATTERY > INJECTION PREHEATER
	.6	3FB	+ INJECTION > PROTECTION RELAY
	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
	1.4	BP7	PROTECTED BATTERY > FUSE 1 FAN
	3	BP44	PROTECTED BATTERY > INJECTOR POWER
	1	38R	AIR CONDITIONING CLUTCH + CONTROL
	1	38R	AIR CONDITIONING CLUTCH + CONTROL
	5	49B	+ FAN CONTROL
	2	3FB	+ INJECTION > PROTECTION RELAY
	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	.6	3NS	DIESEL PUMP > ALTIMETRIC RELAY INFO
	3	49L	LOW SPEED FAN + CONTROL RESISTANCE
	1.4	139A	+ DIESEL FUEL FILTER HEATER CONTROL
	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
	2	A	+ AFTER IGNITION
	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
	1	38N	+ AIR CONDITIONING CLUTCH RELAY > FUNCTION SENSOR 3 CONTROL
	1	38N	+ AIR CONDITIONING CLUTCH RELAY > FUNCTION SENSOR 3 CONTROL
	.35	49H	+ LOW SPEED FAN ASSEMBLY RELAY CONTROL
0	1	M	EARTH
0	1	38R	AIR CONDITIONING CLUTCH + CONTROL

MOTOR AND RELAY FUSE BOX

S27-S28-S29-S31-S32-S33-S35


MP+CF NO

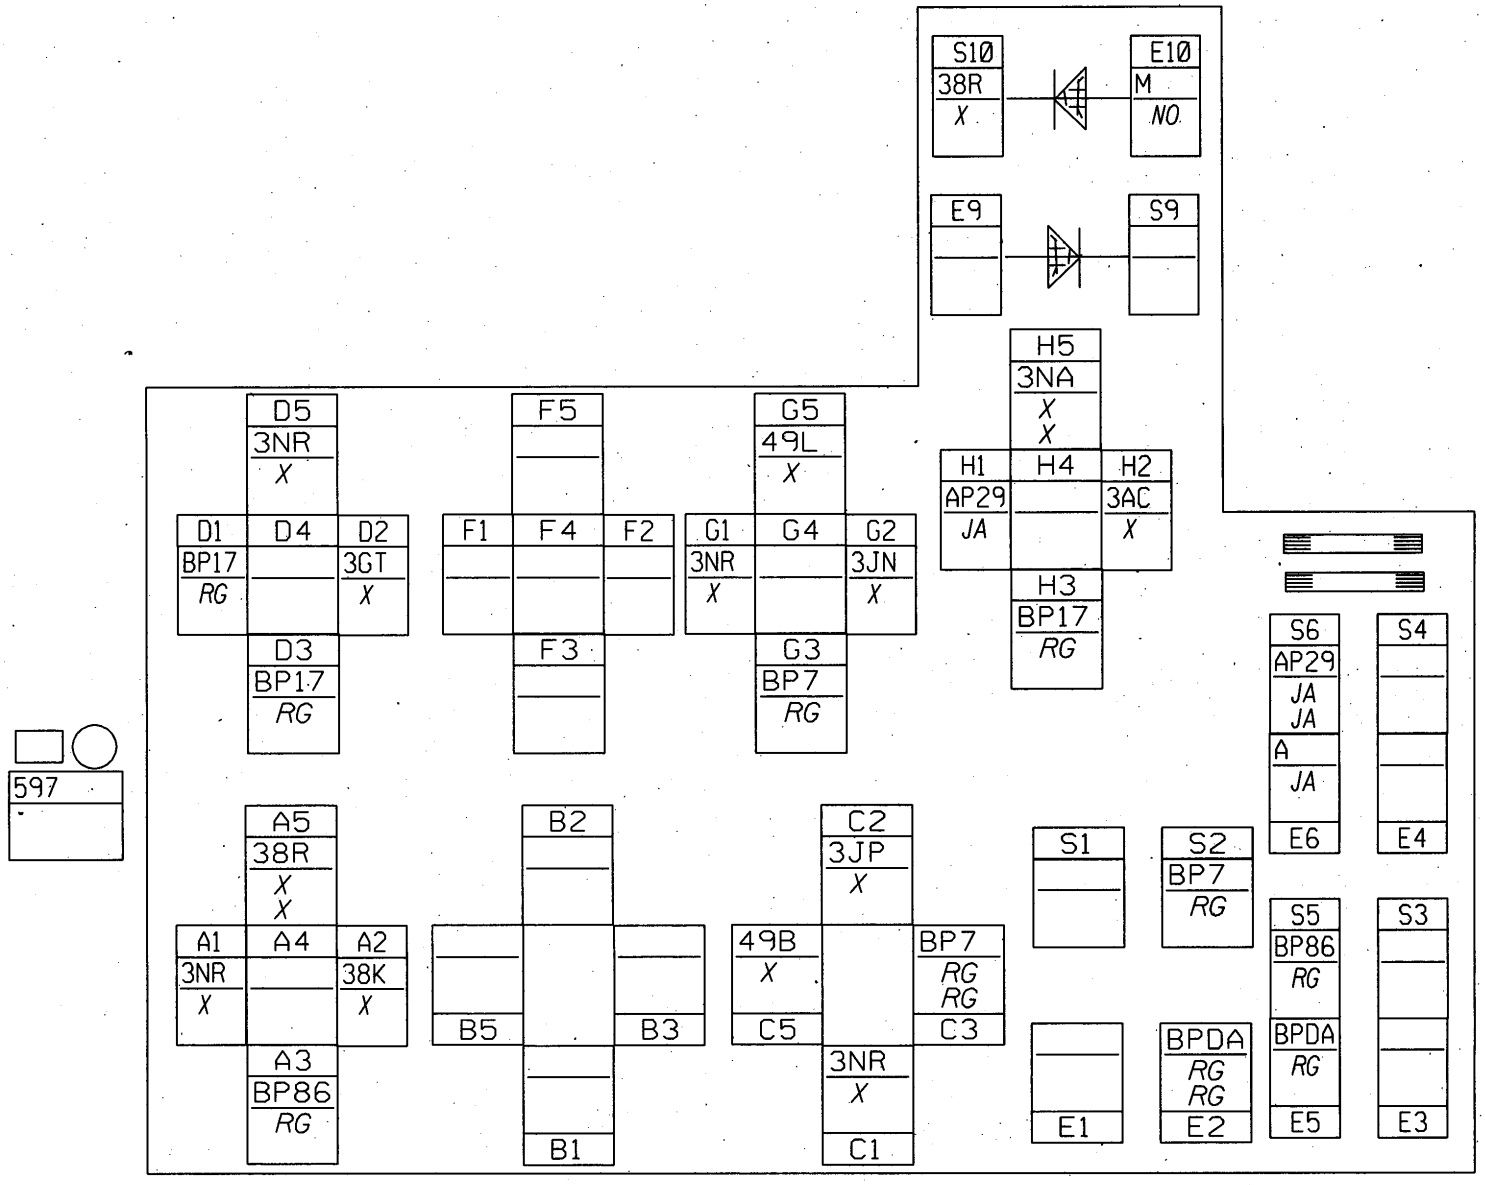

N°	mm²		... → ...
	1	3NR	+ INJECTOR >
	1	3NR	+ INJECTOR >
	1	BP17	PROTECTED BATTERY > INJECTION PREHEATER
	1	3NR	+ INJECTOR >
	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
	.6	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
	.6	3JP	FAN 2 CONTROL RELAY
	.6	3GT	POWER LATCH ACTUATOR RELAY CONTROL
	3	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	3	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	.6	3JN	FAN CONTROL RELAY 1
	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
	1	38R	AIR CONDITIONING CLUTCH + CONTROL
	1	38R	AIR CONDITIONING CLUTCH + CONTROL
	3	49B	+ FAN CONTROL
	3	3NR	+ INJECTOR >
	3	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
	3	49L	LOW SPEED FAN + CONTROL RESISTANCE
	1	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY
	1.4	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY
	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
	2	A	+ AFTER IGNITION
	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
	1.4	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
0	1	M	EARTH
0	1	38R	AIR CONDITIONING CLUTCH + CONTROL


MOTOR AND RELAY FUSE BOX
F4P720 F4P722
S27-S28-S29-S31-S32-S33-S35

MP+CF NO

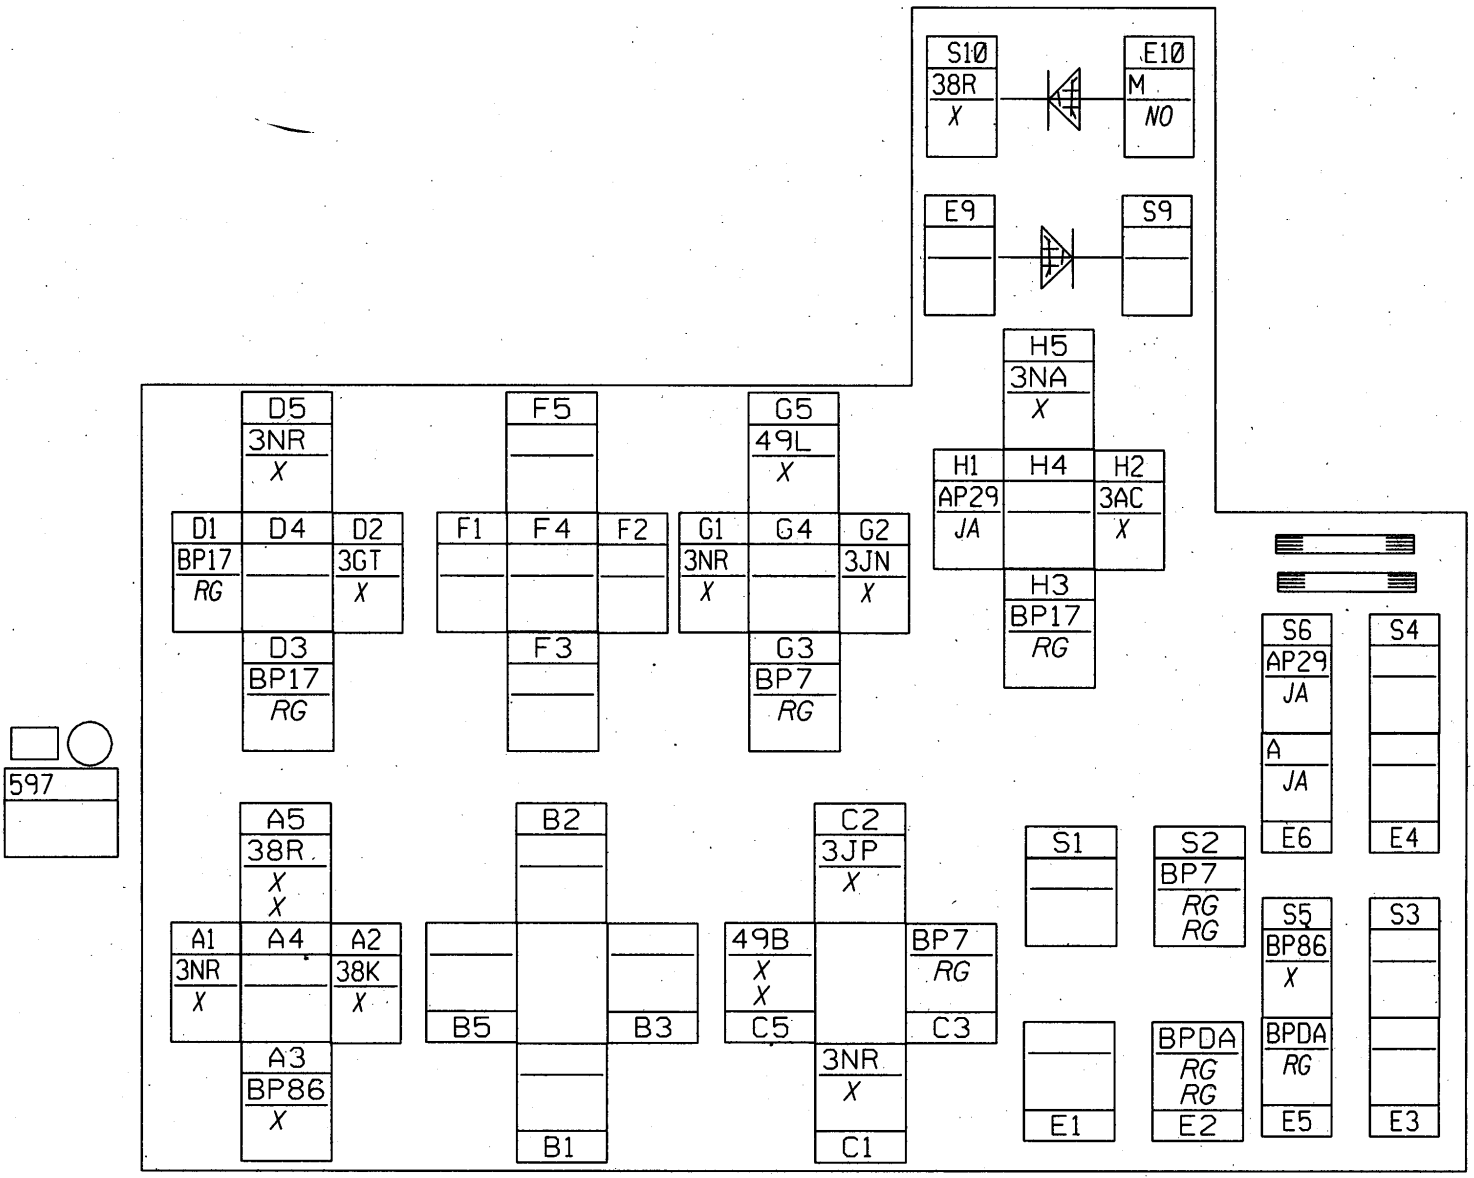

N°	mm²		... ⟶ ...
1	1	3NR	+ INJECTOR >
1	1	3NR	+ INJECTOR >
1	1	BP17	PROTECTED BATTERY > INJECTION PREHEATER
1	1	3NR	+ INJECTOR >
1	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
2	.35	38K	AIR CONDITIONING CUT-OUT > COMPUTER PETROL > DIESEL CONTROL
2	.6	3JP	FAN 2 CONTROL RELAY
2	1	3GT	POWER LATCH ACTUATOR RELAY CONTROL
2	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
2	3	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
2	.6	3JN	FAN CONTROL RELAY 1
2	.6	3AC	- FUEL PUMP RELAY COIL CONTROL
2	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
2	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
3	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
3	3	BP7	PROTECTED BATTERY > FUSE 1 FAN
3	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
3	2	BP7	PROTECTED BATTERY > FUSE 1 FAN
3	3	BP17	PROTECTED BATTERY > INJECTION PREHEATER
5	1	38R	AIR CONDITIONING CLUTCH + CONTROL
5	1	38R	AIR CONDITIONING CLUTCH + CONTROL
5	3	49B	+ FAN CONTROL
5	3	49B	+ FAN CONTROL
5	3	3NR	+ INJECTOR >
5	1	BPDA	PROTECTED BATTERY > ALTERNATOR STARTING
5	3	49L	LOW SPEED FAN + CONTROL RESISTANCE
5	3	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY
5	1	BP86	+ PROTECTED BATTERY > AIR CONDITIONING COMPRESSOR FUSES
6	2	A	+ AFTER IGNITION
6	2	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
10	1	M	EARTH
10	1	38R	AIR CONDITIONING CLUTCH + CONTROL

MOTOR AND RELAY FUSE BOX
CHAUFO
S27-S28-S29-S31-S32-S33-S35

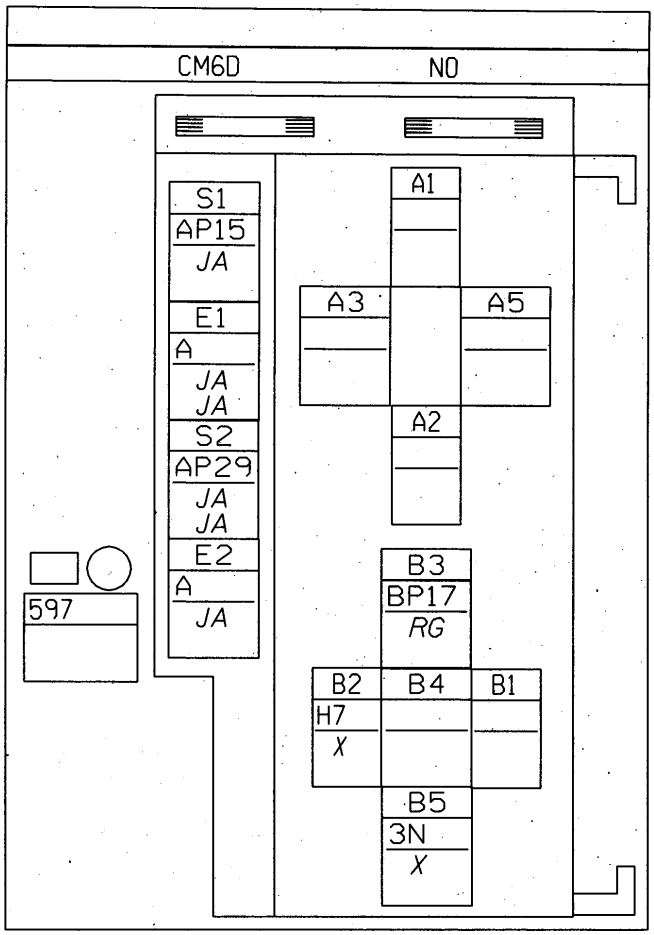


N°	mm²		... → ...
E1	2	A	+ AFTER IGNITION
E1	2	A	+ AFTER IGNITION
S1	.6	AP15	+ AFTER IGNITION PROTECTED FUSE ENGINE FUNCTION
B2	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
E2	2	A	+ AFTER IGNITION
S2	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
S2	2	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
B3	5	BP17	PROTECTED BATTERY > INJECTION PREHEATER
B5	5	3N	+ FUEL PUMP>

STEPPER MOTOR

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M


S28-S29-S33-S35

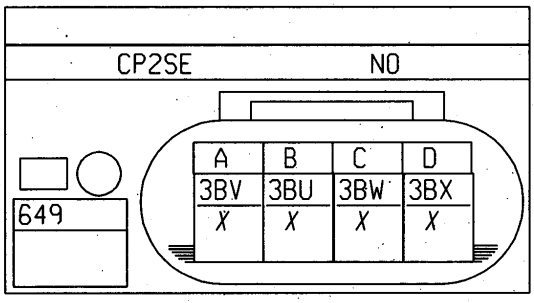

N°	mm²		... → ...
	.6	3BV	IDLING REGULATION CONTROL 2
	.6	3BU	IDLING REGULATION CONTROL 1
	.6	3BW	IDLING REGULATION CONTROL 3
	.6	3BX	IDLING REGULATION CONTROL 4

AUTOMATIC TRANSMISSION VEHICLE SPEED SENSOR


K4M700-701-704

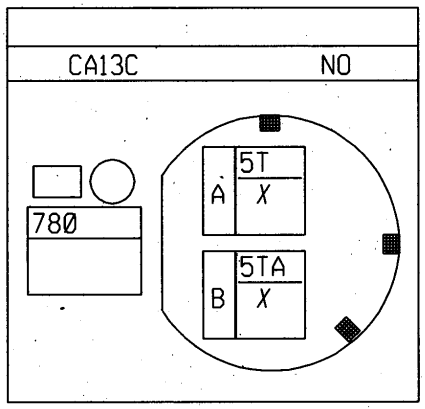

N°	mm²		... → ...
	.6	5T	+SENSOR GEARBOX OUTPUT SPEED
	.6	5TA	-SENSOR GEARBOX OUTPUT SPEED

STEPPER MOTOR


S28-S29-S33-S35

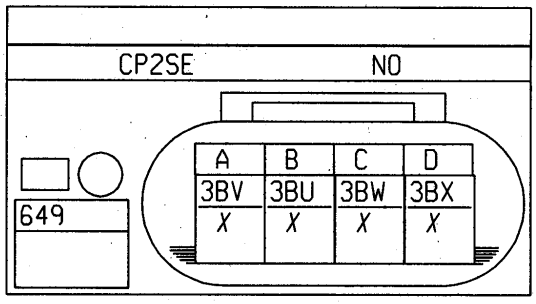

N°	mm²		... ⟶ ...
A	.6	3BV	IDLING REGULATION CONTROL 2
B	.6	3BU	IDLING REGULATION CONTROL 1
C	.6	3BW	IDLING REGULATION CONTROL 3
D	.6	3BX	IDLING REGULATION CONTROL 4

IGNITION QUADRUPLE COIL MODULE


S35

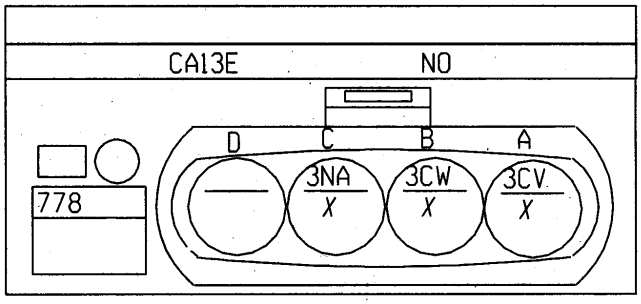

N°	mm²		... ⟶ ...
A	1	3CV	COIL INJECTOR 1-4 - CONTROL
B	1	3CW	COIL INJECTOR 2-3 - CONTROL
C	2	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY

UPSTREAM OXYGEN SENSOR


S34

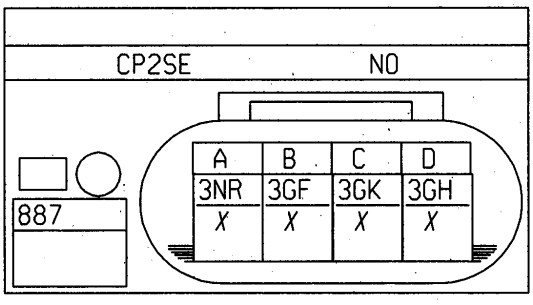

N°	mm²		... ⟶ ...
A	1	3NR	+ INJECTOR >
B	1	3GF	UPSTREAM OXYGEN SENSOR REHEATER - CONTROL
C	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
D	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH

STEPPER MOTOR


S28-S29-S33-S35

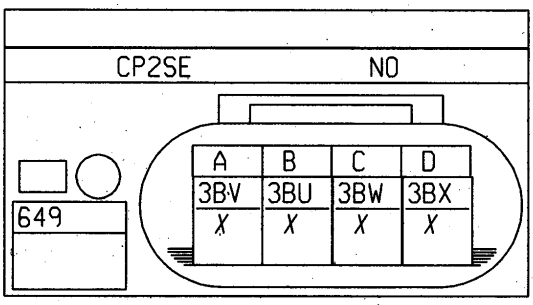

N°	mm²		... → ...
A	.6	3BV	IDLING REGULATION CONTROL 2
B	.6	3BU	IDLING REGULATION CONTROL 1
C	.6	3BW	IDLING REGULATION CONTROL 3
D	.6	3BX	IDLING REGULATION CONTROL 4

CYLINDER SENSOR


S31-S35

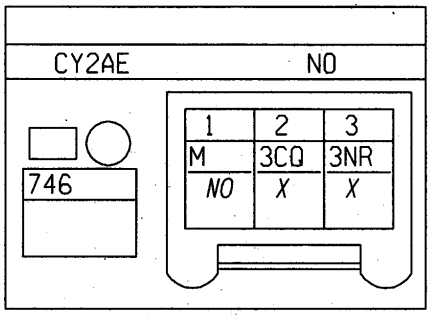

N°	mm²		... → ...
1	.35	M	EARTH
2	.35	3CQ	CYLINDER 1 SENSOR SIGNAL
3	.35	3NR	+ INJECTOR >


IGNITION QUADRUPLE COIL MODULE

S35

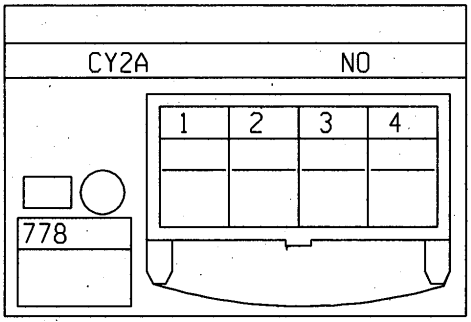


N°	mm²		... → ...

STEPPER MOTOR
F4P722
S28-S29-S33-S35

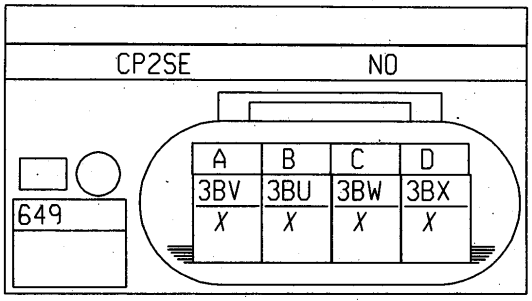


N°	mm²		... → ...
A	.22	3BV	IDLING REGULATION CONTROL 2
B	.22	3BU	IDLING REGULATION CONTROL 1
C	.22	3BW	IDLING REGULATION CONTROL 3
D	.22	3BX	IDLING REGULATION CONTROL 4

CYLINDER 1 IGNITION COIL
F4P720 F4P722
S28-S29-S33

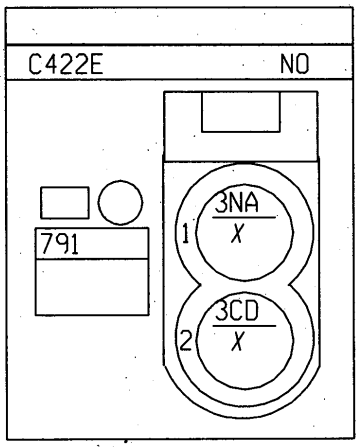


N°	mm²		... → ...
1	1	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY
2	1	3CD	INJECTOR COIL 1> INJECTOR COIL 4 - CONTROL

STEPPER MOTOR
CHAUFO
S28-S29-S33-S35

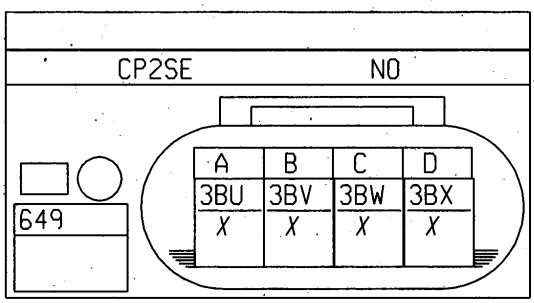


N°	mm²		... → ...
A	1	3BU	IDLING REGULATION CONTROL 1
B	1	3BV	IDLING REGULATION CONTROL 2
C	1	3BW	IDLING REGULATION CONTROL 3
D	1	3BX	IDLING REGULATION CONTROL 4

IGNITION QUADRUPLE COIL MODULE
CHAUFO
S35

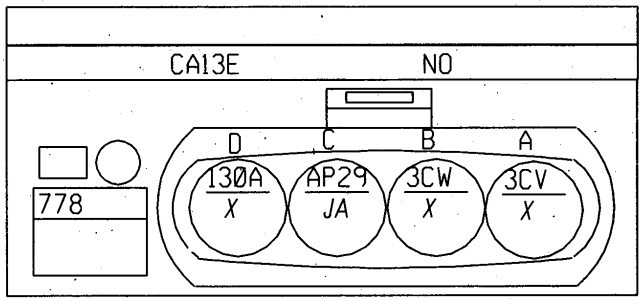

N°	mm²		... → ...
A	1.4	3CV	COIL INJECTOR 1-4 - CONTROL
B	1.4	3CW	COIL INJECTOR 2-3 - CONTROL
C	1.4	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
D	1	130A	+ RADIO INTERFERENCE CONDENSER > IGNITION POWER MODULE


UPSTREAM OXYGEN SENSOR
CHAUFO
S34

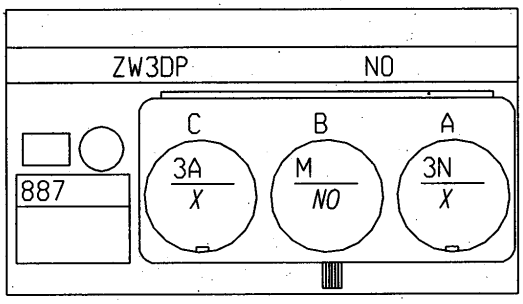

N°	mm²		... → ...
A	1	3N	+ FUEL PUMP>
B	1	M	EARTH
C	.6	3A	OXYGEN SENSOR SIGNAL

DIESEL PUMP


S32

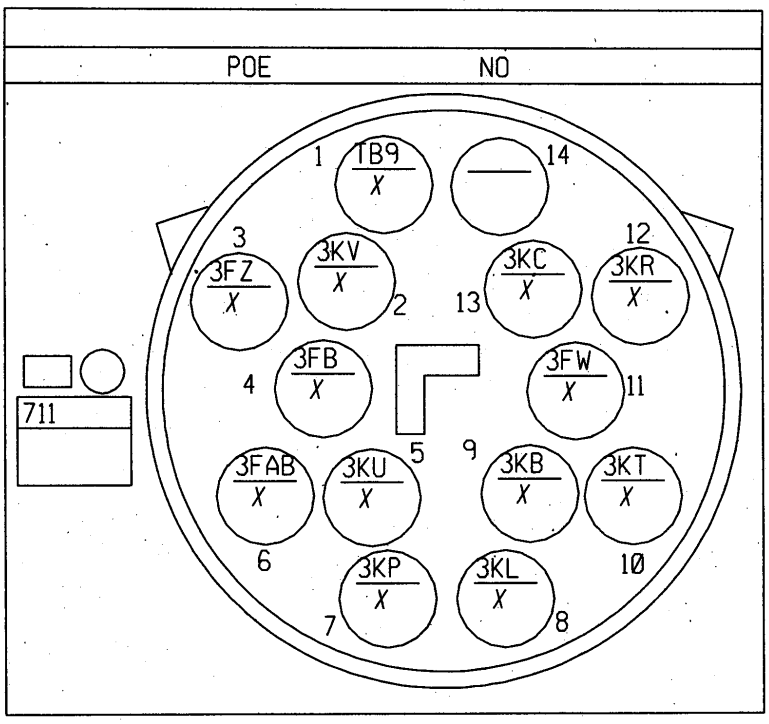

N°	mm²		... → ...
1	.6	TB9	INJECTION PUMP SCREENING BRAID
2	.6	3KV	DIESEL PUMP ROTOR CONTROL
3	.6	3FZ	- SOLENOID VALVE ADVANCE CONTROL
4	1	3FB	+ INJECTION > PROTECTION RELAY
5	.6	3KU	DIESEL PUMP ROTOR B CONTROL
6	.6	3FAB	SIGNAL+ FUEL TEMPERATURE
7	.6	3KP	- DIESEL FUEL TEMPERATURE > DIESEL PUMP MEMORY
8	.6	3KL	FOR DIESEL PUMP MEMORY SIGNAL
9	.6	3KB	ROTOR COMPENSATION SIGNAL
10	.6	3KT	DIESEL PUMP ROTOR SENSOR SIGNAL
11	1	3FW	- ELECTRIC CUT-OUT SOLENOID VALVE CONTROL
12	.6	3KR	INDUCTANCE SWITCH SIGNAL
13	.6	3KC	CAM SENSOR SIGNAL

ACCELERATOR PEDAL POTENTIOMETER


S31

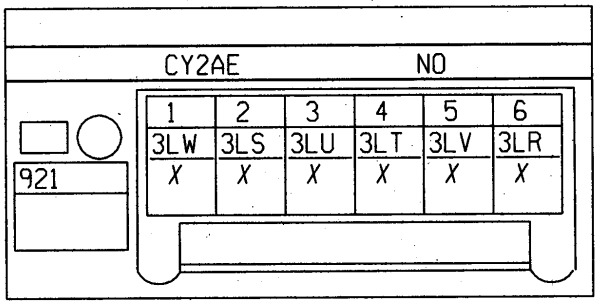

N°	mm²		... → ...
1	.35	3LW	POTENTIOMETER CHARGE 2 + SIGNAL
2	.6	3LS	POTENTIOMETER CHARGE 1 + SIGNAL
3	.35	3LU	POTENTIOMETER CHARGE 2 +
4	.35	3LT	POTENTIOMETER CHARGE 1 -
5	.35	3LV	POTENTIOMETER CHARGE 2 -
6	.35	3LR	+ POTENTIOMETER CHARGE 1

DIESEL PUMP


S32

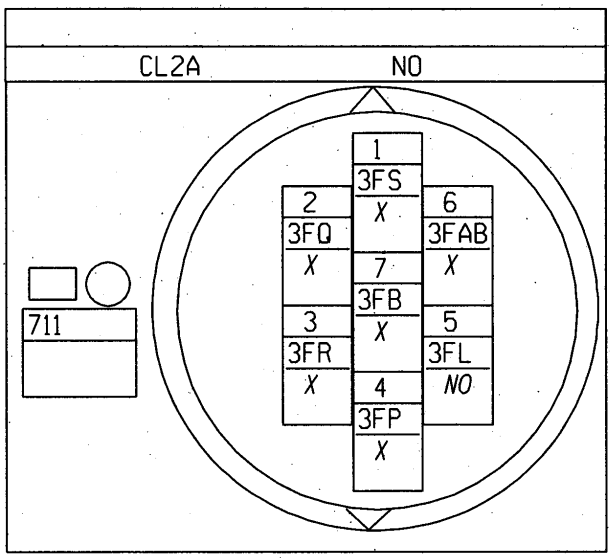

N°	mm²		... → ...
	.6	3FS	FLOW REGULATOR POSITION SENSOR SUPPLY
	.6	3FQ	FLOW REGULATOR POSITION REFERENCE SENSOR
	.6	3FR	FLOW REGULATOR CENTRE POINT SENSOR
	1.4	3FP	- FLOW REGULATOR CONTROL
	.6	3FL	- ANALOG > SENSOR
	.6	3FAB	SIGNAL+ FUEL TEMPERATURE
	1.4	3FB	+ INJECTION > PROTECTION RELAY

INJECTION NEEDLE RAISE SENSOR


S32

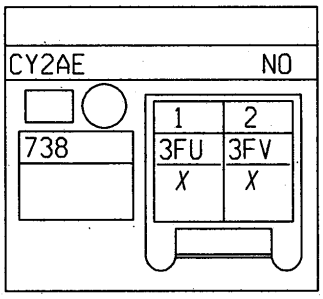

N°	mm²		... → ...
1	.5	3FU	NEEDLE LIFT SENSOR SIGNAL
2	.5	3FV	- NEEDLE LIFT SENSOR

DIESEL PUMP


S32

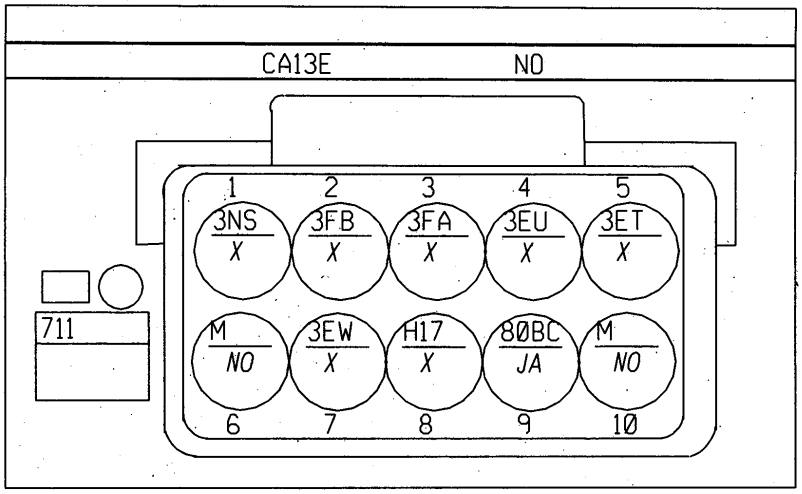

N°	mm²		··· ⟶ ···
1	.6	3NS	DIESEL PUMP > ALTIMETRIC RELAY INFO
2	.6	3FB	+ INJECTION > PROTECTION RELAY
3	.6	3FA	POTENTIOMETER CHARGE 1 + SIGNAL
4	.6	3EU	+ POTENTIOMETER CHARGE 1
5	.6	3ET	AIR-WATER REGULATION NEEDLE POTENTIOMETER EARTH SENSOR
6	.6	M	EARTH
7	.6	3EW	- CAM SOLENOID VALVE > COMPUTER CONTROL
8	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
9	.6	80BC	+ ELECTRIC CUT-OFF SOLENOID VALVE > INERTIA SWITCH
10	.35	M	EARTH


INJECTION NEEDLE RAISE SENSOR

S32

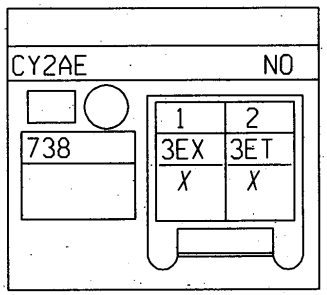

N°	mm²		··· ⟶ ···
1	.5	3EX	RH LIFT SIGNAL
2	.5	3ET	AIR-WATER REGULATION NEEDLE POTENTIOMETER EARTH SENSOR


AUTOMATIC TRANSMISSION VEHICLE SPEED SENSOR

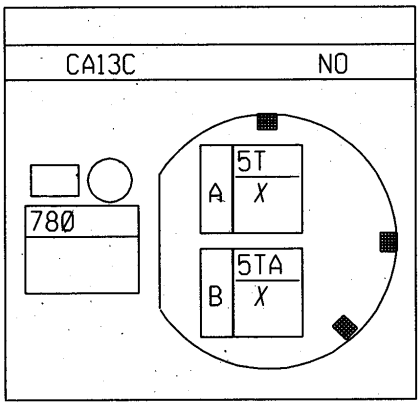

N°	mm²		... → ...
.6	5T		+SENSOR GEARBOX OUTPUT SPEED
.6	5TA		-SENSOR GEARBOX OUTPUT SPEED


AIR INJECTION FLOW METER

S31

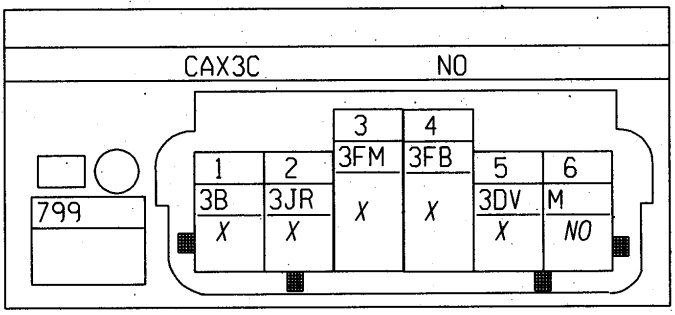


N°	mm²		... → ...
.6	3B		SIGNAL+ AIR TEMPERATURE SENSOR
.6	3JR		ATMOSPHERIC THROTTLE ENGINE CONTROL FLOWMETER SENSOR EARTH
.6	3FM		AIR FLOW METER SUPPLY
.6	3FB		+ INJECTION > PROTECTION RELAY
.6	3DV		SIGNAL+ AIR FLOW METER
.6	M		EARTH

AUTOMATIC TRANSMISSION VEHICLE SPEED SENSOR
BVA4

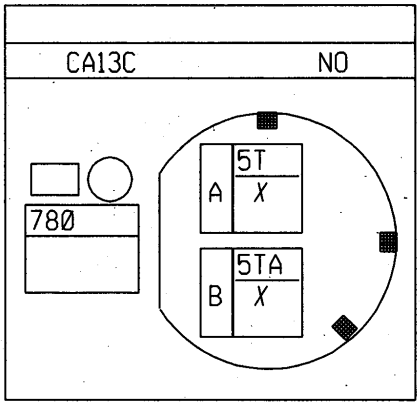

N°	mm²		... → ...
A	.6	5T	+SENSOR GEARBOX OUTPUT SPEED
B	.6	5TA	-SENSOR GEARBOX OUTPUT SPEED

AIR INJECTION FLOW METER
BVM5 BVA4
S31

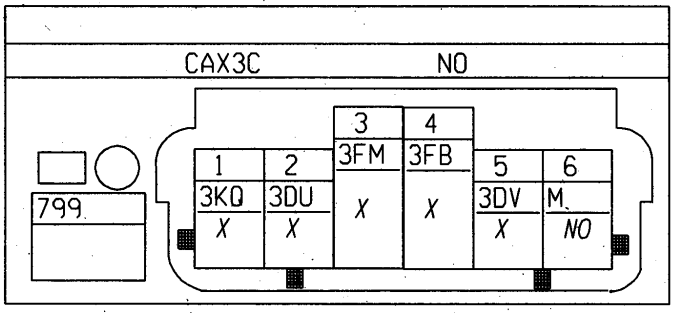


N°	mm²		... → ...
1	.6	3KQ	AIR TEMPERATURE SIGNAL
2	.6	3DU	- AIR FLOW METER
3	.6	3FM	AIR FLOW METER SUPPLY
4	.6	3FB	+ INJECTION > PROTECTION RELAY
5	.6	3DV	SIGNAL+ AIR FLOW METER
6	.6	M	EARTH

CYLINDER 1 IGNITION COIL

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M

S28-S29-S33

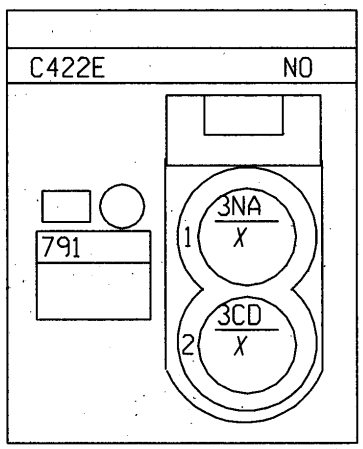


N°	mm²		... ⟶ ...
1	1	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY
2	1	3CD	INJECTOR COIL 1> INJECTOR COIL 4 - CONTROL

CYLINDER 2 IGNITION COIL


K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M

S28-S29-S33

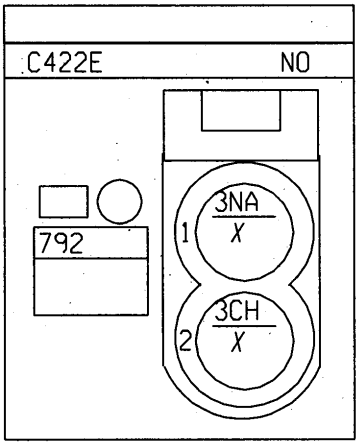


N°	mm²		... ⟶ ...
1	1	3NA	+INERTIA SWITCII EXCITER COIL > FUEL PUMP RELAY
2	1	3CH	INJECTOR COIL 2> INJECTOR COIL 3 - CONTROL

CYLINDER 2 IGNITION COIL
F4P720 F4P722
S28-S29-S33

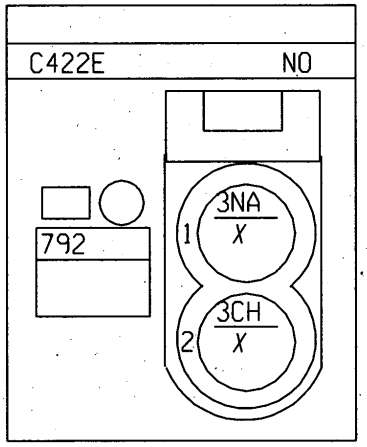

N°	mm²		... → ...
1	1	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY
2	1	3CII	INJECTOR COIL 2> INJECTOR COIL 3 - CONTROL

CYLINDER 3 IGNITION COIL
F4P720 F4P722
S28-S29-S33

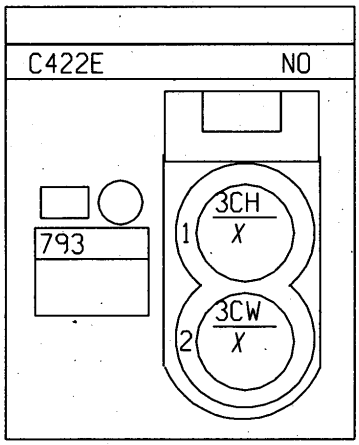


N°	mm²		... → ...
1	1	3CII	INJECTOR COIL 2> INJECTOR COIL 3 - CONTROL
2	1	3CW	COIL INJECTOR 2-3 - CONTROL

CYLINDER 3 IGNITION COIL

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M

S28-S29-S33

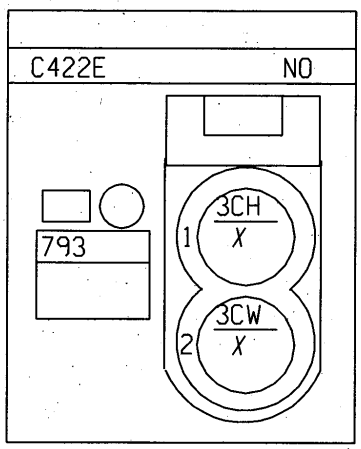


N°	mm²		... → ...
1	1	3CH	INJECTOR COIL 2> INJECTOR COIL 3 - CONTROL
2	1	3CW	COIL INJECTOR 2-3 - CONTROL

CYLINDER 4 IGNITION COIL


K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M

S28-S29-S33

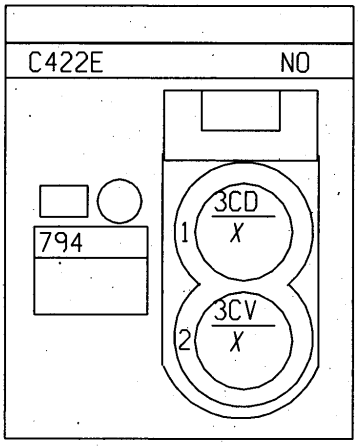


N°	mm²		... → ...
1	1	3CD	INJECTOR COIL 1> INJECTOR COIL 4 - CONTROL
2	1	3CV	COIL INJECTOR 1-4 - CONTROL

CYLINDER 4 IGNITION COIL
F4P720 F4P722
S28-S29-S33

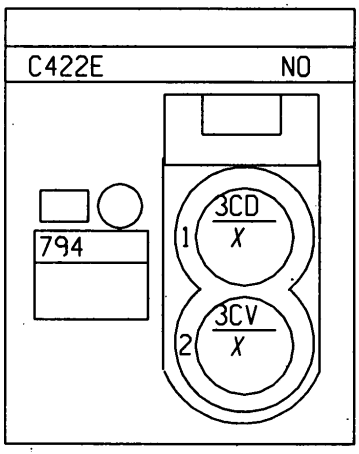

N°	mm²		... ⟶ ...
1	1	3CD	INJECTOR COIL 1> INJECTOR COIL 4 - CONTROL
2	1	3CV	COIL INJECTOR 1-4 - CONTROL

UPSTREAM OXYGEN SENSOR
F4P720 F4P722
S34

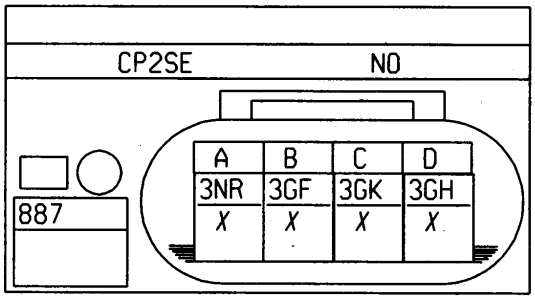


N°	mm²		... ⟶ ...
A	1	3NR	+ INJECTOR >
B	1	3GF	UPSTREAM OXYGEN SENSOR REHEATER - CONTROL
C	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
D	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH

UPSTREAM OXYGEN SENSOR

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M

S34

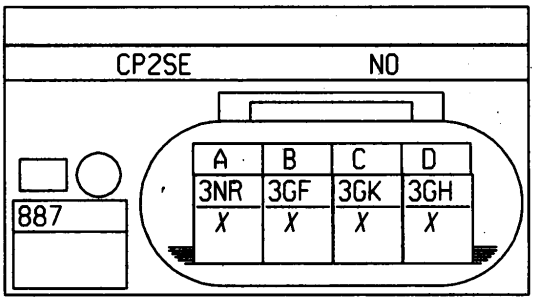


N°	mm²		... → ...
	1	3NR	+ INJECTOR >
	1	3GF	UPSTREAM OXYGEN SENSOR REHEATER - CONTROL
	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH

ACCELERATOR PEDAL POTENTIOMETER

K4M712 EQGPL

S31

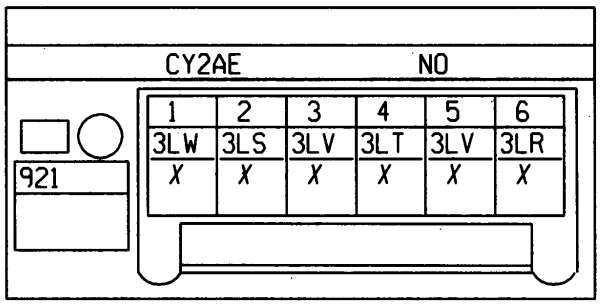


N°	mm²		... → ...
	.35	3LW	POTENTIOMETER CHARGE 2 + SIGNAL
	.35	3LS	POTENTIOMETER CHARGE 1 + SIGNAL
	.35	3LV	POTENTIOMETER CHARGE 2 -
	.35	3LT	POTENTIOMETER CHARGE 1 -
	.35	3LV	POTENTIOMETER CHARGE 2 -
	.35	3LR	+ POTENTIOMETER CHARGE 1

IMPACT SENSOR (INERTIA SENSOR)

K4J750 K4M700-701-704 K4M701-708-712 K4J750-714 SAUF EQGPL K4M


S28-S29-S31-S32-S33-S35

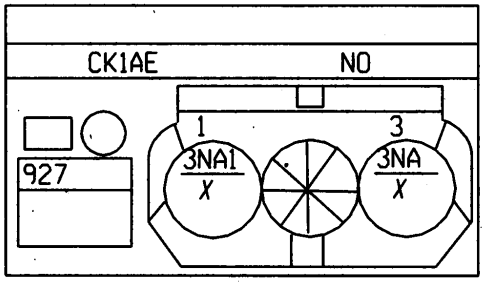

N°	mm²		... → ...
1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
3	1.4	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY

UPSTREAM OXYGEN SENSOR


S34

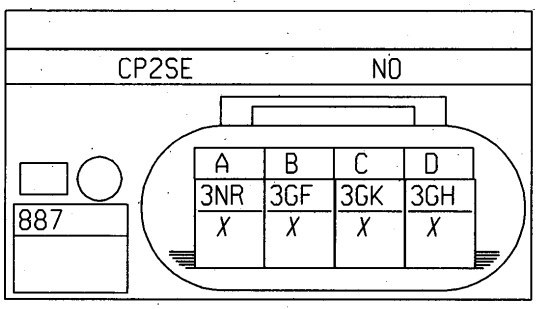

N°	mm²		... ⟶ ...
A	1	3NR	+ INJECTOR >
B	1	3GF	UPSTREAM OXYGEN SENSOR REHEATER - CONTROL
C	.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
D	.6	3GH	UPSTREAM OXYGEN SENSOR EARTH

IMPACT SENSOR (INERTIA SENSOR)


S28-S29-S31-S32-S33-S35

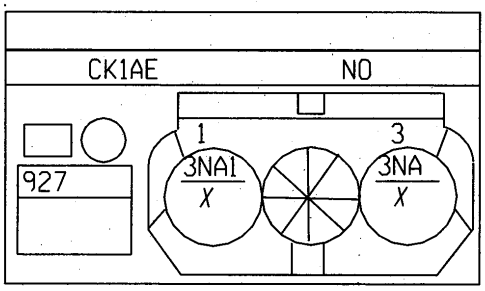

N°	mm²		... ⟶ ...
1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
3	1.4	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY

FUEL RAIL PRESSURE SENSOR


S31-S35

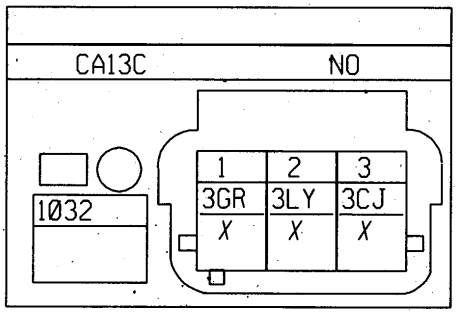

N°	mm²		... ⟶ ...
1	.6	3GR	+ THROTTLE POSITION POTENTIOMETER > TANK PRESSURE SENSOR
2	.6	3LY	RAIL FUEL PRESSURE SENSOR + SIGNAL
3	.6	3CJ	GROUP 1 - SENSOR

ACCELERATOR PEDAL POTENTIOMETER


S31

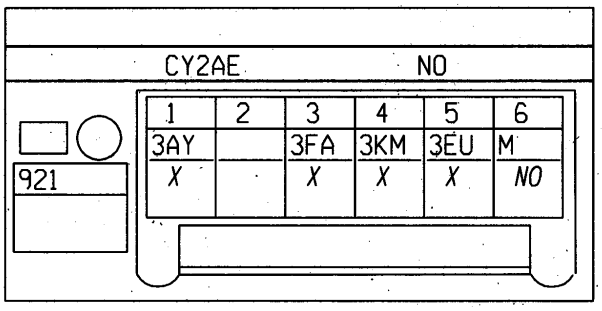

N°	mm²		··· → ···
	.35	3AY	SIGNAL- NO LOAD POSITION SWITCH
	.35	3FA	POTENTIOMETER CHARGE 1 + SIGNAL
	.35	3KM	POTENTIOMETER CHARGE 1 -
	.35	3EU	+ POTENTIOMETER CHARGE 1
	.35	M	EARTH


IMPACT SENSOR (INERTIA SENSOR)

S28-S29-S31-S32-S33-S35

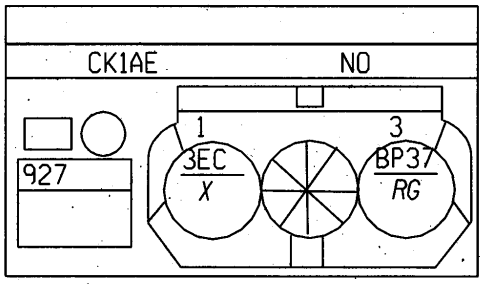


N°	mm²		··· → ···
1	.6	3EC	MAIN CONTROL RELAY > COMPUTER
3	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING

POWER CUT-OFF SOLENOID VALVE + SOLENOID VALVE ACTIVATOR

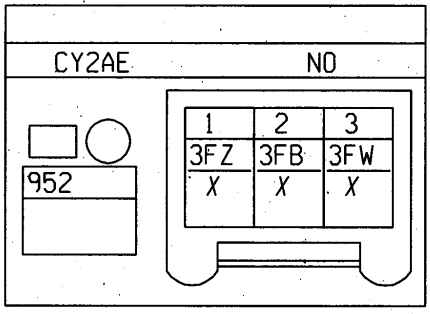


N°	mm²		··· → ···
1	1	3FZ	- SOLENOID VALVE ADVANCE CONTROL
2	1	3FB	+ INJECTION > PROTECTION RELAY
3	1	3FW	- ELECTRIC CUT-OUT SOLENOID VALVE CONTROL

ACCELERATOR PEDAL POTENTIOMETER
BVM5 BVA4
S31

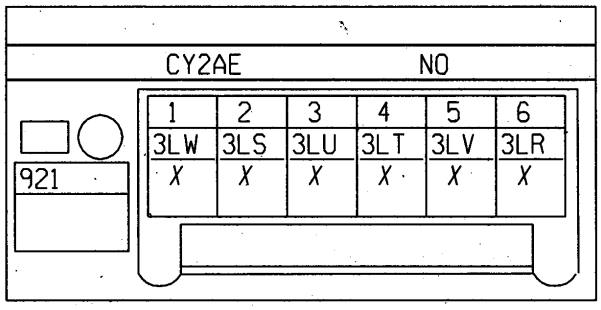


N°	mm²		... → ...
1	.35	3LW	POTENTIOMETER CHARGE 2 + SIGNAL
2	.35	3LS	POTENTIOMETER CHARGE 1 + SIGNAL
3	1	3LU	POTENTIOMETER CHARGE 2 +
4	.35	3LT	POTENTIOMETER CHARGE 1 -
5	.35	3LV	POTENTIOMETER CHARGE 2 -
6	.35	3LR	+ POTENTIOMETER CHARGE 1

IMPACT SENSOR (INERTIA SENSOR)
BVM5 BVA4
S28-S29-S31-S32-S33-S35

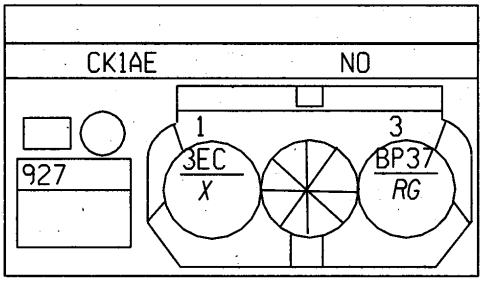


N°	mm²		... → ...
1	.6	3EC	MAIN CONTROL RELAY > COMPUTER
3	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING

ACCELERATOR PEDAL POTENTIOMETER
F4P720
S31

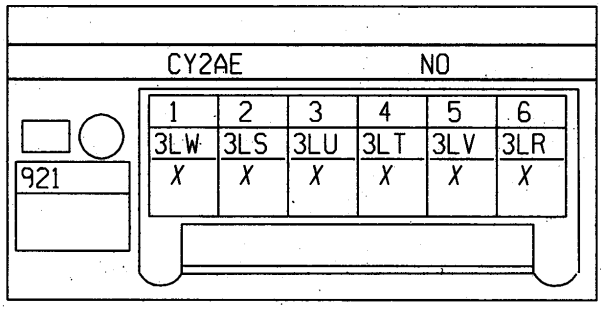

N°	mm²		... → ...
	.35	3LW	POTENTIOMETER CHARGE 2 + SIGNAL
	.35	3LS	POTENTIOMETER CHARGE 1 + SIGNAL
	.35	3LU	POTENTIOMETER CHARGE 2 +
	.35	3LT	POTENTIOMETER CHARGE 1 -
	.35	3LV	POTENTIOMETER CHARGE 2 -
	.35	3LR	+ POTENTIOMETER CHARGE 1


IMPACT SENSOR (INERTIA SENSOR)
F4P720 F4P722
S28-S29-S31-S32-S33-S35

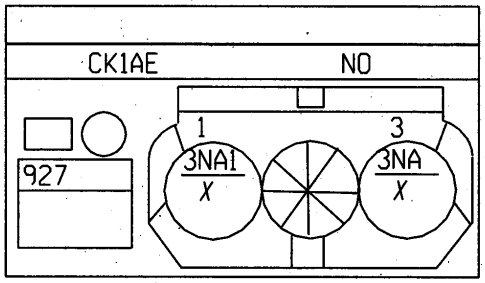

N°	mm²		... → ...
	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
	1.4	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY

IMPACT SENSOR (INERTIA SENSOR)


S28-S29-S31-S32-S33-S35

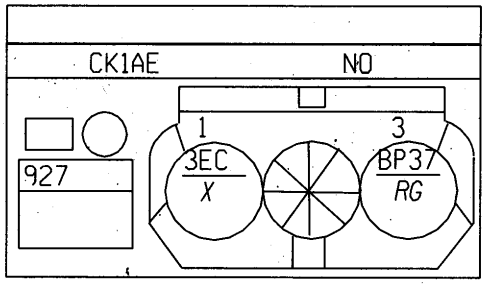

N°	mm²		... → ...
1	.6	3EC	MAIN CONTROL RELAY > COMPUTER
3	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING

IMPACT SENSOR (INERTIA SENSOR)


S28-S29-S31-S32-S33-S35

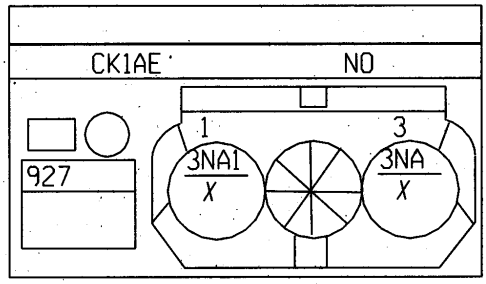

N°	mm²		... → ...
	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
	1.4	3NA	+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY


IMPACT SENSOR (INERTIA SENSOR)


S28-S29-S31-S32-S33-S35

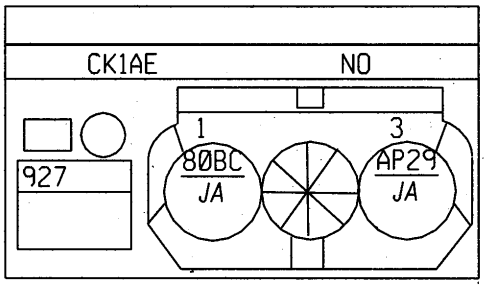

N°	mm²		... ⟶ ...
1	.6	80BC	+ ELECTRIC CUT-OFF SOLENOID VALVE > INERTIA SWITCH
3	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION


AUTOMATIC TRANSMISSION DP0 MODULE

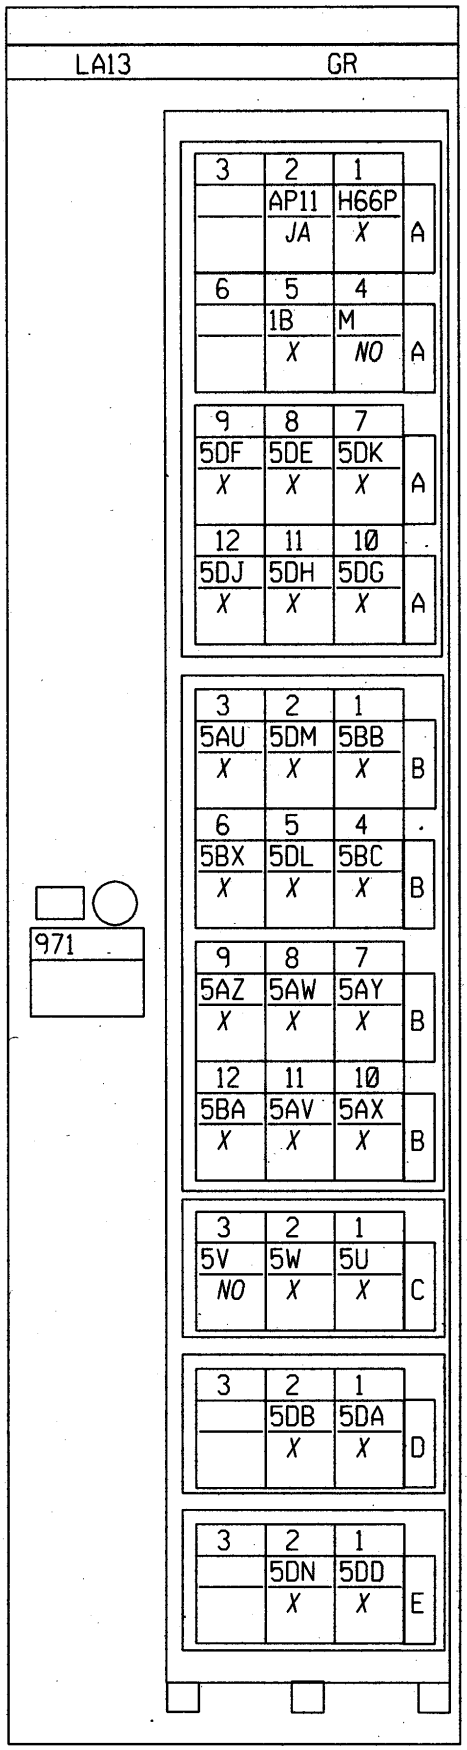

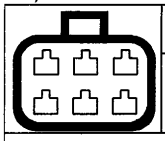


N°	mm²		... ⟶ ...
A1	.6	H66P	+ REVERSING LIGHTS CONTROL
B1	.35	5BB	- SEQUENCE 6 SOLENOID VALVE CONTROL
C1	.35	5U	+SENSOR LINE PRESSURE
D1	.35	5DA	SIGNAL+ GEARBOX INPUT SPEED SENSOR
E1	.6	5DD	EXCHANGER FLOW METER SOLENOID VALVE + CONTROL
A2	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
B2	.6	5DM	MODULATION SOLENOID VALVE 4 CONTROL
C2	.35	5W	SIGNAL+ LINE PRESSURE SENSOR
D2	.35	5DB	SIGNAL - GEARBOX INPUT SPEED SENSOR
E2	.6	5DN	EXCHANGER FLOW METER SOLENOID VALVE - CONTROL
B3	1	5AU	+ SEQUENCE SOLENOID VALVE
C3	.35	5V	-SENSOR LINE PRESSURE
A4	.6	M	EARTH
B4	.35	5BC	"""- PRESSURE 1" SOLENOID VALVE
A5	.6	1B	- STARTING RELAY COIL CONTROL
B5	.6	5DL	MODULATION SOLENOID VALVE 3 CONTROL
B6	1	5BX	SOLENOID VALVE MODULATION LOCK-UP CONTROL
A7	.35	5DK	- MULTIFUNCTION SWITCH > AUTOMATIC TRANSMISSION COMPUTER
B7	.6	5AY	- SEQUENCE 4 SOLENOID VALVE CONTROL
A8	.35	5DE	- MULTIFUNCTION SWITCH - CONTACT PARK NEUTRAL CONTROL
B8	.6	5AW	- SEQUENCE 2 SOLENOID VALVE CONTROL
A9	.35	5DF	SIGNAL 1 MULTIFUNCTION SWITCH
B9	1	5AZ	- SEQUENCE 5 SOLENOID VALVE CONTROL
A10	.35	5DG	SIGNAL 2 MULTIFUNCTION SWITCH
B10	.6	5AX	- SEQUENCE 3 SOLENOID VALVE CONTROL
A11	.35	5DH	SIGNAL 3 MULTIFUNCTION SWITCH
B11	.6	5AV	- SEQUENCE 1 SOLENOID VALVE CONTROL
A12	.35	5DJ	SIGNAL 4 MULTIFUNCTION SWITCH
B12	1	5BA	MODULATION SOLENOID VALVE +


AUTOMATIC TRANSMISSION DP0 MODULE
K4M700-701-704

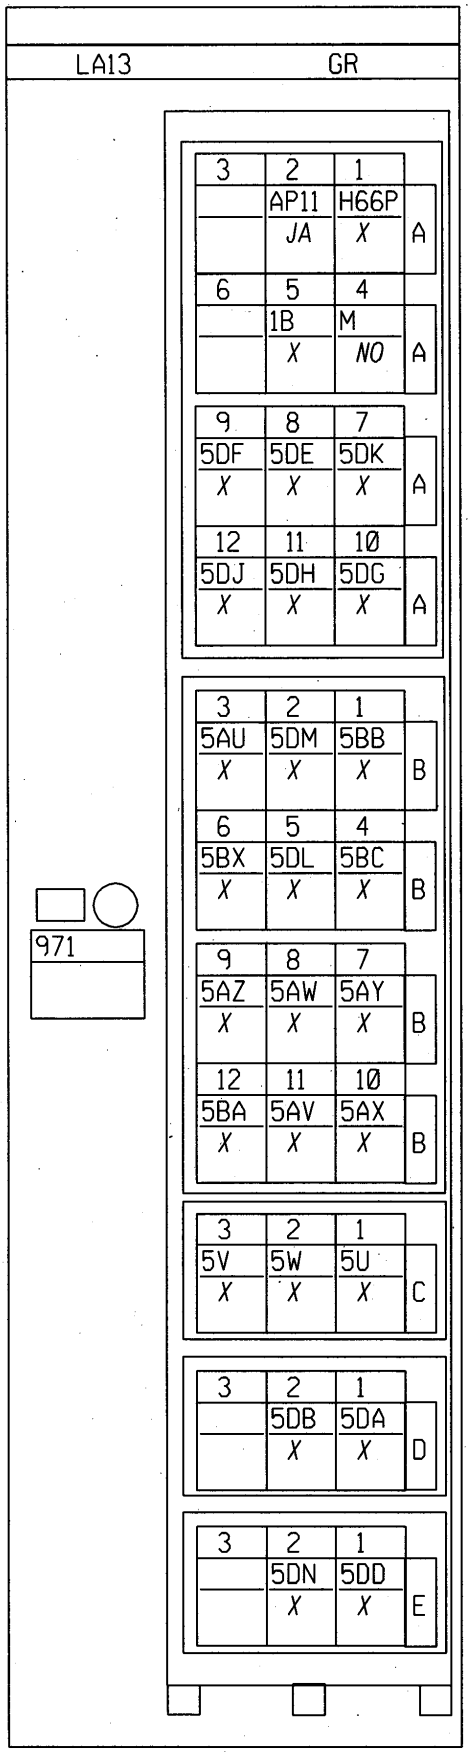

N°	mm²		··· ⟶ ···
A1	.6	H66P	+ REVERSING LIGHTS CONTROL
B1	.35	5BB	- SEQUENCE 6 SOLENOID VALVE CONTROL
C1	.35	5U	+SENSOR LINE PRESSURE
D1	.35	5DA	SIGNAL+ GEARBOX INPUT SPEED SENSOR
E1	.6	5DD	EXCHANGER FLOW METER SOLENOID VALVE + CONTROL
A2	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
B2	.6	5DM	MODULATION SOLENOID VALVE 4 CONTROL
C2	.35	5W	SIGNAL+ LINE PRESSURE SENSOR
D2	.35	5DB	SIGNAL - GEARBOX INPUT SPEED SENSOR
E2	.6	5DN	EXCHANGER FLOW METER SOLENOID VALVE - CONTROL
B3	1	5AU	+ SEQUENCE SOLENOID VALVE
C3	.35	5V	-SENSOR LINE PRESSURE
A4	.6	M	EARTH
B4	.35	5BC	"""- PRESSURE 1" SOLENOID VALVE
A5	.6	1B	- STARTING RELAY COIL CONTROL
B5	.6	5DL	MODULATION SOLENOID VALVE 3 CONTROL
B6	1	5BX	SOLENOID VALVE MODULATION LOCK-UP CONTROL
A7	.35	5DK	- MULTIFUNCTION SWITCH > AUTOMATIC TRANSMISSION COMPUTER
B7	.6	5AY	- SEQUENCE 4 SOLENOID VALVE CONTROL
A8	.35	5DE	- MULTIFUNCTION SWITCH - CONTACT PARK NEUTRAL CONTROL
B8	.6	5AW	- SEQUENCE 2 SOLENOID VALVE CONTROL
A9	.35	5DF	SIGNAL 1 MULTIFUNCTION SWITCH
B9	1	5AZ	- SEQUENCE 5 SOLENOID VALVE CONTROL
A10	.35	5DG	SIGNAL 2 MULTIFUNCTION SWITCH
B10	.6	5AX	- SEQUENCE 3 SOLENOID VALVE CONTROL
A11	.35	5DH	SIGNAL 3 MULTIFUNCTION SWITCH
B11	.6	5AV	- SEQUENCE 1 SOLENOID VALVE CONTROL
A12	.35	5DJ	SIGNAL 4 MULTIFUNCTION SWITCH
B12	1	5BA	MODULATION SOLENOID VALVE +


AUTOMATIC TRANSMISSION DP0 MODULE
BVA4

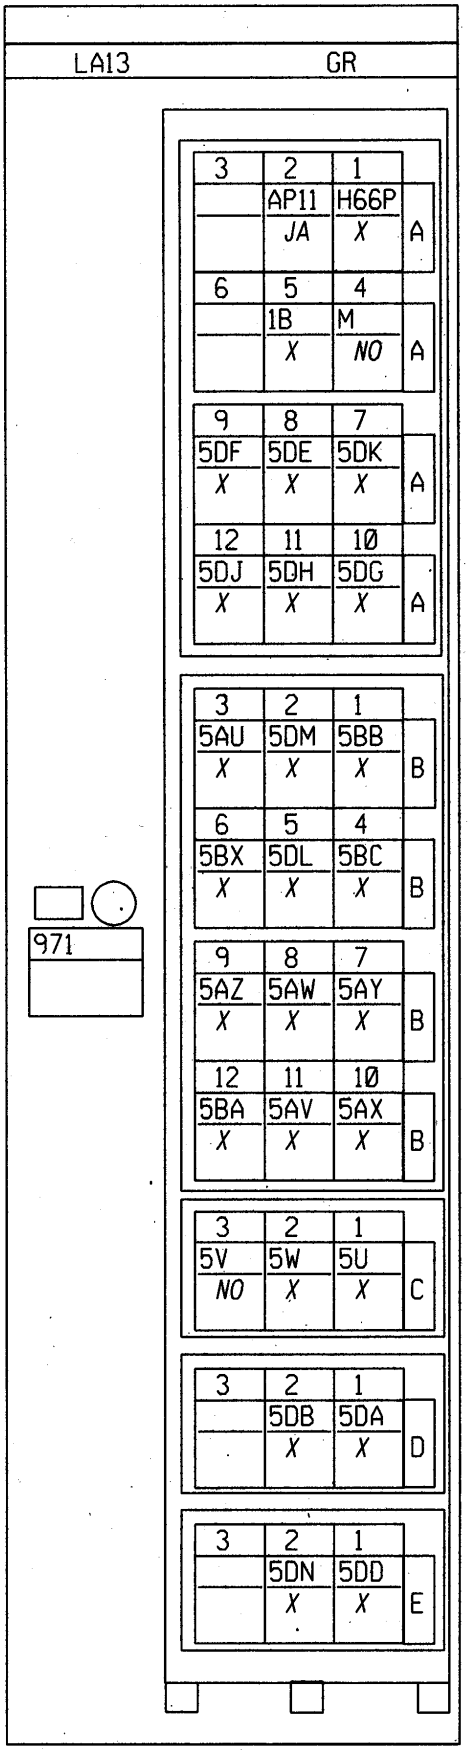

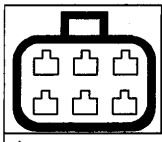


N°	mm²		... → ...
A1	.6	H66P	+ REVERSING LIGHTS CONTROL
B1	.35	5BB	- SEQUENCE 6 SOLENOID VALVE CONTROL
C1	.6	5U	+SENSOR LINE PRESSURE
D1	.35	5DA	SIGNAL+ GEARBOX INPUT SPEED SENSOR
E1	.6	5DD	EXCHANGER FLOW METER SOLENOID VALVE + CONTROL
A2	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
B2	.6	5DM	MODULATION SOLENOID VALVE 4 CONTROL
C2	.6	5W	SIGNAL+ LINE PRESSURE SENSOR
D2	.35	5DB	SIGNAL - GEARBOX INPUT SPEED SENSOR
E2	.6	5DN	EXCHANGER FLOW METER SOLENOID VALVE - CONTROL
B3	1	5AU	+ SEQUENCE SOLENOID VALVE
C3	.6	5V	-SENSOR LINE PRESSURE
A4	.6	M	EARTH
B4	.35	5BC	"""- PRESSURE 1" SOLENOID VALVE
A5	.6	1B	- STARTING RELAY COIL CONTROL
B5	.6	5DL	MODULATION SOLENOID VALVE 3 CONTROL
B6	1	5BX	SOLENOID VALVE MODULATION LOCK-UP CONTROL
A7	.35	5DK	- MULTIFUNCTION SWITCH > AUTOMATIC TRANSMISSION COMPUTER
B7	.6	5AY	- SEQUENCE 4 SOLENOID VALVE CONTROL
A8	.35	5DE	- MULTIFUNCTION SWITCH - CONTACT PARK NEUTRAL CONTROL
B8	.6	5AW	- SEQUENCE 2 SOLENOID VALVE CONTROL
A9	.35	5DF	SIGNAL 1 MULTIFUNCTION SWITCH
B9	1	5AZ	- SEQUENCE 5 SOLENOID VALVE CONTROL
A10	.35	5DG	SIGNAL 2 MULTIFUNCTION SWITCH
B10	.6	5AX	- SEQUENCE 3 SOLENOID VALVE CONTROL
A11	.35	5DH	SIGNAL 3 MULTIFUNCTION SWITCH
B11	.6	5AV	- SEQUENCE 1 SOLENOID VALVE CONTROL
A12	.35	5DJ	SIGNAL 4 MULTIFUNCTION SWITCH
B12	1	5BA	MODULATION SOLENOID VALVE +

ECU FOR LPG
K4M712 EQGPL
S33

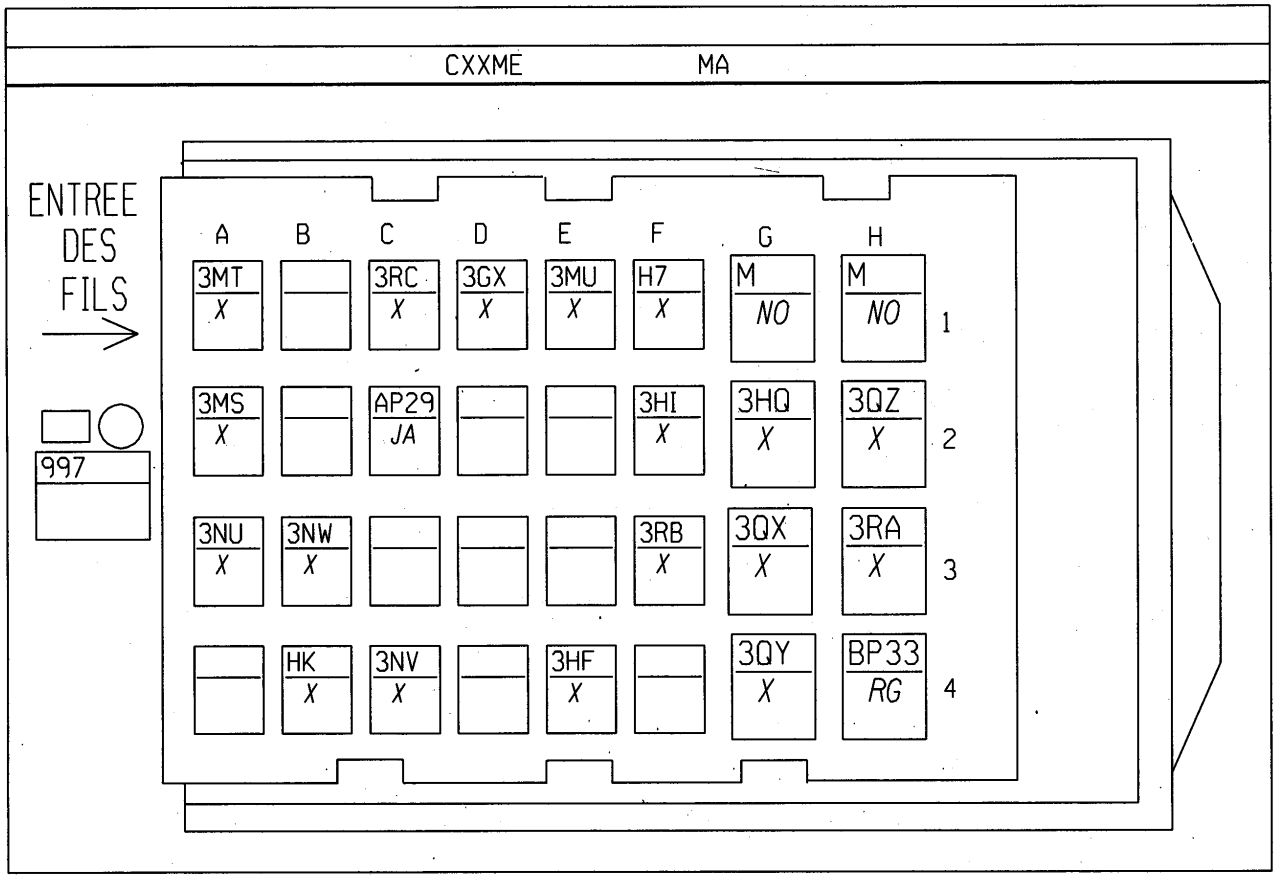


N°	mm²		... → ...
1	.35	3MT	ENGINE CANL SIGNAL
1	.35	3RC	LIQUIFIED PETROLEUM GAS START STOP SIGNAL
1	.35	3GX	+ FUEL/LPG SELECTION INDICATOR LIGHT CONTROL
1	.35	3MU	LPG FAULT WARNING LIGHT CONTROL
1	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
1	1.4	M	EARTH
1	1.4	M	EARTH
2	.35	3MS	ENGINE CANH SIGNAL
2	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
2	.6	3HI	- FUEL PRESSURE REGULATION SOLENOID VALVE CONTROL
2	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID >.COMPUTER CONTROL
2	.6	3QZ	- LPG INJECTOR 3 CONTROL
3	.35	3NU	+ LIQUEFIED PETROLEUM GAS PRESSURE SENSOR
3	.35	3NW	- LIQUEFIED PETROLEUM GAS PRESSURE SENSOR
3	.6	3RB	LIQUEFIED PETROLEUM GAS ACTUATOR CONTROL RELAY
3	.6	3QX	- LPG INJECTOR 1 CONTROL
3	.6	3RA	- LPG INJECTOR 4 CONTROL
4	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	3NV	LIQUEFIED PETROLEUM GAS PRESSURE SENSOR SIGNAL
4	.6	3HF	- CENTRAL LPG UNIT SOLENOID VALVE CONTROL RELAY
4	.6	3QY	- LPG INJECTOR 2 CONTROL
4	1	BP33	PROTECTED BATTERY FUSE LPG

RESISTANCE
K4M706 CA K4M706 CHAUFO

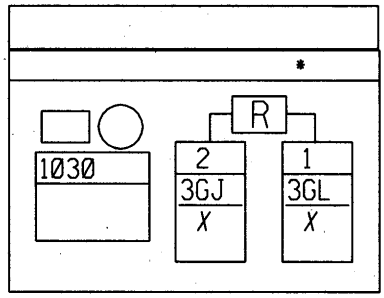


N°	mm²		... ⟶ ...
1	1	3GL	DOWNSTREAM OXYGEN SENSOR SIGNAL
2	1	3GJ	DOWNSTREAM OXYGEN SENSOR EARTH

MOTORISED TIROTTLE BODY
K4M712 EQGPL

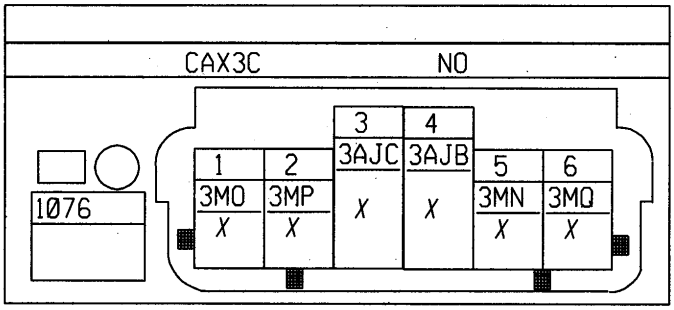


N°	mm²		... ⟶ ...
1	.6	3MO	MOTORISED THROTTLE POTENTIOMETER SENSOR -
2	.6	3MP	MOTORISED THROTTLE POTENTIOMETER 1 SIGNAL
3	1.4	3AJC	- ENGINE THROTTLE CONTROL
4	1.4	3AJB	+ ENGINE THROTTLE CONTROL
5	.6	3MN	MOTORISED THROTTLE POTENTIOMETER +5V
6	.6	3MQ	MOTORISED THROTTLE POTENTIOMETER 2 SIGNAL

GAS PRESSURE RELIEF VALVE
K4M712 EQGPL

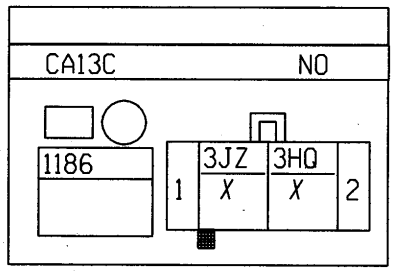


N°	mm²		... ⟶ ...
1	.6	3JZ	+ LIQUEFIED PETROLEUM GAS INJECTOR CONTROL
2	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL

FUEL RAIL PRESSURE SENSOR
BVM5 BVA4
S31-S35

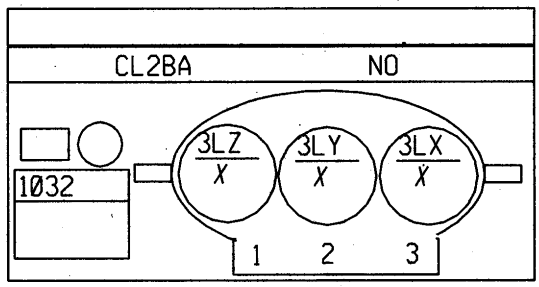


N°	mm²		... → ...
	.6	3LZ	RAIL FUEL PRESSURE SENSOR -
	.6	3LY	RAIL FUEL PRESSURE SENSOR + SIGNAL
	.6	3LX	RAIL FUEL PRESSURE SENSOR +

MOTORISED THROTTLE BODY
F4P720

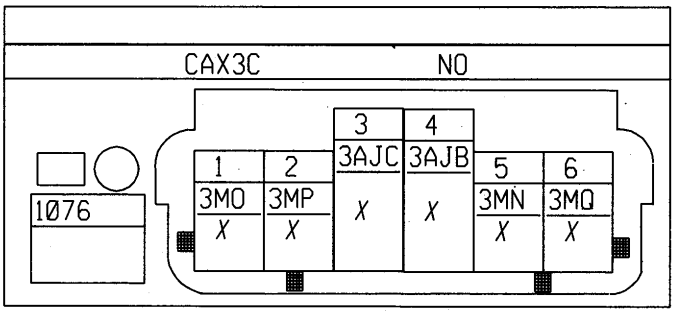


N°	mm²		··· ⟶ ···
1	.6	3MO	MOTORISED THROTTLE POTENTIOMETER SENSOR -
2	.6	3MP	MOTORISED THROTTLE POTENTIOMETER 1 SIGNAL
3	1.4	3AJC	- ENGINE THROTTLE CONTROL
4	1.4	3AJB	+ ENGINE THROTTLE CONTROL
5	.6	3MN	MOTORISED THROTTLE POTENTIOMETER +5V
6	.6	3MQ	MOTORISED THROTTLE POTENTIOMETER 2 SIGNAL

LPG PRESSURE SENSOR
K4M712 EQGPL

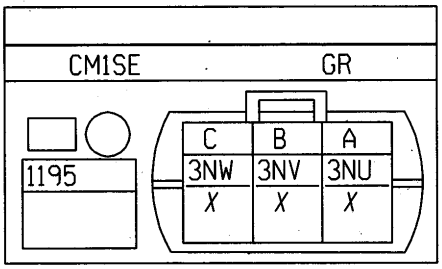


N°	mm²		... → ...
	.35	3NU	+ LIQUEFIED PETROLEUM GAS PRESSURE SENSOR
	.35	3NV	LIQUEFIED PETROLEUM GAS PRESSURE SENSOR SIGNAL
	.35	3NW	- LIQUEFIED PETROLEUM GAS PRESSURE SENSOR

LPG/NGV INJECTOR 1
K4M712 EQGPL

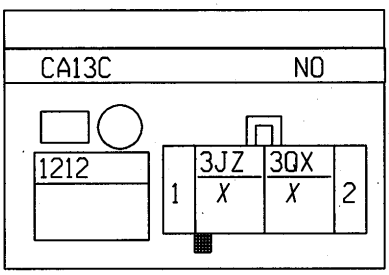


N°	mm²		... → ...
1	.6	3JZ	+ LIQUEFIED PETROLEUM GAS INJECTOR CONTROL
2	.6	3QX	- LPG INJECTOR 1 CONTROL

LPG/NGV INJECTOR 2
K4M712 EQGPL

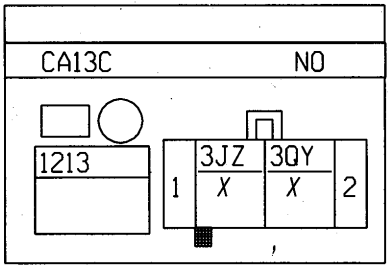


N°	mm²		... → ...
1	.6	3JZ	+ LIQUEFIED PETROLEUM GAS INJECTOR CONTROL
2	.6	3QY	- LPG INJECTOR 2 CONTROL

LPG/NGV INJECTOR 3
K4M712 EQGPL

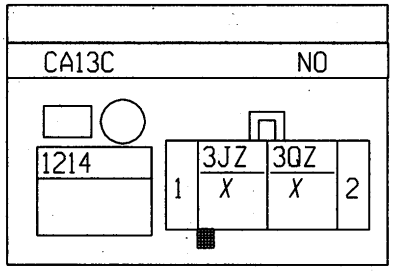


N°	mm²		... ⟶ ...
1	.6	3JZ	+ LIQUEFIED PETROLEUM GAS INJECTOR CONTROL
2	.6	3QZ	- LPG INJECTOR 3 CONTROL

LPG/NGV INJECTOR 4
K4M712 EQGPL

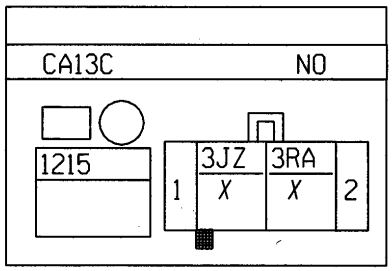


N°	mm²		... ⟶ ...
1	.6	3JZ	+ LIQUEFIED PETROLEUM GAS INJECTOR CONTROL
2	.6	3RA	- LPG INJECTOR 4 CONTROL

FRONT CEILING LIGHT
TO
S7

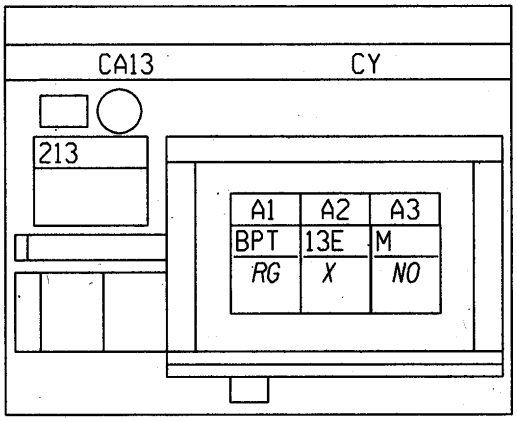


N°	mm²		··· ⟶ ···
1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
2	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
3	.35	M	EARTH

ROOF CONSOLE LIGHT
TN

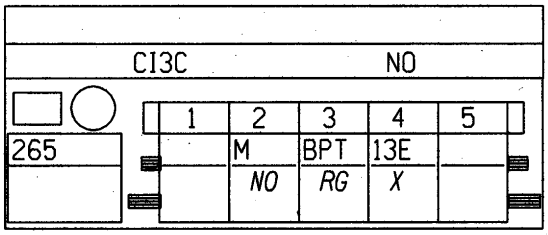

N°	mm²		··· ⟶ ···
	.35	M	EARTH
	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL


SUNROOF
TO
S7

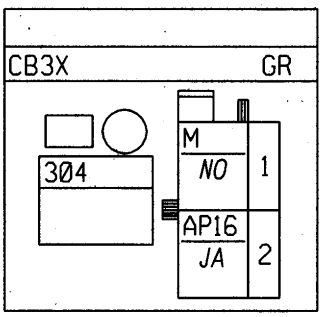

N°	mm²		··· ⟶ ···
1	1.4	M	EARTH
2	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE

FRONT CEILING LIGHT


S7

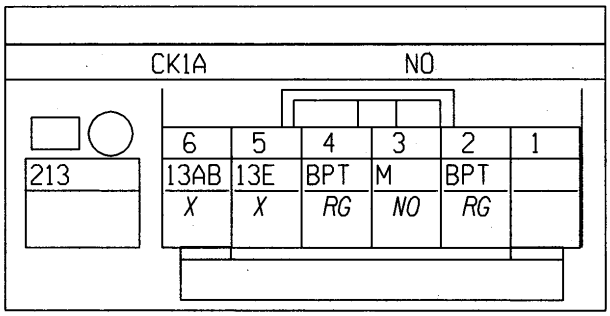

N°	mm²		... ⟶ ...
2	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
3	.35	M	EARTH
4	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
5	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
6	.35	13AB	FRONT LIGHT SUPPLY > INFRARED TRANSMITTER


FRONT READING LIGHT

S4-S7

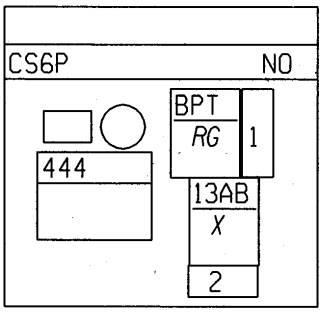


N°	mm²		... ⟶ ...
1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
2	.35	13AB	FRONT LIGHT SUPPLY > INFRARED TRANSMITTER

FRONT READING LIGHT
TO
S4-S7

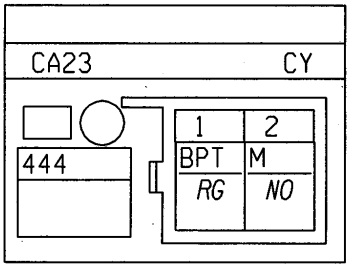

N°	mm²		... → ...
	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
	.35	M	EARTH


OPENING PANEL LOCKING STATUS WARNING LIGHT
TO TN
S7

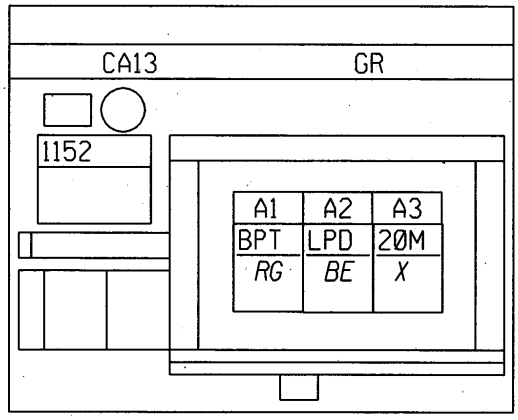

N°	mm²		... → ...
1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
3	.35	20M	DOOR LOCKING LED

STOP SWITCH

K25,V25,B64,D64,S64,L64/F9Q B64,D64,S64,L64,E64/SAUF F9Q

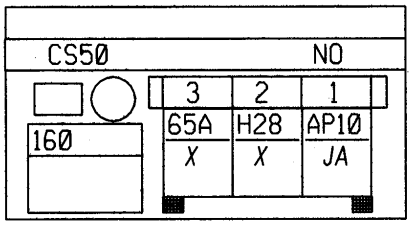


N°	mm²		... → ...
1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
2	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL
3	.6	65A	+ BRAKE LIGHTS CONTROL

MINI BRAKE FLUID

K25,V25,B64,D64,S64,L64/F9Q B64,D64,S64,L64,E64/SAUF F9Q


S1

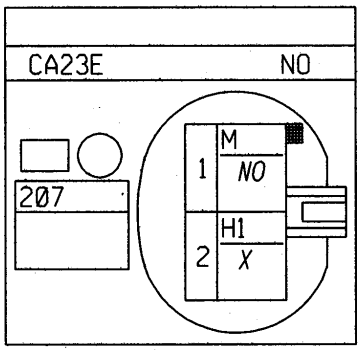

N°	mm²		... → ...
1	.6	M	EARTH
2	.6	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL


CLUTCH PEDAL SWITCH

K25,V25,B64,D64,S64,L64/F9Q

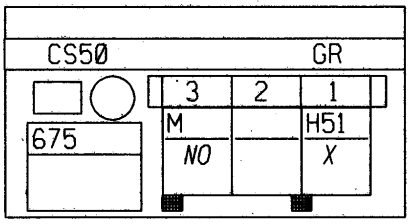


N°	mm²		... → ...
1	.6	H51	LOWER CLUTCH PEDAL
3	.35	M	EARTH

AUTOSUPPLY ALARM SIREN
B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS

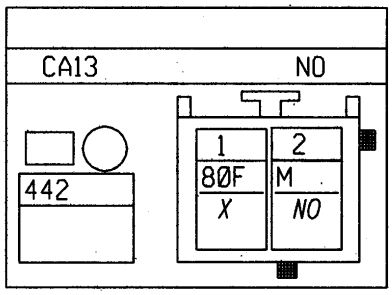

N°	mm²		... → ...
	.6	80F	ALARM SIREN CONTROL
	.6	M	EARTH

AUTOSUPPLY ALARM SIREN
B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS

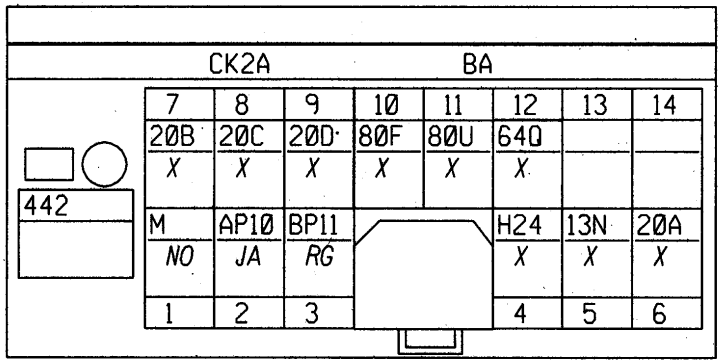


N°	mm²		... → ...
	.6	M	EARTH
	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
	.6	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
	.35	20A	CENTRAL DOOR LOCKING CLOSING TIMER + CONTROL
	.35	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL
	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
0	.6	80F	ALARM SIREN CONTROL
1	.35	80U	ELECTRIC STOP SOLENOID VALVE + CONTROL > VRMT INTR RELAY
2	.35	64Q	- FLASHER UNIT TIME SWITCH CONTROL

FIRST ROW CIGAR LIGHTER

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR

S6-S8

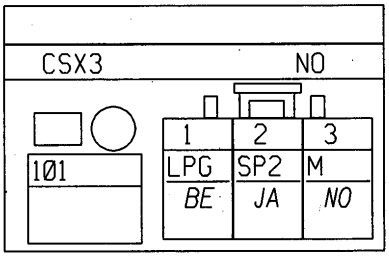


N°	mm²		... ⟶ ...
1	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
2	.6	SP2	+ PROTECTED CONTROL > RADIO >
3	.6	M	EARTH

ANTI-THEFT DEVICE

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR


S4

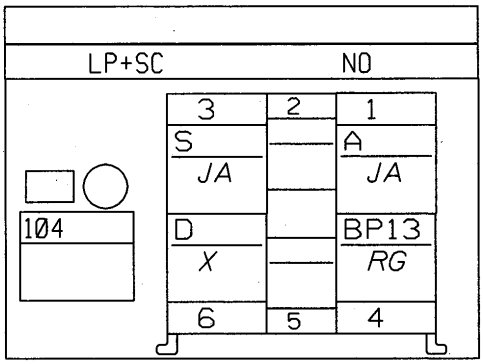

N°	mm²		... ⟶ ...
1	3	A	+ AFTER IGNITION
3	3	S	+ FUSE BOARD FUSE
4	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
6	3	D	+ STARTING

FIRST ROW CIGAR LIGHTER


S6-S8

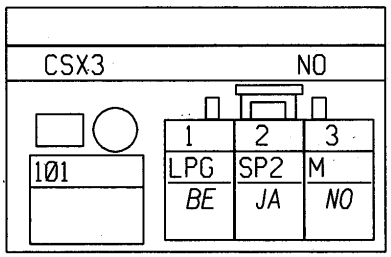

N°	mm²		... → ...
	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
	.6	SP2	+ PROTECTED CONTROL > RADIO >
	.6	M	EARTH

ANTI-THEFT DEVICE

S4

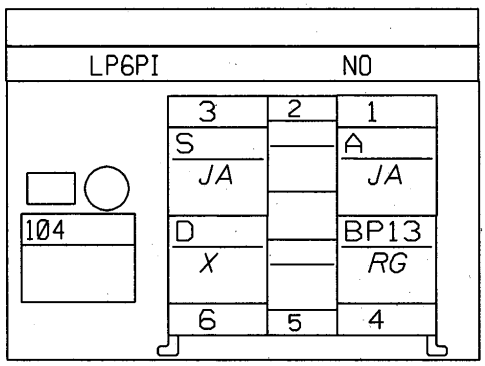


N°	mm²		... → ...
1	3	A	+ AFTER IGNITION
3	3	S	+ FUSE BOARD FUSE
4	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
6	3	D	+ STARTING

FIRST ROW CIGAR LIGHTER

E1

S6-S8

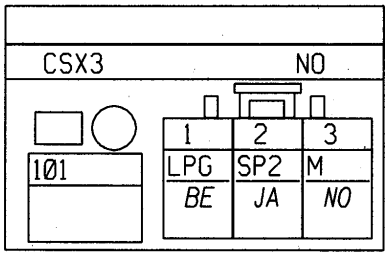


N°	mm²		... ⟶ ...
1	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
2	.6	SP2	+ PROTECTED CONTROL > RADIO >
3	.6	M	EARTH

ANTI-THEFT DEVICE

E1

S4

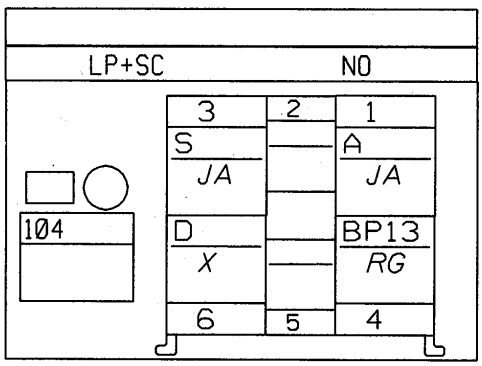


N°	mm²		... ⟶ ...
1	3	A	+ AFTER IGNITION
3	3	S	+ FUSE BOARD FUSE
4	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
6	3	D	+ STARTING

ANTI-THEFT DEVICE

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR

S4

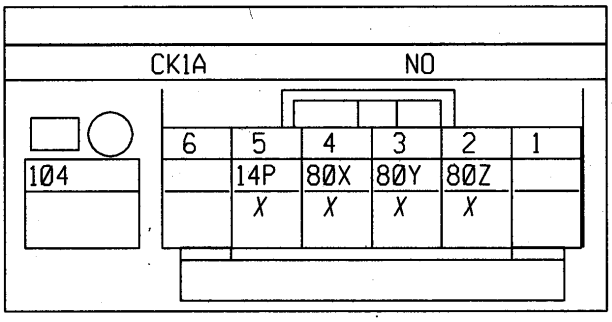


N°	mm²		... ⟶ ...
.35	80Z		+ TRANSPONDER AERIAL
.35	80Y		TRANSPONDER CLOCK SIGNAL
.35	80X		TRANSPONDER ANTENNA BUS SIGNAL
.35	14P		- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER

ELECTRICAL DOOR LOCKING COMMAND

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR


S5

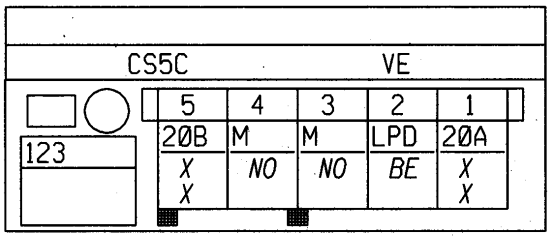

N°	mm²		... ⟶ ...
.35	20A		CENTRAL DOOR LOCKING CLOSING TIMER + CONTROL
.35	20A		CENTRAL DOOR LOCKING CLOSING TIMER + CONTROL
.35	LPD		RIGHT HAND SIDE LIGHT PROTECTED +
.35	M		EARTH
.35	M		EARTH
.35	20B		+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL
.35	20B		+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL

ANTI-THEFT DEVICE


S4

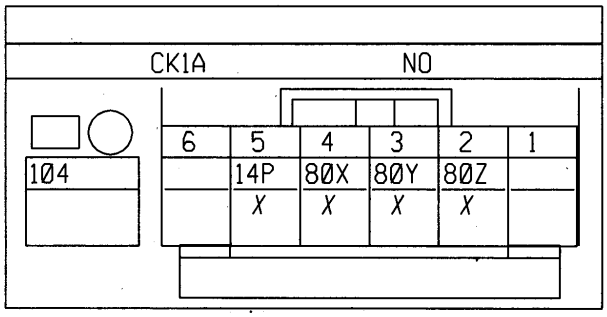

N°	mm²		... ⟶ ...
2	.35	80Z	+ TRANSPONDER AERIAL
3	.35	80Y	TRANSPONDER CLOCK SIGNAL
4	.35	80X	TRANSPONDER ANTENNA BUS SIGNAL
5	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER

ELECTRICAL DOOR LOCKING COMMAND

S5

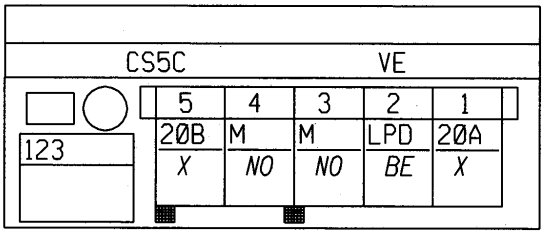


N°	mm²		... ⟶ ...
1	.35	20A	CENTRAL DOOR LOCKING CLOSING TIMER + CONTROL
2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
3	.35	M	EARTH
4	.35	M	EARTH
5	.35	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL

ANTI-THEFT DEVICE

E1

S4

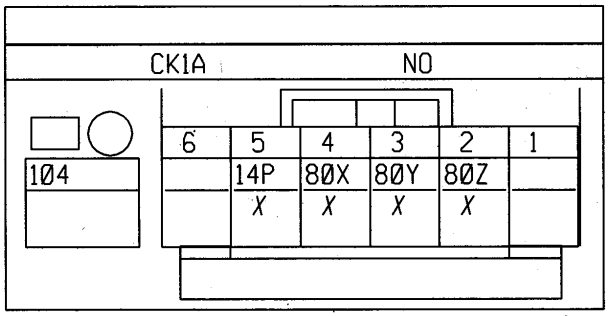


N°	mm²		... ⟶ ...
.35	80Z		+ TRANSPONDER AERIAL
.35	80Y		TRANSPONDER CLOCK SIGNAL
.35	80X		TRANSPONDER ANTENNA BUS SIGNAL
.35	14P		- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER

ELECTRICAL DOOR LOCKING COMMAND

E1

S5

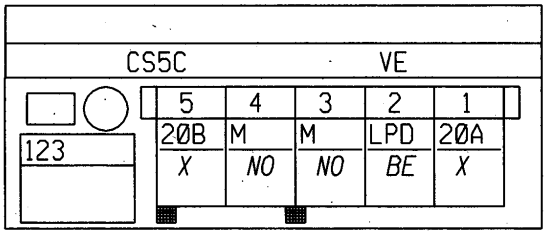


N°	mm²		... ⟶ ...
.35	20A		CENTRAL DOOR LOCKING CLOSING TIMER + CONTROL
.35	LPD		RIGHT HAND SIDE LIGHT PROTECTED +
.35	M		EARTH
.35	M		EARTH
.35	20B		+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL

HAZARD LIGHTS COMMAND

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR

S5

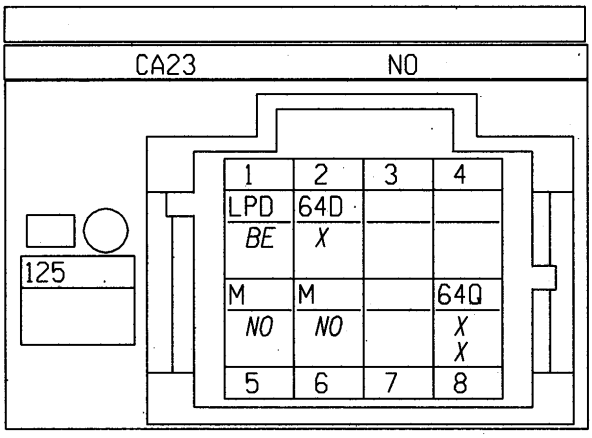


N°	mm²		... ⟶ ...
1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
2	.6	64D	RH FRONT INDICATOR CONTROL
5	.35	M	EARTH
6	.35	M	EARTH
8	.35	64Q	- FLASHER UNIT TIME SWITCH CONTROL
8	.35	64Q	- FLASHER UNIT TIME SWITCH CONTROL

REAR ELECTRIC WINDOW WINDER LOCKING CONTROL

E3 SAUF TUR RUNLI/LAVPH


S5

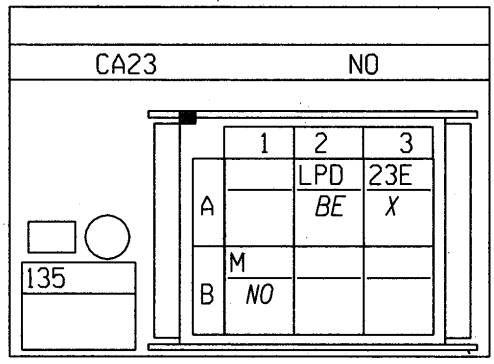

N°	mm²		... ⟶ ...
B1	.35	M	EARTH
A2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
A3	.35	23E	REAR LOCKING FUNCTION RELAY COIL CONTROL

HAZARD LIGHTS COMMAND


S5

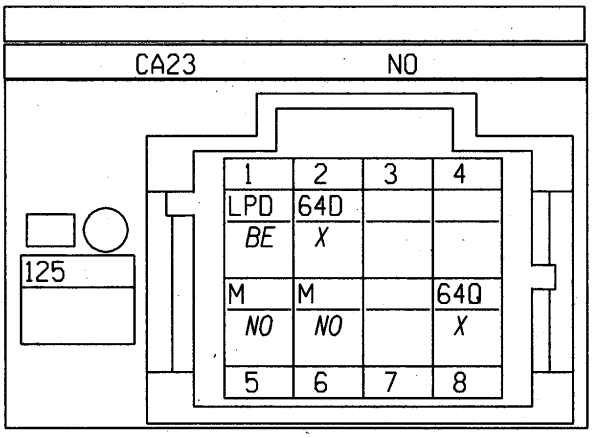

N°	mm²		... → ...
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	.6	64D	RH FRONT INDICATOR CONTROL
	.35	M	EARTH
	.35	M	EARTH
	.35	64Q	- FLASHER UNIT TIME SWITCH CONTROL

REAR ELECTRIC WINDOW WINDER LOCKING CONTROL

S5

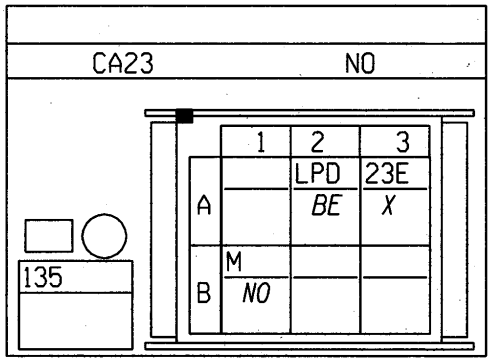


N°	mm²		... → ...
1	.35	M	EARTH
2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
3	.35	23E	REAR LOCKING FUNCTION RELAY COIL CONTROL

HAZARD LIGHTS COMMAND

E1

S5

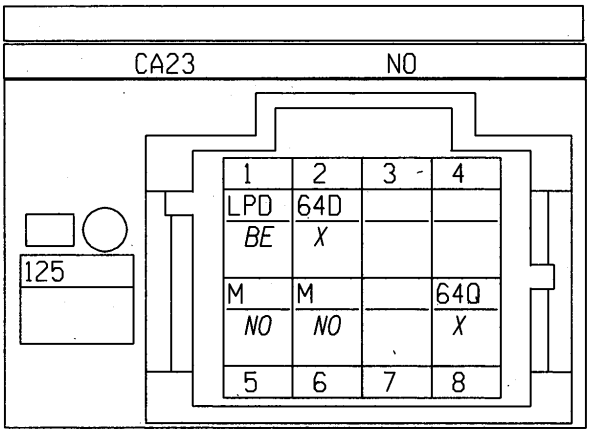


N°	mm²		··· ⟶ ···
1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
2	.6	64D	RH FRONT INDICATOR CONTROL
5	.35	M	EARTH
6	.35	M	EARTH
8	.35	64Q	- FLASHER UNIT TIME SWITCH CONTROL

COMBINED WIPER-WASHER

E1

S4

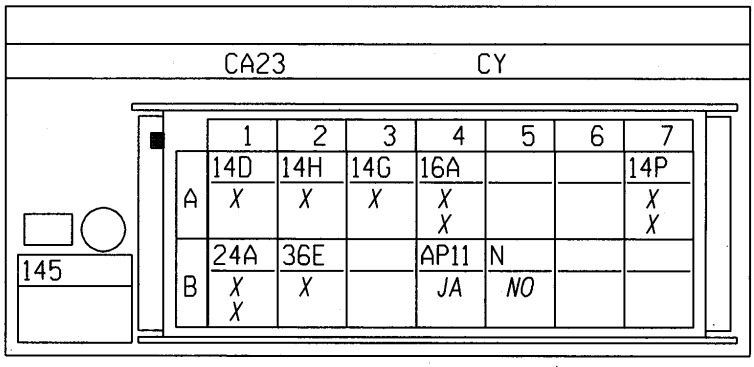


N°	mm²		··· ⟶ ···
A1	.35	14D	LOW SPEED - WINDSCREEN WIPER TIME SWITCH CONTROL
B1	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
B1	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
A2	.35	14H	FRONT HIGH SPEED WIPER > COMPUTER CONTROL
B2	.35	36E	+ REAR SCREEN WIPE TIME SWITCH CONTROL
A3	.35	14G	FRONT LOW SPEED WIPER > COMPUTER CONTROL
A4	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
A4	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
B4	.35	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
B5	.6	N	ELECTRONIC EARTH
A7	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
A7	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER

COMBINED WIPER-WASHER

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR

S4

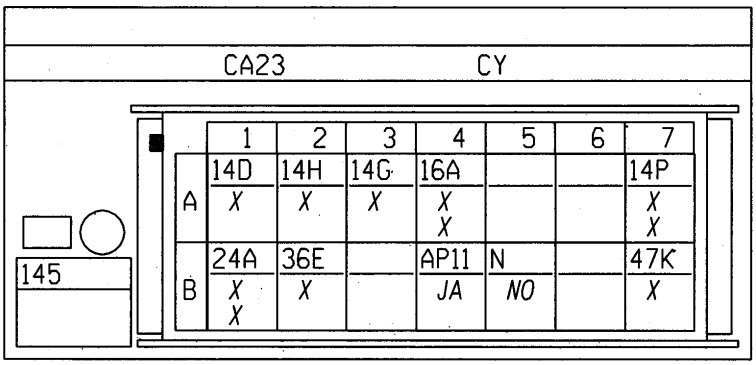


N°	mm²		... → ...
	.35	14D	LOW SPEED - WINDSCREEN WIPER TIME SWITCH CONTROL
	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
2	.35	14H	FRONT HIGH SPEED WIPER > COMPUTER CONTROL
2	.35	36E	+ REAR SCREEN WIPE TIME SWITCH CONTROL
3	.35	14G	FRONT LOW SPEED WIPER > COMPUTER CONTROL
4	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
4	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
4	.35	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
5	.6	N	ELECTRONIC EARTH
7	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
7	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
7	.35	47K	- DRIVING ASSISTANCE DISPLAY CONTROL

PASSENGER STORAGE COMPARTMENT LIGHT

B64/L64/E2,E3/MERCOS


S6

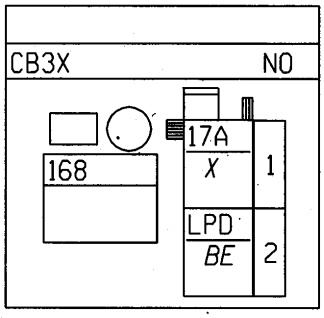

N°	mm²		... → ...
	.35	17A	- GLOVE COMPARTMENT LIGHTING CONTROL
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +

COMBINED WIPER-WASHER


S4

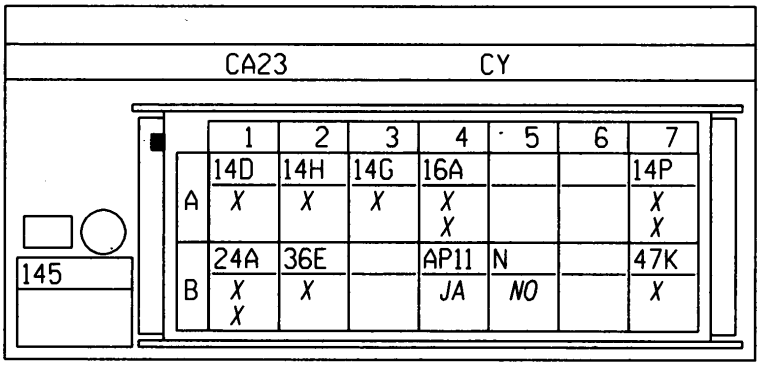

N°	mm²		... → ...
A1	.35	14D	LOW SPEED - WINDSCREEN WIPER TIME SWITCH CONTROL
B1	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
B1	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
A2	.35	14II	FRONT IIIGII SPEED WIPER > COMPUTER CONTROL
B2	.35	36E	+ REAR SCREEN WIPE TIME SWITCH CONTROL
A3	.35	14G	FRONT LOW SPEED WIPER > COMPUTER CONTROL
A4	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
A4	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
B4	.35	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
B5	.6	N	ELECTRONIC EARTH
A7	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
A7	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
B7	.35	47K	- DRIVING ASSISTANCE DISPLAY CONTROL


PASSENGER STORAGE COMPARTMENT LIGHT

S6

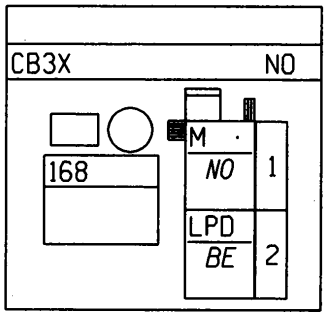


N°	mm²		... → ...
1	.35	M	EARTH
2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +

PASSENGER STORAGE COMPARTMENT LIGHT
K25,L64/TUR E3 SAUF TUR RUNLI/LAVPH
S6

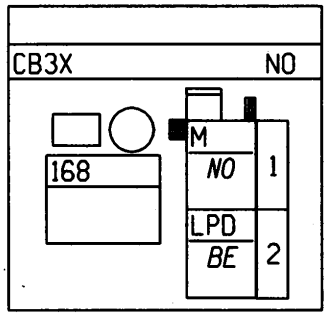

N°	mm²		... → ...
	.35	M	EARTH
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +

MONOLEVER
E3 SAUF TUR RUNLI/LAVPH
S4

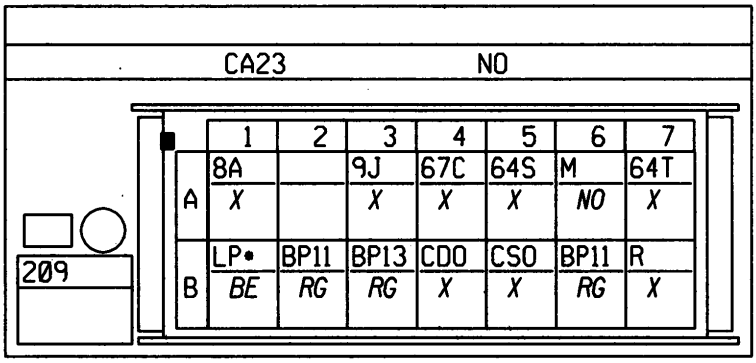


N°	mm²		... → ...
.1	2	8A	FOG LIGHTS + RELAY
1	2	LP*	SIDE LIGHT UNALLOCATED PROTECTED +
2	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
.3	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
3	2	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
.4	2	67C	+ HORN FUSE CONTROL
4	2	CDO	+ DIPPED HEADLIGHT - DUAL HEADLIGHT
.5	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
5	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
.6	.35	M	EARTH
6	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
.7	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
7	2	R	+ MAIN BEAM HEADLIGHTS

PASSENGER STORAGE COMPARTMENT LIGHT

E1

S6

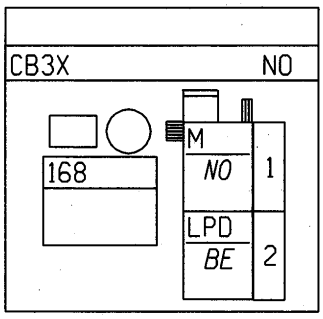


N°	mm²		··· → ···
1	.35	M	EARTH
2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +

MONOLEVER


E1

S4

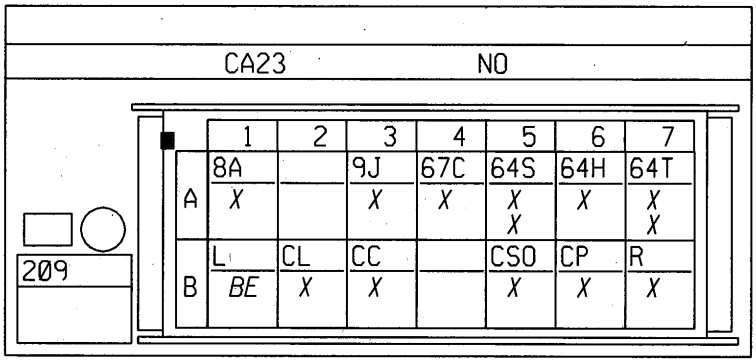


N°	mm²		··· → ···
A1	2	8A	FOG LIGHTS + RELAY
B1	2	L	SIDE LIGHT +
B2	2	CL	+ SIDE LIGHTS SWITCH CONTROL MONITOR
A3	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
B3	2	CC	+ DIPPED HEADLIGHTS SWITCH CONTROL MONITOR
A4	2	67C	+ HORN FUSE CONTROL
A5	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
A5	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
B5	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
A6	.35	64H	FLASHER - > MONITOR CONTROL
B6	2	CP	+ HEADLIGHTS SWITCH CONTROL MONITOR
A7	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
A7	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
B7	2	R	+ MAIN BEAM HEADLIGHTS

MONOLEVER
K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS
S4

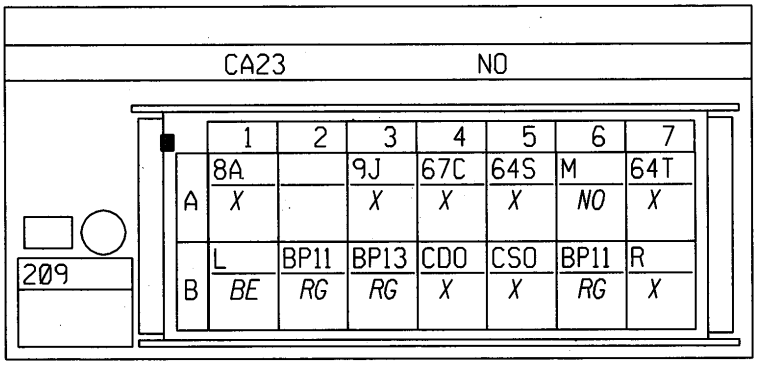

N°	mm²		... → ...
31	2	L	SIDE LIGIIT +
32	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
A3	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
33	2	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
A4	2	67C	+ HORN FUSE CONTROL
34	2	CDO	+ DIPPED HEADLIGHT - DUAL HEADLIGHT
A5	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
A6	.35	M	EARTH
36	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
A7	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
37	2	R	+ MAIN BEAM HEADLIGHTS
A1	2	8A	FOG LIGHTS + RELAY
35	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS


DIGITAL OR ANALOGUE CLOCK
K25,L64/TUR
S5

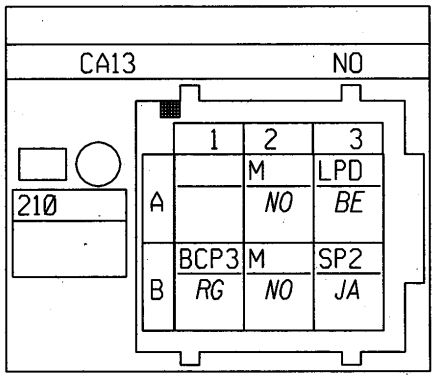

N°	mm²		... → ...
31	2	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
A2	.35	M	EARTH
32	.35	M	EARTH
A3	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
33	.35	SP2	+ PROTECTED CONTROL > RADIO >

MONOLEVER


S4

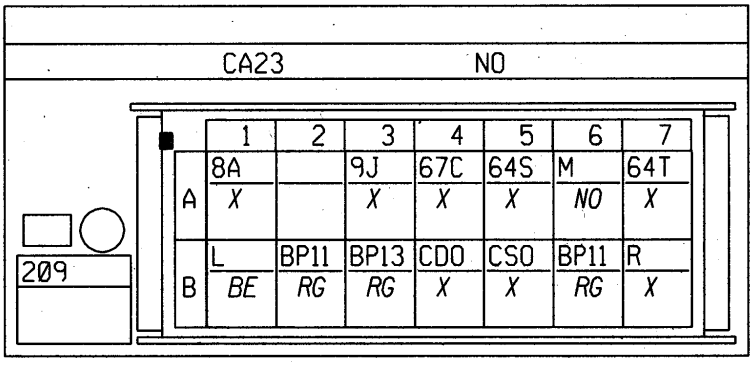

N°	mm²	⟿	... ⟶ ...
A1	2	8A	FOG LIGHTS + RELAY
B1	2	L	SIDE LIGHT +
B2	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
A3	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
B3	2	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
A4	2	67C	+ HORN FUSE CONTROL
B4	2	CDO	+ DIPPED HEADLIGHT - DUAL HEADLIGHT
A5	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
B5	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
A6	.35	M	EARTH
B6	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
A7	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
B7	2	R	+ MAIN BEAM HEADLIGHTS


DIAGNOSTICS SOCKET

S1-S4

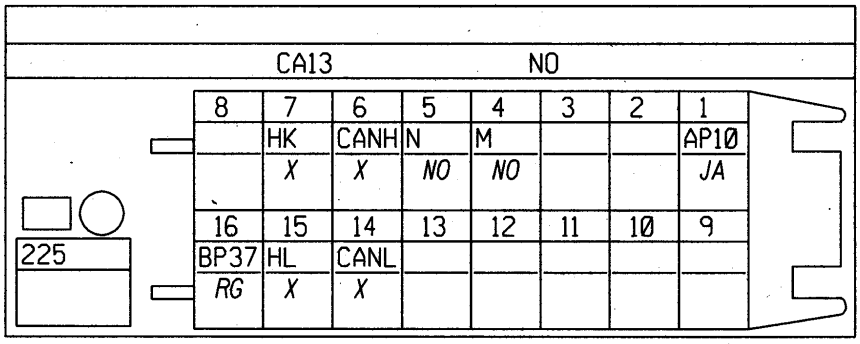


N°	mm²	⟿	... ⟶ ...
1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
4	.35	M	EARTH
5	.35	N	ELECTRONIC EARTH
6	.35	CANH	CAN DIAGNOSTIC SIGNAL H
7	.35	HK	DIAGNOSTIC SIGNAL K
14	.35	CANL	CAN DIAGNOSTIC SIGNAL L
15	.35	HL	DIAGNOSTIC SIGNAL L
16	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING

MONOLEVER
E1
S4

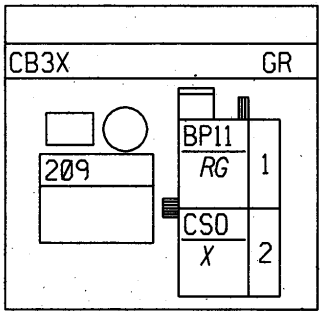

N°	mm²		... → ...
2	BP11		PROTECTED BATTERY > PASSENGER COMPARTMENT 1
2	CSO		+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS

WINDSCREEN WIPER MOTOR
E1
S2

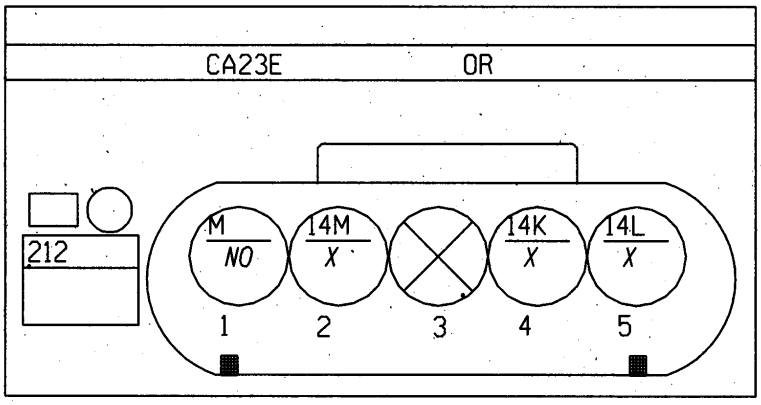


N°	mm²		... → ...
1.4	M		EARTH
.35	14M		FRONT WIPER PARK POSITION > COMPUTER CONTROL
1	14K		+ FRONT LOW SPEED WIPER TIMER CONTROL
1.4	14L		+ FRONT HIGH SPEED WIPER TIMER CONTROL

WINDSCREEN WIPER MOTOR

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR

S2

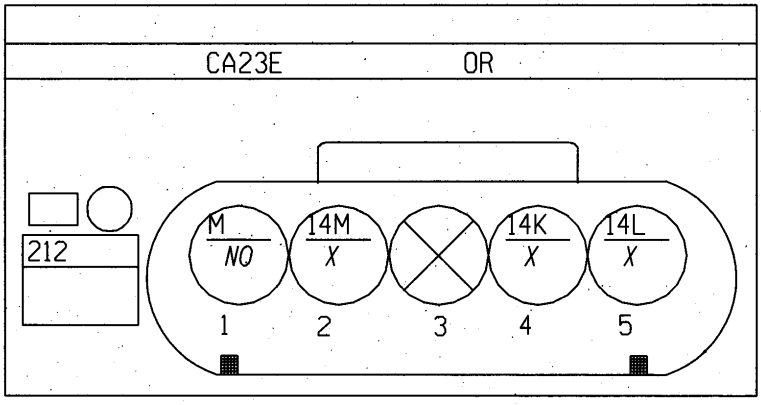


N°	mm²		··· ⟶ ···
1	1.4	M	EARTH
2	.35	14M	FRONT WIPER PARK POSITION > COMPUTER CONTROL
4	1	14K	+ FRONT LOW SPEED WIPER TIMER CONTROL
5	1.4	14L	+ FRONT HIGH SPEED WIPER TIMER CONTROL

HEADLIGHT WASHER PUMP

E3 SAUF TUR RUNLI/LAVPH

S1

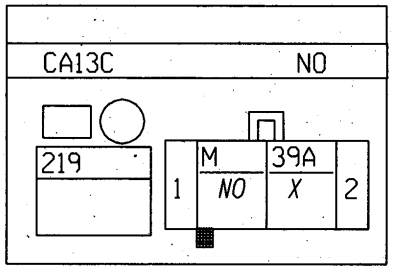


N°	mm²		··· ⟶ ···
1	1	M	EARTH
2	1	39A	+ HEADLIGHT WASHER PUMP CONTROL

DIAGNOSTICS SOCKET

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR

S1-S4

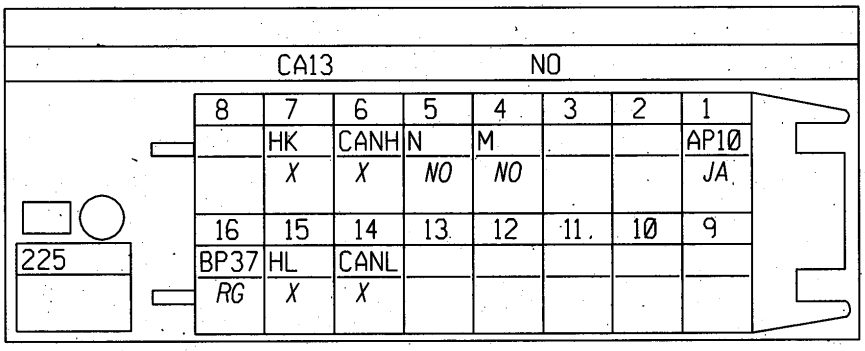


N°	mm²		... → ...
	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
	.35	M	EARTH
	.35	N	ELECTRONIC EARTH
	.35	HK	DIAGNOSTIC SIGNAL K
	.35	HL	DIAGNOSTIC SIGNAL L
	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
	.35	CANH	CAN DIAGNOSTIC SIGNAL H
	.35	CANL	CAN DIAGNOSTIC SIGNAL L

FRONT FOG RELAY


B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR RUNLI/LAVPH

S6

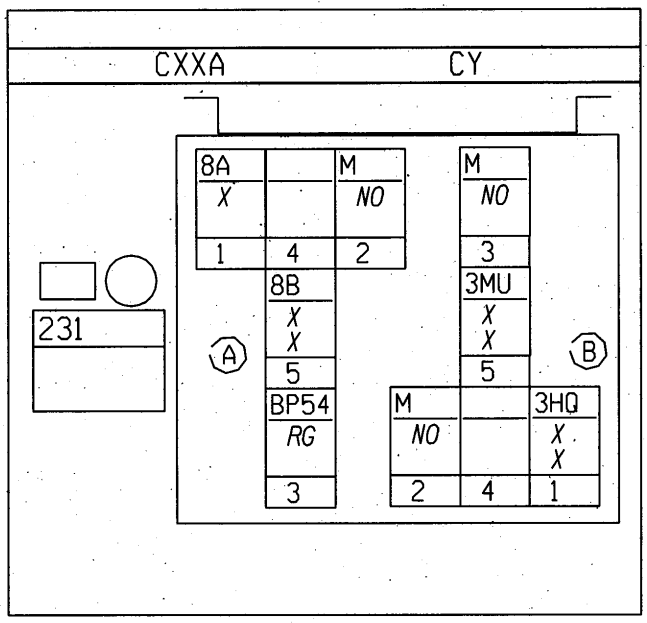


N°	mm²		... → ...
	2	8A	FOG LIGHTS + RELAY
	1	M	EARTH
	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
	.35	8B	+ FRONT FOG LIGHTS > RELAY
	1	8B	+ FRONT FOG LIGHTS > RELAY
	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
	.35	M	EARTH
	.6	M	EARTH
	.35	3MU	LPG FAULT WARNING LIGHT CONTROL
	.6	3MU	LPG FAULT WARNING LIGHT CONTROL

DIAGNOSTICS SOCKET
E1
S1-S4

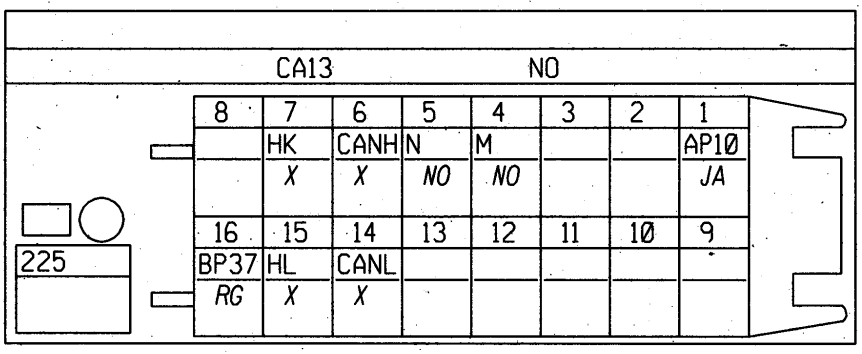

N°	mm²		... ⟶ ...
1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
4	.35	M	EARTH
5	.35	N	ELECTRONIC EARTH
6	.35	CANH	CAN DIAGNOSTIC SIGNAL H
7	.35	HK	DIAGNOSTIC SIGNAL K
14	.35	CANL	CAN DIAGNOSTIC SIGNAL L
15	.35	HL	DIAGNOSTIC SIGNAL L
16	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING


FRONT FOG RELAY
E1
S6

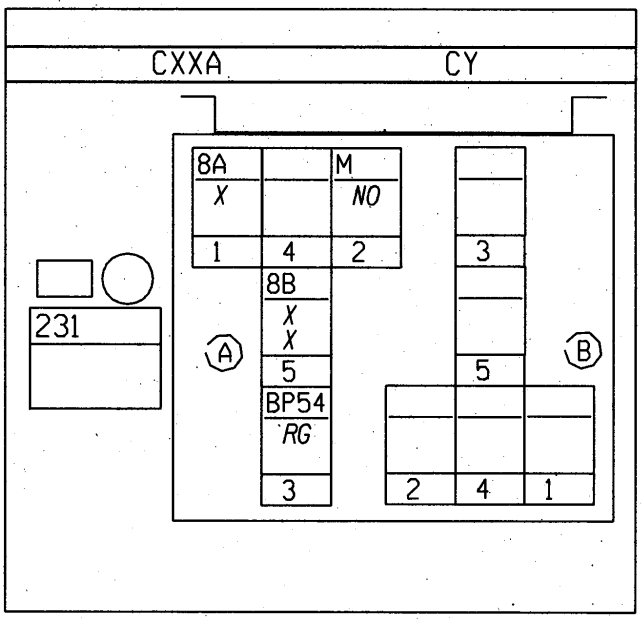

N°	mm²		... ⟶ ...
A1	2	8A	FOG LIGHTS + RELAY
A2	1	M	EARTH
A3	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
A5	.35	8B	+ FRONT FOG LIGHTS > RELAY
A5	1	8B	+ FRONT FOG LIGHTS > RELAY

FRONT FOG RELAY


S6

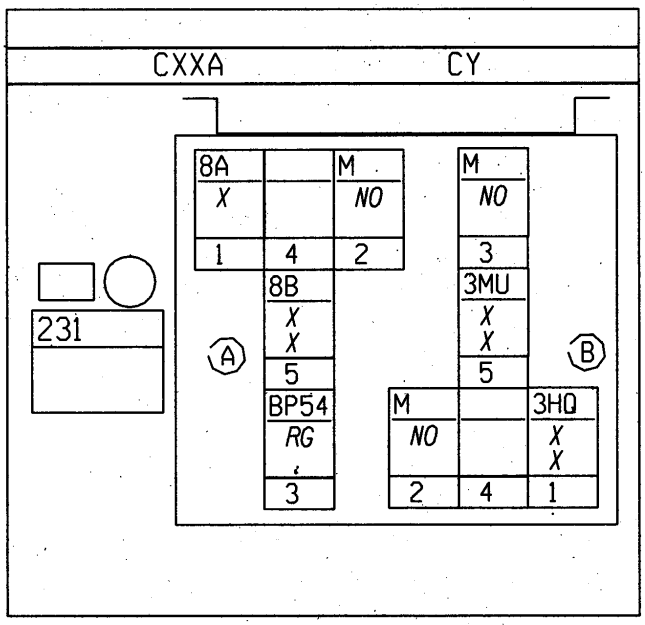

N°	mm²		... ⟶ ...
	2	8A	FOG LIGHTS + RELAY
	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
	1	M	EARTH
	.35	M	EARTH
	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
	.6	M	EARTH
	.35	8B	+ FRONT FOG LIGHTS > RELAY
	1	8B	+ FRONT FOG LIGHTS > RELAY
	.35	3MU	LPG FAULT WARNING LIGHT CONTROL
	.6	3MU	LPG FAULT WARNING LIGHT CONTROL

LIGHTING RHEOSTAT

S4

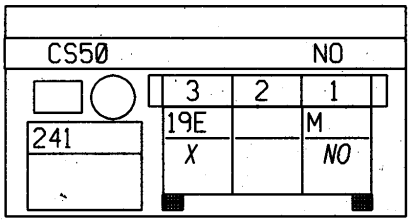


N°	mm²		... ⟶ ...
	.35	M	EARTH
	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL

LIGHTING RHEOSTAT

B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR RUNLI/LAVPH

S4

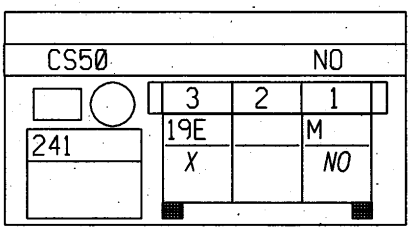


N°	mm²		... → ...
1	.35	M	EARTH
3	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL

INSTRUMENT PANEL


K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS

S4-S5

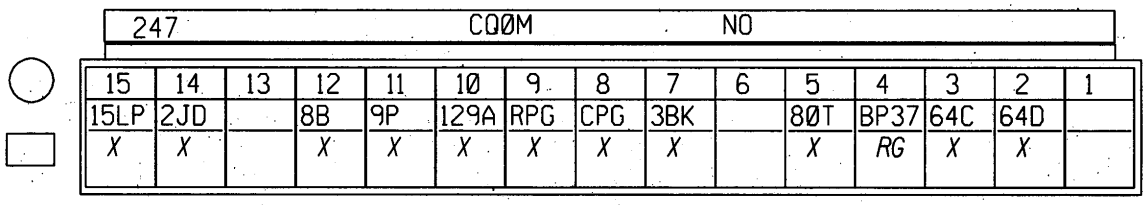


N°	mm²		... → ...
2	.35	64D	RH FRONT INDICATOR CONTROL
3	.35	64C	LH INDICATOR CONTROL
4	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
5	.35	80T	SOFTWARE LOCK INDICATOR LIGHT - CONTROL
7	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
8	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
9	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
10	.35	129A	- AIRBAG FAULT WARNING LIGHT CONTROL
11	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
14	.35	2JD	+ ALTERNATOR EXCITATION
15	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
12	.35	8B	+ FRONT FOG LIGHTS > RELAY

INSTRUMENT PANEL
E3 SAUF TUR RUNLI/LAVPH
S4-S5

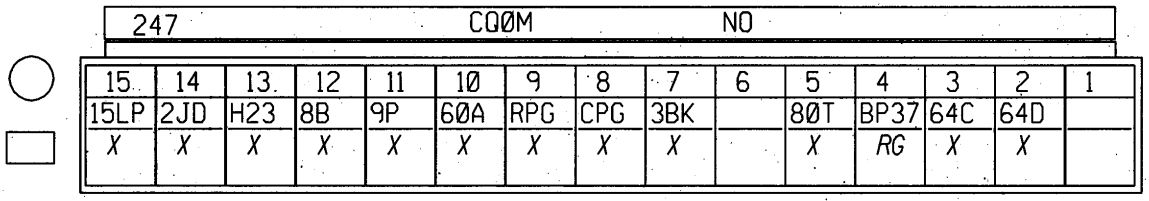


N°	mm²		... → ...
	.35	64D	RH FRONT INDICATOR CONTROL
	.35	64C	LH INDICATOR CONTROL
	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
	.35	80T	SOFTWARE LOCK INDICATOR LIGHT - CONTROL
	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
	.35	60A	-EUROBAG FAULT WARNING LIGHT
	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
	.35	8B	+ FRONT FOG LIGHTS > RELAY
	.6	H23	MINIMUM HEADLIGHT WASHER > WINDSCREEN WASHER WARNING LIGHT CONTROL
	.35	2JD	+ ALTERNATOR EXCITATION
	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL

INSTRUMENT PANEL
K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS
S4-S5

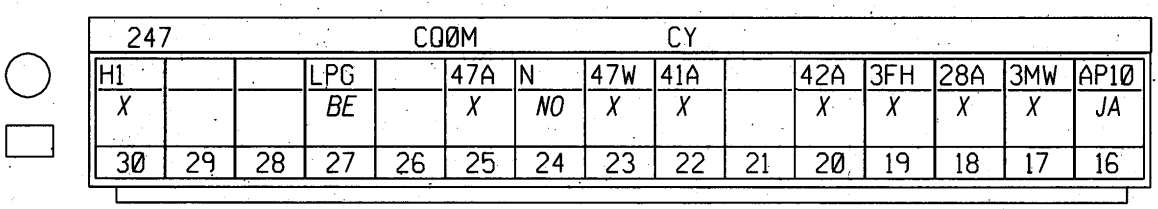


N°	mm²		... → ...
	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
	.35	42A	SIGNAL+ COOLANT TEMPERATURE
	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
	.35	47W	SECONDARY SPEED SIGNAL
	.35	N	ELECTRONIC EARTH
	.35	47A	- FUEL LEVEL GAUGE >
	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL

INSTRUMENT PANEL
E3 SAUF TUR RUNLI/LAVPH
S4-S5

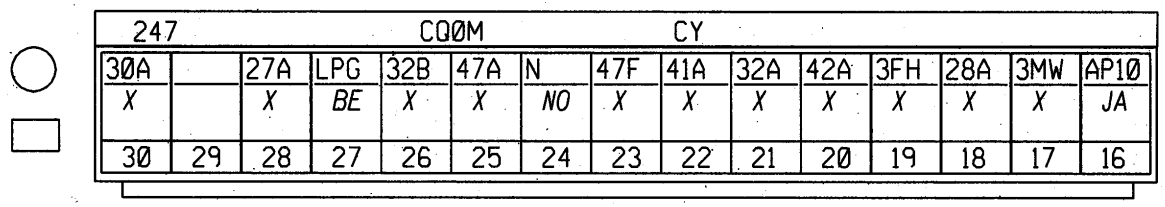


N°	mm²		... → ...
16	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
17	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
18	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
19	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
20	.35	42A	SIGNAL+ COOLANT TEMPERATURE
21	.35	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
22	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
23	.35	47F	VEHICLE SPEED SIGNAL
24	.35	N	ELECTRONIC EARTH
25	.35	47A	- FUEL LEVEL GAUGE >
26	.35	32B	OIL LEVEL SENSOR - OIL SIGNAL 1
27	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
28	.35	27A	- HANDBRAKE WARNING LIGHT CONTROL
30	.35	30A	NIVOCODE WARNING LIGHT - CONTROL

INSTRUMENT PANEL
B64/L64/E2,E3/MERCOS E3 SAUF TUR RUNLI/LAVPH
S4-S5

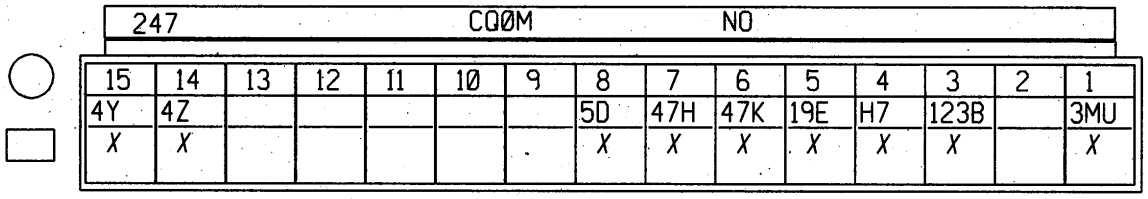


N°	mm²		... → ...
4	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
5	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
6	.35	47K	- DRIVING ASSISTANCE DISPLAY CONTROL
7	.35	47H	FUEL FLOW RATE SIGNAL
14	.35	4Z	- ABS WARNING LIGHT
15	.35	4Y	- BRAKE FAULT WARNING LIGHT
1	.6	3MU	LPG FAULT WARNING LIGHT CONTROL
3	.35	123B	- LEFT-HAND HEATED SCREEN TIMER CONTROL
8	.35	5D	- AUTOMATIC TRANSMISSION FAULT WARNING LIGHT CONTROL

INSTRUMENT PANEL
K25,L64/TUR B64,L64/E1/MERCOS
S4-S5

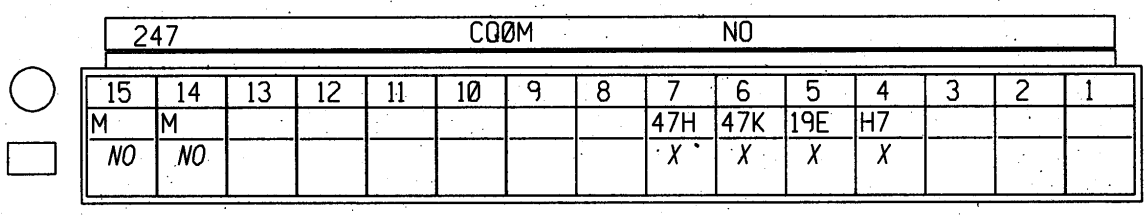

N°	mm²		... ⟶ ...
	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
	.35	M	EARTH
	.35	M	EARTH
	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
	.35	47K	- DRIVING ASSISTANCE DISPLAY CONTROL
	.35	47H	FUEL FLOW RATE SIGNAL


RADIO
K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS
S4

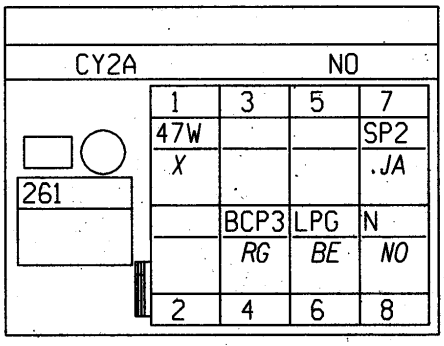

N°	mm²		... ⟶ ...
	.35	47W	SECONDARY SPEED SIGNAL
	1	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
	1	SP2	+ PROTECTED CONTROL > RADIO >
	3	N	ELECTRONIC EARTH

INSTRUMENT PANEL


S4-S5

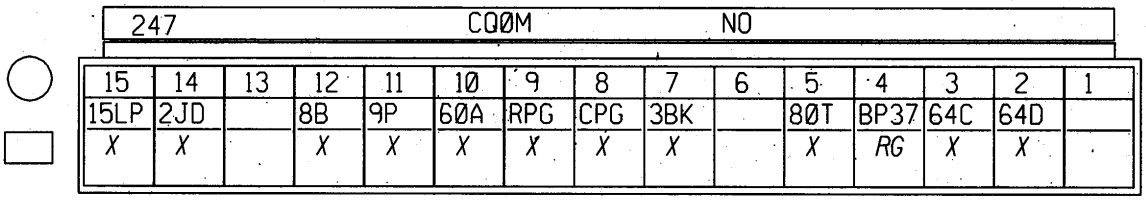

N°	mm²		··· ⟶ ···
2	.35	64D	RH FRONT INDICATOR CONTROL
3	.35	64C	LH INDICATOR CONTROL
4	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
5	.35	80T	SOFTWARE LOCK INDICATOR LIGHT - CONTROL
7	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
8	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
9	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
10	.35	60A	-EUROBAG FAULT WARNING LIGHT
11	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
12	.35	8B	+ FRONT FOG LIGHTS > RELAY
14	.35	2JD	+ ALTERNATOR EXCITATION
15	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL

INSTRUMENT PANEL


S4-S5

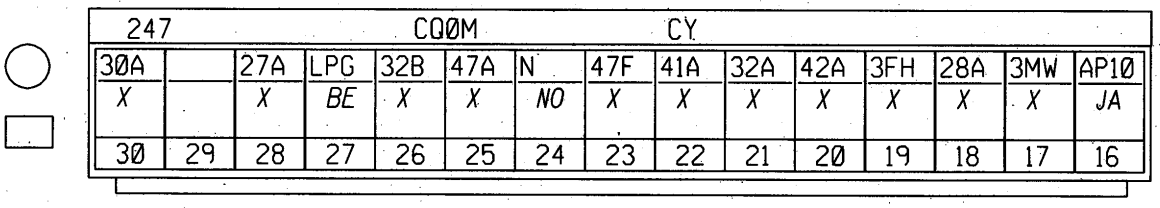

N°	mm²		··· ⟶ ···
16	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
17	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
18	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
19	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
20	.35	42A	SIGNAL+ COOLANT TEMPERATURE
21	.35	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
22	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
23	.35	47F	VEHICLE SPEED SIGNAL
24	.35	N	ELECTRONIC EARTH
25	.35	47A	- FUEL LEVEL GAUGE >
26	.35	32B	OIL LEVEL SENSOR - OIL SIGNAL 1
27	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
28	.35	27A	- HANDBRAKE WARNING LIGHT CONTROL
30	.35	30A	NIVOCODE WARNING LIGHT - CONTROL

INSTRUMENT PANEL


S4-S5

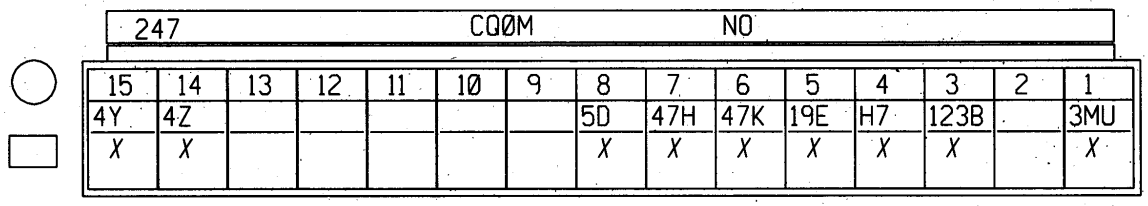

N°	mm²		... → ...
	.6	3MU	LPG FAULT WARNING LIGHT CONTROL
	.35	123B	- LEFT-HAND HEATED SCREEN TIMER CONTROL
	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
	.35	47K	- DRIVING ASSISTANCE DISPLAY CONTROL
	.35	47H	FUEL FLOW RATE SIGNAL
	.35	5D	- AUTOMATIC TRANSMISSION FAULT WARNING LIGHT CONTROL
	.35	4Z	- ABS WARNING LIGHT
	.35	4Y	- BRAKE FAULT WARNING LIGHT


RADIO

S4

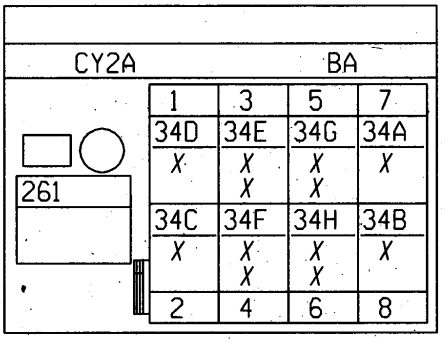

N°	mm²		... → ...
	1	34D	SIGNAL+ RH REAR SPEAKER
	1	34C	SIGNAL- RH REAR SPEAKER
	.6	34E	SIGNAL+ RH FRONT SPEAKER
	1	34E	SIGNAL+ RH FRONT SPEAKER
	.6	34F	SIGNAL- RH FRONT SPEAKER
	1	34F	SIGNAL- RH FRONT SPEAKER
	.6	34G	SIGNAL+ LH FRONT SPEAKERS
	1	34G	SIGNAL+ LH FRONT SPEAKERS
	.6	34H	SIGNAL- LH FRONT SPEAKER
	1	34H	SIGNAL- LH FRONT SPEAKER
	1	34A	SIGNAL+ LH REAR SPEAKER
	1	34B	SIGNAL- LH REAR SPEAKER


INSTRUMENT PANEL
E1
S4-S5

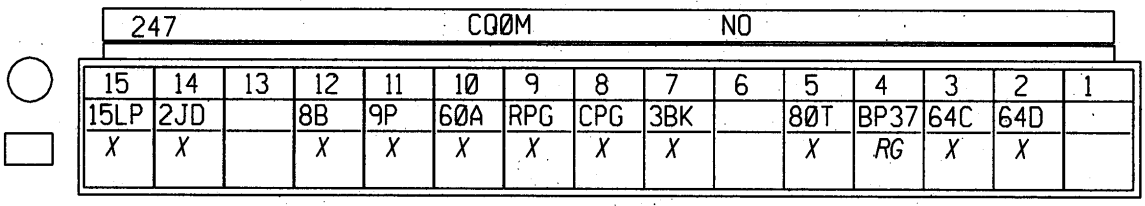

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
15LP	2JD		8B	9P	60A	RPG	CPG	3BK		80T	BP37	64C	64D	
X	X		X	X	X	X	X	X		X	RG	X	X	

N°	mm²		... → ...
2	.35	64D	RH FRONT INDICATOR CONTROL
3	.35	64C	LH INDICATOR CONTROL
4	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
5	.35	80T	SOFTWARE LOCK INDICATOR LIGHT - CONTROL
7	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
8	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
9	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
10	.35	60A	-EUROBAG FAULT WARNING LIGHT
11	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
12	.35	8B	+ FRONT FOG LIGHTS > RELAY
14	.35	2JD	+ ALTERNATOR EXCITATION
15	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL


INSTRUMENT PANEL
E1
S4-S5

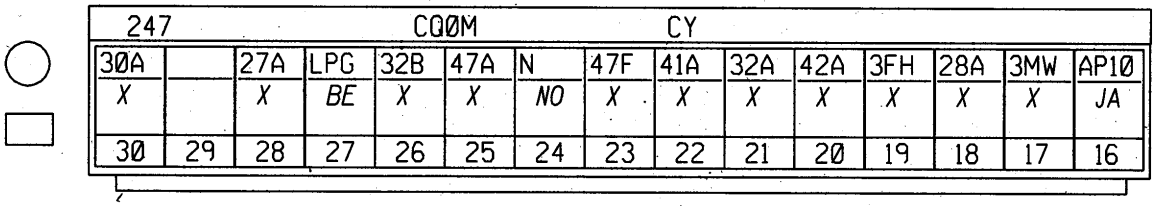

30A		27A	LPG	32B	47A	N	47F	41A	32A	42A	3FH	28A	3MW	AP10
X		X	BE	X	X	NO	X	X	X	X	X	X	X	JA
30	29	28	27	26	25	24	23	22	21	20	19	18	17	16


N°	mm²		... → ...
16	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
17	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
18	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
19	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
20	.35	42A	SIGNAL+ COOLANT TEMPERATURE
21	.35	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
22	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
23	.35	47F	VEHICLE SPEED SIGNAL
24	.35	N	ELECTRONIC EARTH
25	.35	47A	- FUEL LEVEL GAUGE >
26	.35	32B	OIL LEVEL SENSOR - OIL SIGNAL 1
27	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
28	.35	27A	- HANDBRAKE WARNING LIGHT CONTROL
30	.35	30A	NIVOCODE WARNING LIGHT - CONTROL

INSTRUMENT PANEL
E1
S4-S5

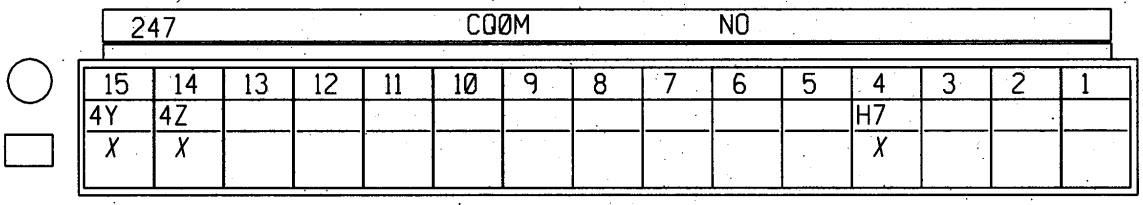


N°	mm²		... ⟶ ...
	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
	.35	4Z	- ABS WARNING LIGHT
	.35	4Y	- BRAKE FAULT WARNING LIGHT

RADIO
E1
S4

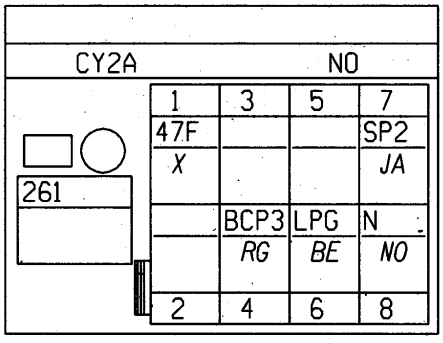


N°	mm²		... ⟶ ...
	.35	47F	VEHICLE SPEED SIGNAL
	1	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
	1	SP2	+ PROTECTED CONTROL > RADIO >
	3	N	ELECTRONIC EARTH

RADIO
RUNLI/LAVPH
S4

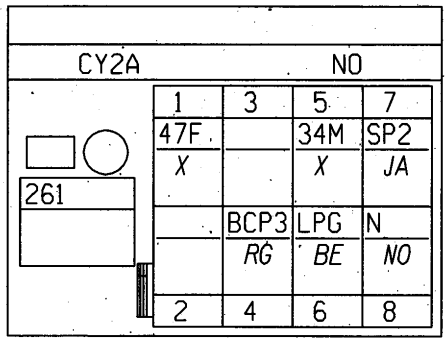


N°	mm²		··· ⟶ ···
1	.35	47F	VEHICLE SPEED SIGNAL
4	1	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
5	.35	34M	+ ANTENNA CONTROL
6	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
7	1	SP2	+ PROTECTED CONTROL > RADIO >
8	3	N	ELECTRONIC EARTH

RADIO
K25,L64/TUR B64/L64/E2,E3/MERCOS E3 SAUF TUR RUNLI/LAVPH
S4

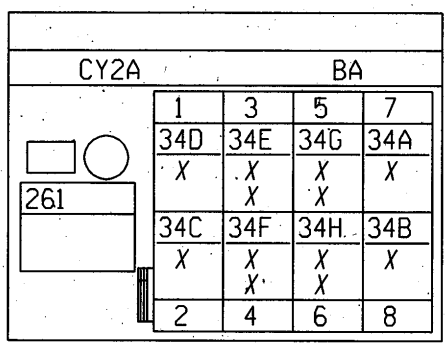


N°	mm²		··· ⟶ ···
1	1	34D	SIGNAL+ RH REAR SPEAKER
2	1	34C	SIGNAL- RH REAR SPEAKER
3	.6	34E	SIGNAL+ RH FRONT SPEAKER
3	1	34E	SIGNAL+ RH FRONT SPEAKER
4	.6	34F	SIGNAL- RH FRONT SPEAKER
4	1	34F	SIGNAL- RH FRONT SPEAKER
5	.6	34G	SIGNAL+ LH FRONT SPEAKERS
5	1	34G	SIGNAL+ LH FRONT SPEAKERS
6	.6	34H	SIGNAL- LH FRONT SPEAKER
6	1	34H	SIGNAL- LH FRONT SPEAKER
7	1	34A	SIGNAL+ LH REAR SPEAKER
8	1	34B	SIGNAL- LH REAR SPEAKER

RADIO
B64,L64/E1/MERCOS
S4

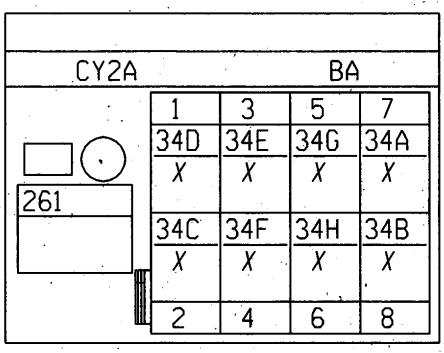

N°	mm²		... → ...
	1	34D	SIGNAL+ RH REAR SPEAKER
	1	34C	SIGNAL- RH REAR SPEAKER
	1	34E	SIGNAL+ RH FRONT SPEAKER
	1	34F	SIGNAL- RH FRONT SPEAKER
	1	34G	SIGNAL+ LH FRONT SPEAKERS
	1	34H	SIGNAL- LH FRONT SPEAKER
	1	34A	SIGNAL+ LH REAR SPEAKER
	1	34B	SIGNAL- LH REAR SPEAKER


RADIO
E3 SAUF TUR
S4

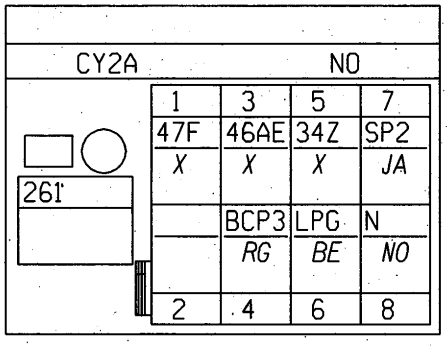

N°	mm²		... → ...
1	.35	47F	VEHICLE SPEED SIGNAL
3	.6	46AE	RADIO COMMUNICATION INTERFACE CASING > RADIO DAMPING
4	1	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
5	.35	34Z	RADIO OPERATION SIGNAL
6	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
7	1	SP2	+ PROTECTED CONTROL > RADIO >
8	3	N	ELECTRONIC EARTH

RADIO


S4

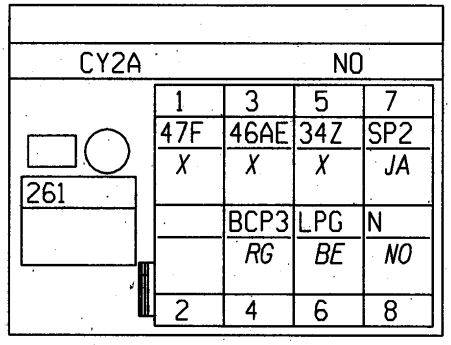

N°	mm²		... ⟶ ...
1	.35	47F	VEHICLE SPEED SIGNAL
3	.6	46AE	RADIO COMMUNICATION INTERFACE CASING > RADIO DAMPING
4	1	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
5	.35	34Z	RADIO OPERATION SIGNAL
6	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
7	1	SP2	+ PROTECTED CONTROL > RADIO >
8	3	N	ELECTRONIC EARTH


LEFT REPEATER

S1

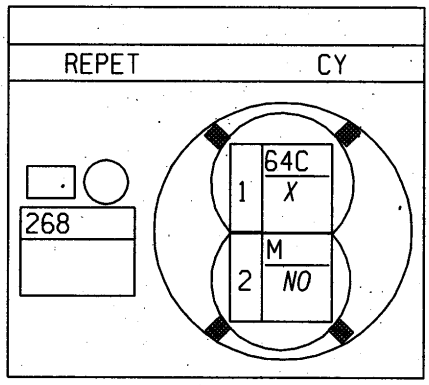


N°	mm²		... ⟶ ...
1	.6	64C	LH INDICATOR CONTROL
2	.6	M	EARTH

RADIO
. E1
S4

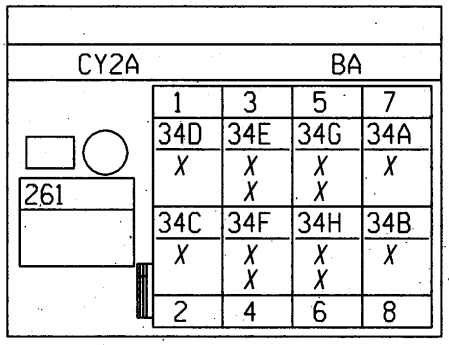

N°	mm²		... → ...
	1	34D	SIGNAL+ RH REAR SPEAKER
	1	34C	SIGNAL- RH REAR SPEAKER
	.6	34E	SIGNAL+ RH FRONT SPEAKER
	1	34E	SIGNAL+ RH FRONT SPEAKER
	.6	34F	SIGNAL- RH FRONT SPEAKER
	1	34F	SIGNAL- RH FRONT SPEAKER
	.6	34G	SIGNAL+ LH FRONT SPEAKERS
	1	34G	SIGNAL+ LH FRONT SPEAKERS
	.6	34H	SIGNAL- LH FRONT SPEAKER
	1	34H	SIGNAL- LH FRONT SPEAKER
	1	34A	SIGNAL+ LH REAR SPEAKER
	1	34B	SIGNAL- LH REAR SPEAKER

LEFT REPEATER
E1
S1

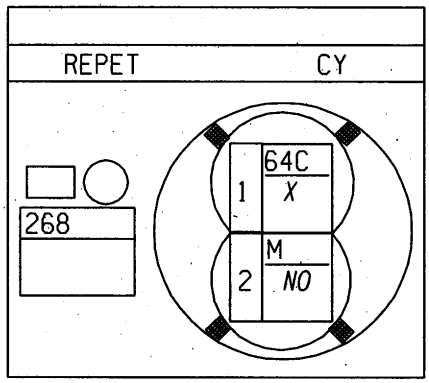


N°	mm²		... → ...
1	.6	64C	LH INDICATOR CONTROL
2	.6	M	EARTH

LEFT REPEATER

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR

S1

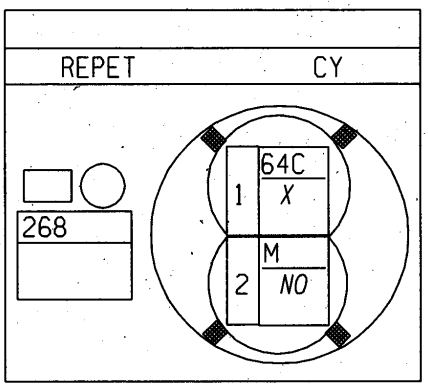


N°	mm²		... → ...
1	.6	64C	LH INDICATOR CONTROL
2	.6	M	EARTH

CONTROL PANEL FOR HEATING AND VENTILATION SYSTEM

K25,L64/TUR

S4-S5-S6

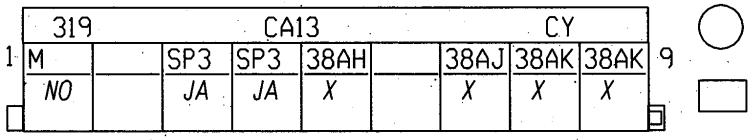


N°	mm²		... → ...
1	.35	M	EARTH
3	1.4	SP3	+ PROTECTED CONTROL > HEATING
4	1.4	SP3	+ PROTECTED CONTROL > HEATING
5	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
7	1.4	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
8	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL
9	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL

CONTROL PANEL FOR HEATING AND VENTILATION SYSTEM


K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR

S4-S5-S6

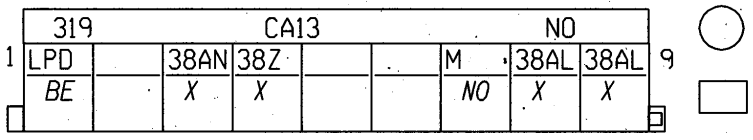


N°	mm²		... → ...
1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
3	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
4	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
7	1	M	EARTH
8	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
9	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL

CONTROL PANEL FOR HEATING AND VENTILATION SYSTEM
B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR RUNLI/LAVPH
S4-S5-S6

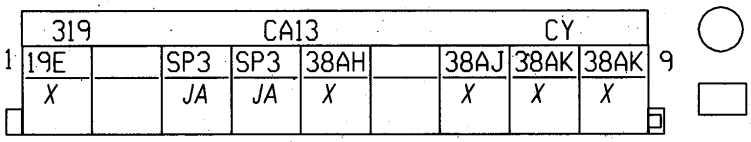

N°	mm²		... → ...
	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
	1.4	SP3	+ PROTECTED CONTROL > HEATING
	1.4	SP3	+ PROTECTED CONTROL > HEATING
	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
	1.4	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL
	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL


BASE FAN ASSEMBLY AND AIR CONDITIONING
K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR
S2-S6

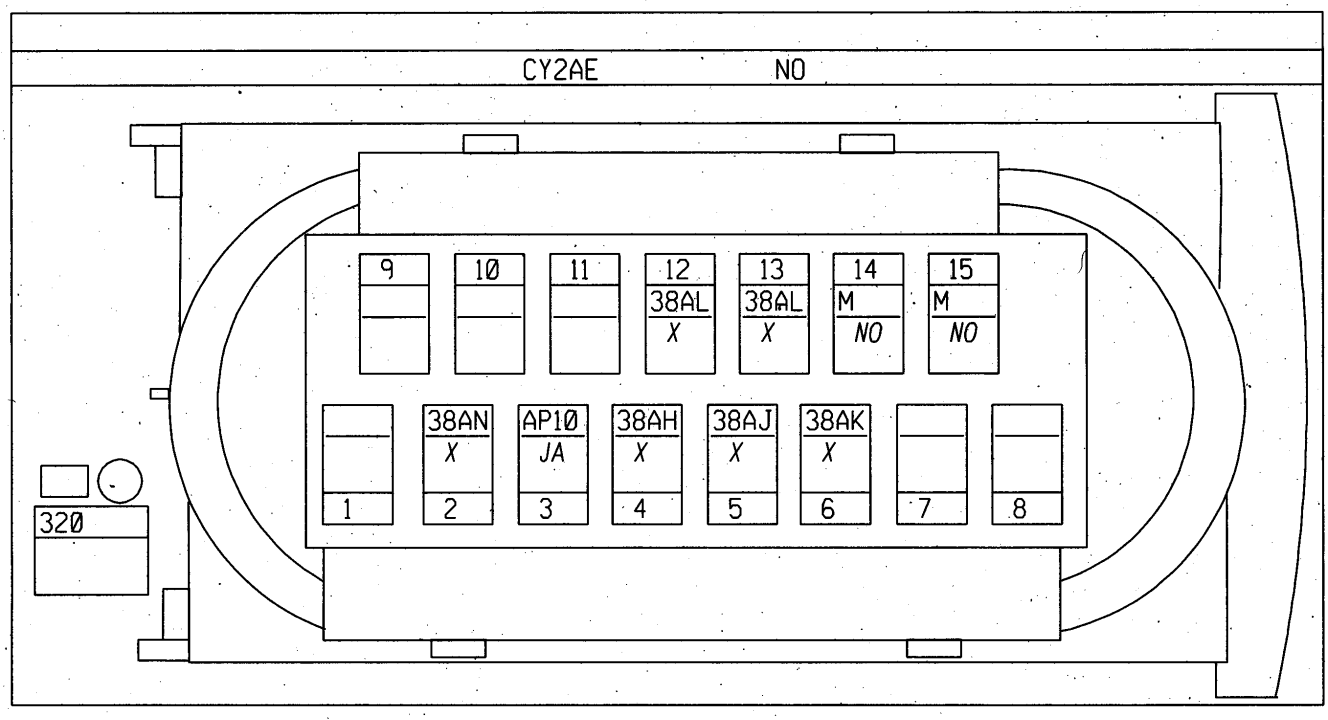

N°	mm²		... → ...
1	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
3	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
4	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
5	1.4	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
6	1.4	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL
12	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
13	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
14	1.4	M	EARTH
15	1.4	M	EARTH

CONTROL PANEL FOR HEATING AND VENTILATION SYSTEM


S4-S5-S6

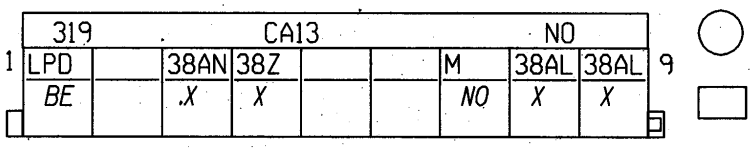

N°	mm²		... → ...
1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
3	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
4	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
7	1	M	EARTH
8	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
9	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL

CONTROL PANEL FOR HEATING AND VENTILATION SYSTEM


S4-S5-S6

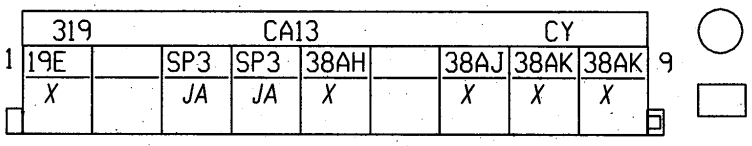

N°	mm²		... → ...
1	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
3	1.4	SP3	+ PROTECTED CONTROL > HEATING
4	1.4	SP3	+ PROTECTED CONTROL > HEATING
5	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
7	1	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
8	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL
9	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL

FRONT RIGHT SPEAKER

S6

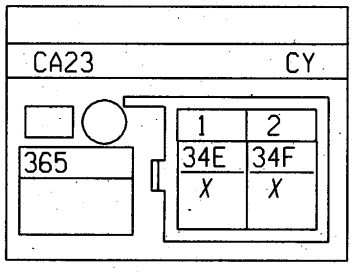


N°	mm²		... → ...
1	.6	34E	SIGNAL+ RH FRONT SPEAKER
2	.6	34F	SIGNAL- RH FRONT SPEAKER

CONTROL PANEL FOR HEATING AND VENTILATION SYSTEM

E1

S4-S5-S6

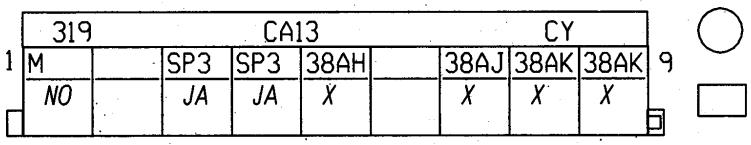


N°	mm²		... → ...
	.35	M	EARTH
	1.4	SP3	+ PROTECTED CONTROL > HEATING
	1.4	SP3	+ PROTECTED CONTROL > HEATING
	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
	1.4	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL
	1	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL

CONTROL PANEL FOR HEATING AND VENTILATION SYSTEM

E1

S4-S5-S6

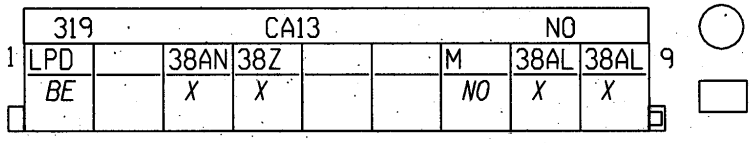


N°	mm²		... → ...
1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
3	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
4	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
7	1	M	EARTH
8	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
9	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL

BASE FAN ASSEMBLY AND AIR CONDITIONING

E1

S2-S6

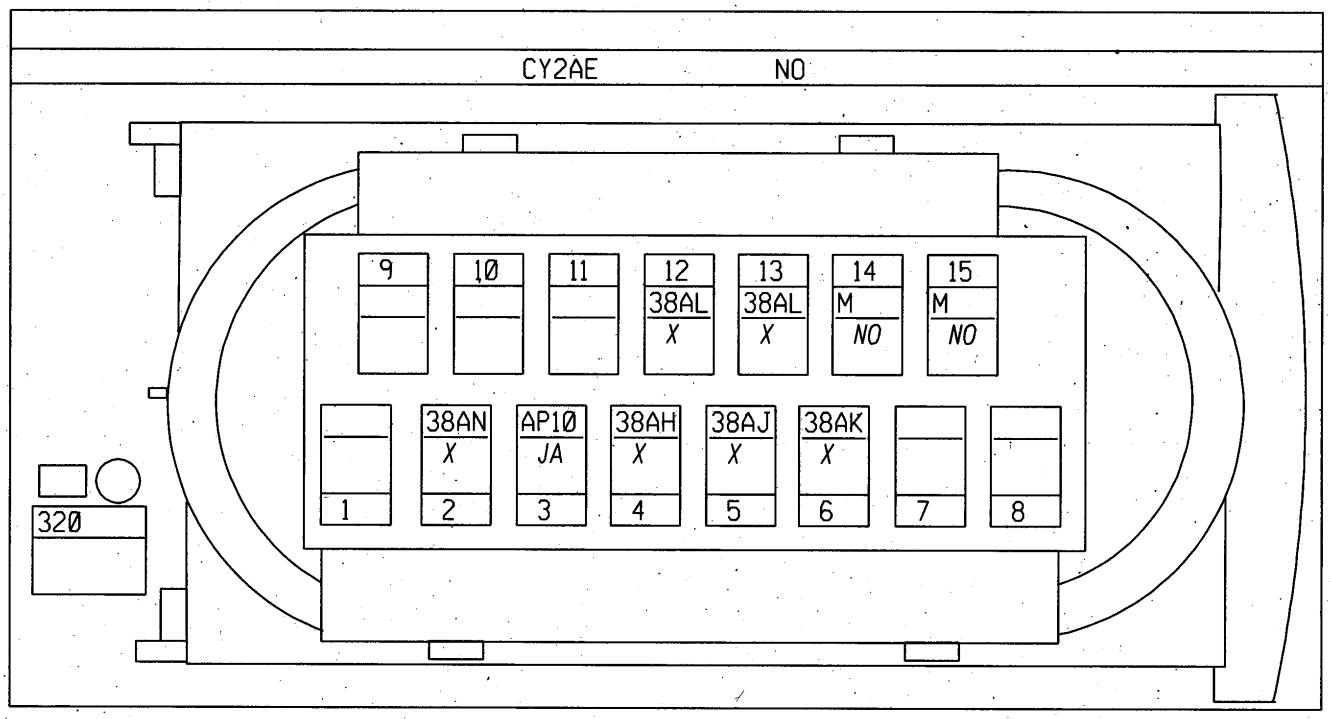


N°	mm²		... → ...
2	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
3	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
4	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
5	1.4	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
6	1.4	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL
12	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
13	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
14	1.4	M	EARTH
15	1.4	M	EARTH

FRONT RIGHT SPEAKER

E1

S6

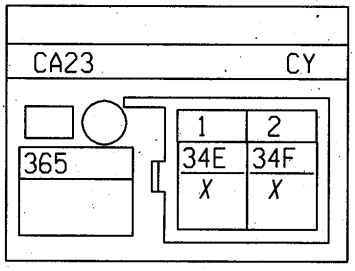


N°	mm²		... → ...
1	.6	34E	SIGNAL+ RH FRONT SPEAKER
2	.6	34F	SIGNAL- RH FRONT SPEAKER

FRONT RIGHT SPEAKER

K25,L64/TUR B64/L64/E2,E3/MERCOS E3 SAUF TUR RUNLI/LAVPH

S6

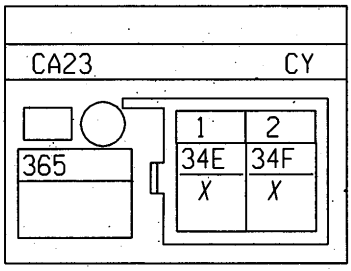


N°	mm²		... → ...
	.6	34E	SIGNAL+ RH FRONT SPEAKER
	.6	34F	SIGNAL- RH FRONT SPEAKER

FRONT LEFT SPEAKER

K25,L64/TUR B64/L64/E2,E3/MERCOS E3 SAUF TUR RUNLI/LAVPH


S4

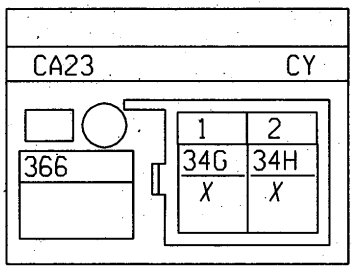

N°	mm²		... → ...
1	.6	34G	SIGNAL+ LH FRONT SPEAKERS
2	.6	34H	SIGNAL- LH FRONT SPEAKER

FRONT LEFT SPEAKER


S4

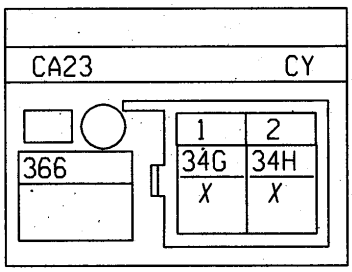

N°	mm²		... ⟶ ...
1	.6	34G	SIGNAL+ LH FRONT SPEAKERS
2	.6	34H	SIGNAL- LH FRONT SPEAKER

ELECTRIC WINDOW CONTROL RELAY

S6-S21

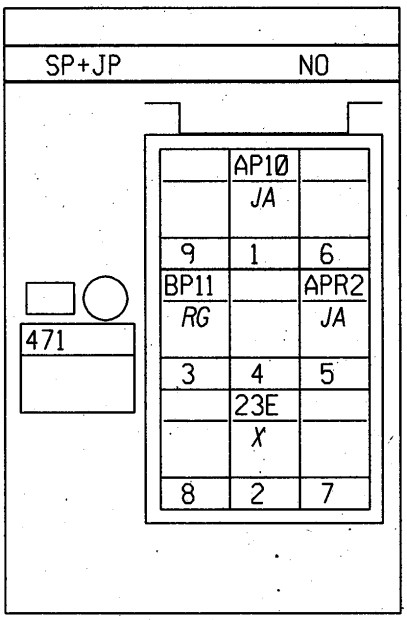


N°	mm²		... ⟶ ...
1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
2	.6	23E	REAR LOCKING FUNCTION RELAY COIL CONTROL
3	3	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
5	3	APR2	AFTER-IGNITION RELAY 2

FRONT LEFT SPEAKER

E1


S4

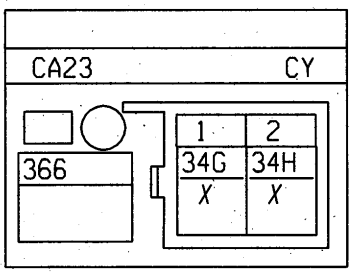

N°	mm²		... → ...
	.6	34G	SIGNAL+ LH FRONT SPEAKERS
	.6	34H	SIGNAL- LH FRONT SPEAKER

MONITOR CONTROL


E1

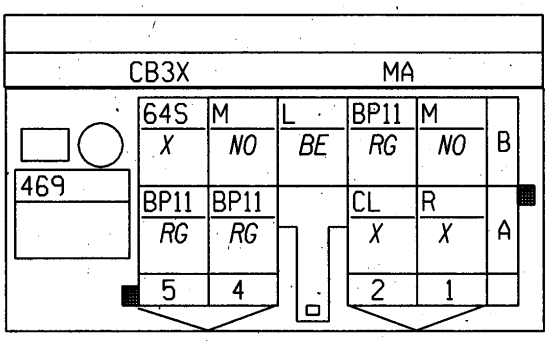

N°	mm²		... → ...
A1	2	R	+ MAIN BEAM HEADLIGHTS
B1	.35	M	EARTH
A2	2	CL	+ SIDE LIGHTS SWITCH CONTROL MONITOR
B2	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
B3	2	L	SIDE LIGHT +
A4	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
B4	.35	M	EARTH
A5	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
B5	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL

MONITOR CONTROL

E1

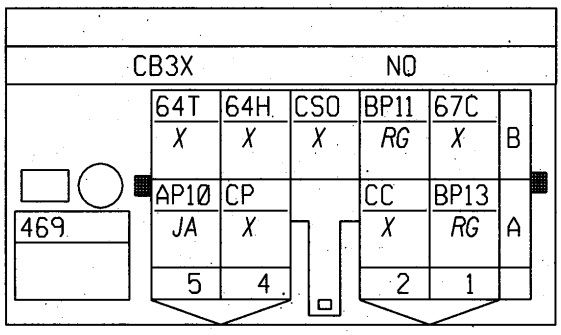


N°	mm²		··· ⟶ ···
A1	2	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
B1	2	67C	+ HORN FUSE CONTROL
A2	2	CC	+ DIPPED HEADLIGHTS SWITCH CONTROL MONITOR
B2	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
B3	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
A4	2	CP	+ HEADLIGHTS SWITCH CONTROL MONITOR
B4	.35	64H	FLASHER - > MONITOR CONTROL
A5	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
B5	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL

RH FRONT SEAT

E1

S9

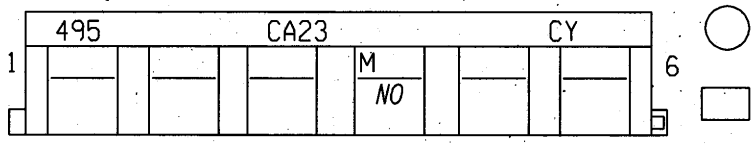


N°	mm²		··· ⟶ ···
4	.6	M	EARTH

LH FRONT SEAT


E1

S8

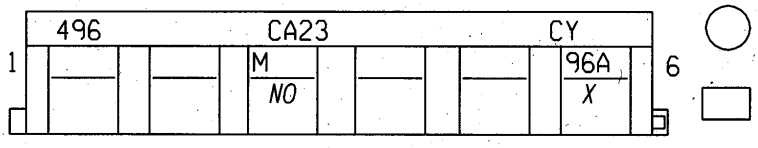


N°	mm²		··· ⟶ ···
3	.6	M	EARTH
6	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL

ELECTRIC WINDOW CONTROL RELAY
B64/L64/E2,E3/MERCOS
S6-S21

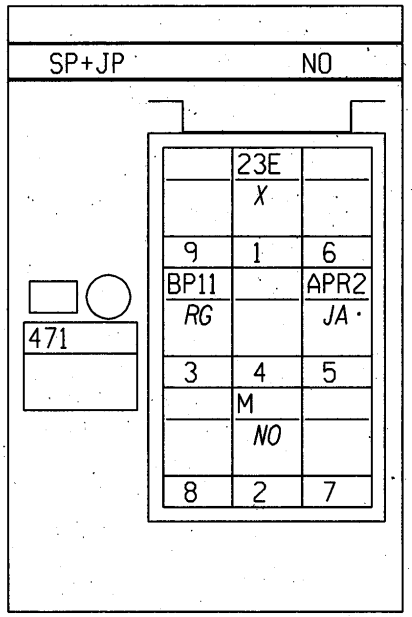


N°	mm²		··· → ···
	.6	23E	REAR LOCKING FUNCTION RELAY COIL CONTROL
	.6	M	EARTH
	3	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
	3	APR2	AFTER-IGNITION RELAY 2

ELECTRIC WINDOW CONTROL RELAY
E3 SAUF TUR RUNLI/LAVPH
S6-S21

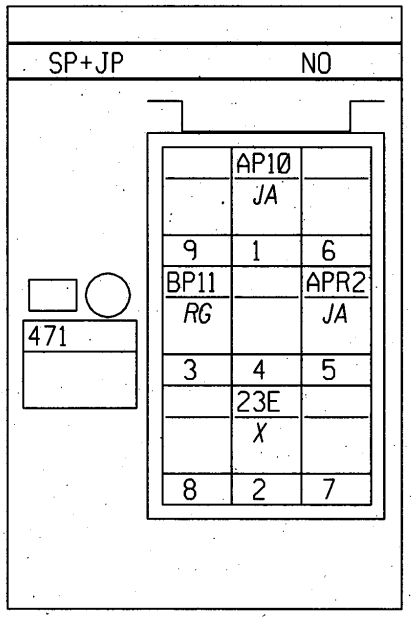


N°	mm²		··· → ···
	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
	.6	23E	REAR LOCKING FUNCTION RELAY COIL CONTROL
	3	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
	3	APR2	AFTER-IGNITION RELAY 2

RH FRONT SEAT
E3 SAUF TUR RUNLI/LAVPH
S9

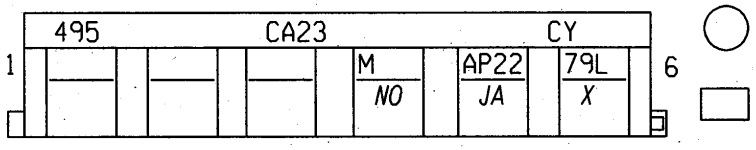


N°	mm²		... → ...
4	.6	M	EARTH
5	.6	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
6	.35	79L	+ RELAY RH HEATED SEAT CONTROL

LH FRONT SEAT
B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS

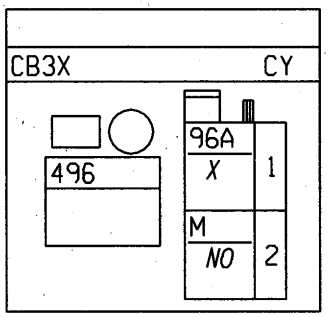

N°	mm²		... → ...
1	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL
2	.6	M	EARTH


LH FRONT SEAT
K25,L64/TUR E3 SAUF TUR RUNLI/LAVPH
S8

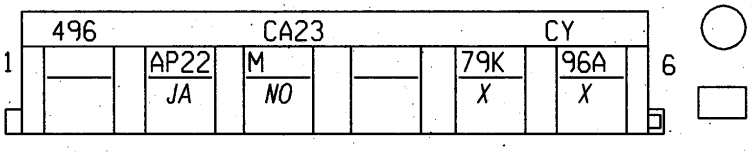

N°	mm²		... → ...
3	.6	M	EARTH
6	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL
2	.6	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
5	.35	79K	+ RELAY LH HEATED SEAT CONTROL

RH FRONT SEAT


S9

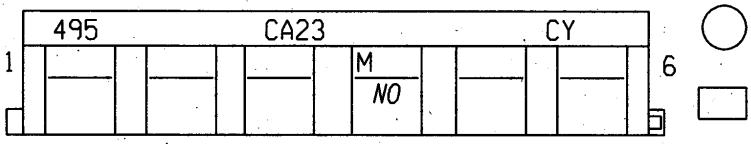

N°	mm²		... → ...
	.6	M	EARTH

LH FRONT SEAT


S8

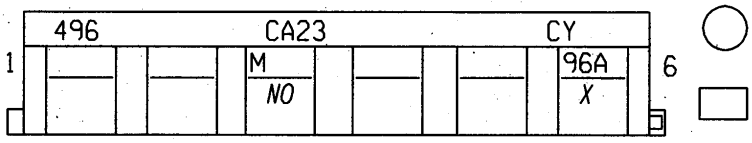

N°	mm²		... → ...
	.6	M	EARTH
	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL

HEADLIGHT ADJUSTMENT COMMAND

S4

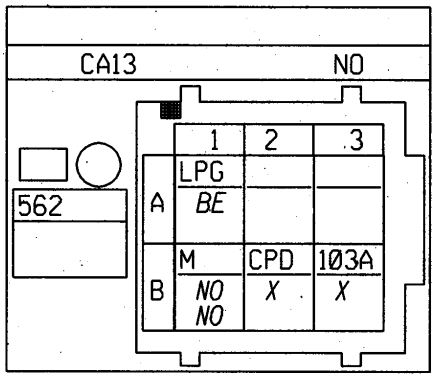


N°	mm²		... → ...
1	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
1	.6	M	EARTH
1	.6	M	EARTH
2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
3	.6	103A	HEADLAMP POSITIONING CONTROL

HEADLIGHT ADJUSTMENT COMMAND

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR

S4

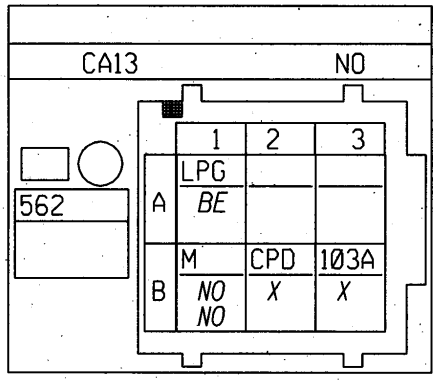


N°	mm²		... → ...
A1	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
B1	.6	M	EARTH
B1	.6	M	EARTH
B2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
B3	.6	103A	HEADLAMP POSITIONING CONTROL

DRIVER'S HEATED SEAT CONTROL


E3 SAUF TUR RUNLI/LAVPH

S5

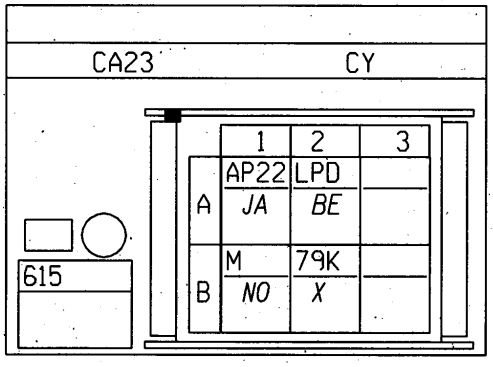


N°	mm²		... → ...
A1	.35	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
B1	.35	M	EARTH
A2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
B2	.35	79K	+ RELAY LH HEATED SEAT CONTROL

HEADLIGHT ADJUSTMENT COMMAND
E1
S4

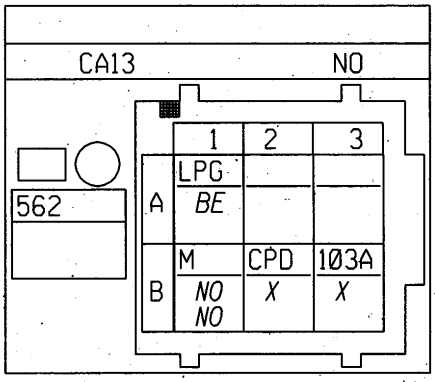


N°	mm²		··· → ···
1	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
1	.6	M	EARTH
1	.6	M	EARTH
2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
3	.6	103A	HEADLAMP POSITIONING CONTROL


PASSENGER COMPARTMENT ECU
E1
S6

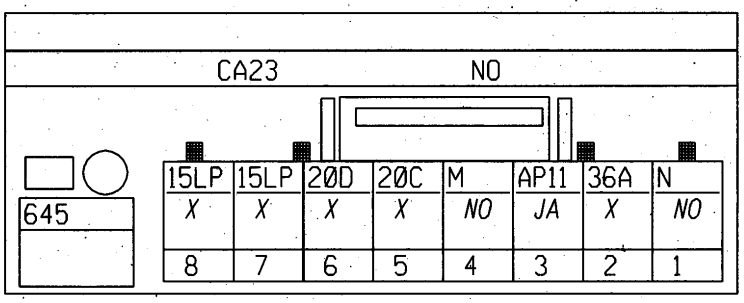

N°	mm²		··· → ···
	2	N	ELECTRONIC EARTH
	1	36A	+ REAR WIPER CONTROL
	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
	1.4	M	EARTH
	2	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
	2	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL

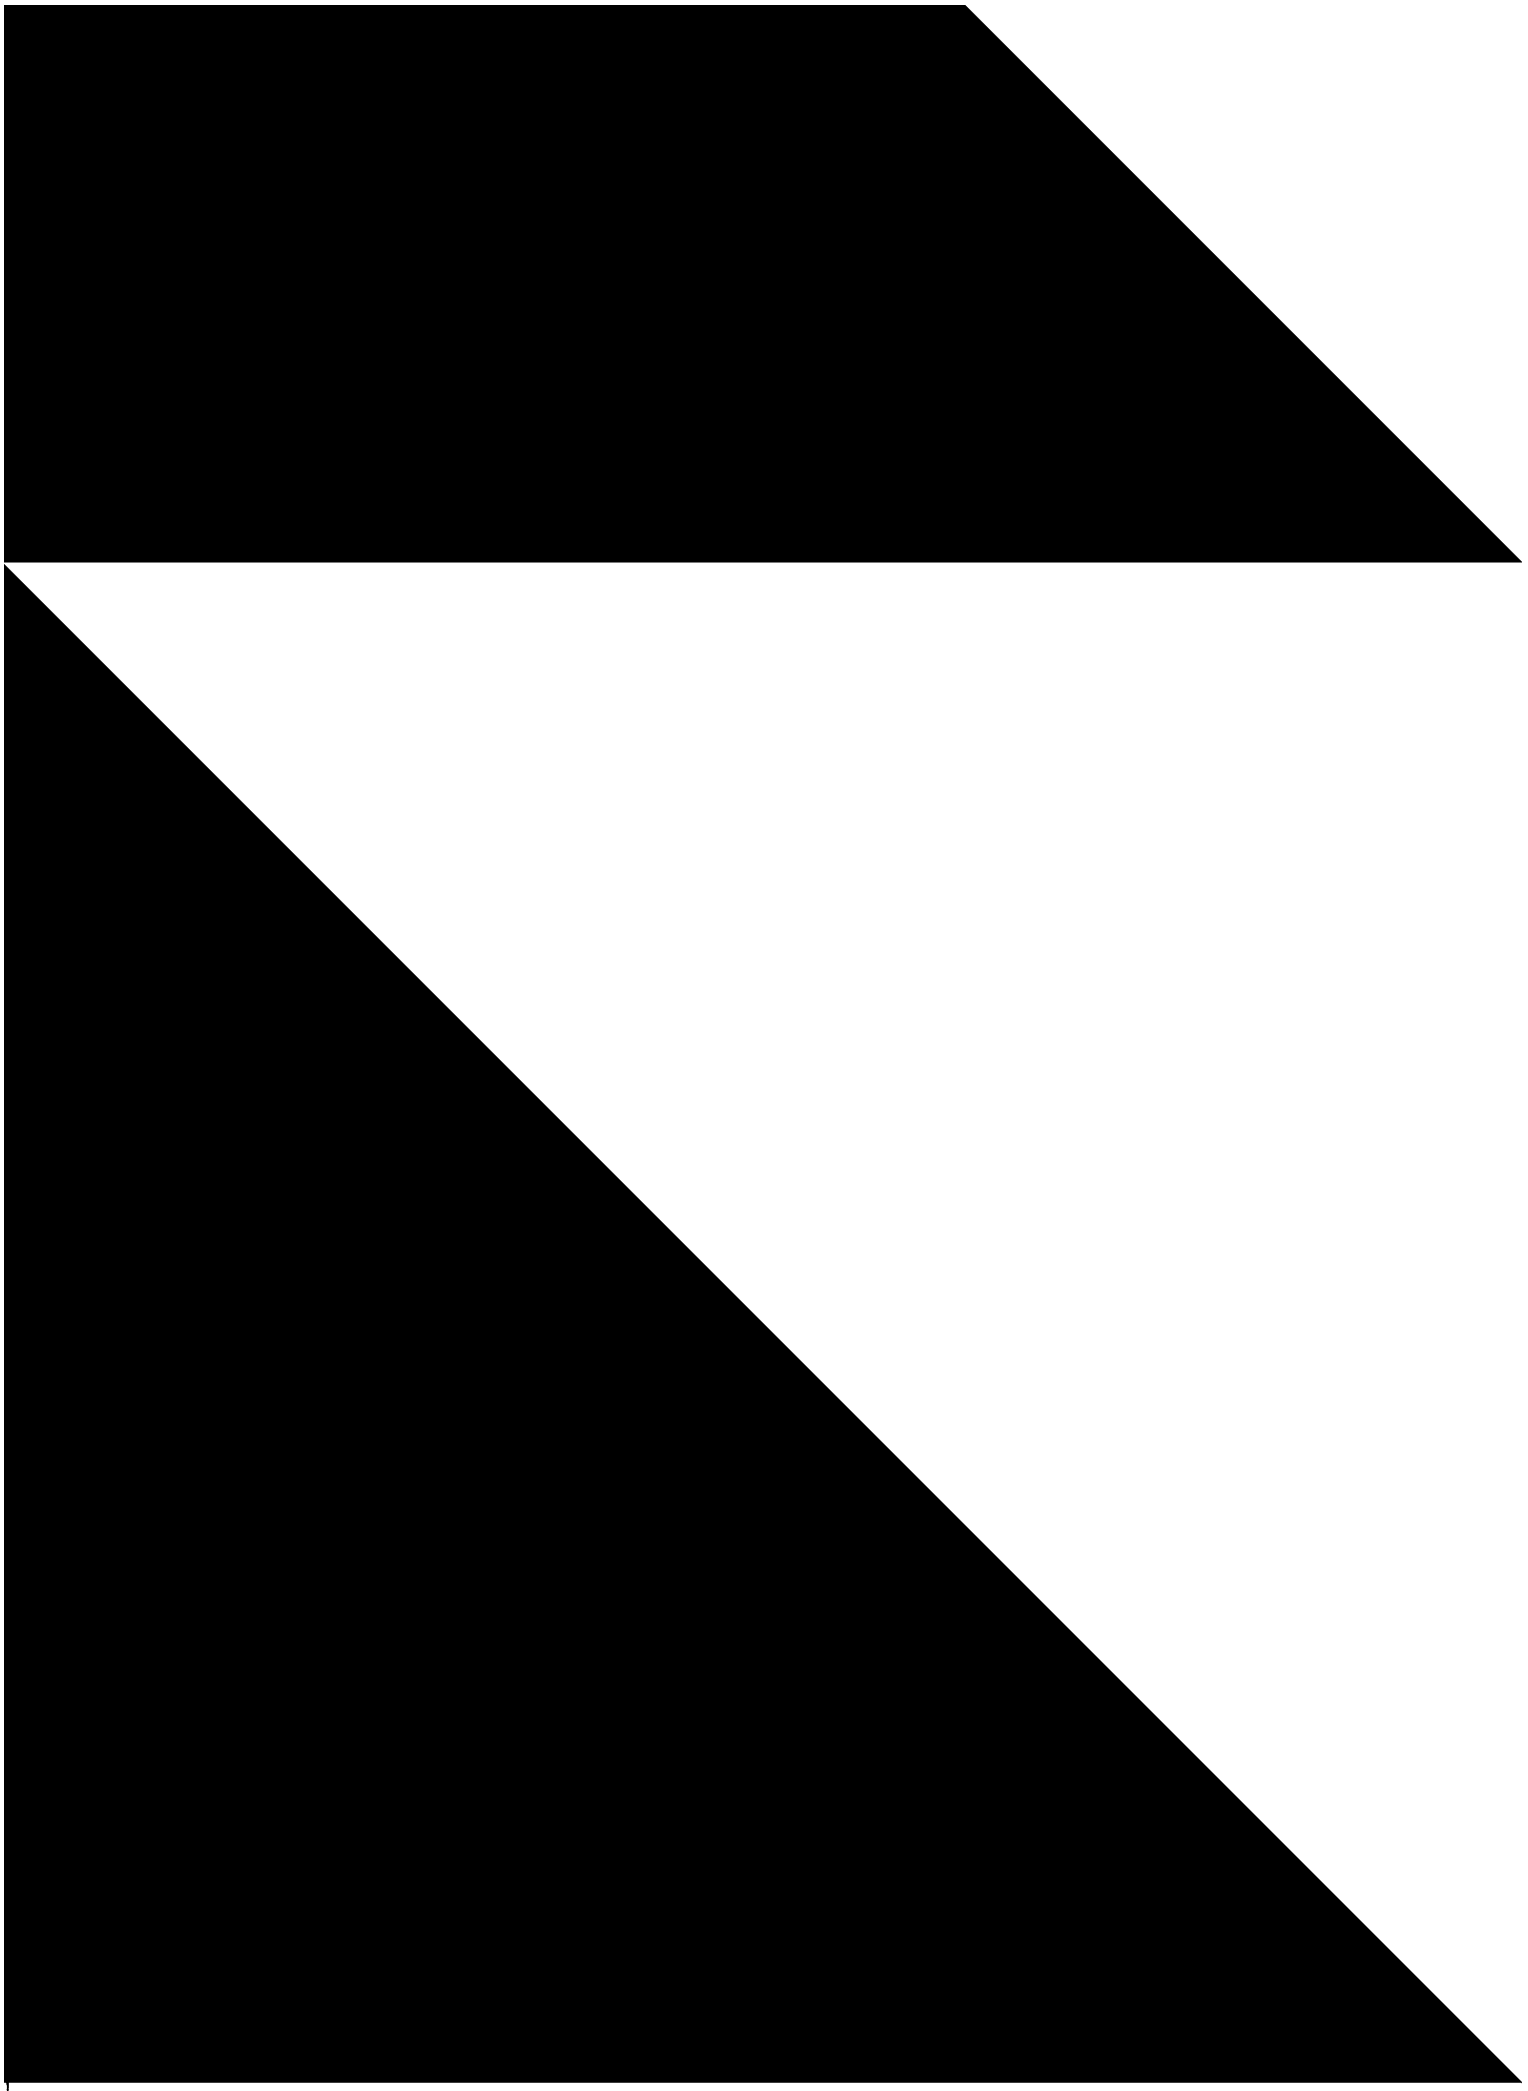


PASSENGER COMPARTMENT ECU
K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR
S6

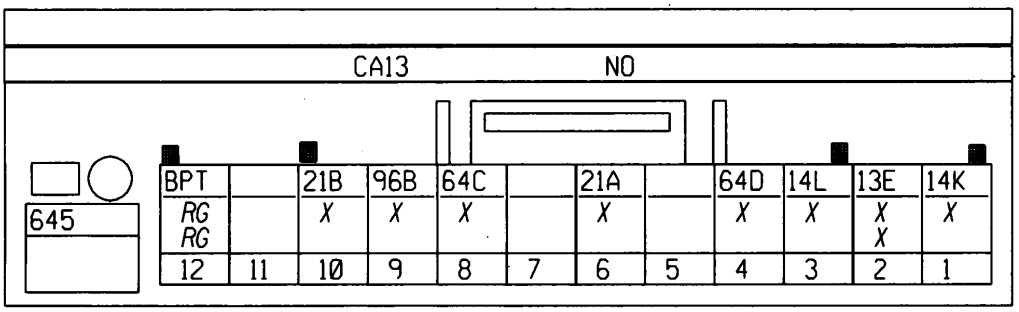


N°	mm²		··· ⟶ ··:
1	1	14K	+ FRONT LOW SPEED WIPER TIMER CONTROL
2	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
2	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
3	1.4	14L	+ FRONT HIGH SPEED WIPER TIMER CONTROL
4	.6	64D	RH FRONT INDICATOR CONTROL
8	.6	64C	LH INDICATOR CONTROL
9	.35	96B	- DOOR OPEN WARNING LIGHT CONTROL
12	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
12	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
6	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL
10	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL

PASSENGER COMPARTMENT ECU
K25.L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS
S6

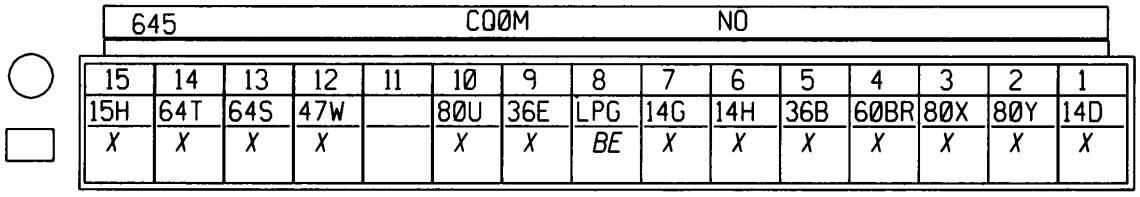


N°	mm²		··· ⟶ ···
1	.35	14D	LOW SPEED - WINDSCREEN WIPER TIME SWITCII CONTROL
2	.35	80Y	TRANSPONDER CLOCK SIGNAL
3	.35	80X	TRANSPONDER ANTENNA BUS SIGNAL
4	.35	60BR	AIR BAG ELECTRIC CONTROL UNIT SHOCK SIGNAL
5	.35	36B	+ REAR WIPER PARK POSITION CONTROL
6	.35	14H	FRONT HIGH SPEED WIPER > COMPUTER CONTROL
7	.35	14G	FRONT LOW SPEED WIPER > COMPUTER CONTROL
8	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
9	.35	36E	+ REAR SCREEN WIPE TIME SWITCH CONTROL
12	.35	47W	SECONDARY SPEED SIGNAL
13	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
14	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
15	.35	15H	- HEATED REAR SCREEN > REAR WINDOW CONTROL UNIT CONTROL
10	.35	80U	ELECTRIC STOP SOLENOID VALVE + CONTROL > VRMT INTR RELAY

PASSENGER COMPARTMENT ECU
E3 SAUF TUR RUNLI/LAVPH
S6

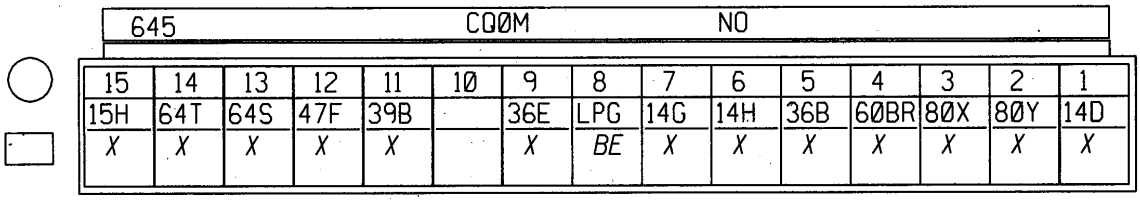

N°	mm²		... ⟶ ...
1	.35	14D	LOW SPEED - WINDSCREEN WIPER TIME SWITCH CONTROL
2	.35	80Y	TRANSPONDER CLOCK SIGNAL
3	.35	80X	TRANSPONDER ANTENNA BUS SIGNAL
4	.35	60BR	AIR BAG ELECTRIC CONTROL UNIT SHOCK SIGNAL
5	.35	36B	+ REAR WIPER PARK POSITION CONTROL
6	.35	14H	FRONT HIGH SPEED WIPER > COMPUTER CONTROL
7	.35	14G	FRONT LOW SPEED WIPER > COMPUTER CONTROL
8	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
9	.35	36E	+ REAR SCREEN WIPE TIME SWITCH CONTROL
11	.35	39B	- HEADLIGHT WASHER RELAY COIL > TIME SWITCH CONTROL
12	.35	47F	VEHICLE SPEED SIGNAL
13	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
14	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
15	.35	15H	- HEATED REAR SCREEN > REAR WINDOW CONTROL UNIT CONTROL

PASSENGER COMPARTMENT ECU
K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR
S6

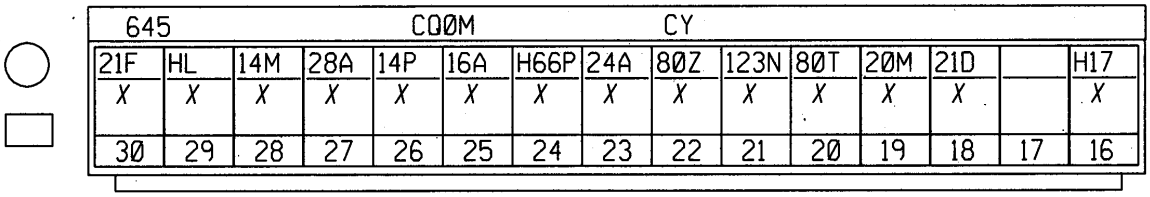


N°	mm²		... ⟶ ...
16	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
19	.35	20M	DOOR LOCKING LED
20	.35	80T	SOFTWARE LOCK INDICATOR LIGHT - CONTROL
22	.35	80Z	+ TRANSPONDER AERIAL
23	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
24	.35	H66P	+ REVERSING LIGHTS CONTROL
25	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
26	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
27	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
28	.35	14M	FRONT WIPER PARK POSITION > COMPUTER CONTROL
29	.35	HL	DIAGNOSTIC SIGNAL L
18	.35	21D	RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
30	.35	21F	LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
21	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL

PASSENGER COMPARTMENT ECU

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR

S6

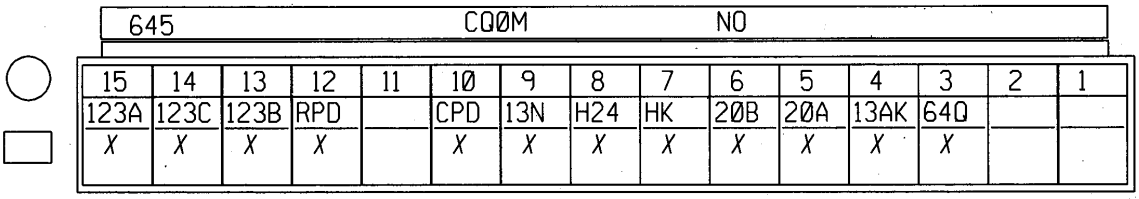


N°	mm²		... ⟶ ...
3	.35	64Q	- FLASHER UNIT TIME SWITCH CONTROL
5	.35	20A	CENTRAL DOOR LOCKING CLOSING TIMER + CONTROL
6	.35	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL
7	.35	HK	DIAGNOSTIC SIGNAL K
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
10	.35	CPD	+ RH PROTECTED DIPPED HEADLIGHT
12	.6	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
13	.35	123B	- LEFT-HAND HEATED SCREEN TIMER CONTROL
14	.35	123C	- RIGHT -HAND HEATED SCREEN TIMER CONTROL
15	.35	123A	- HEATED SCREEN START UP CONTROL UNIT CONTROL
4	.35	13AK	BOOT LATCH MODULE SIGNAL 1

TURN SWITCH

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS


S4-S6

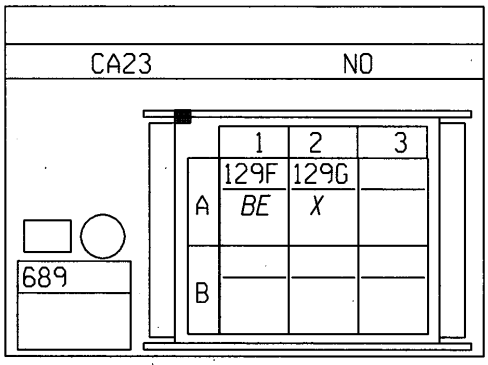

N°	mm²		... ⟶ ...
A1	.6	129F	+ DRIVER'S AIR BAG SIGNAL
A2	.6	129G	- DRIVER'S AIR BAG SIGNAL

PASSENGER COMPARTMENT ECU


S6

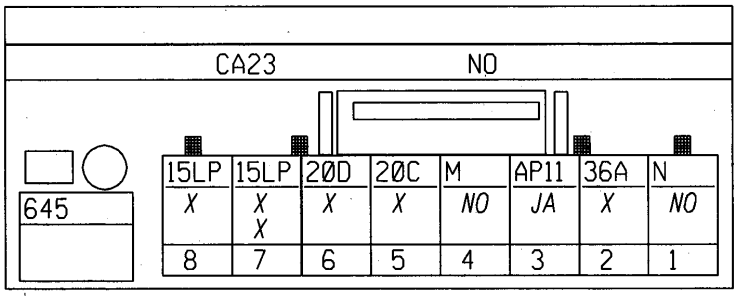

N°	mm²		... → ...
1	2	N	ELECTRONIC EARTH
2	1	36A	+ REAR WIPER CONTROL
3	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
4	1.4	M	EARTH
5	2	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
6	2	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
7	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
7	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
8	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL

PASSENGER COMPARTMENT ECU


S6

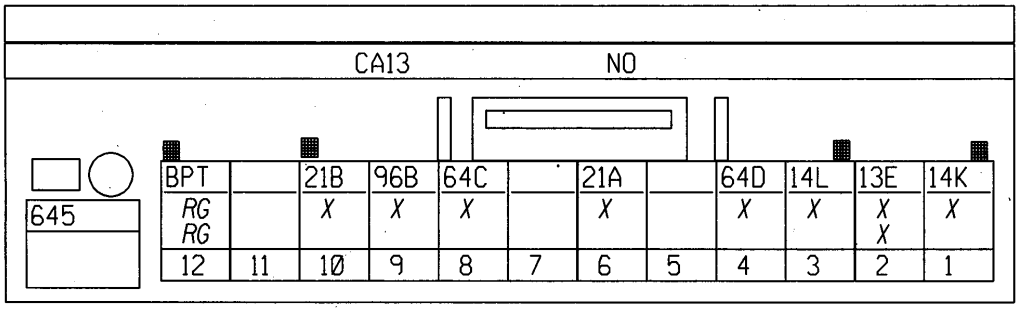

N°	mm²		... → ...
1	1	14K	+ FRONT LOW SPEED WIPER TIMER CONTROL
2	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
2	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
3	1.4	14L	+ FRONT HIGH SPEED WIPER TIMER CONTROL
4	.6	64D	RH FRONT INDICATOR CONTROL
6	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL
8	.6	64C	LH INDICATOR CONTROL
9	.35	96B	- DOOR OPEN WARNING LIGHT CONTROL
10	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
12	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
12	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY

PASSENGER COMPARTMENT ECU


S6

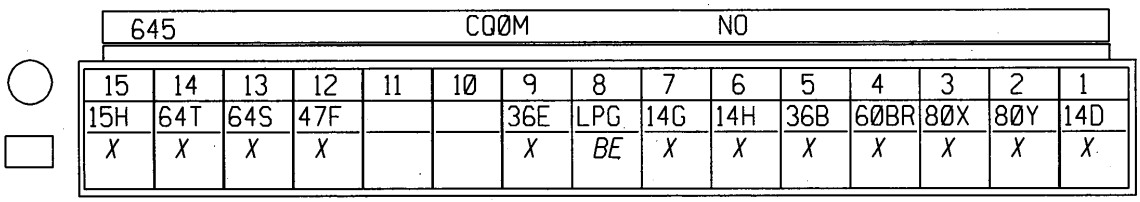

N°	mm²		... ⟶ ...
1	.35	14D	LOW SPEED - WINDSCREEN WIPER TIME SWITCH CONTROL
2	.35	80Y	TRANSPONDER CLOCK SIGNAL
3	.35	80X	TRANSPONDER ANTENNA BUS SIGNAL
4	.35	60BR	AIR BAG ELECTRIC CONTROL UNIT SHOCK SIGNAL
5	.35	36B	+ REAR WIPER PARK POSITION CONTROL
6	.35	14H	FRONT HIGH SPEED WIPER > COMPUTER CONTROL
7	.35	14G	FRONT LOW SPEED WIPER > COMPUTER CONTROL
8	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
9	.35	36E	+ REAR SCREEN WIPE TIME SWITCH CONTROL
12	.35	47F	VEHICLE SPEED SIGNAL
13	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
14	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
15	.35	15H	- HEATED REAR SCREEN > REAR WINDOW CONTROL UNIT CONTROL

PASSENGER COMPARTMENT ECU


S6

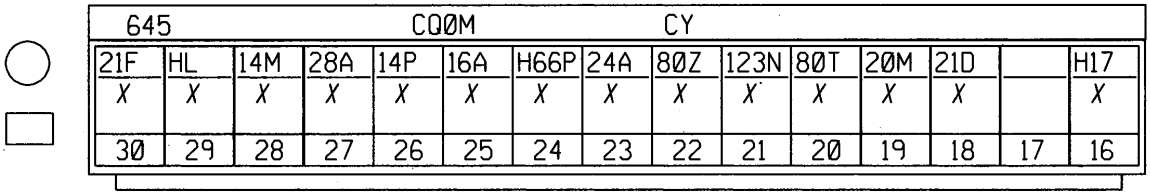

N°	mm²		... ⟶ ...
16	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
18	.6	21D	RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
19	.35	20M	DOOR LOCKING LED
20	.35	80T	SOFTWARE LOCK INDICATOR LIGHT - CONTROL
21	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
22	.35	80Z	+ TRANSPONDER AERIAL
23	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
24	.35	H66P	+ REVERSING LIGHTS CONTROL
25	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
26	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
27	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
28	.35	14M	FRONT WIPER PARK POSITION > COMPUTER CONTROL
29	.35	HL	DIAGNOSTIC SIGNAL L
30	.6	21F	LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL

PASSENGER COMPARTMENT ECU


S6

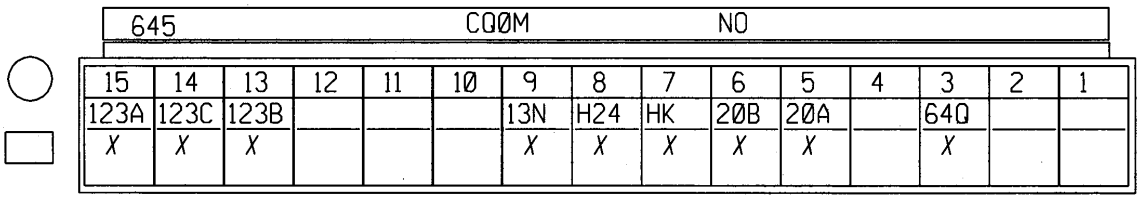

N°	mm²		... ⟶ ...
3	.35	64Q	- FLASHER UNIT TIME SWITCH CONTROL
5	.35	20A	CENTRAL DOOR LOCKING CLOSING TIMER + CONTROL
6	.35	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL
7	.35	HK	DIAGNOSTIC SIGNAL K
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
13	.35	123B	- LEFT-HAND HEATED SCREEN TIMER CONTROL
14	.35	123C	- RIGHT -HAND HEATED SCREEN TIMER CONTROL
15	.35	123A	- HEATED SCREEN START UP CONTROL UNIT CONTROL

TURN SWITCH

S4-S6

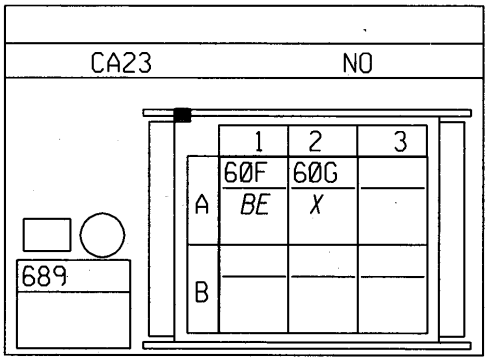


N°	mm²		... ⟶ ...
A1	.35	60F	+ DRIVER'S EUROBAG SIGNAL
A2	.35	60G	- DRIVER'S EUROBAG SIGNAL

PASSENGER COMPARTMENT ECU

E1

S6

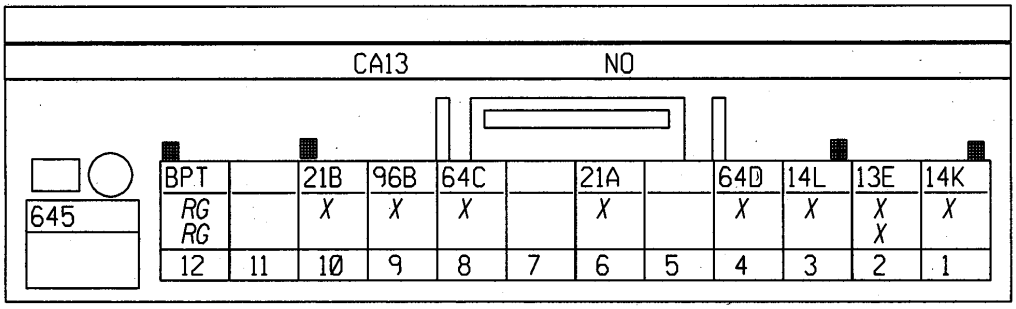


N°	mm²		... → ...
1	1	14K	+ FRONT LOW SPEED WIPER TIMER CONTROL
2	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
2	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
3	1.4	14L	+ FRONT HIGH-SPEED WIPER TIMER CONTROL
4	.6	64D	RH FRONT INDICATOR CONTROL
6	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL
8	.6	64C	LH INDICATOR CONTROL
9	.35	96B	- DOOR OPEN WARNING LIGHT CONTROL
10	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
12	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
12	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY

PASSENGER COMPARTMENT ECU

E1

S6

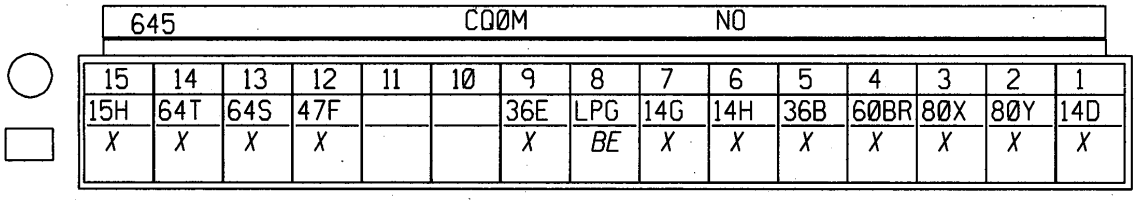


N°	mm²		... → ...
1	.35	14D	LOW SPEED - WINDSCREEN WIPER TIME SWITCII CONTROL
2	.35	80Y	TRANSPONDER CLOCK SIGNAL
3	.35	80X	TRANSPONDER ANTENNA BUS SIGNAL
4	.35	60BR	AIR BAG ELECTRIC CONTROL UNIT SHOCK SIGNAL
5	.35	36B	+ REAR WIPER PARK POSITION CONTROL
6	.35	14H	FRONT HIGH SPEED WIPER > COMPUTER CONTROL
7	.35	14G	FRONT LOW SPEED WIPER > COMPUTER CONTROL
8	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
9	.35	36E	+ REAR SCREEN WIPE TIME SWITCH CONTROL
12	.35	47F	VEHICLE SPEED SIGNAL
13	.35	64S	RIGHT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
14	.35	64T	LEFT-HAND FLASHER TIMER START UP > COMPUTER CONTROL
15	.35	15H	- HEATED REAR SCREEN > REAR WINDOW CONTROL UNIT CONTROL

PASSENGER COMPARTMENT ECU

E1

S6

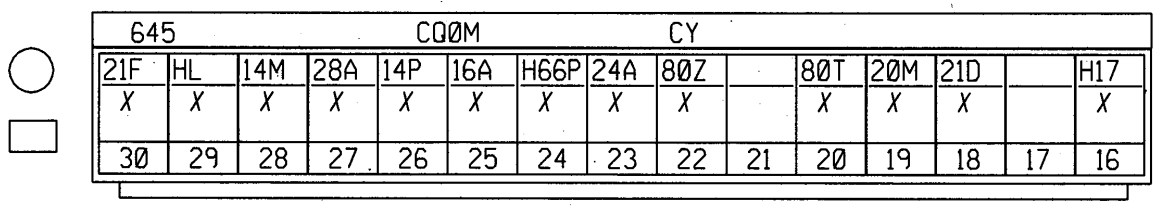


N°	mm²		... → ...
16	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
18	.35	21D	RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
19	.35	20M	DOOR LOCKING LED
20	.35	80T	SOFTWARE LOCK INDICATOR LIGHT - CONTROL
22	.35	80Z	+ TRANSPONDER AERIAL
23	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
24	.35	H66P	+ REVERSING LIGHTS CONTROL
25	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
26	.35	14P	- TRANSPONDER AERIAL > FRONT WIPER CONTROL > COMPUTER
27	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
28	.35	14M	FRONT WIPER PARK POSITION > COMPUTER CONTROL
29	.35	HL	DIAGNOSTIC SIGNAL L
30	.35	21F	LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL

PASSENGER COMPARTMENT ECU


E1

S6

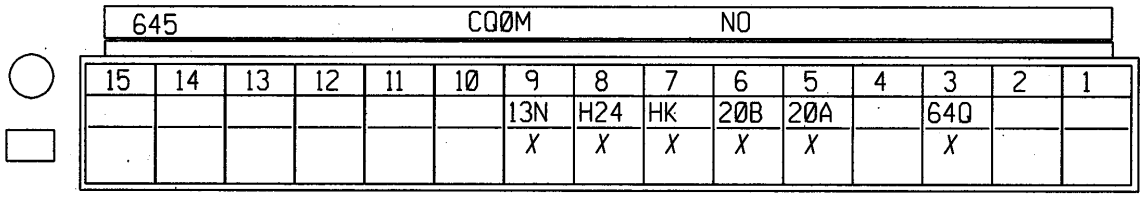


N°	mm²		... → ...
3	.35	64Q	- FLASHER UNIT TIME SWITCH CONTROL
5	.35	20A	CENTRAL DOOR LOCKING CLOSING TIMER + CONTROL
6	.35	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL
7	.35	HK	DIAGNOSTIC SIGNAL K
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL

TURN SWITCH
E3 SAUF TUR RUNLI/LAVPH
S4-S6

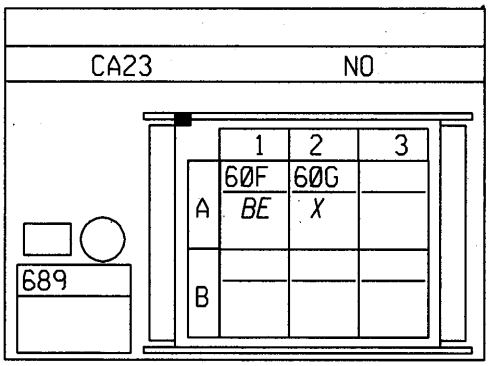


N°	mm²		... → ...
A1	.35	60F	+ DRIVER'S EUROBAG SIGNAL
A2	.35	60G	- DRIVER'S EUROBAG SIGNAL

HEADLIGHT WASHER FLUID MIN. SENSOR
E3 SAUF TUR RUNLI/LAVPH
S1

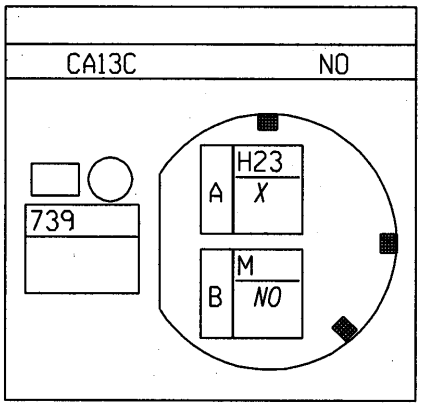


N°	mm²		... → ...
A	.6	H23	MINIMUM HEADLIGHT WASHER > WINDSCREEN WASHER WARNING LIGHT CONTROL
B	.6	M	EARTH

TURN SWITCH
E1
S4-S6

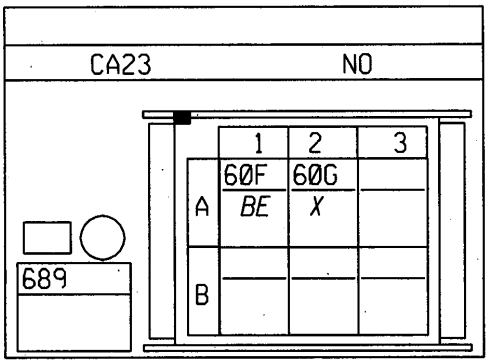


N°	mm²		... → ...
A1	.35	60F	+ DRIVER'S EUROBAG SIGNAL
A2	.35	60G	- DRIVER'S EUROBAG SIGNAL

APC N 1 RELAY (AP1)
E1
S6

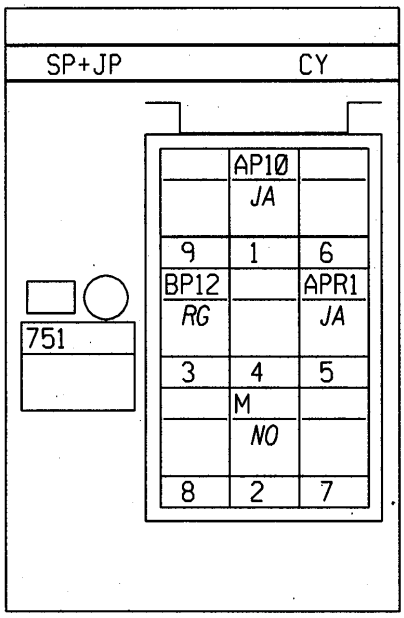


N°	mm²		... → ...
1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
2	.6	M	EARTH
3	3	BP12	+ PROTECTED BATTERY > PASSENGER COMPARTMENT 2
5	3	APR1	AFTER-IGNITION RELAY 1

APC N 1 RELAY (AP1)
B64/L64/E2,E3/MERCOS E3 SAUF TUR RUNLI/LAVPH
S6

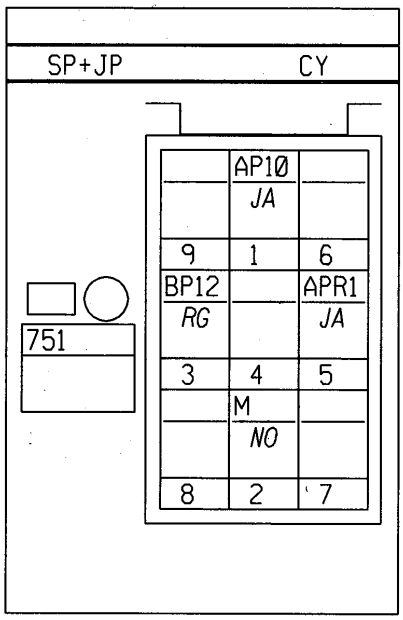

N°	mm²		... ⟶ ...
1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
2	.6	M	EARTH
3	3	BP12	+ PROTECTED BATTERY > PASSENGER COMPARTMENT 2
5	3	APR1	AFTER-IGNITION RELAY 1


POOR GRIP CONTROL
E3 SAUF TUR RUNLI/LAVPH
S5-S8

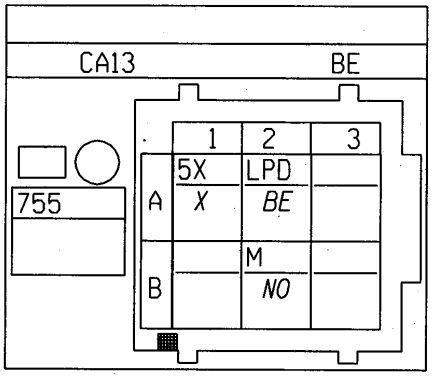

N°	mm²		... ⟶ ...
A1	.35	5X	- POOR GRIP STARTING CONTROL
A2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
B2	.35	M	EARTH

APC N 1 RELAY (AP1)


S6

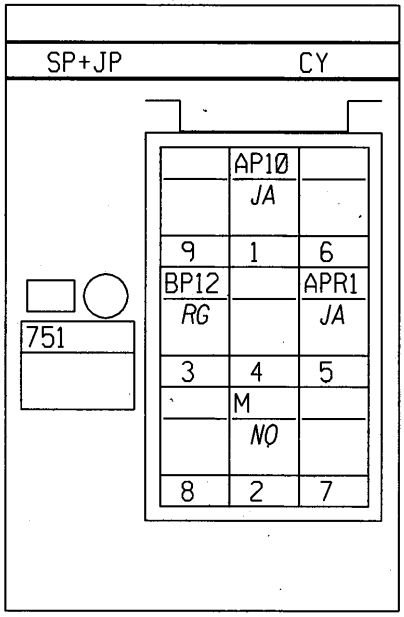

N°	mm²		... ⟶ ...
1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
2	.6	M	EARTH
3	3	BP12	+ PROTECTED BATTERY > PASSENGER COMPARTMENT 2
5	2	APR1	AFTER-IGNITION RELAY 1


POOR GRIP CONTROL

S5-S8

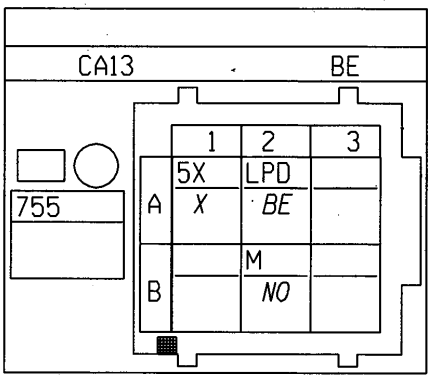

N°	mm²		... ⟶ ...
A1	.35	5X	- POOR GRIP STARTING CONTROL
A2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
B2	.35	M	EARTH

ELECTRONIC CONTROL UNIT AIRBAG /PRETENSIONNER
K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS
S5

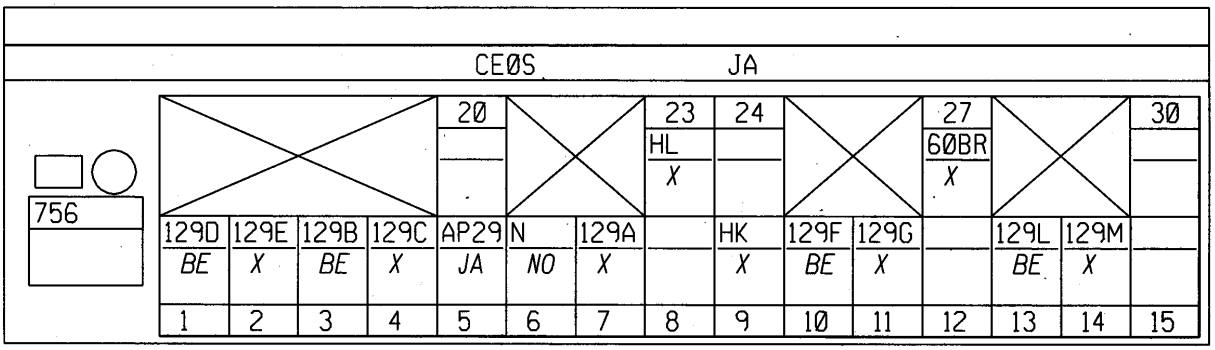

N°	mm²		... → ...
1	.6	129D	+ DRIVER'S PRETENSIONER SIGNAL
2	.6	129E	- DRIVER'S PRETENSIONER SIGNAL
3	.6	129B	+ PASSENGER'S PRETENSIONER SIGNAL
4	.6	129C	- PASSENGER'S PRETENSIONER SIGNAL
5	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
6	.35	N	ELECTRONIC EARTH
7	.35	129A	- AIRBAG FAULT WARNING LIGHT CONTROL
9	.35	HK	DIAGNOSTIC SIGNAL K
10	.6	129F	+ DRIVER'S AIR BAG SIGNAL
11	.6	129G	- DRIVER'S AIR BAG SIGNAL
13	.6	129L	+ PASSENGER AIRBAG 2 SIGNAL
14	.6	129M	- PASSENGER AIRBAG 2 SIGNAL
23	.35	HL	DIAGNOSTIC SIGNAL L
27	.35	60BR	AIR BAG ELECTRIC CONTROL UNIT SHOCK SIGNAL

UCE AIRBAG /PRETENSIONNEUR
E3 SAUF TUR RUNLI/LAVPH
S5

CE0S OR

ENTREE DES FILS

756

25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
		60AJ	60AH	60AF	60AG	60BC	60BB	60AS	60AR		60W	60V	HL	60G	60F	HK		60A	N	AP29	60C	60B	60E	60D
		X	X	X	X	BE	X	BE	X		X	BE	X	X	BE	X		X	NO	JA	X	BE	X	BE
													60BR X											
50	49	48	47	46	45					40			37			34	33			30				

N°	mm²		... ⟶ ...
1	.35	60D	+SIGNAL PRETENSIONNEUR CONDUCTEUR
2	.35	60E	-SIGNAL PRETENSIONNEUR CONDUCTEUR
3	.35	60B	+SIGNAL PRETENSIONNEUR PASSAGER
4	.35	60C	-SIGNAL PRETENSIONNEUR PASSAGER
5	.35	AP29	+ APRES CONTACT PROTEGE FUSIBLE FONCTION MOTEUR SECURITE
6	.35	N	MASSE ELECTRONIQUE
7	.35	60A	-VOYANT DEFAUT EUROBAG
9	.35	HK	SIGNAL DIAGNOSTIQUE K
10	.35	60F	+SIGNAL EUROBAG CONDUCTEUR
11	.35	60G	-SIGNAL EUROBAG CONDUCTEUR
12	.35	HL	SIGNAL DIAGNOSTIQUE L
13	.6	60V	+SIGNAL EUROBAG PASSAGER
14	.6	60W	-SIGNAL EUROBAG PASSAGER
16	.35	60AR	COMMANDE+ AIRBAG LATERAL CONDUCTEUR THORAX
17	.35	60AS	COMMANDE- AIRBAG LATERALCONDUCTEUR THORAX
18	.35	60BB	COMMANDE+ AIRBAG LATERAL THORAX PASSAGER
19	.35	60BC	COMMANDE- AIRBAG LATERAL THORAX PASSAGER
20	.35	60AG	SIGNAL+ SATELLITE LATERAL AVANT CONDUCTEUR
21	.35	60AF	SIGNAL+ SATELLITE LATERAUX PASSAGER
22	.35	60AH	SIGNAL- SATELLITE LATERAUX CONDUCTEUR
23	.35	60AJ	SIGNAL- SATELLITE LATERAL AVANT PASSAGER
37	.35	60BR	SIGNAL CHOC UNITE CENTRALE ELECTRIQUE AIR BAG

UCE AIRBAG /PRETENSIONNEUR

S5

CE0S OR

ENTREE DES FILS

756

25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
		60AJ	60AH	60AF	60AG	60BC	60BB	60AS	60AR		60W	60V	HL	60G	60F	HK		60A	N	AP29	60C	60B	60E	60D
		X	X	X	X	BE	X	BE	X		X	BE	X	X	BE	X		X	NO	JA	X	BE	X	BE
													60BR											
													X											
50	49	48	47	46	45					40			37			34	33			30				

N°	mm²		... ⟶ ...
1	.35	60D	+SIGNAL PRETENSIONNEUR CONDUCTEUR
2	.35	60E	-SIGNAL PRETENSIONNEUR CONDUCTEUR
3	.35	60B	+SIGNAL PRETENSIONNEUR PASSAGER
4	.35	60C	-SIGNAL PRETENSIONNEUR PASSAGER
5	.35	AP29	+ APRES CONTACT PROTEGE FUSIBLE FONCTION MOTEUR SECURITE
6	.35	N	MASSE ELECTRONIQUE
7	.35	60A	-VOYANT DEFAUT EUROBAG
9	.35	HK	SIGNAL DIAGNOSTIQUE K
10	.35	60F	+SIGNAL EUROBAG CONDUCTEUR
11	.35	60G	-SIGNAL EUROBAG CONDUCTEUR
12	.35	HL	SIGNAL DIAGNOSTIQUE L
13	.6	60V	+SIGNAL EUROBAG PASSAGER
14	.6	60W	-SIGNAL EUROBAG PASSAGER
16	.35	60AR	COMMANDE+ AIRBAG LATERAL CONDUCTEUR THORAX
17	.35	60AS	COMMANDE- AIRBAG LATERALCONDUCTEUR THORAX
18	.35	60BB	COMMANDE+ AIRBAG LATERAL THORAX PASSAGER
19	.35	60BC	COMMANDE- AIRBAG LATERAL THORAX PASSAGER
20	.35	60AG	SIGNAL+ SATELLITE LATERAL AVANT CONDUCTEUR
21	.35	60AF	SIGNAL+ SATELLITE LATERAUX PASSAGER
22	.35	60AH	SIGNAL- SATELLITE LATERAUX CONDUCTEUR
23	.35	60AJ	SIGNAL- SATELLITE LATERAL AVANT PASSAGER
37	.35	60BR	SIGNAL CHOC UNITE CENTRALE ELECTRIQUE AIR BAG

	PLANCHE DE BORD DG	X64 00

UCE AIRBAG /PRETENSIONNEUR

E1

S5

CE0S OR


ENTREE DES FILS

756

25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
		60AJ	60AH	60AF	60AG	60BC	60BB	60AS	60AR		60W	60V	HL	60G	60F	HK		60A	N	AP29	60C	60B	60E	60D
		X	X	X	X	BE	X	BE	X		X	BE	X	X	BE	X		X	NO	JA	X	BE	X	BE
													60BR											
													X											
50	49	48	47	46	45					40			37			34	33			30				


N°	mm²		... → ...
1	.35	60D	+SIGNAL PRETENSIONNEUR CONDUCTEUR
2	.35	60E	-SIGNAL PRETENSIONNEUR CONDUCTEUR
3	.35	60B	+SIGNAL PRETENSIONNEUR PASSAGER
4	.35	60C	-SIGNAL PRETENSIONNEUR PASSAGER
5	.35	AP29	+ APRES CONTACT PROTEGE FUSIBLE FONCTION MOTEUR SECURITE
6	.35	N	MASSE ELECTRONIQUE
7	.35	60A	-VOYANT DEFAUT EUROBAG
9	.35	HK	SIGNAL DIAGNOSTIQUE K
10	.35	60F	+SIGNAL EUROBAG CONDUCTEUR
11	.35	60G	-SIGNAL EUROBAG CONDUCTEUR
12	.35	HL	SIGNAL DIAGNOSTIQUE L
13	.6	60V	+SIGNAL EUROBAG PASSAGER
14	.6	60W	-SIGNAL EUROBAG PASSAGER
16	.35	60AR	COMMANDE+ AIRBAG LATERAL CONDUCTEUR THORAX
17	.35	60AS	COMMANDE- AIRBAG LATERALCONDUCTEUR THORAX
18	.35	60BB	COMMANDE+ AIRBAG LATERAL THORAX PASSAGER
19	.35	60BC	COMMANDE- AIRBAG LATERAL THORAX PASSAGER
20	.35	60AG	SIGNAL+ SATELLITE LATERAL AVANT CONDUCTEUR
21	.35	60AF	SIGNAL+ SATELLITE LATERAUX PASSAGER
22	.35	60AH	SIGNAL- SATELLITE LATERAUX CONDUCTEUR
23	.35	60AJ	SIGNAL- SATELLITE LATERAL AVANT PASSAGER
37	.35	60BR	SIGNAL CHOC UNITE CENTRALE ELECTRIQUE AIR BAG

DRIVER'S BUCKLE FRONT PRETENSIONER
K25,L64/TUR
S8

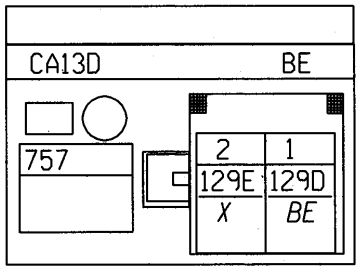


N°	mm²		··· ⟶ ···
1	.6	129D	+ DRIVER'S PRETENSIONER SIGNAL
2	.6	129E	- DRIVER'S PRETENSIONER SIGNAL

DRIVER'S BUCKLE FRONT PRETENSIONER
E3 SAUF TUR RUNLI/LAVPH
S8

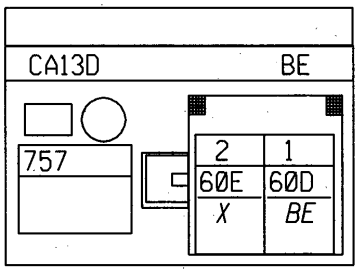

N°	mm²		··· ⟶ ···
1	.35	60D	+ DRIVER'S PRETENSIONER SIGNAL
2	.35	60E	- DRIVER'S PRETENSIONER SIGNAL


PASSENGER'S BUCKLE FRONT PRETENSIONER
K25,L64/TUR
S5-S9

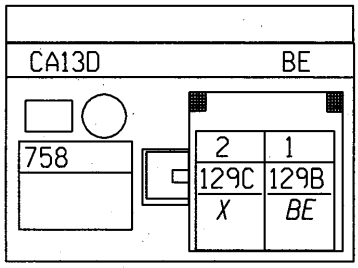

N°	mm²		··· ⟶ ···
1	.6	129B	+ PASSENGER'S PRETENSIONER SIGNAL
2	.6	129C	- PASSENGER'S PRETENSIONER SIGNAL

DRIVER'S BUCKLE FRONT PRETENSIONER


S8

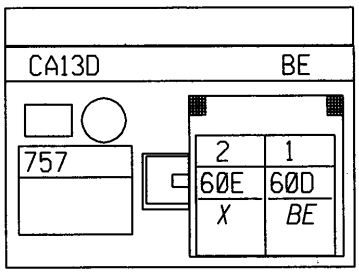

N°	mm²		... ⟶ ...
1	.35	60D	+ DRIVER'S PRETENSIONER SIGNAL
2	.35	60E	- DRIVER'S PRETENSIONER SIGNAL

PASSENGER'S BUCKLE FRONT PRETENSIONER


S5-S9

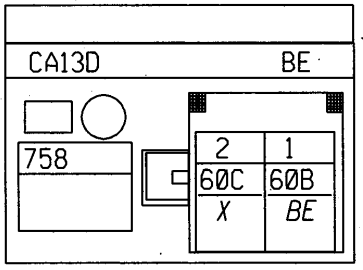

N°	mm²		... ⟶ ...
1	.35	60B	+ PASSENGER'S PRETENSIONER SIGNAL
2	.35	60C	- PASSENGER'S PRETENSIONER SIGNAL

REAR SCREEN/HEATED SCREEN CONTROL

S5

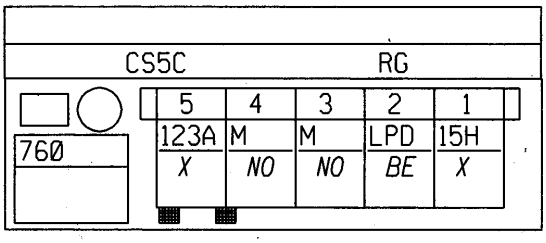


N°	mm²		... ⟶ ...
1	.35	15H	- HEATED REAR SCREEN > REAR WINDOW CONTROL UNIT CONTROL
2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
3	.35	M	EARTH
4	.35	M	EARTH
5	.35	123A	- HEATED SCREEN START UP CONTROL UNIT CONTROL

DRIVER'S BUCKLE FRONT PRETENSIONER

E1

S8

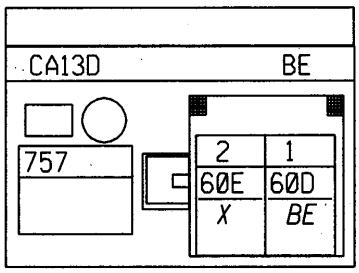


N°	mm²		... ⟶ ...
1	.35	60D	+ DRIVER'S PRETENSIONER SIGNAL
2	.35	60E	- DRIVER'S PRETENSIONER SIGNAL

PASSENGER'S BUCKLE FRONT PRETENSIONER

E1

S5-S9

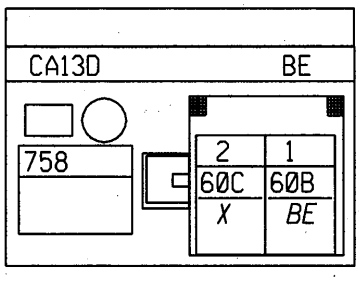


N°	mm²		... ⟶ ...
1	.35	60B	+ PASSENGER'S PRETENSIONER SIGNAL
2	.35	60C	- PASSENGER'S PRETENSIONER SIGNAL

REAR SCREEN/HEATED SCREEN CONTROL


E1

S5

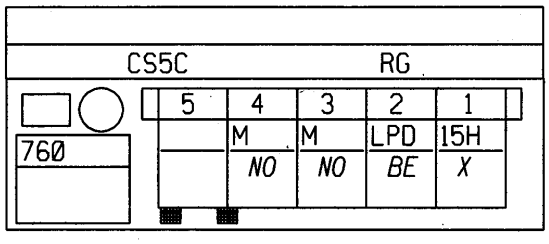


N°	mm²		... ⟶ ....
1	.35	15H	- HEATED REAR SCREEN > REAR WINDOW CONTROL UNIT CONTROL
2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
3	.35	M	EARTH
4	.35	M	EARTH

PASSENGER'S BUCKLE FRONT PRETENSIONER
E3 SAUF TUR RUNLI/LAVPH
S5-S9

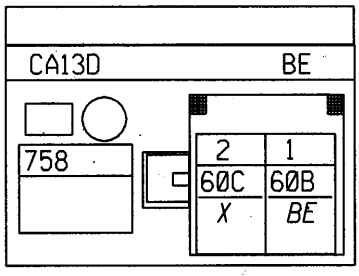


N°	mm²		... → ...
1	.35	60B	+ PASSENGER'S PRETENSIONER SIGNAL
2	.35	60C	- PASSENGER'S PRETENSIONER SIGNAL

REAR SCREEN/HEATED SCREEN CONTROL
K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR
S5

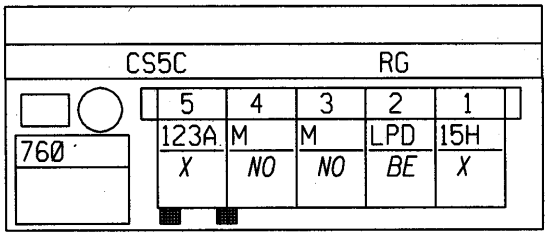

N°	mm²		... → ...
1	.35	15H	- HEATED REAR SCREEN > REAR WINDOW CONTROL UNIT CONTROL
2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
3	.35	M	EARTH
4	.35	M	EARTH
5	.35	123A	- HEATED SCREEN START UP CONTROL UNIT CONTROL


DOOR/SEAT BELT WARNING MODULE
K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR
S5

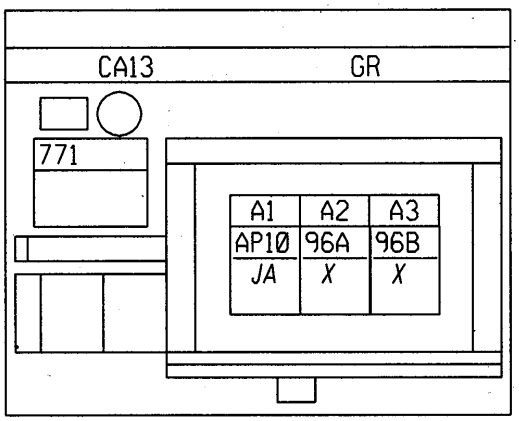

N°	mm²		... → ...
A1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
A2	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL
A3	.35	96B	- DOOR OPEN WARNING LIGHT CONTROL


DOOR/SEAT BELT WARNING MODULE

S5

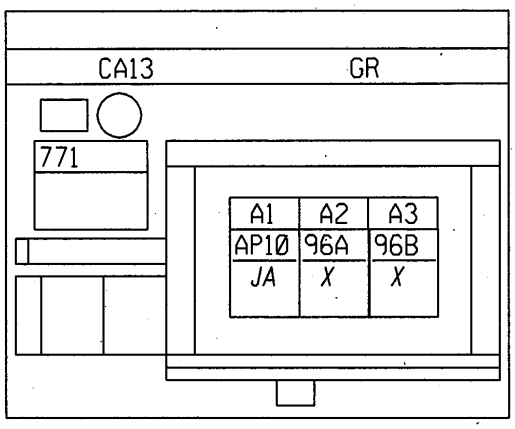

N°	mm²		... → ...
A1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
A2	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL
A3	.35	96B	- DOOR OPEN WARNING LIGHT CONTROL

FRONT PASSENGER'S AIRBAG

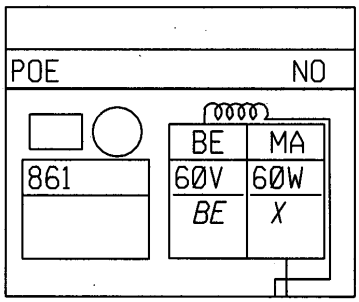


N°	mm²		... → ...
BE	.6	60V	+ PASSENGER AIR BAG SIGNAL
MA	.6	60W	- PASSENGER AIR BAG SIGNAL

DOOR/SEAT BELT WARNING MODULE

E1

S5

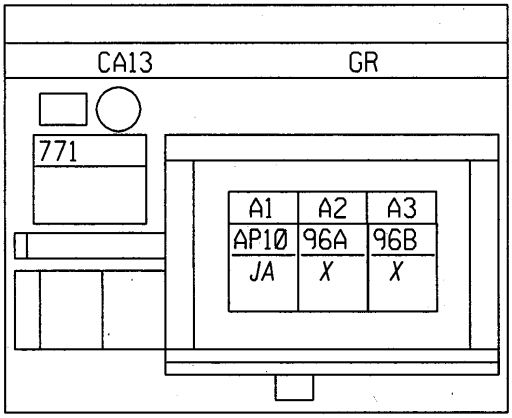


N°	mm²		··· ⟶ ···
A1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
A2	.35	96A	- SEAT BELT INDICATOR LIGHT CONTROL
A3	.35	96B	- DOOR OPEN WARNING LIGHT CONTROL

POWER SUPPLY FUSE PLATE

E1

S2-S3-S6-S28-S29-S31-S32-S33-S35

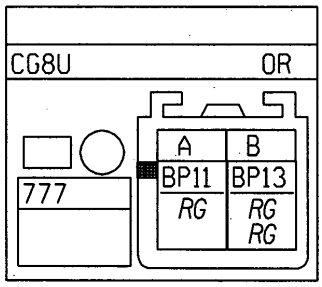


N°	mm²		··· ⟶ ···
A	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
B	2	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
B	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3

POWER SUPPLY FUSE PLATE

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS E3 SAUF TUR

S2-S3-S6-S28-S29-S31-S32-S33-S35

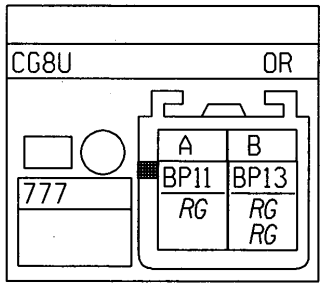


N°	mm²		... ⟶ ...
A	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
B	2	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
B	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3

PASSENGER EURO BAG (NPU)

K25,L64/TUR B64,L64/E1/MERCOS B64/L64/E2,E3/MERCOS


S5-S6

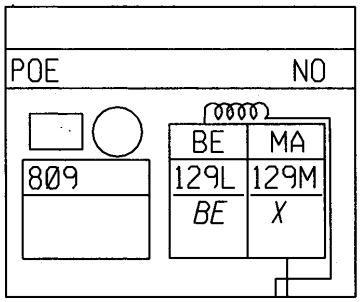

N°	mm²		... ⟶ ...
BE	.6	129L	+ PASSENGER AIRBAG 2 SIGNAL
MA	.6	129M	- PASSENGER AIRBAG 2 SIGNAL


FRONT PASSENGER'S AIRBAG

E3 SAUF TUR RUNLI/LAVPH

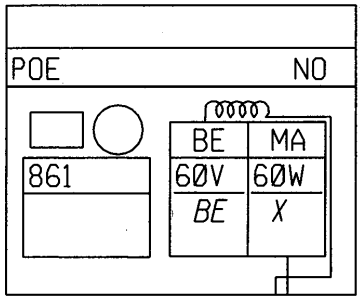


N°	mm²		... ⟶ ...
BE	.6	60V	+ PASSENGER AIR BAG SIGNAL
MA	.6	60W	- PASSENGER AIR BAG SIGNAL

FRONT PASSENGER'S AIRBAG
E1

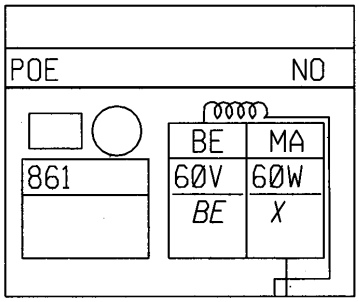


N°	mm²		... → ...
BE	.6	60V	+ PASSENGER AIR BAG SIGNAL
MA	.6	60W	- PASSENGER AIR BAG SIGNAL

GEAR LEVER ELECTRO-MAGNET FROM VRLJ 3RD SELECTED
E3 SAUF TUR RUNLI/LAVPH
S8

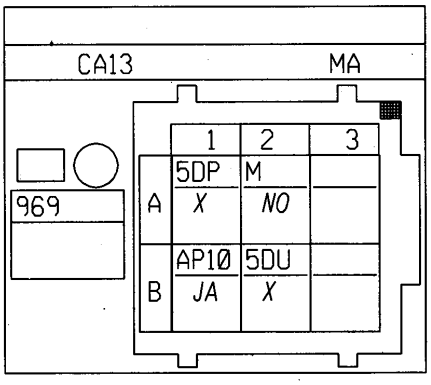

N°	mm²		... → ...
A1	.35	5DP	1ST GEAR CONTROL > N-1 PULSE CONTROL
B1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
A2	.35	M	EARTH
B2	.6	5DU	- GEAR CHANGE LEVER LOCK CONTROL


LPG OR PETROL SELECTOR SWITCH
E3 SAUF TUR
S4

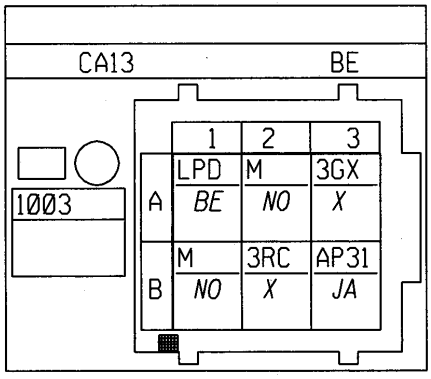

N°	mm²		... → ...
A1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
B1	.35	M	EARTH
A2	.35	M	EARTH
B2	.35	3RC	LIQUIFIED PETROLEUM GAS START STOP SIGNAL
A3	.35	3GX	+ FUEL/LPG SELECTION INDICATOR LIGHT CONTROL
B3	.35	AP31	+ AFTER IGNITION PROTECTED FUSE LPG COMPUTER

GEAR LEVER ELECTRO-MAGNET FROM VRLJ 3RD SELECTED


S8

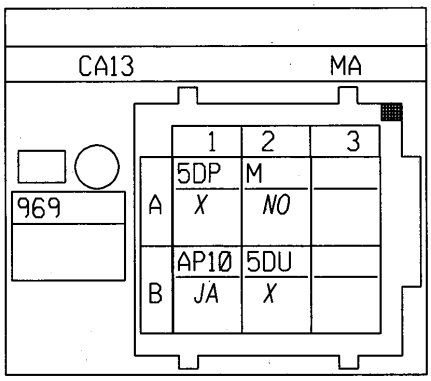

N°	mm²		... ⟶ ...
A1	.35	5DP	1ST GEAR CONTROL > N-1 PULSE CONTROL
B1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
A2	.35	M	EARTH
B2	.6	5DU	- GEAR CHANGE LEVER LOCK CONTROL

LPG OR PETROL SELECTOR SWITCH


S4

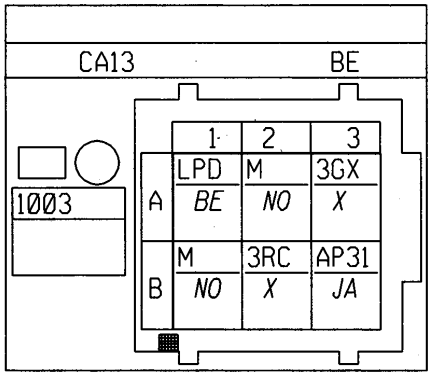

N°	mm²		... ⟶ ...
A1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
B1	.35	M	EARTH
A2	.35	M	EARTH
B2	.35	3RC	LIQUIFIED PETROLEUM GAS START STOP SIGNAL
A3	.35	3GX	+ FUEL/LPG SELECTION INDICATOR LIGHT CONTROL
B3	.35	AP31	+ AFTER IGNITION PROTECTED FUSE LPG COMPUTER

PASSENGER COMPARTMENT FUSEBOX
B64,L64/E1/MERCOS
S1-S6-S10-S11


CG2U NO

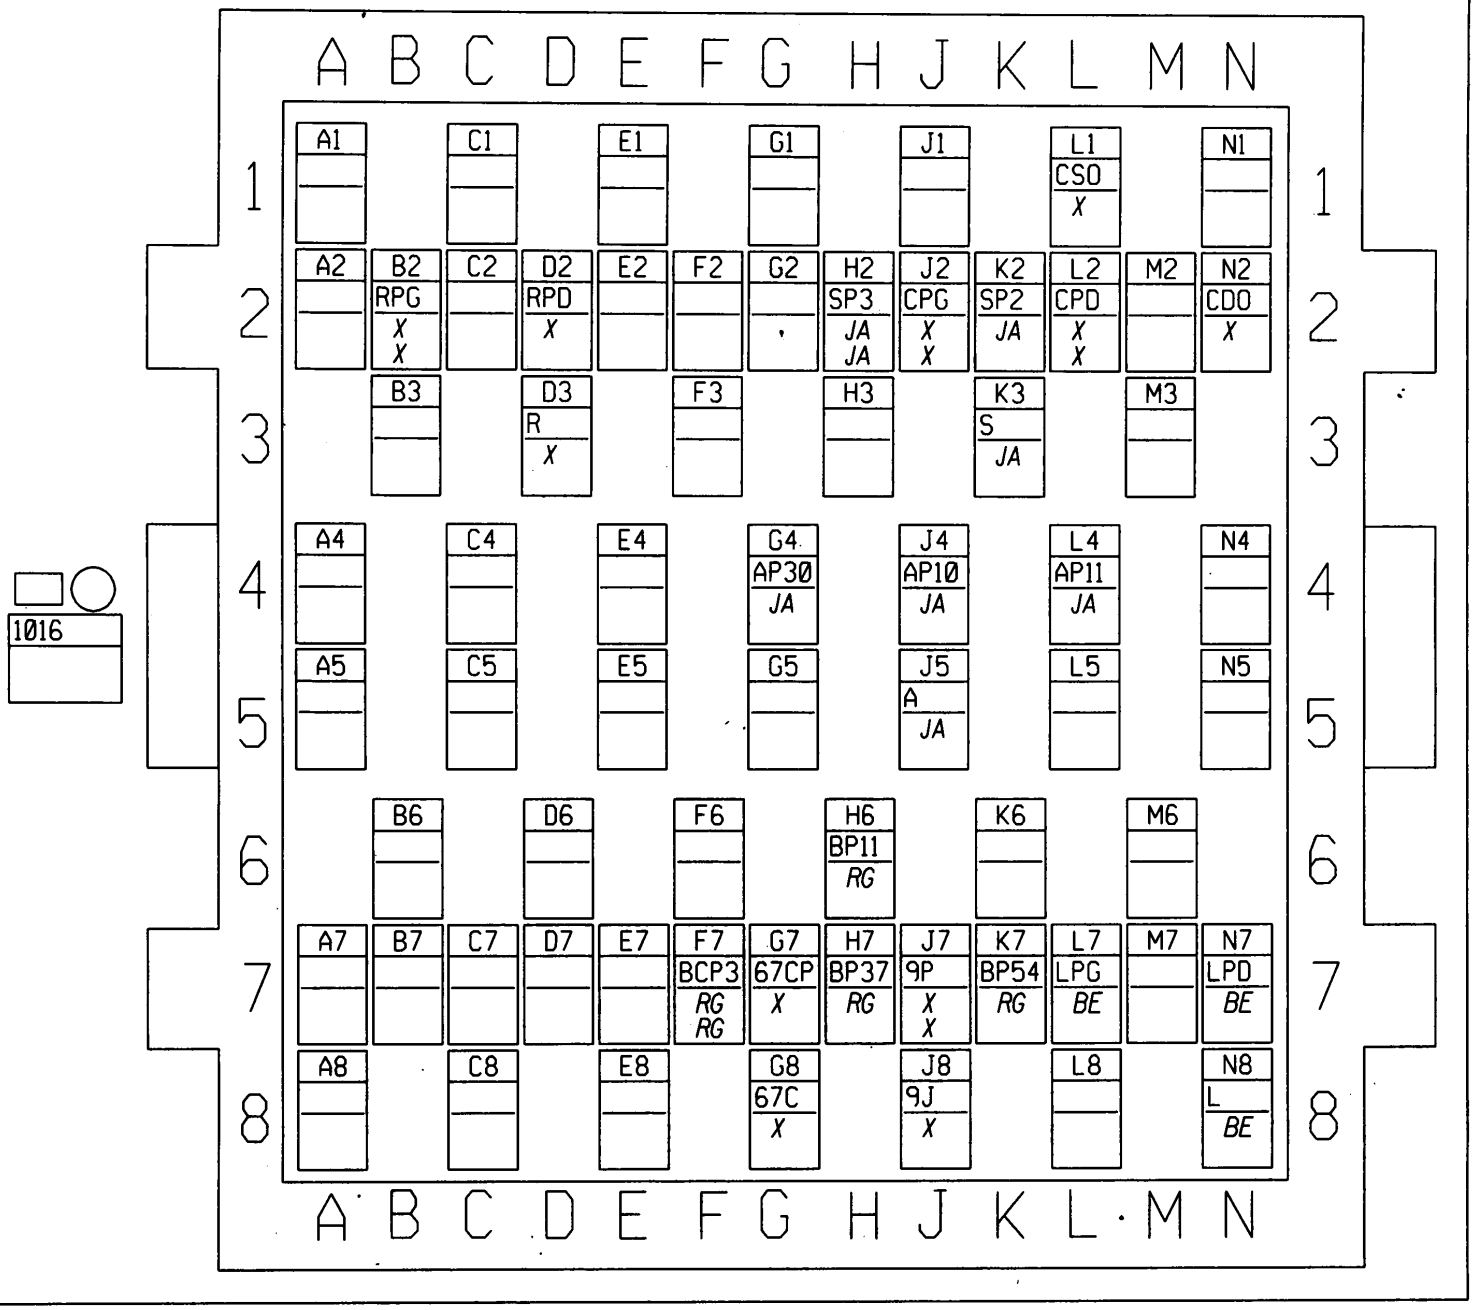

N°	mm²		... ⟶ ...
L1	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
B2	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
B2	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
D2	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
H2	1.4	SP3	+ PROTECTED CONTROL > HEATING
H2	1.4	SP3	+ PROTECTED CONTROL > HEATING
J2	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
J2	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
K2	1.4	SP2	+ PROTECTED CONTROL > RADIO >
L2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
L2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
N2	2	CDO	+ DIPPED HEADLIGHT - DUAL HEADLIGHT
D3	2	R	+ MAIN BEAM HEADLIGHTS
K3	3	S	+ FUSE BOARD FUSE
G4	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
J4	2	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
L4	2	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
J5	3	A	+ AFTER IGNITION
H6	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
F7	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
F7	1	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
G7	2	67CP	+ HORN > FUSE CONTROL
H7	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
J7	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
J7	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
K7	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
L7	1	LPG	LEFT HAND SIDE LIGHT PROTECTED +
N7	1	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
G8	2	67C	+ HORN FUSE CONTROL
J8	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
N8	2	L	SIDE LIGHT +

PASSENGER COMPARTMENT FUSEBOX
B64/L64/E2,E3/MERCOS
S1-S6-S10-S11


CG2U NO

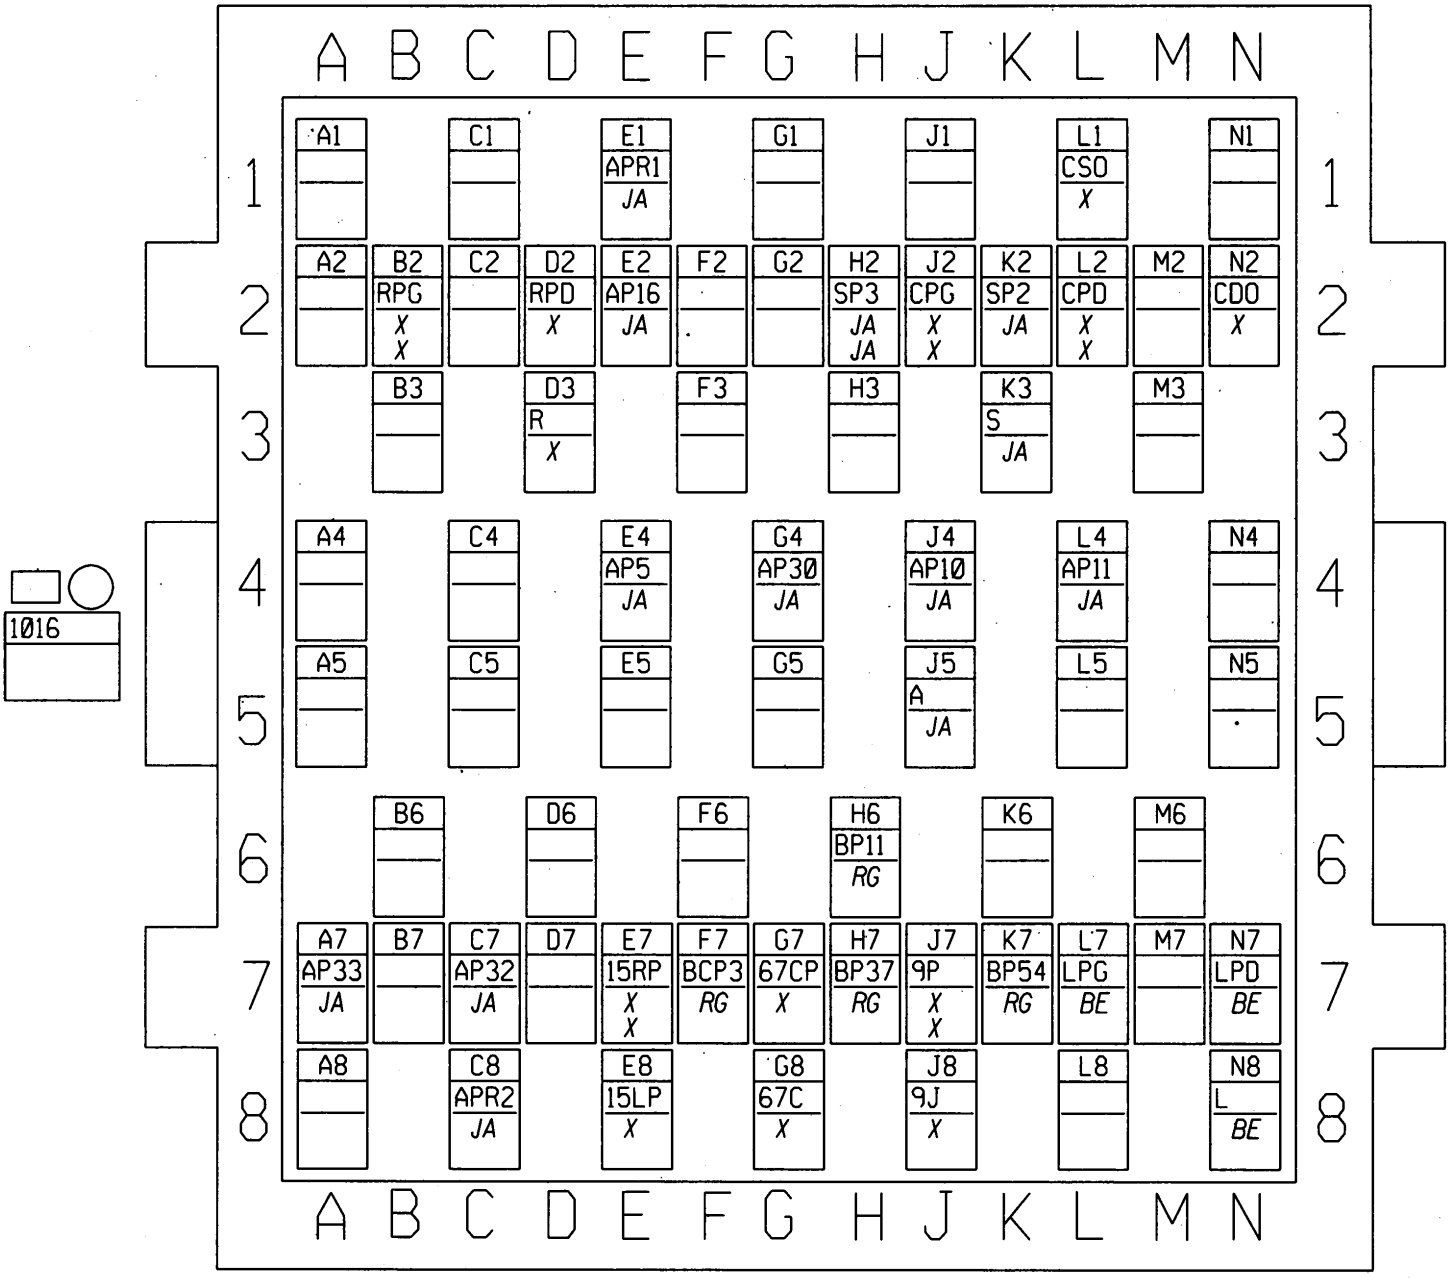

N°	mm²		··· ⟶ ···
E1	3	APR1	AFTER-IGNITION RELAY 1
L1	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
B2	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
B2	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
D2	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
E2	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE
H2	1.4	SP3	+ PROTECTED CONTROL > HEATING
H2	1.4	SP3	+ PROTECTED CONTROL > HEATING
J2	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
J2	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
K2	1.4	SP2	+ PROTECTED CONTROL > RADIO >
L2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
L2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
N2	2	CDO	+ DIPPED HEADLIGHT - DUAL HEADLIGHT
D3	2	R	+ MAIN BEAM HEADLIGHTS
K3	3	S	+ FUSE BOARD FUSE
E4	.6	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
G4	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
J4	2	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
L4	2	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
J5	3	A	+ AFTER IGNITION
H6	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
A7	1.4	AP33	+ AFTER IGNITION LEFT-HAND REAR WINDOW WINDER FUSE PROTECTION
C7	2	AP32	+ AFTER IGNITION RIGHT-HAND REAR WINDOW WINDER FUSE PROTECTION
E7	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
E7	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
F7	2	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
G7	2	67CP	+ HORN > FUSE CONTROL
H7	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
J7	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
J7	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
K7	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
L7	1	LPG	LEFT HAND SIDE LIGHT PROTECTED +
N7	1	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
C8	3	APR2	AFTER-IGNITION RELAY 2
E8	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
G8	2	67C	+ HORN FUSE CONTROL
J8	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
N8	2	L	SIDE LIGHT +

PASSENGER COMPARTMENT FUSEBOX
E3 SAUF TUR RUNLI/LAVPH
S1-S6-S10-S11


CG2U NO

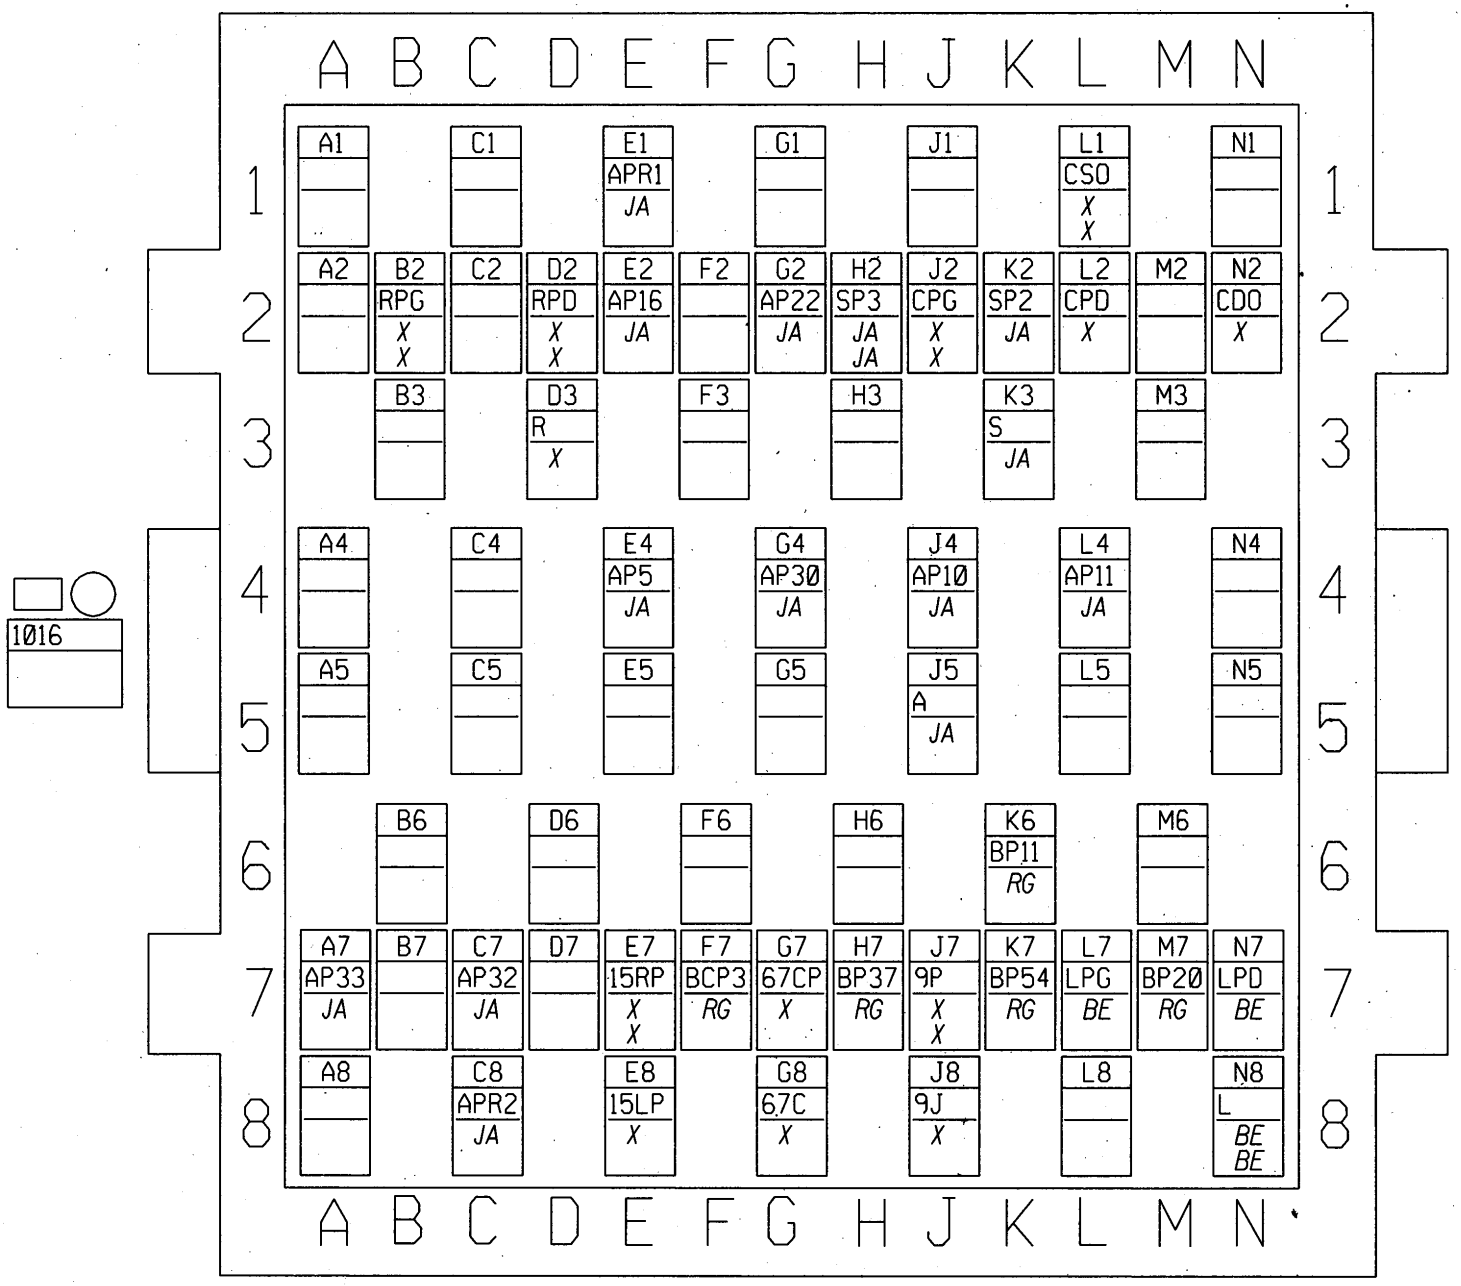

N°	mm²		... → ...
E1	3	APR1	AFTER-IGNITION RELAY 1
L1	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
L1	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
B2	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
B2	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
D2	.6	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
D2	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
E2	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE
G2	.6	AP22	+ AFTER IGNITION PROTECTED FUSE HEATED SEAT
H2	1.4	SP3	+ PROTECTED CONTROL > HEATING
H2	1.4	SP3	+ PROTECTED CONTROL > HEATING
J2	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
J2	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
K2	1.4	SP2	+ PROTECTED CONTROL > RADIO >
L2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
N2	2	CDO	+ DIPPED HEADLIGHT - DUAL HEADLIGHT
D3	2	R	+ MAIN BEAM HEADLIGHTS
K3	3	S	+ FUSE BOARD FUSE
E4	.6	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
G4	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
J4	2	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
L4	2	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
J5	3	A	+ AFTER IGNITION
K6	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
A7	1.4	AP33	+ AFTER IGNITION LEFT-HAND REAR WINDOW WINDER FUSE PROTECTION
C7	2	AP32	+ AFTER IGNITION RIGHT-HAND REAR WINDOW WINDER FUSE PROTECTION
E7	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
E7	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
F7	2	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
G7	2	67CP	+ HORN > FUSE CONTROL
H7	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
J7	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
J7	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
K7	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
L7	1	LPG	LEFT HAND SIDE LIGHT PROTECTED +
M7	1	BP20	PROTECTED BATTERY - HEADLIGHT WASHER
N7	1	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
C8	3	APR2	AFTER-IGNITION RELAY 2
E8	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
G8	2	67C	+ HORN FUSE CONTROL
J8	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
N8	2	L	SIDE LIGHT +
N8	2	L	SIDE LIGHT +

PASSENGER COMPARTMENT FUSEBOX
K25,L64/TUR
S1-S6-S10-S11

CG2U NO

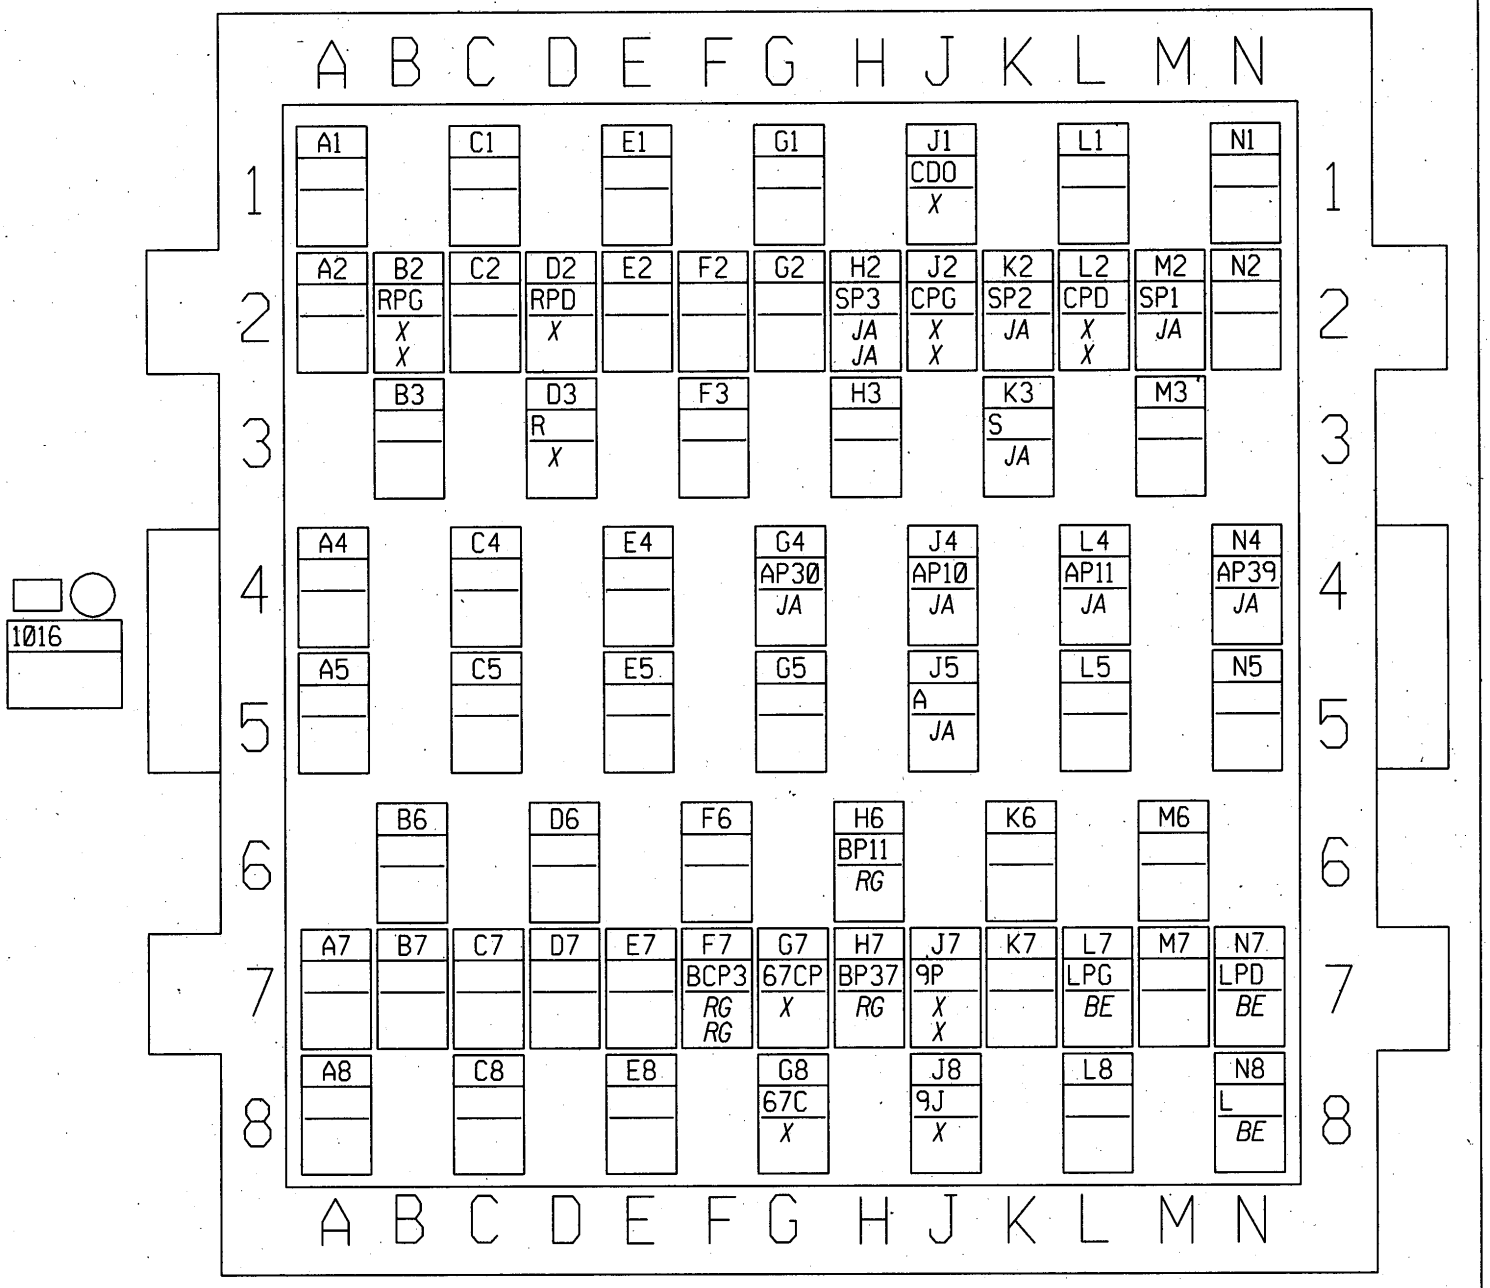


N°	mm²		... ⟶ ...
J1	2	CDO	+ DIPPED HEADLIGHT - DUAL HEADLIGHT
B2	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
B2	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
D2	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
H2	1.4	SP3	+ PROTECTED CONTROL > HEATING
H2	1.4	SP3	+ PROTECTED CONTROL > HEATING
J2	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
J2	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
K2	1.4	SP2	+ PROTECTED CONTROL > RADIO >
L2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
L2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
M2	1	SP1	+ PROTECTED CONTROL > FAN ASSEMBLY
D3	2	R	+ MAIN BEAM HEADLIGHTS
K3	3	S	+ FUSE BOARD FUSE
G4	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
J4	2	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
L4	2	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
N4	1.4	AP39	+ AFTER IGNITION DRIVER'S ELECTRIC WINDOW PROTECTED FUSE
J5	3	A	+ AFTER IGNITION
H6	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
F7	1	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
F7	2	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
G7	2	67CP	+ HORN > FUSE CONTROL
H7	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
J7	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
J7	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
L7	1	LPG	LEFT HAND SIDE LIGHT PROTECTED +
N7	1	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
G8	2	67C	+ HORN FUSE CONTROL
J8	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
N8	2	L	SIDE LIGHT +

PASSENGER COMPARTMENT FUSEBOX

S1-S6-S10-S11


CG2U NO

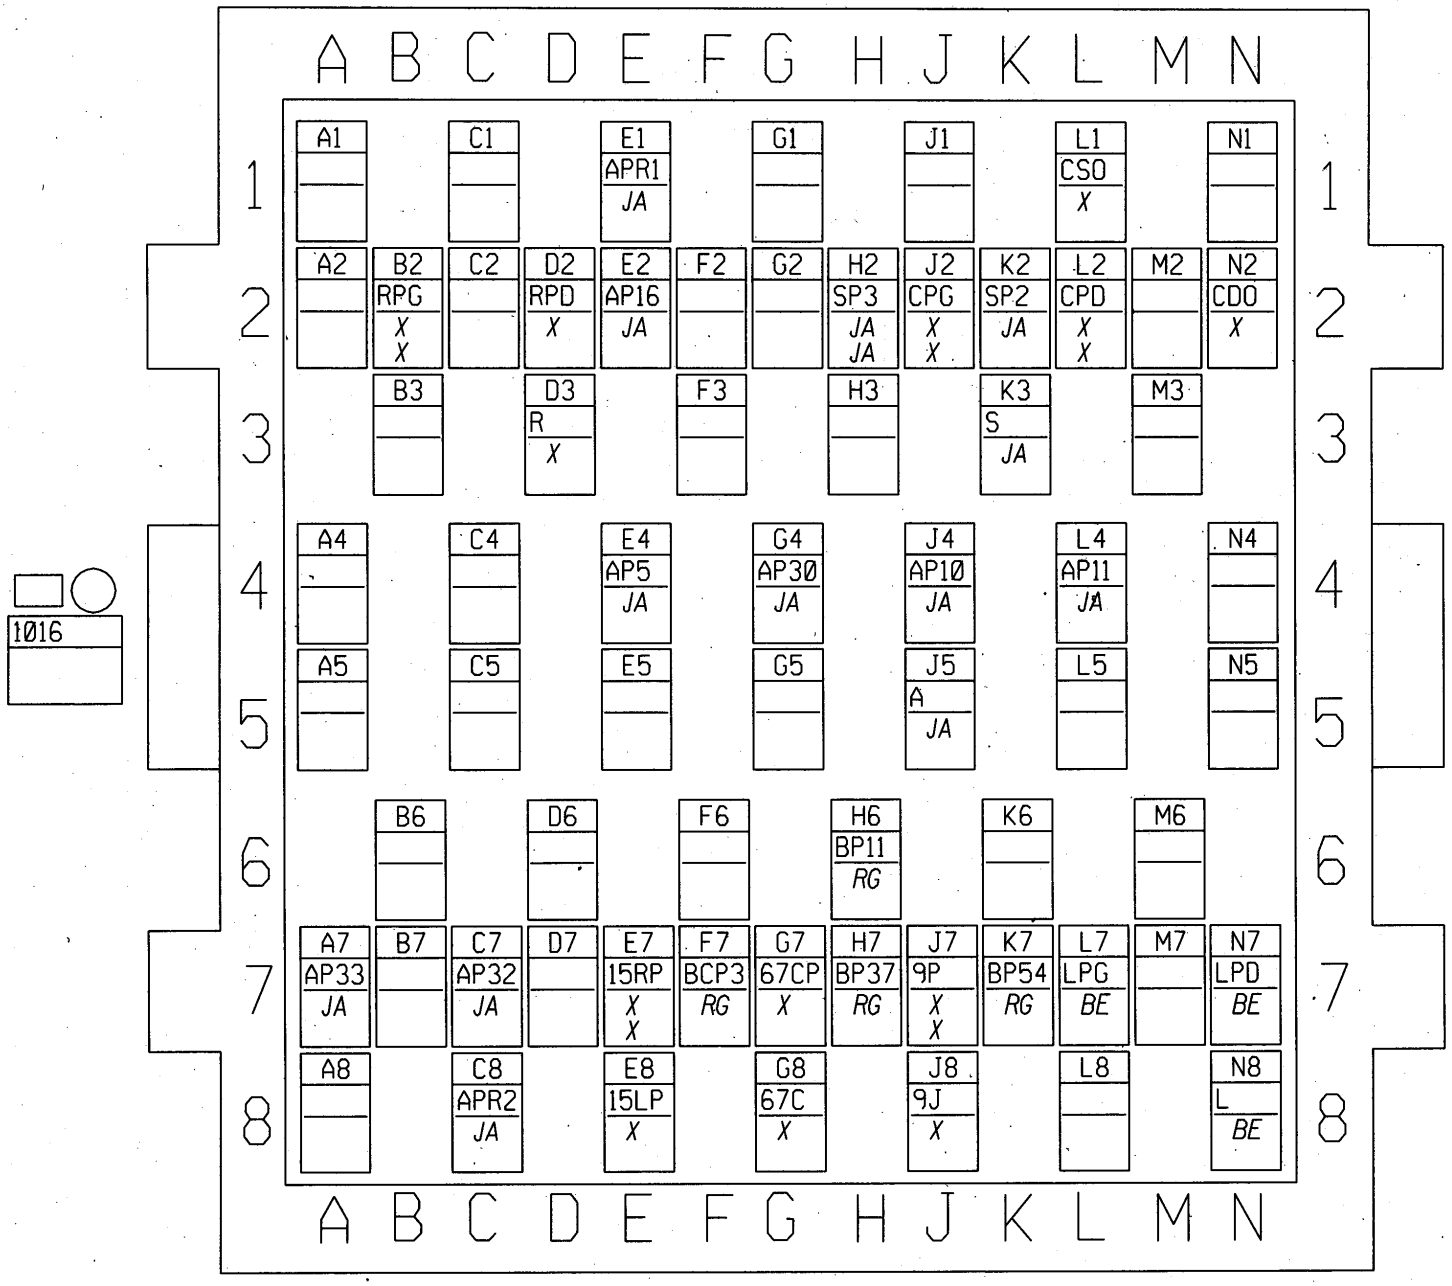

N°	mm²		... → ...
E1	2	APR1	AFTER-IGNITION RELAY 1
L1	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
B2	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
B2	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
D2	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
E2	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE
H2	1.4	SP3	+ PROTECTED CONTROL > HEATING
H2	1.4	SP3	+ PROTECTED CONTROL > HEATING
J2	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
J2	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
K2	1.4	SP2	+ PROTECTED CONTROL > RADIO >
L2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
L2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
N2	2	CDO	+ DIPPED HEADLIGHT - DUAL HEADLIGHT
D3	2	R	+ MAIN BEAM HEADLIGHTS
K3	3	S	+ FUSE BOARD FUSE
E4	.6	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
G4	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
J4	2	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
L4	2	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
J5	3	A	+ AFTER IGNITION
H6	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
A7	1.4	AP33	+ AFTER IGNITION LEFT-HAND REAR WINDOW WINDER FUSE PROTECTION
C7	2	AP32	+ AFTER IGNITION RIGHT-HAND REAR WINDOW WINDER FUSE PROTECTION
E7	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
E7	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
F7	2	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
G7	2	67CP	+ HORN > FUSE CONTROL
H7	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
J7	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
J7	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
K7	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
L7	1	LPG	LEFT HAND SIDE LIGHT PROTECTED +
N7	1	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
C8	3	APR2	AFTER-IGNITION RELAY 2
E8	.6	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
G8	2	67C	+ HORN FUSE CONTROL
J8	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
N8	2	L	SIDE LIGHT +


PASSENGER COMPARTMENT FUSEBOX
E1
S1-S6-S10-S11

CG2U NO

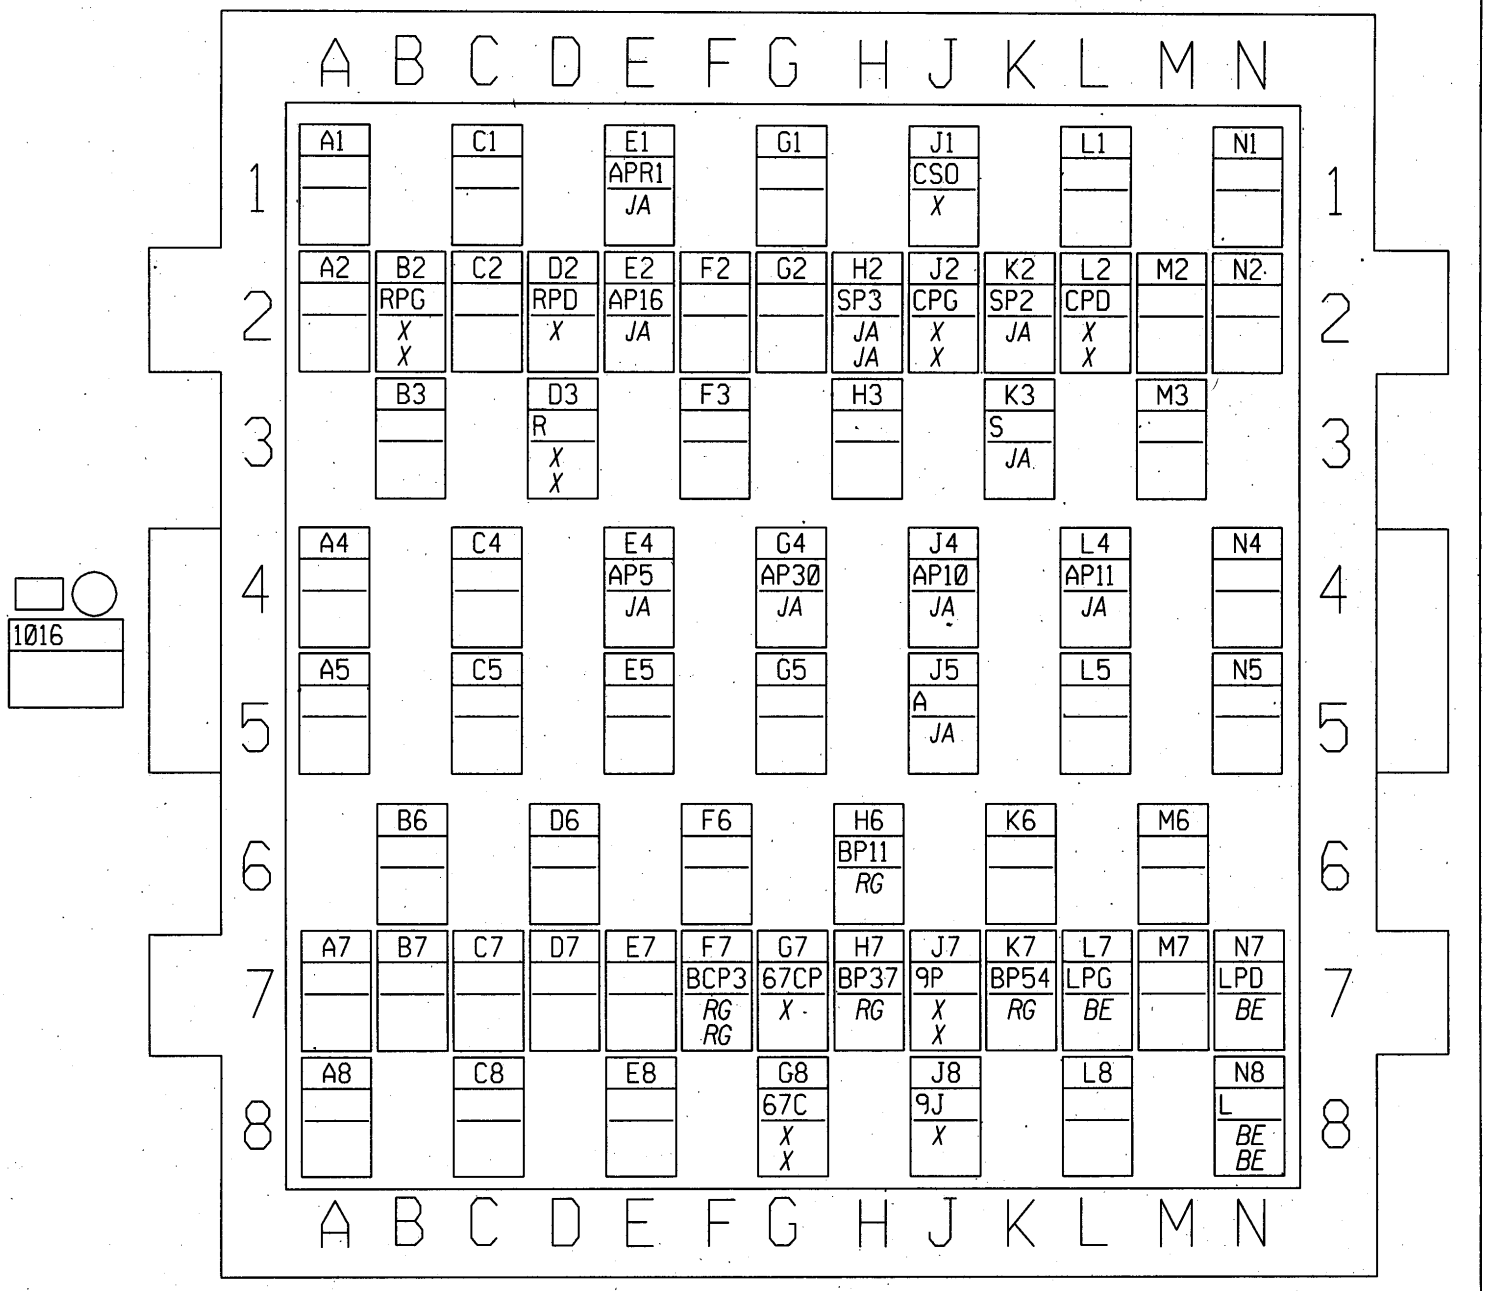


N°	mm²		... → ...
E1	3	APR1	AFTER-IGNITION RELAY 1
J1	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
B2	.35	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
B2	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT
D2	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
E2	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE
H2	1.4	SP3	+ PROTECTED CONTROL > HEATING
H2	1.4	SP3	+ PROTECTED CONTROL > HEATING
J2	.35	CPG	+ LH PROTECTED DIPPED HEADLIGHT
J2	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
K2	1.4	SP2	+ PROTECTED CONTROL > RADIO >
L2	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
L2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
D3	2	R	+ MAIN BEAM HEADLIGHTS
D3	2	R	+ MAIN BEAM HEADLIGHTS
K3	3	S	+ FUSE BOARD FUSE
E4	.6	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
G4	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
J4	2	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
L4	2	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
J5	3	A	+ AFTER IGNITION
H6	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
F7	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
F7	1	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
G7	2	67CP	+ HORN > FUSE CONTROL
H7	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
J7	.35	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
J7	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
K7	1	BP54	+ FRONT FOG LIGHTS FUSE PROTECTED BATTERY
L7	1	LPG	LEFT HAND SIDE LIGHT PROTECTED +
N7	1	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
G8	2	67C	+ HORN FUSE CONTROL
G8	2	67C	+ HORN FUSE CONTROL
J8	2	9J	+ REAR FOG LIGHTS FUSE CONTROL
N8	2	L	SIDE LIGHT +
N8	2	L	SIDE LIGHT +

SIDE AIR BAG, HEAD/CHEST, DRIVER'S SIDE
E3 SAUF TUR RUNLI/LAVPH
S8

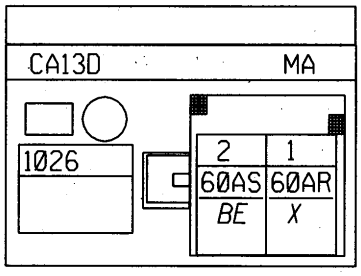


N°	mm²		··· ⟶ ···
	.35	60AR	DRIVER'S CHEST SIDE AIR BAG + CONTROL
	.35	60AS	DRIVER'S CHEST SIDE AIR BAG - CONTROL

PASSENGER SIDE AIR BAG FRONT HEAD/CHEST
E3 SAUF TUR RUNLI/LAVPH

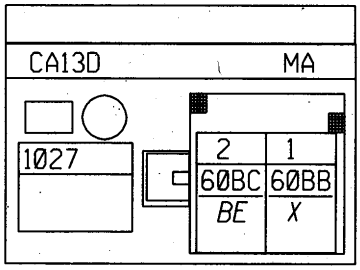

N°	mm²		··· ⟶ ···
1	.35	60BB	PASSENGER'S CHEST SIDE AIR BAG + CONTROL
2	.35	60BC	PASSENGER'S CHEST SIDE AIR BAG - CONTROL


DRIVER SIDE FRONT SATELLITE CONSOLE
E3 SAUF TUR RUNLI/LAVPH

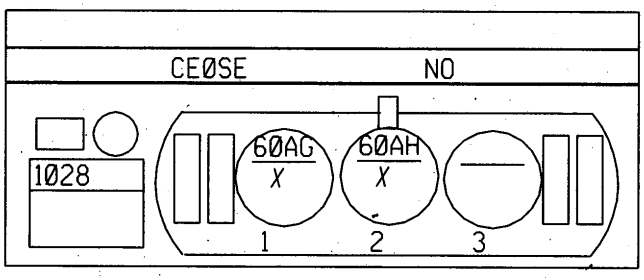

N°	mm²		··· ⟶ ···
1	.35	60AG	DRIVER SIDE FRONT SATELLITE CONSOLE + SIGNAL
2	.35	60AH	SIGNAL- DRIVER SIDE SATELLITE CONSOLE


SIDE AIR BAG, HEAD/CHEST, DRIVER'S SIDE

S8

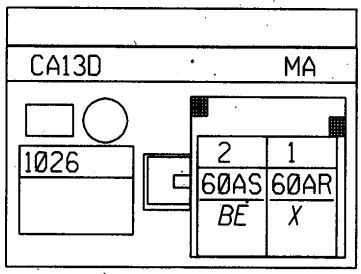


N°	mm²		··· ⟶ ···
1	.35	60AR	DRIVER'S CHEST SIDE AIR BAG + CONTROL
2	.35	60AS	DRIVER'S CHEST SIDE AIR BAG - CONTROL

PASSENGER SIDE AIR BAG FRONT HEAD/CHEST

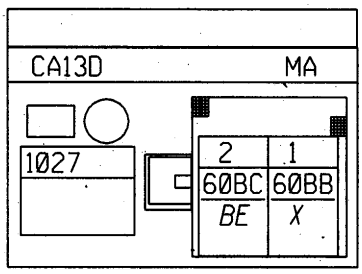

N°	mm²		··· ⟶ ···
1	.35	60BB	PASSENGER'S CHEST SIDE AIR BAG + CONTROL
2	.35	60BC	PASSENGER'S CHEST SIDE AIR BAG - CONTROL

DRIVER SIDE FRONT SATELLITE CONSOLE

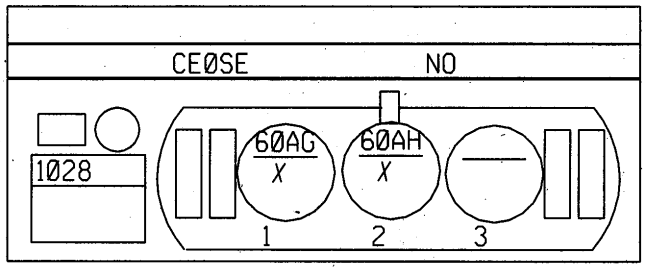


N°	mm²		··· ⟶ ···
1	.35	60AG	DRIVER SIDE FRONT SATELLITE CONSOLE + SIGNAL
2	.35	60AH	SIGNAL- DRIVER SIDE SATELLITE CONSOLE

SIDE AIR BAG, HEAD/CHEST, DRIVER'S SIDE

E1


S8

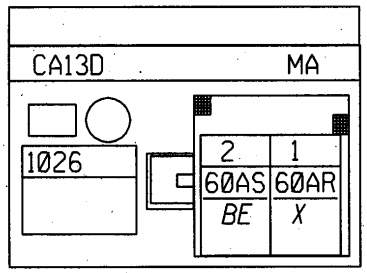

N°	mm²		... → ...
1	.35	60AR	DRIVER'S CHEST SIDE AIR BAG + CONTROL
2	.35	60AS	DRIVER'S CHEST SIDE AIR BAG - CONTROL

PASSENGER SIDE AIR BAG FRONT HEAD/CHEST


E1

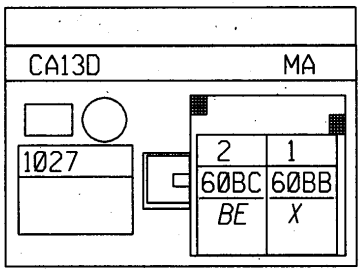

N°	mm²		... → ...
1	.35	60BB	PASSENGER'S CHEST SIDE AIR BAG + CONTROL
2	.35	60BC	PASSENGER'S CHEST SIDE AIR BAG - CONTROL


DRIVER SIDE FRONT SATELLITE CONSOLE

E1

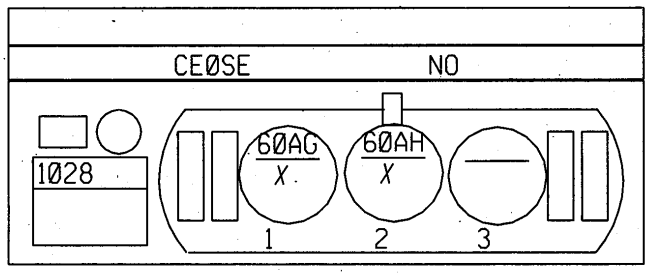


N°	mm²		... → ...
1	.35	60AG	DRIVER SIDE FRONT SATELLITE CONSOLE + SIGNAL
2	.35	60AH	SIGNAL- DRIVER SIDE SATELLITE CONSOLE

PASSENGER SIDE FRONT SATELLITE CONSOLE
E3 SAUF TUR RUNLI/LAVPH

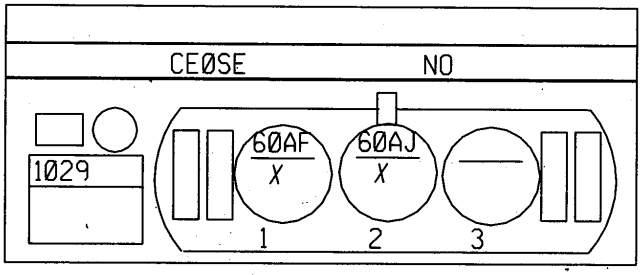


N°	mm²		... → ...
1	.35	60AF	SIGNAL+ PASSENGER SIDE SATELLITE CONSOLE
2	.35	60AJ	PASSENGER'S SIDE FRONT SATELLITE CONSOLE - SIGNAL

RUNNING-LIGHT RELAY MOUNTING
E3 SAUF TUR RUNLI/LAVPH
S6

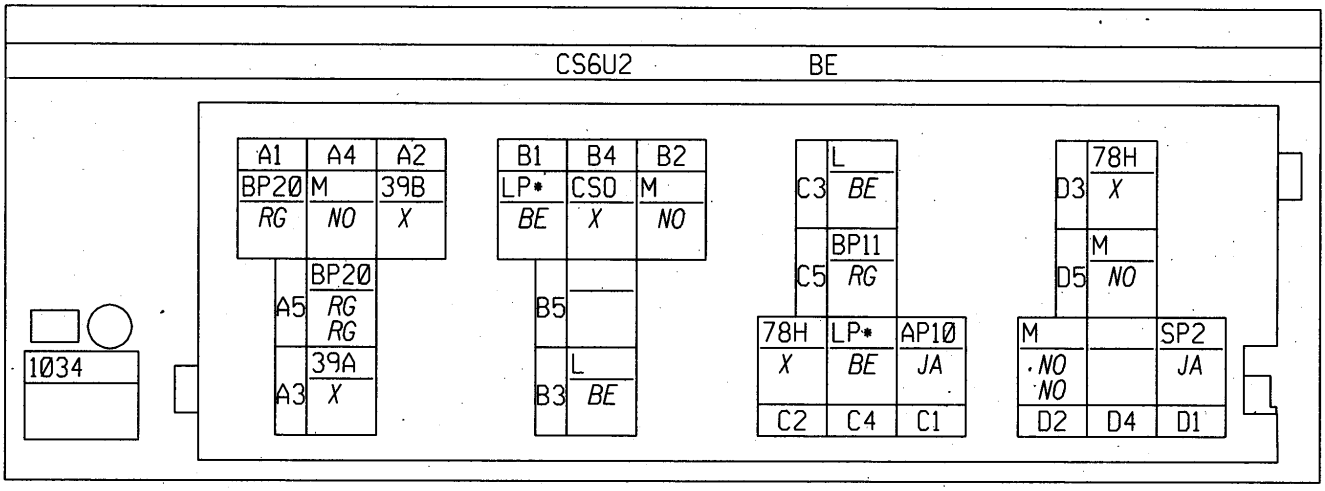

N°	mm²		... → ...
A1	.35	BP20	PROTECTED BATTERY - HEADLIGHT WASHER
B1	2	LP*	SIDE LIGHT UNALLOCATED PROTECTED +
C1	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
D1	.35	SP2	+ PROTECTED CONTROL > RADIO >
A2	.35	39B	- HEADLIGHT WASHER RELAY COIL > TIME SWITCH CONTROL
B2	2	M	EARTH
C2	.35	78H	DAY>NIGHT RELAY CONTROL
D2	.35	M	EARTH
D2	.35	M	EARTH
A3	1	39A	+ HEADLIGHT WASHER PUMP CONTROL
B3	2	L	SIDE LIGHT +
C3	2	L	SIDE LIGHT +
D3	.35	78H	DAY>NIGHT RELAY CONTROL
A4	1	M	EARTH
B4	2	CSO	+ DIPPED HEADLIGHT - SINGLE HEADLIGHTS
C4	2	LP*	SIDE LIGHT UNALLOCATED PROTECTED +
A5	.35	BP20	PROTECTED BATTERY - HEADLIGHT WASHER
A5	1	BP20	PROTECTED BATTERY - HEADLIGHT WASHER
C5	2	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
D5	.35	M	EARTH


PASSENGER SIDE FRONT SATELLITE CONSOLE

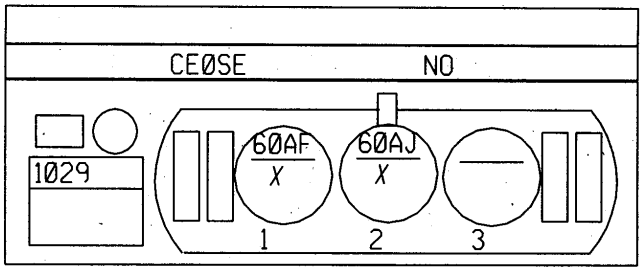

N°	mm²		... → ...
	.35	60AF	SIGNAL+ PASSENGER SIDE SATELLITE CONSOLE
	.35	60AJ	PASSENGER'S SIDE FRONT SATELLITE CONSOLE - SIGNAL


PASSENGER SIDE FRONT SATELLITE CONSOLE

E1

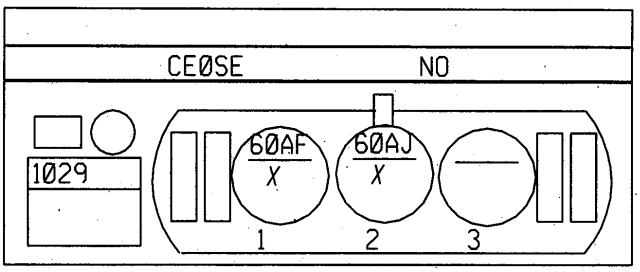


N°	mm²		... ⟶ ...
1	.35	60AF	SIGNAL+ PASSENGER SIDE SATELLITE CONSOLE
2	.35	60AJ	PASSENGER'S SIDE FRONT SATELLITE CONSOLE - SIGNAL

REAR RIGHT-HAND ELECTRIC WINDOW CONTROL
CATOEL CATOMA
S5-S8

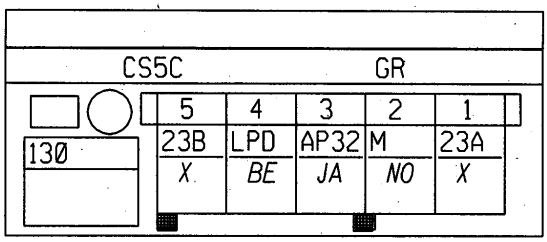


N°	mm²		... → ...
	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT PANEL CLOSURE
	2	M	EARTH
	2	AP32	+ AFTER IGNITION RIGHT-HAND REAR WINDOW WINDER FUSE PROTECTION
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING

LEFT-HAND ELECTRIC WINDOW CONTROL
CATOEL CATOMA
S5-S8

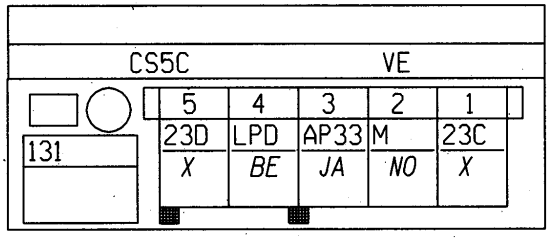


N°	mm²		... → ...
	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
	1.4	M	EARTII
	1.4	AP33	+ AFTER IGNITION LEFT-HAND REAR WINDOW WINDER FUSE PROTECTION
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-IIAND PANEL OPENING CONTROL

HOOD COVER INTERMEDIATE UNLOCKING
CATOEL

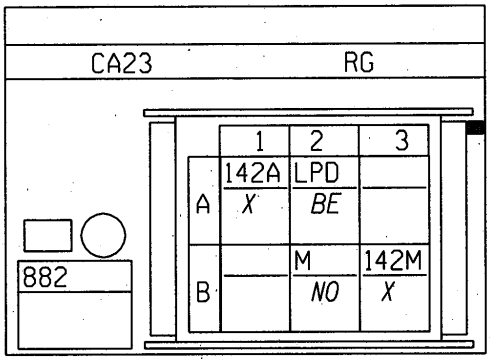


N°	mm²		... → ...
1	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL
2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
2	.35	M	EARTII
3	.35	142M	- ELECTRIC HOOD CLOSURE CONTROL

HOOD COVER INTERMEDIATE UNLOCKING
CATOMA

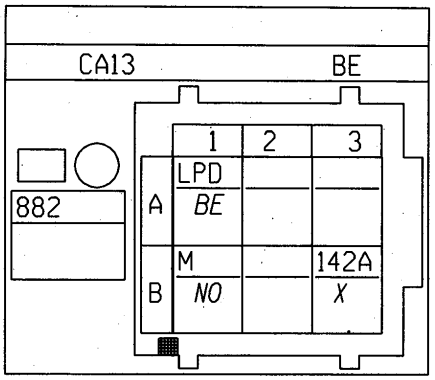


N°	mm²		... ⟶ ...
A1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
B1	.35	M	EARTH
B3	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL

REAR LEFT ELECTRIC DOOR LOCKING
LVAREL LVARMA
S8

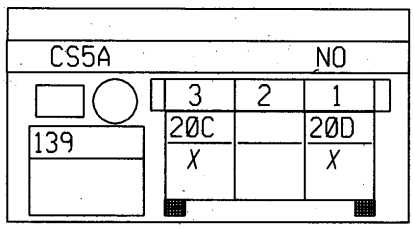

N°	mm²		... ⟶ ...
.6	20D		+ CLOSE CENTRAL DOOR LOCKING CONTROL
.6	20C		+ OPEN CENTRAL DOOR LOCKING CONTROL

LEFT-IIAND REAR WINDOW WINDER MOTOR
LVAREL
S12-S21

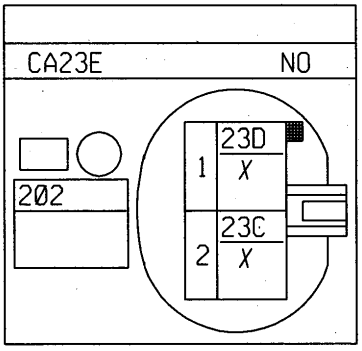


N°	mm²		... ⟶ ...
1.4	23D		WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
1.4	23C		WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL

ELECTRIC REAR-VIEW MIRROR COMMAND

DD

S10

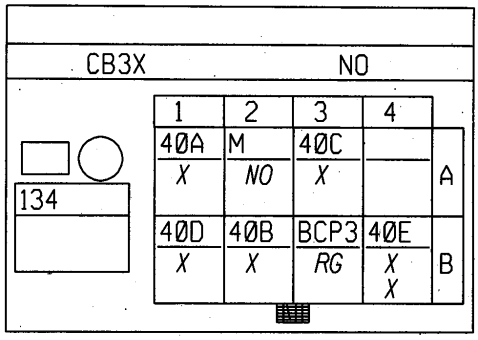


N°	mm²		... ⟶ ...
A1	.35	40A	RH>LH DRIVER'S REAR VIEW MIRROR CONTROL
B1	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
A2	.35	M	EARTH
B2	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
A3	.35	40C	UP>DOWN DRIVER'S REAR VIEW MIRROR CONTROL
B3	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
B4	.35	40E	COMMON MOTOR REAR VIEW MIRROR
B4	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DRIVER'S DOOR ELECTRIC LOCKING

DD DG

S10

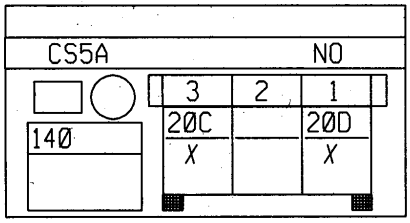


N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

FRONT LEFT DOOR SPEAKER

DD DG


S10

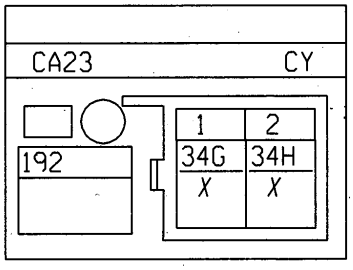

N°	mm²		... ⟶ ...
1	1	34G	SIGNAL+ LH FRONT SPEAKERS
2	1	34H	SIGNAL- LH FRONT SPEAKER

ELECTRIC REAR-VIEW MIRROR COMMAND


S10

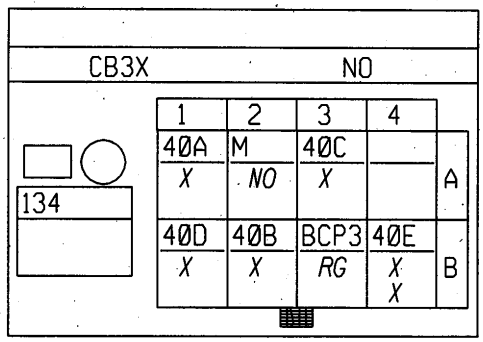

N°	mm²		... → ...
1	.35	40A	RH>LH DRIVER'S REAR VIEW MIRROR CONTROL
1	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
2	.35	M	EARTH
2	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
3	.35	40C	UP>DOWN DRIVER'S REAR VIEW MIRROR CONTROL
3	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
4	.35	40E	COMMON MOTOR REAR VIEW MIRROR
4	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DRIVER'S DOOR ELECTRIC LOCKING


S10

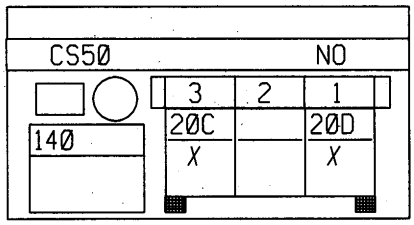

N°	mm²		... → ...
	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

FRONT LEFT DOOR SPEAKER


S10

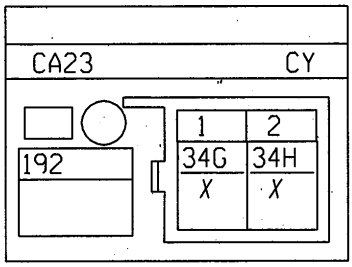

N°	mm²		... → ...
	1	34G	SIGNAL+ LH FRONT SPEAKERS
	1	34H	SIGNAL- LH FRONT SPEAKER

ELECTRIC REAR-VIEW MIRROR COMMAND


S10

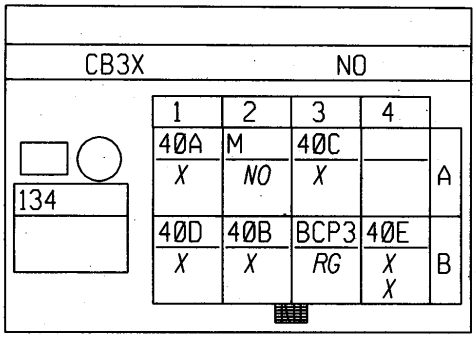

N°	mm²		... ⟶ ...
A1	.35	40A	RH>LH DRIVER'S REAR VIEW MIRROR CONTROL
B1	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
A2	.35	M	EARTH
B2	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
A3	.35	40C	UP>DOWN DRIVER'S REAR VIEW MIRROR CONTROL
B3	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
B4	.35	40E	COMMON MOTOR REAR VIEW MIRROR
B4	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DRIVER'S DOOR ELECTRIC LOCKING


S10

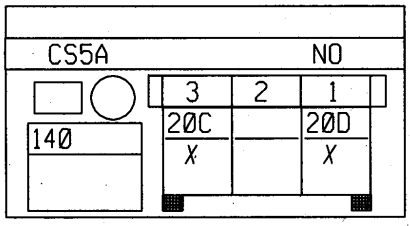

N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL


FRONT LEFT DOOR SPEAKER

S10

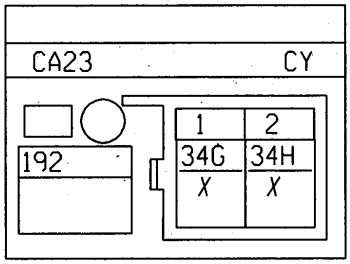


N°	mm²		... ⟶ ...
1	1	34G	SIGNAL+ LH FRONT SPEAKERS
2	1	34H	SIGNAL- LH FRONT SPEAKER

PASSENGER'S SIDE ELECTRIC WINDOW MOTOR
DD DG
S10

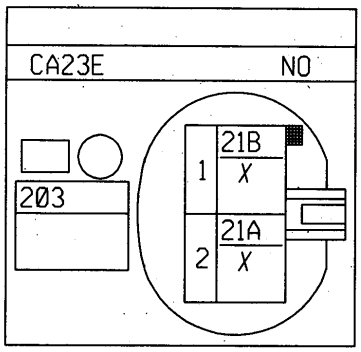


N°	mm²		··· → ···
	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL

DRIVER'S ELECTRIC REAR-VIEW MIRROR
DD
S10

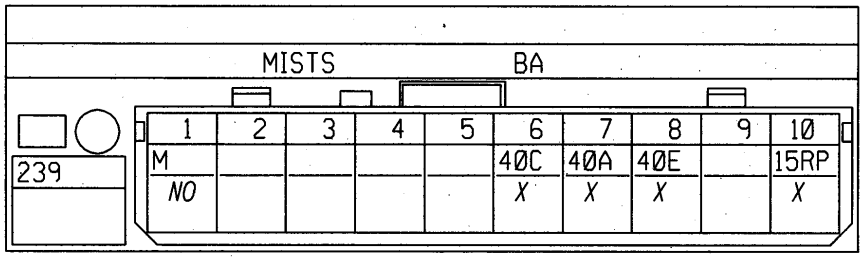

N°	mm²		··· → ···
	.35	M	EARTH
	.35	40C	UP>DOWN DRIVER'S REAR VIEW MIRROR CONTROL
	.35	40A	RH>LH DRIVER'S REAR VIEW MIRROR CONTROL
	.35	40E	COMMON MOTOR REAR VIEW MIRROR
	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL


DRIVER'S ELECTRIC REAR-VIEW MIRROR
DD
S10

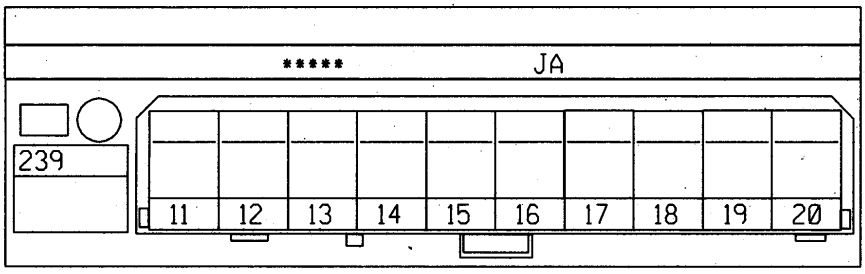

N°	mm²		··· → ···

PASSENGER'S SIDE ELECTRIC WINDOW MOTOR


S10

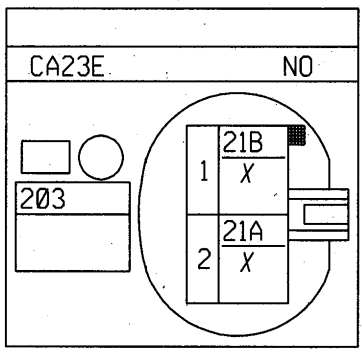

N°	mm²		... → ...
1	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
2	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL

DRIVER'S ELECTRIC REAR-VIEW MIRROR


S10

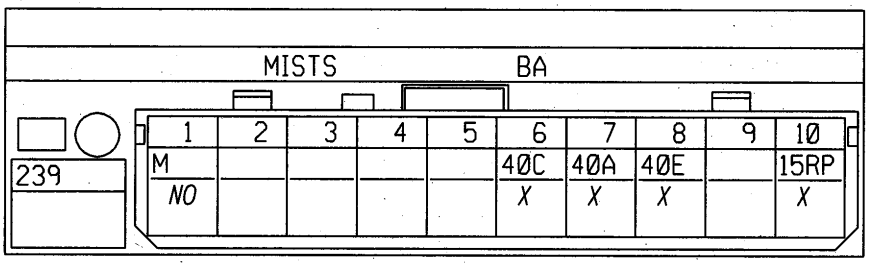

N°	mm²		... → ...
1	.35	M	EARTH
6	.35	40C	UP>DOWN DRIVER'S REAR VIEW MIRROR CONTROL
7	.35	40A	RH>LH DRIVER'S REAR VIEW MIRROR CONTROL
8	.35	40E	COMMON MOTOR REAR VIEW MIRROR
10	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL

DRIVER'S ELECTRIC REAR-VIEW MIRROR


S10

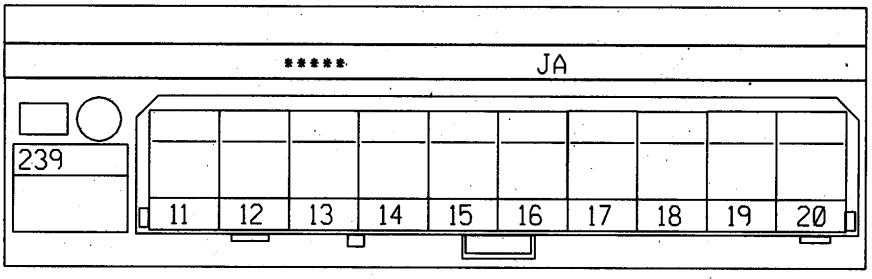

N°	mm²		... → ...

PASSENGER'S SIDE ELECTRIC WINDOW MOTOR


S10

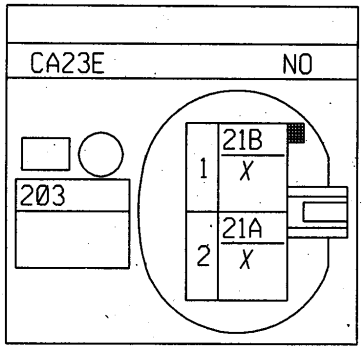

N°	mm²		··· → ···
	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL

DRIVER'S ELECTRIC REAR-VIEW MIRROR


S10

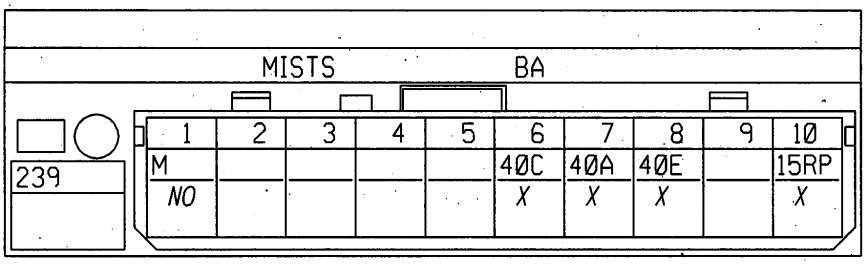

N°	mm²		··· → ···
	.35	M	EARTH
	.35	40C	UP>DOWN DRIVER'S REAR VIEW MIRROR CONTROL
	.35	40A	RH>LH DRIVER'S REAR VIEW MIRROR CONTROL
	.35	40E	COMMON MOTOR REAR VIEW MIRROR
0	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL


DRIVER'S ELECTRIC REAR-VIEW MIRROR

S10

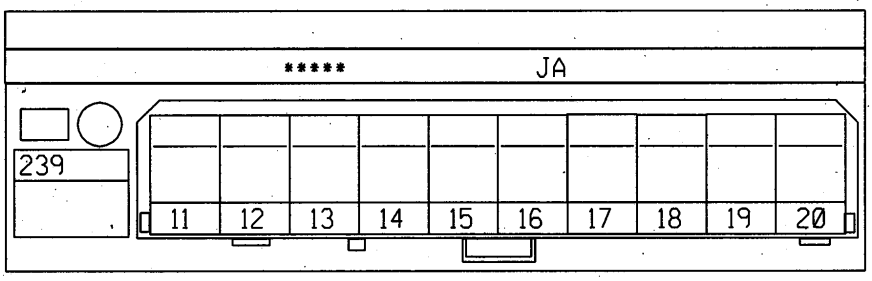


N°	mm²		··· → ···

DRIVER'S CONTROL FOR FRONT PASSENGER ELECTRIC WINDOW
DD
S10

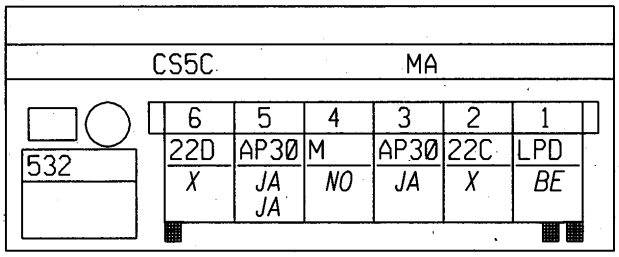

N°	mm²		··· ⟶ ···
1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
2	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
3	1	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
4	2	M	EARTH
5	1	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
5	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
6	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL


DRIVER'S CONTROL FOR FRONT PASSENGER ELECTRIC WINDOW
DG
S10

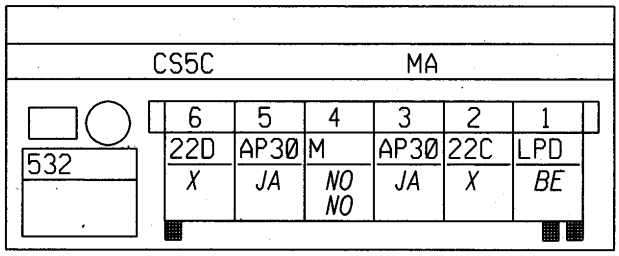

N°	mm²		··· ⟶ ···
1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
2	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
3	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
4	.35	M	EARTH
4	2	M	EARTH
5	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
6	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL

DRIVER'S CONTROL FOR FRONT PASSENGER ELECTRIC WINDOW


S10

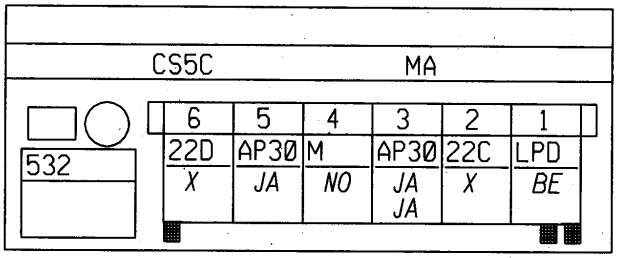

N°	mm²		... → ...
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
	1	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
	.35	M	EARTH
	1	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL

DRIVER'S PULSE ELECTRIC WINDOWS CONTROL


S10

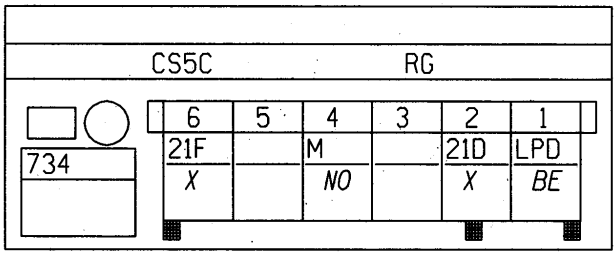

N°	mm²		... → ...
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	.6	21D	RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
	.6	M	EARTH
	.6	21F	LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL

DRIVER'S CONTROL FOR FRONT PASSENGER ELECTRIC WINDOW


S10

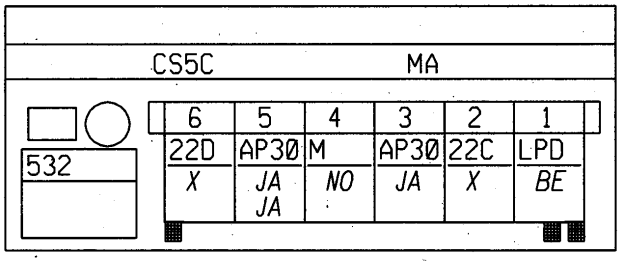

N°	mm²		... → ...
1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
2	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
3	1	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
4	2	M	EARTH
5	1	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
5	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
6	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL

DRIVER'S PULSE ELECTRIC WINDOWS CONTROL

S10

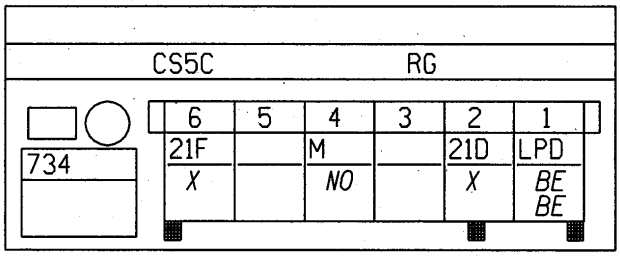


N°	mm²		... → ...
1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
2	.35	21D	RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
4	.35	M	EARTH
6	.35	21F	LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL

DRIVER'S PULSE ELECTRIC WINDOWS CONTROL

DD DG


S10

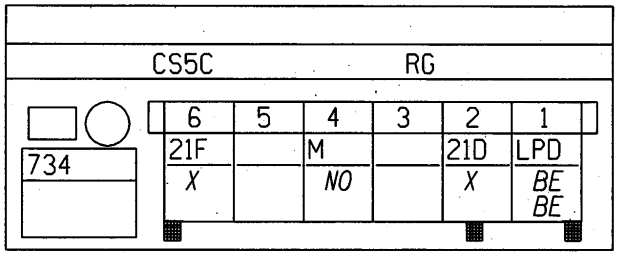

N°	mm²		... → ...
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	.35	21D	RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
	.35	M	EARTH
	.35	21F	LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL

ELECTRICAL BOOT LOCKING


S15-S18-S20-S23-S26

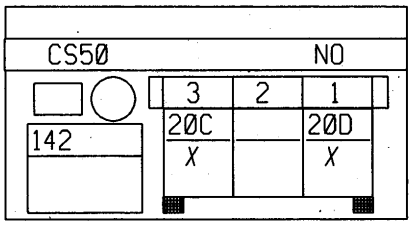

N°	mm²		... → ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

BOOT SWITCH


S15-S18-S20-S23-S26

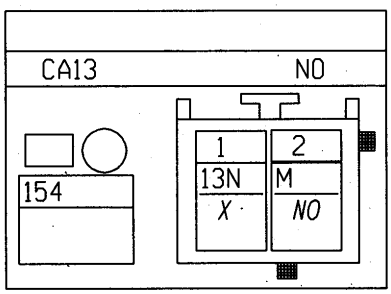

N°	mm²		... → ...
1	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
2	.35	M	EARTH

RAISED BRAKE LIGHTS


S15-S18-S19-S23-S24-S26

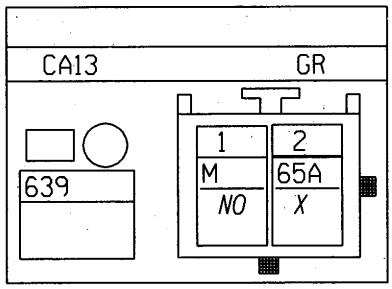

N°	mm²		... → ...
1	.35	M	EARTH
2	.35	65A	+ BRAKE LIGHTS CONTROL

ELECTRICAL BOOT LOCKING


S15-S18-S20-S23-S26

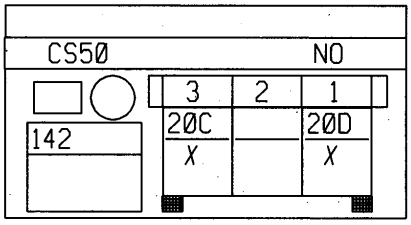

N°	mm²		... → ...
.6	20D		+ CLOSE CENTRAL DOOR LOCKING CONTROL
.6	20C		+ OPEN CENTRAL DOOR LOCKING CONTROL

BOOT SWITCII


S15-S18-S20-S23-S26

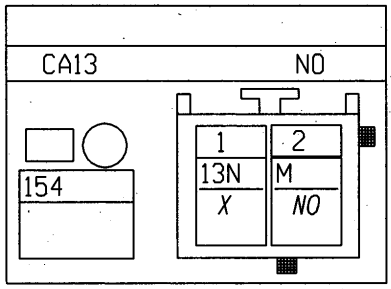

N°	mm²		... → ...
.35	13N		- INTERIOR LIGHTING > REAR REBATE CONTROL
.35	M		EARTH


RAISED BRAKE LIGHTS

S15-S18-S19-S23-S24-S26

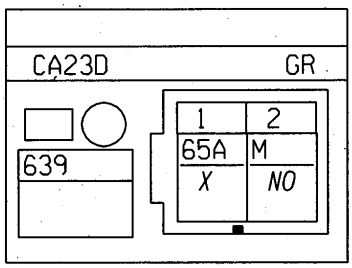


N°	mm²		... → ...
.35	65A		+ BRAKE LIGHTS CONTROL
.35	M		EARTH

DRIVER'S SIDE ELECTRIC WINDOW COMMAND
DG DD
S11

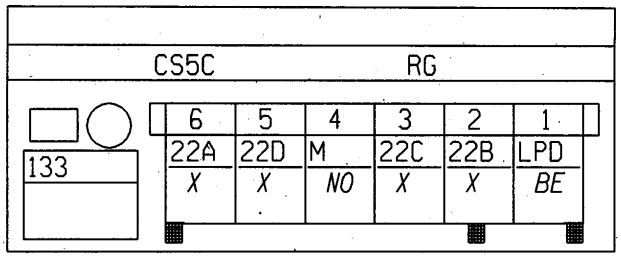


N°	mm²		... ⟶ ...
1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
2	2	22B	LOWER PASSENGER'S ELECTRIC WINDOW CONTROL
3	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
4	2	M	EARTH
5	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
6	2	22A	RAISE PASSENGER'S ELECTRIC WINDOW CONTROL

CENTRAL LOCKING FOR PASSENGER DOOR
DG DD
S11

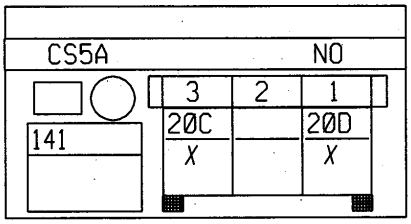

N°	mm²		... ⟶ ...
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL


RH FRONT DOOR SPEAKER
DG DD
S11

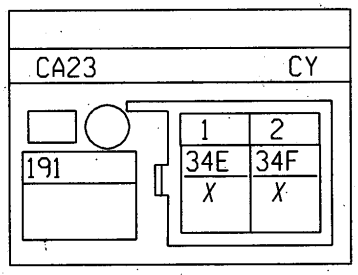

N°	mm²		... ⟶ ...
1	1	34E	SIGNAL+ RH FRONT SPEAKER
2	1	34F	SIGNAL- RH FRONT SPEAKER

DRIVER'S SIDE ELECTRIC WINDOW COMMAND


S11

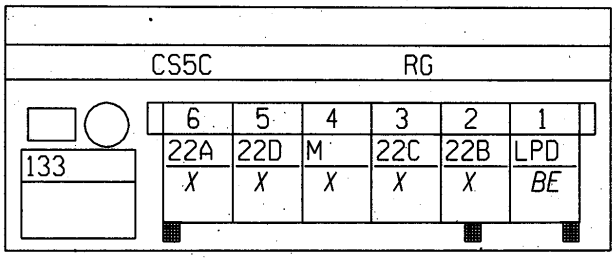

N°	mm²		... → ...
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	2	22B	LOWER PASSENGER'S ELECTRIC WINDOW CONTROL
	.6	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
	.6	M	EARTH
	.6	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
	2	22A	RAISE PASSENGER'S ELECTRIC WINDOW CONTROL

CENTRAL LOCKING FOR PASSENGER DOOR


S11

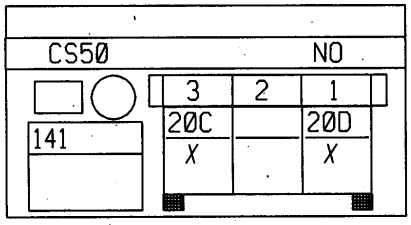

N°	mm²		... → ...
	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

RH FRONT DOOR SPEAKER


S11

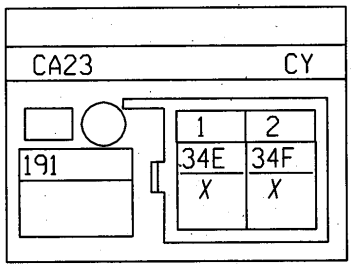

N°	mm²		... → ...
	1	34E	SIGNAL+ RH FRONT SPEAKER
	1	34F	SIGNAL- RH FRONT SPEAKER

DRIVER'S SIDE ELECTRIC WINDOW COMMAND


S11

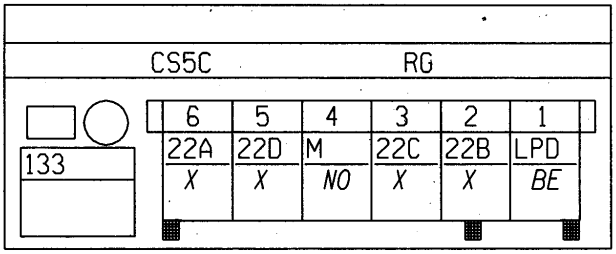

N°	mm²		··· ⟶ ···
1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
2	2	22B	LOWER PASSENGER'S ELECTRIC WINDOW CONTROL
3	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
4	2	M	EARTH
5	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
6	2	22A	RAISE PASSENGER'S ELECTRIC WINDOW CONTROL

CENTRAL LOCKING FOR PASSENGER DOOR


S11

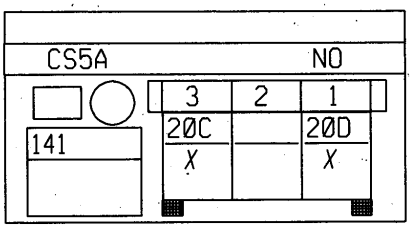

N°	mm²		··· ⟶ ···
1	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
3	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL


RH FRONT DOOR SPEAKER

S11

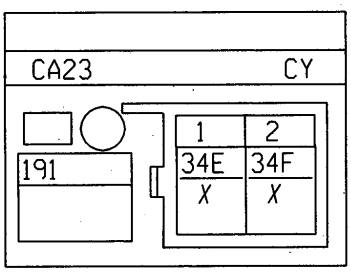


N°	mm²		··· ⟶ ···
1	1	34E	SIGNAL+ RH FRONT SPEAKER
2	1	34F	SIGNAL- RH FRONT SPEAKER

PASSENGER ELECTRIC WINDOW MOTOR
DG DD
S11

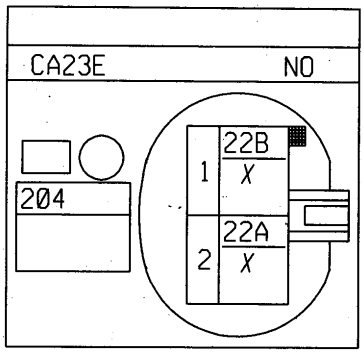


N°	mm²		··· ⟶ ···
2	22B		LOWER PASSENGER'S ELECTRIC WINDOW CONTROL
2	22A		RAISE PASSENGER'S ELECTRIC WINDOW CONTROL

PASSENGER ELECTRIC REAR VIEW MIRROR
DD
S2-S11

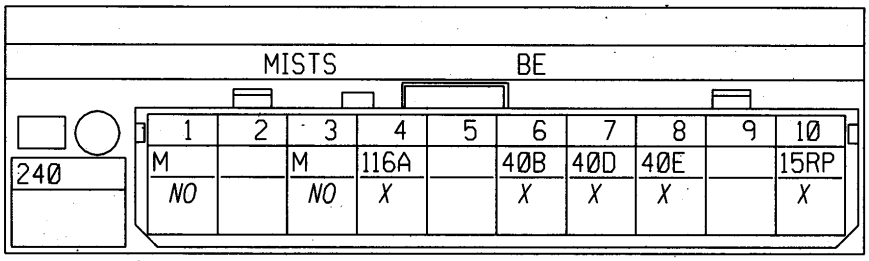

N°	mm²		··· ⟶ ···
	.35	M	EARTH
	.35	M	EARTH
	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
	.35	40E	COMMON MOTOR REAR VIEW MIRROR
	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL


PASSENGER ELECTRIC REAR VIEW MIRROR
DD
S2-S11

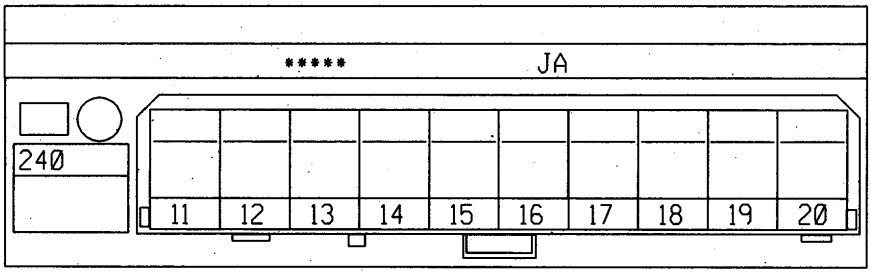

N°	mm²		··· ⟶ ···

PASSENGER ELECTRIC WINDOW MOTOR


S11

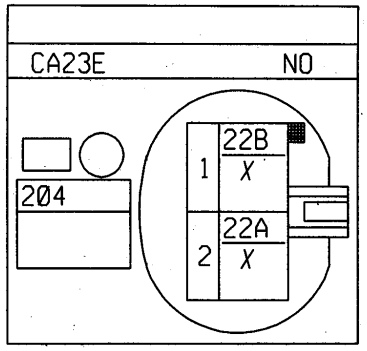

N°	mm²		··· ⟶ ···
1	2	22B	LOWER PASSENGER'S ELECTRIC WINDOW CONTROL
2	2	22A	RAISE PASSENGER'S ELECTRIC WINDOW CONTROL

PASSENGER ELECTRIC REAR VIEW MIRROR


S2-S11

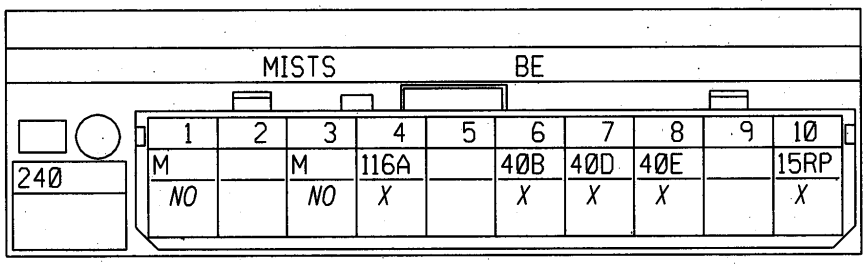


N°	mm²		··· ⟶ ···
1	.35	M	EARTH
3	.35	M	EARTH
4	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
6	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
7	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
8	.35	40E	COMMON MOTOR REAR VIEW MIRROR
10	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL

PASSENGER ELECTRIC REAR VIEW MIRROR

S2-S11

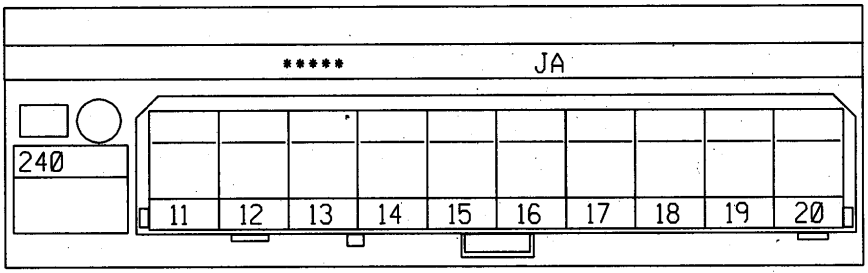


N°	mm²		··· ⟶ ···

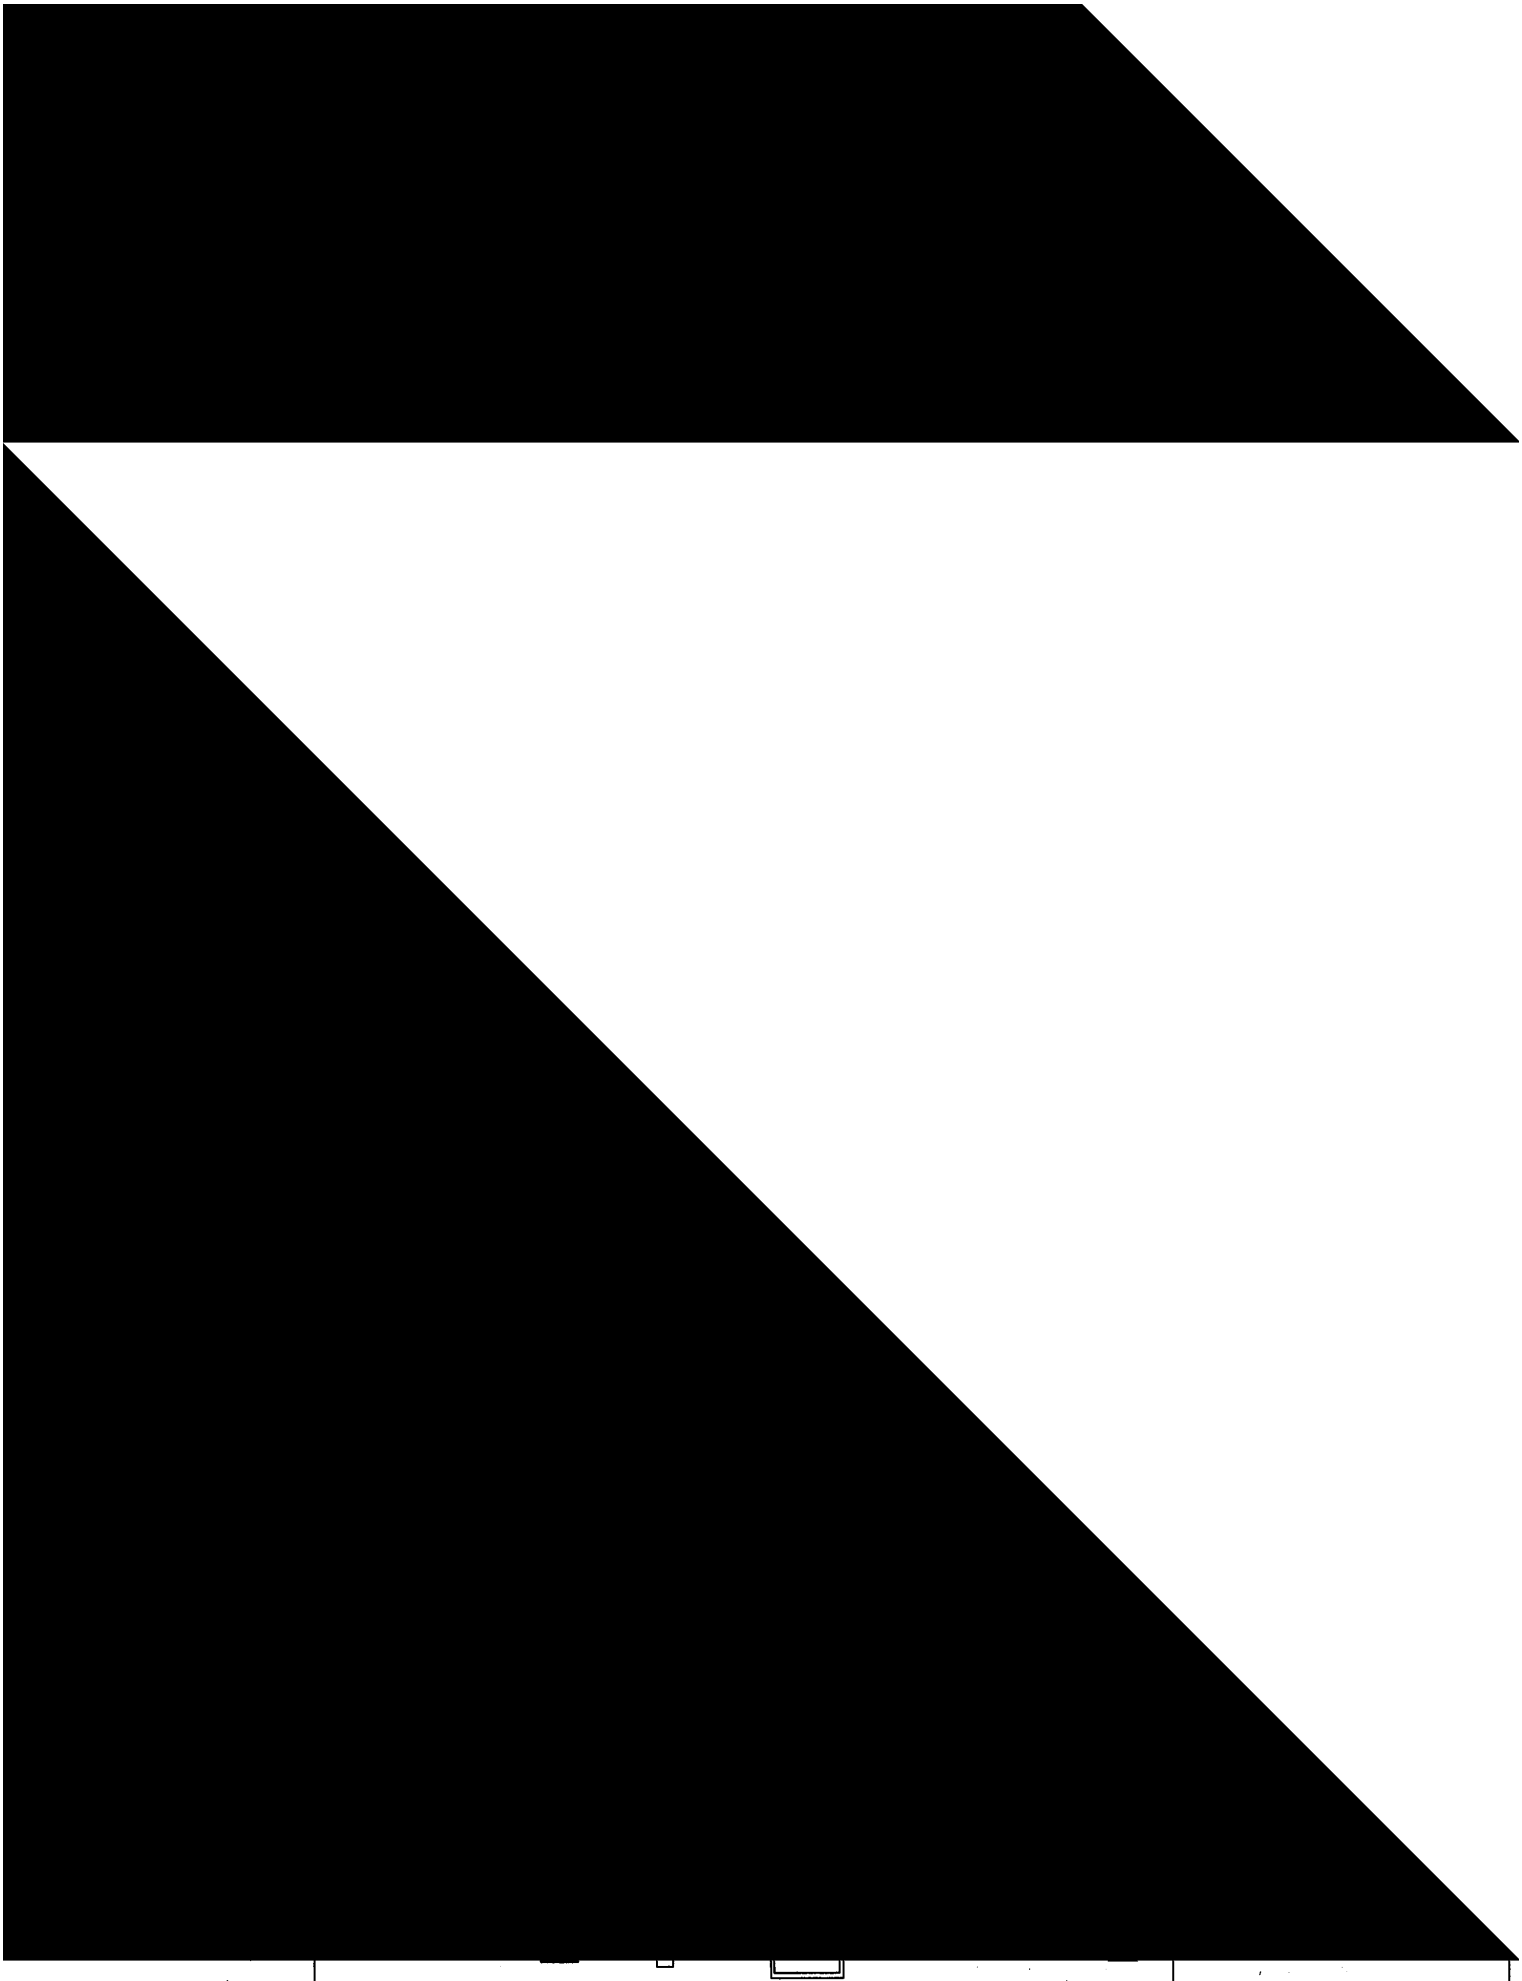

N°	mm²		... → ...

WINDSCREEN WIPER MOTOR


S2

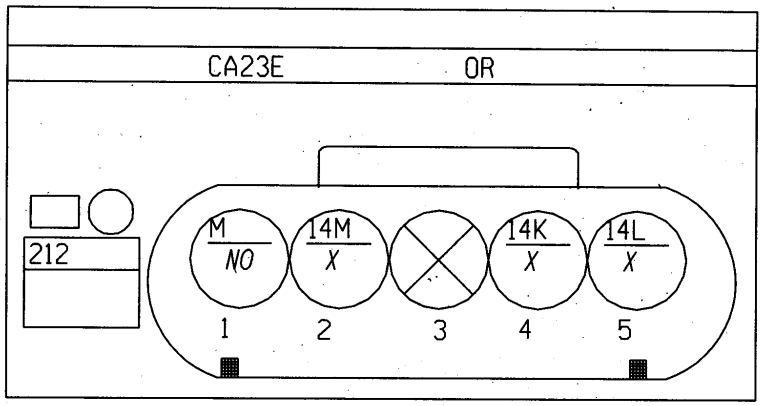

N°	mm²		... → ...
1	1.4	M	EARTH
2	.35	14M	FRONT WIPER PARK POSITION > COMPUTER CONTROL
4	1	14K	+ FRONT LOW SPEED WIPER TIMER CONTROL
5	1.4	14L	+ FRONT HIGH SPEED WIPER TIMER CONTROL

BASE FAN ASSEMBLY AND AIR CONDITIONING


S2-S6

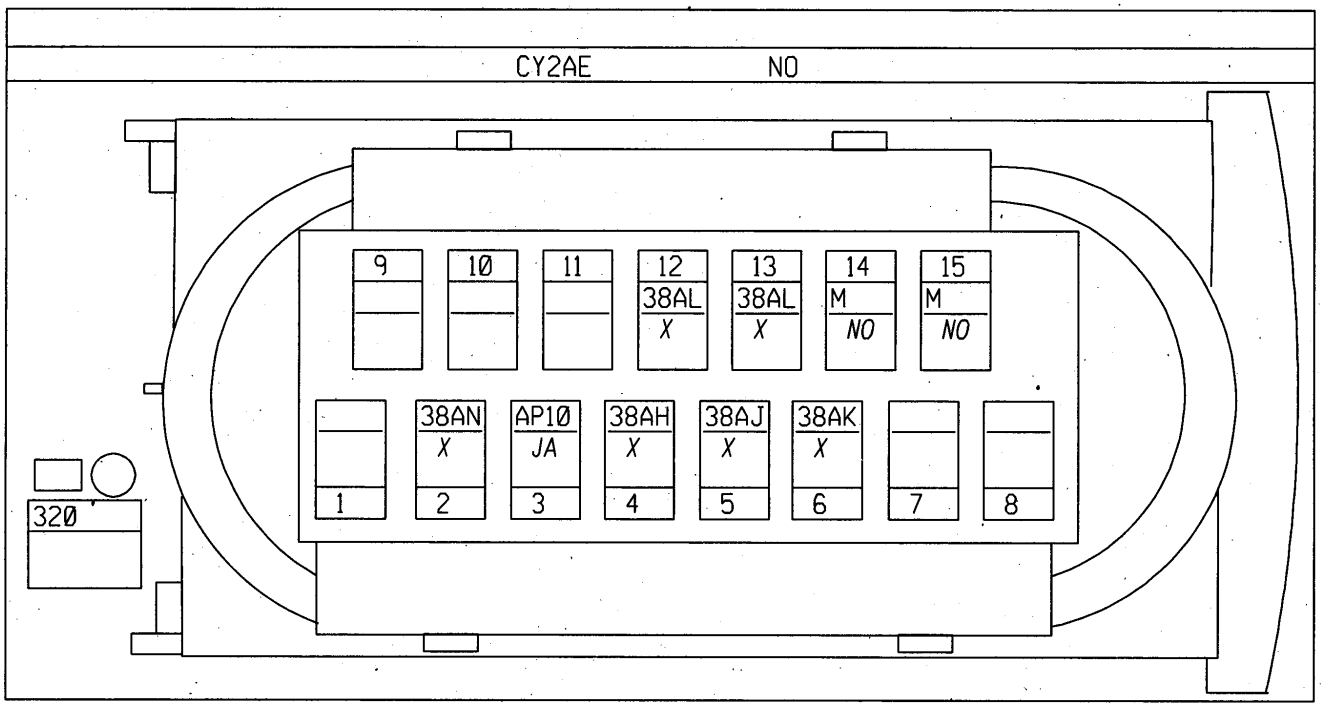

N°	mm²		... → ...
2	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL
3	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
4	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
5	1	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
6	1.4	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL
12	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
13	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
14	1.4	M	EARTH
15	1.4	M	EARTH

POWER SUPPLY FUSE PLATE

S2-S3-S6-S28-S29-S31-S32-S33-S35

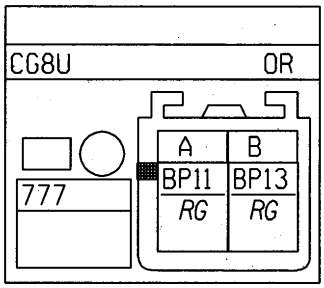


N°	mm²		... → ...
A	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
B	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3

DASHBOARD/LH REAR

DG B64/L64/E2,E3/MERCOS DG E3 SAUF TUR DG RUNLI/LAVPH E64/DD

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

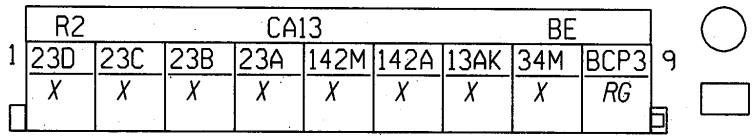


N°	mm²		... ⟶ ...
1	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
2	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
3	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING
4	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT PANEL CLOSURE
5	.35	142M	- ELECTRIC HOOD CLOSURE CONTROL
6	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL
7	.35	13AK	BOOT LATCH MODULE SIGNAL 1
8	.35	34M	+ ANTENNA CONTROL
9	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER

DASHBOARD/LH REAR

D64 B64,S64 B64/LVAREL L64 LVAREL/SAUF TUR K25,V25 LVAREL

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

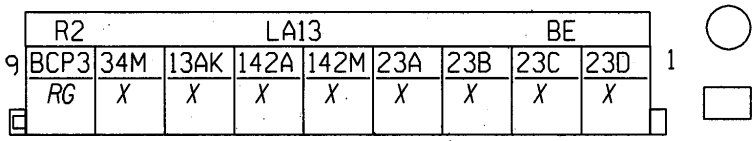


N°	mm²		... ⟶ ...
1	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
2	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
3	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING
4	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT PANEL CLOSURE
6	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL
7	.35	13AK	BOOT LATCH MODULE SIGNAL 1
8	.35	34M	+ ANTENNA CONTROL
9	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
5	.35	142M	- ELECTRIC HOOD CLOSURE CONTROL

DASHBOARD/LH REAR

DG K25,L64/TUR DG B64,L64/E1/MERCOS DG B64/L64/E2,E3/MERCOS DG

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

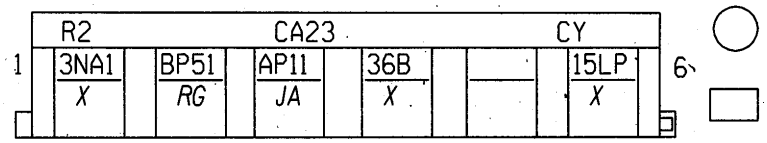


N°	mm²		... ⟶ ...
1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
4	.35	36B	+ REAR WIPER PARK POSITION CONTROL
6	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
2	4	BP51	+ BATTERY PROTECTION > HOOD
3	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION

DASHBOARD/LH REAR

DG K25,L64/TUR DG B64,L64/E1/MERCOS DG B64/L64/E2,E3/MERCOS

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

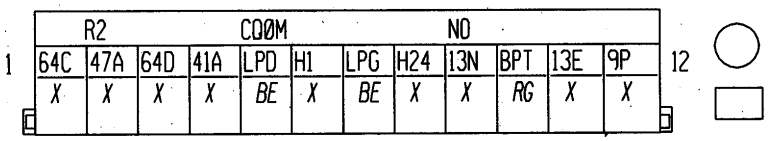


N°	mm²		... ⟶ ...
1	.6	64C	LH INDICATOR CONTROL
2	.35	47A	- FUEL LEVEL GAUGE >
3	.6	64D	RH FRONT INDICATOR CONTROL
4	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
5	.6	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
6	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
7	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
10	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
11	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
12	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

DASHBOARD/LH REAR

DG RUNLI/LAVPH DG E1

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

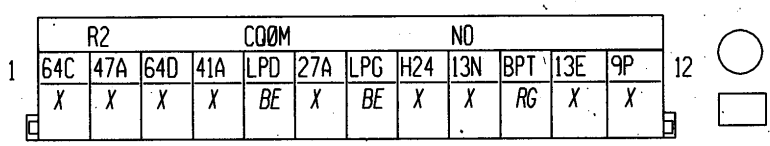


N°	mm²		... ⟶ ...
1	.6	64C	LH INDICATOR CONTROL
2	.35	47A	- FUEL LEVEL GAUGE >
3	.6	64D	RH FRONT INDICATOR CONTROL
4	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
5	.6	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
6	.35	27A	- HANDBRAKE WARNING LIGHT CONTROL
7	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
10	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
11	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
12	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

DASHBOARD/LH REAR

DG K25,L64/TUR DG B64,L64/E1/MERCOS DG B64/L64/E2,E3/MERCOS DG

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

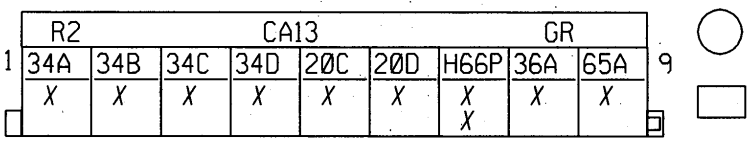


N°	mm²		··· ⟶ ···
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER
3	1	34C	SIGNAL- RH REAR SPEAKER
4	1	34D	SIGNAL+ RH REAR SPEAKER
5	1.4	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
6	1.4	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
7	.35	H66P	+ REVERSING LIGHTS CONTROL
7	.6	H66P	+ REVERSING LIGHTS CONTROL
8	1	36A	+ REAR WIPER CONTROL
9	.6	65A	+ BRAKE LIGHTS CONTROL

DASHBOARD/LH REAR

DG E3 SAUF TUR E64/DD

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

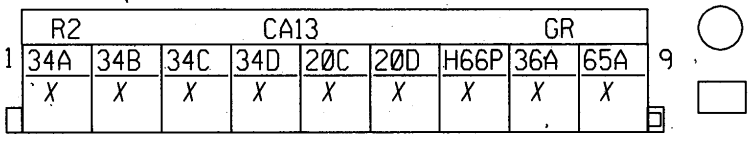


N°	mm²		··· ⟶ ···
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER
3	1	34C	SIGNAL- RH REAR SPEAKER
4	1	34D	SIGNAL+ RH REAR SPEAKER
5	1.4	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
6	1.4	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
7	.6	H66P	+ REVERSING LIGHTS CONTROL
8	1	36A	+ REAR WIPER CONTROL
9	.6	65A	+ BRAKE LIGHTS CONTROL

DASHBOARD/LH REAR

DG E3 SAUF TUR E64/DD

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

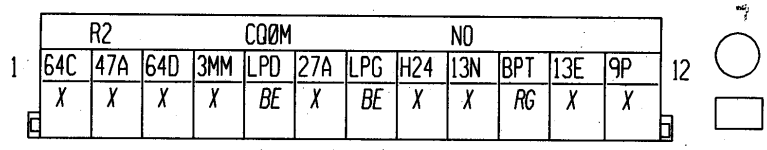


N°	mm²		... ⟶ ...
1	.6	64C	LH INDICATOR CONTROL
2	.35	47A	- FUEL LEVEL GAUGE >
3	.6	64D	RH FRONT INDICATOR CONTROL
4	.35	3MM	FUEL GAUGE LEVEL > LIQUEFIED PETROLEUM GAS ECU SIGNAL
5	.6	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
6	.35	27A	- HANDBRAKE WARNING LIGHT CONTROL
7	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
10	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
11	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
12	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

DASHBOARD/LH REAR

D64 B64,S64 B64/LVAREL B64,S64 B64,S64/SSLVRA,LVRARMA L64 LVAR

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

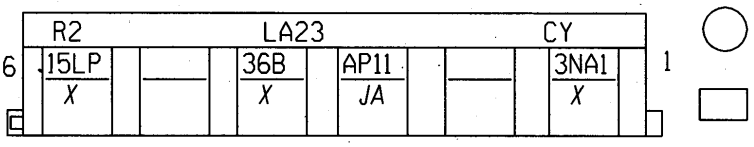


N°	mm²		... ⟶ ...
1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
4	.35	36B	+ REAR WIPER PARK POSITION CONTROL
6	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
3	1	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION

DASHBOARD/LH REAR

E64 CATOEL

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

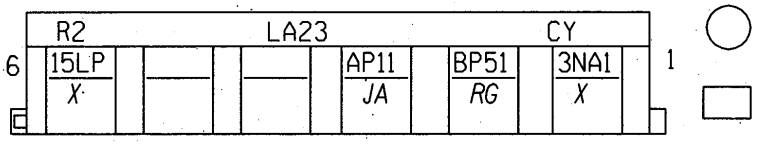


N°	mm²		... ⟶ ...
1	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
2	4	BP51	+ BATTERY PROTECTION > HOOD
3	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
6	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL

DASHBOARD/LH REAR

D64 B64,S64 B64/LVAREL L64 LVAREL/SAUF TUR L64 LVARMA/SAUF TUR

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

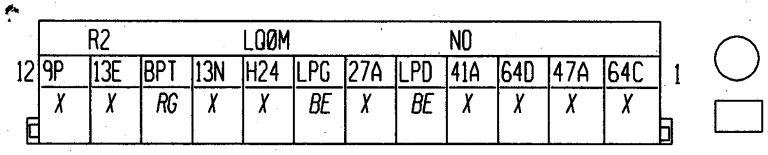


N°	mm²		... → ...
1	.6	64C	LH INDICATOR CONTROL
2	.35	47A	- FUEL LEVEL GAUGE >
3	.6	64D	RH FRONT INDICATOR CONTROL
4	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
5	.6	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
6	.35	27A	- HANDBRAKE WARNING LIGHT CONTROL
7	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
10	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
11	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
12	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

DASHBOARD/LH REAR

B64,S64 B64,S64/SSLVRA,LVRARMA

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

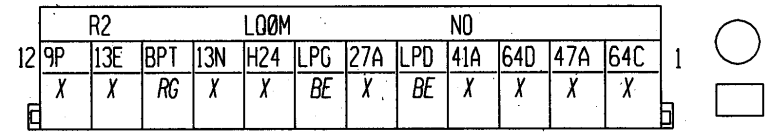


N°	mm²		... → ...
1	.5	64C	LH INDICATOR CONTROL
2	.35	47A	- FUEL LEVEL GAUGE >
3	.5	64D	RH FRONT INDICATOR CONTROL
4	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
5	.5	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
6	.35	27A	- HANDBRAKE WARNING LIGHT CONTROL
7	.5	LPG	LEFT HAND SIDE LIGHT PROTECTED +
8	.35	H24	- FRONT DOOR SWITCH > ALARM > LIGHTING TIME SWITCH CONTROL
9	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
10	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
11	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
12	.5	9P	+ PROTECTED REAR FOG LIGHTS CONTROL

DASHBOARD/LH REAR

D64

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

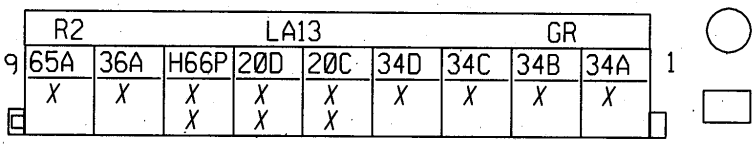


N°	mm²		... → ...
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER
3	1	34C	SIGNAL- RH REAR SPEAKER
4	1	34D	SIGNAL+ RH REAR SPEAKER
5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
5	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
5	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
7	.6	H66P	+ REVERSING LIGHTS CONTROL
7	.6	H66P	+ REVERSING LIGHTS CONTROL
8	1	36A	+ REAR WIPER CONTROL
9	.6	65A	+ BRAKE LIGHTS CONTROL

DASHBOARD/LH REAR

B64,S64 B64/LVAREL L64 LVAREL/SAUF TUR L64 LVARMA/SAUF TUR K25

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

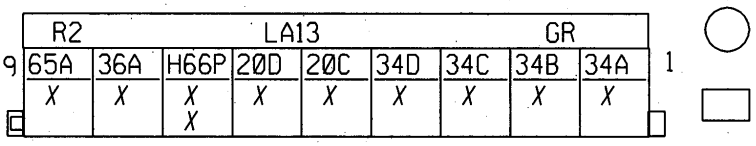


N°	mm²		... → ...
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER
3	1	34C	SIGNAL- RH REAR SPEAKER
4	1	34D	SIGNAL+ RH REAR SPEAKER
5	1.4	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
5	1.4	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
7	.6	H66P	+ REVERSING LIGHTS CONTROL
7	.6	H66P	+ REVERSING LIGHTS CONTROL
8	1	36A	+ REAR WIPER CONTROL
9	.6	65A	+ BRAKE LIGHTS CONTROL

DASHBOARD/LH REAR

B64,S64 B64,S64/SSLVRA,LVRARMA

S4-S8-S9-S12-S13-S14-S15-S17-S18-S19-S20-S21-S22-S23

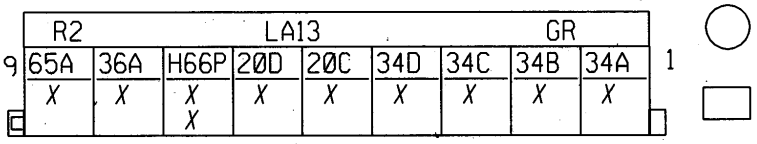


N°	mm²		··· ⟶ ···
1	1	34A	SIGNAL+ LH REAR SPEAKER
2	1	34B	SIGNAL- LH REAR SPEAKER
3	1	34C	SIGNAL- RH REAR SPEAKER
4	1	34D	SIGNAL+ RH REAR SPEAKER
5	1.4	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
6	1.4	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
7	.5	H66P	+ REVERSING LIGHTS CONTROL
7	.5	H66P	+ REVERSING LIGHTS CONTROL
8	1	36A	+ REAR WIPER CONTROL
9	.5	65A	+ BRAKE LIGHTS CONTROL

DASHBOARD/DRIVER'S DOOR

DG K25,L64/TUR DG B64,L64/E1/MERCOS DG B64/L64/E2,E3/MERCOS DG

S4-S10

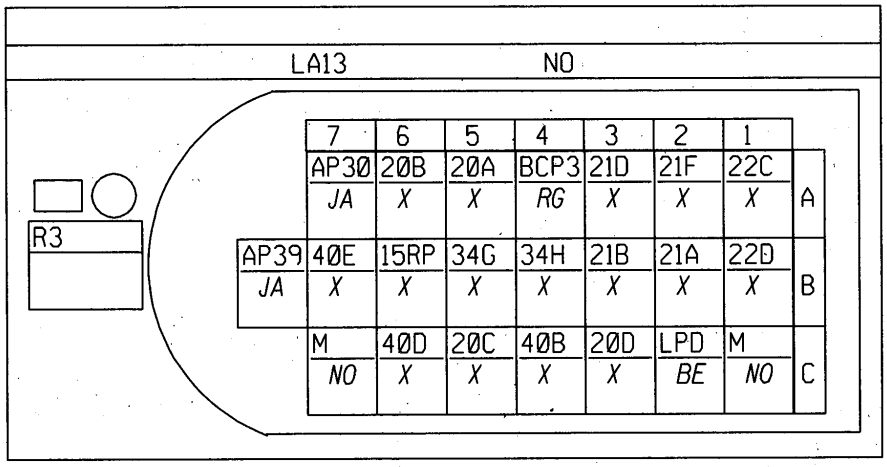


N°	mm²		··· ⟶ ···
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	2	M	EARTH
C2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
C3	.6	20D	+.CLOSE CENTRAL DOOR LOCKING CONTROL
B4	1	34H	SIGNAL- LH FRONT SPEAKER
A5	.35	20A	CENTRAL DOOR LOCKING CLOSING TIMER + CONTROL
B5	1	34G	SIGNAL+ LH FRONT SPEAKERS
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
A6	.35	20B	+ CENTRAL DOOR LOCKING OPENING TIMER SWITCH CONTROL
A7	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
C7	1.4	M	EARTH
B8	1.4	AP39	+ AFTER IGNITION DRIVER'S ELECTRIC WINDOW PROTECTED FUSE
A2	.35	21F	LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
B2	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL
A3	.35	21D	RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
B3	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
A4	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DASHBOARD/DRIVER'S DOOR

E64/DD

S4-S10

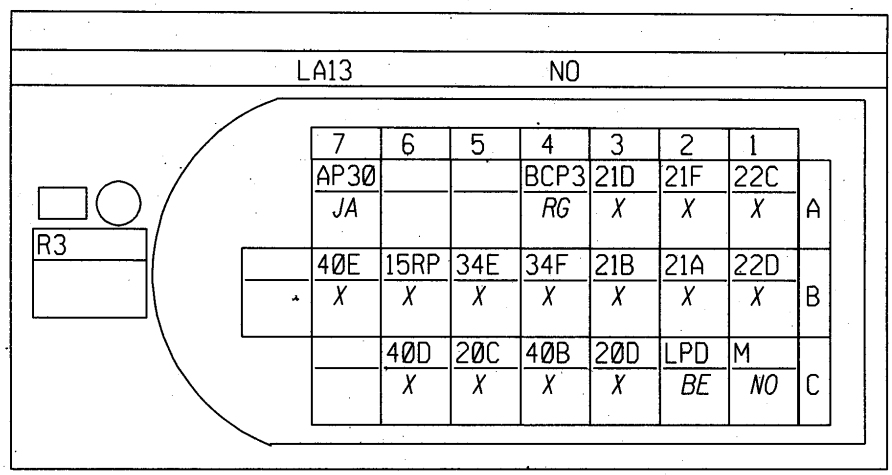


N°	mm²		... → ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	2	M	EARTH
A2	.6	21F	LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
B2	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL
C2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
A3	.6	21D	RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
B3	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
A4	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
B4	1	34F	SIGNAL- RH FRONT SPEAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B5	1	34E	SIGNAL+ RH FRONT SPEAKER
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
A7	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DASHBOARD/DRIVER'S DOOR

E64

S4-S10

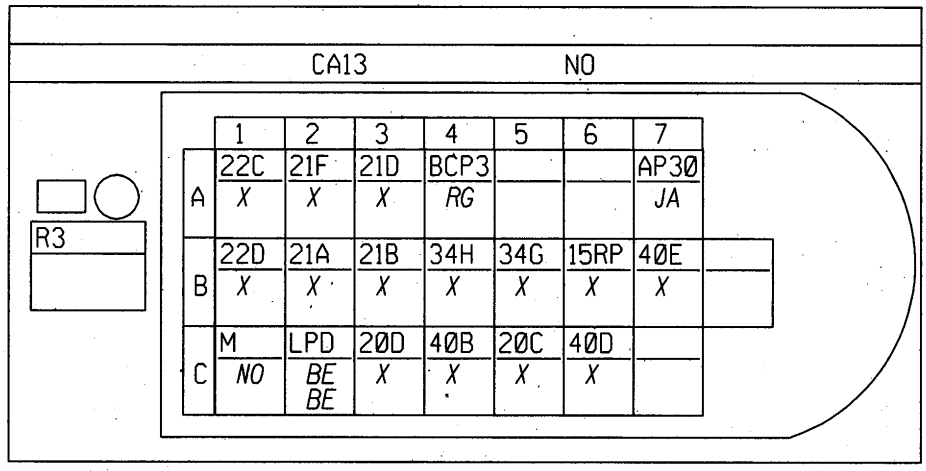


N°	mm²		... ⟶ ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	1	M	EARTH
A2	.6	21F	LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
B2	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL
C2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
C2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
A3	.6	21D	RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
B3	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
A4	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
B4	1	34H	SIGNAL- LH FRONT SPEAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B5	1	34G	SIGNAL+ LH FRONT SPEAKERS
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
A7	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DASHBOARD/DRIVER'S DOOR

D64/DG K25,V25,B64,S64,L64 DD K25,V25,B64,S64,L64 DG

S4-S10

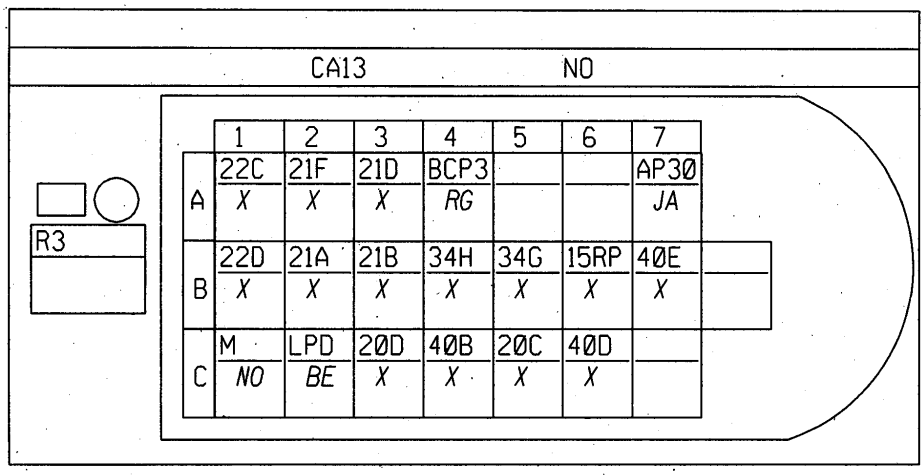


N°	mm²		... → ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	2	M	EARTH
A2	.35	21F	LOWER PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
B2	1.4	21A	DRIVER ELECTRIC WINDOW RAISE CONTROL
C2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
A3	.35	21D	RAISE PULSE FOR PULSE-CONTROLLED ELECTRIC WINDOW - CONTROL
B3	1.4	21B	DRIVER ELECTRIC WINDOW LOWER CONTROL
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
A4	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
B4	1	34H	SIGNAL- LH FRONT SPEAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B5	1	34G	SIGNAL+ LH FRONT SPEAKERS
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
A7	2	AP30	+ AFTER IGNITION PROTECTED FUSE PASSENGER ELECTRIC WINDOW
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DASHBOARD/FRONT PASSENGER DOOR

DG K25,L64/TUR DG B64,L64/E1/MERCOS DG B64/L64/E2,E3/MERCOS DG

S5-S6-S9-S11

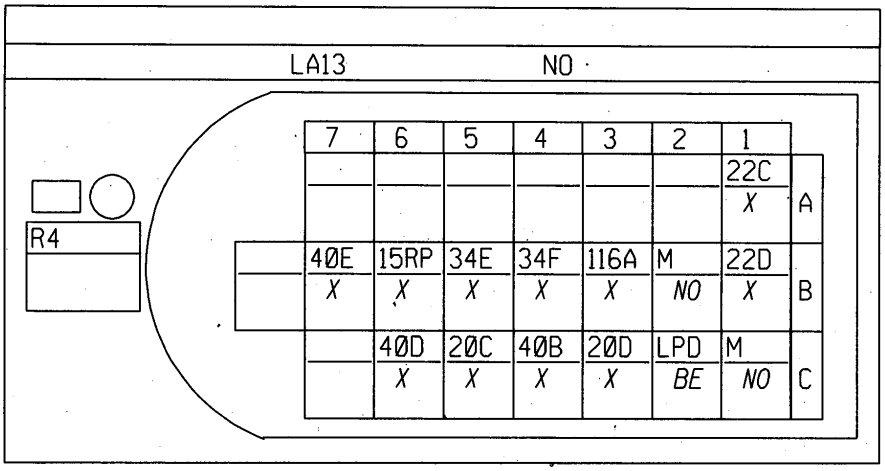


N°	mm²		... ⟶ ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	2	M	EARTH
C2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
B4	1	34F	SIGNAL- RH FRONT SPEAKER
B5	1	34E	SIGNAL+ RH FRONT SPEAKER
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B2	.35	M	EARTH
B3	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DASHBOARD/FRONT PASSENGER DOOR

E64/DD

S5-S6-S9-S11

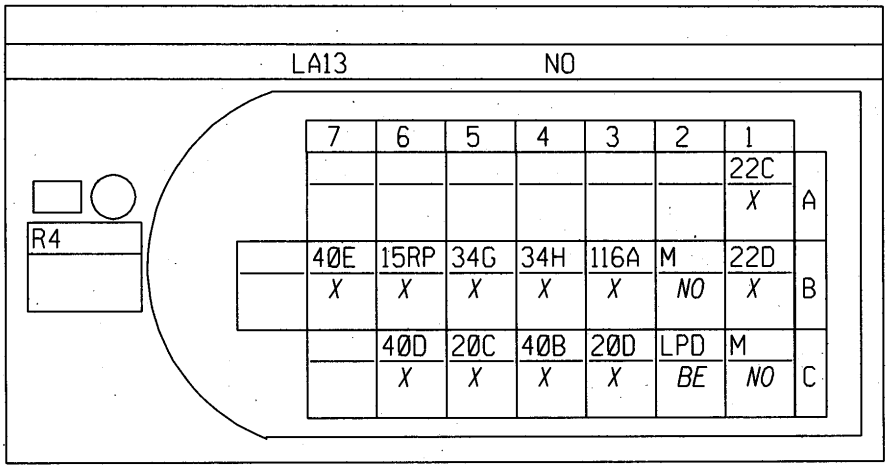


N°	mm²		... → ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	2	M	EARTH
B2	.35	M	EARTH
C2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
B3	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
B4	1	34H	SIGNAL- LH FRONT SPEAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B5	1	34G	SIGNAL+ LH FRONT SPEAKERS
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DASHBOARD/FRONT PASSENGER DOOR

E64

S5-S6-S9-S11

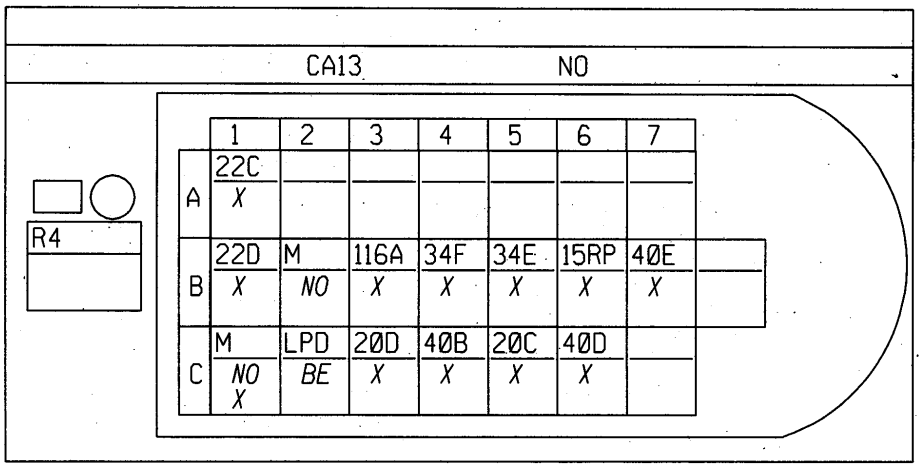


N°	mm²		... → ...
A1	.6	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	.6	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	.35	M	EARTH
C1	.6	M	EARTH
B2	.35	M	EARTH
C2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
B3	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
B4	1	34F	SIGNAL- RH FRONT SPEAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B5	1	34E	SIGNAL+ RH FRONT SPEAKER
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

DASHBOARD/FRONT PASSENGER DOOR

K25,V25,B64,S64,L64 DG

S5-S6-S9-S11

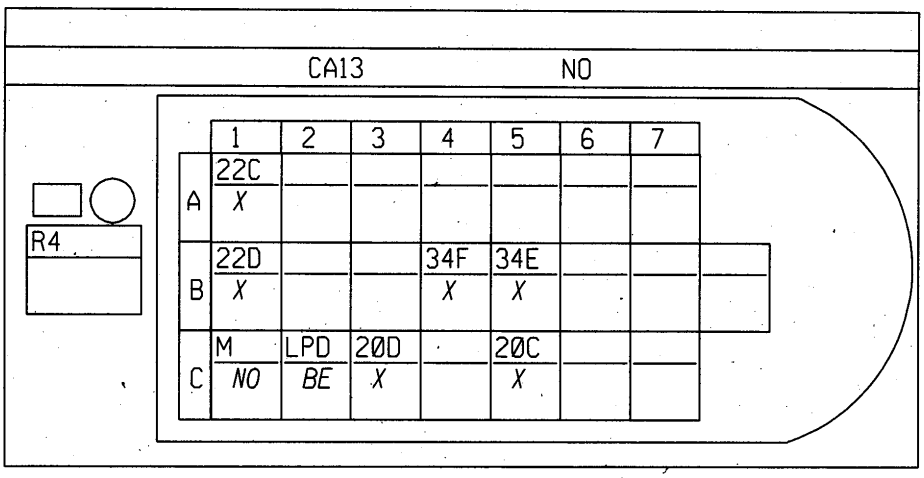


N°	mm²		... → ...
1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
1	2	M	EARTH
2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
4	1	34F	SIGNAL- RH FRONT SPEAKER
5	1	34E	SIGNAL+ RH FRONT SPEAKER
5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL

DASHBOARD/FRONT PASSENGER DOOR

K25,V25,B64,S64,L64 DD D64/DG/SAUF MERCOS,TUR

S5-S6-S9-S11

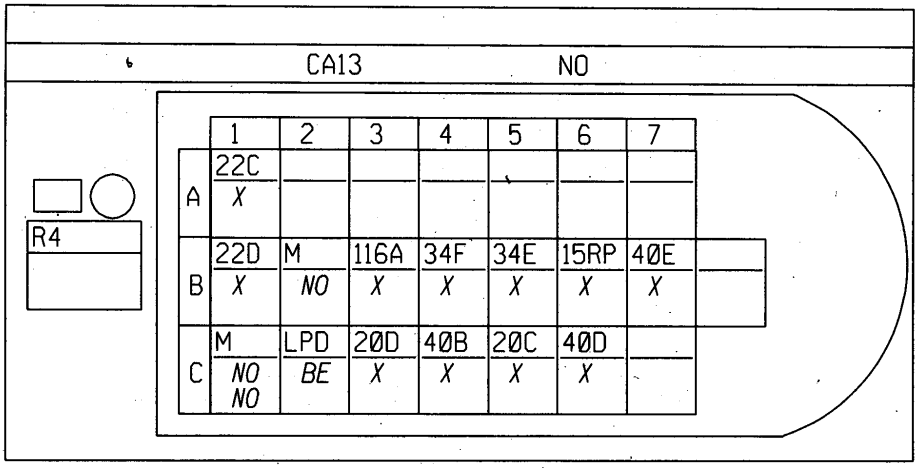


N°	mm²		... ⟶ ...
A1	2	22C	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 1 CONTROL
B1	2	22D	FRONT ELECTRIC WINDOW DOUBLE-ENDED TUBULAR BULB 2 CONTROL
C1	.35	M	EARTH
C1	2	M	EARTH
B2	.35	M	EARTH
C2	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
B3	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
C3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
B4	1	34F	SIGNAL- RH FRONT SPEAKER
C4	.35	40B	UP>DOWN PASSENGER'S REAR VIEW MIRROR CONTROL
B5	1	34E	SIGNAL+ RH FRONT SPEAKER
C5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
B6	.35	15RP	+ HEATED PROTECTED REAR VIEW MIRROR CONTROL
C6	.35	40D	RH>LH PASSENGER'S REAR VIEW MIRROR CONTROL
B7	.35	40E	COMMON MOTOR REAR VIEW MIRROR

INSTRUMENT PANEL/FRONT PANEL

DG K25,L64/TUR DG B64,L64/E1/MERCOS DG B64/L64/E2,E3/MERCOS DG

S1-S27

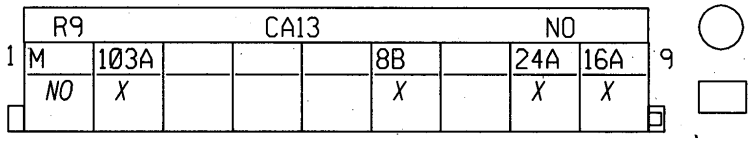


N°	mm²		··· ⟶ ···
	.6	M	EARTH
	.6	103A	HEADLAMP POSITIONING CONTROL
	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
	1	8B	+ FRONT FOG LIGHTS > RELAY

INSTRUMENT PANEL/FRONT PANEL

J64,F64 K25,V25,B64,D64,S64,L64,E64/PROJSO/SAUF MERCOS,TUR,COL K25,V25

S1-S27

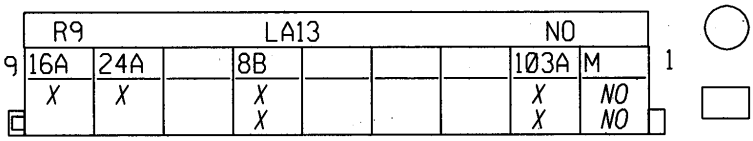


N°	mm²		··· ⟶ ···
	.6	M	EARTH
	.6	M	EARTH
	.6	103A	HEADLAMP POSITIONING CONTROL
	.6	103A	HEADLAMP POSITIONING CONTROL
	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
	.6	8B	+ FRONT FOG LIGHTS > RELAY
	.6	8B	+ FRONT FOG LIGHTS > RELAY

INSTRUMENT PANEL/FRONT PANEL

DG K25,L64/TUR · DG B64,L64/E1/MERCOS DG B64/L64/E2,E3/MERCOS DG

S1-S27

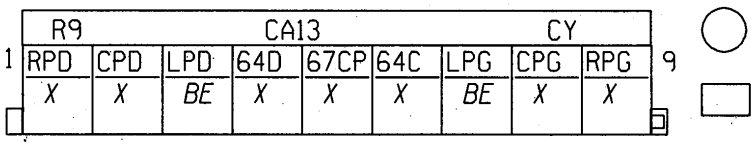


N°	mm²		··· ⟶ ···
1	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
3	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
4	.35	64D	RH FRONT INDICATOR CONTROL
5	2	67CP	+ HORN > FUSE CONTROL
6	.35	64C	LH INDICATOR CONTROL
7	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
8	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
9	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT

INSTRUMENT PANEL/FRONT PANEL

J64,F64 K25,V25,B64,D64,S64,L64,E64/PROJSO/SAUF MERCOS,TUR,COL K25,V25

S1-S27

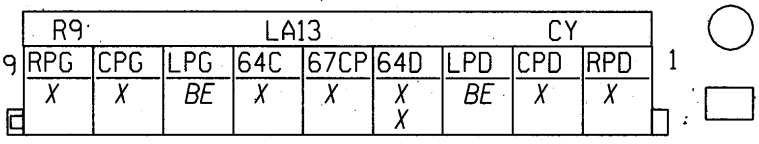


N°	mm²		··· ⟶ ···
1	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
2	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
3	.6	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
4	.35	64D	RH FRONT INDICATOR CONTROL
4	.35	64D	RH FRONT INDICATOR CONTROL
5	2	67CP	+ HORN > FUSE CONTROL
6	.35	64C	LH INDICATOR CONTROL
7	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
8	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
9	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT

INSTRUMENT PANEL/FRONT PANEL

J64,F64 B64,D64,L64,E64/F5R K25,V25,B64,D64,S64,L64,E64 B64,D64,L64,E6

S1-S27

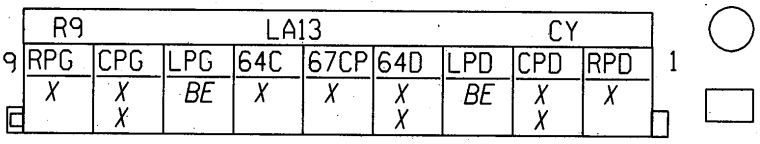


N°	mm²		... ⟶ ...
	1	RPD	+RH PROTECTED MAIN BEAM HEADLIGHT
	.6	CPD	+ RH PROTECTED DIPPED HEADLIGHT
	1	CPD	+ RH PROTECTED DIPPED HEADLIGHT
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	.35	64D	RH FRONT INDICATOR CONTROL
	.35	64D	RH FRONT INDICATOR CONTROL
	2	67CP	+ HORN > FUSE CONTROL
	.35	64C	LH INDICATOR CONTROL
	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
	.6	CPG	+ LH PROTECTED DIPPED HEADLIGHT
	1	CPG	+ LH PROTECTED DIPPED HEADLIGHT
	1	RPG	+LH PROTECTED MAIN BEAM HEADLIGHT

LH REAR/LH REAR DOOR

B64,S64,L64 LVAREL B64,S64,L64 LVARMA

S8-S12

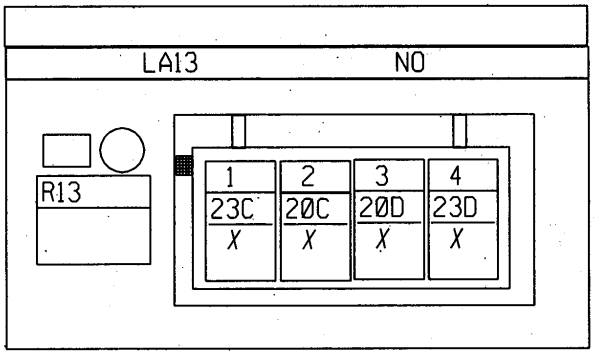


N°	mm²		... ⟶ ...
1	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
2	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
4	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL

LH REAR/LH REAR DOOR


B64,S64 B64/LVAREL L64 LVAREL/SAUF TUR L64 LVARMA/SAUF TUR

S8-S12

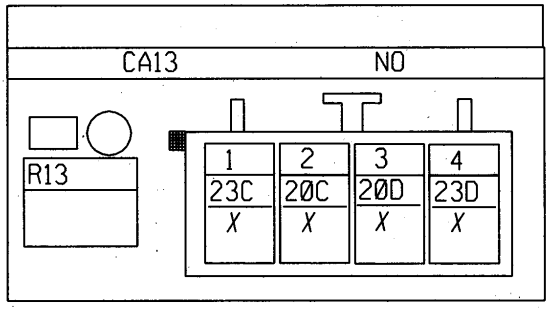


N°	mm²		... ⟶ ...
1	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
2	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
4	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL

LH REAR/LH REAR DOOR
B64,S64 B64,S64/SSLVRA,LVRARMA
S8-S12

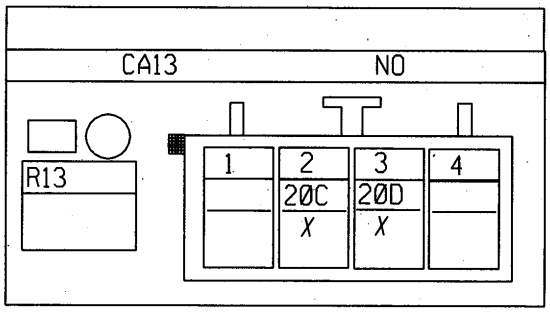


N°	mm²		... → ...
	.5	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
	.5	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

RH REAR/LEFT-HAND TAILGATE
B64,S64 B64/LVAREL
S8-S14-S15-S24-S26

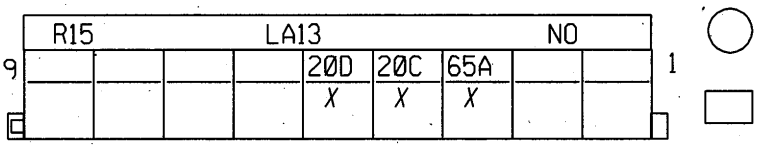

N°	mm²		... ⟶ ...
3	.35	65A	+ BRAKE LIGHTS CONTROL
4	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
5	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

RH REAR/LEFT-HAND TAILGATE
B64,S64/SAUF TUR
S8-S14-S15-S24-S26

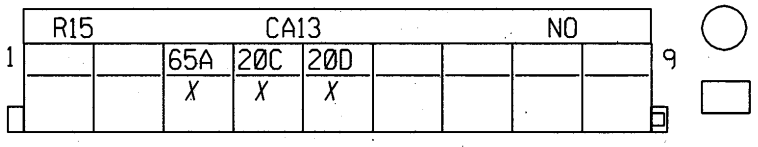


N°	mm²		... ⟶ ...
3	.35	65A	+ BRAKE LIGHTS CONTROL
4	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
5	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

RH REAR/LEFT-HAND TAILGATE

K25,V25 LVARMA K25,V25 LVAREL

S8-S14-S15-S24-S26

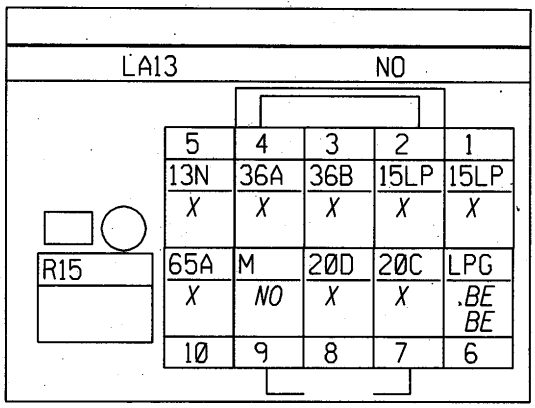


N°	mm²		... → ...
	2	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
	2	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
	.35	36B	+ REAR WIPER PARK POSITION CONTROL
	1	36A	+ REAR WIPER CONTROL
	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
	1	M	EARTH
0	.35	65A	+ BRAKE LIGHTS CONTROL

RH REAR/LEFT-HAND TAILGATE

K25,V25/E1,E2

S8-S14-S15-S24-S26

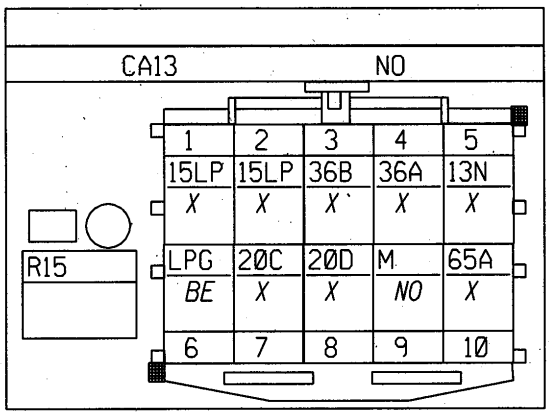


N°	mm²		... → ...
	2	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
	2	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
	.35	36B	+ REAR WIPER PARK POSITION CONTROL
	1	36A	+ REAR WIPER CONTROL
	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
	1	M	EARTH
0	.35	65A	+ BRAKE LIGHTS CONTROL

RH REAR/LEFT-HAND TAILGATE

B64,S64 B64/LVAREL

S8-S14-S15-S24-S26

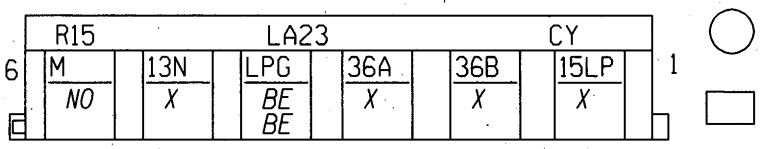


N°	mm²		... ⟶ ...
1	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
2	.35	36B	+ REAR WIPER PARK POSITION CONTROL
3	1	36A	+ REAR WIPER CONTROL
4	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
4	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
5	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
6	3	M	EARTH

RH REAR/LEFT-HAND TAILGATE


B64,S64/SAUF TUR

S8-S14-S15-S24-S26

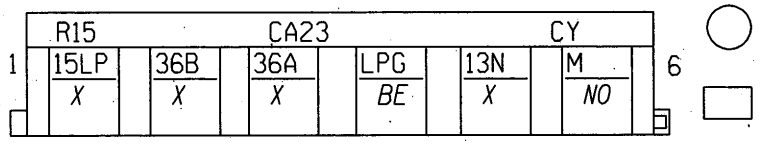


N°	mm²		... ⟶ ...
1	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
2	.35	36B	+ REAR WIPER PARK POSITION CONTROL
3	1	36A	+ REAR WIPER CONTROL
4	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
5	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
6	3	M	EARTH

RH REAR/LEFT-HAND TAILGATE
B64,S64 B64,S64/SSLVRA,LVRARMA
S8-S14-S15-S24-S26

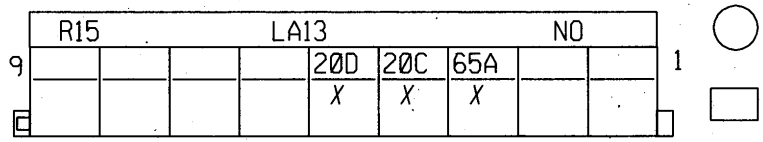

N°	mm²		... → ...
3	.35	65A	+ BRAKE LIGHTS CONTROL
4	.5	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
5	.5	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

RH REAR/LEFT-HAND TAILGATE
B64,S64 B64,S64/SSLVRA,LVRARMA
S8-S14-S15-S24-S26

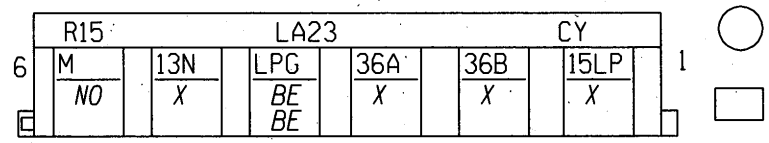


N°	mm²		... → ...
1	3	15LP	+ HEATED PROTECTED REAR SCREEN CONTROL
2	.35	36B	+ REAR WIPER PARK POSITION CONTROL
3	1	36A	+ REAR WIPER CONTROL
4	.5	LPG	LEFT HAND SIDE LIGHT PROTECTED +
4	.5	LPG	LEFT IIAND SIDE LIGIIT PROTECTED +
5	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
6	3	M	EARTH

ENGINE/INSTRUMENT PANEL

DG K25,L64/TUR DG B64,L64/E1/MERCOS DG B64/L64/E2,E3/MERCOS DG

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

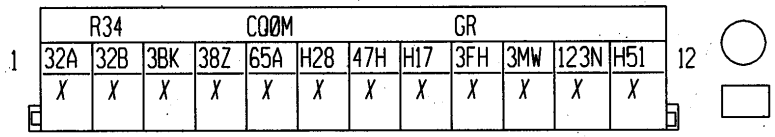


N°	mm²		... ⟶ ...
3	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
4	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
5	.35	65A	+ BRAKE LIGHTS CONTROL
6	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL
8	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
9	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
10	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
12	.35	H51	LOWER CLUTCH PEDAL
7	.35	47H	FUEL FLOW RATE SIGNAL
1	.35	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.35	32B	OIL LEVEL SENSOR - OIL SIGNAL 1
11	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL

ENGINE/INSTRUMENT PANEL

F9Q BVM5 F9Q732-733 BVM5 F9Q BVA4 F9Q732-733 BVA4

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

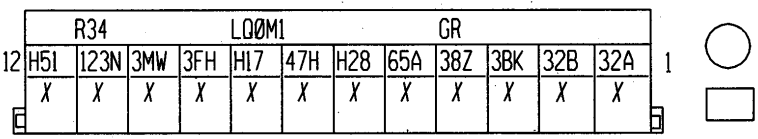


N°	mm²		... ⟶ ...
1	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1
3	.6	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
4	.6	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
5	.35	65A	+ BRAKE LIGHTS CONTROL
7	.35	47H	FUEL FLOW RATE SIGNAL
8	.6	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
9	.6	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL
10	.6	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
11	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
12	.35	H51	LOWER CLUTCH PEDAL
6	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL

ENGINE/INSTRUMENT PANEL

DG E3 SAUF TUR DG RUNLI/LAVPH E64/DD

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

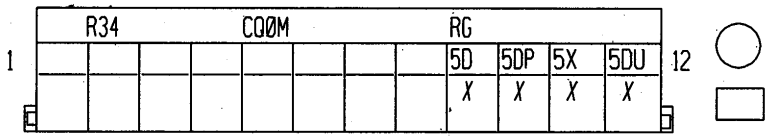


N°	mm²		... ⟶ ...
)	.35	5D	- AUTOMATIC TRANSMISSION FAULT WARNING LIGHT CONTROL
10	.35	5DP	1ST GEAR CONTROL > N-1 PULSE CONTROL
11	.35	5X	- POOR GRIP STARTING CONTROL
12	.6	5DU	- GEAR CHANGE LEVER LOCK CONTROL

ENGINE/INSTRUMENT PANEL

F9Q F9Q731-736 J64 K4M700-701-704 K4J/K4M K4M700-701-704 F

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

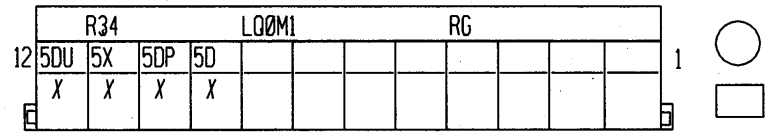


N°	mm²		... ⟶ ...
)	.35	5D	- AUTOMATIC TRANSMISSION FAULT WARNING LIGHT CONTROL
0	.35	5DP	1ST GEAR CONTROL > N-1 PULSE CONTROL
1	.35	5X	- POOR GRIP STARTING CONTROL
2	.6	5DU	- GEAR CHANGE LEVER LOCK CONTROL

ENGINE/INSTRUMENT PANEL

DG E3 SAUF TUR E64/DD

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

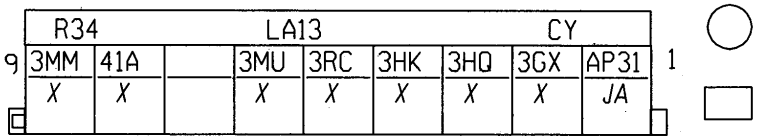


N°	mm²		··· ⟶ ···
1	.35	AP31	+ AFTER IGNITION PROTECTED FUSE LPG COMPUTER
2	.35	3GX	+ FUEL/LPG SELECTION INDICATOR LIGHT CONTROL
3	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
4	.35	3HK	- SOLENOID VALVE CONTROLS TURBOCHARGER BYPASS CONTROL
5	.35	3RC	LIQUIFIED PETROLEUM GAS START STOP SIGNAL
6	.35	3MU	LPG FAULT WARNING LIGHT CONTROL
8	.35	41A	SIGNAL+ FUEL LEVEL GAUGE
9	.35	3MM	FUEL GAUGE LEVEL > LIQUEFIED PETROLEUM GAS ECU SIGNAL

ENGINE/INSTRUMENT PANEL

DG K25,L64/TUR DG B64,L64/E1/MERCOS DG B64/L64/E2,E3/MERCOS DG

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

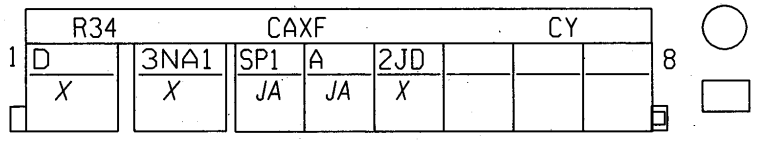


N°	mm²		··· ⟶ ···
1	3	D	+ STARTING
2	1.4	3NA1	+FUEL PUMP > INERTIA SWITCH
3	1	SP1	+ PROTECTED CONTROL > FAN ASSEMBLY
4	2	A	+ AFTER IGNITION
5	.35	2JD	+ ALTERNATOR EXCITATION

ENGINE/INSTRUMENT PANEL

DG K25,L64/TUR DG B64,L64/E1/MERCOS DG B64/L64/E2,E3/MERCOS

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

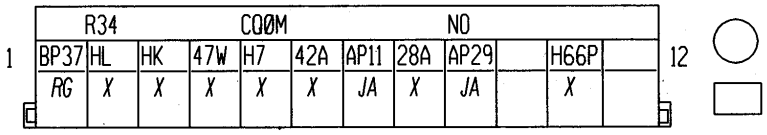


N°	mm²		··· ⟶ ···
1	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.35	HL	DIAGNOSTIC SIGNAL L
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	47W	SECONDARY SPEED SIGNAL
5	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
6	.35	42A	SIGNAL+ COOLANT TEMPERATURE
7	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
8	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
9	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
11	.6	H66P	+ REVERSING LIGHTS CONTROL

ENGINE/INSTRUMENT PANEL

DG E3 SAUF TUR DG RUNLI/LAVPH DG E1 E64/DD

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

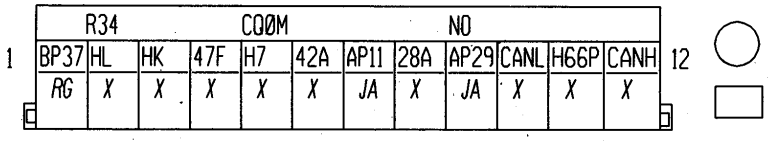


N°	mm²		··· ⟶ ···
1	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.35	HL	DIAGNOSTIC SIGNAL L
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	47F	VEHICLE SPEED SIGNAL
5	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
6	.35	42A	SIGNAL+ COOLANT TEMPERATURE
7	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
8	.35	28A	- OIL PRESSURE WARNING LIGHT CONTROL
9	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
10	.35	CANL	CAN DIAGNOSTIC SIGNAL L
11	.6	H66P	+ REVERSING LIGHTS CONTROL
12	.35	CANH	CAN DIAGNOSTIC SIGNAL H

ENGINE/INSTRUMENT PANEL

J64 K4M712 EQGPL K4J/K4M K4M712 EQGPL

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

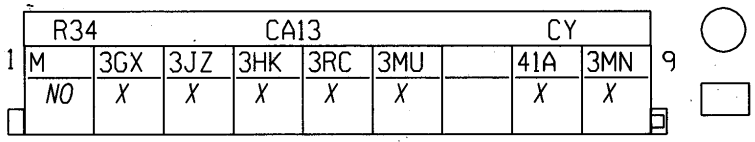


N°	mm²		··· ⟶ ···
1	.35	M	EARTH
2	.35	3GX	+ FUEL/LPG SELECTION INDICATOR LIGHT CONTROL
3	.6	3JZ	+ LIQUEFIED PETROLEUM GAS INJECTOR CONTROL
4	.6	3HK	- SOLENOID VALVE CONTROLS TURBOCHARGER BYPASS CONTROL
5	.35	3RC	LIQUIFIED PETROLEUM GAS START STOP SIGNAL
6	.35	3MU	LPG FAULT WARNING LIGHT CONTROL
8	.6	41A	SIGNAL+ FUEL LEVEL GAUGE
9	.6	3MN	MOTORISED THROTTLE POTENTIOMETER +5V

ENGINE/INSTRUMENT PANEL

F9Q F9Q731-736 F8Q790 . J64,F64/DIESEL . F9Q BVM5 F9Q7

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

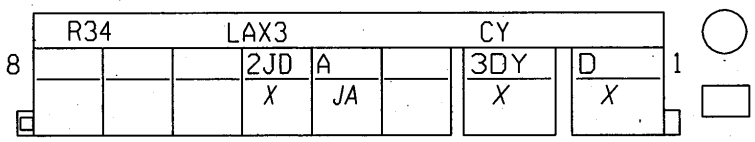


N°	mm²		··· ⟶ ···
	3	D	+ STARTING
	2	A	+ AFTER IGNITION
	.6	2JD	+ ALTERNATOR EXCITATION
	1.4	3DY	FUEL PUMP SUPPLY > FUEL PUMP RELAY

ENGINE/INSTRUMENT PANEL

K7M702 CHAUFO

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

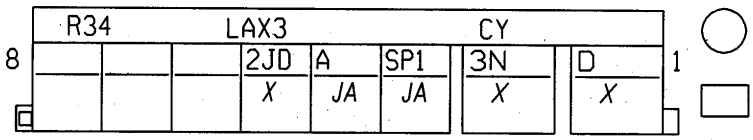


N°	mm²		··· ⟶ ···
1	3	D	+ STARTING
2	1.4	3N	+ FUEL PUMP>
3	1	SP1	+ PROTECTED CONTROL > FAN ASSEMBLY
4	2	A	+ AFTER IGNITION
5	2	2JD	+ ALTERNATOR EXCITATION

ENGINE/INSTRUMENT PANEL

F9Q F9Q731-736 F8Q790. J64,F64/DIESEL. F9Q BVM5 F9Q7

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

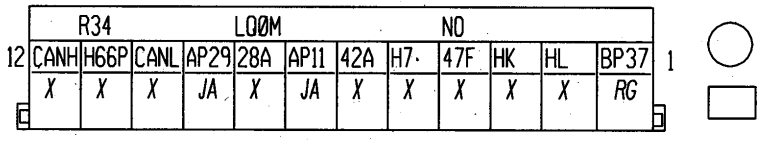


N°	mm²		··· ⟶ ···
1	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.35	HL	DIAGNOSTIC SIGNAL L
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	47F	VEHICLE SPEED SIGNAL
5	.6	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
6	.35	42A	SIGNAL+ COOLANT TEMPERATURE
7	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
8	.6	28A	- OIL PRESSURE WARNING LIGHT CONTROL
9	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
11	.6	H66P	+ REVERSING LIGHTS CONTROL
10	.35	CANL	CAN DIAGNOSTIC SIGNAL L
12	.35	CANH	CAN DIAGNOSTIC SIGNAL H

ENGINE/INSTRUMENT PANEL

K7M702 CHAUFO J64 K4J750 K4J/K4M K4J750 J64 K4M700-701-704

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

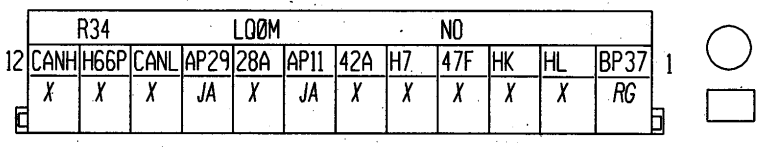


N°	mm²		··· ⟶ ···
1	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.35	HL	DIAGNOSTIC SIGNAL L
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	47F	VEHICLE SPEED SIGNAL
5	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
6	.6	42A	SIGNAL+ COOLANT TEMPERATURE
7	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
8	.6	28A	- OIL PRESSURE WARNING LIGHT CONTROL
9	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
11	.6	H66P	+ REVERSING LIGHTS CONTROL
10	.35	CANL	CAN DIAGNOSTIC SIGNAL L
12	.35	CANH	CAN DIAGNOSTIC SIGNAL H

ENGINE/INSTRUMENT PANEL

E7J626 K4M

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

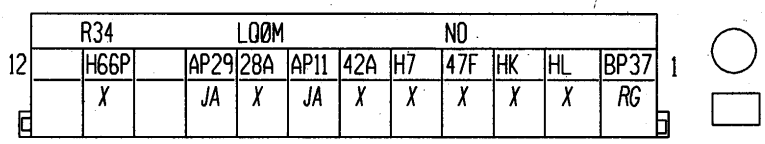


N°	mm²		... → ...
1	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.35	HL	DIAGNOSTIC SIGNAL L
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	47F	VEHICLE SPEED SIGNAL
5	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
6	.35	42A	SIGNAL+ COOLANT TEMPERATURE
7	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
8	.6	28A	- OIL PRESSURE WARNING LIGHT CONTROL
9	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
11	.6	H66P	+ REVERSING LIGHTS CONTROL

ENGINE/INSTRUMENT PANEL

F5R740

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

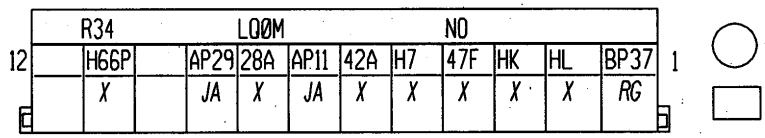


N°	mm²		... → ...
1	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.35	HL	DIAGNOSTIC SIGNAL L
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	47F	VEHICLE SPEED SIGNAL
5	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
6	.6	42A	SIGNAL+ COOLANT TEMPERATURE
7	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
8	.6	28A	- OIL PRESSURE WARNING LIGHT CONTROL
9	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
11	.6	H66P	+ REVERSING LIGHTS CONTROL

ENGINE/INSTRUMENT PANEL

F4P F4P722

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

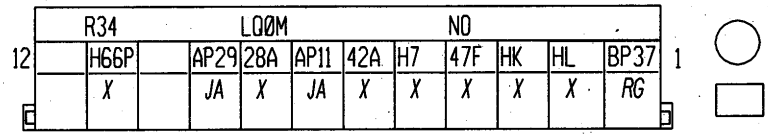


N°	mm²		... → ...
1	.6	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.22	HL	DIAGNOSTIC SIGNAL L
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	47F	VEHICLE SPEED SIGNAL
5	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
6	.6	42A	SIGNAL+ COOLANT TEMPERATURE
7	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
8	.6	28A	- OIL PRESSURE WARNING LIGHT CONTROL
9	.6	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
11	.35	H66P	+ REVERSING LIGHTS CONTROL

ENGINE/INSTRUMENT PANEL

F8Q622

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

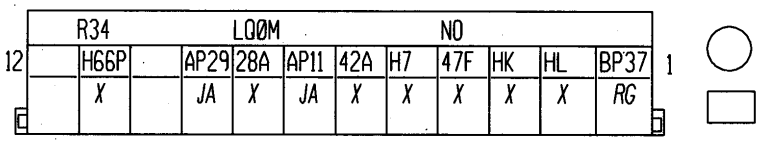


N°	mm²		... → ...
1	.35	BP37	PROTECTED BATTERY > STORAGE INJECTOR > LOCKING
2	.35	HL	DIAGNOSTIC SIGNAL L
3	.35	HK	DIAGNOSTIC SIGNAL K
4	.35	47F	VEHICLE SPEED SIGNAL
5	.35	H7	REV COUNTER SIGNAL > TDC > COIL > COMPUTER
6	.35	42A	SIGNAL+ COOLANT TEMPERATURE
7	.6	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION
8	.6	28A	- OIL PRESSURE WARNING LIGHT CONTROL
9	.35	AP29	PROTECTED ENGINE SECURITY FUNCTION FUSE + AFTER IGNITION
11	.6	H66P	+ REVERSING LIGHTS CONTROL

ENGINE/INSTRUMENT PANEL

F9Q F9Q731-736 J64 K4J750 K4J/K4M K4J750 J64 K4M700-701-70

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

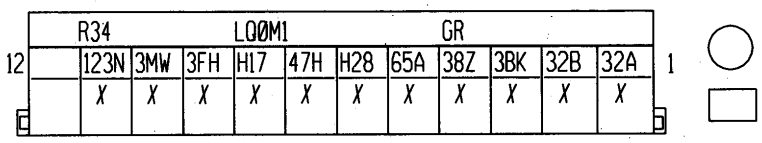


N°	mm²		... → ...
1	.6	32A	OIL LEVEL SENSOR - OIL SIGNAL 2
2	.6	32B	OIL LEVEL SENSOR - OIL SIGNAL 1
3	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
5	.35	65A	+ BRAKE LIGHTS CONTROL
6	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL
7	.35	47H	FUEL FLOW RATE SIGNAL
8	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
10	.35	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
11	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL
4	.35	38Z	AIR CONDITIONING CYCLE > PETROL COMPUTER > DIESEL CONTROL
9	.35	3FH	- EMISSION CONTROL FAULT WARNING LIGHT CONTROL

ENGINE/INSTRUMENT PANEL

K7M702 CHAUFO

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

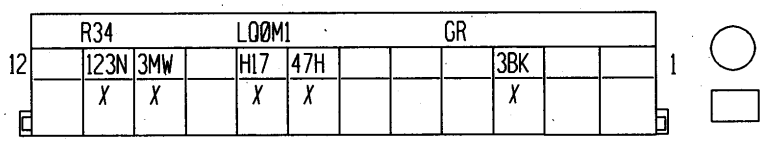


N°	mm²		... → ...
3	.35	3BK	- PREHEATER INDICATOR LIGHT > INJECTION FAULT
7	.35	47H	FUEL FLOW RATE SIGNAL
8	.35	H17	PETROL INJECTION CODE > DIESEL > SOFTWARE LOCK SIGNAL
10	.6	3MW	ENGINE SAFETY WARNING LIGHT CONTROL
11	.35	123N	COMPUTER > HEATED SCREEN START UP SIGNAL

ENGINE/INSTRUMENT PANEL

J64 K4J750 K4J/K4M K4J750 J64 K4M700-701-704 K4J/K4M K4M700-70

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

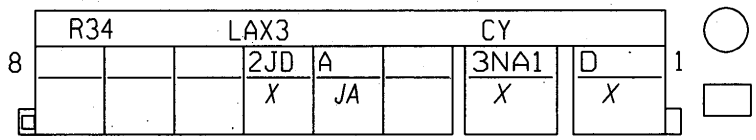


N°	mm²		... → ...
3	D		+ STARTING
1.4	3NA1		+FUEL PUMP > INERTIA SWITCH
2	A		+ AFTER IGNITION
.6	2JD		+ ALTERNATOR EXCITATION

ENGINE/INSTRUMENT PANEL

J64 K4M706 CA K4J/K4M K4M706 CA J64 K4M706 CHAUFO K4J/K4M K4M7

S1-S4-S6-S27-S28-S29-S31-S32-S33-S35

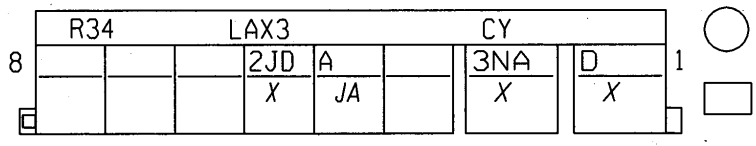


N°	mm²		... → ...
3	D		+ STARTING
1.4	3NA		+INERTIA SWITCH EXCITER COIL > FUEL PUMP RELAY
2	A		+ AFTER IGNITION
.6	2JD		+ ALTERNATOR EXCITATION

PEDAL UNIT/INSTRUMENT PANEL

DG K25,L64/TUR DG B64,L64/E1/MERCOS DG B64/L64/E2,E3/MERCOS

S6

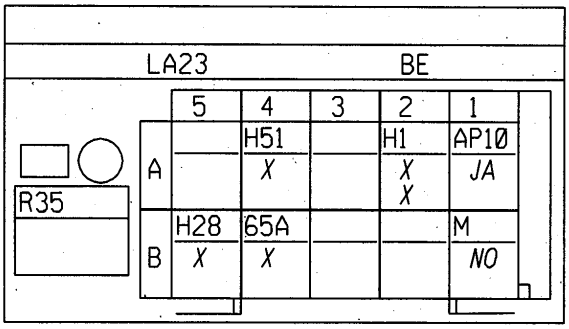


N°	mm²		... → ...
A1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
B1	.35	M	EARTH
A2	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
A2	.35	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
A4	.35	H51	LOWER CLUTCH PEDAL
B4	.6	65A	+ BRAKE LIGHTS CONTROL
B5	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL

PEDAL UNIT/INSTRUMENT PANEL

DG K25,V25,B64,D64,S64,L64/F9Q DIESEL K25,V25,B64,D64,S64,L64/F9Q

S6

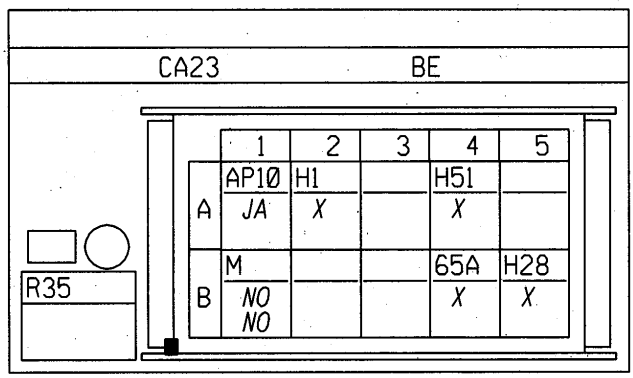


N°	mm²		... → ...
A1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
B1	.35	M	EARTH
B1	.6	M	EARTH
A2	.6	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
A4	.6	H51	LOWER CLUTCH PEDAL
B4	.6	65A	+ BRAKE LIGHTS CONTROL
B5	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL

PEDAL UNIT/INSTRUMENT PANEL

DG E3 SAUF TUR DG RUNLI/LAVPH DG E1 E64/DD

S6

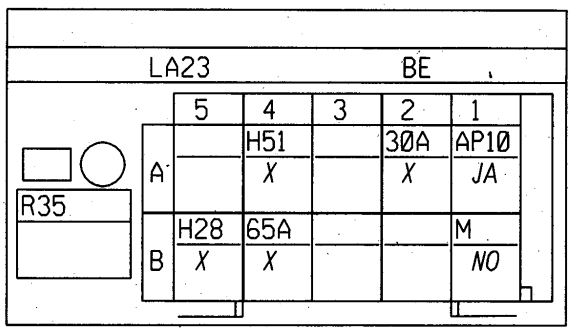


N°	mm²		... → ...
A1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
B1	.35	M	EARTH
A2	.35	30A	NIVOCODE WARNING LIGHT - CONTROL
A4	.35	H51	LOWER CLUTCH PEDAL
B4	.6	65A	+ BRAKE LIGHTS CONTROL
B5	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL

PEDAL UNIT/INSTRUMENT PANEL

DG B64,D64,S64,L64,E64/SAUF F9Q DIESEL B64,D64,S64,L64,E64/SAUF F9Q

S6

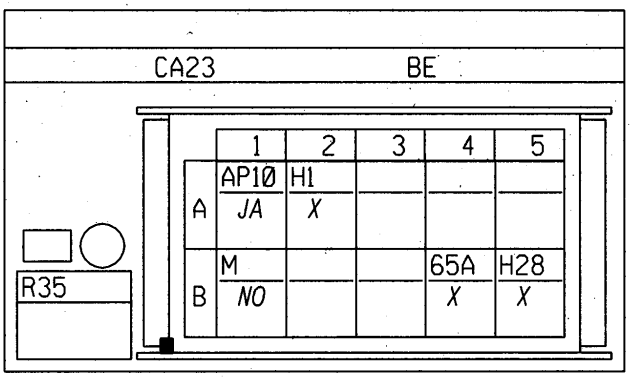


N°	mm²		... → ...
A1	.6	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
B1	.6	M	EARTH
A2	.6	H1	- HANDBRAKE WARNING LIGHT > BRAKE FLUID LEVEL CONTROL
B4	.6	65A	+ BRAKE LIGHTS CONTROL
B5	.35	H28	CONTROLLED CLUTCH ACCELERATOR SENSOR > BRAKE PEDAL SIGNAL

ABS/INSTRUMENT PANEL

DG B64/L64/E2,E3/MERCOS DG E3 SAUF TUR DG RUNLI/LAVPH DG E1

S2-S3

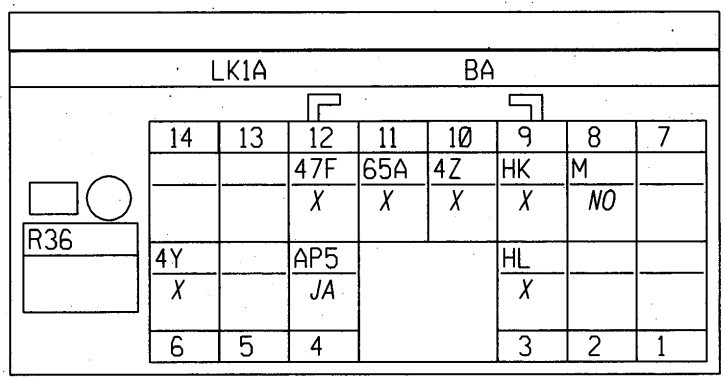


N°	mm²		... ⟶ ...
3	.35	HL	DIAGNOSTIC SIGNAL L
4	.6	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
6	.35	4Y	- BRAKE FAULT WARNING LIGHT
8	.35	M	EARTH
9	.35	HK	DIAGNOSTIC SIGNAL K
10	.35	4Z	- ABS WARNING LIGHT
11	.35	65A	+ BRAKE LIGIITS CONTROL
12	.35	47F	VEHICLE SPEED SIGNAL

ABS/INSTRUMENT PANEL

D64,E64 ABS J64,F64 ABS

S2-S3

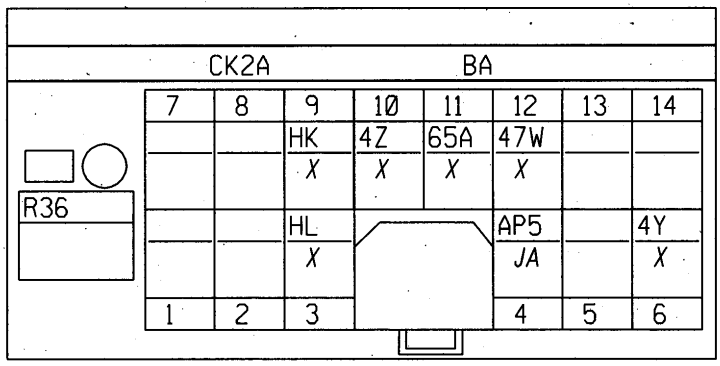


N°	mm²		... ⟶ ...
3	.35	HL	DIAGNOSTIC SIGNAL L
4	.35	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
6	.35	4Y	- BRAKE FAULT WARNING LIGHT
9	.35	HK	DIAGNOSTIC SIGNAL K
10	.35	4Z	- ABS WARNING LIGHT
11	.35	65A	+ BRAKE LIGHTS CONTROL
12	.35	47W	SECONDARY SPEED SIGNAL

ENGINE/INJECTORS

F5R740

S35

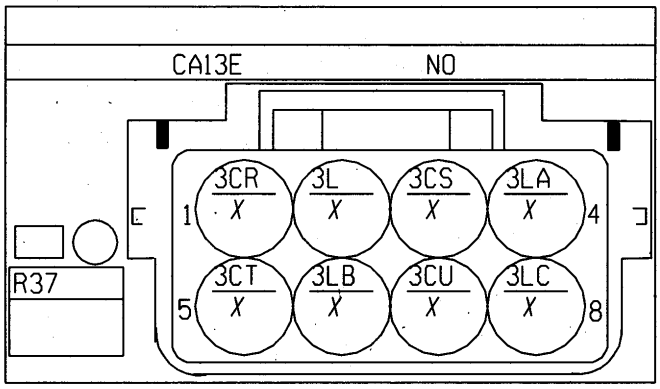


N°	mm²		... → ...
	1	3CR	INJECTOR 1 - CONTROL
	1	3L	+ INJECTOR 1
	1	3CS	INJECTOR 2 - CONTROL
	1	3LA	+ INJECTOR 2
	1	3CT	INJECTOR 3 - CONTROL
	1	3LB	+ INJECTOR 3
	1	3CU	INJECTOR 4 - CONTROL
	1	3LC	+ INJECTOR 4

DASHBOARD/CONSOLE

DG E3 SAUF TUR DG RUNLI/LAVPH E64/DD DG B64/L64/E2,E3/MERCOS

S5-S8

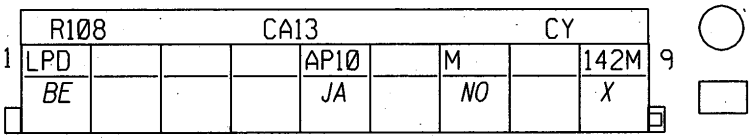


N°	mm²		... → ...
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	2	M	EARTH
	.35	142M	- ELECTRIC HOOD CLOSURE CONTROL
	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE

DASHBOARD/CONSOLE

DG B64/L64/E2,E3/MERCOS

S5-S8

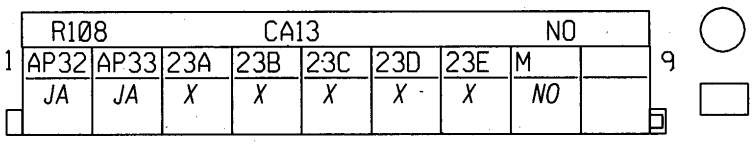


N°	mm²		... → ...
	2	AP32	+ AFTER IGNITION RIGHT-HAND REAR WINDOW WINDER FUSE PROTECTION
	1.4	AP33	+ AFTER IGNITION LEFT-HAND REAR WINDOW WINDER FUSE PROTECTION
	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT PANEL CLOSURE
	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING
	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
	.6	23E	REAR LOCKING FUNCTION RELAY COIL CONTROL
	2	M	EARTH

DASHBOARD/CONSOLE

DG E3 SAUF TUR DG RUNLI/LAVPH E64/DD

S5-S8

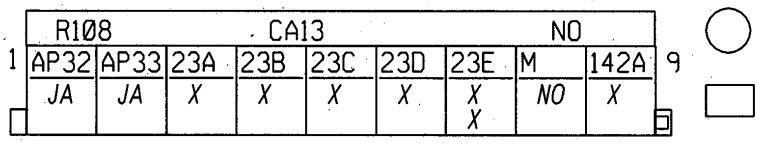


N°	mm²		... ⟶ ...
1	2	AP32	+ AFTER IGNITION RIGHT-HAND REAR WINDOW WINDER FUSE PROTECTION
2	1.4	AP33	+ AFTER IGNITION LEFT-HAND REAR WINDOW WINDER FUSE PROTECTION
3	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT PANEL CLOSURE
4	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING
5	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
6	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
7	.35	23E	REAR LOCKING FUNCTION RELAY COIL CONTROL
7	.6	23E	REAR LOCKING FUNCTION RELAY COIL CONTROL
8	2	M	EARTH
9	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL

DASHBOARD/CONSOLE

E64 CATOEL E64 CATOMA

S5-S8

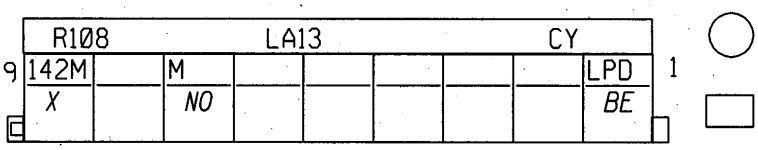


N°	mm²		... ⟶ ...
1	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
7	2	M	EARTH
9	.35	142M	- ELECTRIC HOOD CLOSURE CONTROL

DASHBOARD/CONSOLE

E64 CATOEL E64 CATOMA

S5-S8

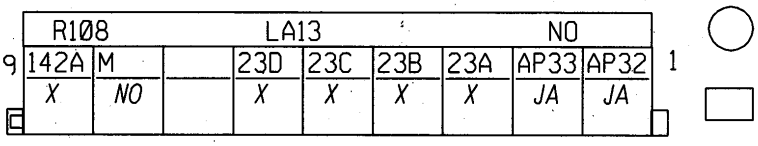


N°	mm²		... ⟶ ...
1	2	AP32	+ AFTER IGNITION RIGHT-HAND REAR WINDOW WINDER FUSE PROTECTION
2	1.4	AP33	+ AFTER IGNITION LEFT-HAND REAR WINDOW WINDER FUSE PROTECTION
3	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT PANEL CLOSURE
4	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING
5	1.4	23C	WINDOW WINDER UPWARD MOVEMENT > REAR LEFT-HAND PANEL CLOSURE CONTROL
6	1.4	23D	WINDOW WINDER DOWNWARD MOVEMENT > REAR LEFT-HAND PANEL OPENING CONTROL
8	2	M	EARTH
9	.35	142A	- ELECTRIC HOOD OPENING > HOOD SWITCH CONTROL

N°	mm		
1	.35	3DZ	SENSOR EARTH
2	.35	3CQ	CYLINDER 1 SENSOR SIGNAL
3	.6	3FB	+ INJECTION > PROTECTION RELAY

ENGINE/FUEL PUMP

F9Q BVM5 F9Q732-733 BVM5 F9Q BVA4 F9Q732-733 BVA4

S31

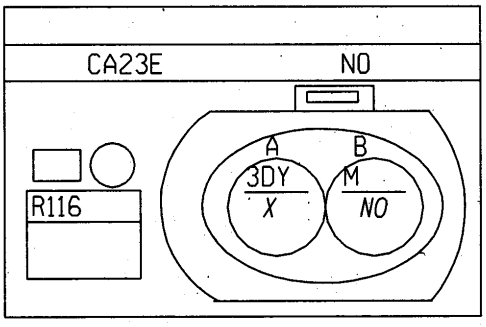


N°	mm²		... → ...
A	3	3DY	FUEL PUMP SUPPLY > FUEL PUMP RELAY
B	3	M	EARTH

HEADLIGHT WASHER FRONT/INTERMEDIATE SURFACE

K25,V25,B64,D64,S64,L64,E64,F64

S1

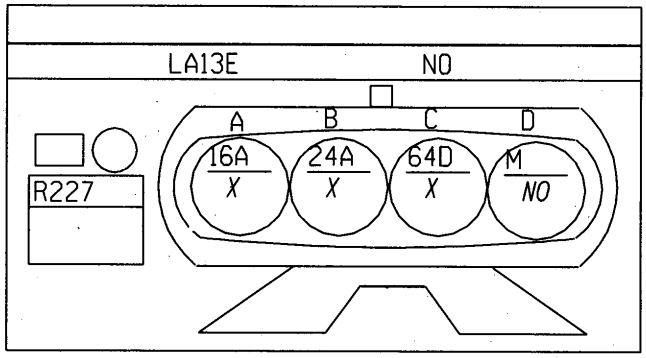


N°	mm²		... → ...
A	.6	16A	+ FRONT SCREEN WASHER PUMP CONTROL
B	.6	24A	+ REAR SCREEN WASHER PUMP CONTROL
C	.6	64D	RH FRONT INDICATOR CONTROL
D	.6	M	EARTH

HEADLIGHT WASHER FRONT/INTERMEDIATE SURFACE

J64,F64 K25,V25,B64,D64,S64,L64,E64/PROJSO/SAUF MERCOS,TUR,COL K25,V25

S1

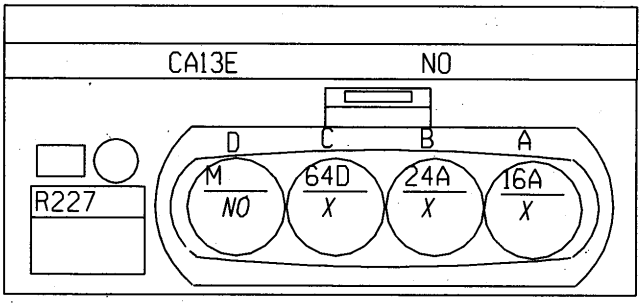


N°	mm²		... → ...
A	.35	16A	+ FRONT SCREEN WASHER PUMP CONTROL
B	.35	24A	+ REAR SCREEN WASHER PUMP CONTROL
C	.35	64D	RH FRONT INDICATOR CONTROL
D	.35	M	EARTH

REAR RH/REGISTRATION PLATE LIGHTING

L64 LVAREL/SAUF TUR L64 LVARMA/SAUF TUR

S19

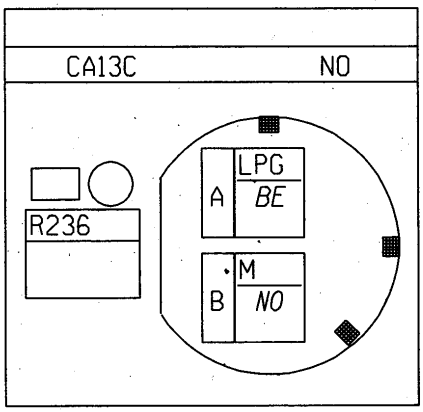


N°	mm²		... → ...
A	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
B	.6	M	EARTH

CP ENGINE ABS/UNDERBODY ABS

D64,E64 ABS J64,F64 ABS

S3

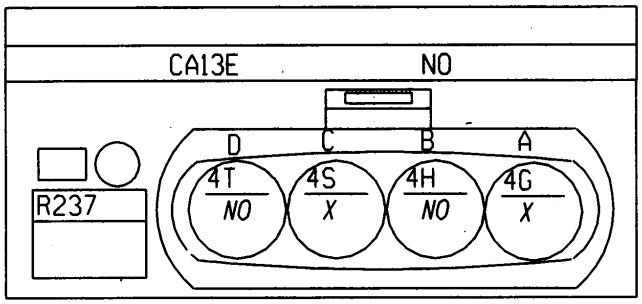


N°	mm²		... → ...
A	.6	4G	LH REAR WHEEL SENSOR SIGNAL
B	.6	4H	+LH REAR WHEEL SENSOR
C	.6	4S	RH REAR WHEEL SENSOR SIGNAL
D	.6	4T	+RH REAR WHEEL SENSOR

CP ENGINE ABS/UNDERBODY ABS


K25,V25,B64,S64,L64/ABS D64,E64/ABS

S3

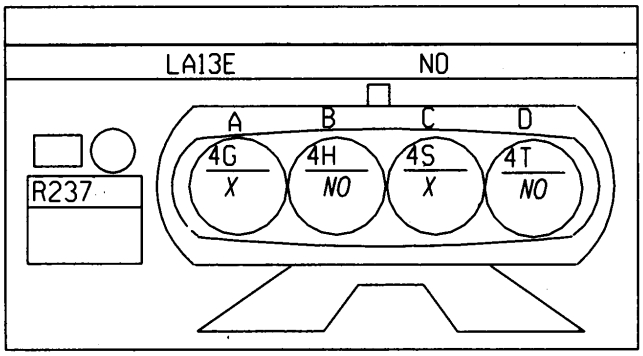


N°	mm²		... → ...
A	.5	4G	LH REAR WHEEL SENSOR SIGNAL
B	.5	4H	+LH REAR WHEEL SENSOR
C	.5	4S	RH REAR WHEEL SENSOR SIGNAL
D	.5	4T	+RH REAR WHEEL SENSOR

HEATED SCREEN/INSTRUMENT PANEL
DG E3 SAUF TUR

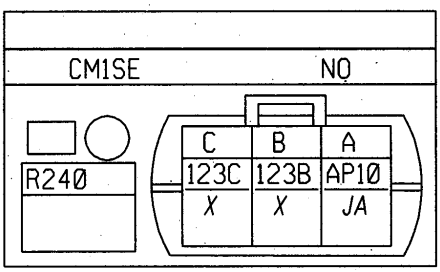


N°	mm²		··· ⟶ ···
A	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
B	.35	123B	- LEFT-HAND HEATED SCREEN TIMER CONTROL
C	.35	123C	- RIGHT -HAND HEATED SCREEN TIMER CONTROL

RH REAR DOOR/LH REAR WIRING
B64,S64 B64/LVAREL L64 LVAREL/SAUF TUR L64 LVARMA/SAUF TUR
S8-S9

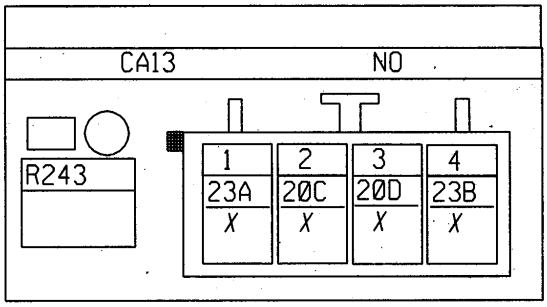

N°	mm²		··· ⟶ ···
1	2	23A	WINDOW WINDER UPWARD MOVEMENT CONTROL > REAR RIGHT PANEL CLOSURE
2	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
4	2	23B	WINDOW WINDER DOWNWARD MOVEMENT CONTROL > REAR RIGHT-HAND PANEL OPENING

RH REAR DOOR/LH REAR WIRING
B64,S64 B64,S64/SSLVRA,LVRARMA
S8-S9

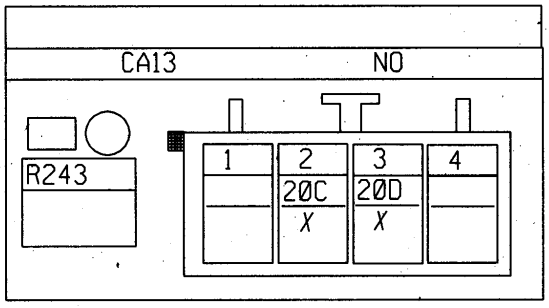


N°	mm²		··· ⟶ ···
2	.5	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
3	.5	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

LH REAR/TAILGATE

D64

S18-S19-S20-S21-S23

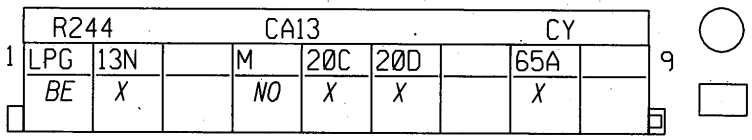


N°	mm²		··· ⟶ ···
1	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
2	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
4	.6	M	EARTH
5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
6	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
8	.35	65A	+ BRAKE LIGHTS CONTROL

LH REAR/TAILGATE

D64

S18-S19-S20-S21-S23

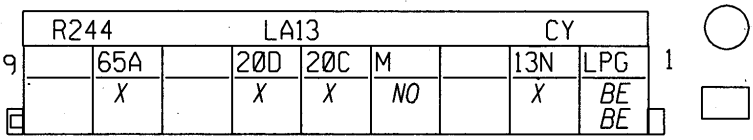


N°	mm²		··· ⟶ ···
1	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
1	.6	LPG	LEFT HAND SIDE LIGHT PROTECTED +
2	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
4	.6	M	EARTH
5	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
6	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
8	.35	65A	+ BRAKE LIGHTS CONTROL

LH REAR/TAILGATE

L64 LVAREL/SAUF TUR L64 LVARMA/SAUF TUR

S18-S19-S20-S21-S23

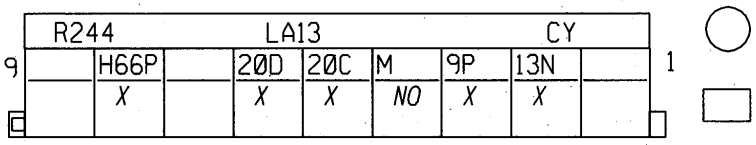


N°	mm²		... → ...
	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
	.6	M	EARTH
	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
	.6	H66P	+ REVERSING LIGHTS CONTROL

LH REAR/TAILGATE

L64

S18-S19-S20-S21-S23

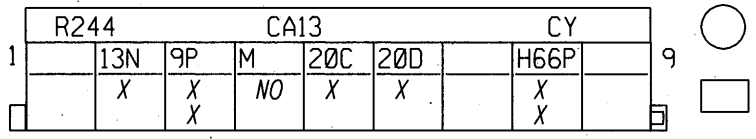


N°	mm²		... → ...
	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
	.6	9P	+ PROTECTED REAR FOG LIGHTS CONTROL
	.6	M	EARTH
	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL
	.6	H66P	+ REVERSING LIGHTS CONTROL
	.6	H66P	+ REVERSING LIGHTS CONTROL

LH REAR/TAILGATE

E64 CATOMA E64 CATOEL

S18-S19-S20-S21-S23

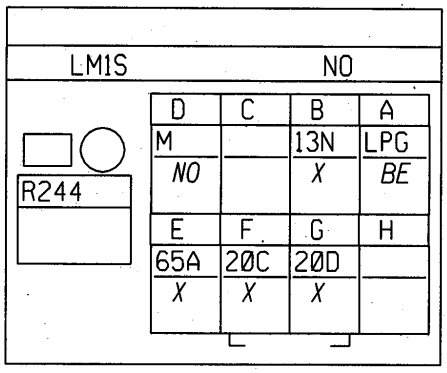


N°	mm²		··· ⟶ ···
A	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
B	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
D	.6	M	EARTH
E	.35	65A	+ BRAKE LIGHTS CONTROL
F	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
G	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

LH REAR/TAILGATE


E64

S18-S19-S20-S21-S23

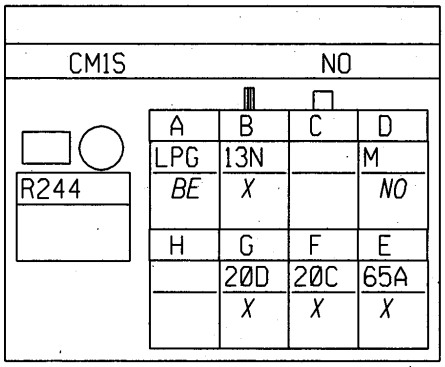


N°	mm²		··· ⟶ ···
A	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
B	.35	13N	- INTERIOR LIGHTING > REAR REBATE CONTROL
D	.6	M	EARTH
E	.35	65A	+ BRAKE LIGHTS CONTROL
F	.6	20C	+ OPEN CENTRAL DOOR LOCKING CONTROL
G	.6	20D	+ CLOSE CENTRAL DOOR LOCKING CONTROL

RAC TAILGATE/REGISTRATION PLATE LIGHT
D64 B64,S64/SAUF TUR
S15-S18-S23-S26

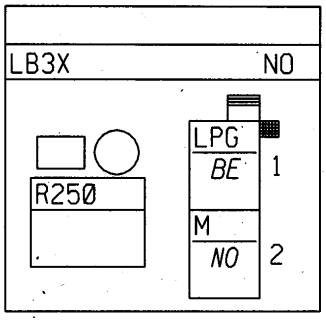

N°	mm²		... → ...
	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
!	.35	M	EARTH


RAC TAILGATE/REGISTRATION PLATE LIGHT
K25,V25/E1,E2 E64
S15-S18-S23-S26

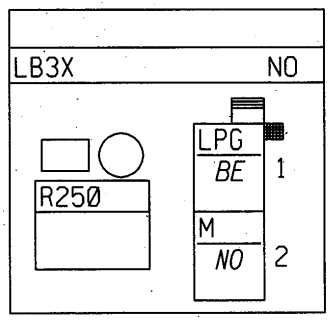

N°	mm²		... → ...
	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
!	.6	M	EARTH

INSTRUMENT PANEL/WATER BOX


E64/DD

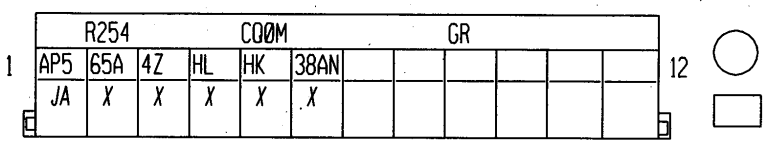

N°	mm²		... ⟶ ...
1	.6	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
2	.35	65A	+ BRAKE LIGHTS CONTROL
3	.35	4Z	- ABS WARNING LIGHT
4	.35	HL	DIAGNOSTIC SIGNAL L
5	.35	HK	DIAGNOSTIC SIGNAL K
6	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL

INSTRUMENT PANEL/WATER BOX


E64/DD/CATOEL

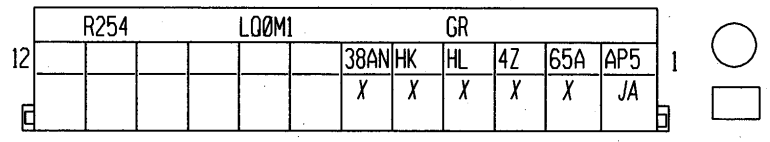

N°	mm²		... ⟶ ...
1	.35	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
2	.35	65A	+ BRAKE LIGHTS CONTROL
3	.35	4Z	- ABS WARNING LIGHT
4	.35	HL	DIAGNOSTIC SIGNAL L
5	.35	HK	DIAGNOSTIC SIGNAL K
6	.35	38AN	- AIR CONDITIONING RECIRCULATION CONTROL

INSTRUMENT PANEL/WATER BOX


E64/DD

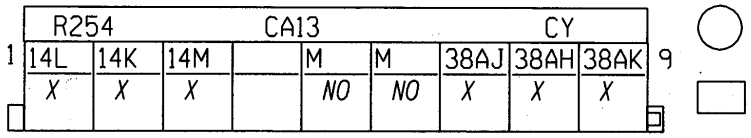

N°	mm²		... → ...
1	1.4	14L	+ FRONT HIGH SPEED WIPER TIMER CONTROL
2	1	14K	+ FRONT LOW SPEED WIPER TIMER CONTROL
3	.35	14M	FRONT WIPER PARK POSITION > COMPUTER CONTROL
5	1.4	M	EARTH
6	1.4	M	EARTH
7	1	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
8	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
9	1.4	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL

INSTRUMENT PANEL/WATER BOX


E64/DD/CATOEL

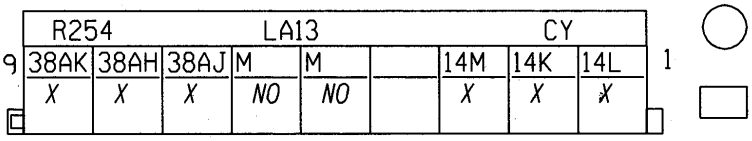

N°	mm²		... → ...
1	1.4	14L	+ FRONT HIGH SPEED WIPER TIMER CONTROL
2	1	14K	+ FRONT LOW SPEED WIPER TIMER CONTROL
3	.35	14M	FRONT WIPER PARK POSITION > COMPUTER CONTROL
5	1.4	M	EARTH
6	1.4	M	EARTH
7	1	38AJ	+ FAN ASSEMBLY SPEED 2 CONTROL
8	.6	38AH	+ FAN ASSEMBLY SPEED 1 CONTROL
9	1.4	38AK	+ FAN ASSEMBLY SPEED 3 CONTROL

INSTRUMENT PANEL/WATER BOX


E64/DD

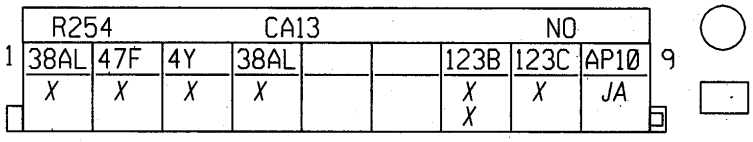

N°	mm²		··· ⟶ ···
1	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
2	.35	47F	VEHICLE SPEED SIGNAL
3	.35	4Y	- BRAKE FAULT WARNING LIGHT
4	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
7	.35	123B	- LEFT-HAND HEATED SCREEN TIMER CONTROL
7	.35	123B	- LEFT-HAND HEATED SCREEN TIMER CONTROL
8	.35	123C	- RIGHT -HAND HEATED SCREEN TIMER CONTROL
9	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE

INSTRUMENT PANEL/WATER BOX


E64/DD

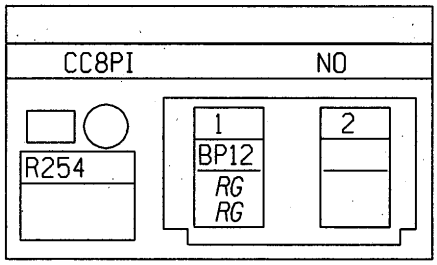

N°	mm²		··· ⟶ ···
1	3	BP12	+ PROTECTED BATTERY > PASSENGER COMPARTMENT 2
1	4	BP12	+ PROTECTED BATTERY > PASSENGER COMPARTMENT 2


INSTRUMENT PANEL/WATER BOX

E64/DD

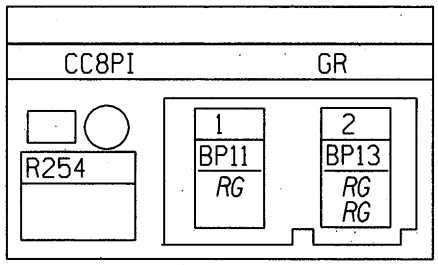


N°	mm²		··· ⟶ ···
1	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
2	2	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3
2	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3

INSTRUMENT PANEL/WATER BOX
E64/DD/CATOEL

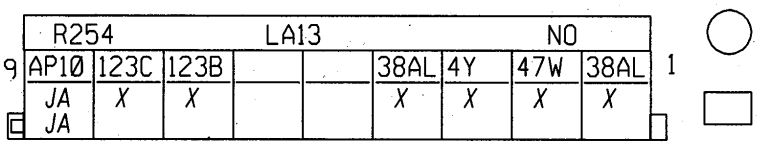

N°	mm²		... → ...
1	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
2	.35	47W	SECONDARY SPEED SIGNAL
3	.35	4Y	- BRAKE FAULT WARNING LIGHT
4	1.4	38AL	+ FAN ASSEMBLY SPEED 4 CONTROL
7	.35	123B	- LEFT-HAND HEATED SCREEN TIMER CONTROL
8	.35	123C	- RIGHT -HAND HEATED SCREEN TIMER CONTROL
9	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
9	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE


INSTRUMENT PANEL/WATER BOX
E64/DD/CATOEL

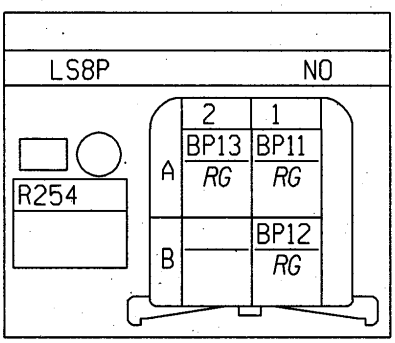

N°	mm²		... → ...
A1	5	BP11	PROTECTED BATTERY > PASSENGER COMPARTMENT 1
B1	4	BP12	+ PROTECTED BATTERY > PASSENGER COMPARTMENT 2
A2	5	BP13	PROTECTED BATTERY > PASSENGER COMPARTMENT 3

ABS/RADIATOR TANK


E64/DD/CATOEL

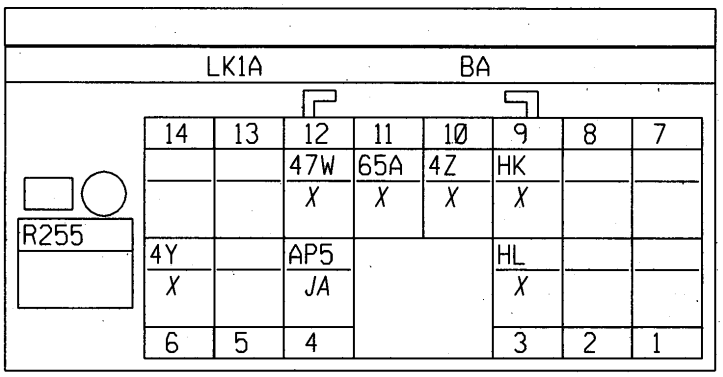

N°	mm²		... → ...
3	.35	HL	DIAGNOSTIC SIGNAL L
4	.35	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
6	.35	4Y	- BRAKE FAULT WARNING LIGHT
9	.35	HK	DIAGNOSTIC SIGNAL K
10	.35	4Z	- ABS WARNING LIGHT
11	.35	65A	+ BRAKE LIGHTS CONTROL
12	.35	47W	SECONDARY SPEED SIGNAL


HEATED WINDSCREEN/WATER BOX

E64/DD/CATOEL

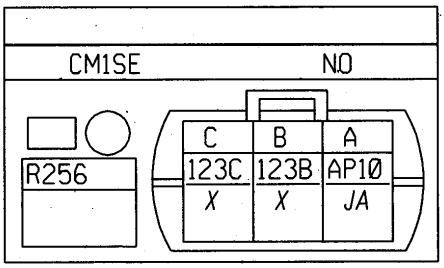


N°	mm²		... → ...
A	.35	AP10	+ AFTER IGNITION BRAKE LIGHT PROTECTED FUSE
B	.35	123B	- LEFT-HAND HEATED SCREEN TIMER CONTROL
C	.35	123C	- RIGHT -HAND HEATED SCREEN TIMER CONTROL

PASSENGER COMPARTMENT/RADIO DISPLAY INTERMEDIARY
DG B64/L64/E2,E3/MERCOS
S4

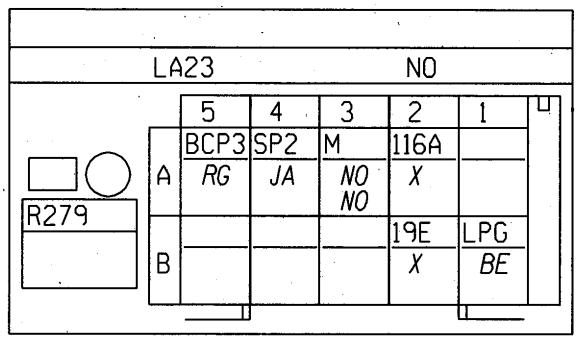

N°	mm²		... → ...
B1	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
A2	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
B2	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
A3	.35	M	EARTH
A3	.35	M	EARTH
A4	.35	SP2	+ PROTECTED CONTROL > RADIO >
A5	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER

PASSENGER COMPARTMENT/RADIO DISPLAY INTERMEDIARY
DG B64,L64/E1/MERCOS
S4

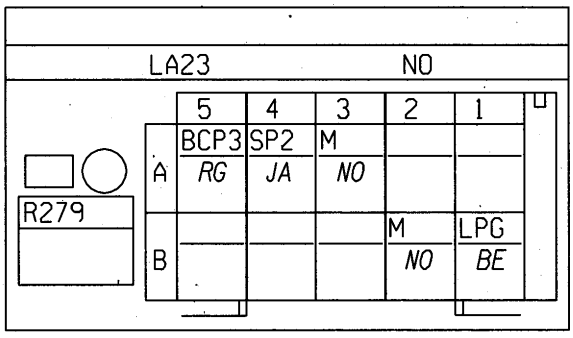


N°	mm²		... → ...
B1	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
B2	.35	M	EARTH
A3	.35	M	EARTH
A4	.35	SP2	+ PROTECTED CONTROL > RADIO >
A5	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER

PASSENGER COMPARTMENT/RADIO DISPLAY INTERMEDIARY

DG E3 SAUF TUR DG RUNLI/LAVPH E64/DD

S4

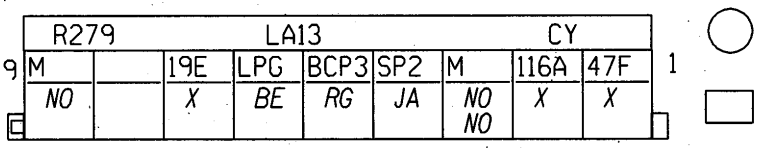


N°	mm²		··· ⟶ ···
1	.35	47F	VEHICLE SPEED SIGNAL
2	.35	116A	EXTERIOR TEMPERATURE SENSOR SIGNAL
3	.35	M	EARTH
3	.35	M	EARTH
4	.35	SP2	+ PROTECTED CONTROL > RADIO >
5	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
6	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
7	.35	19E	- HEADLIGHTS > RHEOSTAT > STRAP CONTROL
9	.6	M	EARTH

PASSENGER COMPARTMENT/RADIO DISPLAY INTERMEDIARY

DG E3 SAUF TUR E64/DD

S4

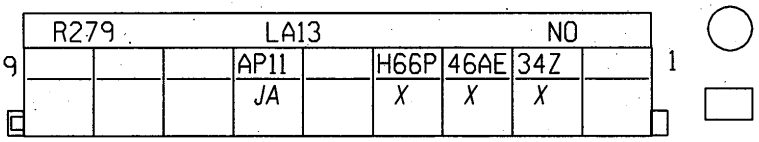


N°	mm²		··· ⟶ ···
2	.35	34Z	RADIO OPERATION SIGNAL
3	.6	46AE	RADIO COMMUNICATION INTERFACE CASING > RADIO DAMPING
4	.35	H66P	+ REVERSING LIGHTS CONTROL
6	.35	AP11	+ AFTER IGNITION REVERSE LIGHT FUSE PROTECTION

PASSENGER COMPARTMENT/RADIO DISPLAY INTERMEDIARY

DG E1

S4

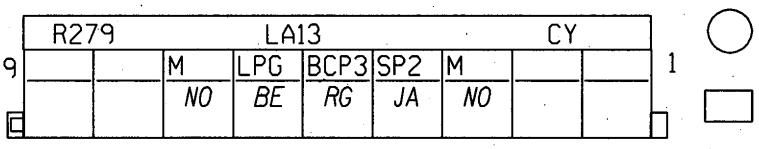


N°	mm²		··· ⟶ ···
3	.35	M	EARTH
4	.35	SP2	+ PROTECTED CONTROL > RADIO >
5	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
6	.35	LPG	LEFT HAND SIDE LIGHT PROTECTED +
7	.35	M	EARTH

REAR / HOOD COVER

E64 CATOMA E64 CATOEL


S22

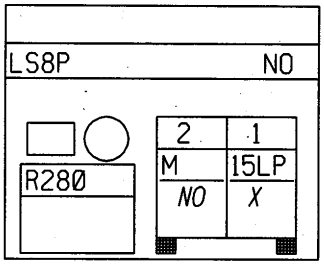

N°	mm²		... → ...
3	15LP		+ HEATED PROTECTED REAR SCREEN CONTROL
3	M		EARTH

HEATER PLUG/ENGINE

F9Q BVM5 F9Q732-733 BVM5 F9Q BVA4 F9Q732-733 BVA4

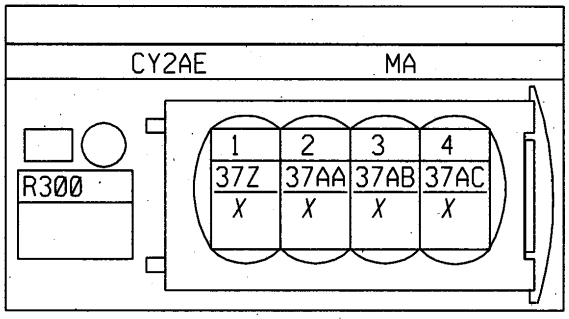


N°	mm²		... → ...
3	37Z		HEATER PLUG 1 CONTROL
3	37AA		HEATER PLUG 2 CONTROL
3	37AB		HEATER PLUG 3 CONTROL
3	37AC		HEATER PLUG 4 CONTROL

INSTRUMENT PANEL / COURTESY LIGHTS

DG E3 SAUF TUR DG RUNLI/LAVPH DG E1 E64/DD

S4-S7

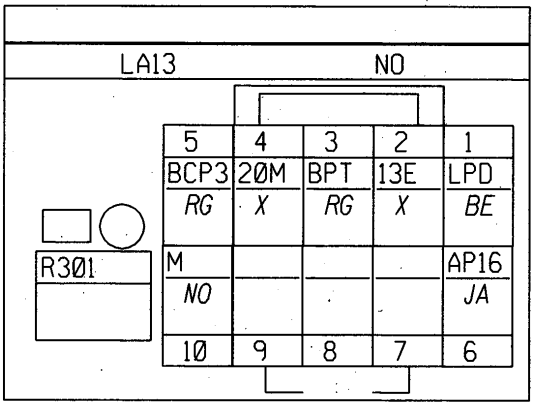


N°	mm²		... ⟶ ...
1	.35	LPD	RIGIIT IIAND SIDE LIGIIT PROTECTED +
2	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
3	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
4	.35	20M	DOOR LOCKING LED
5	.35	BCP3	+ COURTESY LIGHTS FUSE PROTECTED BATTERY CIRCUIT BREAKER
6	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE
10	1.4	M	EARTH

INSTRUMENT PANEL / COURTESY LIGHTS


DG K25,L64/TUR DG B64,L64/E1/MERCOS DG B64/L64/E2,E3/MERCOS

S4-S7

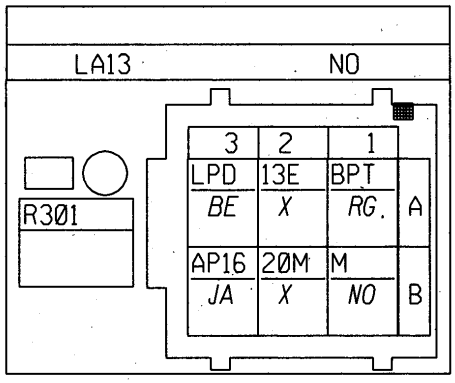


N°	mm²		... ⟶ ...
A1	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
B1	1.4	M	EARTH
A2	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
B2	.35	20M	DOOR LOCKING LED
A3	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
B3	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE

INSTRUMENT PANEL / COURTESY LIGHTS
K25,V25,B64,S64,L64 TO
S4-S7

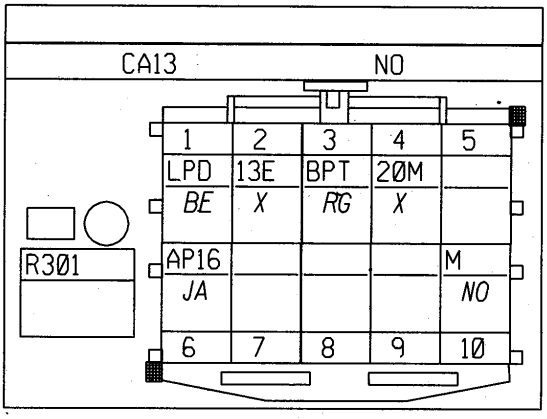

N°	mm²		... → ...
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
	.35	20M	DOOR LOCKING LED
	1.4	AP16	+ AFTER IGNITION SUNROOF PROTECTED FUSE
0	1.4	M	EARTH

INSTRUMENT PANEL / COURTESY LIGHTS
K25,V25,B64,S64,L64 TN E64/SAUF E3
S4-S7

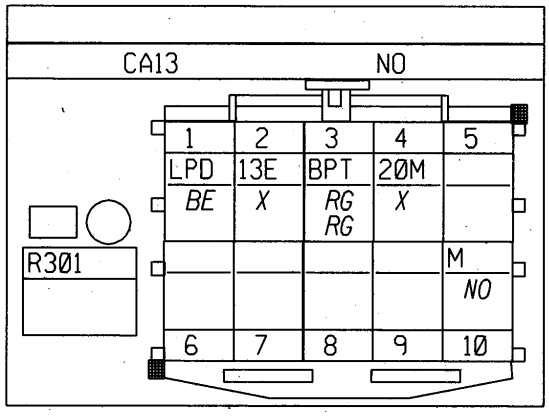


N°	mm²		... → ...
	.35	LPD	RIGHT HAND SIDE LIGHT PROTECTED +
	.35	13E	COURTESY LIGHT > TIMER SWITCH - CONTROL
	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
	.35	BPT	+ TIMER SWITCH PROTECTED BATTERY
	.35	20M	DOOR LOCKING LED
)	.35	M	EARTH

ADDITIONAL LPG TANK/PASSENGER COMPARTMENT

DG E3 SAUF TUR E64/DD

S4

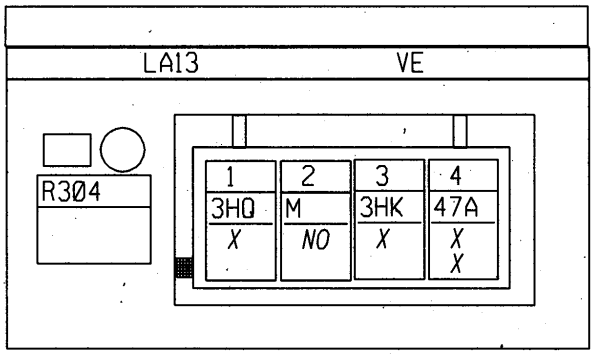


N°	mm²		... ⟶ ...
1	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
2	.6	M	EARTH
3	.35	3HK	- SOLENOID VALVE CONTROLS TURBOCHARGER BYPASS CONTROL
4	.35	47A	- FUEL LEVEL GAUGE >
4	.35	47A	- FUEL LEVEL GAUGE >

ADDITIONAL LPG TANK/PASSENGER COMPARTMENT

K25,B64EQGPL


S4

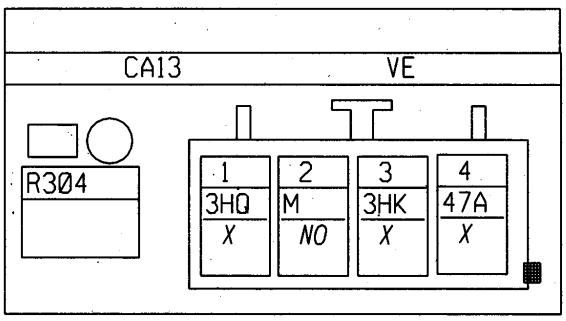

N°	mm²		... ⟶ ...
1	.6	3HQ	+ LPG PRESSURE RELIEF VALVE SOLENOID > COMPUTER CONTROL
2	.6	M	EARTH
3	.35	3HK	- SOLENOID VALVE CONTROLS TURBOCHARGER BYPASS CONTROL
4	.35	47A	- FUEL LEVEL GAUGE >

ABS/ABS


D64,E64 ABS J64,F64 ABS

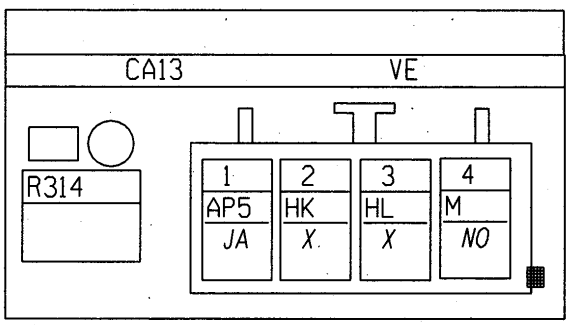


N°	mm²		... → ...
	.35	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
	.35	HK	DIAGNOSTIC SIGNAL K
	.35	HL	DIAGNOSTIC SIGNAL L
	.35	M	EARTH

ABS/ABS


D64,E64 ABS J64,F64 ABS

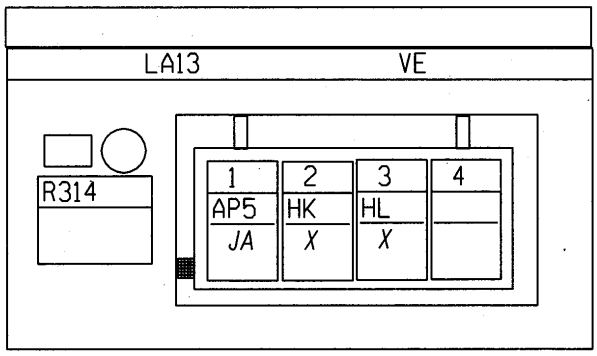



N°	mm²		... → ...
	.35	AP5	+ ABS PROTECTED FUSE AFTER IGNITION
	.35	HK	DIAGNOSTIC SIGNAL K
	.35	HL	DIAGNOSTIC SIGNAL L

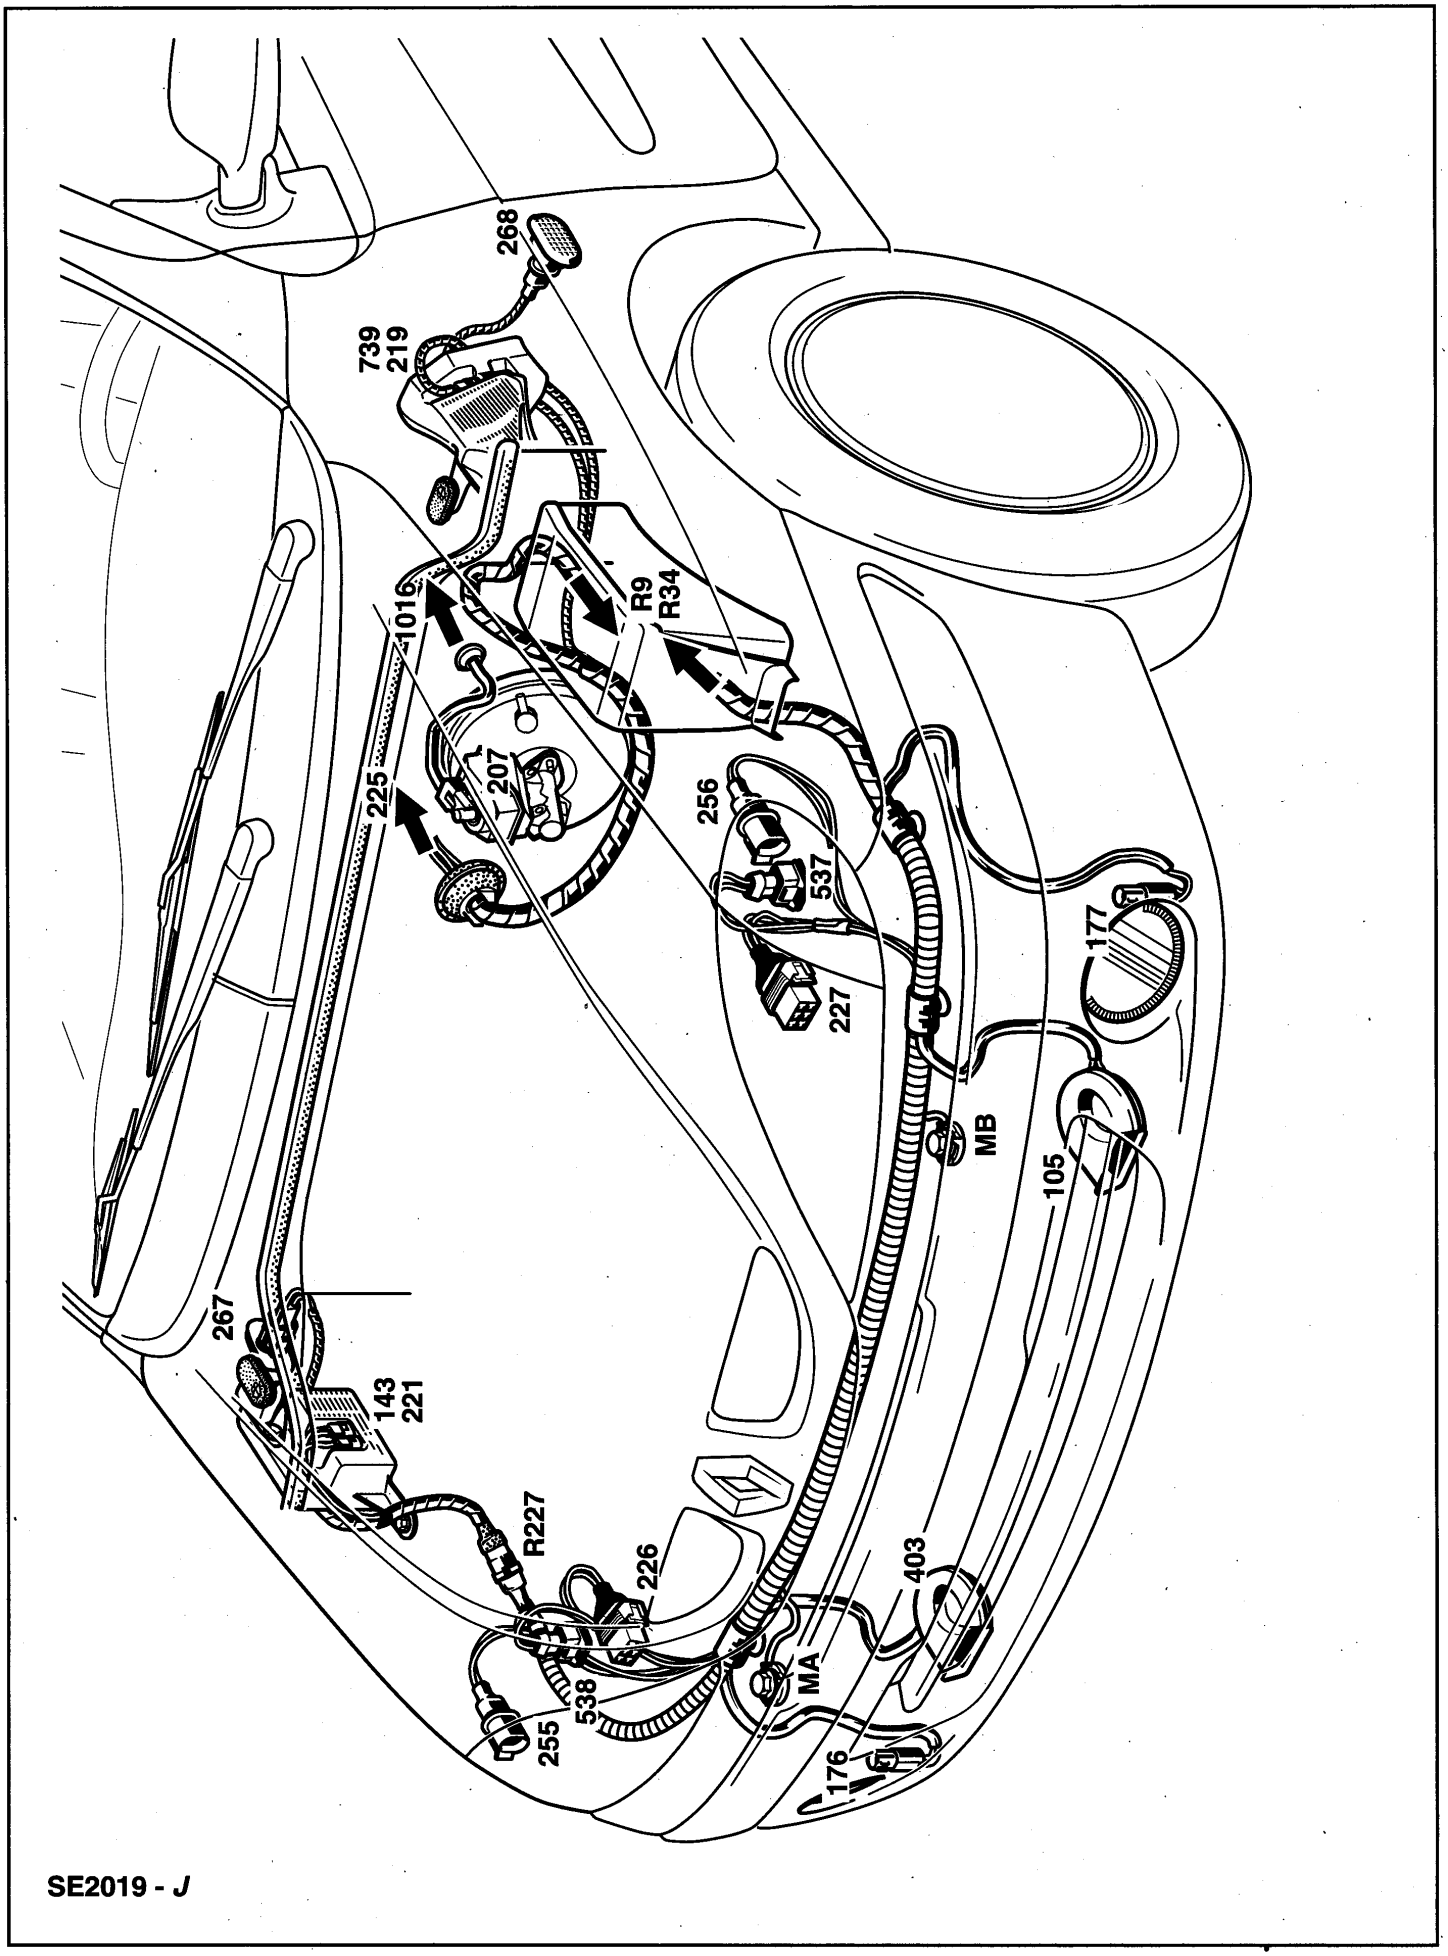

268
739
219
1016
R9
R34
225
207
256
537
227
177
MB
105
267
143
221
R227
226
403
MA
538
255
176

SE2019 - *J*

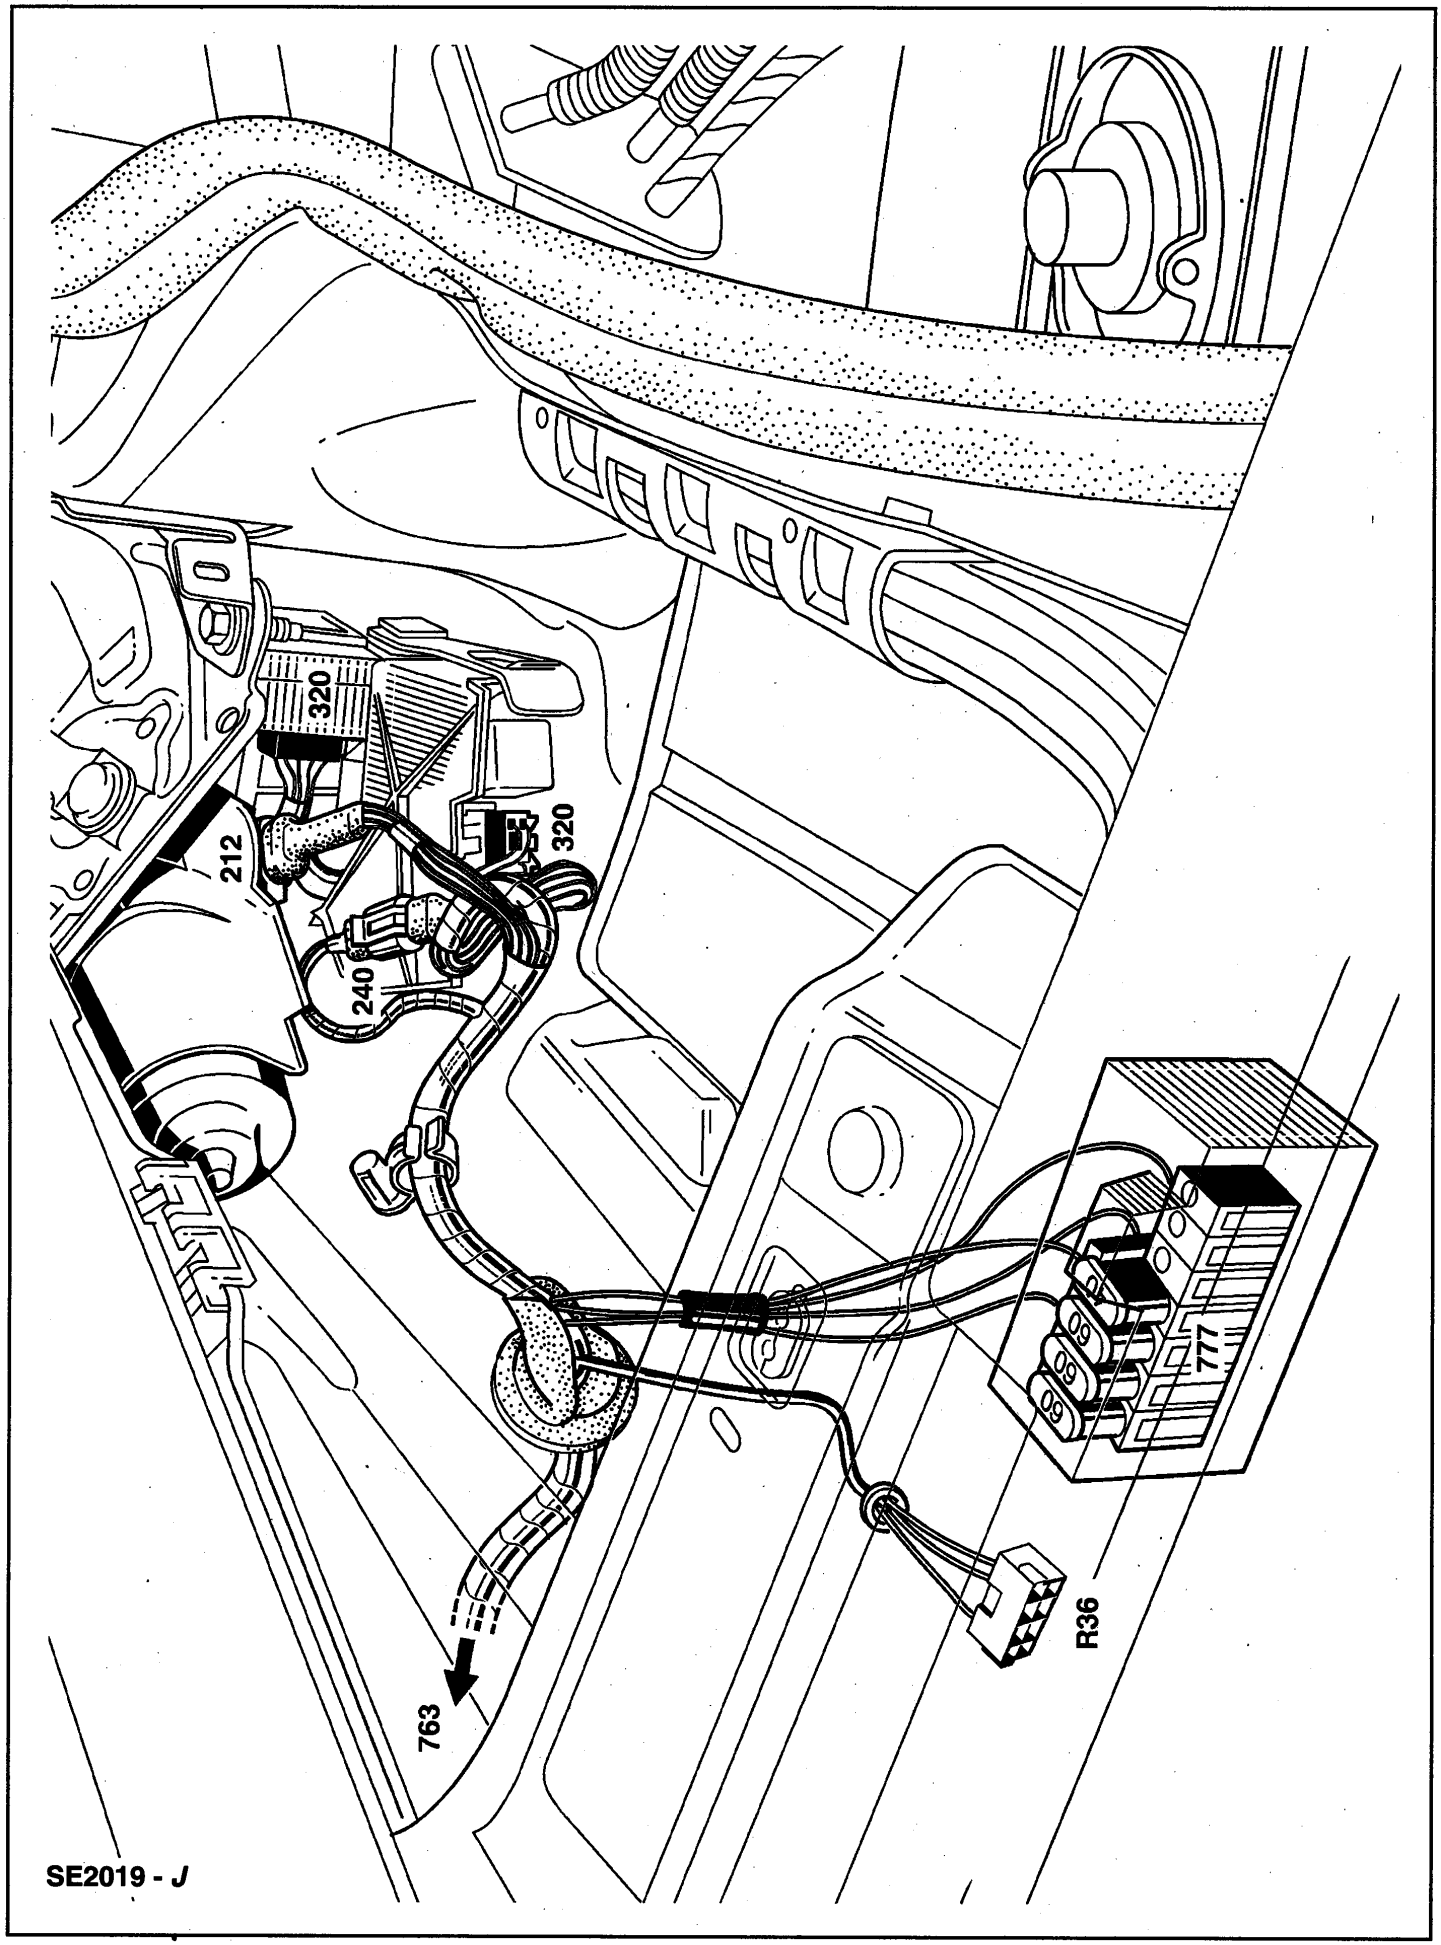

320
320
212
240
777
09
09
09
09
R36
763
SE2019 - J

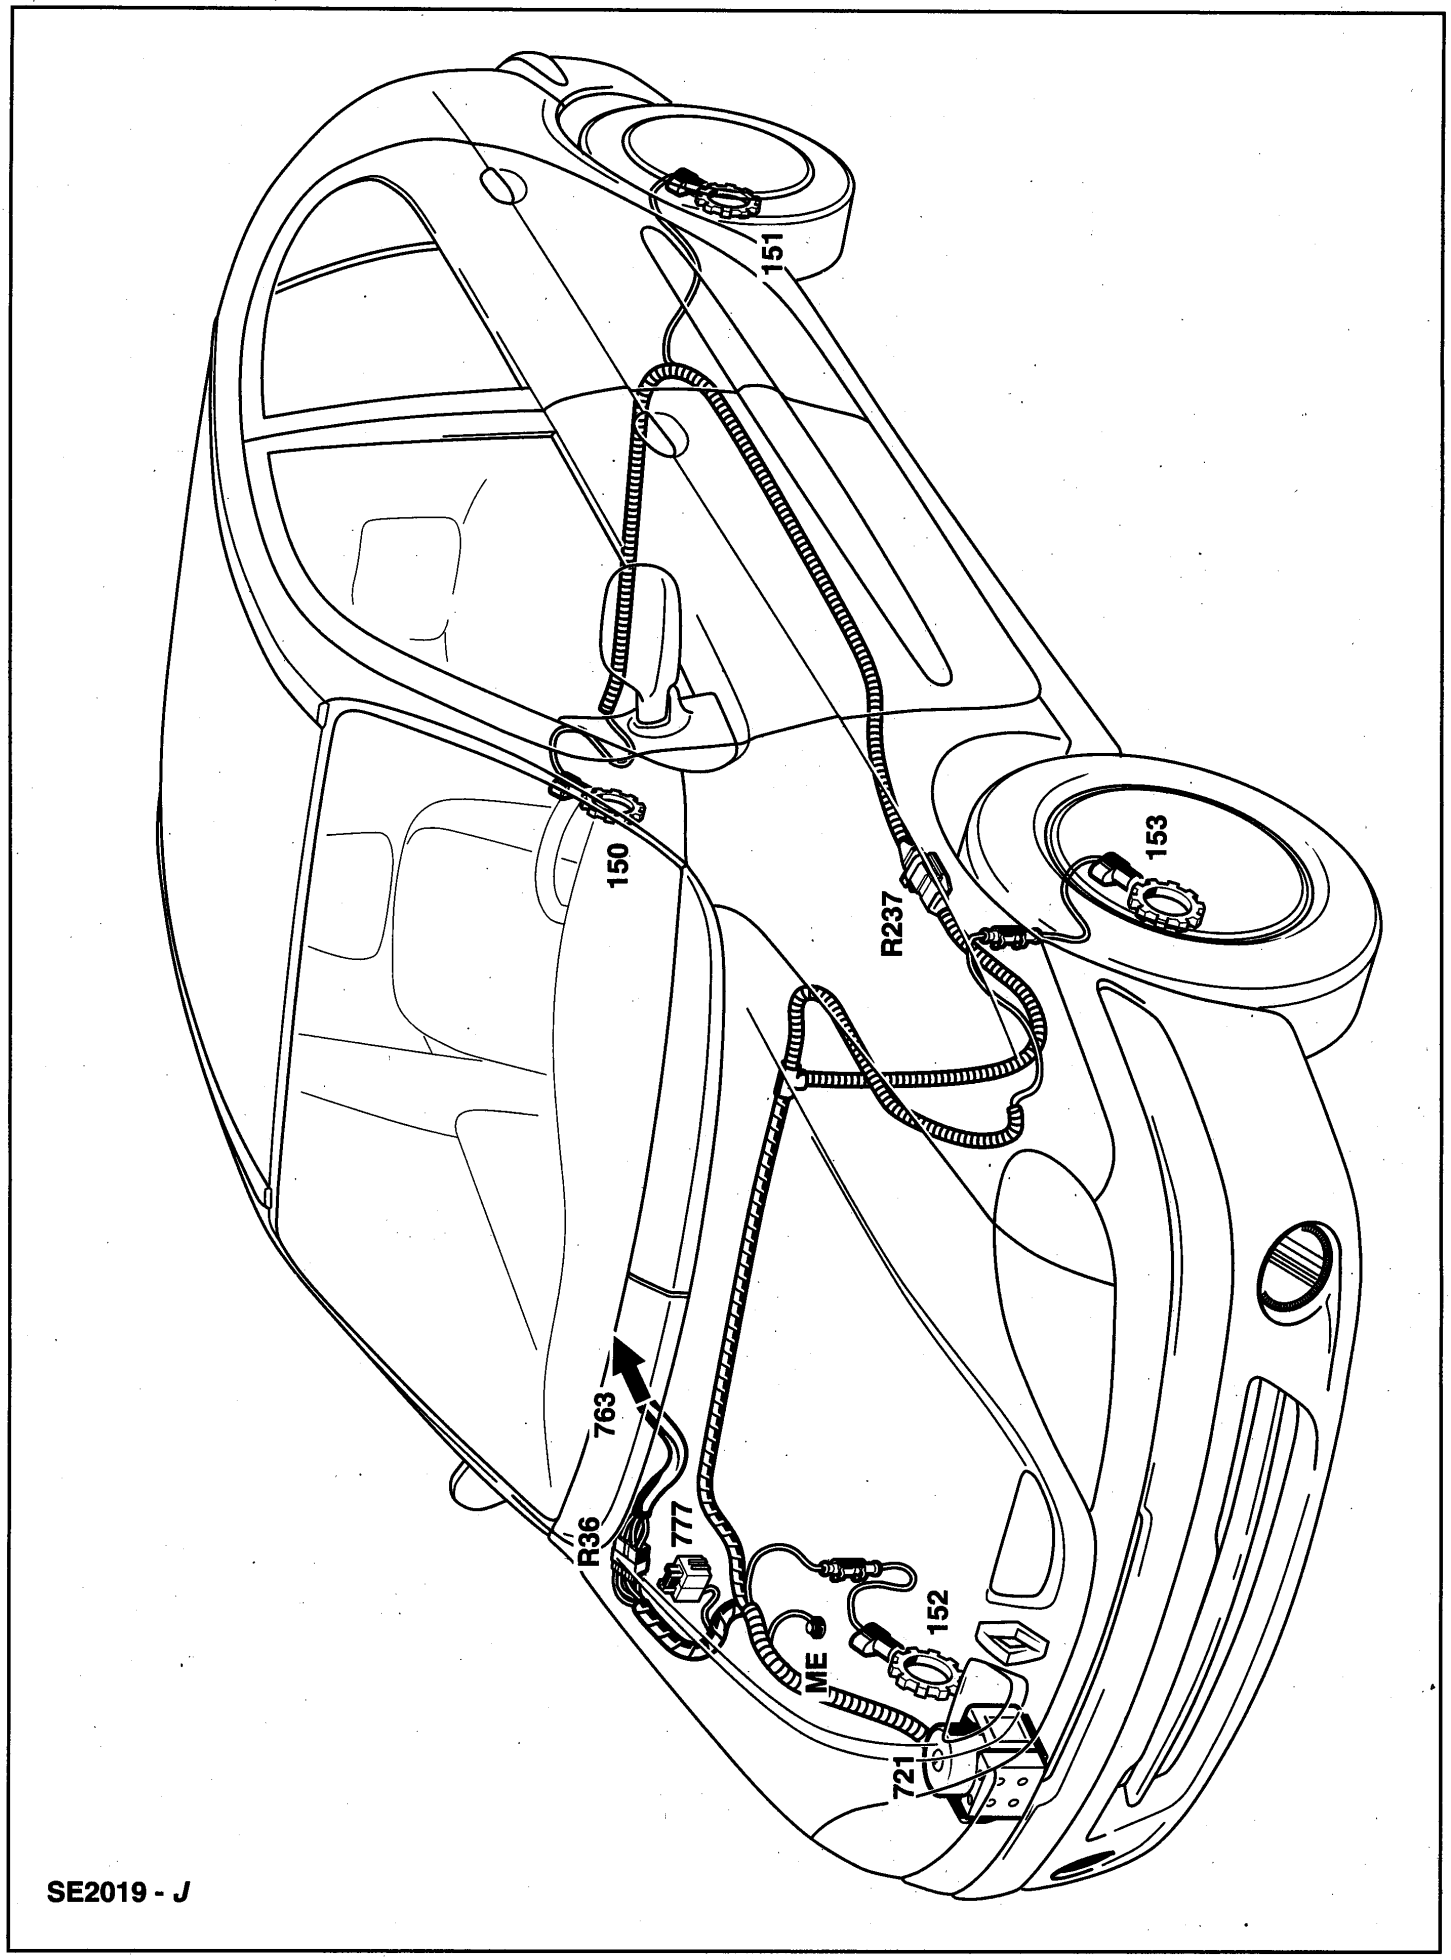

151
150
153
R237
763
R36
777
ME
152
721
SE2019 - J

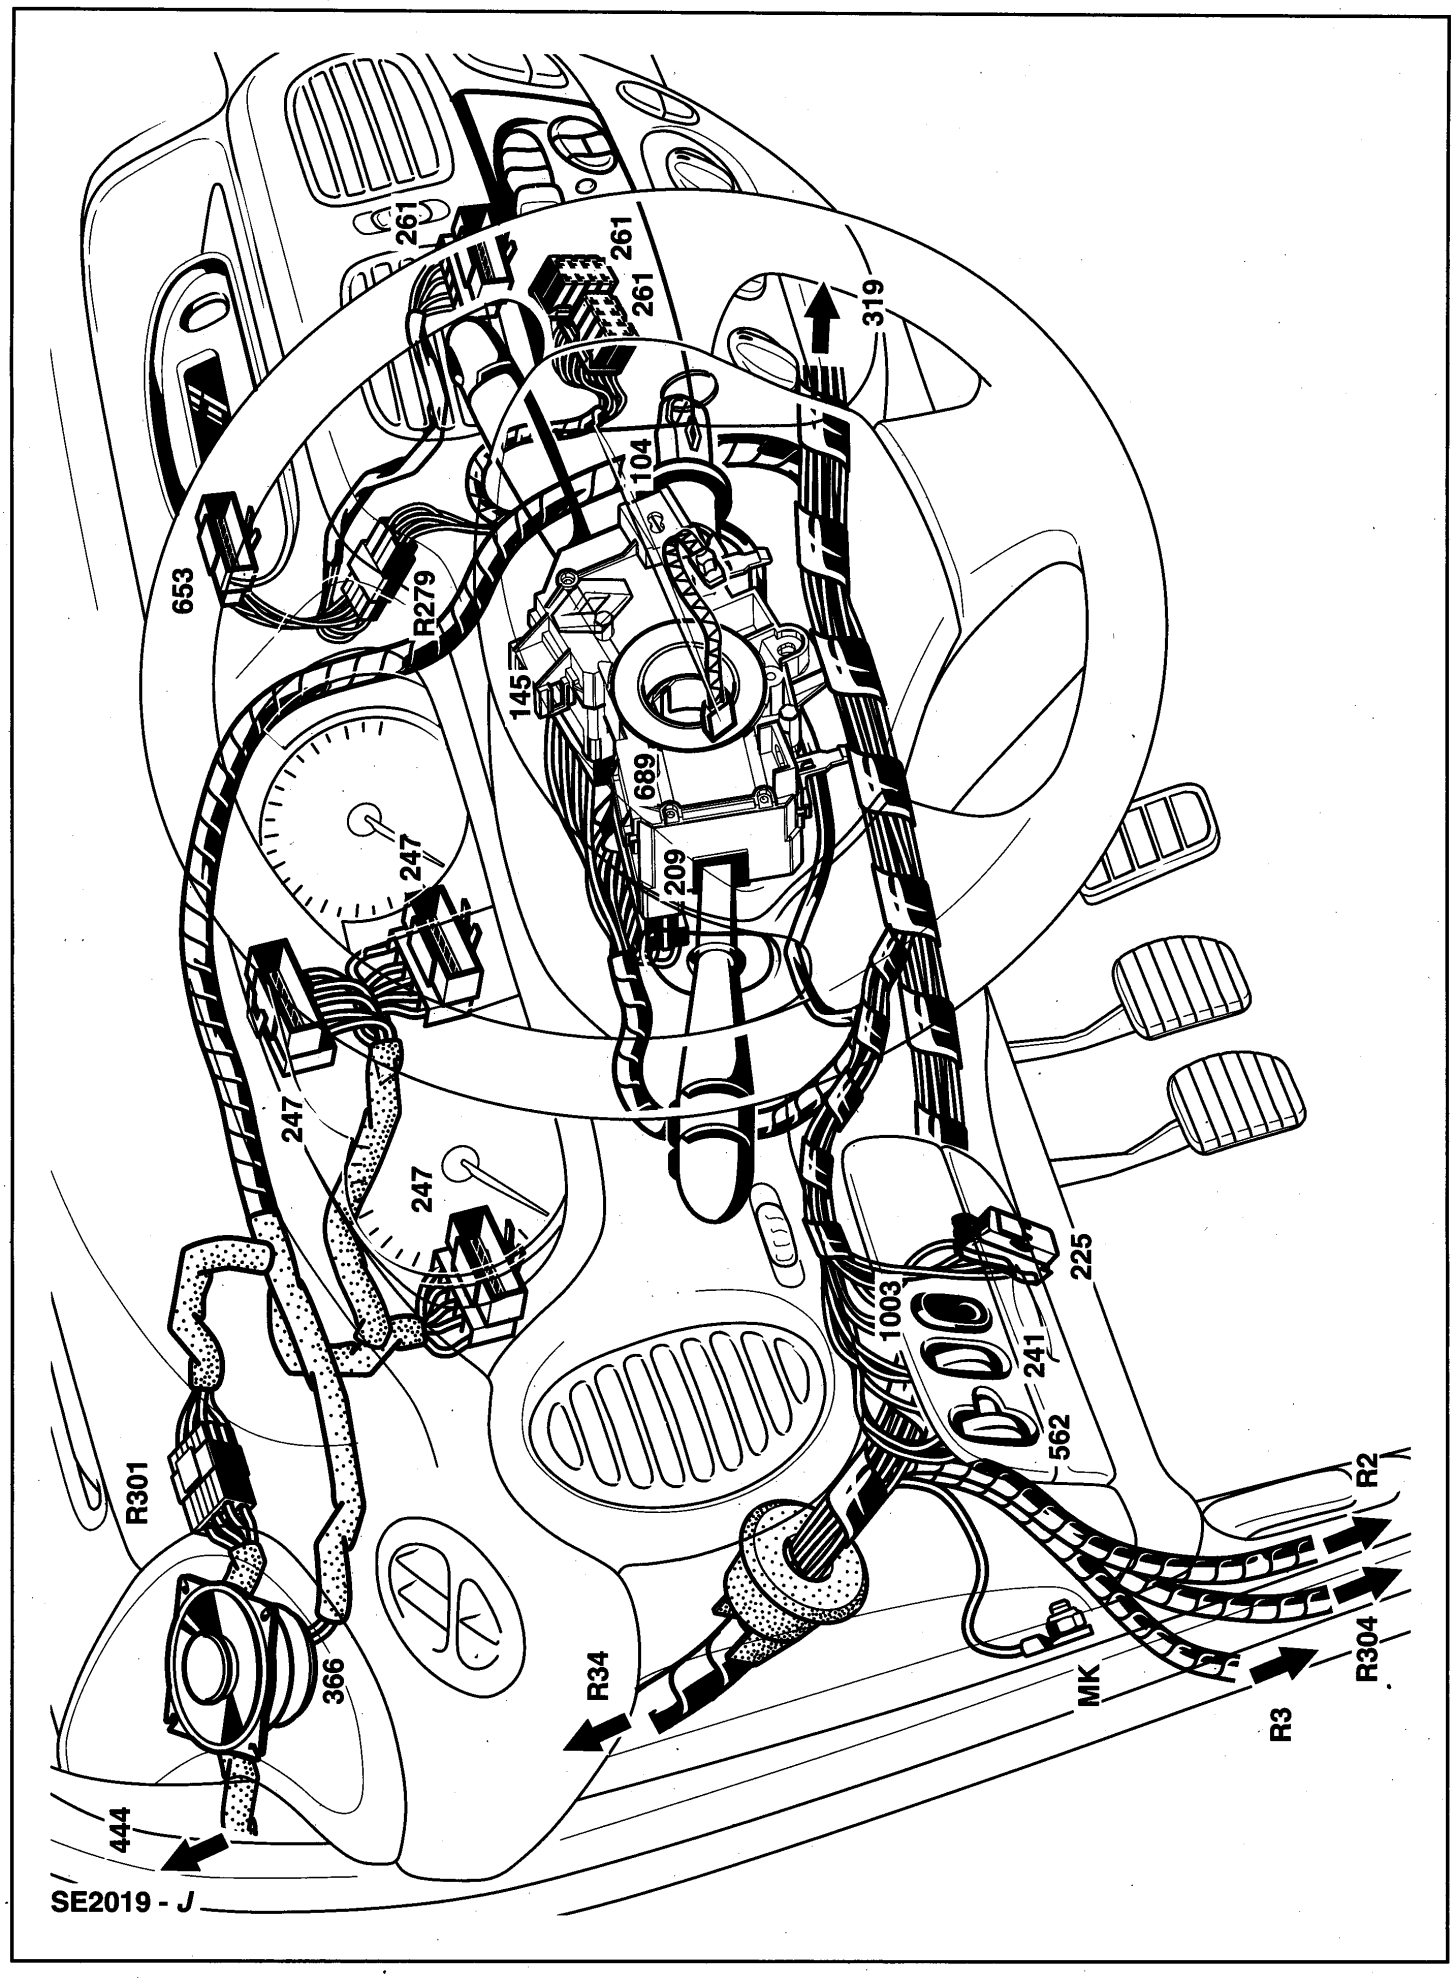

261
261
261
319
104
653
R279
145
689
209
247
247
247
225
1003
241
562
R301
366
R34
444
MK
R3
R304
R2
SE2019 - J

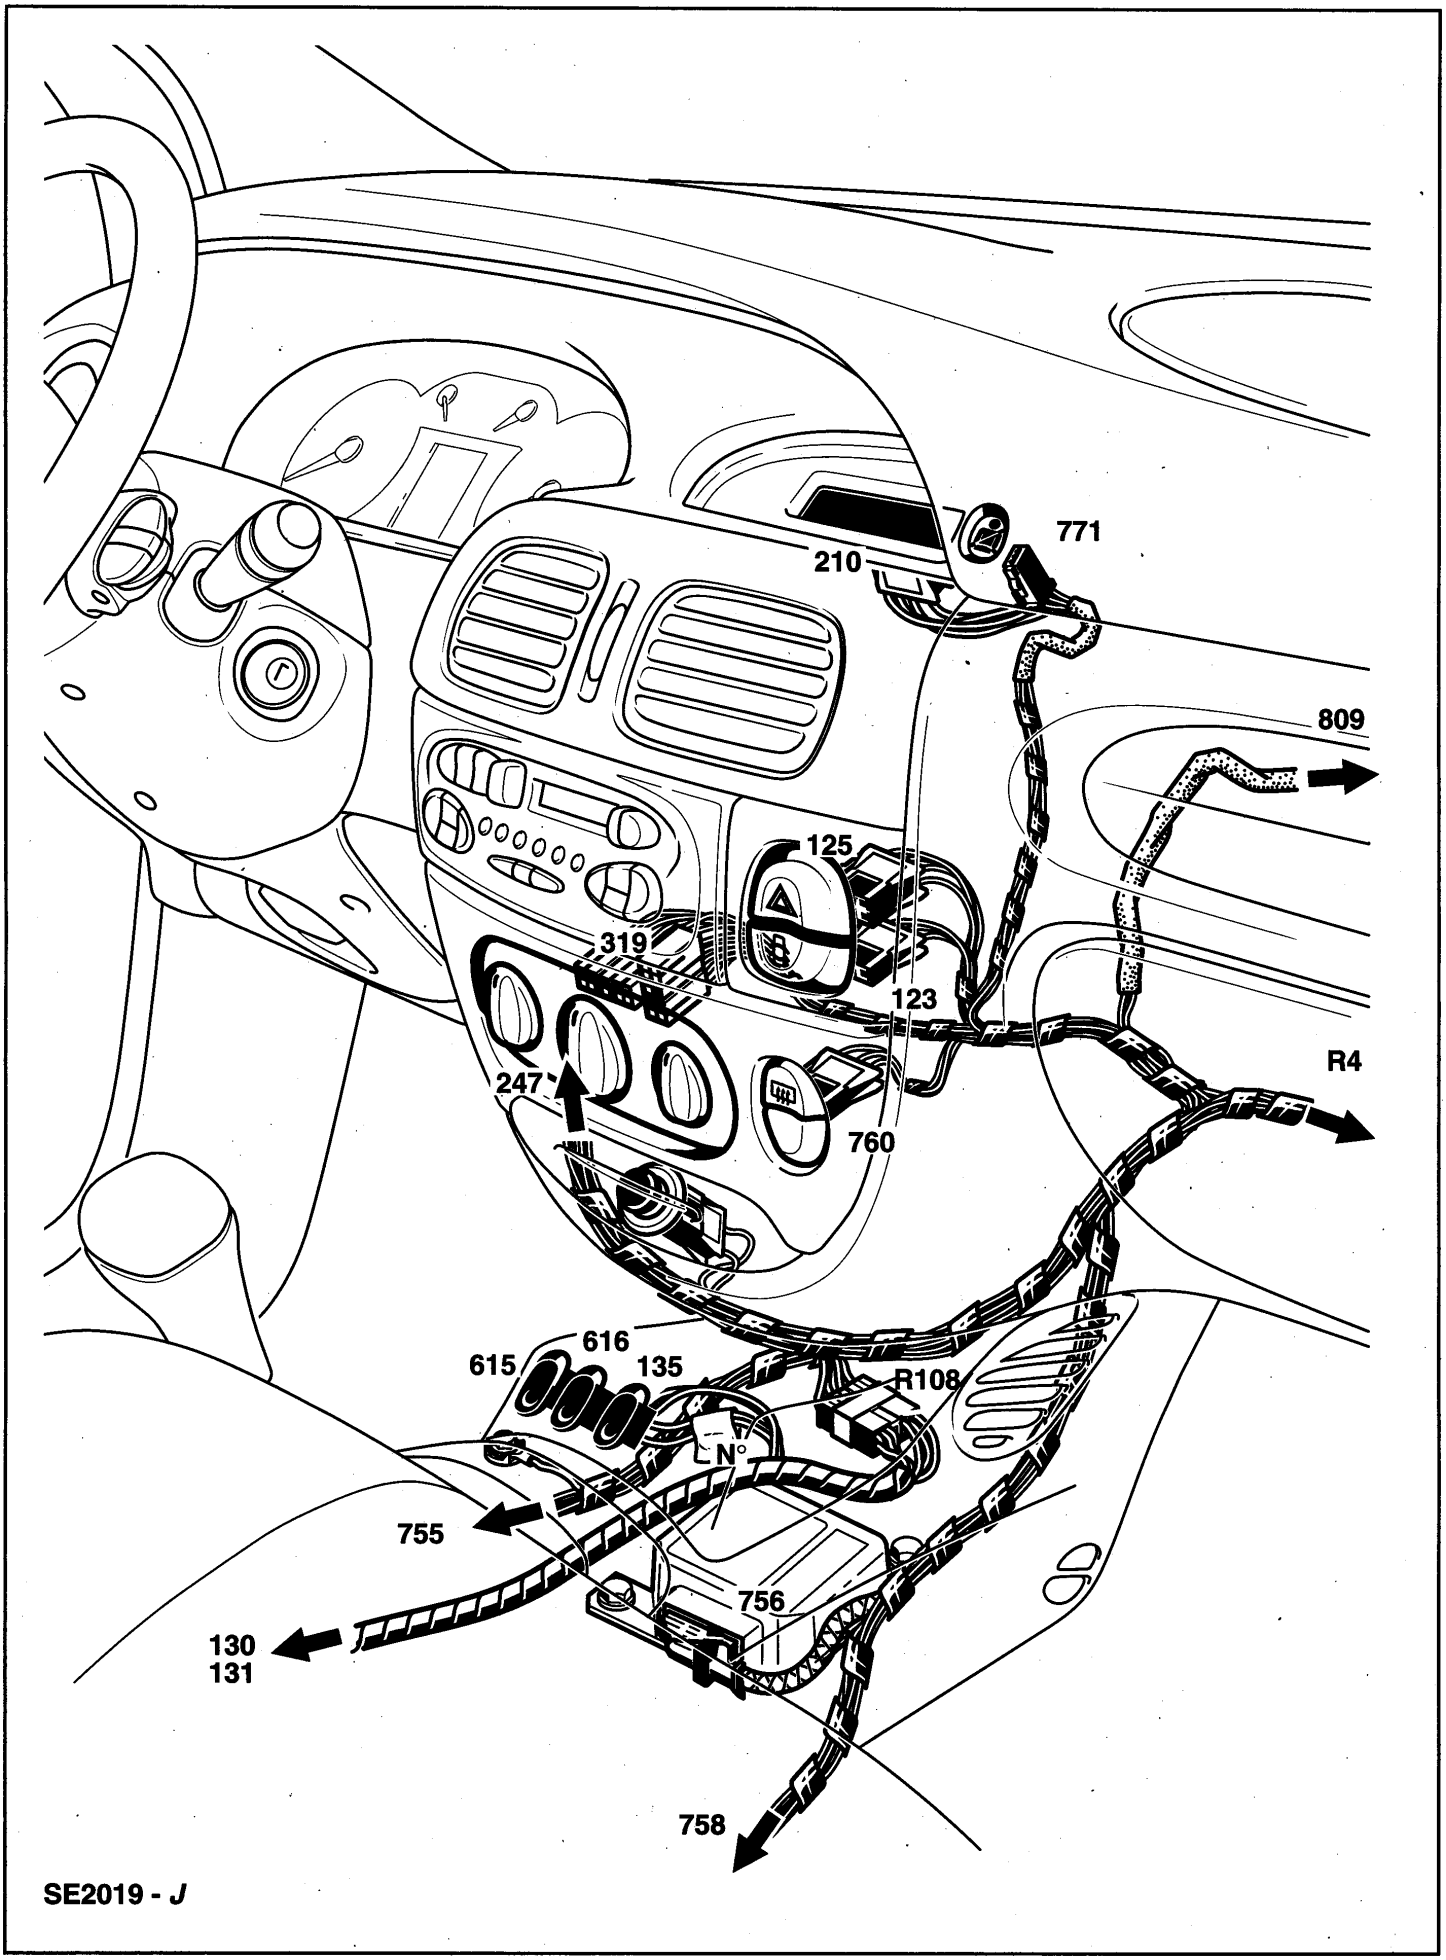
771
210
809
125
319
123
247
R4
760
616
615
135
R108
N°
755
756
130
131
758


SE2019 - *J*

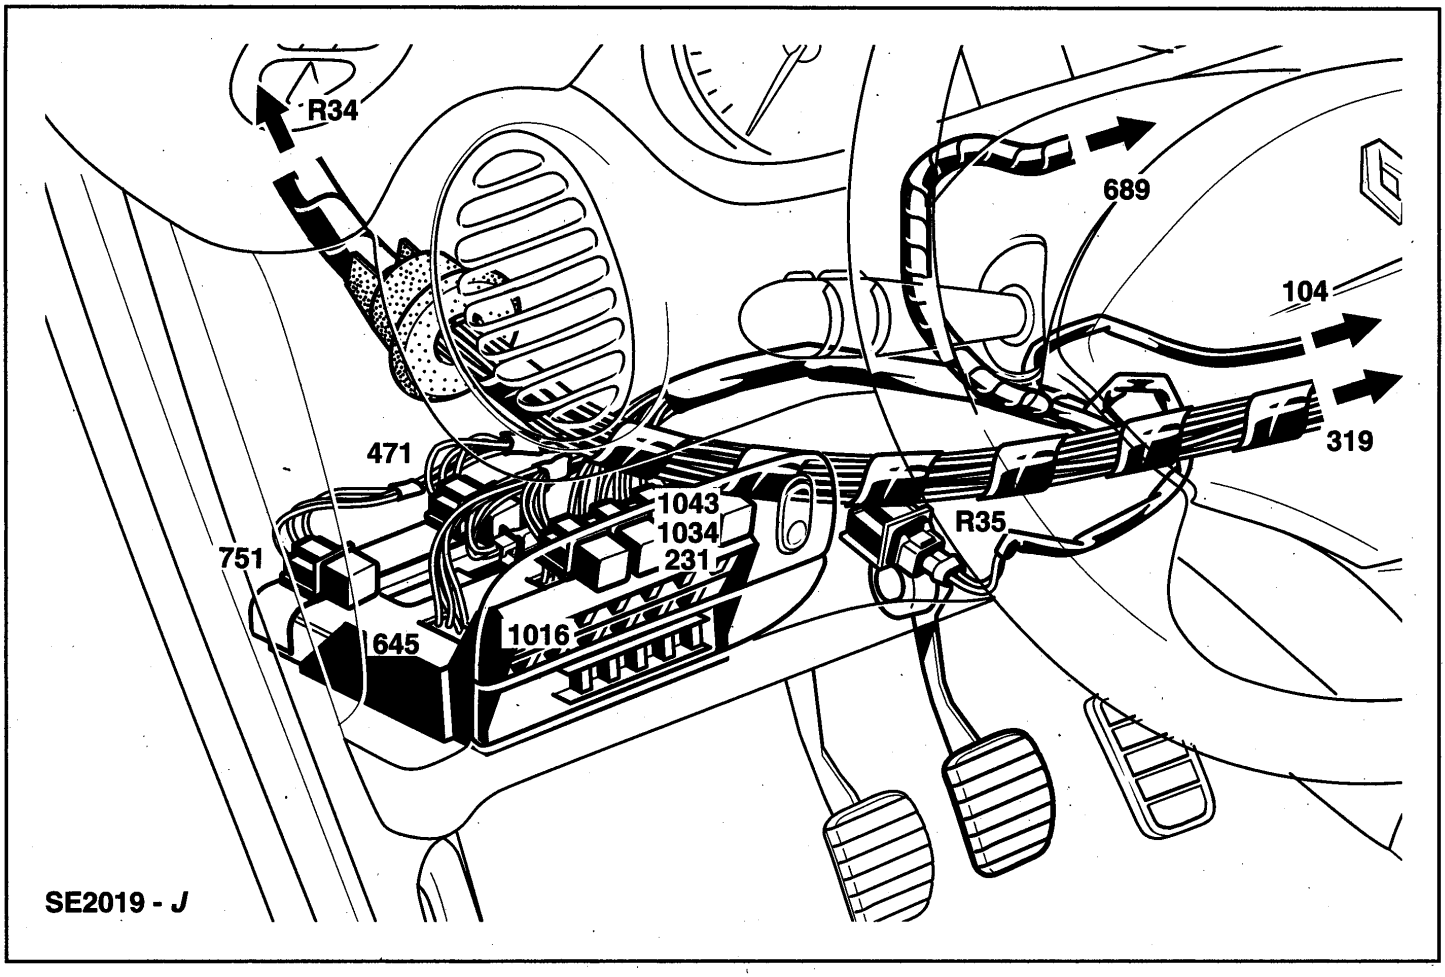

R34
689
104
319
471
1043
1034
231
R35
751
645
1016
SE2019 - J

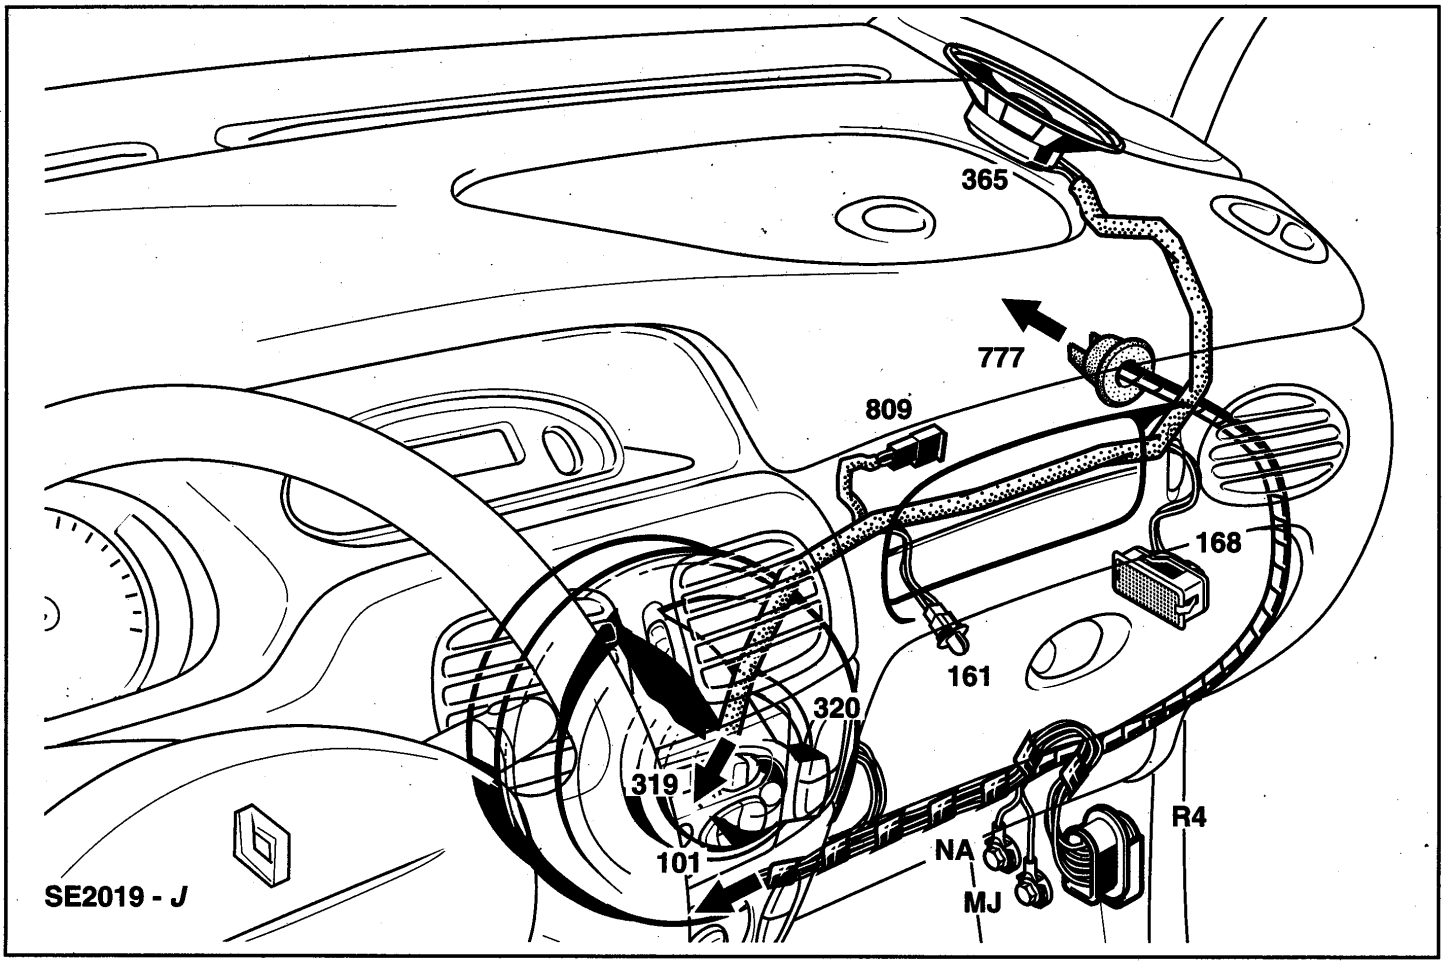
365
777
809
168
161
320
319
101
R4
NA
MJ
SE2019 - J

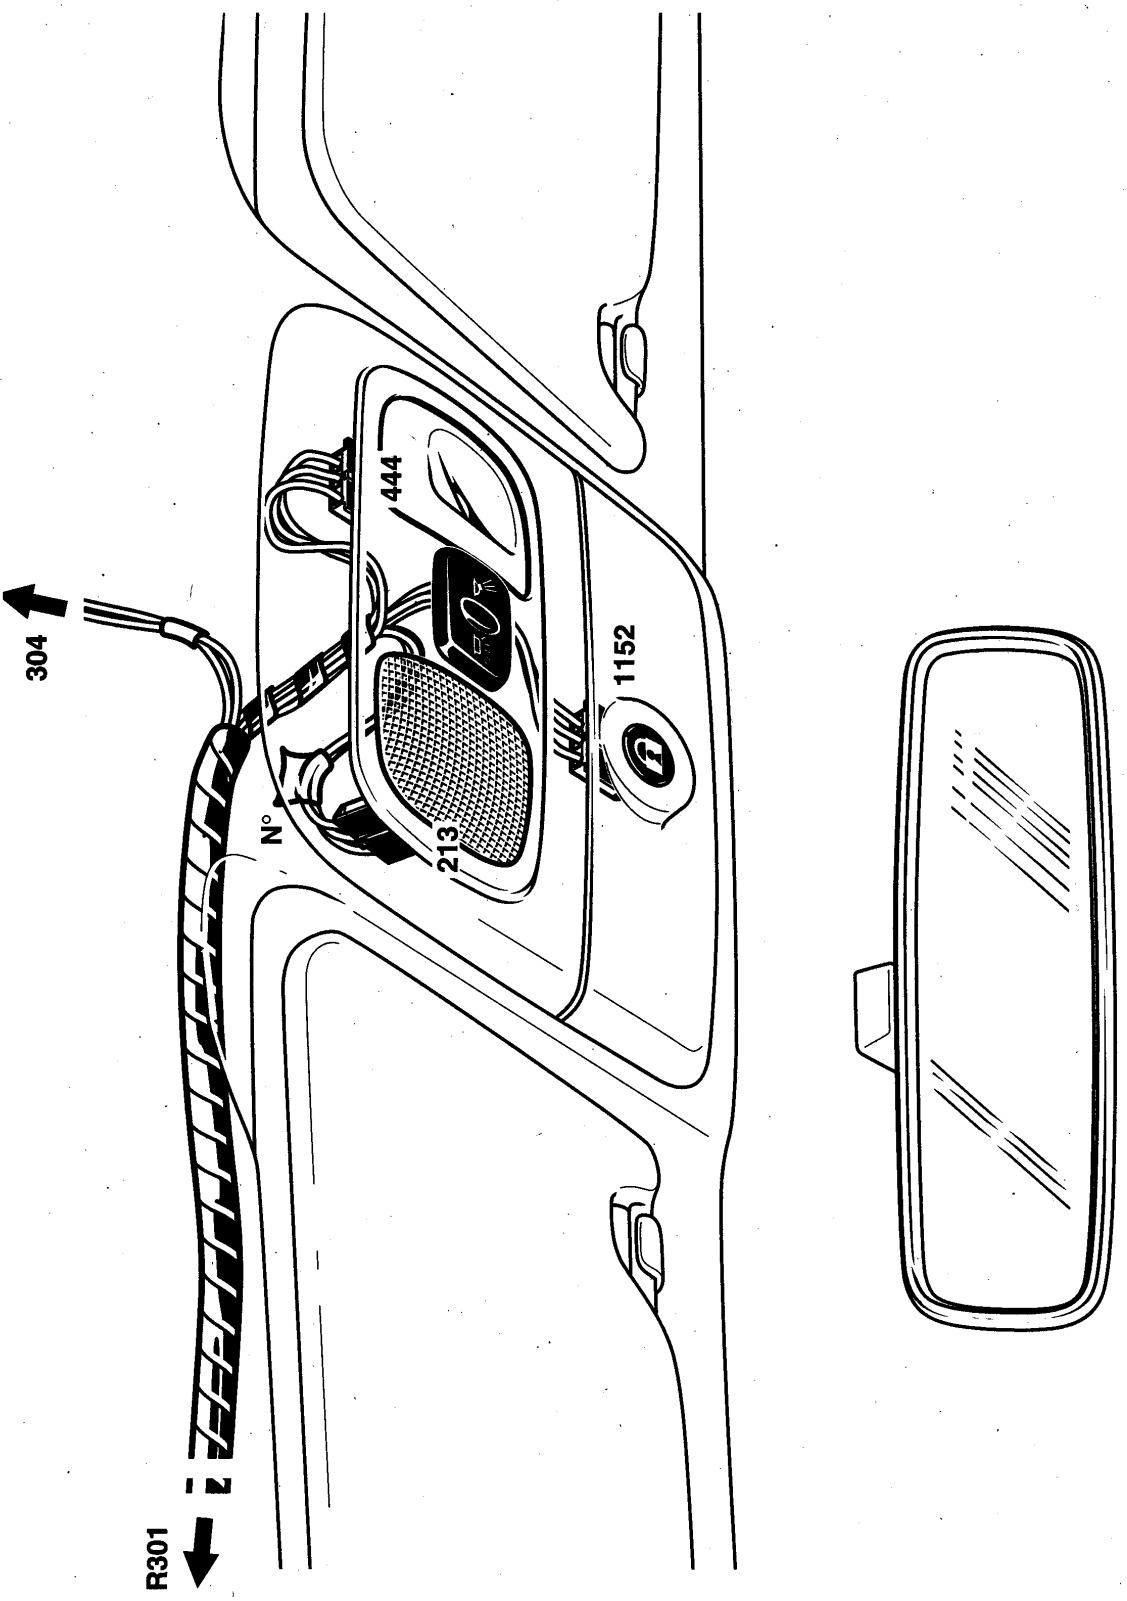


SE2062 - *J*

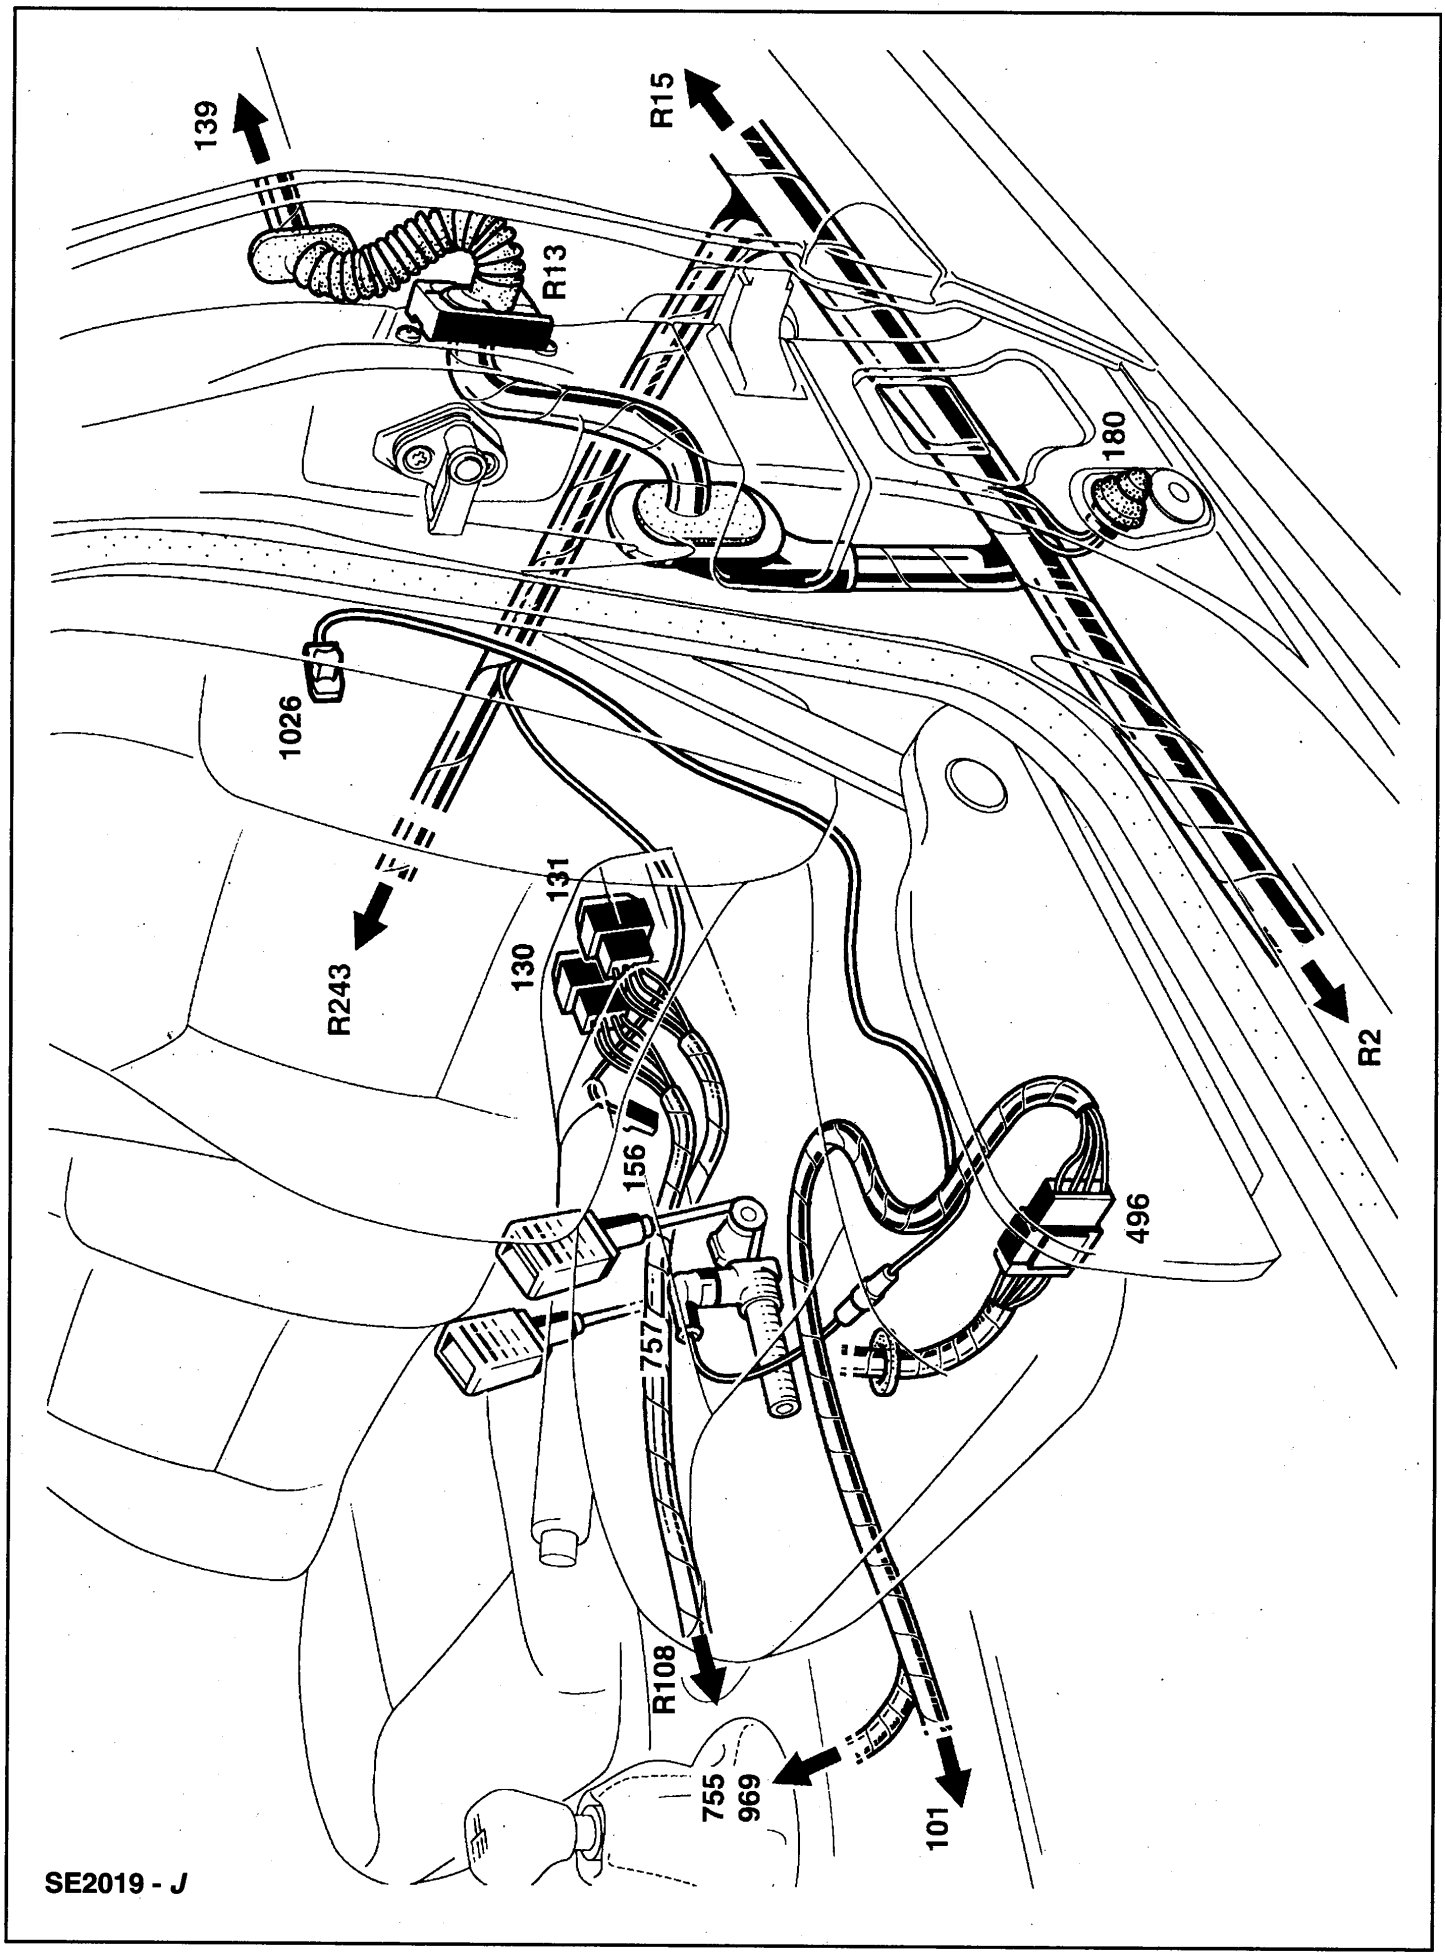

139
R15
R13
180
1026
131
130
R243
R2
156
496
757
R108
755
969
101
SE2019 - J

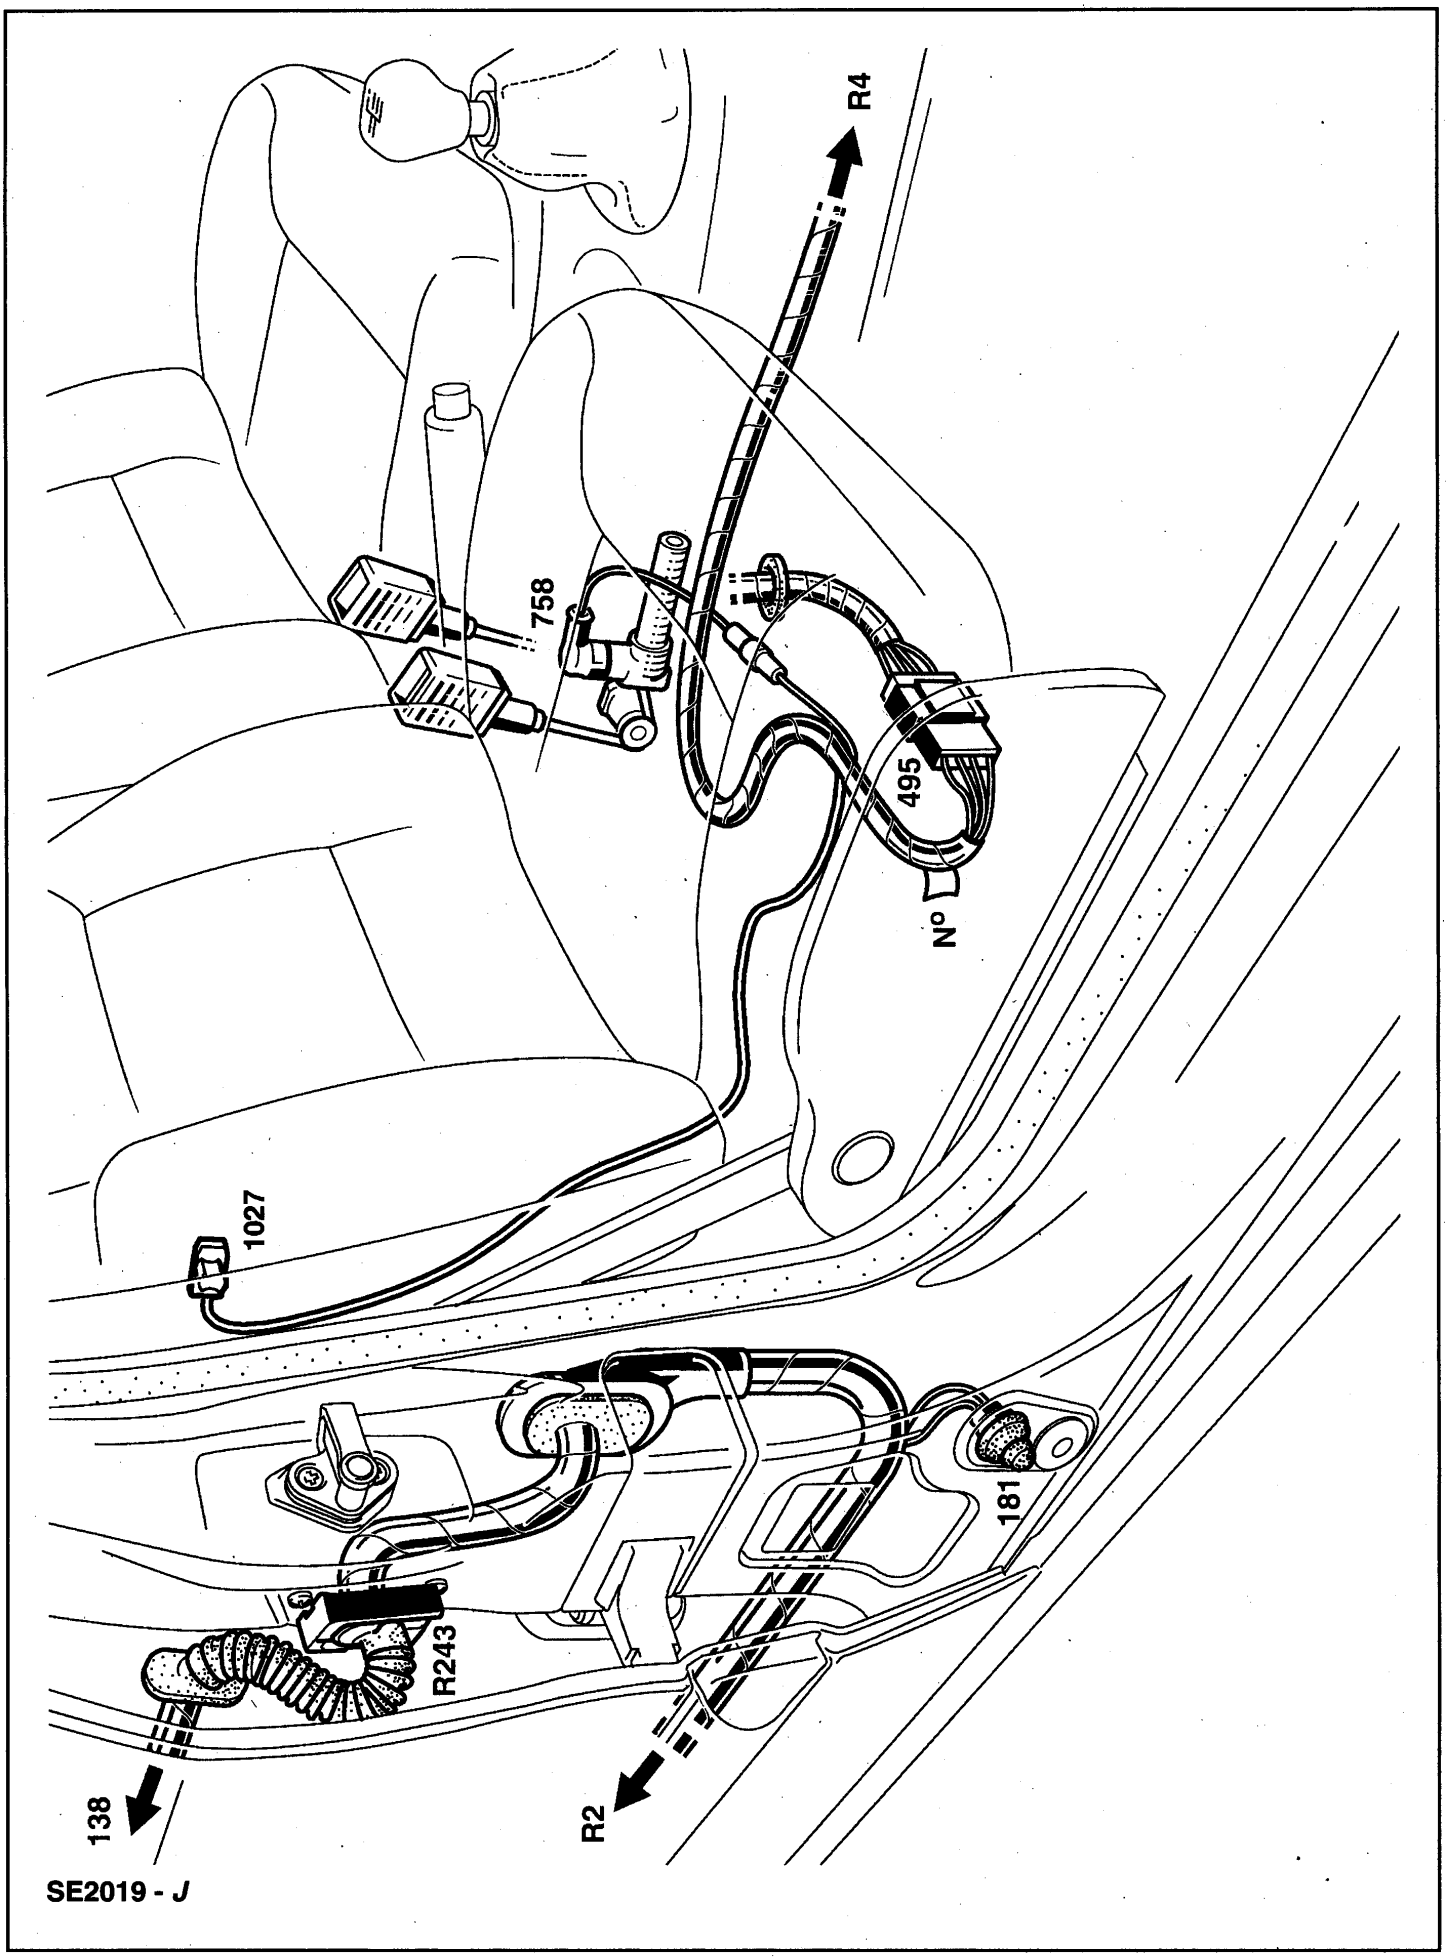



SE2019 - J

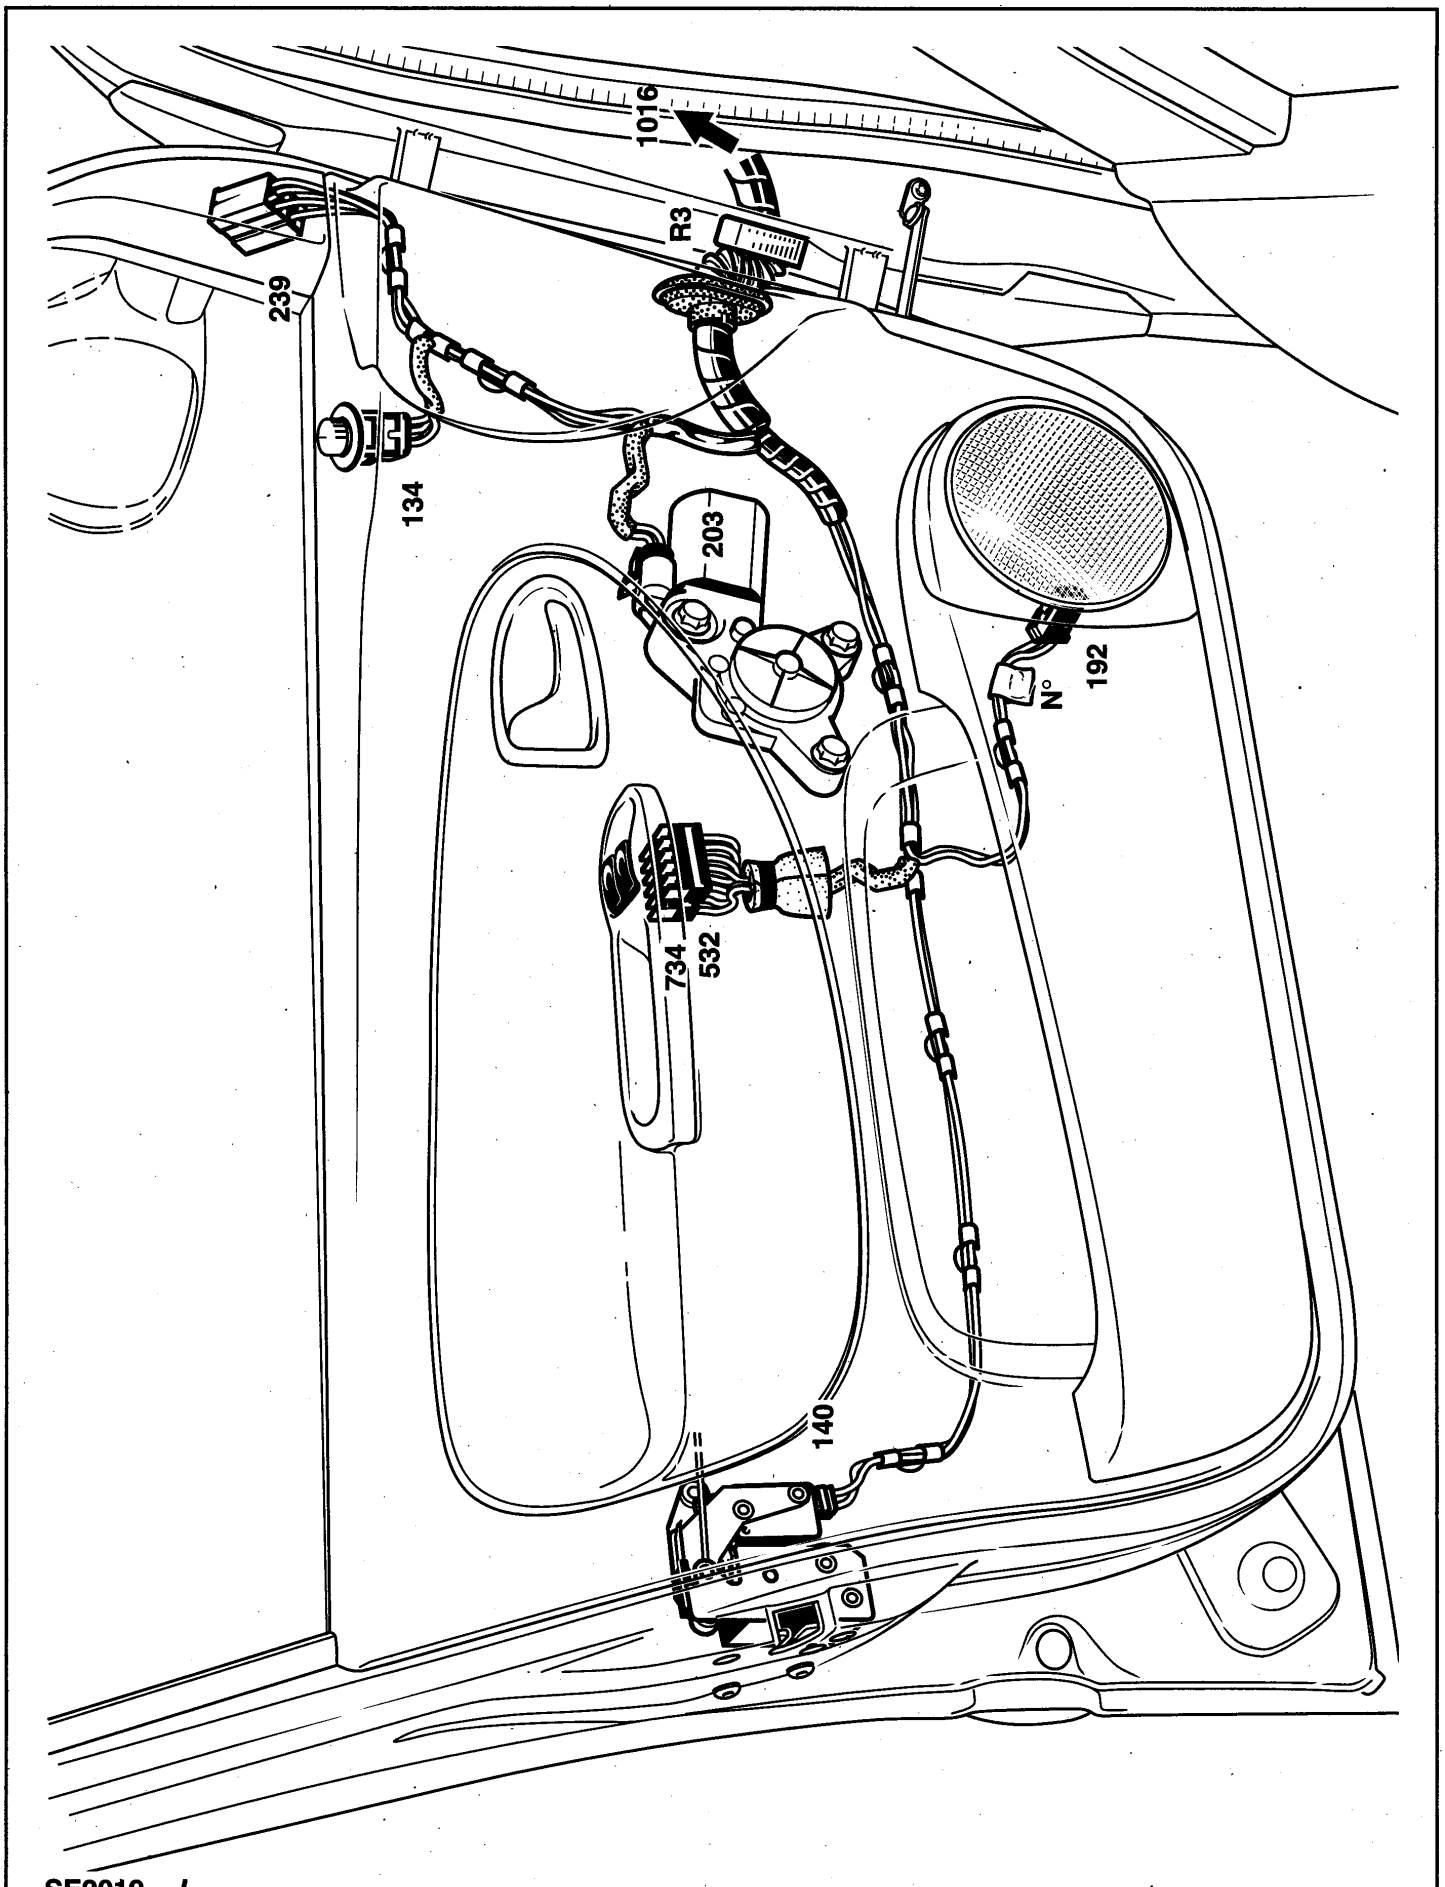



SE2019 - *J*

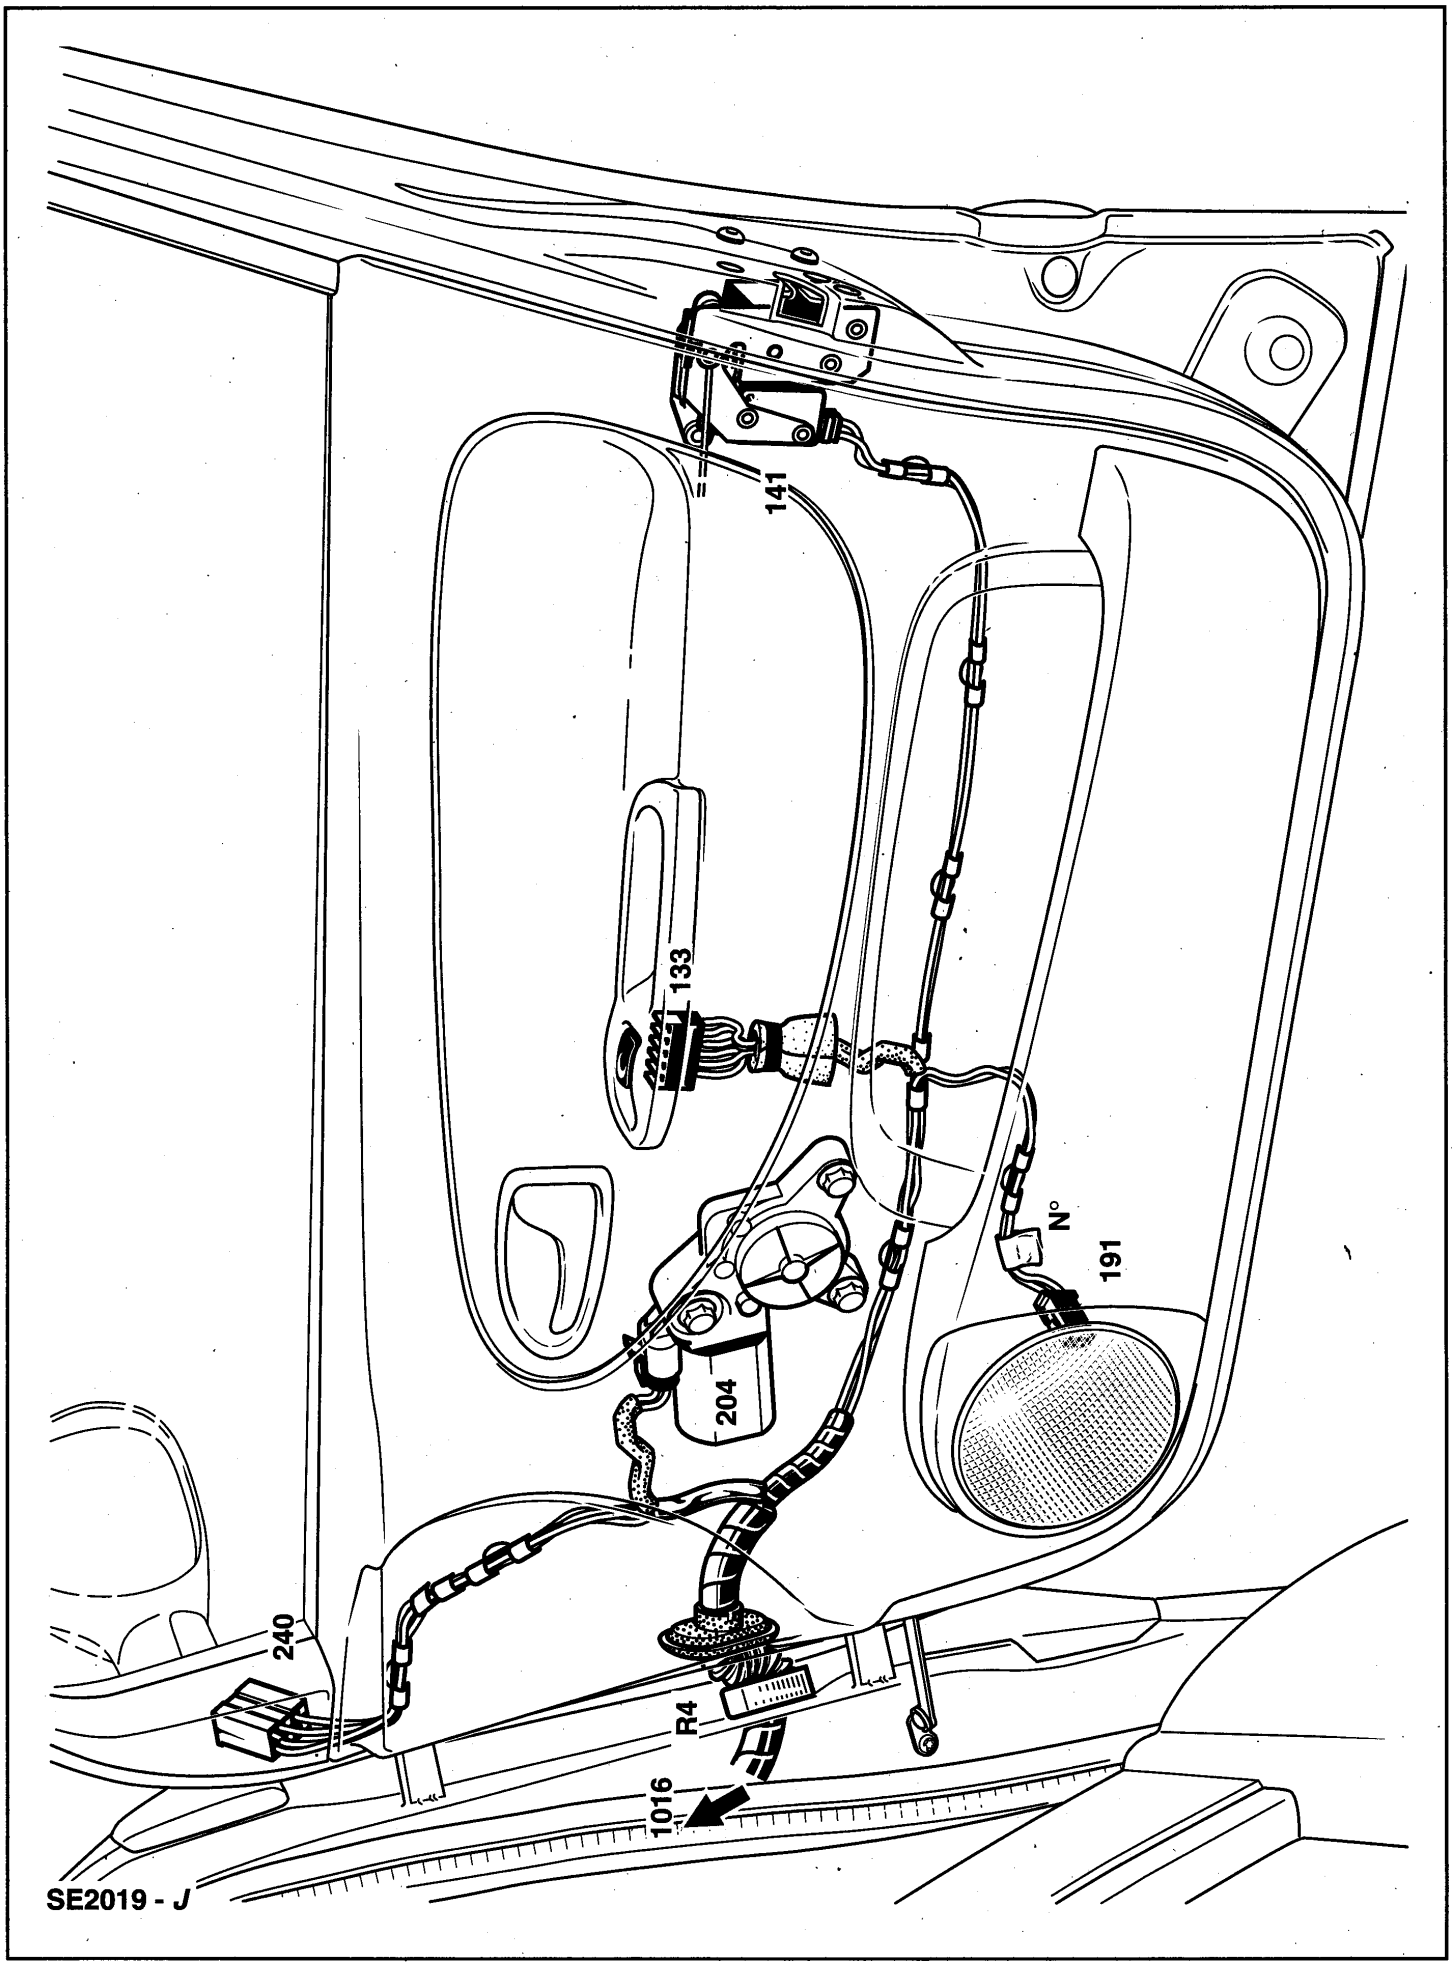

141
133
N°
191
204
240
R4
1016
SE2019 - J

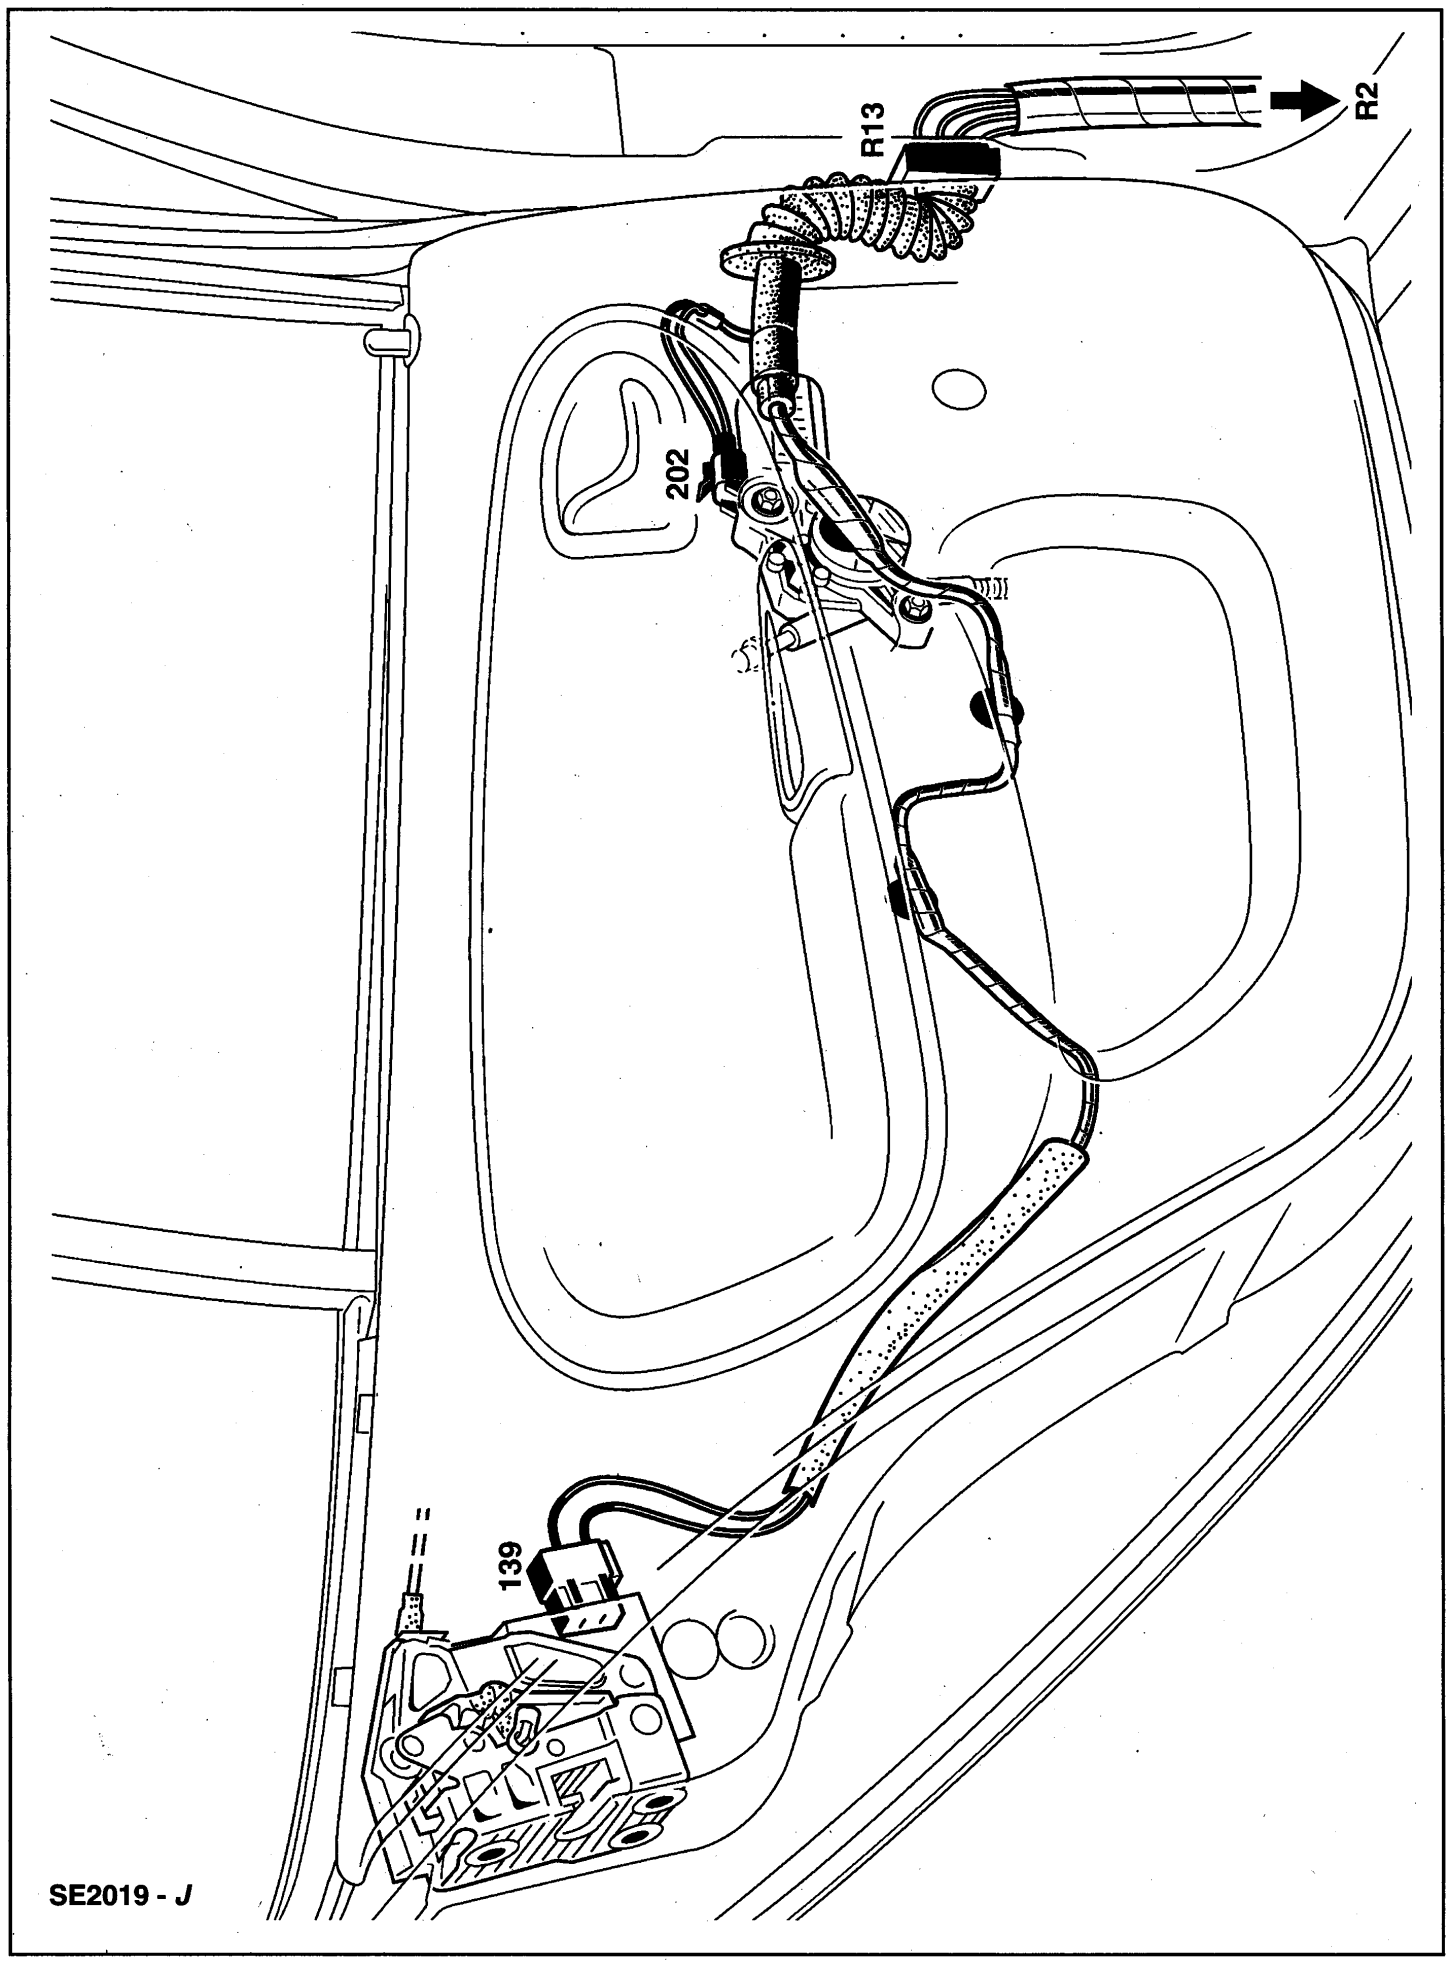

R13
R2
202
139
SE2019 - J

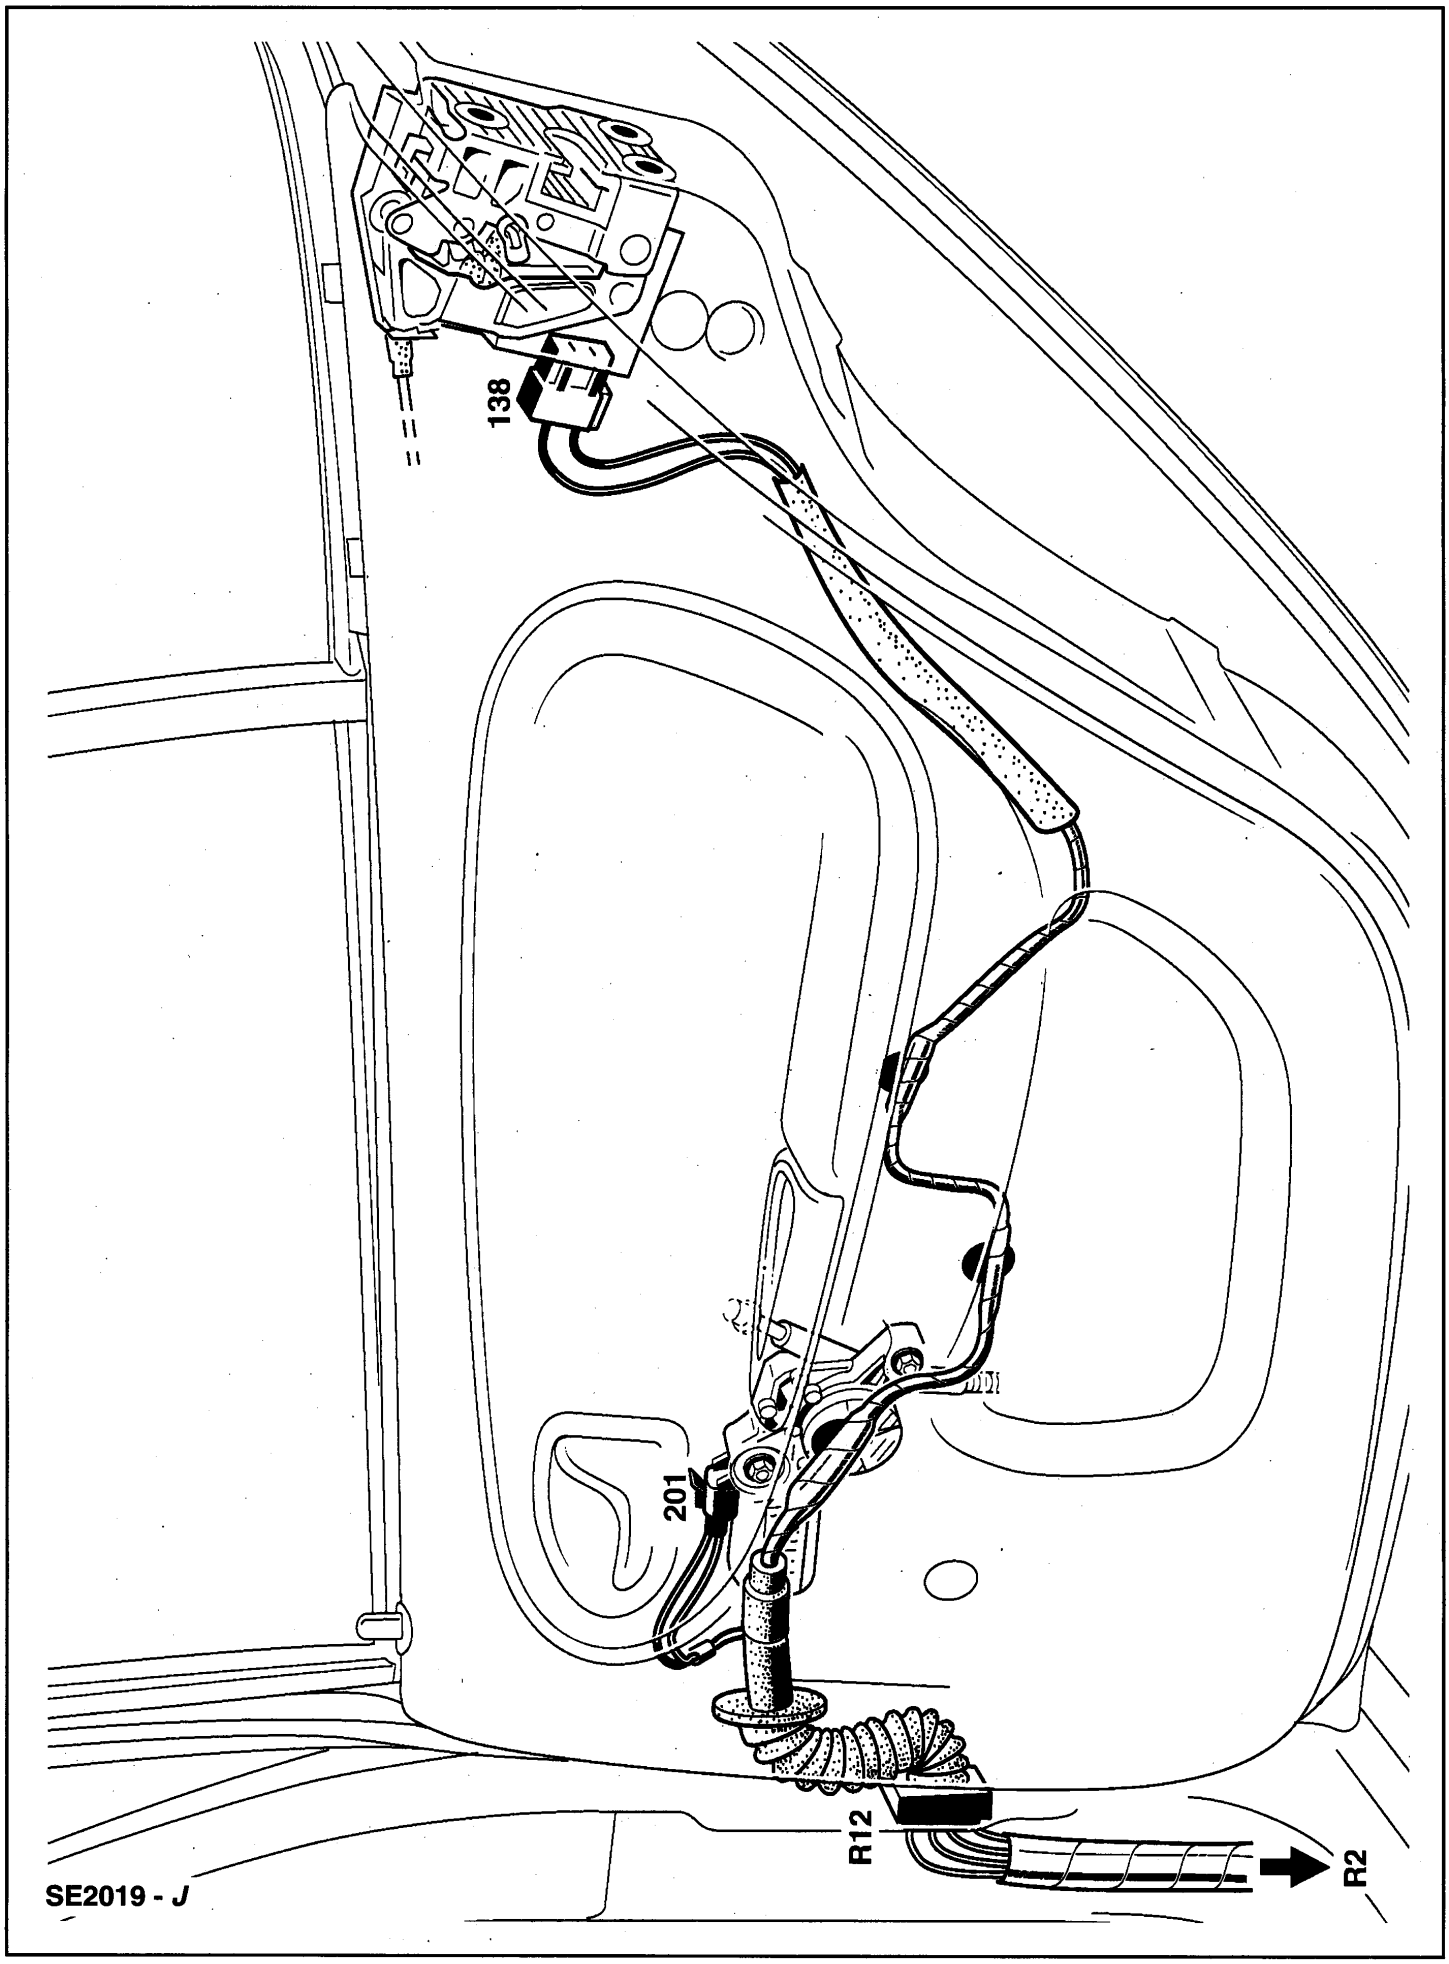

138
201
R12
R2
SE2019 - J

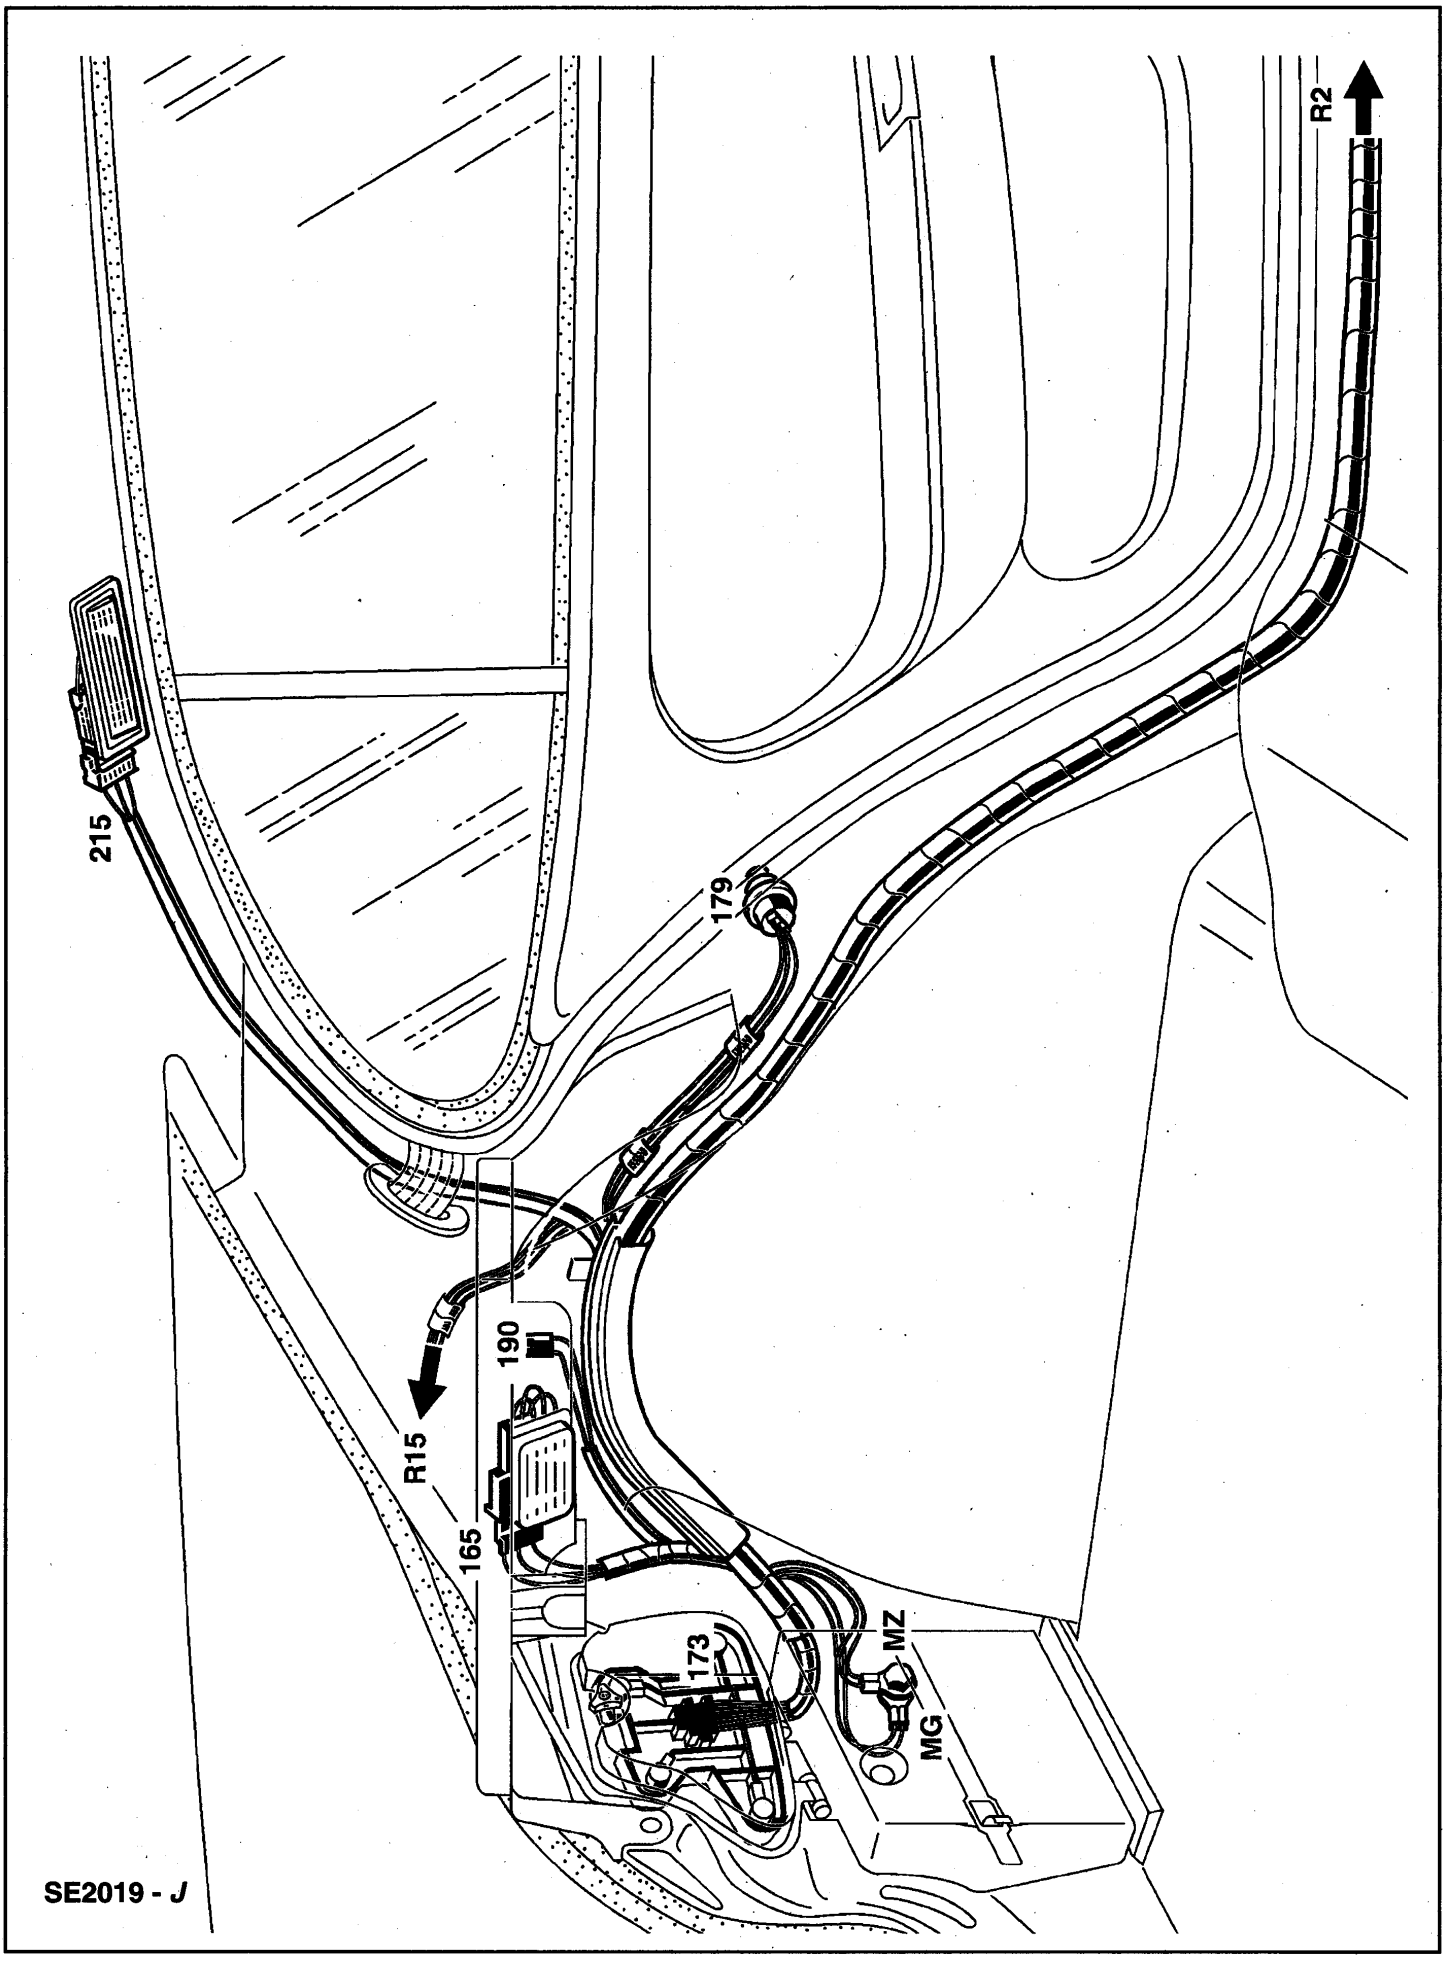

R2
215
179
190
R15
165
173
MZ
MG
SE2019 - J

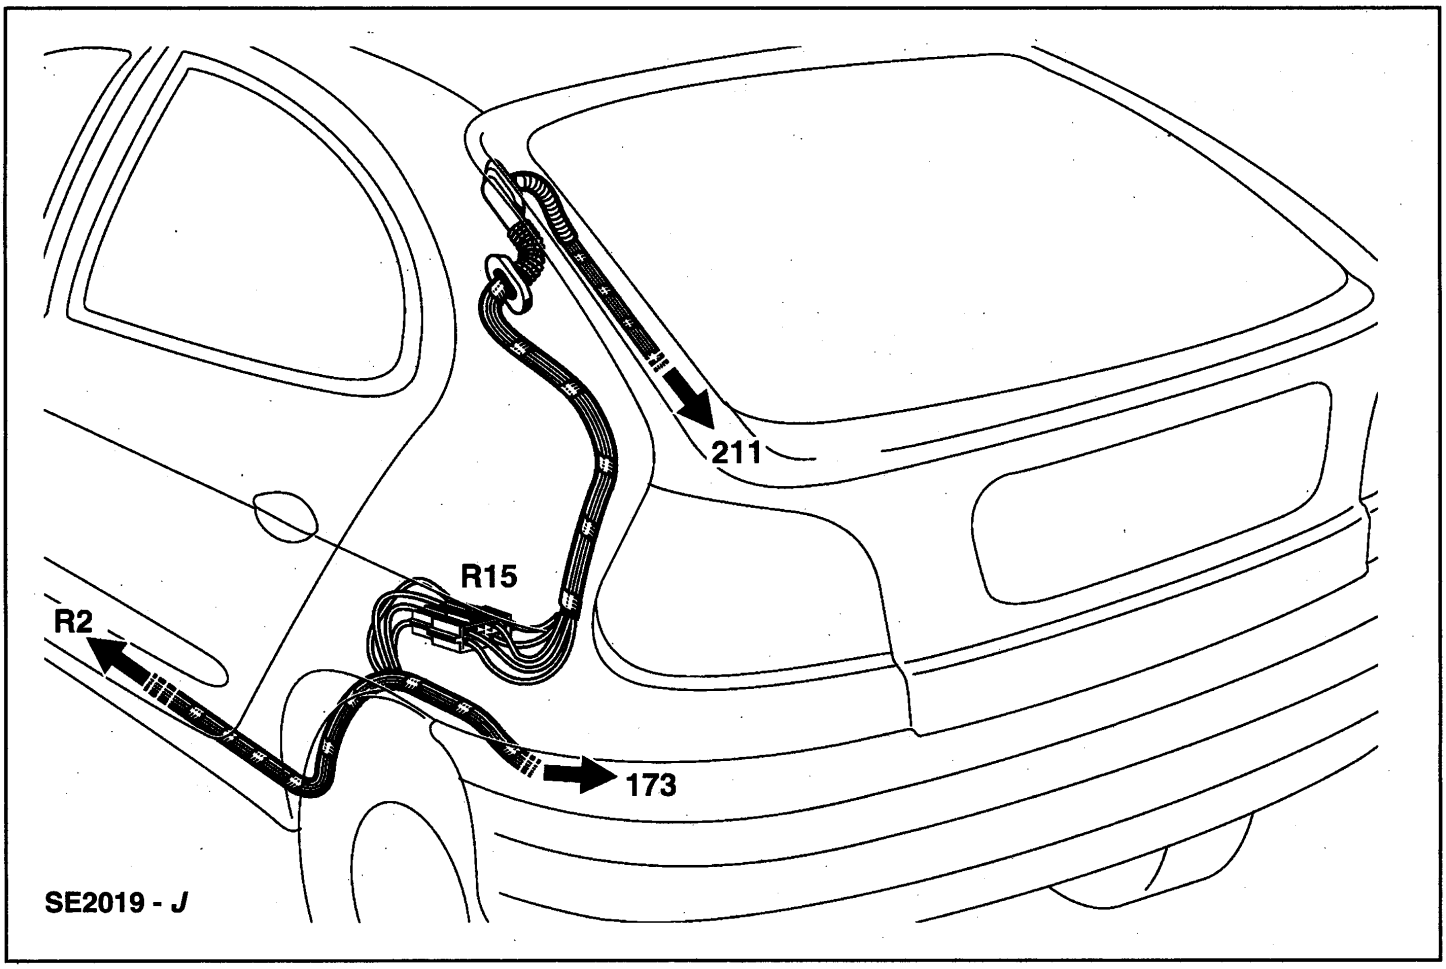

211
R15
R2
173
SE2019 - J

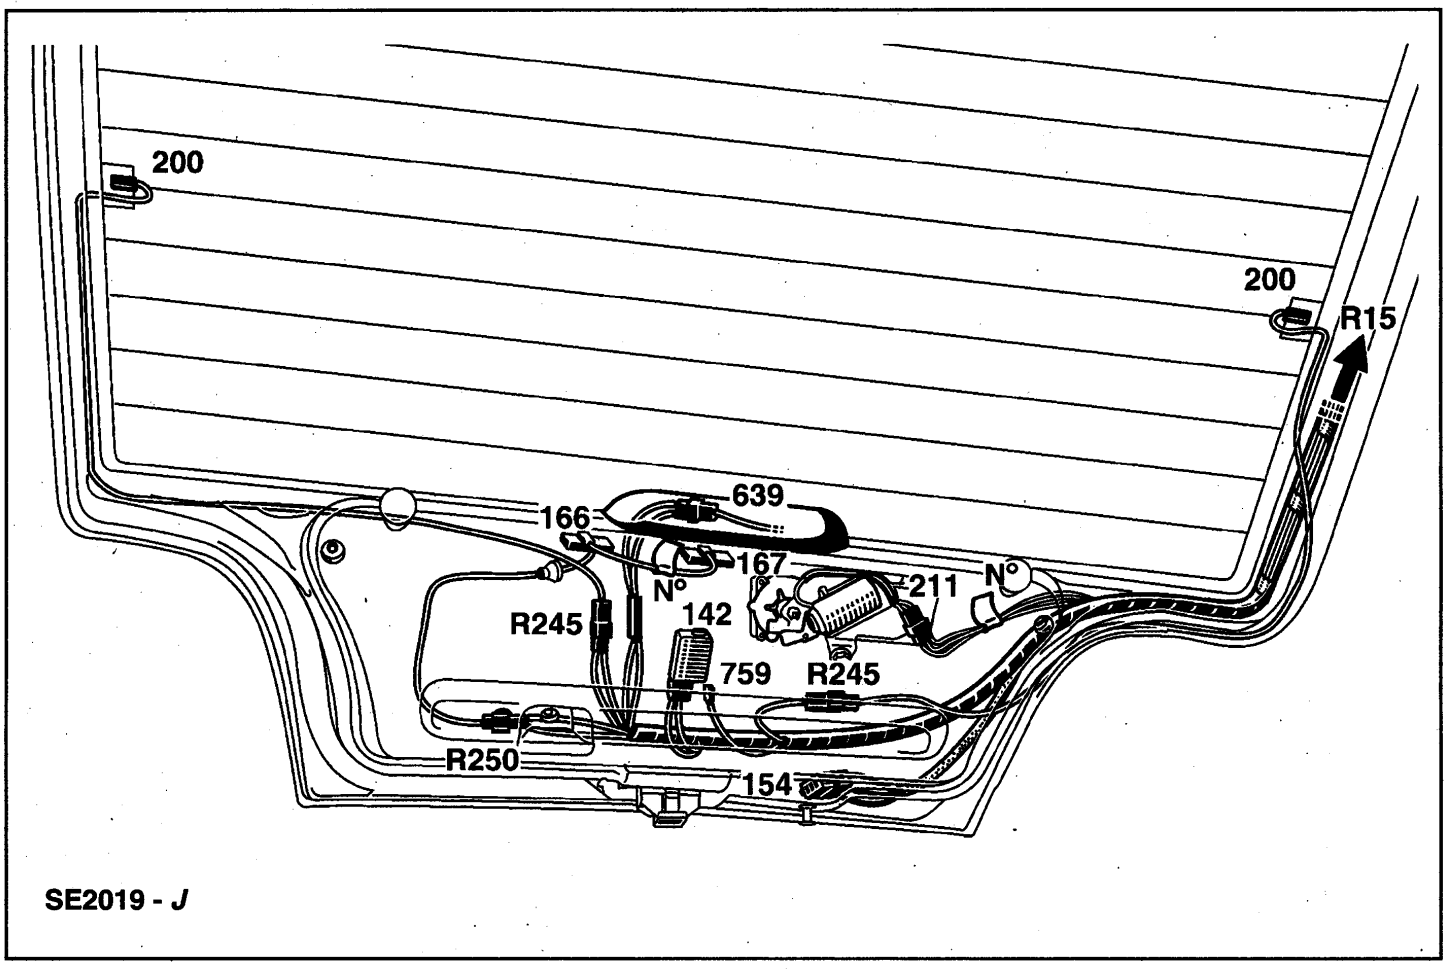

200
200
R15
639
166
167
N°
211
N°
142
R245
759
R245
R250
154
SE2019 - J

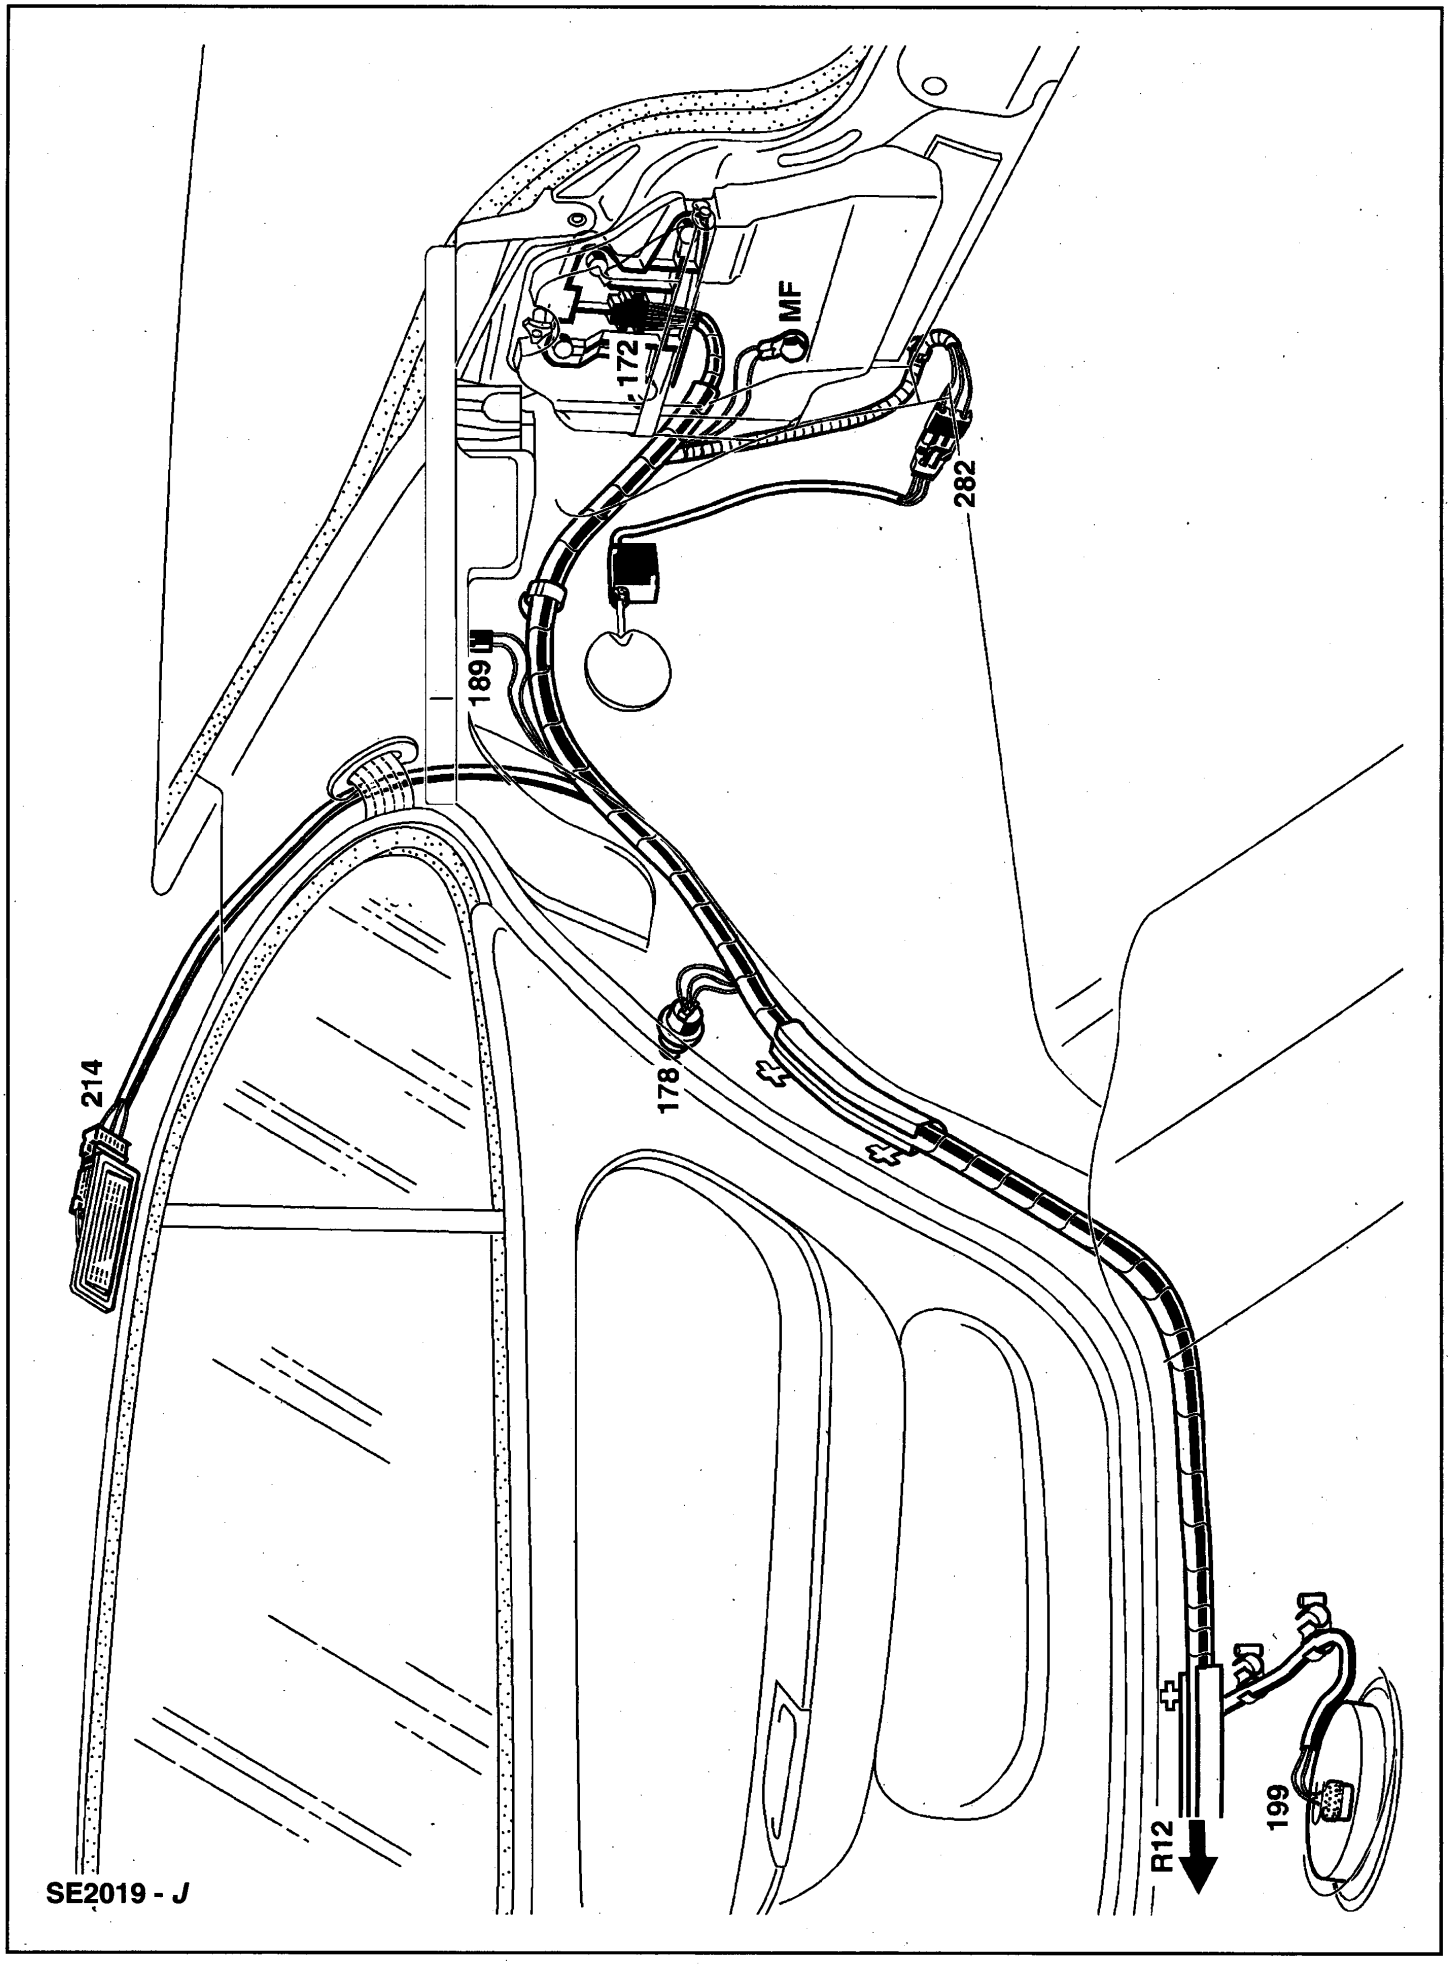

MF
172
282
189
178
214
R12
199
SE2019 - J

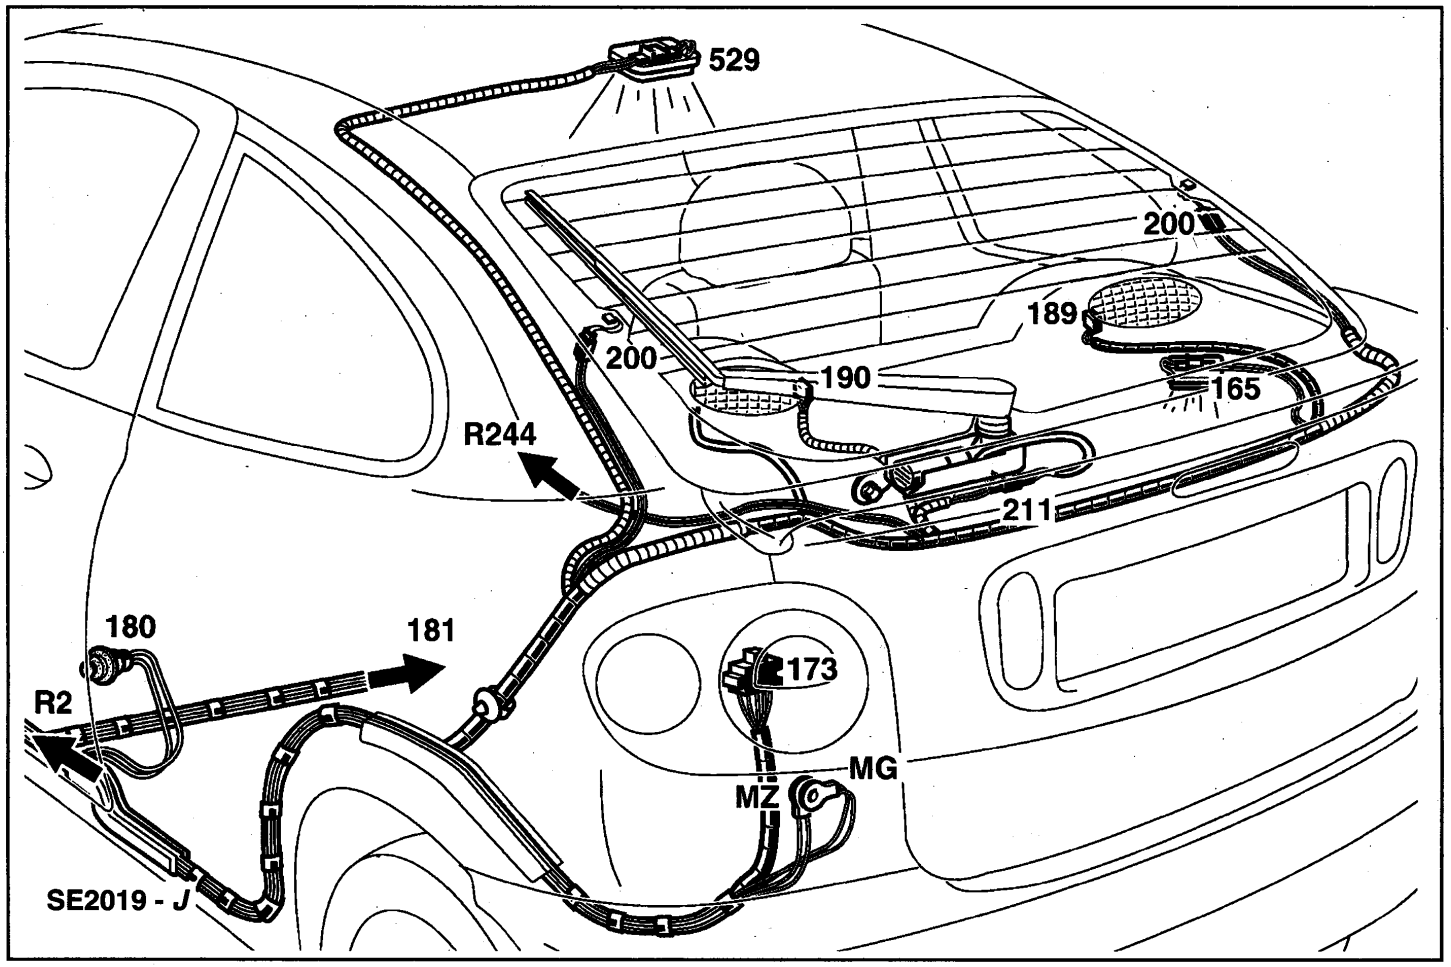
529
200
189
200
190
165
R244
211
180
181
R2
173
MG
MZ
SE2019 - J

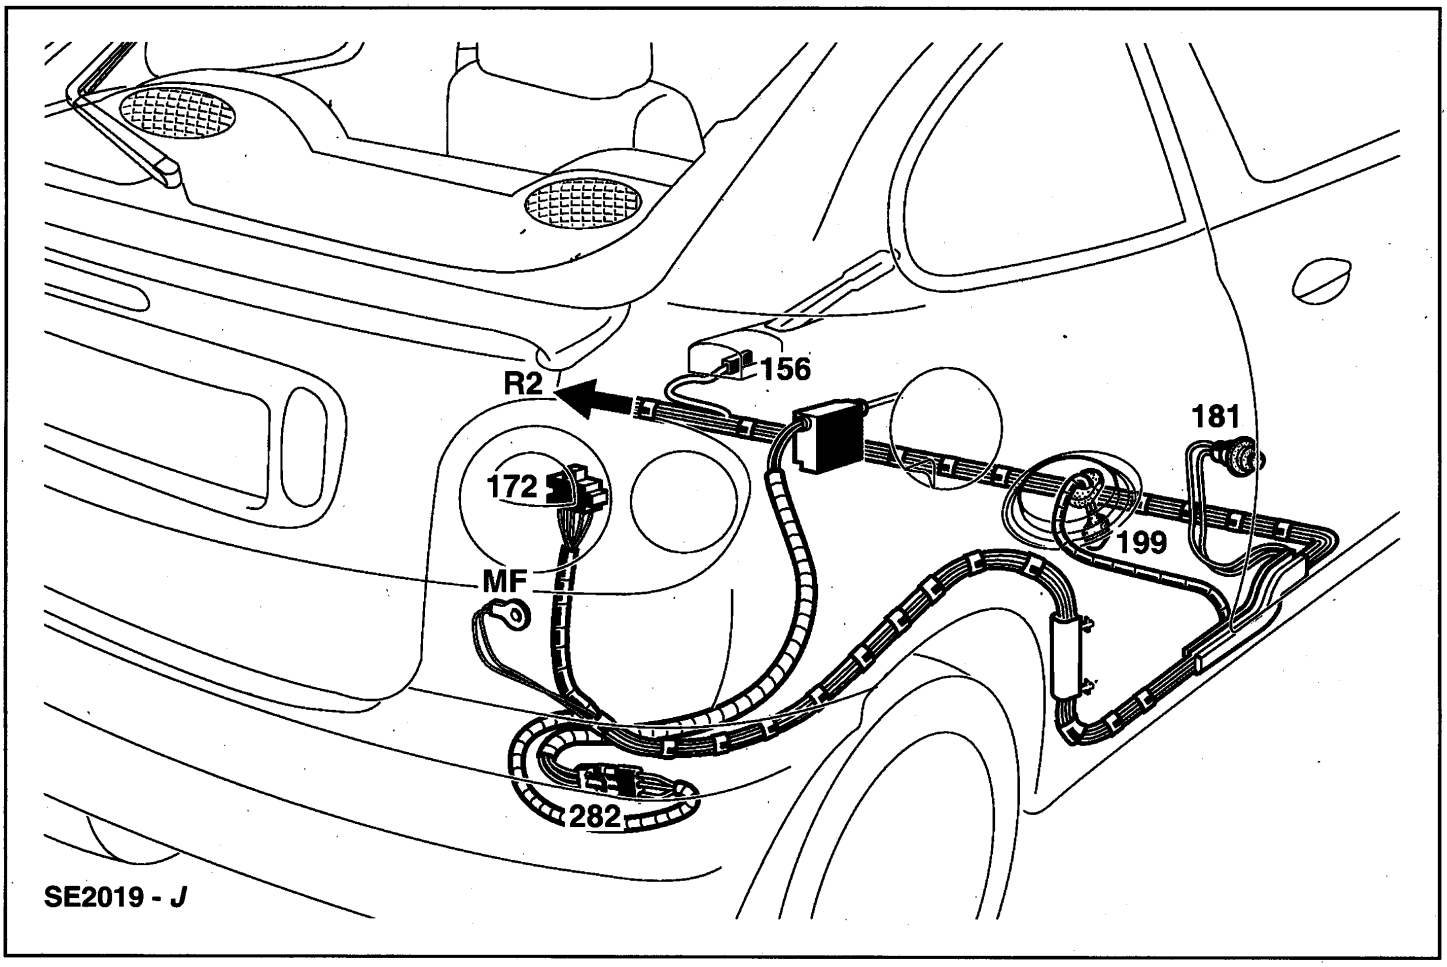

156
R2
181
172
199
MF
282
SE2019 - J

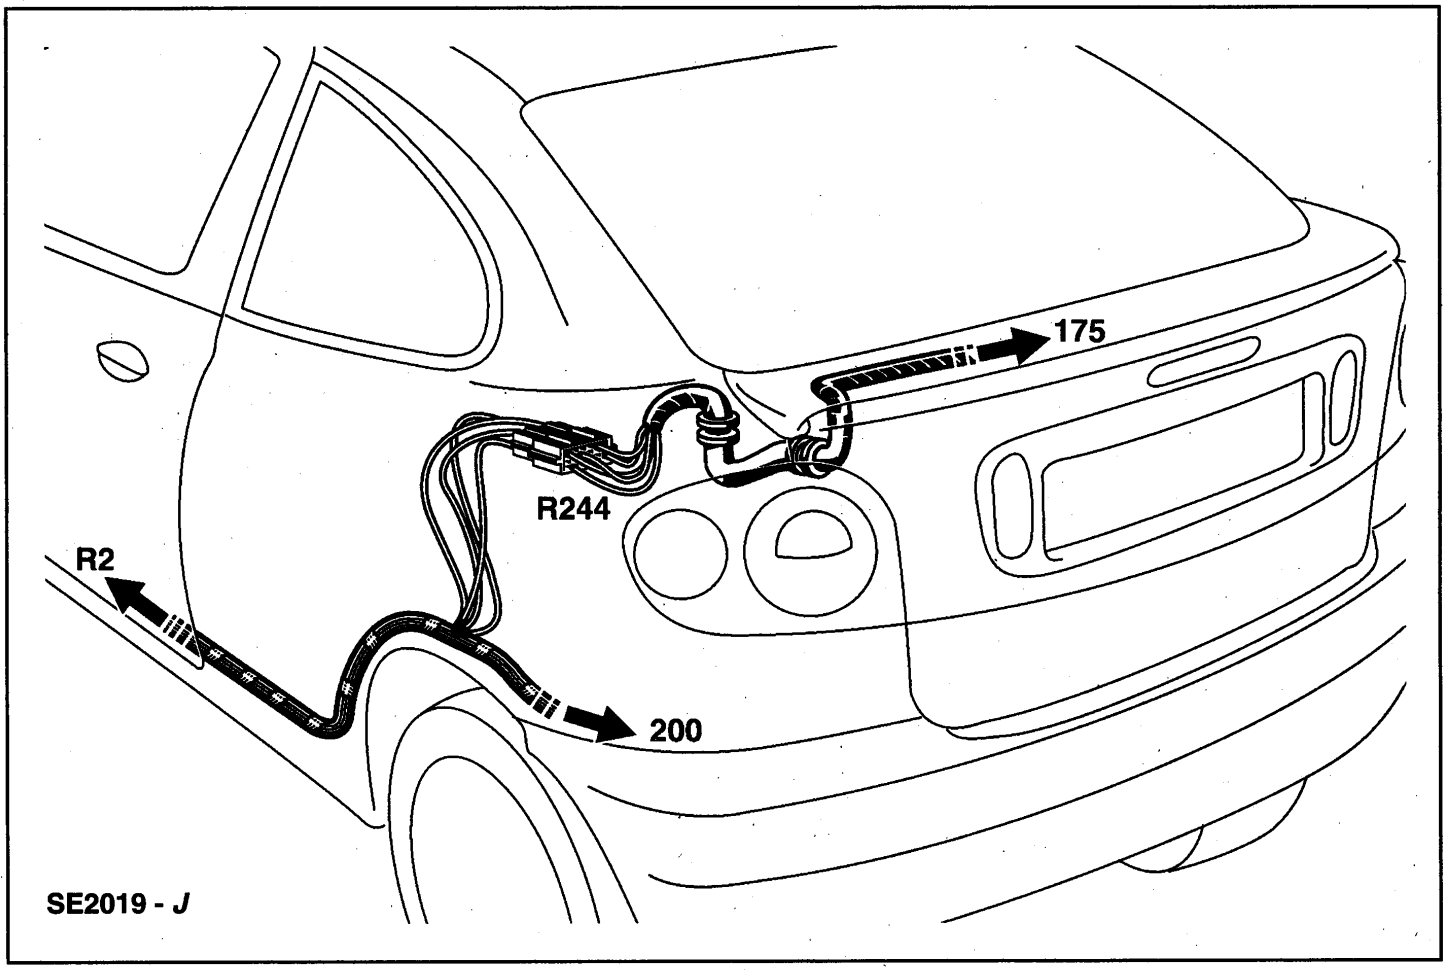

175
R244
R2
200
SE2019 - J

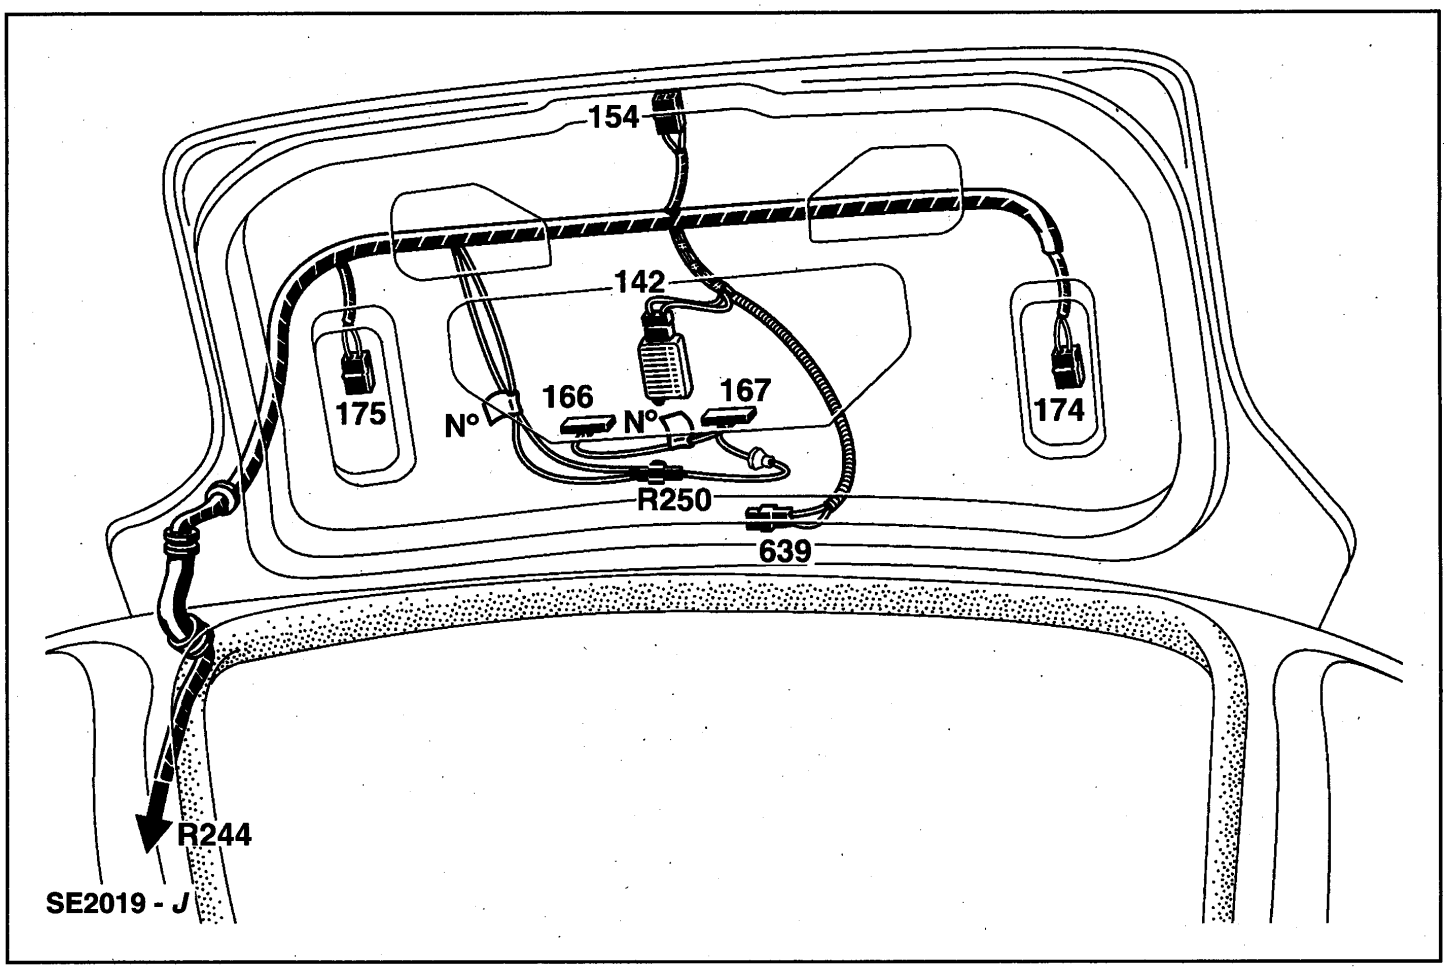

154
142
175
N°
166
N°
167
174
R250
639
R244
SE2019 - J

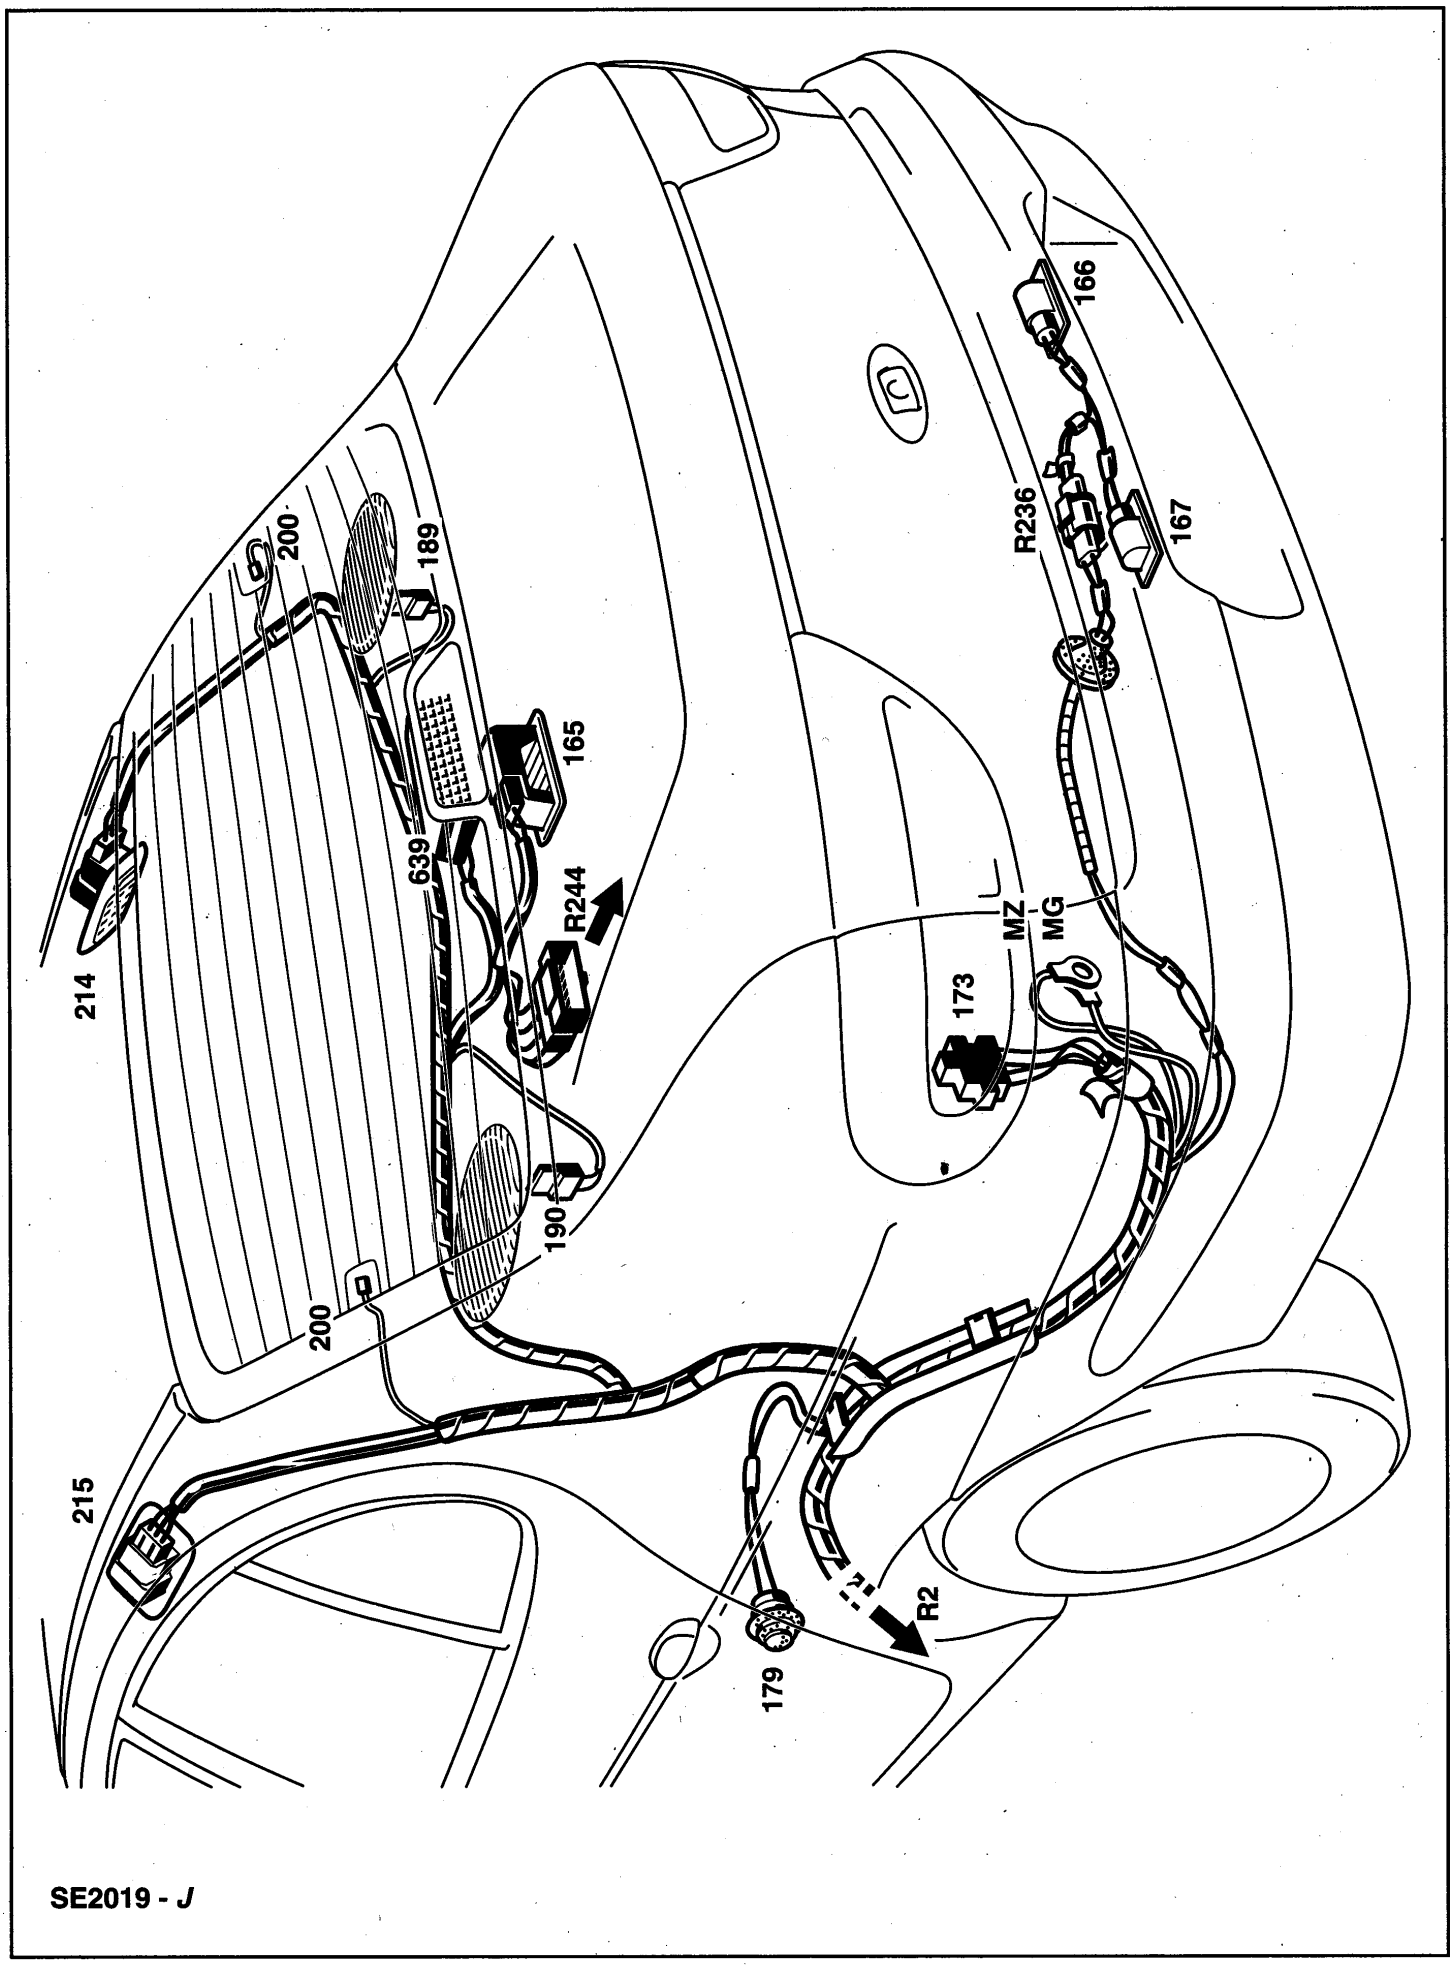

166
R236
167
200
189
165
639
R244
214
MZ
MG
173
190
200
215
R2
179


SE2019 - *J*

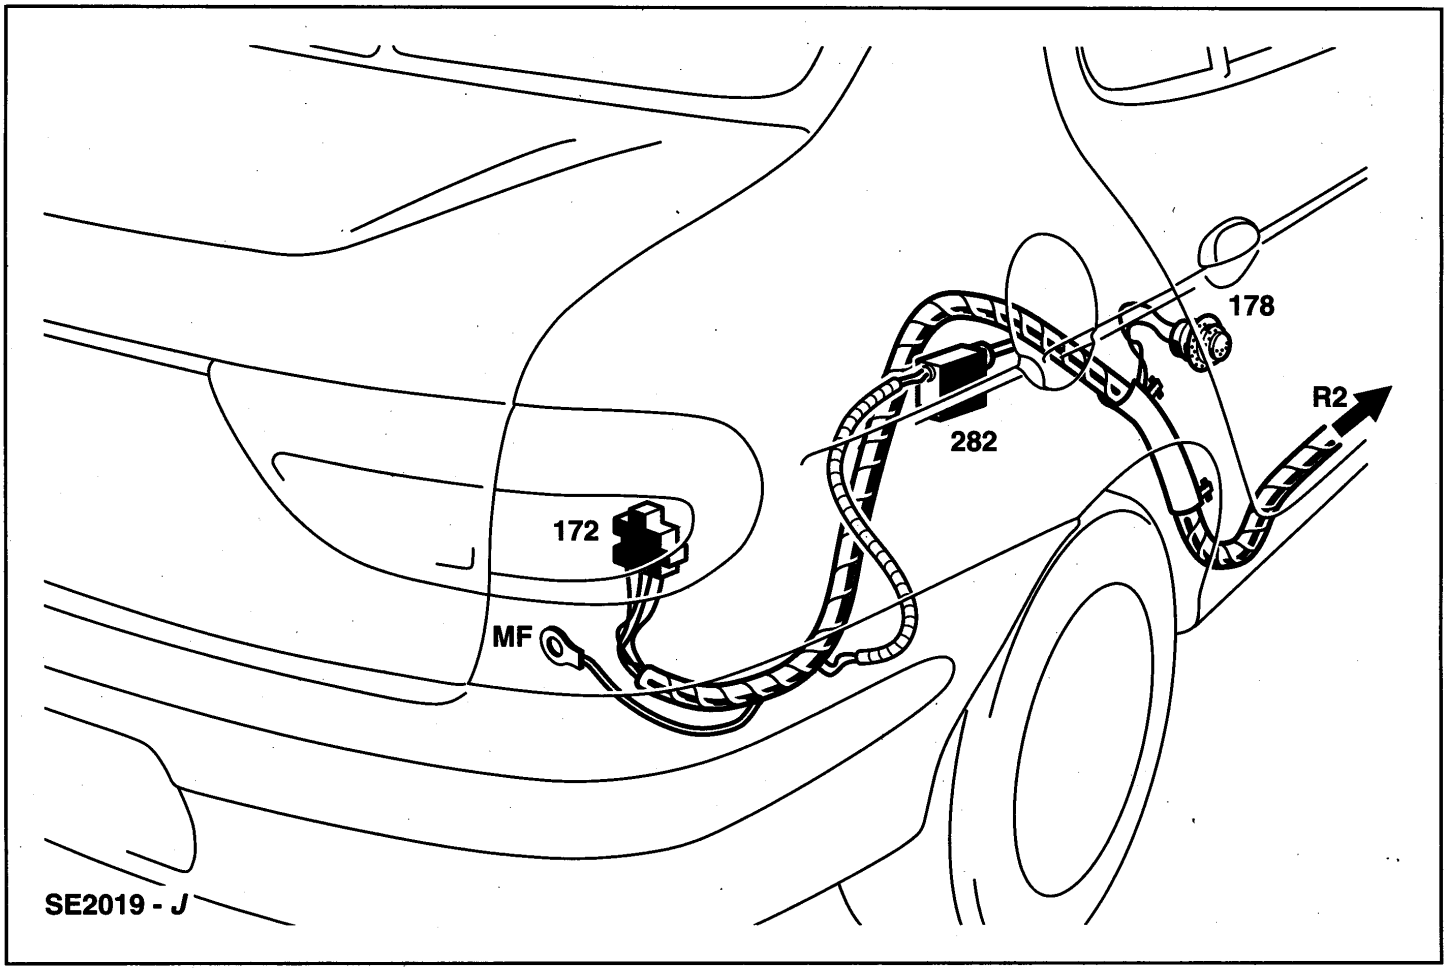

178
R2
282
172
MF
SE2019 - J

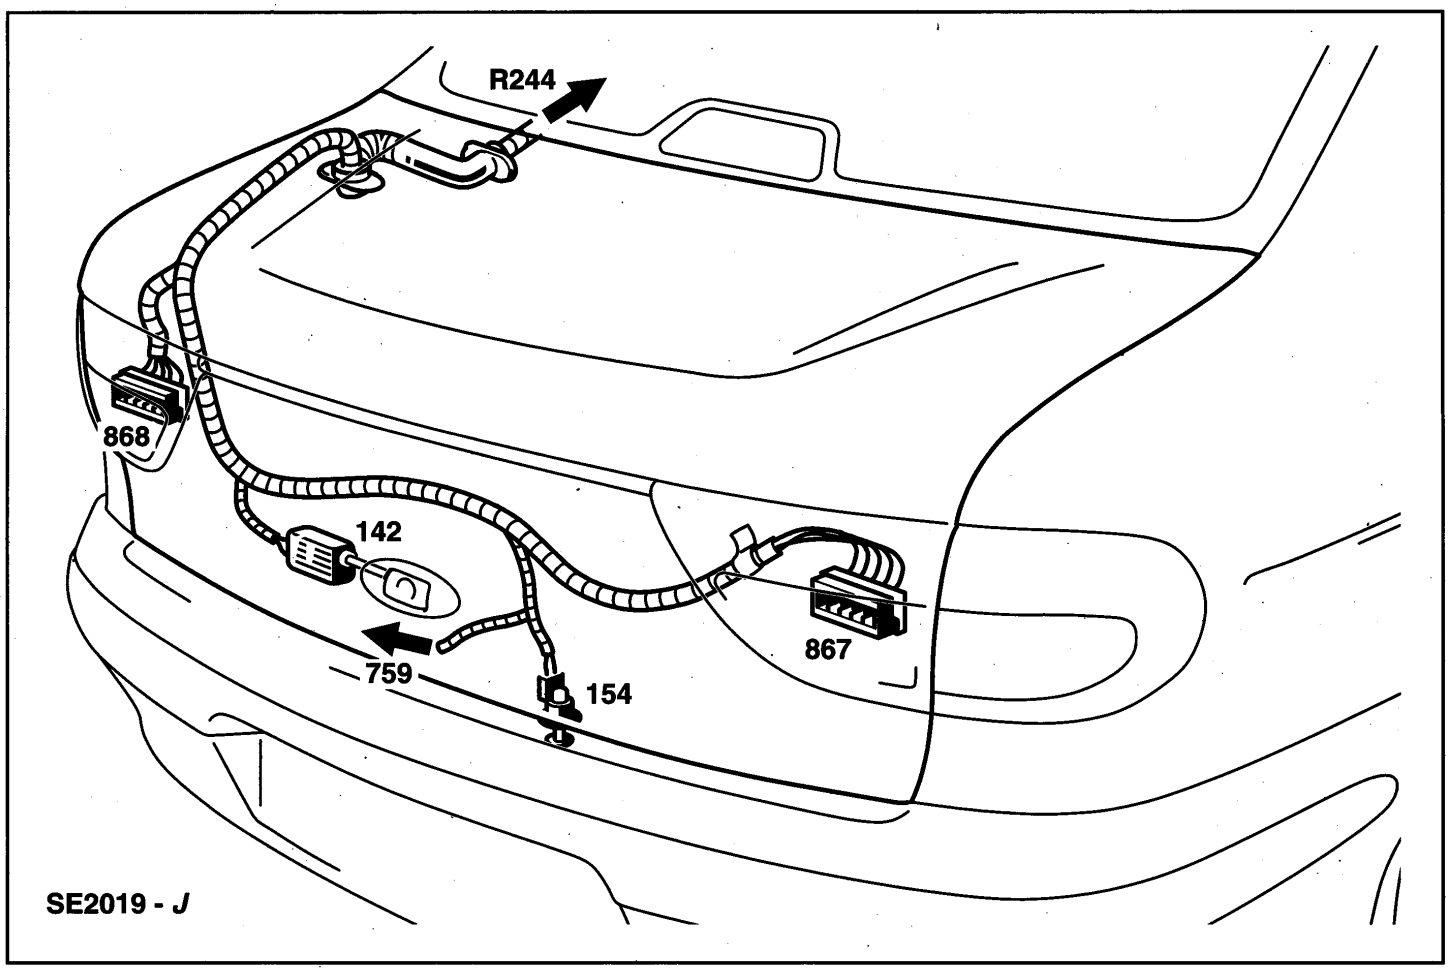

R244
868
142
759
154
867
SE2019 - J

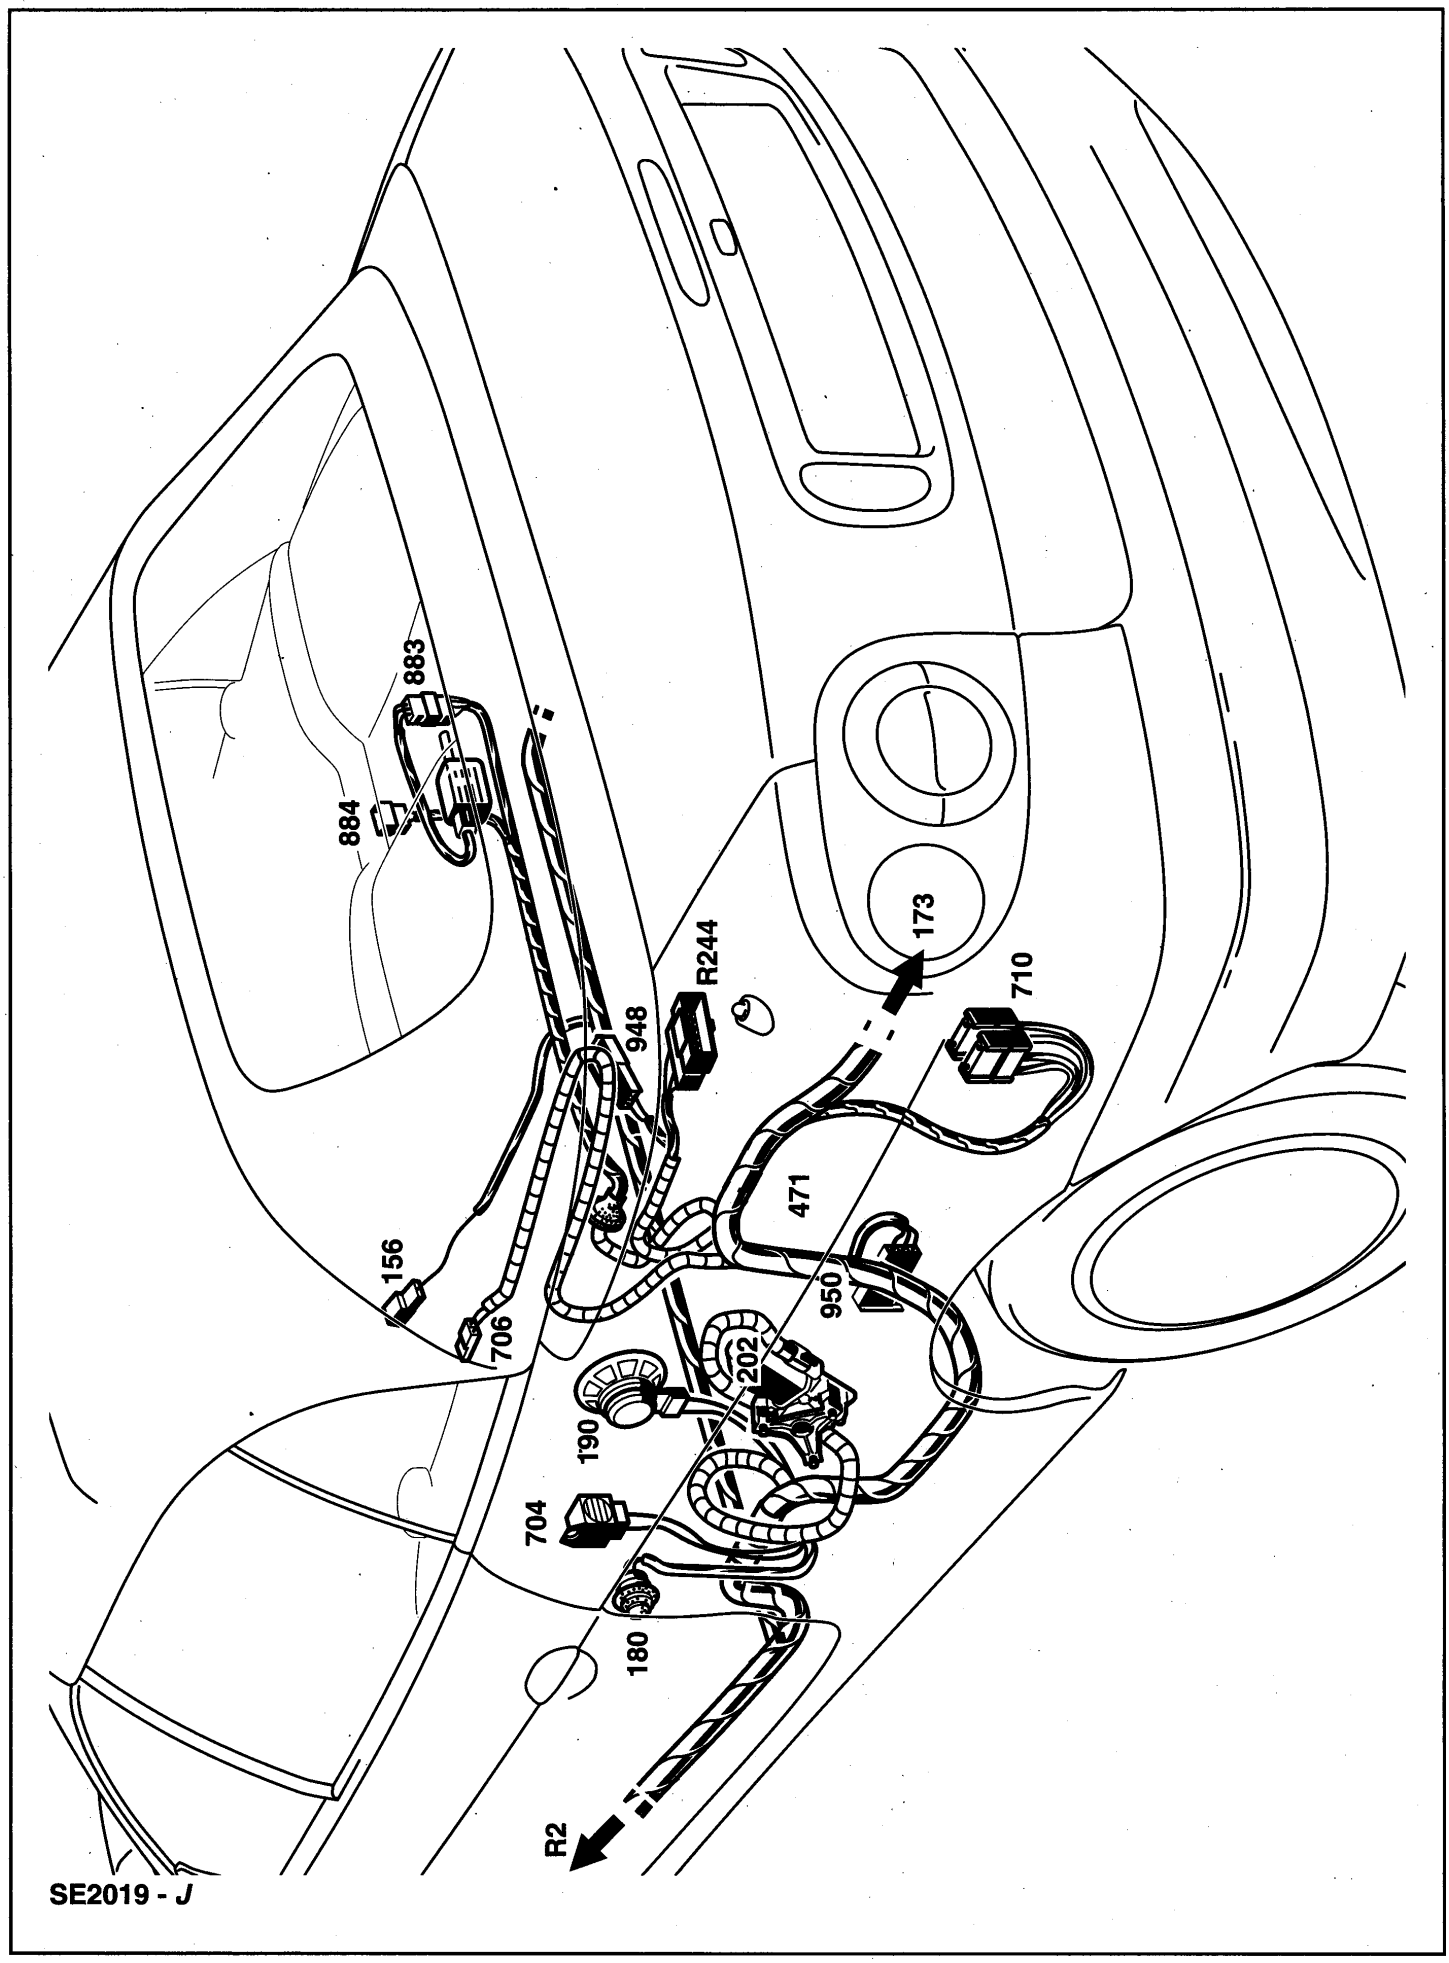

883
884
R244
948
173
710
471
156
706
950
202
190
704
180
R2
SE2019 - J

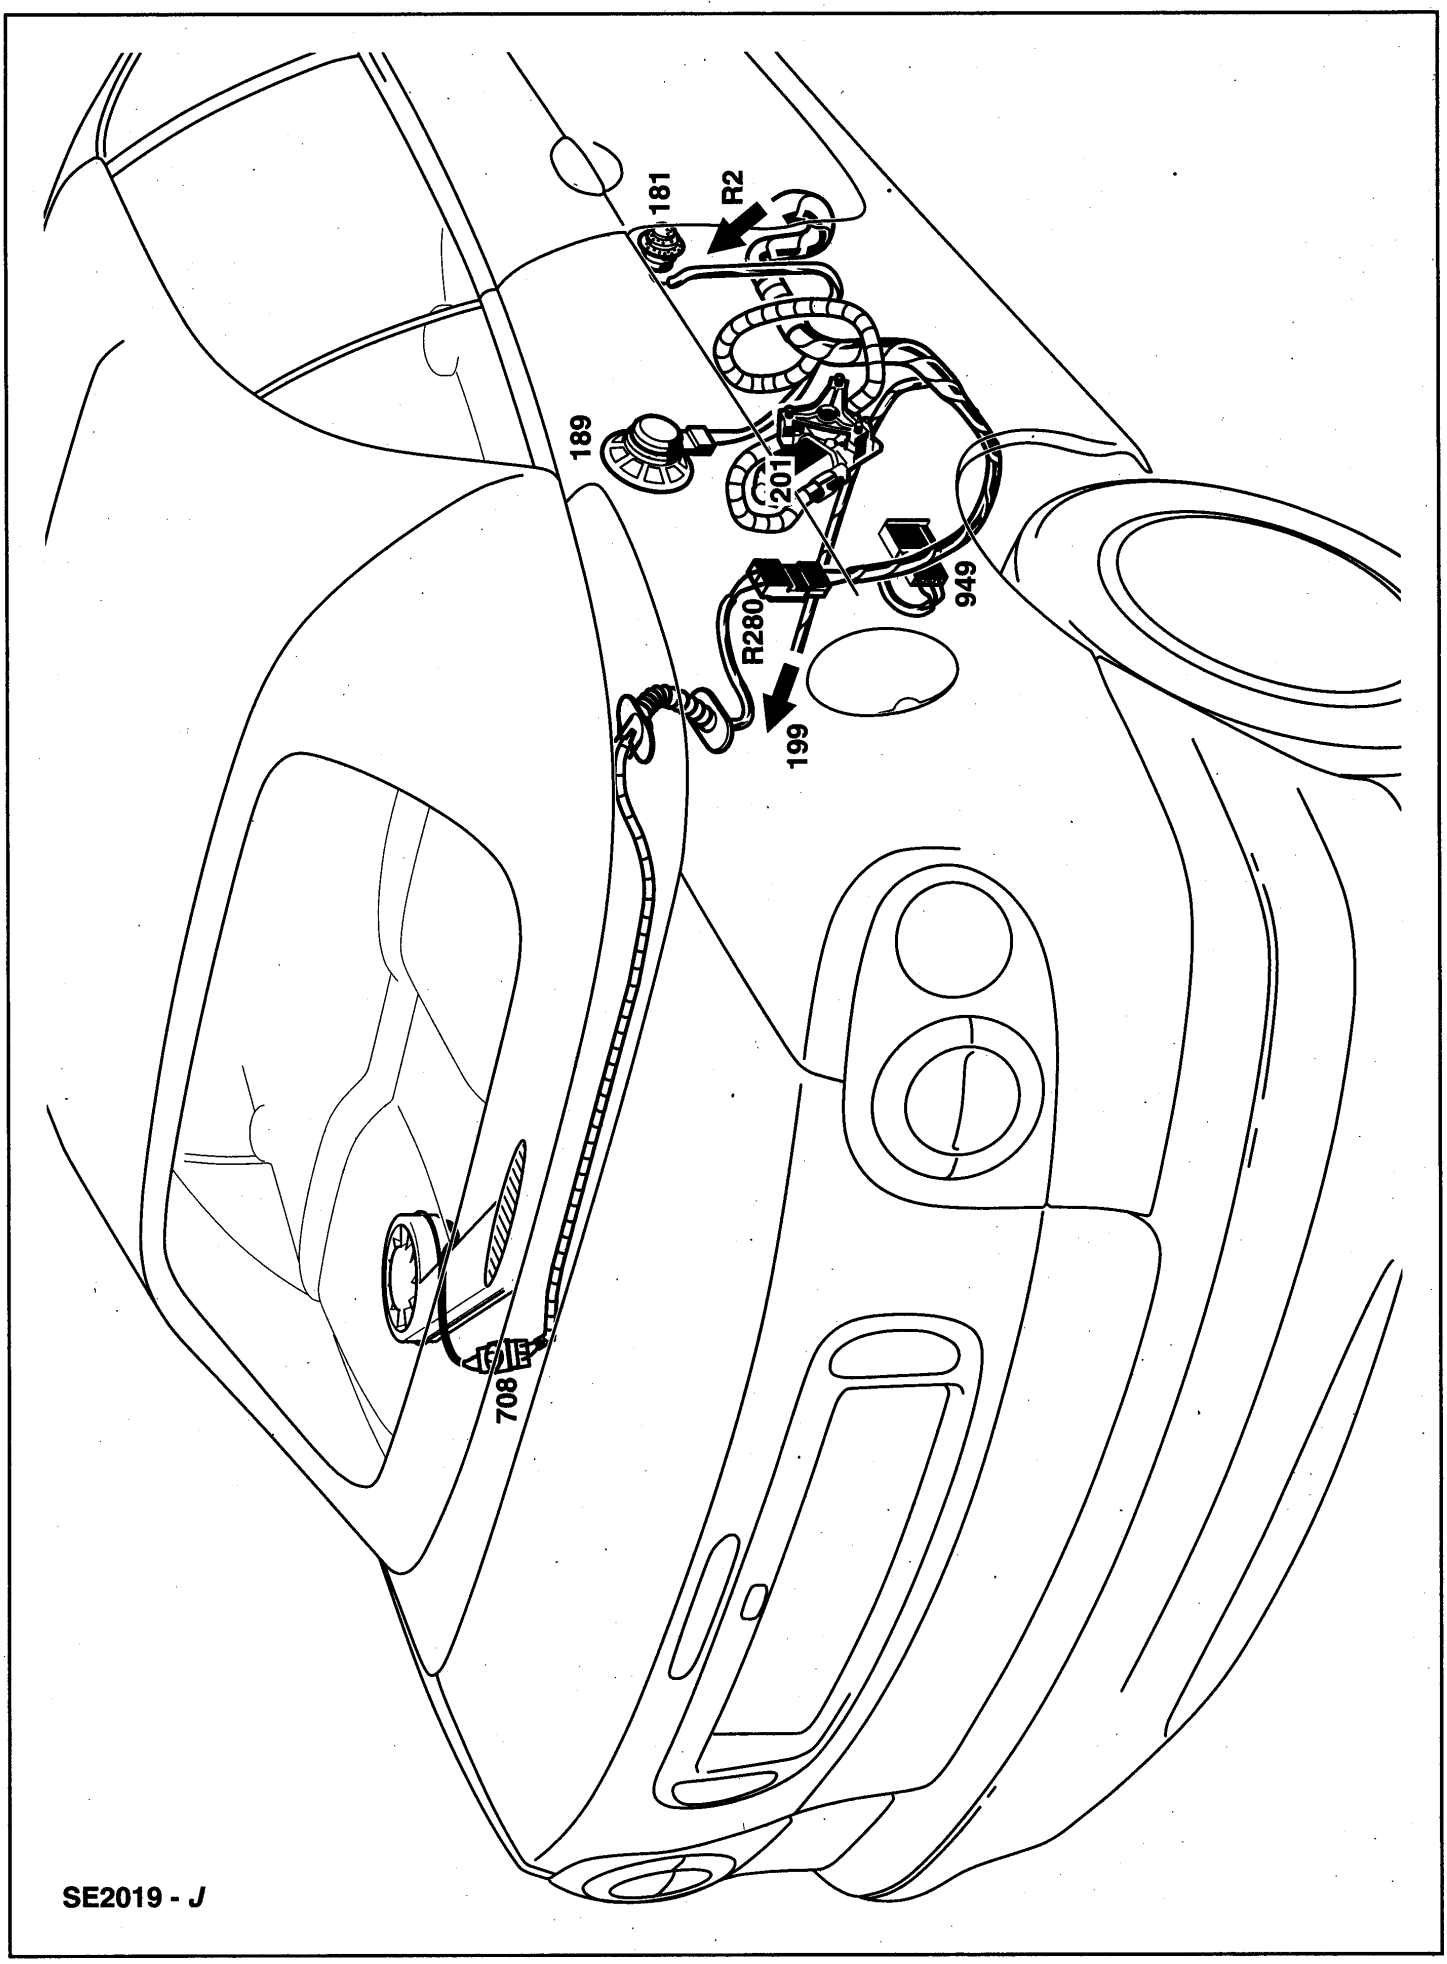

181
R2
189
201
949
R280
199
708
SE2019 - J

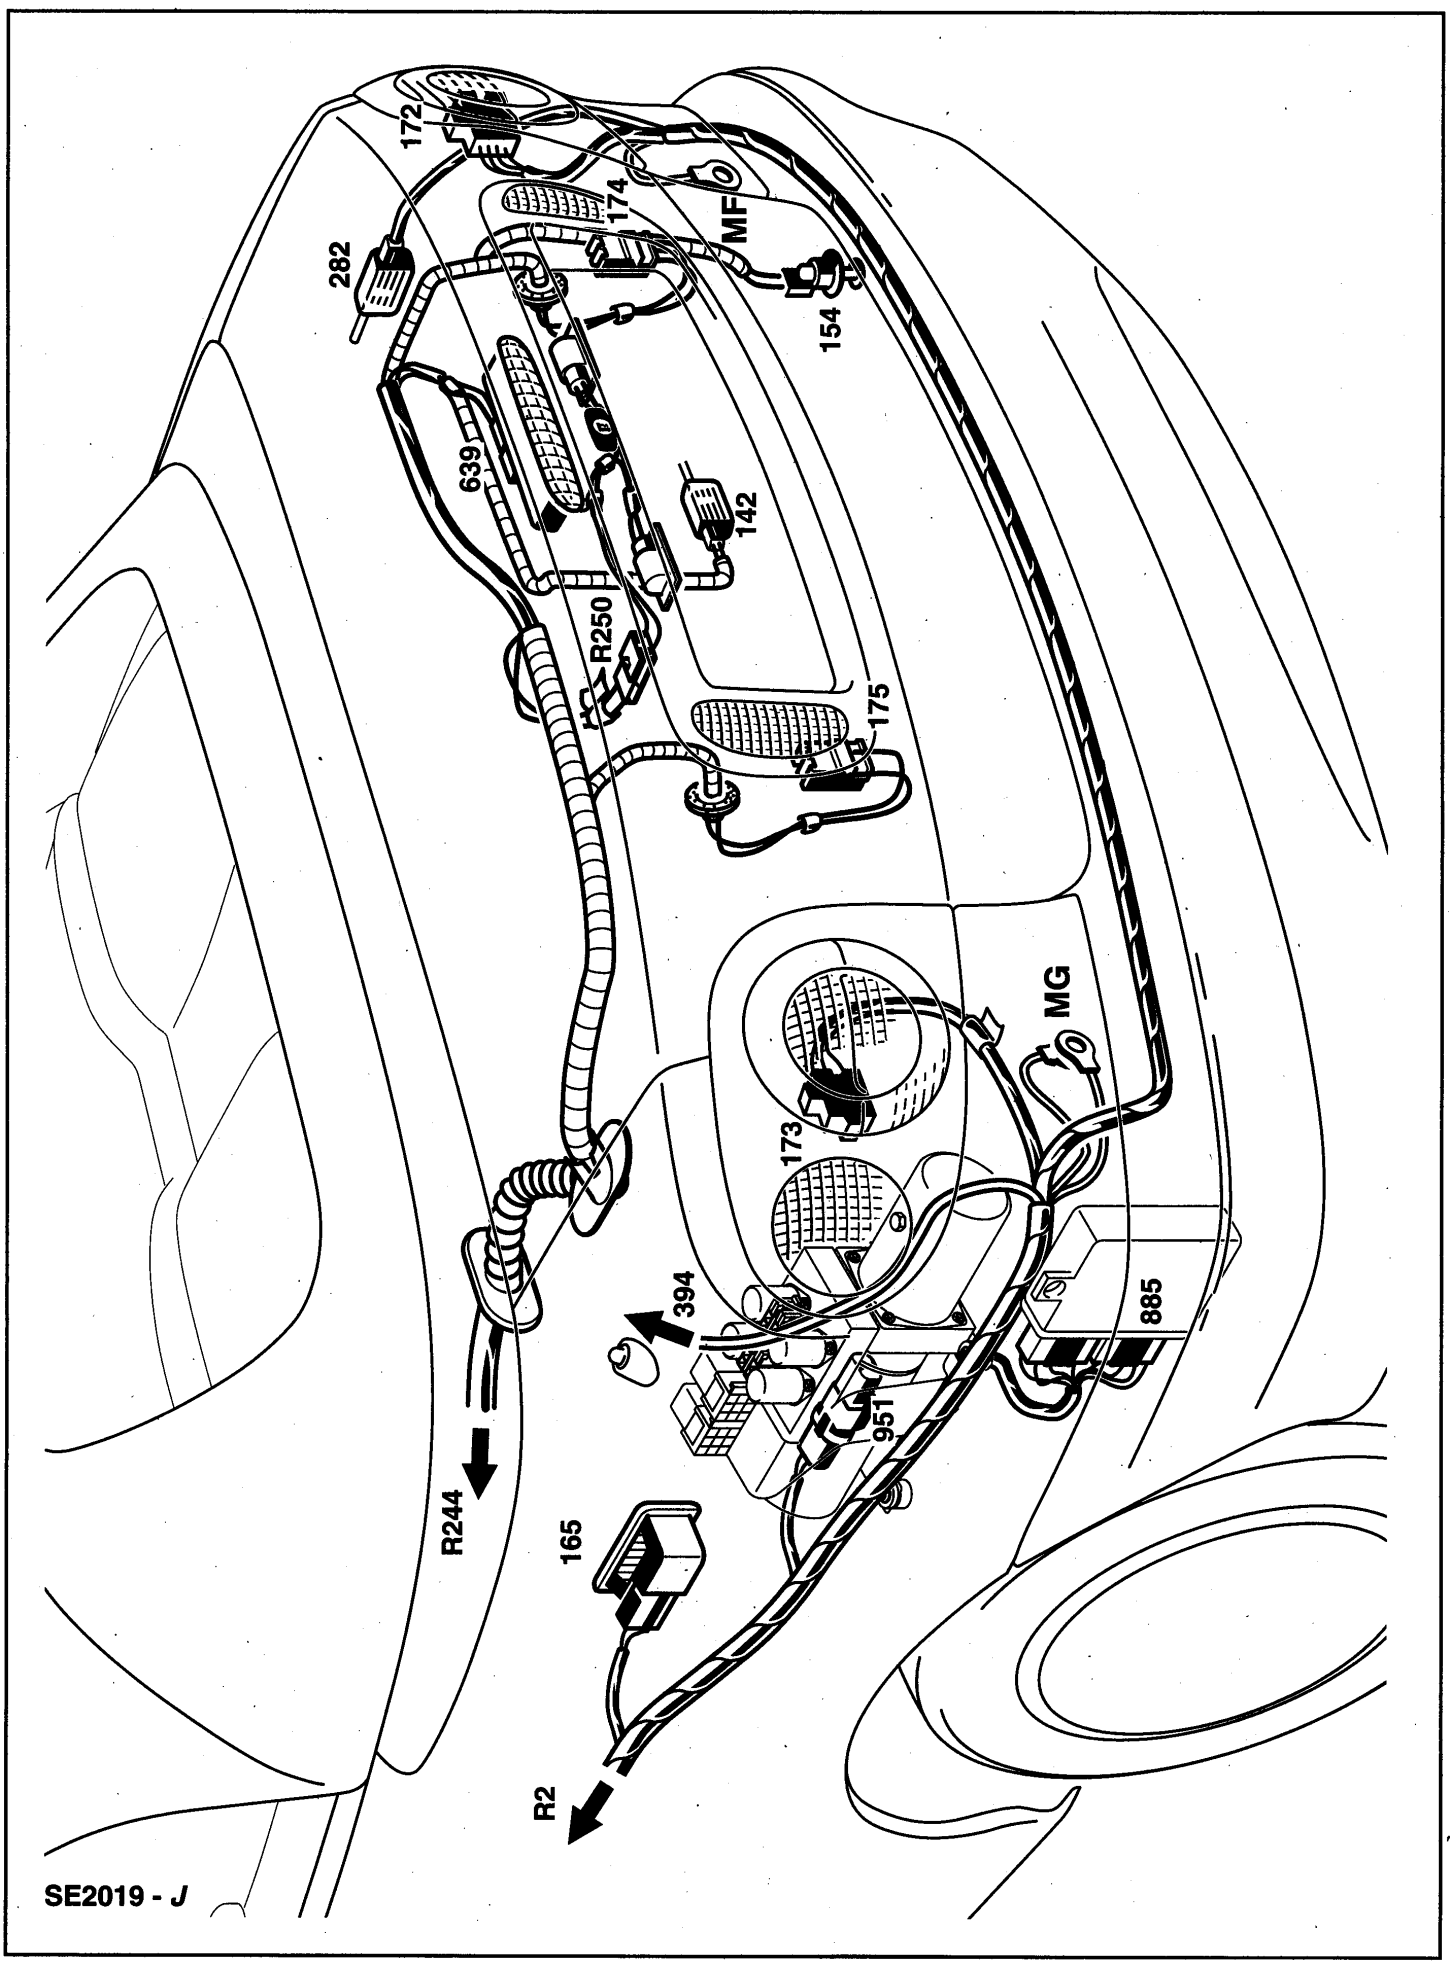

172
174
MF
282
154
639
142
R250
175
MG
173
394
885
951
R244
165
R2
SE2019 - J

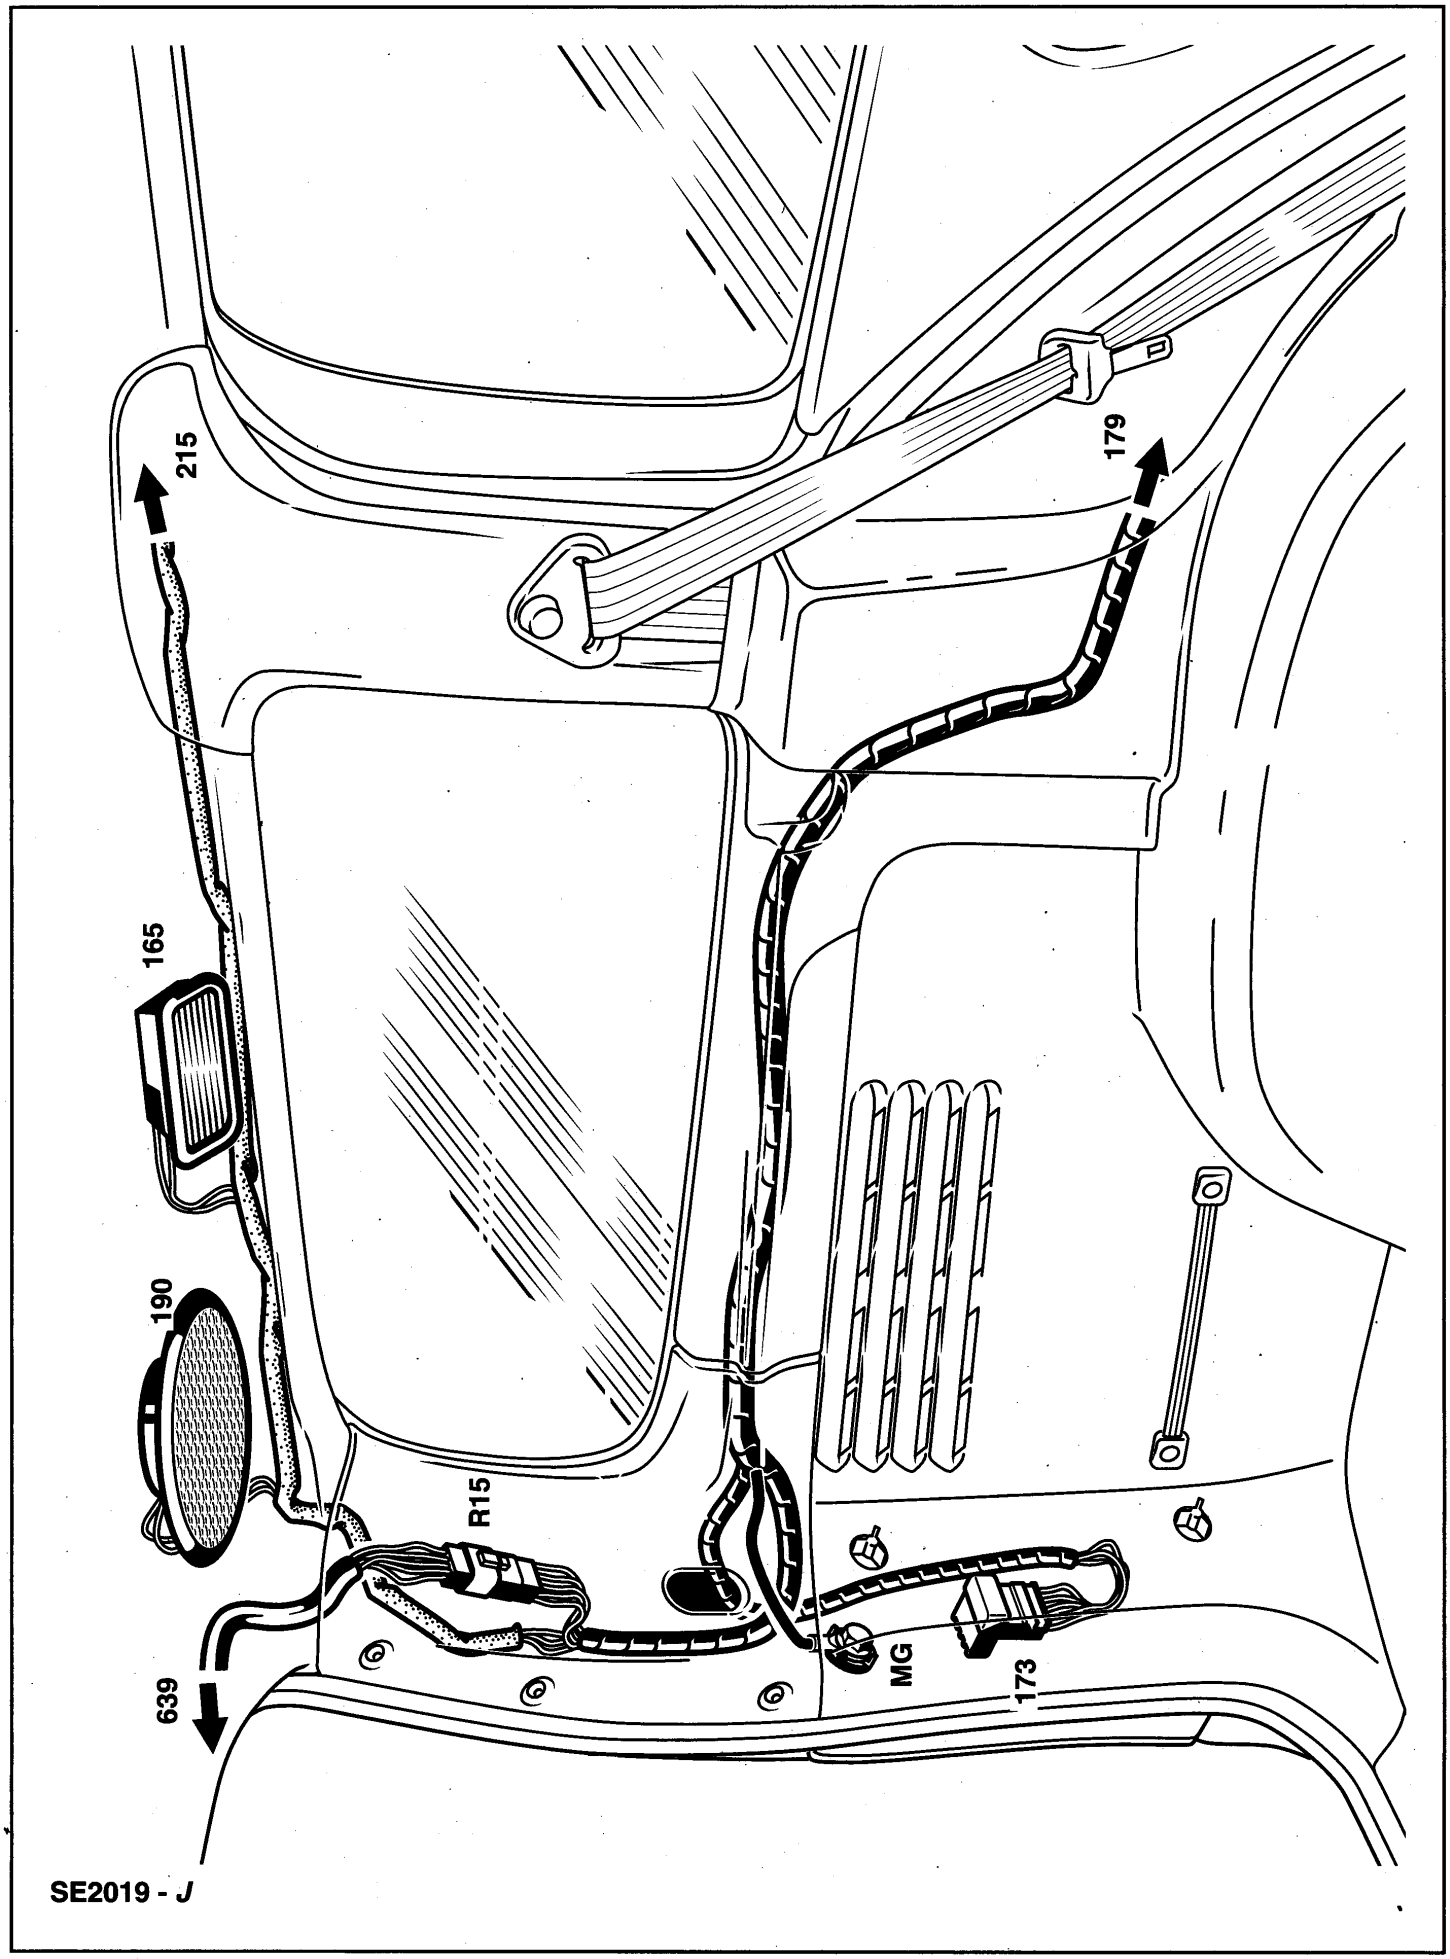
215
179
165
190
R15
639
MG
173
SE2019 - J

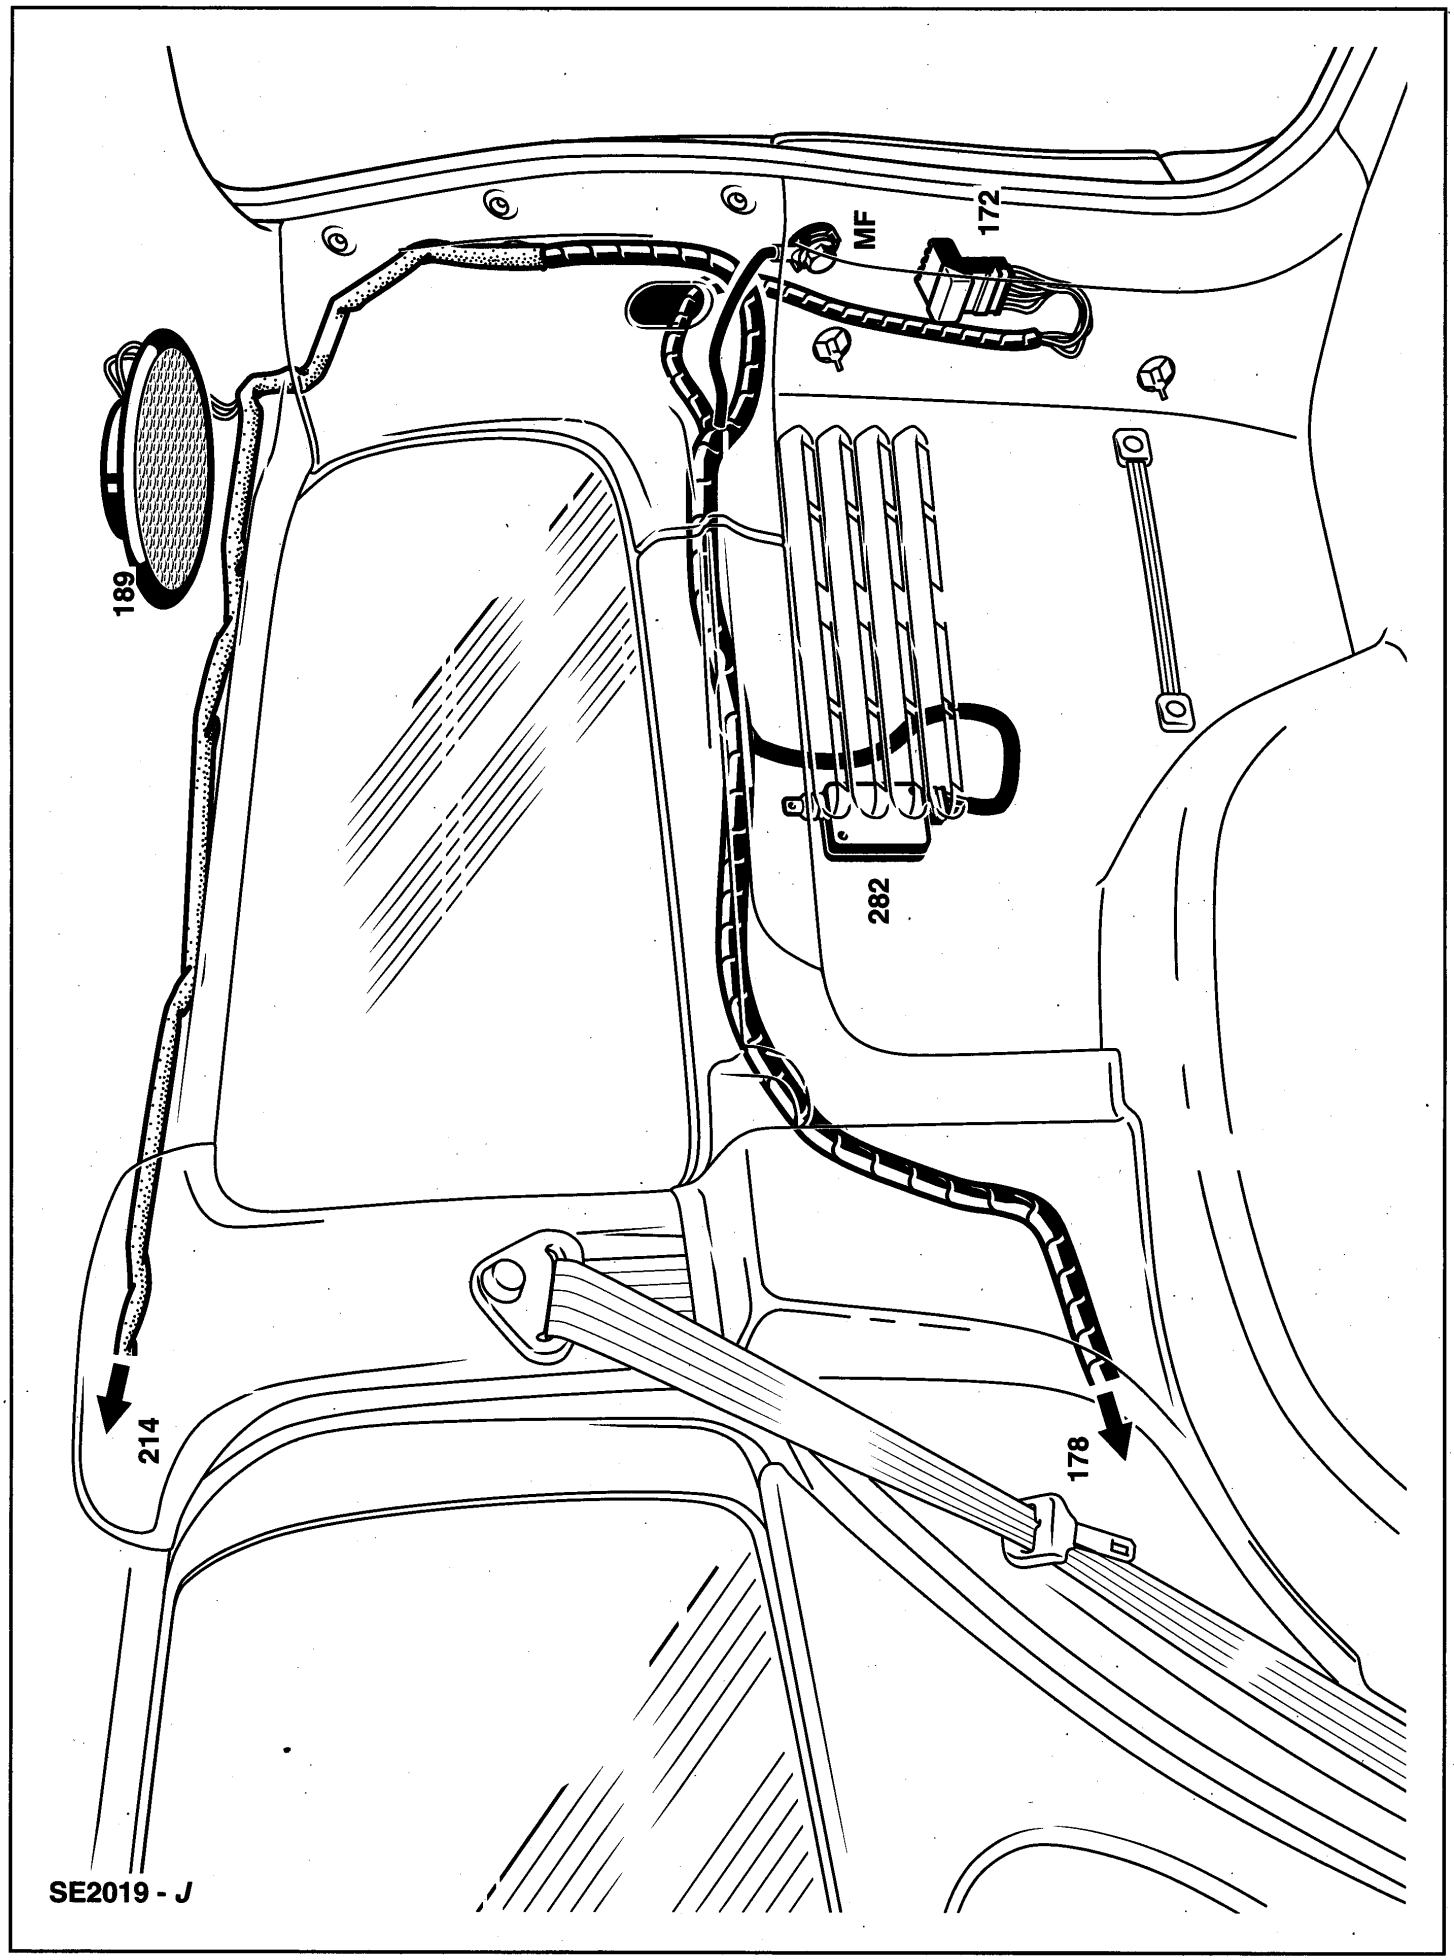

MF
172
189
282
214
178
SE2019 - J

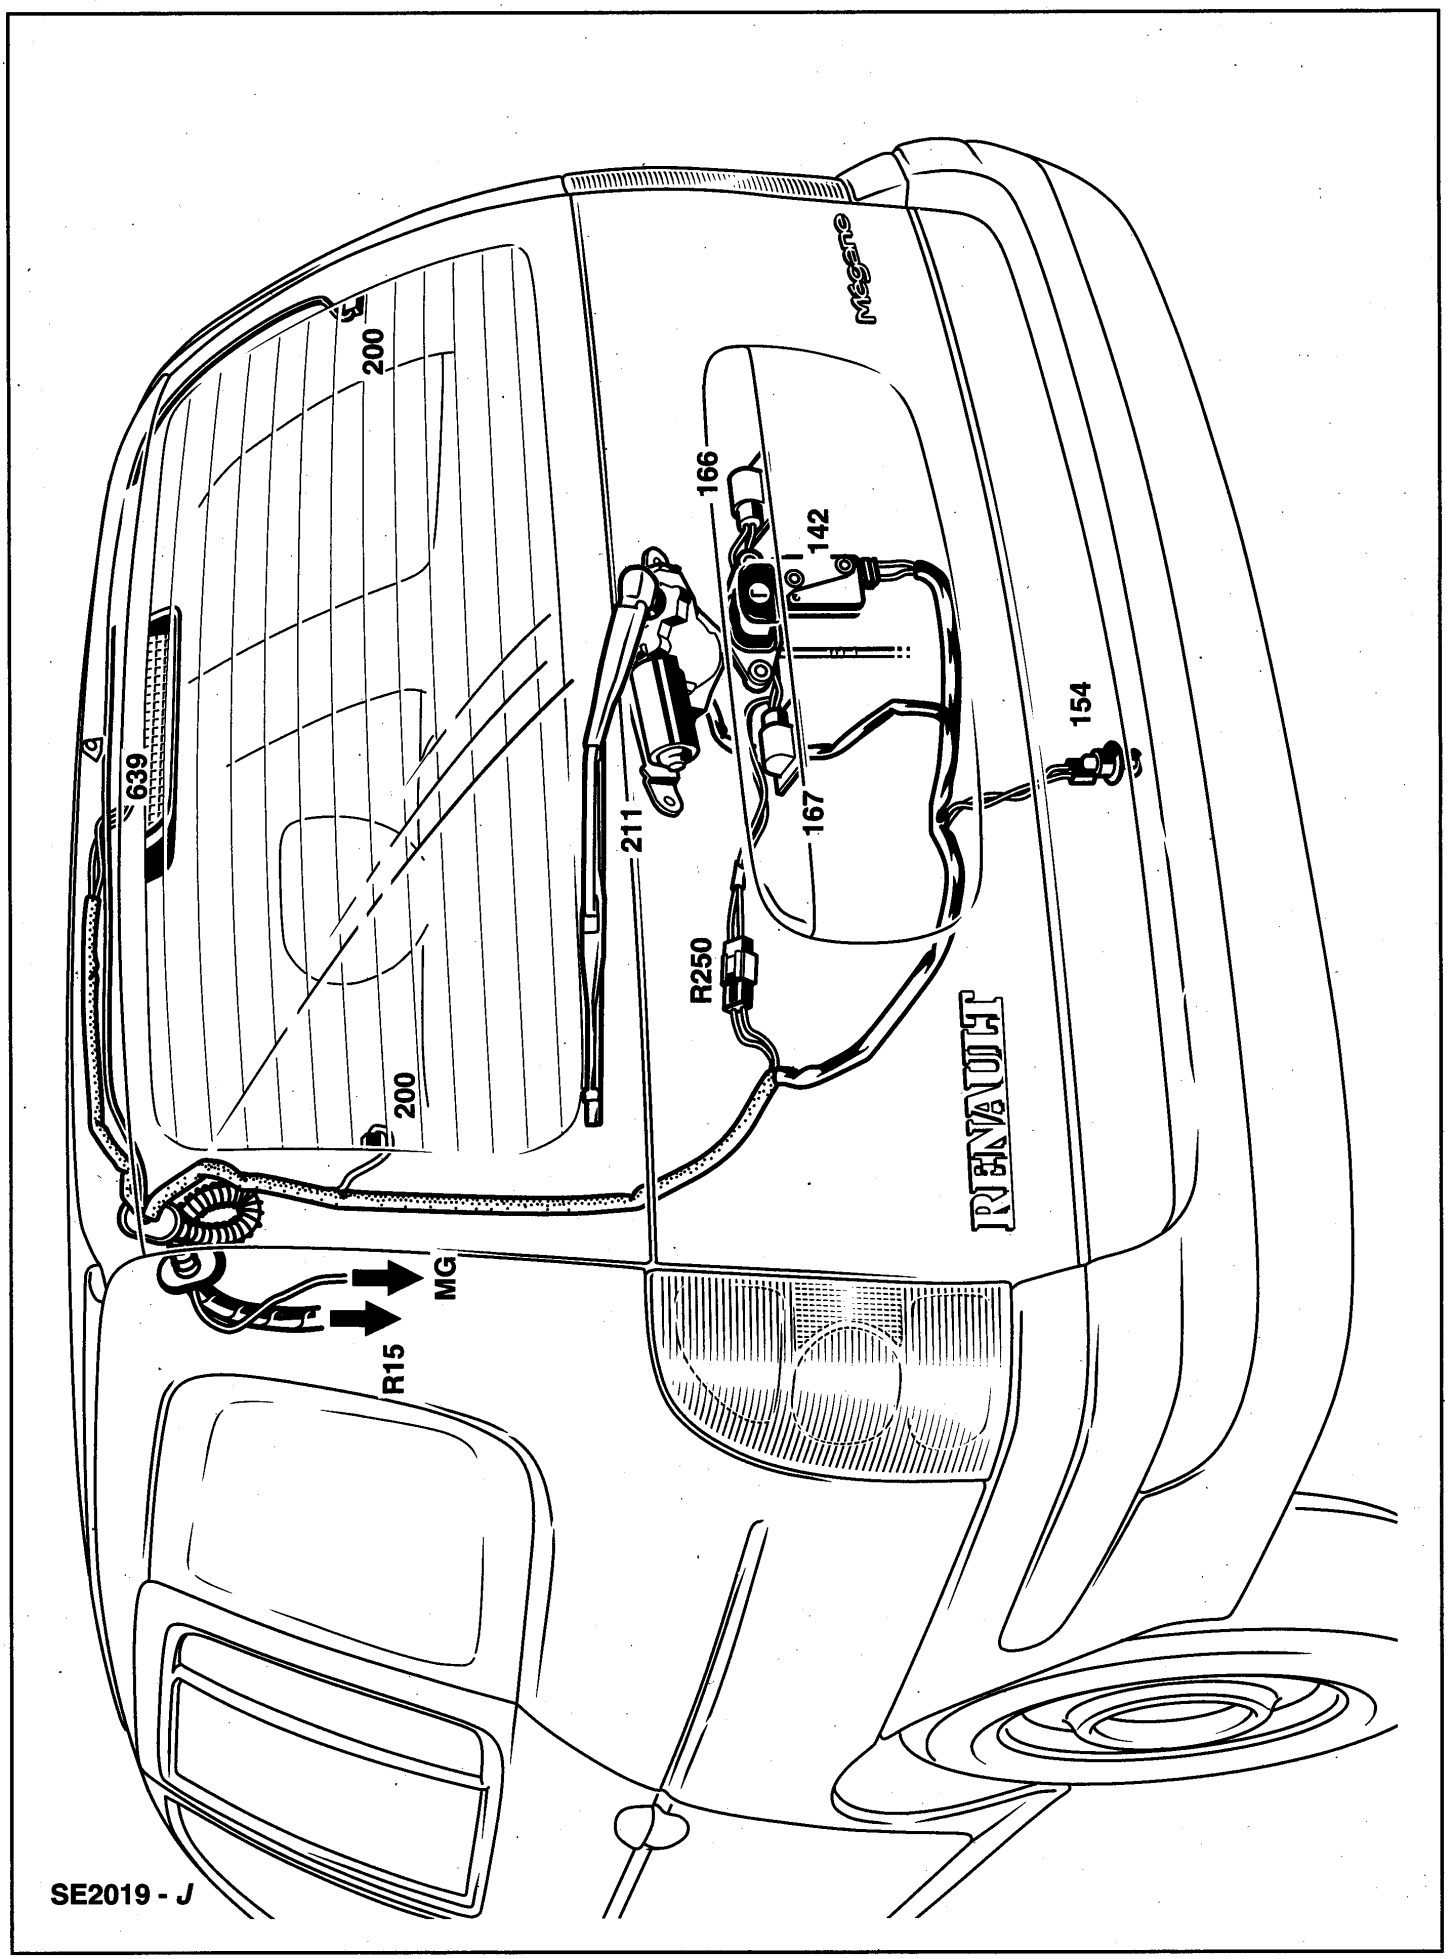
639
200
200
211
166
142
167
R250
154
Mégane
RENAULT
R15
MG
SE2019 - J

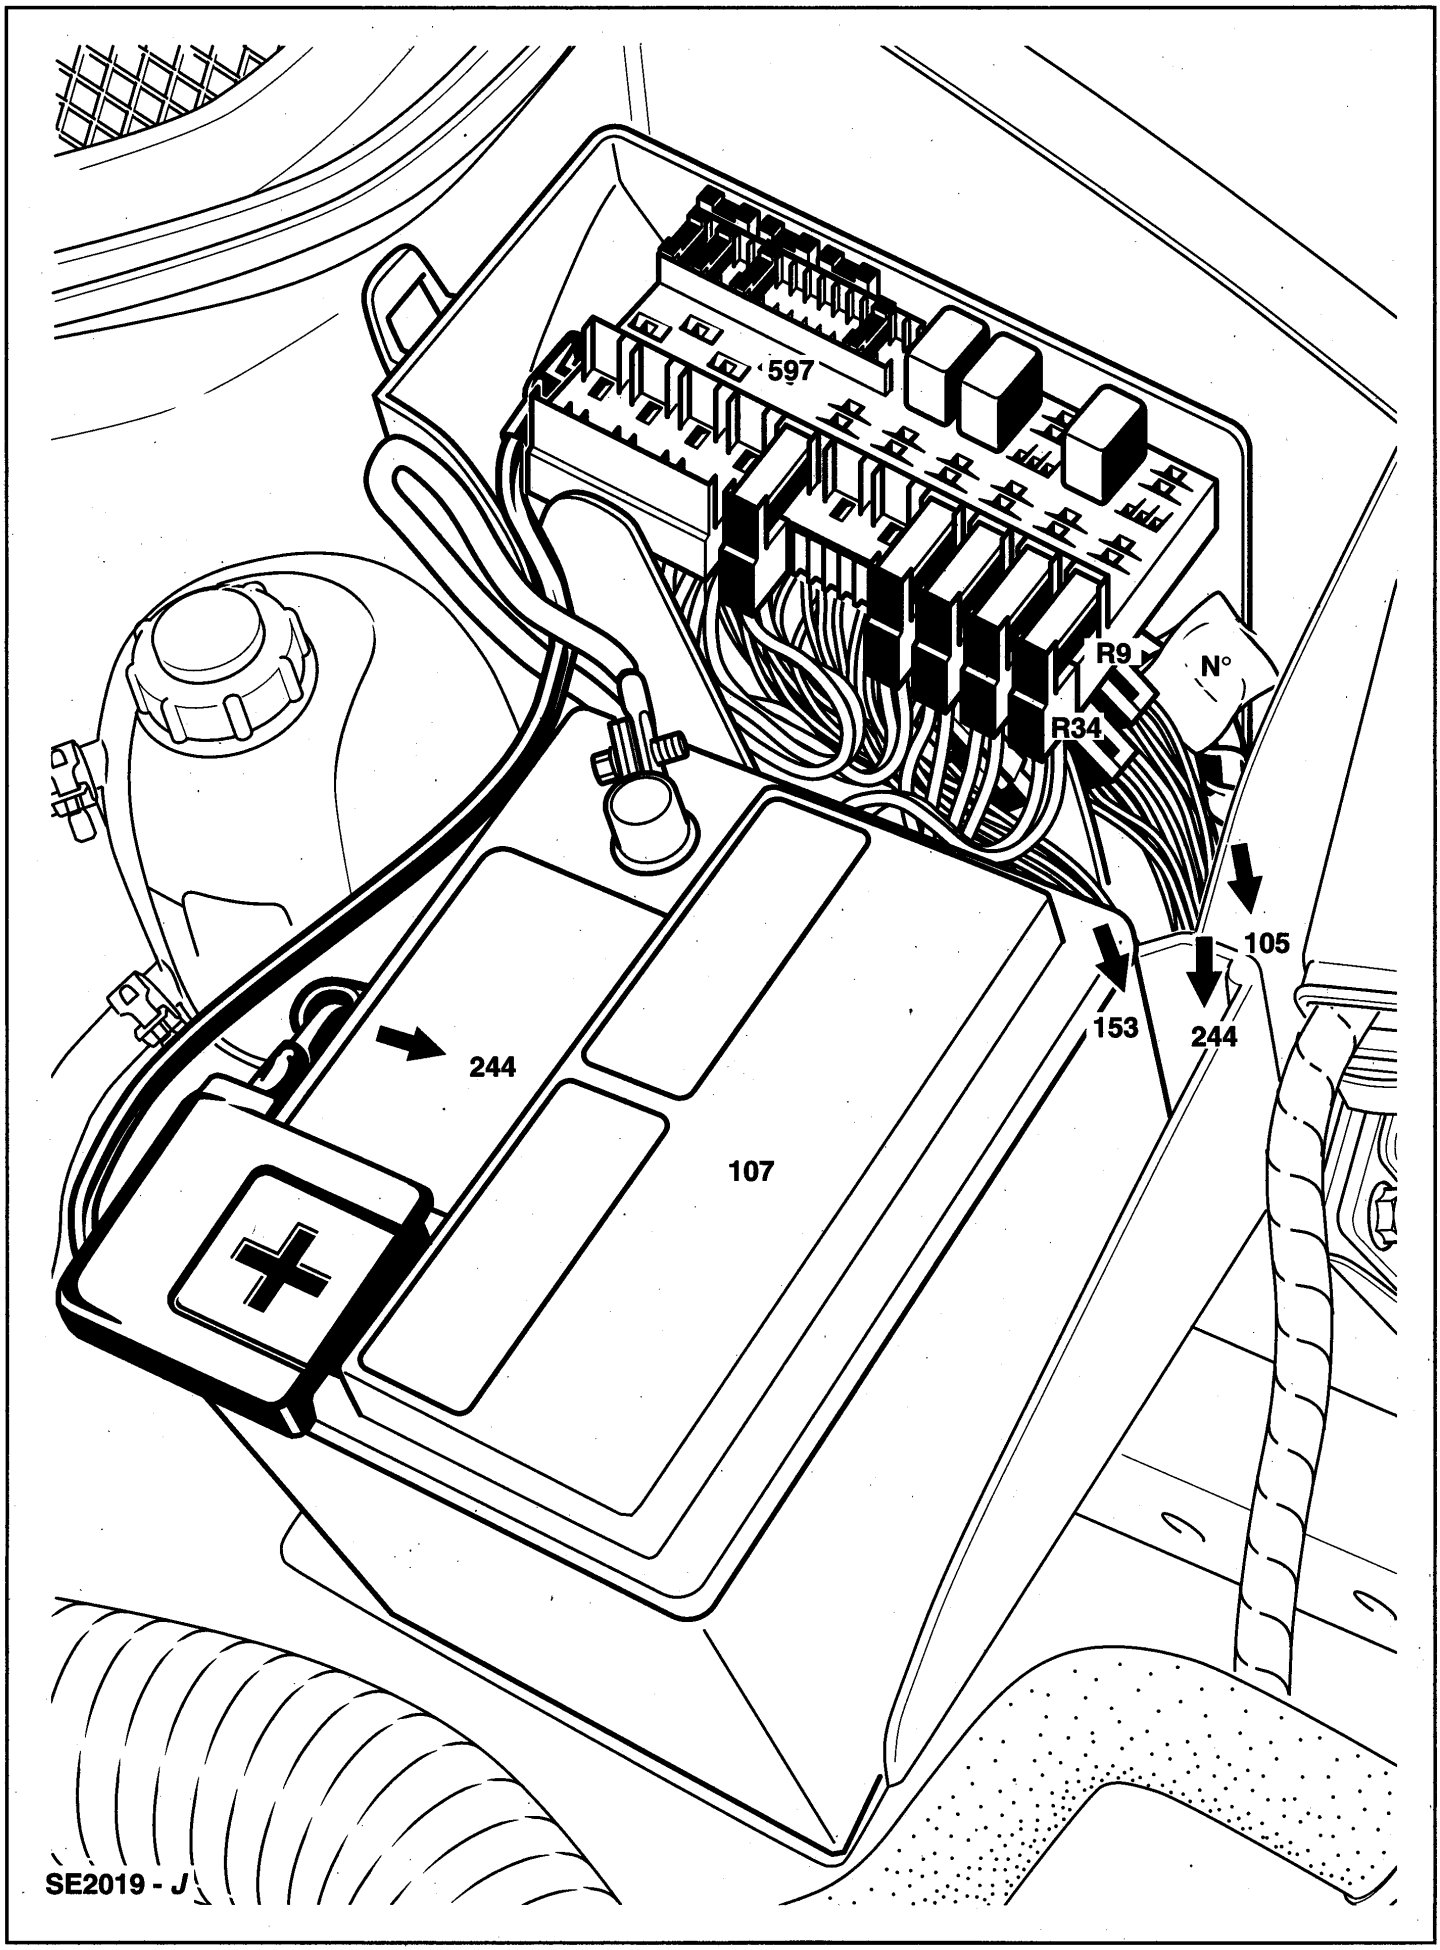

597
R9
N°
R34
105
153
244
244
107
SE2019 - J

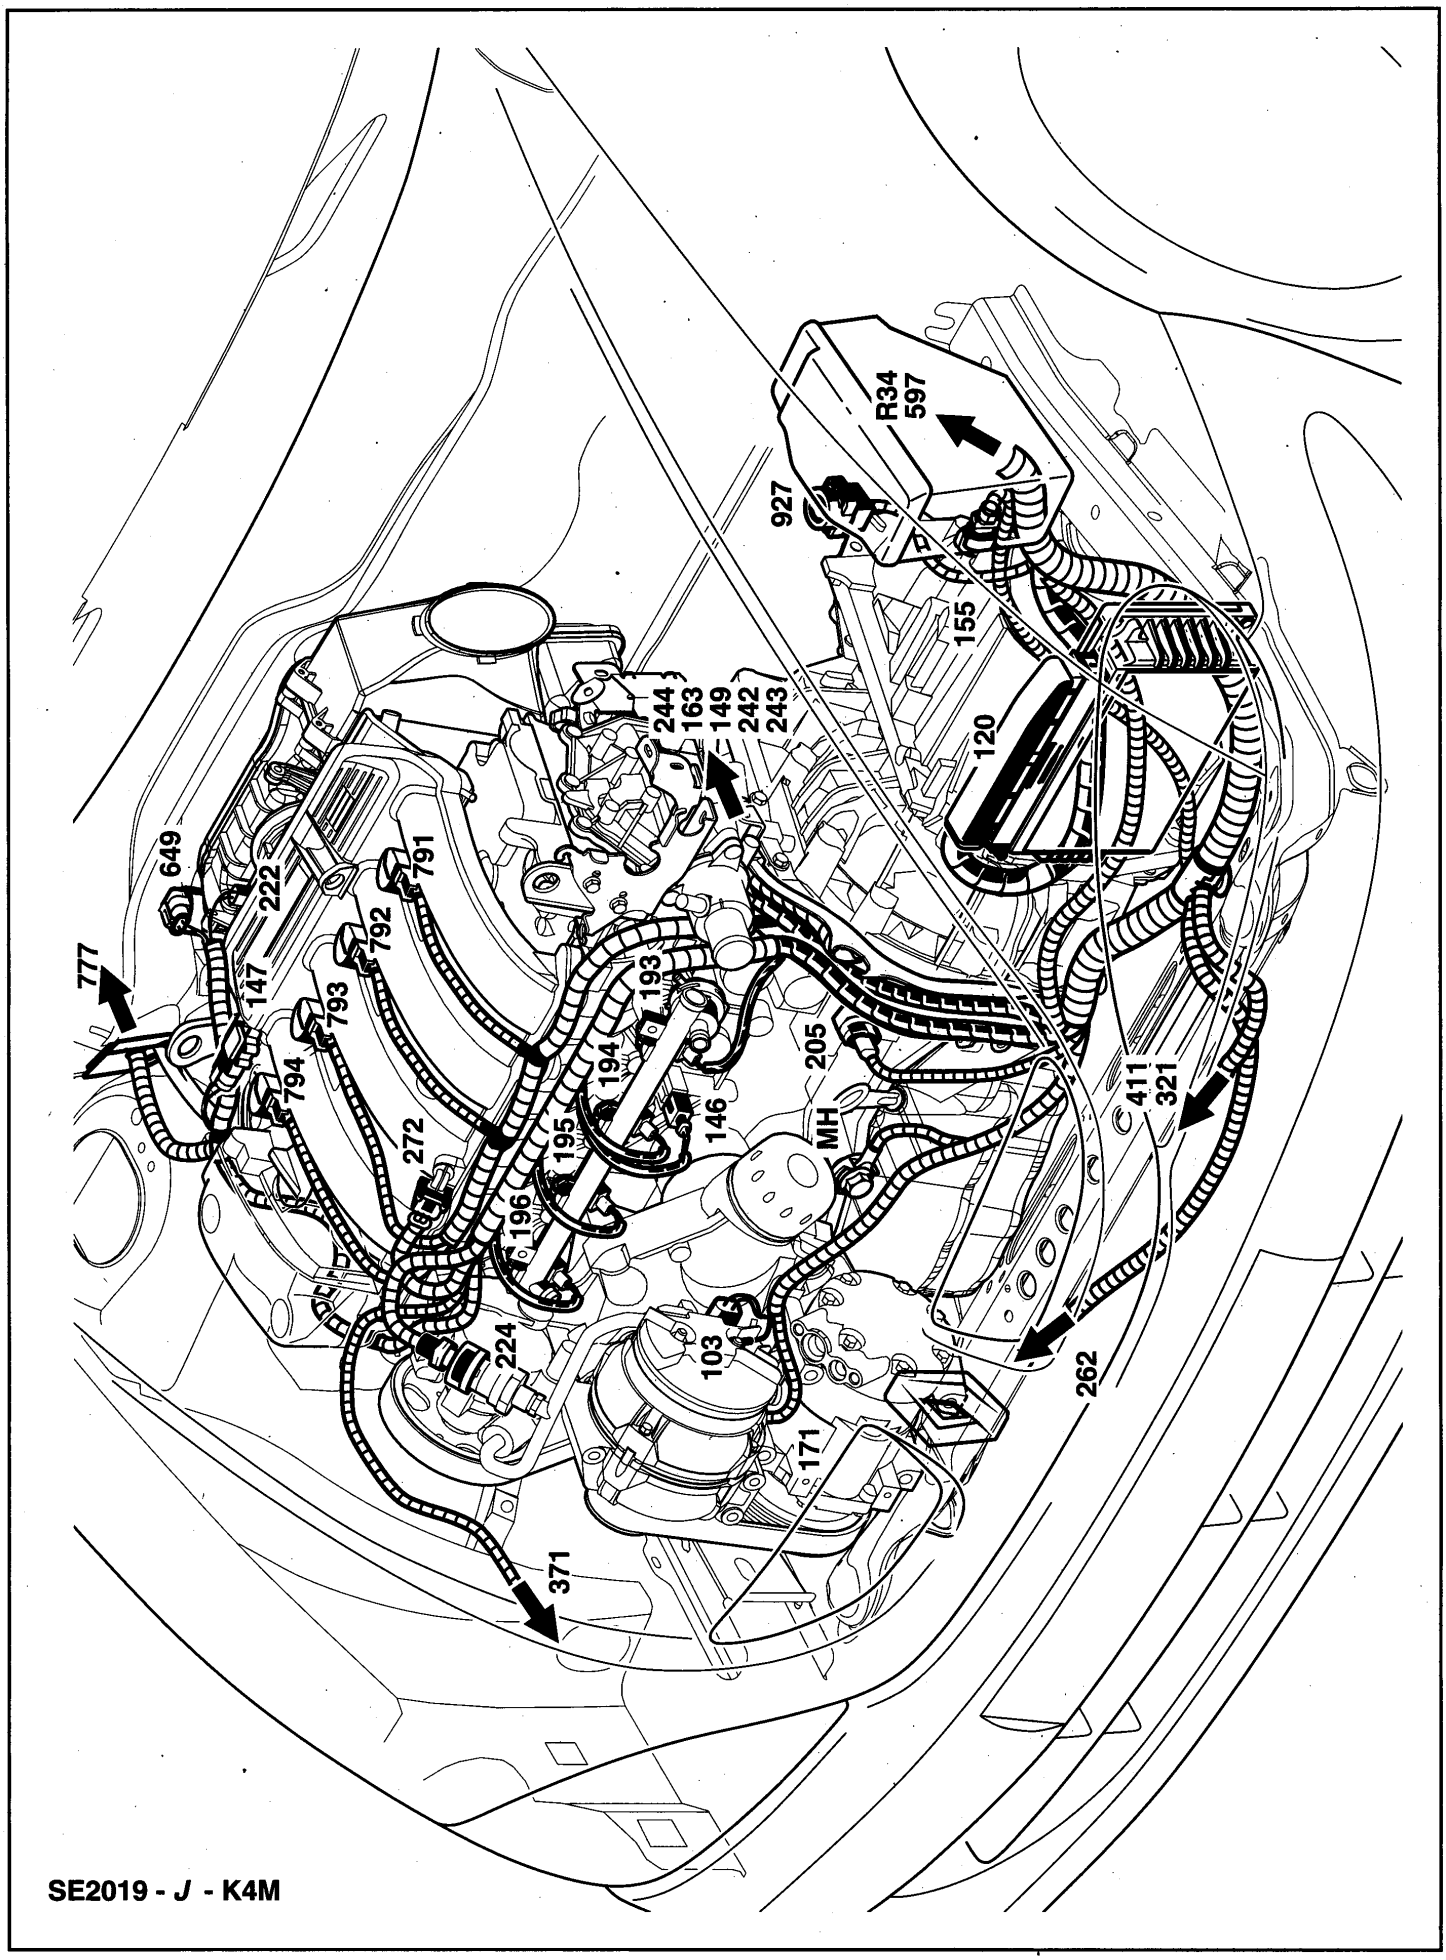
R34
597
927
155
120
244
163
149
242
243
649
222
791
792
793
794
147
777
193
194
195
196
272
224
146
205
MH
103
171
371
262
411
321


SE2019 - *J* - K4M

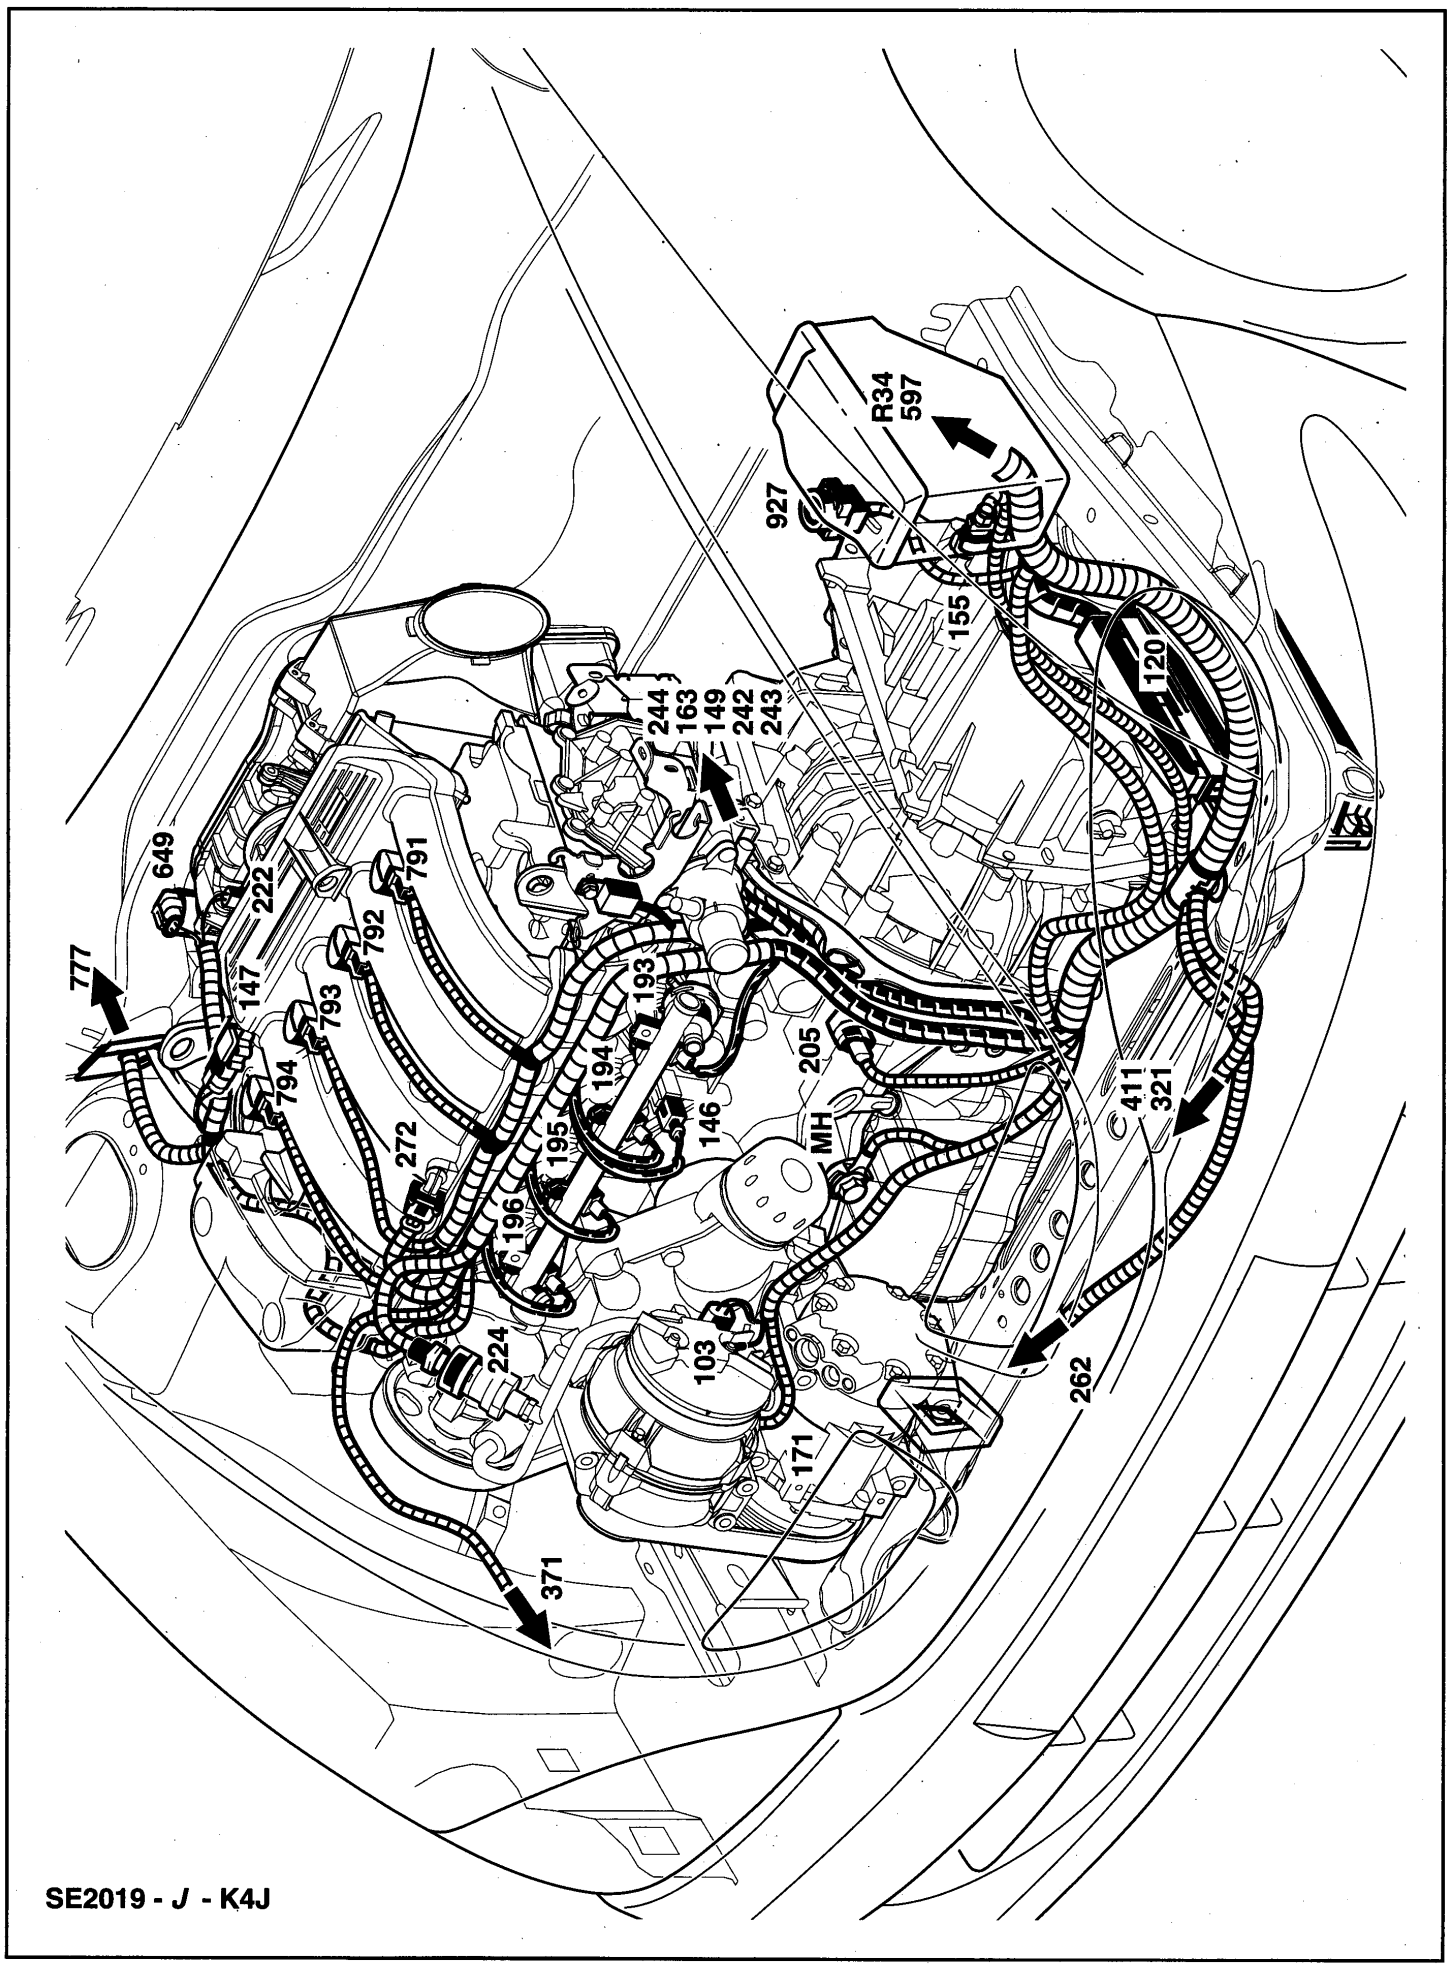
R34
597
927
155
120
244
163
149
242
243
649
222
791
792
793
794
147
777
193
194
195
196
272
146
205
MH
411
321
262
103
171
224
371


SE2019 - J - K4J

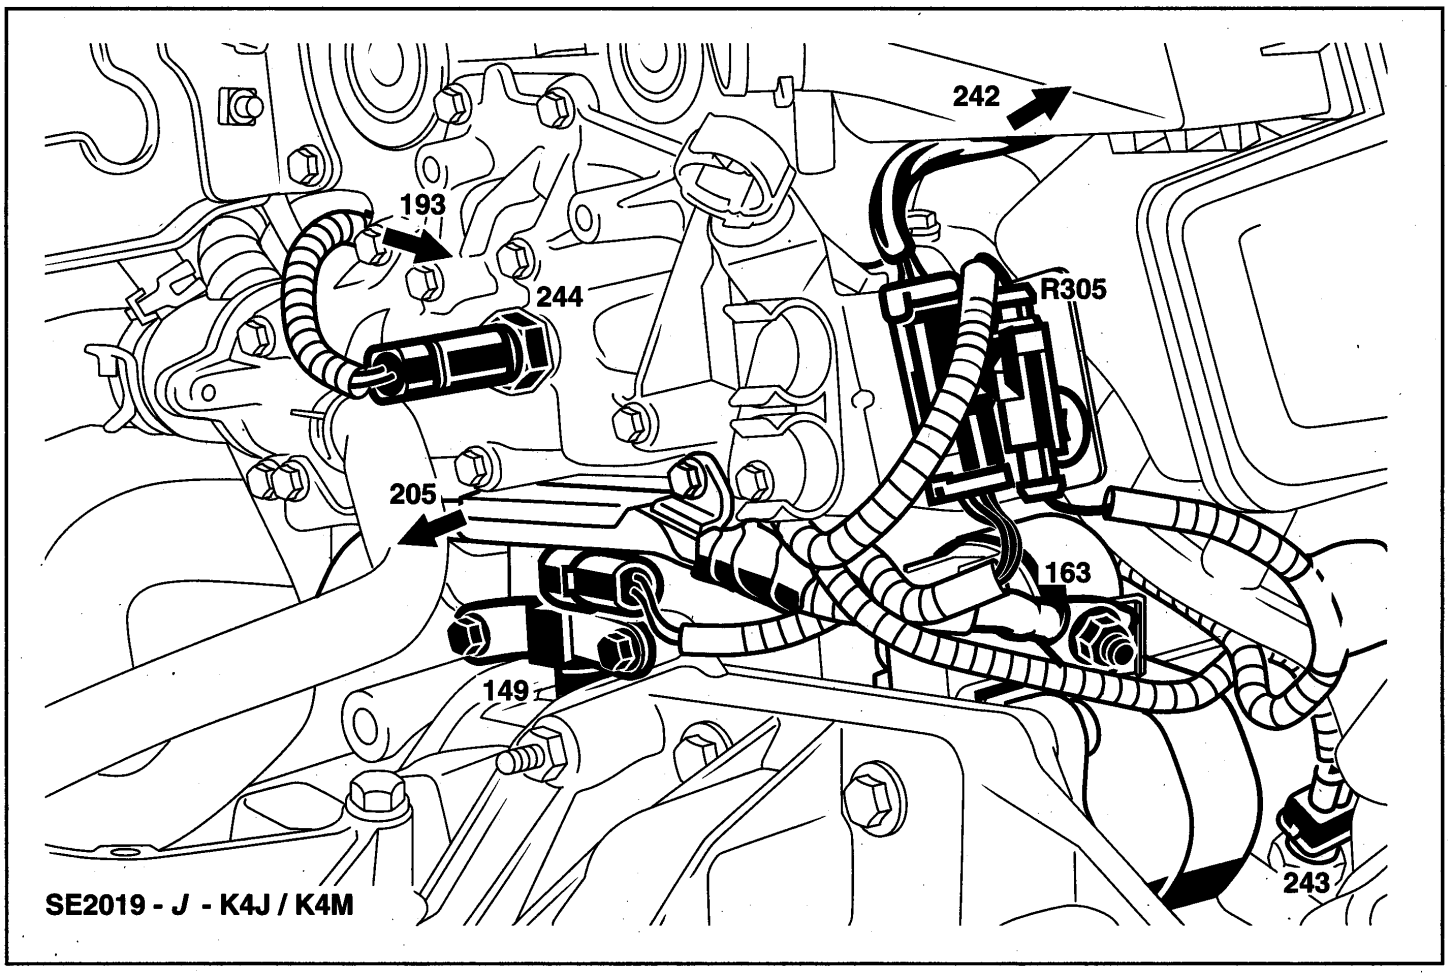


SE2019 - J - K4J / K4M

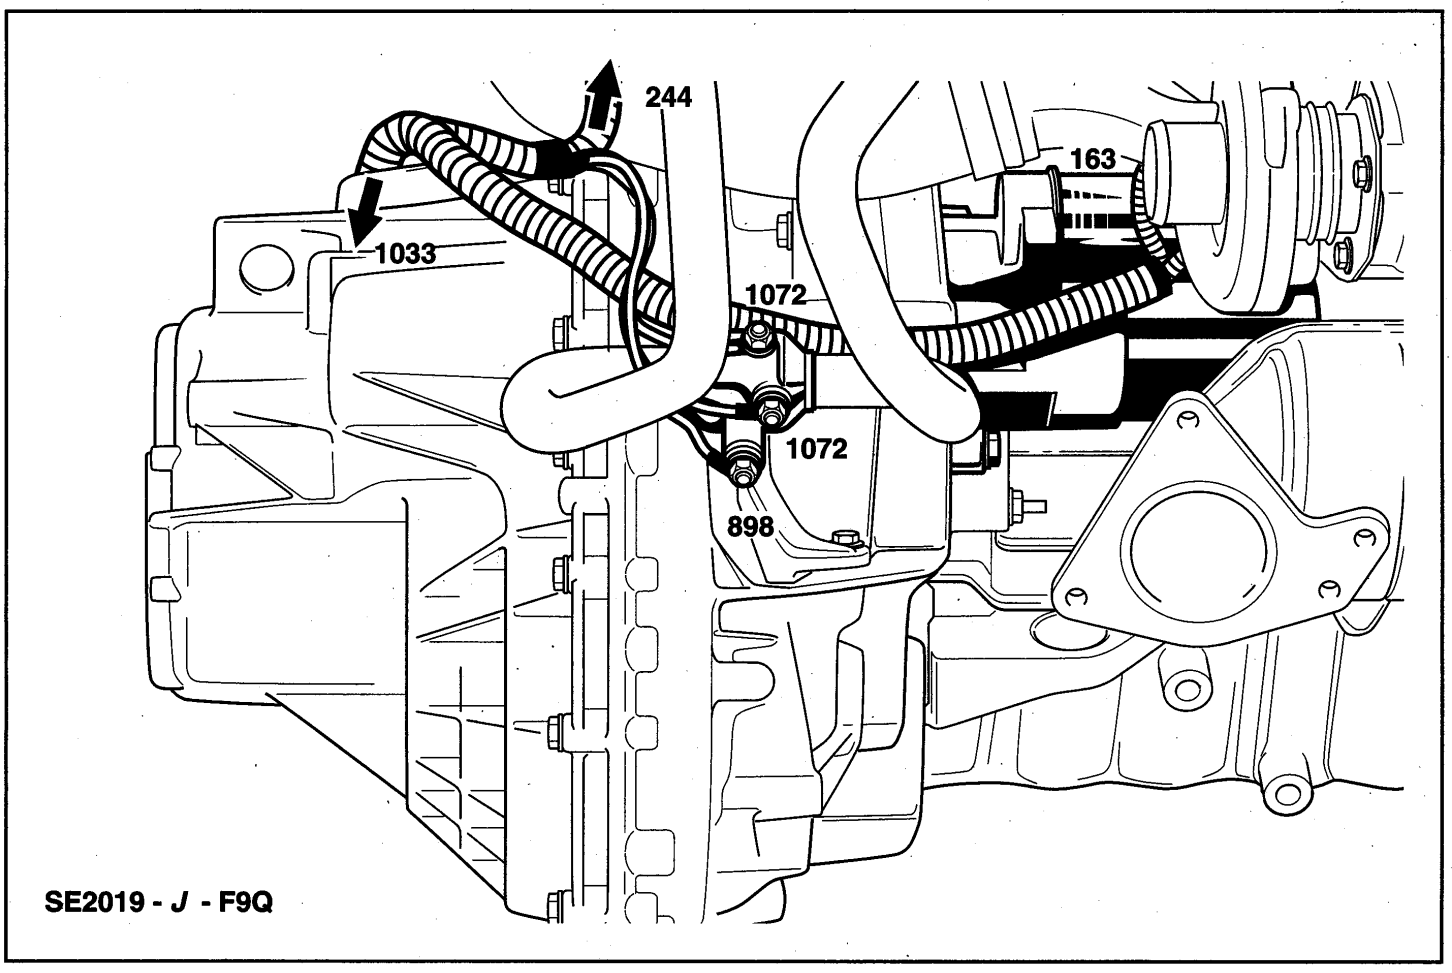


SE2019 - J - F9Q

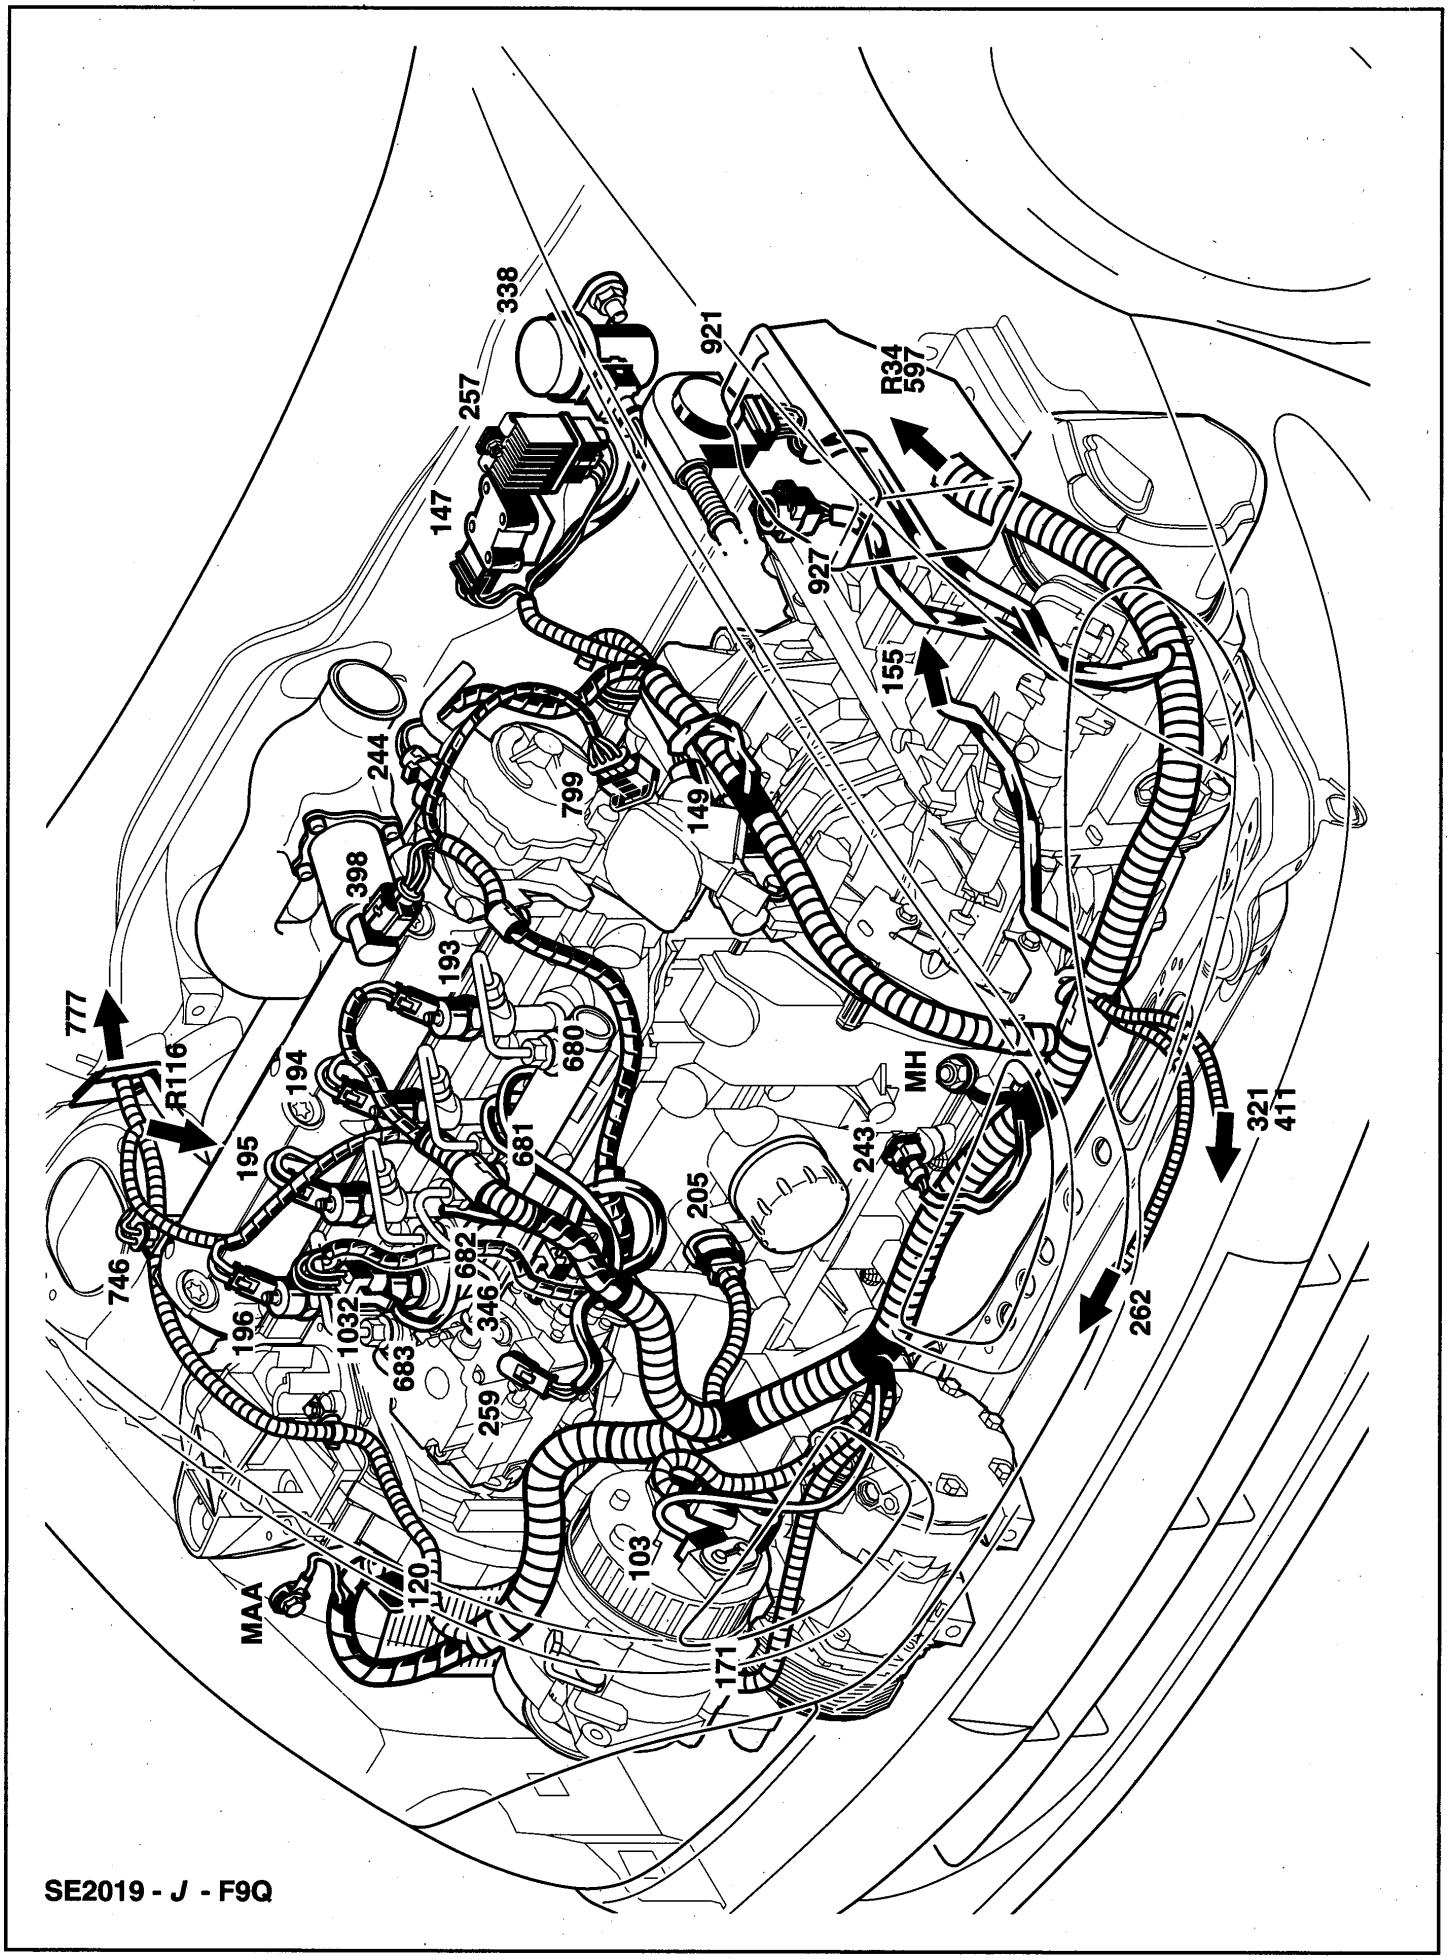

338
257
147
921
R34
597
927
155
244
799
149
398
193
680
777
R116
194
195
681
MH
243
205
321
411
746
682
196
1032
346
683
259
262
103
120
MAA
171
SE2019 - J - F9Q

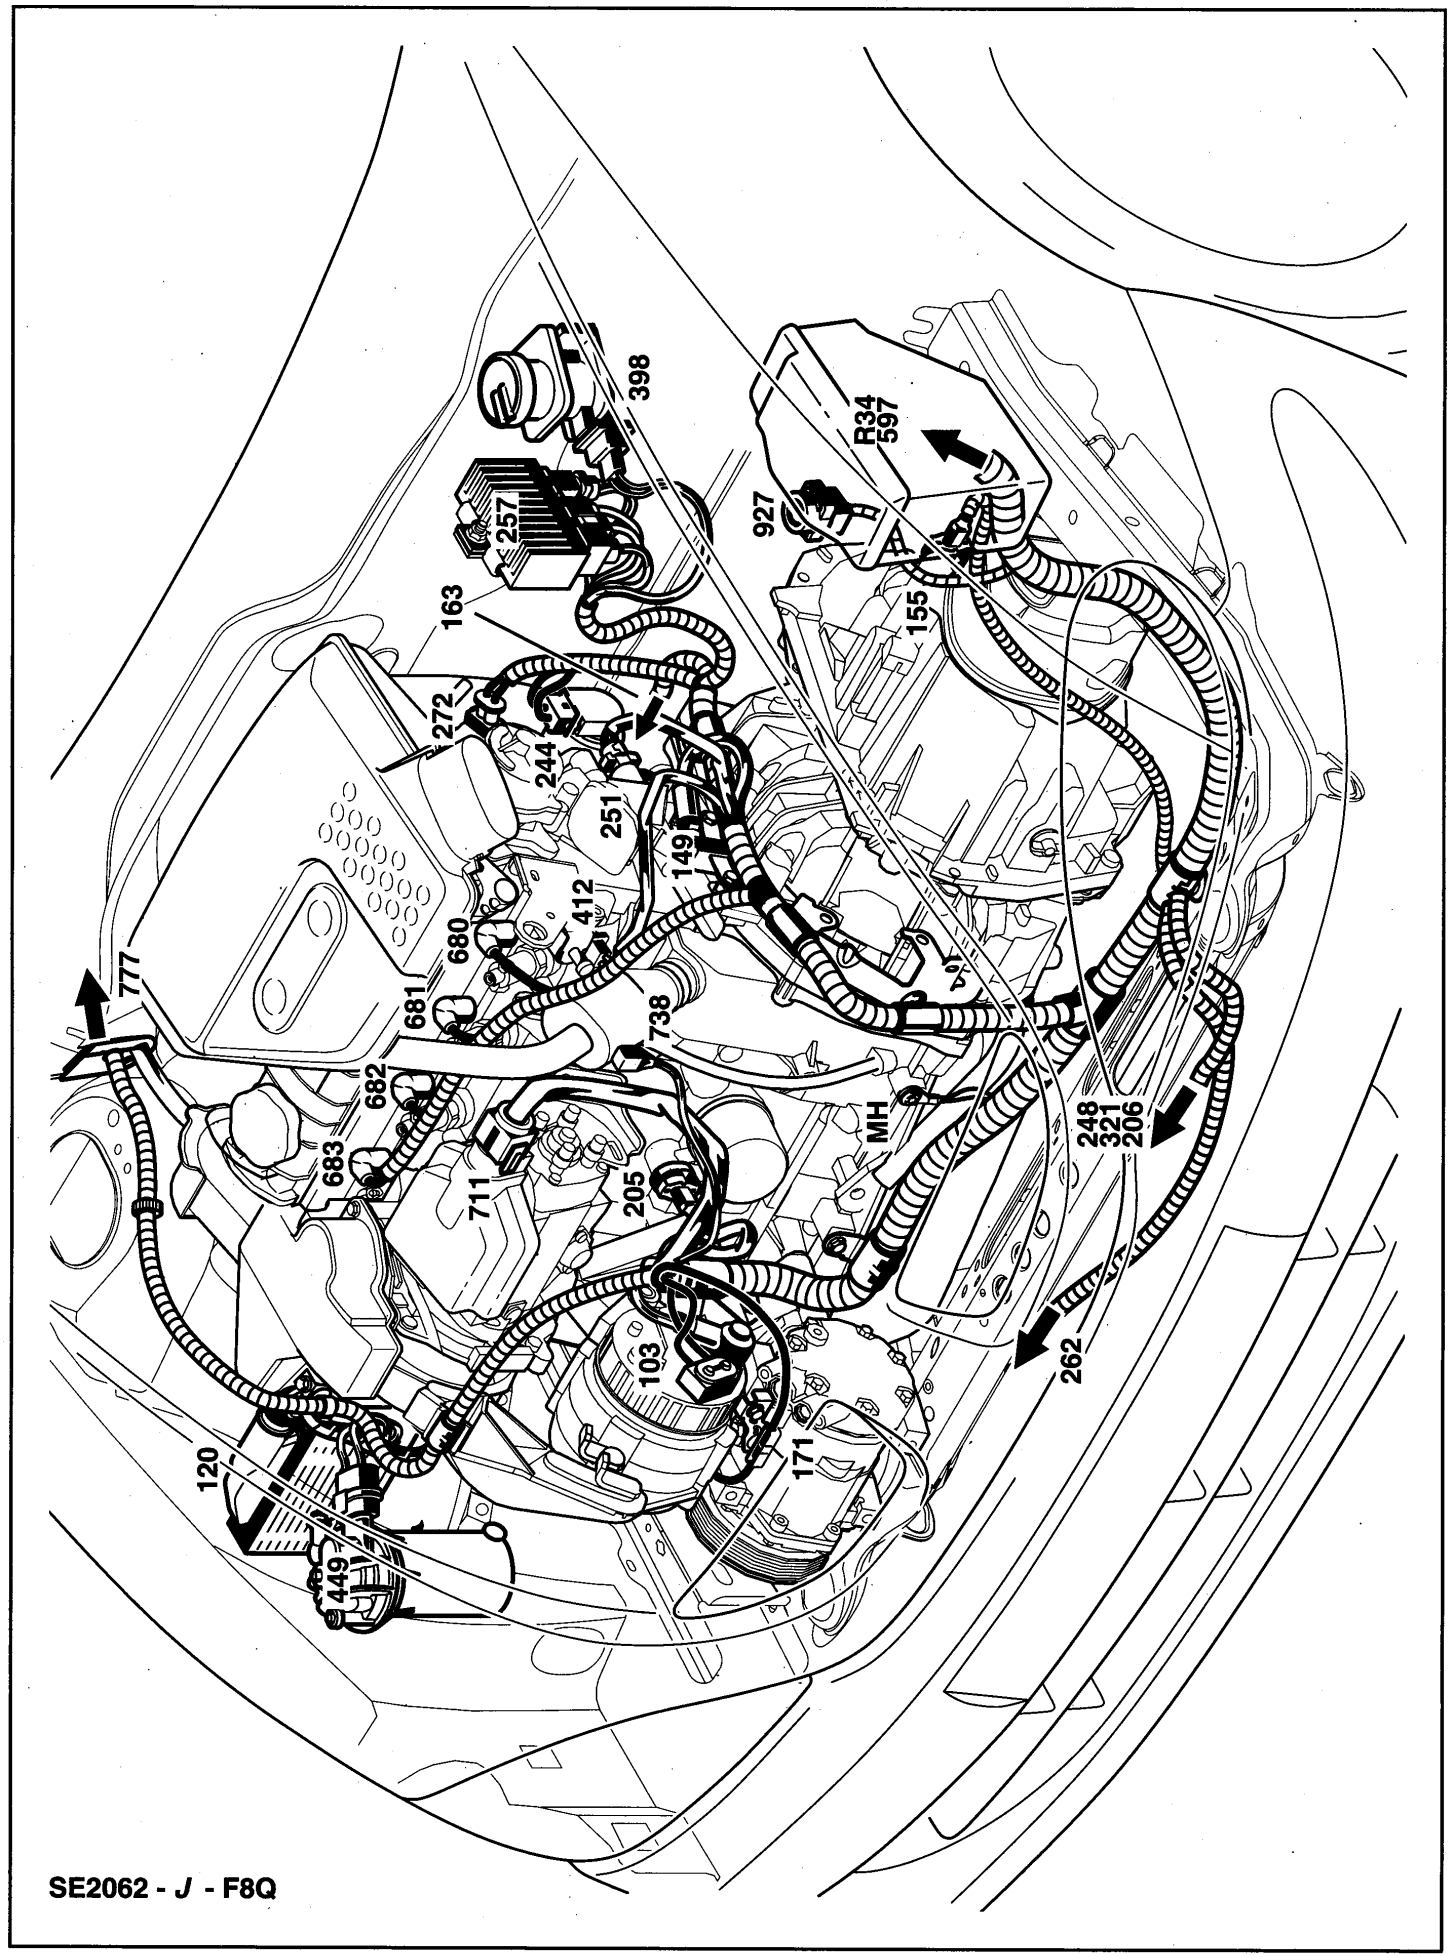
398
257
163
272
244
251
149
412
680
681
682
683
711
205
738
777
927
R34
597
155
MH
248
321
206
262
103
171
120
449


SE2062 - J - F8Q

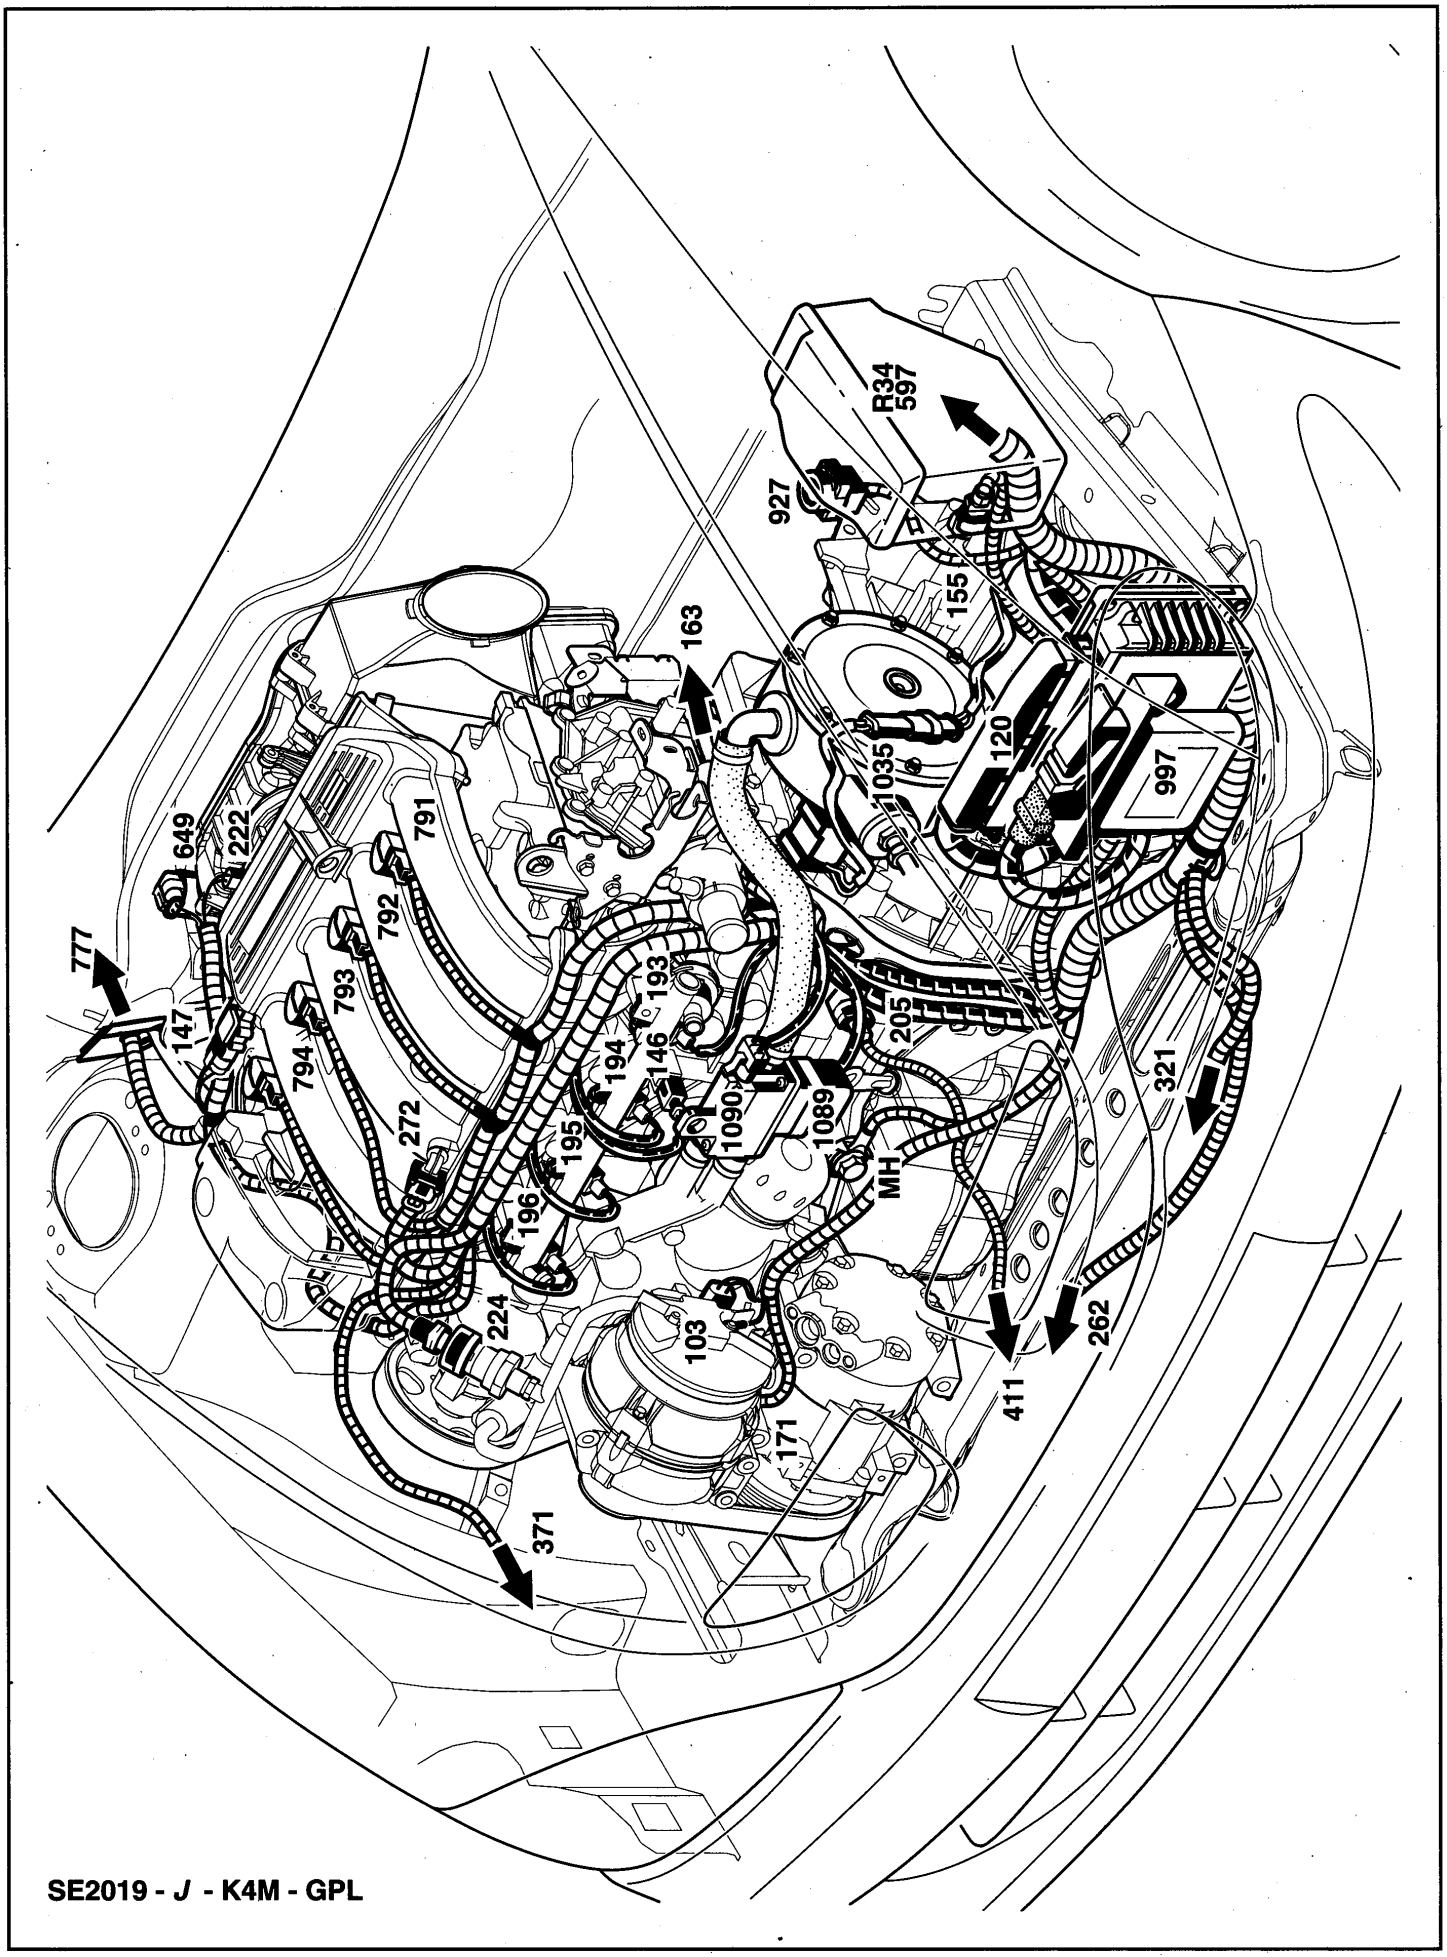


SE2019 - J - K4M - GPL

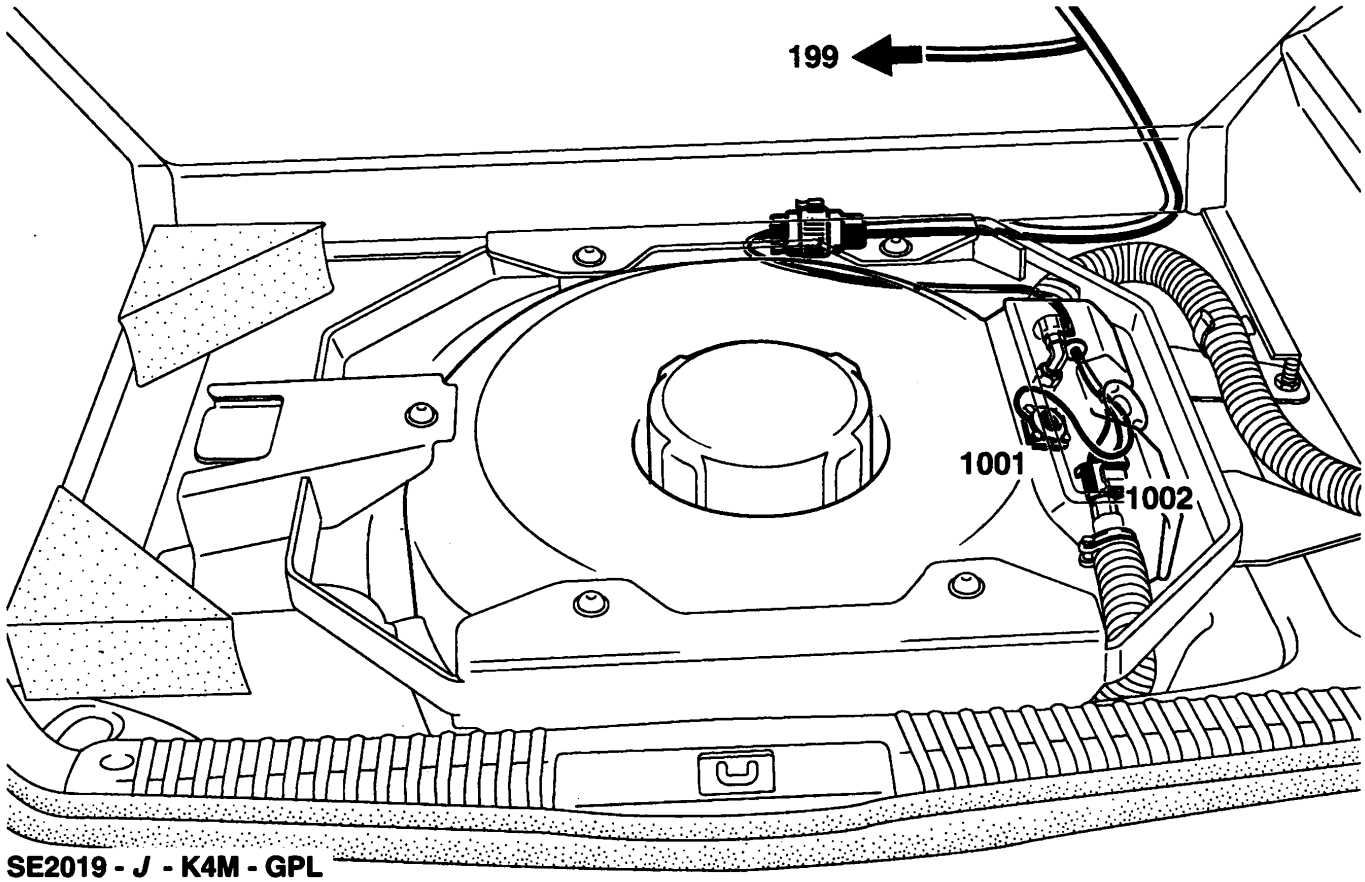

SE2019 - J - K4M - GPL

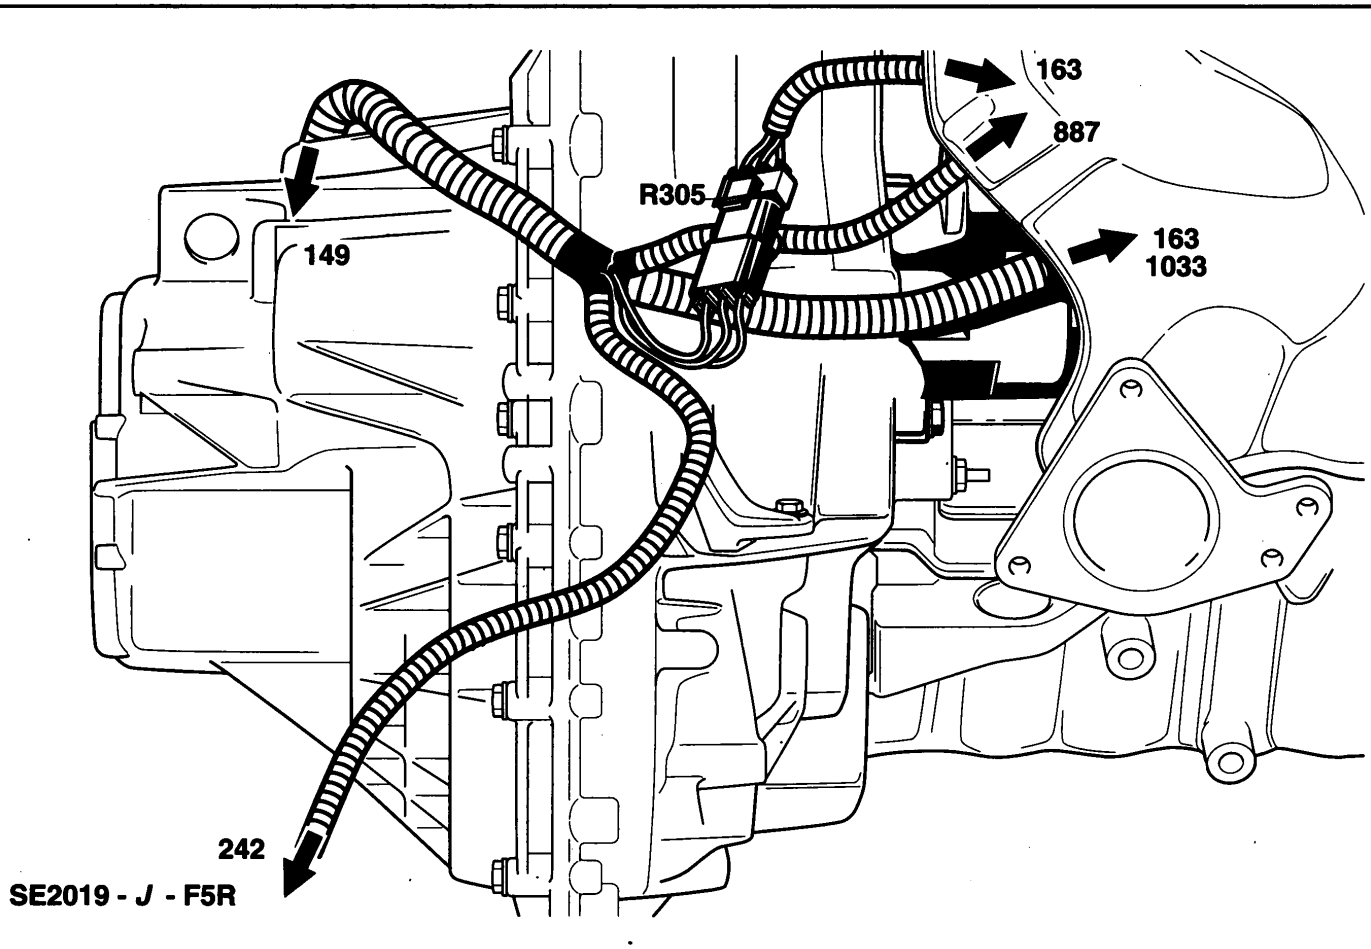

SE2019 - J - F5R

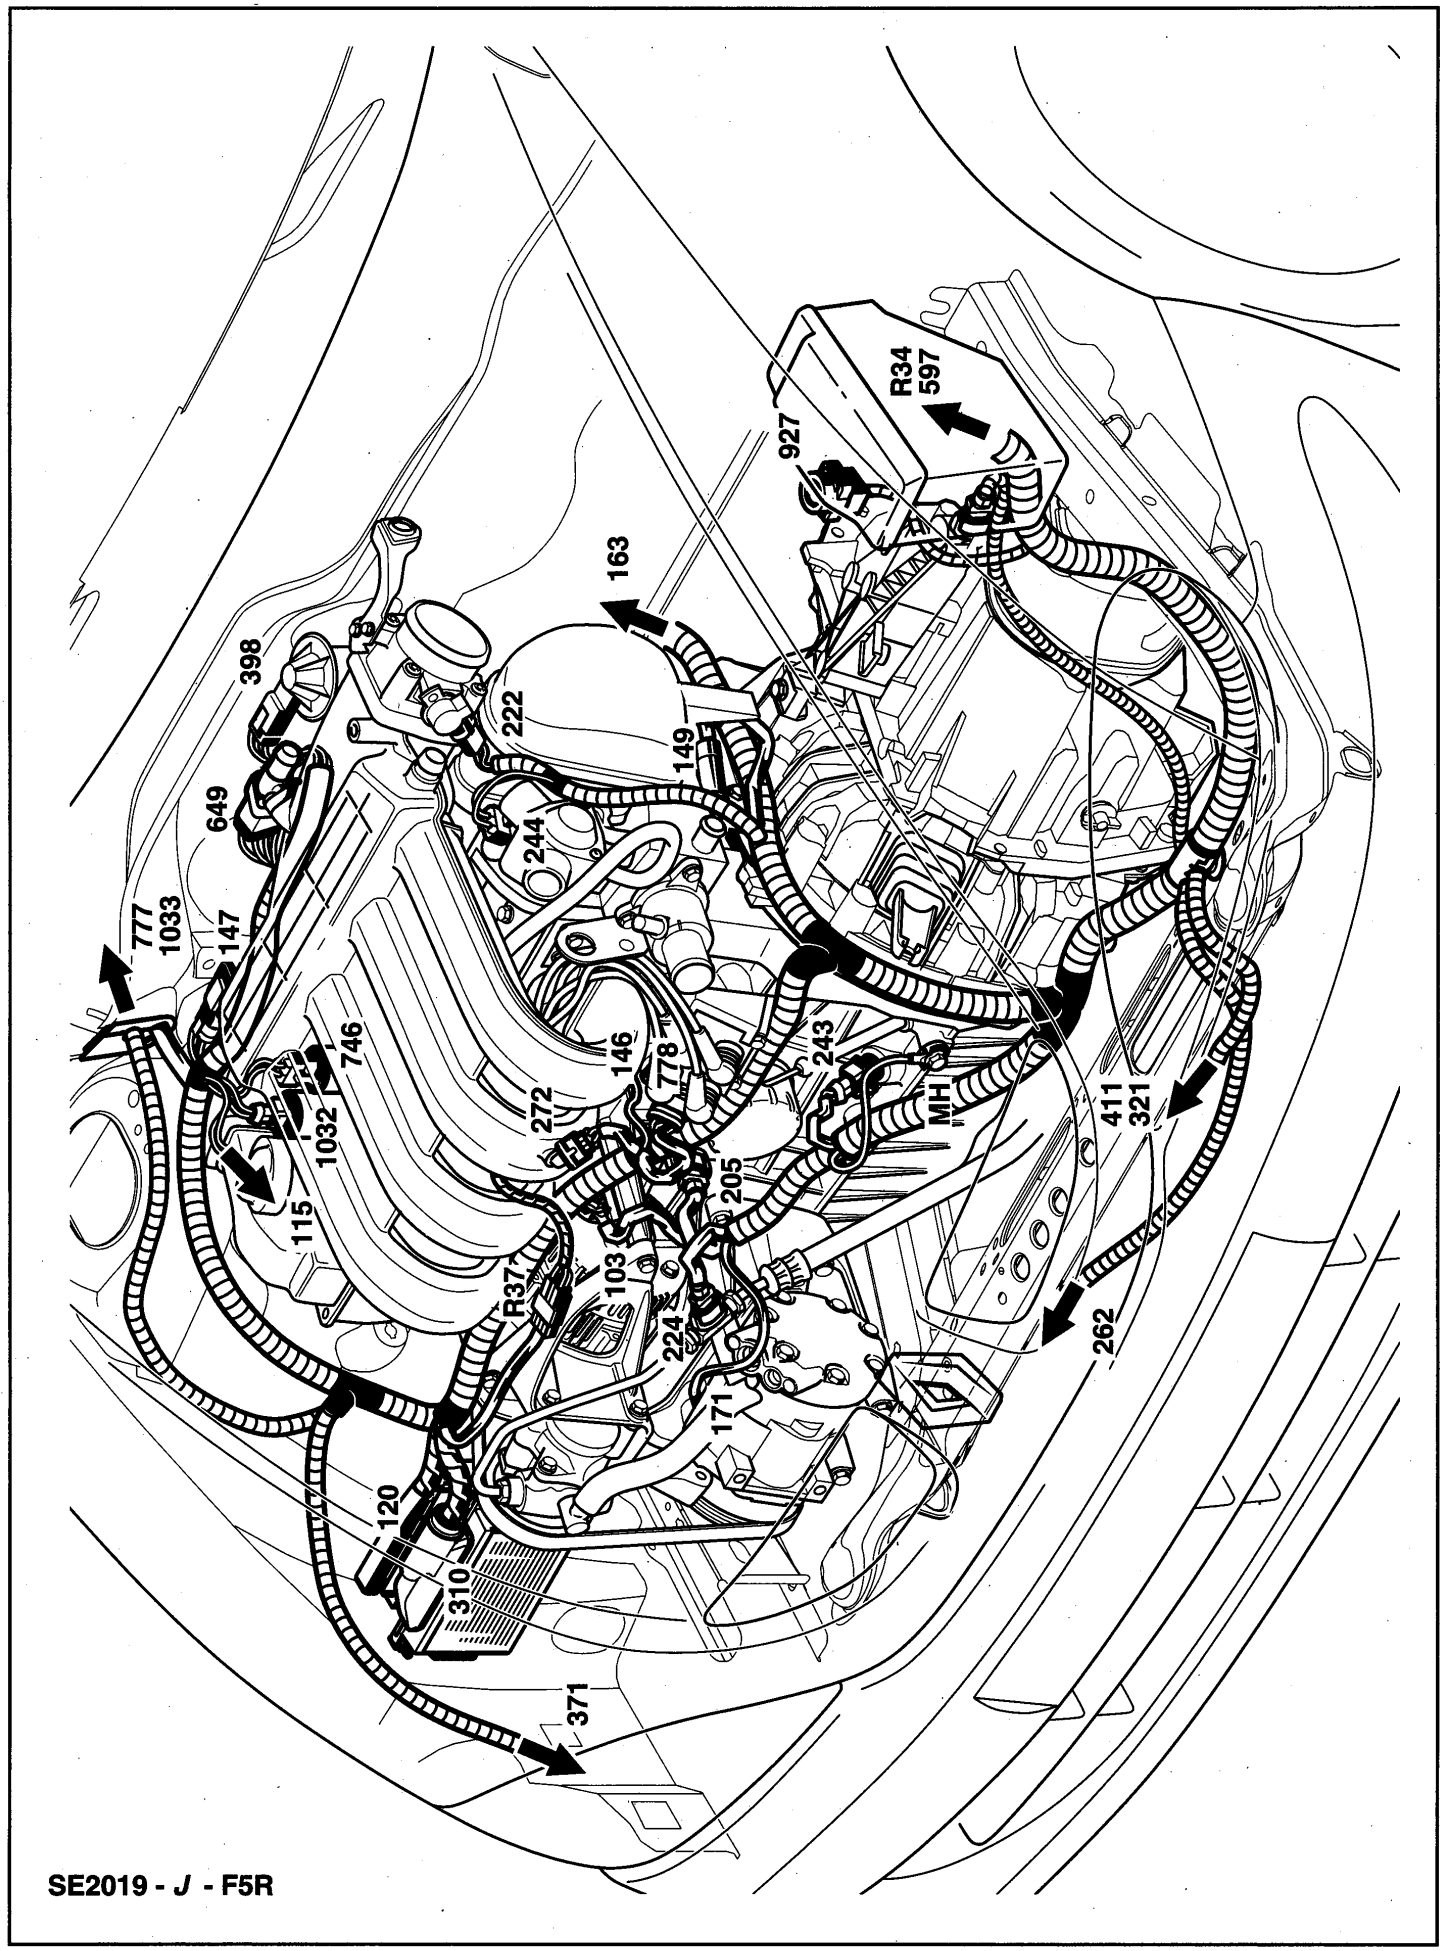
R34
597
927
163
398
222
149
649
244
777
1033
147
746
146
778
243
272
MH
411
321
1032
205
115
103
R37
224
262
171
120
310
371

SE2019 - *J* - F5R

Список сокращений

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
1 VIT	1 СТУПЕНЬ
2X6W	АУДИОСИСТЕМА 2×6 ВТ
2PORBA	ФУРГОН С РАСПАШНЫМИ ДВЕРЬМИ
2PORBP	ФУРГОН С РАСПАШНЫМИ НЕЗАСТЕКЛЕННЫМИ ДВЕРЬМИ
2X5KI	АВТОМАГНИТОЛА 2×5 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
2X5KS	АВТОМАГНИТОЛА 2×5 ВТ БЕЗ ФУНКЦИИ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
2X6CD	АУДИОСИСТЕМА 2×6 ВТ С ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ
2X6K7	КАССЕТНАЯ АВТОМАГНИТОЛА 2×6 ВТ
2X6KI	АВТОМАГНИТОЛА 2×6 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
2X6KS	АВТОМАГНИТОЛА 2×6 ВТ БЕЗ ФУНКЦИИ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
2X6W	АУДИОСИСТЕМА 2×6 ВТ
2X8KI	АВТОМАГНИТОЛА 2×8 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
3500 KG	МАКСИМАЛЬНО РАЗРЕШЕННАЯ МАССА АВТОМОБИЛЯ С ПОЛНОЙ НАГРУЗКОЙ 3500 КГ
3VIT	3 СТУПЕНИ
4500 KG	МАКСИМАЛЬНО РАЗРЕШЕННАЯ МАССА АВТОМОБИЛЯ С ПОЛНОЙ НАГРУЗКОЙ 4,5 ТОННЫ
WIT	4 СТУПЕНИ
4X1 SCI	АУДИОСИСТЕМА 4×15 ВТ С ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X1 5CS	АУДИОСИСТЕМА 4×15 ВТ С ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ БЕЗ ФУНКЦИИ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X1 SKI	АВТОМАГНИТОЛА 4×15 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X1 5KP	АУДИОСИСТЕМА 4×15 ВТ С КАССЕТНЫМ ПРОИГРЫВАТЕЛЕМ И ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X20WI	АВТОМАГНИТОЛА 4×20 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X25KI	АВТОМАГНИТОЛА 4×25 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X25KJ	АВТОМАГНИТОЛА 4×25 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X25 WI	АВТОМАГНИТОЛА 4×25 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X30W	АУДИОСИСТЕМА 430 ВТ
4X6CD	АУДИОСИСТЕМА 4×6 ВТ С ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ
4X6CI	АУДИОСИСТЕМА 4×6 ВТ С ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X6K7	КАССЕТНАЯ АВТОМАГНИТОЛА 4×6 ВТ

Список сокращений

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
4X6KI	АВТОМАГНИТОЛА 4×6 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X6W	АУДИОСИСТЕМА 46 ВТ
4X6 WI	АВТОМАГНИТОЛА 4×6 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X6WS	АВТОМАГНИТОЛА 4×6 ВТ БЕЗ ФУНКЦИИ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
4X7W	АУДИОСИСТЕМА 4×7 ВТ
5000 KG	МАКСИМАЛЬНО РАЗРЕШЕННАЯ МАССА АВТОМОБИЛЯ С ПОЛНОЙ НАГРУЗКОЙ 5 ТОНН
5500 KG	МАКСИМАЛЬНО РАЗРЕШЕННАЯ МАССА АВТОМОБИЛЯ С ПОЛНОЙ НАГРУЗКОЙ 5,5 ТОНН
5 VIT	5 СТУПЕНЕЙ
6000 KG	МАКСИМАЛЬНО РАЗРЕШЕННАЯ МАССА АВТОМОБИЛЯ С ПОЛНОЙ НАГРУЗКОЙ 6 ТОНН
6500 KG	МАКСИМАЛЬНО РАЗРЕШЕННАЯ МАССА АВТОМОБИЛЯ С ПОЛНОЙ НАГРУЗКОЙ 6,5 ТОНН
ABCO01	ПОДУШКА БЕЗОПАСНОСТИ ВОДИТЕЛЯ
ABLAV	ПЕРЕДНЯЯ БОКОВАЯ ПОДУШКА БЕЗОПАСНОСТИ
ABPA 01	ПОДУШКА БЕЗОПАСНОСТИ ПАССАЖИРА
ABR	АНТИБЛОКИРОВОЧНАЯ СИСТЕМА ТОРМОЗОВ
АБС	АНТИБЛОКИРОВОЧНАЯ СИСТЕМА ТОРМОЗОВ
ABS1	4-КАНАЛЬНАЯ АБС
ABS2	УПРОЩЕННАЯ АБС
ACPLAR	ВЕЩЕВОЙ ОТСЕК ПО ЗАДНИМИ СИДЕНЬЯМИ + РОЗЕТКА ДЛЯ ПОДКЛЮЧЕНИЯ ДОПОЛНИТЕЛЬНОГО ОБОРУДОВАНИЯ
ADAC	БОРТОВОЙ КОМПЬЮТЕР
ADAGPL	АДАПТАЦИЯ ПОД ГАЗОВОЕ ТОПЛИВО
ADNORM	УСИЛИТЕЛЬ РУЛЕВОГО УПРАВЛЕНИЯ, НОРМАЛЬНЫЙ РЕЖИМ РАБОТЫ
ADPARK	УСИЛИТЕЛЬ РУЛЕВОГО УПРАВЛЕНИЯ, РЕЖИМ РАБОТЫ ПРИ ПАРКОВКЕ
AFS	ИСПОЛНЕНИЯ ДЛЯ ЮАР
AIRBA1	ПОДУШКА БЕЗОПАСНОСТИ ЕВРОСТАНДАРТА
ALA1	ОХРАННАЯ СИГНАЛИЗАЦИЯ С ВКЛЮЧЕНИЕМ УКАЗАТЕЛЕЙ ПОВОРОТА В РЕЖИМЕ АВАРИЙНОЙ СИГНАЛИЗАЦИИ, ЗВУКОВОГО СИГНАЛА, БЛИЖНЕГО СВЕТА ФАР
ALA2	СВЕТОВОЙ СИГНАЛИЗАТОР + ЗВУКОВАЯ СИГНАЛИЗАЦИЯ
ALARME	ОХРАННАЯ СИГНАЛИЗАЦИЯ С ВКЛЮЧЕНИЕМ УКАЗАТЕЛЕЙ ПОВОРОТА В РЕЖИМЕ АВАРИЙНОЙ СИГНАЛИЗАЦИИ И БЛИЖНЕГО СВЕТА ФАР
ALASIR	ОХРАННАЯ СИГНАЛИЗАЦИЯ С СИРЕНОЙ МОЩНОСТЬЮ 100 ДБ
ALOUC	СВЕТОВОЙ СИГНАЛИЗАТОР НЕЗАСТЕГНУТОГО РЕМНЯ БЕЗОПАСНОСТИ
AMV	ИЗМЕНЯЕМАЯ ЖЕСТКОСТЬ ПОДВЕСКИ
AMVA	ИЗМЕНЯЕМАЯ ЖЕСТКОСТЬ ПОДВЕСКИ
ANSRAD	С НАРУЖНОЙ АНТЕННОЙ, БЕЗ АУДИОСИСТЕМЫ
ANTID	СИСТЕМА ЭЛЕКТРОННОЙ ПРОТИВОУГОННОЙ БЛОКИРОВКИ ДВИГАТЕЛЯ

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
ANTIDI	СИСТЕМА ЭЛЕКТРОННОЙ ПРОТИВОУГОННОЙ БЛОКИРОВКИ ДВИГАТЕЛЯ + С ОХРАННОЙ СИГНАЛИЗАЦИЕЙ
ANTIV	С ОХРАННОЙ СИГНАЛИЗАЦИЕЙ
ANTVOL	С ОХРАННОЙ СИГНАЛИЗАЦИЕЙ С ИК ДИСТАНЦИОННЫМ УПРАВЛЕНИЕМ
AOEF	С СИГНАЛИЗАТОРОМ О НЕВЫКЛЮЧЕННОМ НАРУЖНОМ ОСВЕЩЕНИИ
ARB	ИСПОЛНЕНИЕ ДЛЯ САУДОВСКОЙ АРАВИИ
ARG	ИСПОЛНЕНИЕ ДЛЯ АРГЕНТИНЫ
ASFIXE	С СИГНАЛИЗАТОРОМ ПРЕВЫШЕНИЯ ЗАДАННОЙ СКОРОСТИ
ASPROG	ПРОГРАММИРОВАННЫЙ СИГНАЛИЗАТОР ПРЕВЫШЕНИЯ ЗАДАННОЙ СКОРОСТИ
ASR	С ПРОТИВОПРОБУКСОВОЧНОЙ СИСТЕМОЙ
ATAVEL	ПОДГОЛОВНИК ПЕРЕДНЕГО СИДЕНЬЯ С ЭЛЕКТРОПРИВОДОМ
ATREM	РОЗЕТКА БУКСИРОВОЧНОГО УСТРОЙСТВА
AUS	ИСПОЛНЕНИЕ ДЛЯ АВСТРАЛИИ
AUT	ИСПОЛНЕНИЕ ДЛЯ АВСТРИИ
AVREPL	С БОКОВЫМИ ПОВТОРИТЕЛЯМИ УКАЗАТЕЛЕЙ ПОВОРОТА
B29	RENAULT 25, СЕДАН
B40	RENAULT 5, ПЯТИДВЕРНЫЙ ХЭТЧБЕК
B48	RENAULT 21 СЕДАН
B53	RENAULT 19, ПЯТИДВЕРНЫЙ ХЭТЧБЕК
B54	СЕДАН SAFRANE
B64	ПЯТИДВЕРНЫЙ ХЭТЧБЕК «MEGANE»
B65	ПЯТИДВЕРНЫЙ ХЭТЧБЕК «CLIO»
BATR02	АККУМУЛЯТОРНАЯ БАТАРЕЯ ЭЛЕКРОАВТОМОБИЛЯ ТИПА 02
BATR03	АККУМУЛЯТОРНАЯ БАТАРЕЯ ЭЛЕКРОАВТОМОБИЛЯ ТИПА 03
BEL	ИСПОЛНЕНИЕ ДЛЯ БЕЛЬГИИ
BICARB	ДВУХТОПЛИВНОЕ ИСПОЛНЕНИЕ
BR	ДОРОЖНОЕ ПОЛОТНО ХОРОШЕГО КАЧЕСТВА
BRK	АВТОМОБИЛЬ С КУЗОВОМ УНИВЕРСАЛ
BVA	АКП
BVA3	3-СТУПЕНЧАТАЯ АКП
BVA4	4-СТУПЕНЧАТАЯ АКП
BVM	МЕХАНИЧЕСКАЯ КП
BVM5	МЕХАНИЧЕСКАЯ КП 5-СТУПЕНЧАТАЯ
C40	RENAULT 5, ТРЕХДВЕРНЫЙ ХЭТЧБЕК
C53	RENAULT 19, ТРЕХДВЕРНЫЙ ХЭТЧБЕК
C65	CLIO ТРЕХДВЕРНЫЙ ХЭТЧБЕК
CA	КОНДИЦИОНЕР
CAREG	КЛИМАТИЧЕСКАЯ УСТАНОВКА С АВТОМАТИЧЕСКИМ УПРАВЛЕНИЕМ
CATADI	КАТАЛИТИЧЕСКИЙ НЕЙТРАЛИЗАТОР, ДИЗЕЛЬНЫЙ ДВИГАТЕЛЬ
CATOEL	СКЛАДНАЯ МЯГКАЯ КРЫША С ЭЛЕКТРОПРИВОДОМ
CATOMA	СКЛАДНАЯ МЯГКАЯ КРЫША С МЕХАНИЧЕСКИМ ПРИВОДОМ

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
CDCOF	CD-ЧЕЙНДЖЕР, УСТАНАВЛИВАЕМЫЙ В БАГАЖНОМ ОТДЕЛЕНИИ
CDISC	ПРОИГРЫВАТЕЛЬ КОМПАКТ-ДИСКОВ
CHAAUG	С УВЕЛИЧЕННОЙ ПОЛЕЗНОЙ НАГРУЗКОЙ
CHANOR	С НОРМАЛЬНОЙ ПОЛЕЗНОЙ НАГРУЗКОЙ
CHAREG	СИСТЕМА ОТОПЛЕНИЯ И ВЕНТИЛЯЦИИ С АВТОМАТИЧЕСКИМ УПРАВЛЕНИЕМ
CHAUD	МОДИФИКАЦИЯ ДЛЯ СТРАН С ЖАРКИМ КЛИМАТОМ
CHAUFA	ДОПОЛНИТЕЛЬНЫЙ ОТОПИТЕЛЬ
CHAUFO	ШТАТНАЯ СИСТЕМА ОТОПЛЕНИЯ
CHFUFR	СИСТЕМА ОТОПЛЕНИЯ И ВЕНТИЛЯЦИИ С АВТОМАТИЧЕСКИМ УПРАВЛЕНИЕМ
CHBPUB	КАБЕЛЬ К РОЗЕТКЕ ДЛЯ ЗАРЯДКИ ЭЛЕКТРОМОБИЛЯ
CHL	ИСПОЛНЕНИЕ ДЛЯ ЧИЛИ
CHOREC	ОБЫЧНАЯ СИСТЕМА ОТОПЛЕНИЯ С РЕЦИРКУЛЯЦИЕЙ ВОЗДУХА
COA	СИСТЕМА ПОДДЕРЖАНИЯ ВЫСОТЫ КУЗОВА
COAMEM	СИДЕНЬЕ ВОДИТЕЛЯ С ЗАПОМИНАНИЕМ ПОЛОЖЕНИЯ
COARLO	СИДЕНЬЕ ВОДИТЕЛЯ С РЕГУЛИРОВКОЙ ПОЯСНИЧНОГО ПОДПОРА
COL	ИСПОЛНЕНИЕ ДЛЯ КОЛУМБИИ
COLMEM	РУЛЕВАЯ КОЛОНКА С РЕГУЛИРОВКОЙ И ЗАПОМИНАНИЕМ ПОЛОЖЕНИЯ
COLOMB	СИДЕНЬЕ ВОДИТЕЛЯ С РЕГУЛИРОВКОЙ ПОЯСНИЧНОГО ПОДПОРА
COMEMO	СИДЕНЬЕ ВОДИТЕЛЯ С ЗАПОМИНАНИЕМ ПОЛОЖЕНИЯ
COSMEM	СИДЕНЬЕ ВОДИТЕЛЯ БЕЗ ФУНКЦИИ ЗАПОМИНАНИЯ ПОЛОЖЕНИЯ
COSRLO	СИДЕНЬЕ ВОДИТЕЛЯ БЕЗ РЕГУЛИРОВКИ ПОЯСНИЧНОГО ПОДПОРА
COUP	КУПЕ
CP	ПОВОРАЧИВАЮЩЕЕСЯ ЗАДНЕЕ БОКОВОЕ ОКНО
CPE	СИСТЕМА БЛОКИРОВКИ ЗАМКОВ ДВЕРЕЙ С ЭЛЕКТРОПРИВОДОМ
CPETIR	СИСТЕМА БЛОКИРОВКИ ЗАМКОВ ДВЕРЕЙ С ЭЛЕКТРОПРИВОДОМ + ИК-СИСТЕМА ПДУ
CPKELN	ДОПОЛНИТЕЛЬНЫЙ ЭЛЕКТРОННЫЙ ПАКЕТ
CPLCT	СО СБЛИЖЕННЫМИ ПЕРЕДАТОЧНЫМИ ЧИСЛАМИ
CPLG	С РАЗНЕСЕННЫМИ ПЕРЕДАТОЧНЫМИ ЧИСЛАМИ
CPLN	С ОБЫЧНЫМИ ПЕРЕДАТОЧНЫМИ ЧИСЛАМИ
CTL	ТАХОГРАФ
CTMOT	ТАХОМЕТР
CUSFIX	НЕПОДВИЖНОЕ ТОНИРОВАННОЕ ЗАДНЕЕ БОКОВОЕ ОКНО
CUSPIV	ПОВОРАЧИВАЮЩЕЕСЯ ЗАДНЕЕ БОКОВОЕ ОКНО
D53	RENAULT 19, КАБРИОЛЕТ
D64	MEGANE КУПЕ, 3-ДВЕРНЫЙ ХЭТЧБЕК
DA	РУЛЕВОЕ УПРАВЛЕНИЕ С УСИЛИТЕЛЕМ
DAN	ИСПОЛНЕНИЕ ДЛЯ ДАНИИ
DAV	РУЛЕВОЕ УПРАВЛЕНИЕ С АДАПТИВНЫМ УСИЛИТЕЛЕМ
DD	ПРАВОСТОРОННЕЕ РУЛЕВОЕ УПРАВЛЕНИЕ
DEGIV	ОБОГРЕВ НАРУЖНОГО ЗЕРКАЛА ЗАДНЕГО ВИДА

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
DG	ЛЕВОСТОРОННЕЕ РУЛЕВОЕ УПРАВЛЕНИЕ
DIESEL	ДИЗЕЛЬНОЕ ТОПЛИВО
DIREG	РЕГУЛИРУЕМАЯ РУЛЕВАЯ КОЛОНКА
DM	МЕХАНИЧЕСКОЕ РУЛЕВОЕ УПРАВЛЕНИЕ
EO	УРОВЕНЬ КОМПЛЕКТАЦИИ 0
E1	УРОВЕНЬ КОМПЛЕКТАЦИИ 1
E2	УРОВЕНЬ КОМПЛЕКТАЦИИ 2
ES2	УРОВЕНЬ КОМПЛЕКТАЦИИ СПОРТ, 2
E3	УРОВЕНЬ КОМПЛЕКТАЦИИ 3
E3L	УРОВЕНЬ КОМПЛЕКТАЦИИ 3, ДОСУГ
ESP	УРОВЕНЬ КОМПЛЕКТАЦИИ 3, ПЛЮС
ESS	УРОВЕНЬ КОМПЛЕКТАЦИИ 3, СПОРТ
E4	УРОВЕНЬ КОМПЛЕКТАЦИИ 4
E5	УРОВЕНЬ КОМПЛЕКТАЦИИ 5
E64	MEGANE КАБРИОЛЕТ X64
ECLAR	ОСВЕЩЕНИЕ ЗАДНИХ СИДЕНИЙ
ECOLE	УЧЕБНЫЙ АВТОМОБИЛЬ
ELA	ОЧИСТИТЕЛЬ ЗАДНЕГО СТЕКЛА
ELEC	ЭЛЕКТРОМОБИЛЬ
EMBNOR	КЛАССИЧЕСКОЕ СЦЕПЛЕНИЕ
EMBPIL	АВТОМАТИЧЕСКОЕ СЦЕПЛЕНИЕ
EP	ФАРООЧИСТИТЕЛИ
EQGPL	ГАЗОБАЛЛОННОЕ ОБОРУДОВАНИЕ
ES2	УРОВЕНЬ КОМПЛЕКТАЦИИ 2, СПОРТ
ESS	УРОВЕНЬ КОМПЛЕКТАЦИИ 3, СПОРТ
ES4	УРОВЕНЬ КОМПЛЕКТАЦИИ 4, СПОРТ
ESP	ВАРИАНТ ИСПОЛНЕНИЯ ДЛЯ ИСПАНИИ
ESS	С БЕНЗИНОВЫМ ДВИГАТЕЛЕМ
EUNORD	МОДИФИКАЦИЯ ДЛЯ СТРАН СЕВЕРНОЙ ЕВРОПЫ
EVCFIX	СТЕКЛООЧИСТИТЕЛЬ С ФИКСИРОВАННЫМ ПРЕРЫВИСТЫМ РЕЖИМОМ РАБОТЫ
EVCVAR	СТЕКЛООЧИСТИТЕЛЬ С ИЗМЕНЯЕМЫМ ПРЕРЫВИСТЫМ РЕЖИМОМ РАБОТЫ
F40	ГРУЗО-ПАССАЖИРСКАЯ МОДИФИКАЦИЯ ЭКСПРЕСС
F64	MEGANE SCENIC X64 В ГРУЗОПАССАЖИРСКОМ ИСПОЛНЕНИИ
FARBR	ЗАДНИЕ ПРОТИВОТУМАННЫЕ ФОНАРИ
FGT	МАЛОГАБАРИТНЫЙ ФУРГОН
FIPOU	С ФИЛЬТРОМ СИСТЕМЫ ВЕНТИЛЯЦИИ САЛОНА
FR	СВЕТ ЗАДНЕГО ХОДА
FRA	ИСПОЛНЕНИЕ ДЛЯ ФРАНЦИИ
FRAS	ТОРМОЗНАЯ СИСТЕМА С УСИЛИТЕЛЕМ В ПРИВОДЕ ТОРМОЗОВ
FROID	МОДИФИКАЦИЯ ДЛЯ СТРАН С ХОЛОДНЫМ КЛИМАТОМ
FSTPO	ДОПОЛНИТЕЛЬНЫЙ СТОП-СИГНАЛ

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
FUJI	СПЕЦИАЛЬНАЯ КОМПЛЕКТАЦИЯ ДЛЯ ЯПОНИИ
FXEPAV	ГАБАРИТНЫЕ ФОНАРИ НА КРЫШЕ
GALERI	БАГАЖНИК НА КРЫШЕ
GAZNAT	АВТОМОБИЛЬ, РАБОТАЮЩИЙ НА ПРИРОДНОМ ГАЗЕ
GBR	ИСПОЛНЕНИЕ ДЛЯ ВЕЛИКОБРИТАНИИ
GDFROI	МОДИФИКАЦИЯ ДЛЯ СТРАН С ОЧЕНЬ ХОЛОДНЫМ КЛИМАТОМ
GPL	СИСТЕМА ПИТАНИЯ СЖИЖЕННЫМ ГАЗОМ
HANDIC	ИСПОЛНЕНИЕ ДЛЯ ИНВАЛИДОВ
HARDTO	АВТОМОБИЛЬ БЕЗ СЪЕМНОЙ КРЫШИ
HAYON	ДВЕРЬ ЗАДКА
HOL	ИСПОЛНЕНИЕ ДЛЯ НИДЕРЛАНДОВ
HYPCP1	ЗАДНЕЕ БОКОВОЕ СТЕКЛО С МЕХАНИЧЕСКИМ ПРИВОДОМ
HYPCP2	ЗАДНЕЕ БОКОВОЕ СТЕКЛО С ЭЛЕКТРОПРИВОДОМ
HYPRT1	СТАЦИОНАРНАЯ ТЕЛЕФОННАЯ ТРУБКА
HYPRT2	ПЕРЕНОСНАЯ ТЕЛЕФОННАЯ ТРУБКА
HYPTE1	КРЫШКА ЛЮКА ГОРЛОВИНЫ ТОПЛИВНОГО БАКА С УПРАВЛЕНИЕМ ИЗ САЛОНА
HYPTE2	БЛОКИРОВКА КРЫШКИ ЛЮКА ГОРЛОВИНЫ ТОПЛИВНОГО БАКА
INFR	С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
INJEL	ЭЛЕКТРОННАЯ СИСТЕМА ВПРЫСКА
INJMCA	МЕХАНИЧЕСКАЯ СИСТЕМА ВПРЫСКА
ITA	ИСПОЛНЕНИЕ ДЛЯ ИТАЛИИ
J64	MEGANE ПЯТИДВЕРНЫЙ ХЭТЧБЕК
JPN	ИСПОЛНЕНИЕ ДЛЯ ЯПОНИИ, ЛЕВОСТОРОННЕЕ РУЛЕВОЕ УПРАВЛЕНИЕ
K25	MEGANE УНИВЕРСАЛ
K53	RENAULT 19, ГРУЗОПАССАЖИРСКИЙ
KM	КИЛОМЕТРЫ
KANG	СПЕЦИАЛЬНАЯ КОМПЛЕКТАЦИЯ ДЛЯ АВСТРАЛИИ
L53	RENAULT 19, СЕДАН
L64	MEGANE С КУЗОВОМ СЕДАН
L65	CLIO С КУЗОВОМ СЕДАН
LAC	ОБОГРЕВ ЗАДНЕГО СТЕКЛА
LADECH	КСЕНОНОВЫЕ ЛАМПЫ
LARNOU	НЕОТКРЫВАЮЩЕЕСЯ ЗАДНЕЕ СТЕКЛО
LAROU	ЗАДНЕЕ ОТКРЫВАЮЩЕЕСЯ СТЕКЛО
LAVPH	ИСПОЛНЕНИЕ С ОЧИСТИТЕЛЯМИ ФАР
LNC	ЗАДНЕЕ СТЕКЛО БЕЗ ЭЛЕКТРОПОДОГРЕВА
LOKBA	С БЛОКИРОВКОЙ РЫЧАГА СЕЛЕКТОРА АКП
LVARAP	ТРАВМОБЕЗОПАСНЫЕ СТЕКЛОПОДЪЕМНИКИ ЗАДНИХ ДВЕРЕЙ
LVAREL	ЭЛЕКТРОСТЕКЛОПОДЪЕМНИКИ ЗАДНИХ ДВЕРЕЙ
LVARMA	СТЕКЛОПОДЪЕМНИК ЗАДНЕЙ ДВЕРИ С РУЧНЫМ ПРИВОДОМ

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
LVAVAP	ТРАВМОБЕЗОПАСНЫЕ ЭЛЕКТРОСТЕКЛОПОДЪЕМНИКИ ПЕРЕДНИХ ДВЕРЕЙ
LVAVEL	ЭЛЕКТРОСТЕКЛОПОДЪЕМНИК ПЕРЕДНЕЙ ДВЕРИ
LVAVMA	МЕХАНИЧЕСКИЙ СТЕКЛОПОДЪЕМНИК ПЕРЕДНЕЙ ДВЕРИ
LVE	ЭЛЕКТРОСТЕКЛОПОДЪЕМНИКИ
LVEAR	ЭЛЕКТРОСТЕКЛОПОДЪЕМНИКИ ЗАДНИХ ДВЕРЕЙ
LVM	СТЕКЛОПОДЪЕМНИКИ С РУЧНЫМ ПРИВОДОМ
MAL	ИСПОЛНЕНИЕ ДЛЯ МАЛАЙЗИИ
MALA	ИСПОЛНЕНИЕ ДЛЯ МАЛАЙЗИИ
MERCOS	ВАРИАНТ ИСПОЛНЕНИЯ ДЛЯ СТРАН ЛАТИНСКОЙ АМЕРИКИ
MILES	MILES
MICRO	С ЗЕРКАЛОМ В СОЛНЦЕЗАЩИТНОМ ЩИТКЕ СО СТОРОНЫ ВОДИТЕЛЯ
NAVIG	С СИСТЕМОЙ НАВИГАЦИИ
NINAVO	С СИСТЕМОЙ НАВИГАЦИИ УРОВНЯ 0
NINAV1	С СИСТЕМОЙ НАВИГАЦИИ УРОВНЯ 1
NINAV2	С СИСТЕМОЙ НАВИГАЦИИ УРОВНЯ 2
NINAV3	С СИСТЕМОЙ НАВИГАЦИИ УРОВНЯ 3
NINAV4	С СИСТЕМОЙ НАВИГАЦИИ УРОВНЯ 4
NIVDO	ДАТЧИК УРОВНЯ ЖИДКОСТИ
NOR	ИСПОЛНЕНИЕ ДЛЯ НОРВЕГИИ
ODIN	СПЕЦИАЛЬНАЯ КОМПЛЕКТАЦИЯ ДЛЯ ШВЕЦИИ/НОРВЕГИИ/ФИНЛЯНДИИ
OUCAEL	СКЛАДНАЯ КРЫША С ЭЛЕКТРОПРИВОДОМ
OUCAMA	СКЛАДНАЯ КРЫША С РУЧНЫМ ПРИВОДОМ
OUTOEL	ЛЮК КРЫШИ С ЭЛЕКТРОПРИВОДОМ
PAELEC	СИДЕНЬЕ ПАССАЖИРА, С ЭЛЕКТРОПРИВОДОМ
PAMEMO	СИДЕНЬЕ ПАССАЖИРА С ЗАПОМИНАНИЕМ ПОЛОЖЕНИЯ
PAARLO	СИДЕНЬЕ ПАССАЖИРА С РЕГУЛИРОВКОЙ ПОЯСНИЧНОГО ПОДПОРА
PBCH	ВЕТРОВОЕ СТЕКЛО С ОБОГРЕВОМ
PBNCH	ВЕТРОВОЕ СТЕКЛО БЕЗ ОБОГРЕВА
PISTE	ГРУНТОВАЯ ДОРОГА
PKERGO	ЭРГОНОМИЧЕСКИЙ ПАКЕТ
PLAFNT	ПЛАФОН ОСВЕЩЕНИЯ БЕЗ РЕЛЕ ВРЕМЕНИ
PLAFT	ПЛАФОН ОСВЕЩЕНИЯ С РЕЛЕ ВРЕМЕНИ
PRAD01	УСТРОЙСТВА ДЛЯ УСТАНОВКИ РАДИООБОРУДОВАНИЯ
PRECA	ОБОРУДОВАНИЕ ДЛЯ УСТАНОВКИ КОНДИЦИОНЕРА
PREGPL	ПОДГОТОВКА ПОД УСТАНОВКУ СИСТЕМЫ ПИТАНИЯ СЖИЖЕННЫМ ГАЗОМ
PRERAD	УСТРОЙСТВА ДЛЯ УСТАНОВКИ РАДИООБОРУДОВАНИЯ
PRETEL	ПОДГОТОВКА ПОД УСТАНОВКУ РАДИО- И ТЕЛЕФОННОГО ОБОРУДОВАНИЯ
PRHALO	ГАЛОГЕННЫЕ ЛАМПЫ
PROJAB	ПРОТИВОТУМАННЫЕ ФАРЫ
PROJAD	ДОПОЛНИТЕЛЬНЫЕ ФАРЫ
PROJDO	СПАРЕННАЯ ФАРА

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
PROJLP	ФАРЫ ДАЛЬНЕГО СВЕТА
PROJSO	ОБЫЧНАЯ ФАРА
PTCAV	С ПЕРЕДНИМ ПРЕДНАТЯЖИТЕЛЕМ
R2X5	АУДИОСИСТЕМА 2×5 ВТ
R2X6	АУДИОСИСТЕМА 2×6 ВТ
R2X6WI	АУДИОСИСТЕМА 2×6 ВТ С ИНФОРМАЦИЕЙ О ДОРОЖНОЙ ОБСТАНОВКЕ
R4000	АУДИОСИСТЕМА ТИПА 4000
R501	АУДИОСИСТЕМА ТИПА DC501
R5020	АУДИОСИСТЕМА 5020
R521	АУДИОСИСТЕМА ТИПА DC521
R552	АУДИОСИСТЕМА DC552
RADI	С АУДИОСИСТЕМОЙ
RADIO	АУДИОСИСТЕМА
RADIO1	АУДИОСИСТЕМА № 1
RADIO5	АУДИОСИСТЕМА № 5
RADIO6	АУДИОСИСТЕМА № 6
RADSDK	АУДИОСИСТЕМА С SDK
RADTEL	МОБИЛЬНЫЙ ТЕЛЕФОН
RC4X15	АУДИОСИСТЕМА С ПРОИГРЫВАТЕЛЕМ КОМПАКТ ДИСКОВ 4×15 ВТ
REDE	ПРАВОЕ НАРУЖНОЕ ЗЕРКАЛО ЗАДНЕГО ВИДА С ЭЛЕКТРОПРИВОДОМ
REDF	НЕРЕГУЛИРУЕМОЕ ПРАВОЕ НАРУЖНОЕ ЗЕРКАЛО ЗАДНЕГО ВИДА
REDR	С РУЧНОЙ РЕГУЛИРОВКОЙ
REGE	ЛЕВОЕ НАРУЖНОЕ ЗЕРКАЛО ЗАДНЕГО ВИДА С ЭЛЕКТРОПРИВОДОМ
REGELE	ЭЛЕКТРОДВИГАТЕЛЬ РЕГУЛИРОВКИ ПОЛОЖЕНИЯ РУЛЕВОЙ КОЛОНКИ
REGF	НЕРЕГУЛИРУЕМОЕ ЛЕВОЕ НАРУЖНОЕ ЗЕРКАЛО ЗАДНЕГО ВИДА
REGR	ЛЕВОЕ НАРУЖНОЕ ЗЕРКАЛО ЗАДНЕГО ВИДА С РУЧНОЙ РЕГУЛИРОВКОЙ
REGSIT	КОРРЕКТОР
REMEM	НАРУЖНЫЕ ЗЕРКАЛА ЗАДНЕГО ВИДА С ЗАПОМИНАНИЕМ ПОЛОЖЕНИЯ
REMEM	НАРУЖНЫЕ ЗЕРКАЛА ЗАДНЕГО ВИДА БЕЗ ЗАПОМИНАНИЯ ПОЛОЖЕНИЯ
REPOCH	ИСПОЛНЕНИЕ ДЛЯ КНР
RETROE	НАРУЖНЫЕ ЗЕРКАЛА ЗАДНЕГО ВИДА С ЭЛЕКТРОПРИВОДОМ
RETROF	ДВА НАРУЖНЫХ ЗЕРКАЛА ЗАДНЕГО ВИДА С ФИКСИРОВАННЫМ ПОЛОЖЕНИЕМ
RETROL	ДВА ЗЕРКАЛА ЗАДНЕГО ВИДА С УВЕЛИЧЕННЫМ УГЛОМ ОБЗОРА
RETROR	НАРУЖНЫЕ ЗЕРКАЛА ЗАДНЕГО ВИДА С ЭЛЕКТРОПРИВОДОМ
RK4X15	АВТОМАГНИТОЛА 4×15 ВТ С ФУНКЦИЕЙ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
RPROX	С РАДАРОМ ДЛЯ ПАРКОВКИ
RUNLI	С ФАРАМИ ДНЕВНОГО ДВИЖЕНИЯ
RV	РЕГУЛЯТОР СКОРОСТИ ДВИЖЕНИЯ
S40	RENAULT 5, ГРУЗО-ПАССАЖИРСКАЯ МОДИФИКАЦИЯ
S53	RENAULT 19, ГРУЗОПАССАЖИРСКИЙ

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
S64	MEGANE ГРУЗО-ПАССАЖИРСКАЯ МОДИФИКАЦИЯ
S65	CLIO ГРУЗО-ПАССАЖИРСКАЯ МОДИФИКАЦИЯ
SABLAV	БЕЗ ПЕРЕДНЕЙ БОКОВОЙ ПОДУШКИ БЕЗОПАСНОСТИ
SACPLA	БЕЗ ВЕЩЕВОГО ОТСЕКА ПО ЗАДНИМИ СИДЕНЬЯМИ И РОЗЕТКИ ДЛЯ ПОДКЛЮЧЕНИЯ ДОПОЛНИТЕЛЬНОГО ОБОРУДОВАНИЯ
SADAC	НАВИГАЦИОННАЯ СИСТЕМА
SAIRBA	БЕЗ ПОДУШКИ БЕЗОПАСНОСТИ
SALOUC	БЕЗ ЗВУКОВОГО СИГНАЛИЗАТОРА О НЕЗАСТЕГНУТОМ РЕМНЕ БЕЗОПАСНОСТИ
SANABS	БЕЗ АБС
SANALA	БЕЗ СИСТЕМЫ ОХРАННОЙ СИГНАЛИЗАЦИИ
SANCOA	БЕЗ СИСТЕМЫ ПОДДЕРЖАНИЯ ВЫСОТЫ КУЗОВА
SANCTL	БЕЗ ТАХОГРАФА
SANCUS	ИСПОЛНЕНИЕ БЕЗ ЗАДНИХ БОКОВЫХ ОКОН
SANRAD	БЕЗ РАДИООБОРУДОВАНИЯ
SANSYP	БЕЗ СИНТЕЗАТОРА РЕЧИ
SANTIV	БЕЗ ОХРАННОЙ СИГНАЛИЗАЦИИ
SAOEF	БЕЗ СИГНАЛИЗАТОРА О НЕВЫКЛЮЧЕННОМ НАРУЖНОМ ОСВЕЩЕНИИ
SASURV	БЕЗ ЗВУКОВОГО СИГНАЛИЗАТОРА О ПРЕВЫШЕНИИ ЗАДАННОЙ СКОРОСТИ ДВИЖЕНИЯ
SAUF	ИСКЛЮЧЕНИЕ
SCATAD	БЕЗ КАТАЛИТИЧЕСКОГО НЕЙТРАЛИЗАТОРА ОТРАБОТАВШИХ ГАЗОВ ДИЗЕЛЬНОГО ДВИГАТЕЛЯ
SCCHA	СИДЕНЬЯ С ОБОГРЕВОМ
SCDCOF	БЕЗ ЧЕЙНДЖЕРА КОМПАКТ-ДИСКОВ В БАГАЖНОМ ОТДЕЛЕНИИ
SCDISC	БЕЗ ПРОИГРЫВАТЕЛЯ КОМПАКТ-ДИСКОВ
SCTMOT	БЕЗ ТАХОГРАФА
SDEGIV	БЕЗ ОБОГРЕВА НАРУЖНЫХ ЗЕРКАЛ ЗАДНЕГО ВИДА
SECLAR	БЕЗ ОСВЕЩЕНИЯ ЗАДНИХ СИДЕНИЙ
SEMBRY	БЕЗ СЦЕПЛЕНИЯ
SFIPOU	БЕЗ ФИЛЬТРА ВЕНТИЛЯЦИИ САЛОНА
SFSTPO	БЕЗ ДОПОЛНИТЕЛЬНОГО СТОП-СИГНАЛА
SGACHA	СИДЕНЬЕ С ОБОГРЕВОМ
SGECFT	АНАТОМИЧЕСКОЕ РЕГУЛИРУЕМОЕ СИДЕНЬЕ С ЭЛЕКТРОПРИВОДОМ
SGELAR	РЕГУЛИРОВКА С ПОМОЩЬЮ ЭЛЕКТРОПРИВОДА
SGELAV	РЕГУЛИРОВКА ПЕРЕДНИХ СИДЕНИЙ С ПОМОЩЬЮ ЭЛЕКТРОПРИВОДА
SGELEC	ЭЛЕКТРОПРИВОД ОТКИДЫВАНИЯ ПЕРЕДНИХ СИДЕНИЙ
SGMANU	СИДЕНЬЕ С РУЧНОЙ РЕГУЛИРОВКОЙ
SGMEMO	СИДЕНЬЕ С ЗАПОМИНАНИЕМ ПОЛОЖЕНИЯ
SGSCHA	СИДЕНЬЕ БЕЗ ОБОГРЕВА
SHARDT	АВТОМОБИЛЬ СО СЪЕМНОЙ КРЫШЕЙ
SIEREH	ПЕРЕДНЕЕ РЕГУЛИРУЕМОЕ СИДЕНЬЕ

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
SLAVPH	БЕЗ ОМЫВАТЕЛЯ ФАР
SLDECH	БЕЗ КСЕНОНОВЫХ ФАР
SLOKBA	БЕЗ БЛОКИРОВКИ РЫЧАГА СЕЛЕКТОРА АКП
SMIRCO	БЕЗ ЗЕРКАЛА В ПРОТИВОСОЛНЕЧНОМ КОЗЫРЬКЕ ВОДИТЕЛЯ
SNAVIG	БЕЗ СИСТЕМЫ НАВИГАЦИИ
SNIVDO	БЕЗ ДАТЧИКА УРОВНЯ ЖИДКОСТИ В БАЧКЕ ОМЫВАТЕЛЯ
SPRGPL	БЕЗ ОБОРУДОВАНИЯ СИСТЕМЫ ПИТАНИЯ СЖИЖЕННЫМ ГАЗОМ
SPROJA	БЕЗ ДОПОЛНИТЕЛЬНЫХ ФАР
SPRTEL	БЕЗ ПОДГОТОВКИ ПОД УСТАНОВКУ РАДИОТЕЛЕФОНА
SPTCAV	БЕЗ ПРЕДНАТЯЖИТЕЛЯ ПЕРЕДНЕГО РЕМНЯ БЕЗОПАСНОСТИ
SREGUL	БЕЗ РЕГУЛИРОВАНИЯ РАСПРЕДЕЛЕНИЯ ВОЗДУХА В САЛОНЕ
SRPROX	БЕЗ СИСТЕМЫ КОНТРОЛЯ ПАРКОВКИ
SRUNLI	БЕЗ ФАР ДНЕВНОГО ДВИЖЕНИЯ
SSABCO	БЕЗ ПОДУШКИ БЕЗОПАСНОСТИ ВОДИТЕЛЯ
SSABPA	БЕЗ ПОДУШКИ БЕЗОПАСНОСТИ ПАССАЖИРА
SSABS	БЕЗ АБС
SSALA	БЕЗ СИСТЕМЫ ОХРАННОЙ СИГНАЛИЗАЦИИ
SSASR	БЕЗ ПРОТИВОПРОБУКСОВОЧНОЙ СИСТЕМЫ
SSCPE	БЕЗ СИСТЕМЫ БЛОКИРОВКИ ЗАМКОВ ДВЕРЕЙ
SSELA	БЕЗ СТЕКЛООЧИСТИТЕЛЯ ЗАДНЕГО СТЕКЛА
SSFEUX	БЕЗ БОКОВЫХ ФОНАРЕЙ
SSINFR	БЕЗ ФУНКЦИИ ПРИОРИТЕТНОГО ПРОСЛУШИВАНИЯ ИНФОРМАЦИИ О ДОРОЖНОМ ДВИЖЕНИИ
SSLAC	БЕЗ ОБОГРЕВА ЗАДНЕГО СТЕКЛА
SSLVAR	БЕЗ СТЕКЛОПОДЪЕМНИКА ЗАДНЕЙ ДВЕРИ
SSNMAS	БЕЗ ОХРАННОЙ СИГНАЛИЗАЦИИ И СИРЕНЫ
SSNMTE	БЕЗ ТЕЛЕФОНА
SSOUTO	БЕЗ ЛЮКА В КРЫШЕ
SSRADI	БЕЗ АУДИОСИСТЕМЫ
SSREPL	БЕЗ БОКОВЫХ ПОВТОРИТЕЛЕЙ УКАЗАТЕЛЕЙ ПОВОРОТА
SSRSIT	БЕЗ КОРРЕКТОРА СВЕТА ФАР
SSRV	БЕЗ РЕГУЛЯТОРА СКОРОСТИ ДВИЖЕНИЯ
SSSIR	БЕЗ СИРЕНЫ
SSTETA	БЕЗ ДАТЧИКА ТЕМПЕРАТУРЫ
SSTIR	БЕЗ ИК СИСТЕМЫ ДУ (РАЗБЛОКИРОВКИ ЗАМКОВ ДВЕРЕЙ)
STELCB	БЕЗ ТЕЛЕФОННОГО ОБОРУДОВАНИЯ
STELER	БЕЗ ПРИЕМОПЕРЕДАТЧИКА РАДИОТЕЛЕФОНА
STELIN	БЕЗ ТЕЛЕФОНА
STHPGL	БЕЗ ПОГРУЖНЫХ ПОДОГРЕВАТЕЛЕЙ
STPOKA	БЕЗ ДАТЧИКА ТЕМПЕРАТУРЫ КАТАЛИТИЧЕСКОГО НЕЙТРАЛИЗАТОРА
STTPOK	БЕЗ СИГНАЛЬНОЙ ЛАМПЫ ТЕМПЕРАТУРЫ КАТАЛИТИЧЕСКОГО НЕЙТРАЛИЗАТОРА

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
SURVIT'	БЕЗ ЗВУКОВОГО СИГНАЛИЗАТОРА О ПРЕВЫШЕНИИ ЗАДАННОЙ СКОРОСТИ ДВИЖЕНИЯ
SUSNOR	ОБЫЧНАЯ ПОДВЕСКА
SUE	ИСПОЛНЕНИЕ ДЛЯ ШВЕЦИИ
SUI	ИСПОЛНЕНИЕ ДЛЯ ШВЕЙЦАРИИ
SURVIT	БЕЗ ЗВУКОВОГО СИГНАЛИЗАТОРА О ПРЕВЫШЕНИИ ЗАДАННОЙ СКОРОСТИ ДВИЖЕНИЯ
SUSNOR	ОБЫЧНАЯ ПОДВЕСКА
SUSNPN	ПОДВЕСКА БЕЗ ПНЕВМАТИЧЕСКИХ ЭЛЕМЕНТОВ
SUSPNE	ПНЕВМОПОДВЕСКА
SUSPIL	РЕГУЛИРУЕМАЯ ПОДВЕСКА
SUSREN	УСИЛЕННАЯ ПОДВЕСКА
SYP	СИНТЕЗАТОР РЕЧИ
TBORDOO	ЩИТОК ПРИБОРОВ ВАРИАНТ 00
TBORD01	ЩИТОК ПРИБОРОВ ВАРИАНТ 01
TBORD02	ЩИТОК ПРИБОРОВ ВАРИАНТ 02
TBORD03	ЩИТОК ПРИБОРОВ ВАРИАНТ 03
TBORD04	ЩИТОК ПРИБОРОВ ВАРИАНТ 04
TELIN	ВСТРОЕННЫЙ МОБИЛЬНЫЙ ТЕЛЕФОН
TEMP	МОДИФИКАЦИЯ ДЛЯ СТРАН С УМЕРЕННЫМ КЛИМАТОМ
TETA	С ДАТЧИКОМ ТЕМПЕРАТУРЫ
THA	ИСПОЛНЕНИЕ ДЛЯ ТАЙЛАНДА
THEPLG	ПОГРУЖНОЙ ПОДОГРЕВАТЕЛЬ
TIP	С СИСТЕМОЙ ДИСТАНЦИОННОЙ РАЗБЛОКИРОВКИ ЗАМКОВ ДВЕРЕЙ
TKO	ТАКСИ
TN	ОБЫЧНАЯ КРЫША
TO	КРЫША С ЛЮКОМ
TOEC	СДВИГАЮЩИЙСЯ И ПРИОТКРЫВАЮЩИЙСЯ ЛЮК КРЫШИ
TOELEC	ЛЮК КРЫШИ С ЭЛЕКТРОПРИВОДОМ
TOLE1	ГРУЗОВАЯ МОДИФИКАЦИЯ БЕЗ ОСТЕКЛЕНИЯ ГРУЗОВОГО ОТДЕЛЕНИЯ
TOMANU	ЛЮК КРЫШИ С РУЧНЫМ ПРИВОДОМ
TPOKA	С ДАТЧИКОМ ТЕМПЕРАТУРЫ КАТАЛИТИЧЕСКОГО НЕЙТРАЛИЗАТОРА
TR4X2	ТРАНСМИССИЯ С ПРИВОДОМ НА ПЕРЕДНЮЮ ОСЬ
TR4X4	ПОЛНОПРИВОДНАЯ ТРАНСМИССИЯ
TTPOK	С СИГНАЛЬНОЙ ЛАМОЙ ТЕМПЕРАТУРЫ КАТАЛИТИЧЕСКОГО НЕЙТРАЛИЗАТОРА
TUNCKD	ИСПОЛНЕНИЕ ДЛЯ ТУНИСА
TUR	ИСПОЛНЕНИЕ ДЛЯ ТУРЦИИ
TURB	С ТУРБОНАДДУВОМ
U40	ЭКСПРЕСС (ПИКАП)
UKR	ИСПОЛНЕНИЕ ДЛЯ УКРАИНЫ
URS	ИСПОЛНЕНИЕ ДЛЯ РОССИИ

СОКРАЩЕННОЕ ОБОЗНАЧЕНИЕ	ПОЛНОЕ ОБОЗНАЧЕНИЕ
URU	ИСПОЛНЕНИЕ ДЛЯ УРУГВАЯ
V25	MEGANE УНИВЕРСАЛ В ГРУЗОПАССАЖИРСКОМ ВАРИАНТЕ
VECOLE	УЧЕБНАЯ МОДИФИКАЦИЯ АВТОМОБИЛЯ
VEN	ИСПОЛНЕНИЕ ДЛЯ ВЕНЕСУЭЛЫ
VERLOG	ЭЛЕКТРОННАЯ ПРОТИВОУГОННАЯ СИСТЕМА
VERROU	ТОЛЬКО СИСТЕМА ЭЛЕКТРОННОЙ ПРОТИВОУГОННОЙ БЛОКИРОВКИ ЗАПУСКА ДВИГАТЕЛЯ
VHECOL	УЧЕБНЫЙ АВТОМОБИЛЬ
VITRE1	ГРУЗОВАЯ МОДИФИКАЦИЯ С ОСТЕКЛЕНИЕМ ГРУЗОВОГО ОТДЕЛЕНИЯ
VOLDIF	БЕЗ ВЫКЛЮЧАТЕЛЯ ЗВУКОВОГО СИГНАЛА НА РУЛЕВОМ КОЛЕСЕ

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
1	Блок учебного автомобиля
2	Устройство отключения аккумуляторной батареи
3	Тахограф
4	Переключатель блокировки замка правой двери
5	Переключатель блокировки левой двери
6	Электронный модуль электро-вентилятора кондиционера
7	Блок резистора управления модулем
8	Датчик давления в напорной магистрали АКП
9	Электромагнитный клапан ограничения крутящего момента
10	Выключатель 1-ой передачи
11	Выключатель полного привода
12	Реле «массы» фар дневного движения
13	Выключатель охранной сигнализации
14	Выключатель блокировки задних дверей
15	Сигнальная лампа блокировки задних дверей
16	Реле электромагнитного клапана регулирования момента опережения впрыска
17	Термовыключатель электромагнитного клапана регулирования момента опережения впрыска
18	Датчик температуры нагнетаемого воздуха
19	Электронный термостат
20	Лампа освещения передней пепельницы
21	Сигнальная лампа охранной сигнализации
22	Газонаполненный упор двери задка
23	Реле разблокировки открывающихся элементов кузова
24	Датчик поперечного ускорения
25	Электродвигатель привода замка правой двери
26	Электродвигатель привода замка левой двери
27	Реле выключения электровентиляторов системы охлаждения двигателя
28	Реле правого замка
29	Реле левого замка
30	Сигнальная лампа незакрытых открывающихся элементов кузова
31	Сигнальная лампа противотуманных фар
32	Сигнальная лампа адсорбера
33	Реле времени электронного блока датчика уровня топлива
34	Фонарь на крыше
35	Датчик высоты кузова
36	Компрессор системы поддержания высоты кузова
37	Электрический модуль управления вспомогательным электрооборудованием
38	ЭБУ убирающихся фар

ОБОЗН.	ЭЛЕМЕНТ
39	Электродвигатель привода правой убирающейся фары
40	Электродвигатель привода левой убирающейся фары
41	ЭБУ системы поддержания высоты кузова
42	ЭБУ электромагнитным клапаном рециркуляции отработавших газов
43	Сигнальная лампа запуска холодного двигателя
44	Сигнальная лампа сидений с обогревом
45	ЭБУ пускового устройства
46	Электромагнитный клапан пускового устройства (подача дизельного топлива)
47	Электронный блок указателя уровня масла
48	Правая фара дальнего света
49	Левая фара дальнего света
50	Правая фара ближнего света
51	Левая фара ближнего света
52	Электронный ключ охранной сигнализации
53	Диод группы электровентиляторов системы охлаждения двигателя
54	Помехоподавительный фильтр электродвигателя стеклоочистителя
55	Реле убирающихся фар
56	Реостат освещения приборов
57	Реле группы электровентиляторов через центральный коммутационный блок дополнительного оборудования
58	Концевой выключатель
59	Электродвигатель привода заслонки воздухораспределения
60	Электродвигатель системы антиобледенения
62	Микровыключатель 1 СРОГ для последующего подогрева 1
63	Микровыключатель 1 СРОГ для последующего подогрева 2
64	Термовыключатель прекращения подачи топлива при температуре 110°/115°
65	Электромагнитный клапан рециркуляции воздуха
66	Реле люка крыши
67	Реле питания системы управления вентиляцией салона
68	Реле 4-ой скорости вентилятора системы вентиляции салона
69	Датчик забортной температуры
70	Электронный блок датчика наличия воды в дизтопливе
71	Электродвигатель блокировки распашной двери
72	Электродвигатель блокировки сдвижной двери
73	Светодиод системы электронной противоугонной блокировки запуска двигателя
74	Реле плафонов освещения
75	Чейнджер компакт — дисков

ОБОЗН.	ЭЛЕМЕНТ
76	Контрольный разъем
77	Главное реле системы дизельного впрыска
78	Электромагнитный клапан высокого давления
79	Триггерное реле кислородного датчика
80	Реле запуска холодного двигателя
81	Кнопка запуска холодного двигателя
82	Переключатель видов топлива бензин/газ
83	Выключатель обогрева ветрового стекла
84	Узел электронасоса опрокидывающегося кузова
85	Дистанционное управление опрокидыванием кузова
86	Реле управления опрокидыванием кузова
87	Электромагнитный клапан опускания опрокидывающегося кузова
88	Сигнальная лампа реле давления подъема опрокидывающегося кузова
89	Электродвигатель подъема опрокидывающегося кузова
90	Электровентилятор испарителя кондиционера пассажирского отделения
91	Электровентилятор конденсора кондиционера
92	Реле конденсора кондиционера 1
93	Реле конденсора кондиционера 2 испарителя
94	Реле разрешения включения аварийной сигнализации 1
95	Реле разрешения включения указателей поворота аварийной сигнализации 2
96	Выключатель блокировки задних дверей
97	Плафон освещения со стороны пассажира
98	Фонарь освещения подножки
99	Реле фонарей освещения подножек
1A	Реле фонарей освещения через габаритный огонь
2A	Реле отключения блока управления отоплением
3A	Реле электровентилятора системы охлаждения автономного отопителя № 1
4A	Реле электровентилятора системы охлаждения автономного отопителя № 2
5A	Реле отключения аккумуляторной батареи
6A	Реле временной задержки отключения аккумуляторной батареи
7A	Реле электромагнитного клапана остановки двигателя
8A	Выключатель самоперевода в рабочее положение устройства отключения аккумуляторной батареи
101	Прикуриватель

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
102	Распределитель зажигания
103	Генератор
104	Охранная сигнализация
105	Главный электромагнитный звуковой сигнал
106	Электропневматический звуковой сигнал
107	Аккумуляторная батарея
108	Катушка зажигания
109	Бортовой компьютер
110	Блок регулирования давления АБС
111	Силовой модуль зажигания
112	Реле-прерыватель очистителя заднего стекла
113	Реле-прерыватель переднего стеклоочистителя
114	Блок двухтонального звукового сигнала
115	Блок регулирования узла электронасоса
116	Реле времени омывателя фары
117	Звуковой сигнализатор о невыключенном наружном освещении/ звуковой сигнализатор учебного автомобиля
118	ЭБУ АБС
119	ЭБУ АКП
120	ЭБУ системы впрыска
121	Выключатель задних противотуманных фонарей
122	Выключатель противотуманных фар
123	Переключатель блокировки замков дверей
124	Выключатель отопителя
125	Выключатель аварийной сигнализации
126	Переключатель вентилятора нагнетания холодного воздуха
127	Переключатель стеклоочистителя заднего стекла
128	Выключатель обогрева заднего стекла
129	Переключатель выбора программ движения
130	Переключатель электростеклоподъемника правого заднего стекла
131	Переключатель электростеклоподъемника левого заднего стекла
132	Переключатель электростеклоподъемника двери водителя
133	Переключатель электростеклоподъемника двери пассажира
134	Переключатель наружного зеркала заднего вида
135	Выключатель блокировки электростеклоподъемника задней двери
136	Выключатель пускового устройства
137	Реле-прерыватель указателей поворота и аварийной сигнализации
138	Электродвигатель привода замка правой задней двери
139	Электродвигатель привода замка левой задней двери
140	Электродвигатель привода замка двери водителя
141	Электродвигатель привода замка двери пассажира
142	Электродвигатель привода замка крышки багажника
143	Датчик уровня жидкости в бачке омывателя ветрового стекла
144	Датчик уровня охлаждающей жидкости
145	Переключатель стеклоочистителя и стеклоомывателя
146	Датчик детонации 1
147	Датчик атмосферного давления
148	Датчик давления масла
149	Датчик ВМТ
150	Датчик скорости вращения правого заднего колеса
151	Датчик скорости вращения левого заднего колеса
152	Датчик скорости вращения правого переднего колеса
153	Датчик скорости вращения левого переднего колеса
154	Выключатель крышки багажника
155	Выключатель света заднего хода
156	Выключатель стояночного тормоза
157	Выключатель педали тормоза
158	Выключатель полной нагрузки
159	Выключатель холостого хода
160	Выключатель стоп-сигнала
161	Выключатель освещения вещевого ящика
162	Расходомер
163	Стартер
164	Вентилятор нагнетания холодного воздуха
165	Фонарь освещения багажного отделения
166	Фонарь освещения номерного знака, правый
167	Фонарь освещения номерного знака, левый
168	Фонарь освещения вещевого ящика
169	Электромагнитный клапан рециркуляции отработавших газов
170	Электромагнитный клапан рулевого управления с усилителем
171	Электромагнитная муфта компрессора кондиционера
172	Правый задний фонарь
173	Левый задний фонарь
174	Правый задний противотуманный фонарь
175	Левый задний противотуманный фонарь
176	Правая противотуманная фара
177	Левая противотуманная фара
178	Концевой выключатель правой задней двери
179	Концевой выключатель правой задней двери
180	Концевой выключатель двери водителя
181	Концевой выключатель двери пассажира
182	Правый задний фонарь заднего хода
183	Левый задний фонарь заднего хода
184	Правый габаритный фонарь
185	Левый габаритный фонарь
186	Узел электронасоса рулевого управления с усилителем
187	Электровентилятор отопителя
188	Электровентилятор системы охлаждения
189	Правый задний громкоговоритель
190	Левый задний громкоговоритель
191	Громкоговоритель в передней правой двери
192	Громкоговоритель в передней левой двери
193	Форсунка 1-го цилиндра
194	Форсунка 2-го цилиндра
195	Форсунка 3-го цилиндра
196	Форсунка 4-го цилиндра
197	Форсунка 5-го цилиндра
198	Форсунка 6-го цилиндра
199	Датчик уровня топлива
200	Заднее стекло с обогревом
201	Электродвигатель привода стеклоподъемника стекла задней правой двери
202	Электродвигатель привода стеклоподъемника стекла задней левой двери
203	Электродвигатель привода стеклоподъемника стекла двери водителя
204	Электродвигатель привода стеклоподъемника двери пассажира
205	Датчик давления
206	Трехфункциональный датчик давления кондиционера
207	Датчик уровня тормозной жидкости
208	Силовой модуль зажигания
209	Рычажный переключатель
210	Часы с аналоговой или цифровой индикацией
211	Электродвигатель очистителя заднего стекла
212	Электродвигатель очистителя ветрового стекла
213	Передний плафон освещения
214	Правый задний плафон освещения
215	Левый задний плафон освещения
216	Датчик износа тормозных колодок на правом переднем колесе
217	Датчик износа тормозных колодок на левом переднем колесе
218	Топливный насос
219	Насос омывателя фары
220	Насос омывателя заднего стекла
221	Насос омывателя ветрового стекла
222	Потенциометрический датчик положения дроссельной заслонки
223	Потенциометр регулирования холостого хода
224	Реле давления гидроусилителя рулевого управления

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
225	Диагностический разъем
226	Правая фара
227	Левая фара
228	Регулятор холостого хода
229	Реле звукового сигнала
230	Реле задних противотуманных фонарей
231	Реле противотуманных фар
232	Реле стартера
233	Реле нагнетания холодного воздуха
234	Реле электровентилятора системы охлаждения двигателя
235	Реле заднего стекла
236	Реле топливного насоса
237	Реле включения сдвоенных фар
238	Реле блокировки впрыска
239	Наружное зеркало заднего вида с электроприводом и электрообогревом со стороны водителя
240	Наружное зеркало заднего вида с электроприводом и электрообогревом со стороны пассажира
241	Реостат освещения приборов
242	Нижний кислородный датчик
243	Датчик уровня масла
244	Датчик температуры охлаждающей жидкости системы впрыска
245	Датчик наружной температуры
246	Электромагнитный клапан останова дизельного двигателя
247	Щиток приборов
248	Датчик включения электровентилятора системы охлаждения двигателя
249	Инфракрасный передатчик
250	Датчик скорости движения автомобиля
251	Двухфункциональный датчик температуры охлаждающей жидкости
252	Фильтр радиотелефона
253	Правый передний громкоговоритель
254	Левый передний громкоговоритель
255	Правый передний указатель поворота
256	Левый передний указатель поворота
257	Блок предварительного подогрева
258	Свечи предпускового подогрева
259	Датчик температуры
260	Блок предохранителей и реле в салоне
261	Аудиосистема
262	Электровентилятор системы охлаждения двигателя и кондиционера
263	Переключатель очистителя и обогрева заднего стекла
264	Реле времени блокировки замков дверей
265	Консоль фонаря направленного освещения
266	Выключатель холостой ход — полная нагрузка

ОБОЗН.	ЭЛЕМЕНТ
267	Повторитель указателя поворота, правый
268	Повторитель указателя поворота, левый
269	Выключатель холостого хода
270	Термодатчик изменения УОЗ на 8°
271	Терморезистор
272	Датчик температуры воздуха системы впрыска
273	Датчик частоты вращения коленчатого вала двигателя
274	Электромагнитный клапан кондиционера
275	Реле времени подкачивающего топливного насоса
276	Переключатель импульсного электростеклоподъемника
277	ЭБУ контроля исправности ламп
278	Датчик детонации 2
279	Реле защиты двигателя от перегрева
280	Реле отключения электронной системы зажигания со статическим распределением высоковольтного напряжения
281	Реле ближнего света фар
282	Выключатель электродвигателя привода замка крышки люка наливной горловины
283	Дополнительный топливный насос
284	Электродвигатель правого фароочистителя
285	Электродвигатель левого фароочистителя
286	Выключатель омывателя заднего стекла
287	Реле балластной обмотки
288	Главное реле света дневного движения
289	Реле габаритных огней дневного движения
290	Реле постоянного ближнего света фар
291	Электромагнитный запорный клапан карбюратора
292	Реле реостата освещения приборов
293	Источник питания основного оборудования
294	Блок временной задержки системы обогрева заднего стекла
295	Блок сигнальных ламп
296	Реле шунтирования цепи противотуманных фар
297	Шунт цепи противотуманных фар
298	Отопитель
299	Плата вспомогательных реле
300	Плафон освещения на задней балке
301	Реле узла электронасоса АБС
302	Реле рулевого управления с адаптивным усилителем
303	Фонарь освещения рычага селектора АКП
304	Люк крыши
305	Электромагнитный регулятор момента опережения

ОБОЗН.	ЭЛЕМЕНТ
306	Датчик температуры регулятора момента опережения
307	Шунт замыкания на «массу» платы вспомогательных реле
308	Реле времени дегазации
309	Многофункциональный звуковой сигнал
310	Силовой модуль системы впрыска 1
311	Реле времени плафонов освещения
312	Реле отключения потребителей электроэнергии
313	Реле включения топливного насоса
314	Реле очистителя фар
315	Реле 2-ой скорости очистителя ветрового стекла
316	Реле изменения угла опережения зажигания на 4
317	Переключатель люка крыши
318	Подогреватель корпуса дроссельных заслонок карбюратора
319	Панель управления кондиционером
320	Электровентилятор системы охлаждения двигателя и кондиционера
321	Резистор электровентилятора и кондиционера
322	Диод кондиционера и рулевого управления с усилителем
323	Диод электромагнитного клапана кондиционера и рулевого управления с усилителем
324	Реле превышения заданной скорости
325	ПДУ аудиосистемы
326	Сигнализатор превышения заданной скорости
327	ЭБУ датчика уровня топлива
328	Левый передний плафон освещения
329	Правый передний плафон освещения
330	Задний прикуриватель
331	Выключатель регулятора скорости движения
332	Переключатель импульсного стеклоподъемника
333	Выключатель сигнальной лампы незастегнутого ремня безопасности водителя
334	Термовыключатель
335	Реле 1-ой скорости группы электровентиляторов системы охлаждения двигателя
336	Реле 2-ой скорости группы электровентиляторов системы охлаждения двигателя
337	Реле 3-ой скорости группы электровентиляторов системы охлаждения двигателя
338	Регулятор давления наддува
339	Пусковая форсунка запуска холодного двигателя
340	Термовыключатель с временной задержкой
341	Электромагнитный клапан регулирования холостого хода

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
342	Защитное реле давления наддува
343	Датчик температуры масла
344	Пневмонасос регулятора
345	Предохранительный электромагнитный клапан системы регулирования
346	Электромагнитный клапан насоса регулирования
347	Разъем электропитания аудиосистемы
348	Переключатель импульсного стеклоподъемника
349	Распределитель зажигания
350	Датчик износа тормозных колодок левого заднего колеса
351	Датчик износа накладок тормозных колодок на правом заднем колесе
352	Электродвигатель 1 наклона спинки левого переднего сиденья
353	Электродвигатель 2 регулировки наклона спинки левого переднего сиденья
354	Электродвигатель регулировки по высоте левого переднего сиденья
355	Электродвигатель регулировки в продольном направлении левого переднего сиденья
356	Электродвигатель 1 наклона спинки правого переднего сиденья
357	Электродвигатель 2 регулировки наклона спинки правого переднего сиденья
358	Электродвигатель подъема правого переднего сиденья
359	Электродвигатель подъема правого переднего сиденья
360	Переключатель синтезатора речи
361	Гидравлический блок АБС
362	Плата с зажимами + аккумуляторной батареи
363	ЭБУ синтезатора речи
364	Громкоговоритель синтезатора речи
365	Правый высокочастотный громкоговоритель
366	Левый высокочастотный громкоговоритель
367	Правый концевой выключатель капота
368	Левый концевой выключатель капота
369	Водяной насос охлаждения подшипников турбокомпрессора
370	Резистор двухтонального звукового сигнала
371	Адсорбер паров бензина
372	ЭБУ открыванием/закрыванием багажного отделения
373	ЭБУ регулятора скорости движения
374	Переключатель регулировки спинки левого переднего сиденья
375	Переключатель регулировки спинки правого переднего сиденья

ОБОЗН.	ЭЛЕМЕНТ
376	Переключатель регулировки левого переднего сиденья
377	Переключатель регулировки правого переднего сиденья
378	Переключатель регулировки по высоте подушки левого переднего сиденья
379	Реле ускоренного холостого хода
380	Блок обмена информацией ЭБУ системы бортовой диагностики
381	Карбюратор
382	Реле впускного коллектора
383	Датчик температуры воздуха на впуске
384	Подогреватель коллектора
385	Сиденье водителя с подогревом
386	Сиденье пассажира с подогревом
387	Датчик давления масла
388	Выключатель сигнальной лампы включения полного привода
389	Центральный громкоговоритель
390	Шунт цепи задних противотуманных фонарей
391	Реле-прерыватель очистителя заднего стекла
392	Кнопка вывода информации на дисплей бортового компьютера
393	Электромагнитный клапан кондиционера и рулевого усилителя с усилителем
394	Антенна с электроприводом
395	Выключатель стоп-сигнала АКП А4
396	Выключатель полной нагрузки
397	Электровентилятор системы предотвращения перегрева двигателя
398	Электромагнитный клапан системы рециркуляции отработавших газов
399	Реле системы контроля уплаты налоговых сборов
400	Диод регулировки УОЗ силового модуля зажигания
400	Электромагнитный клапан контроля уплаты налоговых сборов
402	Датчик температуры масла
403	Вспомогательный электромагнитный звуковой сигнал
404	Электромагнитный клапан опережения впрыска пускового устройства дизельного двигателя
405	Выключатель рычага нагрузки на ТНВД
406	Датчик температуры предпускового подогрева
407	Электродвигатель привода заслонки рециркуляции воздуха
408	Датчик испарителя
409	Реле узла электронасоса рулевого управления с усилителем
410	Реле принудительного холостого хода
411	Реле давления кондиционера
412	Электромагнитный клапан ускоренного холостого хода
413	Блок идентификации сидений с обогревом

ОБОЗН.	ЭЛЕМЕНТ
414	Датчик обнаружения воды в дизтопливе
415	Электромагнитный клапан очистителей фар
416	Конденсатор принудительного холостого хода
417	Реле рециркуляции кондиционера
418	Электровентилятор обдува датчика температуры в салоне
419	Блок управления кондиционером
420	Смесительная заслонка
421	Концевой выключатель педали сцепления, АБС полноприводных автомобилей
422	Выключатель 1 скорости движения под рулевым колесом
423	Выключатель 2 регулятора скорости движения под рулевым колесом
424	Реле превышения заданной частоты вращения коленчатого вала регулятора скорости движения
425	Плата АБС
426	Электромагнитный клапан ограничения давления наддува
427	ЭБУ охранной сигнализации
428	Главное реле АБС (Bosch)
429	Вспомогательное реле АБС (Bosch)
430	Коробка диодов АБС (Bosch)
431	Выключатель инициализации щитка приборов
432	Главный электромагнитный клапан АБС
433	Ультразвуковой датчик охранной сигнализации
434	Реле давления отсечки АБС
435	Блок электромагнитных клапанов АБС
436	Электромагнитный клапан регулирования давления наддува
437	Подогреватель блока дроссельной заслонки
438	Концевой выключатель капота
439	Реле ЭБУ АБС
440	Выключатель обогрева сидений
441	АКП
442	Сирена системы охранной сигнализации с автономным питанием
443	Электромагнитный клапан управления АКП
444	Передний плафон направленного освещения
445	Балластный резистор топливного насоса
446	Лампа подсветки ручки корректора фар
447	Реле запрета включения заднего противотуманного фонаря
448	Соединительная плата «+» после замка зажигания
449	Резистор подогревателя дизтоплива
450	Реле подогревателя дизтоплива
451	Датчик температуры подогревателя дизтоплива

ОБОЗН.	ЭЛЕМЕНТ
452	ЭБУ датчика периметрической защиты
453	ЭБУ датчика объемной защиты
454	Передатчик/приемник сигналов объемной защиты
455	Диод электромагнитного клапана системы снижения токсичности отработавших газов
456	Балластное реле топливного насоса
457	Однопозиционный выключатель правой задней двери
458	Фонарь заднего противотуманного света и света заднего хода
459	Реле-прерыватель очистителя заднего стекла
460	Выключатель заднего моста
461	Реле защиты цепи АБС от броска напряжения
462	Фонарь освещения номерного знака, дверь задка/по центру
463	Плафон на боковине кузова
464	Выключатель освещения
465	Реле времени водяного насоса охлаждения подшипников турбокомпрессора
466	Блок шунтов
467	Реле ближнего света/габаритных огней
468	Диод ближнего света фар учебного автомобиля
469	Выключатель монитора
470	Реле большой скорости работы стеклоочистителя учебного автомобиля
471	Реле управления электростеклоподъемником
472	Реле отключения аудиосистемы
473	Выключатель проверки синтезатора речи
474	Реле управления компрессором кондиционера
475	Электродвигатель привода заслонки рециркуляции
476	ЭБУ полноприводной трансмиссией
477	Насос ускорения прогрева дизельного двигателя
478	Выключатель полного привода
479	Датчик температуры охлаждающей жидкости системы ускоренного подогрева
480	Датчик включения электровентилятора нагнетания горячего воздуха
481	Вентилятор нагнетания горячего воздуха
482	Электромагнитный клапан включения полного привода
483	Датчик ускорения
484	Электромагнитный клапан полноприводной трансмиссии
485	Многофункциональный переключатель
486	Выключатель сигнальной лампы незастегнутого ремня безопасности пассажира
487	Электромагнитный клапан экономайзера мощностных режимов
488	Датчик температуры экономайзера мощностных режимов
489	Однопозиционный выключатель левой задней двери
490	Однопозиционный выключатель правой передней двери
491	Однопозиционный выключатель левой передней двери
492	ЭБУ радиотелефоном
493	Левое заднее сиденье
494	Правое заднее сиденье
495	Правое переднее сиденье
496	Левое переднее сиденье
497	Акселерометр АБС полноприводных автомобилей
498	Датчик вертикального ускорения
499	Датчик углового ускорения
500	Датчик поперечного ускорения
501	ЭБУ системы запоминания положения сидений/наружных зеркал заднего вида
502	ЭБУ адаптивного усилителя рулевого управления
503	ЭБУ декодера
504	Правый задний плафон направленного освещения
505	Левый задний плафон направленного освещения
506	Розетка для подключения дополнительного оборудования
507	Переключатель противотуманных фар, задних противотуманных фонарей и аварийной сигнализации
508	Правый фонарь освещения багажного отделения
509	Левый фонарь освещения багажного отделения
510	Датчик системы запоминания положения сиденья
511	Выключатель освещения
512	Выключатель плафона направленного освещения
513	Выключатель надувания карманов сиденья с запоминанием положения
514	Насос надувания карманов сиденья с запоминанием положения
515	ЭБУ системы запоминания положения сиденья
516	ЭБУ системы запоминания положения сиденья
517	Клавиши регулировки положения и запоминания положения сиденья
518	Генераторный датчик управляющих импульсов
519	Лампа подсветки передней левой двери
520	Лампа подсветки передней правой двери
521	Лампа подсветки задней правой двери
522	Лампа подсветки задней левой двери
523	Лампа освещения двери водителя
524	Лампа освещения передней двери пассажира
525	Лампа освещения задней правой двери
526	Лампа освещения задней левой двери
527	Переключатель электростеклоподъемника задней двери на двери водителя
528	Переключатель электростеклоподъемника задней двери на двери водителя
529	Центральный плафон
530	Выключатель регулятора скорости движения
531	Концевой выключатель педали сцепления регулятора скорости движения
532	Переключатель электростеклоподъемника двери переднего пассажира на двери водителя
533	Выключатель системы поддержания высоты кузова
534	Выключатель амортизаторов с изменяемой жесткостью
535	Сигнальная лампа экономичной/спортивной программы переключения передач
536	Розетка для подключения наушников
537	Электродвигатель корректора левой фары
538	Электродвигатель корректора правой фары
539	Выключатель лампы освещения моторного отсека
540	Электродвигатель рулевого управления с адаптивным усилителем
541	Лампа подсветки зеркала в противосолнечном козырьке
542	ЭБУ системы поддержания высоты кузова
543	ЭБУ амортизаторов с изменяемым усилием
544	Реле системы поддержания высоты кузова
545	Реле защиты системы поддержания высоты кузова
546	Узел компрессора системы поддержания высоты кузова
547	Электромагнитный клапан левого заднего амортизатора
548	Электромагнитный клапан правого заднего амортизатора
549	Электромагнитный клапан левой передней амортизаторной стойки
550	Электромагнитный клапан правой передней амортизаторной стойки
551	Правый передний датчик высоты кузова
552	Левый передний датчик высоты кузова
553	Правый задний датчик высоты кузова
554	Левый задний датчик высоты кузова
555	Элетроклапан системы поддержания высоты кузова
556	Датчик положения двери задка
557	Электродвигатель закрытия двери задка

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
558	Выключатель закрытия двери задка
559	ЭБУ системы закрытия двери задка
560	Выключатель открытия двери задка
561	Компрессор звукового сигнала
562	Корректор фар
563	Реле воздухомасляного охладителя
564	Электровентилятор воздухомасляного охладителя
565	Блок дроссельной заслонки
566	Тепловое реле времени системы предотвращения перегрева двигателя
567	Водяной электронасос
568	Реле времени водяного электронасоса
569	Выключатель режима «кик-даун» 4-ступенчатой АКП
570	Реле электромагнитного клапана 1-ой ступени рулевого управления с усилителем
571	Реле электромагнитного клапана 2-ой ступени рулевого управления с усилителем
572	Диод рулевого управления с усилителем
573	Реле водяного электронасоса
574	Диод водяного электронасоса
575	Вывод для регулировки двигателя E5F
576	Реле разрешения включения системы предотвращения перегрева двигателя
577	ЭБУ радиотелефона
578	Электромагнитный клапан системы снижения токсичности отработавших газов карбюратора Pierburg
579	Выключатель электромагнитного клапана рециркуляции отработавших газов
580	Реле разрешения включения водяного насоса охлаждения подшипников турбокомпрессора
581	Делительный диод компрессор/водяной насос
582	Датчик температуры водяного насоса
583	Датчик угла поворота рулевого колеса
584	Реле включения муфты компрессора кондиционера
585	Датчик давления в шинах
586	Выключатель аварийной сигнализации
587	Датчик продольного ускорения АБС
588	Лампа подсветки зеркала в противосолнечном козырьке водителя
589	ТНВД
590	Выключатель охранной сигнализации
591	Датчик температуры каталитического нейтрализатора

ОБОЗН.	ЭЛЕМЕНТ
592	ЭБУ обработки данных о температуре каталитического нейтрализатора
593	Реле защиты рулевого управления с адаптивным усилителем
594	Диод сигнальной лампы температуры каталитического нейтрализатора
595	Реле разрешения включения узла электронасоса
597	Коробка предохранителей и реле в моторном отсеке
598	Электромагнитный клапан уменьшения крутящего момента
599	Самоудерживающееся реле водяного насоса
600	Электродвигатель регулятора отопителя
601	Датчик температуры охлаждающей жидкости в радиаторе отопителя
602	Реле света заднего хода
603	Выключатель регулировки рулевой колонки с запоминанием положения
604	Электродвигатель рулевой колонки с запоминанием положения
605	Реле разрешения подогрева основания карбюратора
606	Реле подогрева основания карбюратора
607	Датчик температуры подогрева основания карбюратора
608	Датчик электровентилятора системы предотвращения перегрева двигателя
609	ЭБУ температурой охлаждающей жидкости
610	Диагностический выключатель АБС
611	Левое ветровое стекло с электрообогревом
612	Реле обогрева левого ветрового стекла
613	Выключатель обогрева ветрового стекла
614	Переключатель импульсного электростеклоподъемника
615	Выключатель обогрева водительского сиденья
616	Выключатель обогрева пассажирского сиденья
617	Гасящий резистор
618	Кнопка ввода кода транспондера
619	Приемник сигнала управления открывающимися элементами кузова
620	Двухдорожечный потенциометрический датчик положения дроссельной заслонки
621	Реле шунта выключателя системы охлаждения двигателя
622	Реле времени системы предотвращения перегрева двигателя
623	Электромагнитный клапан вентиляции (заслонка)
624	Разъем электродвигателя регулировки наклона заднего правого сиденья

ОБОЗН.	ЭЛЕМЕНТ
625	Разъем электродвигателя регулировки наклона заднего левого сиденья
626	Блок ламп подсветки АКП
627	Выключатель регулятора скорости движения
628	Датчик скорости движения рулевого управления с адаптивным усилителем
629	Реле обогрева правого ветрового стекла
630	Правое ветровое стекло с электрообогревом
631	Модуль температуры наружного воздуха
632	Свечи предварительного подогрева 1 и 3
633	Свечи предварительного подогрева 2 и 4
634	Датчик положения педали сцепления
635	Реле времени запрещения включения компрессора кондиционера
636	Разъединяющий диод стоп-сигнала
637	Разъединяющий диод стоп-сигнала /сцепление
638	Реле звукового сигнала/сигнальная лампа (учебный автомобиль)
639	Дополнительный стоп-сигнал
640	Вспомогательное реле/реле блокировки впрыска
641	Разъединяющий диод/система охлаждения/цепь временной задержки
642	Разъединяющий диод/кондиционер/система предварительного подогрева
643	Резистор системы предотвращения перегрева двигателя
644	ЭБУ регулируемой подвески
645	Центральный электронный коммутационный блок в салоне
646	Реле обогрева ветрового стекла
647	Обогреватель ветрового стекла
648	Диод системы впрыска
649	Шаговый электродвигатель
650	Сигнальная лампа сидений с обогревом
651	Жидкокристаллический щиток приборов
652	Реле управления кондиционером
653	Комбинация приборов часы/указатель температуры наружного воздуха/дисплей радиотелефона
654	Ключ сигнализации
655	Датчик halex/halmo
658	Узел пневмопривод — электромагнитный клапан регулятора скорости движения
659	Делительный диод кондиционер/система охлаждения двигателя
660	Датчик температуры отключения кондиционера
661	Реле времени управления выключением кондиционера
662	ЭБУ навигационной системы
663	Катушка зажигания 1 с двумя выводами

ОБОЗН.	ЭЛЕМЕНТ
664	Катушка зажигания 2 с двумя выводами
665	Катушка зажигания 3 с двумя выводами
666	Катушка зажигания 4 с двумя выводами
667	Датчик хода педали тормоза
668	Левый передний датчик вертикального ускорения
669	Правый передний датчик вертикального ускорения
670	Левый задний датчик вертикального ускорения
671	Правый задний датчик вертикального ускорения
672	Блок резисторов
673	Выключатель блокировки электростеклоподъемника
674	Сдвоенный выключатель заднего противотуманного света и обогрева заднего стекла
675	Концевой выключатель педали сцепления
676	Концевой выключатель педали акселератора
677	Насос двухстороннего действия омывателей ветрового и заднего стекол
678	Датчик температуры электромагнитного клапана рециркуляции отработавших газов
679	Помехоподавительный конденсатор
680	Свеча предпускового подогрева 1-го цилиндра
681	Свеча предпускового подогрева 2-го цилиндра
682	Свеча предпускового подогрева 3-го цилиндра
683	Свеча предпускового подогрева 4-го цилиндра
684	Лазерный проигрыватель
685	Электромагнитный клапан регулятора скорости движения
686	Реле электромагнитного клапана рулевого управления с усилителем
687	Блок диодов
688	Датчик уровня и датчик температуры масла
689	Выключатель регулятора скорости и подушки безопасности
690	Реле электронного термостата
691	Дисплей навигационной системы
692	Трубка радиотелефона
693	Громкоговоритель радиотелефона
694	Левый обогреваемый жиклер омывателя ветрового стекла
695	Правый обогреваемый жиклер омывателя ветрового стекла
696	Шунт
697	Изолирующий диод + после замка зажигания/дополнительное оборудование
698	Изолирующий диод дополнительное оборудование/«+» после замка зажигания
699	Шунт регулятора скорости на автомобилях с АКП

ОБОЗН.	ЭЛЕМЕНТ
700	Реле малой скорости электровентилятора/система предотвращения перегрева двигателя
701	Самоблокирующееся реле насоса системы предотвращения перегрева двигателя
702	Реле 18-минутной временной задержки водяного насоса системы предотвращения перегрева двигателя
703	Реле электростеклоподъемника
704	Звуковой сигнал охранной сигнализации складной крыши
705	Реле электровентилятора обдува заднего стекла складной крыши
706	Выключатель складной крыши
707	Выключатель системы уборки складной крыши
708	Электровентилятор обдува заднего стекла складной крыши
709	Диод компенсации боковых колебаний рулевого управления с усилителем и узла электронасоса
710	Отдельный предохранитель
711	Топливный насос дизельного двигателя
712	Радиатор системы охлаждения двигателя в сборе с конденсором
713	Разъем для подключения электрооборудования жилого прицепа
714	Делительный диод системы снижения токсичности отработавших газов двигателя F8Q/кондиционер
715	Коммуникационный интерфейс радиотелефона
716	Правая передняя амортизаторная стойка
717	Левая передняя амортизаторная стойка
718	Правый задний амортизатор
719	Левый задний амортизатор
720	Реле отключения кондиционера
721	Узел: ЭБУ АБС + гидроблок АБС
722	Сдвоенный выключатель ветрового и заднего стекол
723	Диод автоматического сцепления
724	Узел электронасоса автоматического сцепления
725	Электромагнитный клапан автоматического сцепления
726	Датчик включенной передачи
727	Датчик положения сцепления
728	Датчик положения рычага переключения передач
729	Датчик положения педали акселератора
730	ЭБУ автоматического сцепления
731	Реле времени ветрового стекла с электрообогревом
732	Выключатель задания порога скорости
733	ЭБУ звукового сигнализатора превышения заданной скорости и невыключенного наружного освещения
734	Переключатель импульсного электростеклоподъемника двери водителя

ОБОЗН.	ЭЛЕМЕНТ
735	Звуковой сигнализатор о незастегнутых ремнях безопасности
736	Магнитометр
737	Датчик скорости движения автомобиля (двигатель N7Q)
738	Датчик подъема иглы форсунки
739	Датчик уровня жидкости в бачке омывателя фар
740	Разъединяющий диод цепей «+» аккумуляторной батареи/«+» дополнительного оборудования
741	Высотный корректор
742	Электромагнитный клапан изменения в сторону запаздывания момента подачи топлива
743	Реле высотного корректора
744	Реле питания ЭБУ /система рециркуляции отработавших газов
745	Реле управления подогревом дизтоплива
746	Датчик положения распределительного вала
747	Переключатель левого заднего сиденья
748	Переключатель правого заднего сиденья
749	Переключатель подголовника левого переднего сиденья
750	Реле системы обеспечения безопасности детей
751	Реле № 1 (потребителей электроэнергии) «+» после замка зажигания 1 (ap1)
752	Реле № 1 (потребителей электроэнергии) «+» после замка зажигания 2 (ap2)
753	Реле насоса омывателя фар
754	Интерфейс электро- и гидравлической систем
755	Выключатель противопробуксовочной системы
756	ЭБУ подушки безопасности/ преднатяжители ремней безопасности
757	Преднатяжитель ремня безопасности водителя
758	Преднатяжитель ремня безопасности пассажира
759	Однопозиционный выключатель крышки багажника
760	Выключатель обогрева заднего и ветрового стекол
761	Реле разгрузки генератора 1
762	Реле узла электронасоса автоматического сцепления 1
763	Звуковой сигнализатор неисправности автоматического сцепления
764	Реле питания поршневого компрессора и электромагнитного клапана поршневого компрессора
765	Электродвигатель поршневого компрессора
766	Электромагнитный клапан поршневого компрессора
767	Реле ЭБУ АКП

ОБОЗН.	ЭЛЕМЕНТ
768	Электромагнитный клапан регулирования длины впускного трубопровода
769	Термовыключатель выключения кондиционера
771	Модуль сигнализации о незакрытых дверях и непристегнутом ремне безопасности
772	Реле подогревателя
773	Отопитель
774	Реле питания преднатяжителя ремня безопасности
775	АКП Volvo Aisin Warner
776	Вспомогательное реле/реле блокировки
777	Плата предохранителей защиты цепей питания
778	Модуль катушки зажигания с четырьмя выводами
779	Многофункциональный переключатель АКП
780	Датчик скорости движения автомобиля с АКП
781	Датчик относительного давления АКП
782	Датчик частоты вращения коленчатого вала АКП
783	Блок 2-х силовых реле
784	Блок 2-х реле управления
785	Реле питания фазорегулятора
786	Электромагнитный клапан 1 фазорегулятора
787	Электромагнитный клапан 2-го фазорегулятора
788	Электромагнитный клапан сообщения топливного бака с атмосферой
789	Микрофон свободные руки радиотелефона
790	Электромагнитный клапан 2 регулирования длины впускного трубопровода
791	Катушка зажигания цилиндра 1
792	Катушка зажигания 2-го цилиндра
793	Катушка зажигания 3-го цилиндра
794	Катушка зажигания 4-го цилиндра
795	Катушка зажигания 5-го цилиндра
796	Катушка зажигания 6-го цилиндра
797	Кислородный датчик
798	Двухрежимный электромагнитный клапан
799	Датчик расхода воздуха системы впрыска
800	Реле управления импульсного модулятора
801	Выпрямительный диод цепи заряда
802	Выпрямительный диод ЭБУ системы впрыска двигателя N7U/реле топливного насоса
803	Выпрямительный диод ЭБУ системы впрыска двигателя N7U/реле насоса охлаждающей жидкости
804	Реле защиты (X54)
805	Реле обогрева ветрового стекла
806	Система охлаждения автомобиля с однообъемным кузовом

ОБОЗН.	ЭЛЕМЕНТ
807	Реле времени электромагнитного клапана системы рециркуляции отработавших газов
808	Реле питания силового модуля зажигания или электронной системы зажигания со статическим распределением высоковольтного напряжения
809	Подушка безопасности пассажира
810	Правое заднее обогреваемое окно боковины кузова
811	Левое заднее обогреваемое окно боковины кузова
812	ЭБУ складывающихся наружных зеркал заднего вида
813	Включение зажигания шаг № 1
814	Включение зажигания шаг № 2
815	Левый воспламенитель подушки безопасности пассажира 1
814	Правый воспламенитель подушки безопасности пассажира
817	Плата 2-х реле обогрева ветрового стекла
818	Реле разрешения включения водяного насоса системы ускоренного подогрева
819	Электромагнитный клапан пускового устройства
820	Реле-прерыватель указателей поворота и аварийной сигнализации + звуковой сигнализатор невыключенного наружного освещения и/или превышения заданной скорости
821	Выключатель блокировки заднего открывающегося стекла
822	Выключатель заднего открывающегося стекла
823	Правый громкоговоритель 3-го ряда сидений
824	Левый громкоговоритель 3-го ряда сидений
825	Выключатель противопробуксовочной системы и программ переключения передач экономичная/спортивная
826	Считывающее устройство системы K7
827	Электродвигатель привода заслонки распределения потоков воздуха со стороны водителя
828	Электродвигатель привода заслонки распределения потоков воздуха со стороны пассажира
829	Электродвигатель привода заслонки со стороны пассажира
830	Электродвигатель привода заслонки смешения воздушных потоков со стороны пассажира
831	Панель управления отоплением и вентиляцией со стороны пассажира
832	Панель управления климатической установкой со стороны пассажира
833	Датчик уровня топлива и топливный насос
834	ЭБУ компрессором системы поддержания высоты кузова

ОБОЗН.	ЭЛЕМЕНТ
835	Реле давления автоматического сцепления
836	Выпрямительный диод обмотки стартера
837	Реле отключения сигнальной лампы зарядки аккумуляторной батареи
838	Реле отключения обмотки возбуждения регулятора напряжения
839	Выпрямительный диод ЭБУ системы впрыска/ЭБУ автоматического сцепления/электродвигателя регулятора холостого хода
840	Реле времени отключения сигнальной лампы заряда аккумуляторной батареи
841	Электродвигатель открывания/закрывания левого окна боковины кузова
842	Электродвигатель открывания/закрывания правого окна боковины кузова
843	Переключатель электростеклоподъемника кузова
844	Электродвигатель блокировки замка крышки люка горловины топливного бака
845	ЛИСТОВ вторая подушка безопасности пассажира
846	Электродвигатель наклона передней части подушки сиденья переднего пассажира
847	Электродвигатель наклона задней части подушки сиденья переднего пассажира
848	Электродвигатель наклона передней части подушки сиденья водителя
849	Электродвигатель наклона задней части подушки сиденья водителя
850	Датчик крутящего момента электроусилителя рулевого управления
851	ЭБУ системы контроля давления в шинах
852	Реле времени электростеклоподъемника
853	Реле «+» после замка зажигания, «+» до замка зажигания
854	Выключатель одновременного включения электростеклоподъемников
855	Электромагнитный клапан останова дизельного двигателя с кодом кодированного электромагнитного клапана
856	Блок управления задним стеклом и дверью задка
857	Реле ИК-системы дистанционного управления
858	Реостат освещения приборов
859	Зуммер системы управления задним стеклом и дверью задка
860	Контактный диск
861	Подушка безопасности пассажира
862	Реле запрета включения регулятора скорости при положении P и N рычага селектора

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
863	Реле питания двухфункциональной антенны
864	Регулятор подачи топлива и датчик температуры топлива
865	Регулятор опережения впрыска топлива
866	ЭБУ системы впрыска дизельного двигателя
867	Задний противотуманный фонарь и правый задний фонарь заднего хода
868	Задний противотуманный фонарь и левый задний фонарь заднего хода
869	Изолирующий диод концевого выключателя левой передней двери/системы поддержания высоты кузова
870	Изолирующий диод правого концевого выключателя правой передней двери/системы поддержания высоты кузова
871	Изолирующий диод концевого выключателя задней двери/ системы поддержания высоты кузова
872	Декодер RDS
873	Электродвигатель привода правой заслонки распределения потоков воздуха
874	Электродвигатель привода левой заслонки распределения потоков воздуха
875	Электродвигатель привода правой заслонки воздухозабора
876	Электродвигатель привода левой заслонки воздухозабора
877	Электродвигатель привода правой заслонки смешения воздушных потоков
878	Электродвигатель привода левой заслонки смешения воздушных потоков
879	Плата реле стеклоподъемника левой задней двери
880	Плата реле стеклоподъемника правой задней двери
881	Плата реле стеклоподъемника двери переднего пассажира
882	Выключатель блокировки крышки отделения для уборки складной крыши
883	Замок крышки отделения для уборки складной крыши
884	Розеточная часть модуля для подключения дополнительного оборудования
885	Складная крыша с электроприводом
886	Антенный усилитель
887	Верхний кислородный датчик
888	Приемный блок навигационной системы Carminat
889	ЭБУ магнитометра
890	Реле электромагнитного клапана горелки (форсунки-воспламенителя)
891	Реле форсунки-воспламенителя
892	Электромагнитный клапан форсунки-воспламенителя
893	Форсунка-воспламенитель

ОБОЗН.	ЭЛЕМЕНТ
894	Насос обнаружения утечек
895	ЭБУ двухрежимной системой выпуска отработавших газов
896	Двухрежимный моторедуктор
897	Блок резисторов противотуманных фар
898	Дополнительная свеча подогрева
899	Подушка безопасности водителя (x06)
900	Электровентиляторы контейнера аккумуляторных батарей
901	ЭБУ прибора для проверки изоляции
902	Контактный выключатель крышки контейнера для аккумуляторных батарей
903	Электромагнитный переключатель
904	Тяговый электродвигатель
905	Электровентилятор обдува тягового электродвигателя
906	Выключатель сигнальной лампы минимального остатка топлива в баке отопителя
907	Вакуумный насос
908	Датчик падения тормозного усилия 0,5 бар
909	Дозирующий насос отопителя
910	Реле электровентиляторов контейнера для аккумуляторных батарей
911	Реле отключения цепи зарядки
912	Термовыключатель зарядки цепи
913	Датчик температуры в контейнере для аккумуляторных батарей
914	Реле управления электромагнитными выключателями
915	Реле неисправности в контейнере для аккумуляторных батарей
916	Зарядная вилка
917	Контроллер
918	Выключатель аварийной остановки
919	Переключатель направления движения вперед/назад
920	Потенциометр торможения
921	Потенциометр акселератора
922	Реле электровентилятора обдува тягового электродвигателя
923	Выключатель отопителя
924	Сигнальная лампа отопителя
925	Автономный отопитель
926	Дисплей электрического модуля управления
927	Датчик удара (инерционный датчик)
928	Датчик тока аккумуляторных батарей
929	Бортовое вентилируемое зарядное устройство
930	Статический преобразователь
931	Громкоговоритель аварийной сигнализации электрического модуля управления
932	Потенциометр цепи управления направлением движения

ОБОЗН.	ЭЛЕМЕНТ
933	Реле давления вакуумного насоса
934	Реле принудительного включения на малую скорость электровентилятора салона
935	Реле программирования режима обогрева
936	Кронштейн зарядной вилки
937	Электровентилятор преобразователя
938	Тяговая аккумуляторная батарея
939	ЭБУ автономным отопителем
940	Интерфейс датчика уровня топлива
941	Высоковольтный предохранитель
942	Микровыключатель высоковольтного предохранителя
943	Реле тестирования сигнальных ламп
944	Термовыключатель тягового двигателя
946	Электрический модуль электромобиля
947	Сигнальная лампа зарядки
948	Выключатель гидроцилиндра уборки складной крыши
949	Концевой выключатель гидроцилиндра 5-й дуги
950	Концевой выключатель главного гидроцилиндра
951	Узел электронасоса складной крыши с электроприводом
952	Электромагнитный клапан останова двигателя + электромагнитный клапан регулирования опережения впрыска
953	Блок управления скоростью вращения колеса
954	ЭБУ модуля управления системы предупреждения об отклонениях высоты кузова
955	Реле давления определения перегрузки системы поддержания высоты кузова
956	Электромагнитный клапан для удаления воздуха из системы поддержания высоты кузова
957	Приемоответчик
958	Диод цепи звукового сигнализатора невыключенного наружного освещения/реле повторной инициализации задних противотуманных фонарей
959	Диод цепи звукового сигнализатора невыключенного наружного освещения/щиток приборов
960	Реле повторной инициализации задних противотуманных фонарей
961	Устройство отключения аккумуляторной батареи (X70)
962	Реле защиты генератора
963	Диод цепи обнаружения неисправности цепи малой скорости электровентилятора системы охлаждения двигателя
964	Диод цепи обнаружения неисправности цепи большой скорости электровентилятора системы охлаждения двигателя

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
965	Выпрямительный диод цепи малой скорости работы электровентилятора/датчик включения электровентилятора на 1-й скорости
966	Выпрямительный диод системы впрыска/реле системы предотвращения перегрева двигателя
967	Электромагнитный звуковой сигнал
968	Реле блокировки рычага селектора
969	Рычаг переключения передачи, электромагнит блокировки рычага при включении 3-й передачи
970	Замок ремня безопасности
971	ЭБУ АКП DP0
972	Пульт управления навигационной системой Carminat
973	Блок управления спутниковой системы навигации
974	Антенна спутниковой системы навигации
975	Проигрыватель компакт-дисков
976	Блок управления интерфейсом пользователя
977	Цепь включения водяного насоса от аккумуляторной батареи
978	Электродвигатель блокировки лючка зарядного разъема
979	Подогреватель трубопровода системы вентиляции картера
980	Коробка реле свечей предпускового подогрева дизельного двигателя
981	Форсунка с встроенным датчиком подъема иглы
982	Реле управления задними плафонами освещения
983	Реле питания ЭБУ системы впрыска дизельного топлива
984	ЭБУ степенью зарядки аккумуляторных батарей электромобиля
989	ЭБУ ксеноновых фар
990	Правый передний потенциометрический датчик
991	Правый задний потенциометрический датчик
992	Мультиселектор АКП
993	Сигнальная лампа включения охранной сигнализации (j66)
994	Выключатель отключения объемной защиты (j66)
995	Электронный тахометр (j66)
996	Имитатор форсунок двигателя, работающего на сжиженном газе
997	ЭБУ системы питания сжиженным газом
998	Серводвигатель управления расходом газа системы питания сжиженным газом
999	Переходник системы зажигания для работы на сжиженном газе
1001	Датчик количества сжиженного газа
1002	Электромагнитный клапан системы питания сжиженным газом на баллоне

ОБОЗН.	ЭЛЕМЕНТ
1003	Переключатель питания двигателя газ/бензин
1004	Реле управления сигналом кислородного датчика
1005	Реле отключения электромагнитного клапана продувки адсорбера при работе двигателя на сжиженном газе
1006	Переходник системы питания сжиженным газом
1007	Выключатель зарядного отделения
1008	Переключатель вентилятора
1009	Электродвигатель зарядного отделения
1010	Электродвигатель вентилятора на задней перегородке
1011	Коммутационный блок навигационной системы
1012	Громкоговоритель навигационной системы
1013	Фазорегулятор распределительного вала
1014	Резистор малой скорости электровентилятора системы охлаждения двигателя
1015	Реле времени системы предупреждения остановки двигателя
1016	Блок предохранителей в салоне автомобиля
1017	Датчик частоты вращения турбины АКП
1018	Реле обратной связи (блокировка открывающихся элементов кузова)
1019	Электромагнитный клапан прекращения расхода через теплообменник
1020	Выключатель включения пониженной передачи
1021	Выключатель блокировки рычага селектора
1022	Выключатель блокировки ключа в замке зажигания
1023	Модуль питания электровентилятора кондиционера (j64)
1024	Указатель уровня топлива (автомобиль с системой питания сжиженным газом)
1025	Усилитель сигнала частоты вращения коленчатого вала двигателя
1026	Боковая подушка безопасности водителя
1027	Боковая подушка безопасности пассажира
1028	Боковой пульт дистанционного управления водителя
1029	Боковой пульт дистанционного управления пассажира
1030	Резистор
1031	Отключаемый плунжер высокого давления
1032	Датчик давления в топливораспределительной рампе
1033	Аккумуляторная батарея с предохранителем положительного вывода
1034	Кронштейн реле постоянного ближнего света фар

ОБОЗН.	ЭЛЕМЕНТ
1035	Главный электромагнитный клапан системы питания сжиженным газом
1036	Предохранительный электромагнитный клапан и электромагнитный клапан холостого хода двигателя системы питания сжиженным газом
1037	Усилитель сигнала частоты вращения коленчатого вала двигателя
1038	Шунт программирования (ЭБУ системы питания сжиженным газом)
1039	Реле указателей поворота и аварийной сигнализации
1040	Реле очистителя ветрового стекла
1041	Реле очистителя заднего стекла
1042	Реле блокировки замков дверей с электроприводом
1043	Реле разблокировки замков дверей с электроприводом
1044	Реле подъема стекол импульсными стеклоподъемниками
1045	Реле опускания стекол импульсными стеклоподъемниками
1046	Диод впрыска 2
1047	Реле впрыска
1048	ЭБУ двери задка
1049	Реле погружного подогревателя
1050	Электромагнитный клапан сцепления
1051	Электромагнитный клапан 1 включения передач
1052	Электромагнитный клапан 2 включения передач
1053	Электромагнитный клапан 1 последовательности переключения передач
1054	Электромагнитный клапан 2 последовательного переключения передач
1055	Датчик включенной передачи
1056	Датчик положения селектора передач
1057	Датчик положения сцепления
1058	Выключатель на рычаге селектора передач
1059	Датчик давления МКП с автоматическим управлением
1060	Датчики скорости на входе АКП
1061	Реле датчика уровня топлива
1062	Диод ЭБУ/концевой выключатель двери водителя
1063	Инвертор кондиционера
1064	Дополнительный топливный бак
1065	Переключатель на подачу топлива из дополнительного бака
1066	Датчик температуры топлива
1067	Реле дополнительного подогрева 1
1068	Реле дополнительного подогрева 2
1069	Реле дополнительного подогрева 3
1070	Интерфейс регулятора скорости движения
1071	Датчик давления наддува

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
1072	Свеча дополнительного подогрева 2
1073	Свеча дополнительного подогрева 3
1074	Свеча дополнительного подогрева 4
1075	Электромагнитный клапан управления пневмоприводом заслонки завихрения воздуха
1076	Блок дроссельной заслонки с сервоприводом
1077	Катушка зажигания 1-го цилиндра
1078	Катушка зажигания 2-го цилиндра
1079	Катушка зажигания 3-го цилиндра
1080	Катушка зажигания 4-го цилиндра
1081	Выключатель вкл.-выкл. регулятора и ограничителя скорости движения
1082.	Считывающее устройство карточки автомобиля без ключа
1083	Датчик присутствия в наружной ручке правой передней двери автомобиля без ключа
1084	Датчик присутствия в наружной ручке левой передней двери автомобиля без ключа
1085	Датчик присутствия в наружной ручке правой задней двери автомобиля без ключа
1086	Датчик присутствия в наружной ручке левой задней двери автомобиля без ключа
1087	Кнопочный выключатель запуска и остановки двигателя автомобиля без ключа
1088	Электрозамок рулевой колонки
1089	Форсунка системы питания сжиженным газом
1090	Датчик температуры и расхода сжиженного газа
1091	Датчик давления в контуре 1 тормозной системы с диагональным разделением контуров
1092	Датчик давления в контуре 2 тормозной системы с диагональным разделением контуров
1093	Микровыключатель усилителя тормозного усилия
1094	ЭБУ АБС/Системы стабилизации траектории
1095	Преднатяжитель поясной лямки ремня безопасности водителя
1096	Преднатяжитель поясной лямки ремня безопасности пассажира
1097	Преднатяжитель левого заднего ремня безопасности
1098	Преднатяжитель правого заднего ремня безопасности
1099	Боковая подушка безопасности, левая задняя
1100	Боковая подушка безопасности, правая задняя
1101	Боковая подушка безопасности (штора) на уровне головы водителя
1102	Боковая подушка безопасности на уровне головы пассажира
1103	Боковая подушка безопасности на уровне груди водителя
1104	Боковая подушка безопасности на уровне груди пассажира
1105	Регулятор подачи топлива
1106	Выключатель системы стабилизации траектории
1107	Датчик ускорения системы стабилизации траектории
1108	Датчик наличия детского кресла на сиденье переднего пассажира
1109	Датчик нейтрального положения рычага переключения передач механической КП/включения света заднего хода
1110	Дисплей системы контроля давления в шинах
1111	Датчик интенсивности солнечного излучения
1112	Датчик загрязненности воздуха
1113	Дополнительный обогреватель салона
1114	Электродвигатель привода заслонки обогрева ветрового и бокового стекол
1115	Электродвигатель привода заслонки подачи воздуха от кондиционера к ногам
1116	ЭБУ системы контроля давления в шинах информация о проколах шин
1117	Датчик давления в шине
1118	Лампа подсветки ниши для ног переднего пассажира
1119	Лампа подсветки ниши для ног водителя
1120	Лампа подсветки со стороны правого заднего пассажира
1121	Левый задний плафон освещения области ног заднего левого пассажира
1122	ЭБУ мультиплексной сети двери водителя
1123	ЭБУ мультиплексной сети двери пассажира
1124	ЭБУ датчика дождя
1125	Центральный коммуникационный блок
1126	ПУ системы дистанционной передачи данных
1127	Дисплей
1128	Антенна спутниковой системы навигации
1129	Индикатор положения рычага селектора АКП
1130	Датчик положения сиденья водителя
1131	Датчик положения сиденья переднего пассажира
1132	Правый задний высокочастотный громкоговоритель
1133	Левый задний высокочастотный громкоговоритель
1134	Датчик положения распределительного вала ряда цилиндров А
1135	Датчик положения распределительного вала ряда цилиндров В
1136	Фазорегулятор распределительного вала ряда цилиндров А
1137	Фазорегулятор распределительного вала ряда цилиндров В
1138	Нижний кислородный датчик ряда цилиндров В
1139	Верхний кислородный датчик ряда цилиндров А
1140	Датчик скорости на выходе из КП
1141	Левый задний потенциометрический датчик
1142	Топливораспределительная рампа
1143	Выключатель аварийной остановки
1144	Модуль отключения аккумуляторной батареи
1145	Датчик температуры испарителя быстродействующей системы отопления
1146	Датчик температуры хладагента
1147	Реле давления быстродействующей системы отопления
1148	Электромагнитный клапан изменения тока хладагента
1149	Электромагнитный клапан перепуска хладагента
1150	Компрессор с изменяемой холодопроизводительностью
1151	Фиксатор замка двери задка
1152	Сигнальная лампа блокировки открывающихся элементов кузова
1153	Выключатель открытия заднего открывающегося стекла
1154	Электродвигатель привода замка крышки
1155	Реле «+» потребителей электроэнергии
1156	Электровентилятор 1 салона
1157	Электровентилятор 2 салона
1158	Блок резисторов электровентилятора 2 салона
1159	Блок управления электровентилятора 2 салона
1160	Реле автономного отопителя
1161	Реле электромагнитного клапана системы питания сжиженным газом
1162	Электромагнитный клапан подавления шума адаптивного усилителя рулевого управления (рулевое колесо с двойным глушителем шума)
1163	Выключатель регулятора скорости движения с контролем дистанции до впереди идущего автомобиля
1164	ЭБУ регулятора скорости движения с поддержанием дистанции до впереди идущего автомобиля
1165	ЭБУ ремня безопасности, встроенного в сиденье
1166	Выключатель блокировки замков задних дверей
1167	ЭБУ форсункой EDU (интерфейс управления производительностью системы впрыска)
1168	Переключатель стеклоподъемников передних дверей, работающих в обычном и импульсном режимах

ОБОЗН.	ЭЛЕМЕНТ
1169	Переключатель стеклоподъемников задних дверей, работающих в обычном режиме
1170	Переключатель импульсных стеклоподъемников передних дверей, работающих в импульсном режиме
1171	Переключатель импульсных стеклоподъемников задних дверей
1172	Переключатель мультиплексных импульсных стеклоподъемников передних дверей
1173	Блок управления реле дополнительного подогрева
1174	Насос создания предварительного давления системы стабилизации траектории
1175	Датчик углового продольного и поперечного ускорения
1176	Датчик скорости вращения ротора генератора, встроенного в инерционный маховик
1177	Выключатель запрета включения генератора, встроенного в инерционный маховик
1178	Аккумуляторная батарея напряжением 36В
1179	Генератор, встроенный в инерционный маховик
1180	Инвертор
1181	Электрический модуль управления генератором, встроенным в инерционный маховик
1182	Датчик температуры аккумуляторной батареи
1183	Датчик давления топлива
1184	Многофункциональный звуковой сигнал
1185	Выключатель блокировки замка левой боковой двери
1186	Электромагнитный клапан (расширения) системы питания сжиженным газом
1187	Датчик разряжения в вакуумном усилителе тормозов
1188	Коаксиальная антенна системы свободные руки
1189	Электромагнитный клапан регулирования давления топлива (бензина)
1190	Выключатель блокировки правой боковой двери
1191	Выключатель блокировки левой боковой двери
1192	Концевой выключатель правой боковой двери
1193	Концевой выключатель левой боковой двери
1194	Антенна приемоответчика
1195	Датчик давления сжиженного газа
1196	Реле отсечки топливного насоса автомобиля с системой питания сжиженным газом
1197	Датчик температуры ветрового стекла
1198	Регулятор давления в общей топливораспределительной рампе дизельного двигателя

ОБОЗН.	ЭЛЕМЕНТ
1199	Датчик наличия пробки топливного бака
1200	ЭБУ блокировки боковой двери
1201	Датчик температуры воздуха в салоне/сигнальная лампа открывающихся элементов кузова
1202	Датчик давления хладагента
1203	Дополнительная аккумуляторная батарея
1204	Датчик температуры каталитического нейтрализатора
1205	Реле А резистора дополнительного подогревателя (каталитического нейтрализатора)
1206	Реле В резистора дополнительного подогревателя (каталитического нейтрализатора)
1207	Резистор дополнительного подогревателя каталитического нейтрализатора
1208	Радиоантенна
1209	Узел компрессора пневматической подвески
1210	Реле компрессора пневматической подвески
1211	Датчик высоты кузова пневматической подвески
1212	Форсунка 1 системы питания сжиженным газом
1213	Форсунка 2-го цилиндра, система питания сжиженным газом
1214	Форсунка 3-го цилиндра, система питания сжиженным газом
1215	Форсунка 4-го цилиндра, система питания сжиженным газом
1216	Блок управления рукояткой автоматического стояночного тормоза
1217	ЭБУ автоматическим стояночным тормозом
1218	Левый задний наружный датчик обнаружения препятствия системы парковки
1219	Правый задний наружный датчик обнаружения препятствия системы парковки
1220	Правый задний внутренний датчик обнаружения препятствия системы контроля парковки
1221	Левый задний внутренний датчик обнаружения препятствия системы контроля парковки
1222	ЭБУ системы контроля парковки
1223	Звуковой сигнал системы парковки
1224	Датчик положения турбокомпрессора
1225	Панель управления климатической установкой на водительском месте
1226	Панель управления климатической установкой со стороны пассажира
1227	Управление климатической установкой с правого заднего сиденья
1228	Управление климатической установкой с левого заднего сиденья

ОБОЗН.	ЭЛЕМЕНТ
1229	Электродвигатель 2 привода заслонки обдува ветрового и бокового стекол
1230	Электродвигатель привода заслонки воздухораспределения в задней части автомобиля
1231	Датчик углового ускорения
1232	Рулевое управление с электроусилителем руля
1233	Электромагнитный клапан регулирования 1
1234	Электромагнитный клапан регулирования 2
1235	Датчик воздушного испарителя 2
1236	Электромагнитный клапан 1 ускоренного обогрева
1237	Электромагнитный клапан 2 ускоренного обогрева
1238	Электромагнитный клапан 3 ускоренного обогрева
1239	Катушка ионизации системы впрыска
1240	Электромагнитное реле отключения аккумуляторной батареи
1241	ЭБУ мультиплексной системой связи между ЭБУ автомобиля по протоколу CAN
1242	ЭБУ навигационной системы
1243	Датчик А наличия детского сидения с системой крепления ISOFIX переднего пассажирского сиденья
1244	Датчик В наличия детского сидения с системой крепления ISOFIX переднего пассажирского сиденья
1245	Подушка безопасности для защиты головы от бокового удара со стороны водителя
1246	Подушка безопасности для защиты головы от бокового удара со стороны пассажира
1247	Задний боковой пульт управления со стороны пассажира
1248	Задний боковой пульт управления со стороны водителя
1249	Фронтальная подушка безопасности со стороны водителя с регулируемым объемом
1250	«Масса» подушки безопасности со стороны пассажира
1251	Датчик температуры воздуха в корпусе дроссельной заслонки
1252	Датчик уровня природного газа
1253	Датчик входного давления природного газа
1254	Электромагнитный клапан газового баллона 1
1255	Электромагнитный клапан газового баллона 2
1256	Электромагнитный клапан газового баллона 3
1257	Электромагнитный клапан газового баллона 4
1258	Электромагнитный клапан газового баллона 5
1259	Реле электромагнитного клапана на газовой магистрали
1260	Свеча предпускового подогрева № 5

Перечень элементов электрооборудования

ОБОЗН.	ЭЛЕМЕНТ
1261	Свеча предпускового подогрева 6-го цилиндра
1262	ЭБУ АКП
1263	Электропривод селектора АКП
1264	Электропривод селектора АКП
1265	Датчик положения распределительного вала впускных клапанов
1266	Датчик положения распределительного вала выпускных клапанов
1267	Датчик положения распределительного вала впускных клапанов, ГРМ с изменяемыми фазами
1268	Датчик положения распределительного вала выпускных клапанов, ГРМ с изменяемыми фазами
1269	Концевой выключатель люка крыши
1270	Реле люка крыши
1271	ЭБУ люка крыши
1272	Чейнджер компакт-дисков
1273	ЭБУ видеоустановки
1274	Датчик положения заднего стекла
1275	Автономный отопитель
1276	Водяной насос
1277	Реле времени автономного отопителя
1278	Задний экран видеосистемы
1279	Телевизионный приемник
1280	Проигрыватель DVD дисков
1281	Реле отключения стоп-сигнала
1282	Электромагнитная катушка ремня безопасности со стороны водителя
1283	Электромагнитная катушка ремня безопасности со стороны пассажира
1284	Правый фонарь двери задка
1285	Левый фонарь двери задка
1286	Противопылевой фильтр отопителя
1287	Датчик температуры перед противопылевым фильтром
1288	Датчик температуры после противопылевого фильтра
1289	Датчик давления перед противопылевым фильтром
1290	Датчик давления после противопылевого фильтра
1291	Датчик старения масла
1292	Датчик положения перепускного электромагнитного клапана СРОГ
1293	Датчик положения электромагнитного клапана заслонки завихрения воздуха
1294	Электромагнитный клапан постоянного тока СРОГ
1295	Датчик уровня церия
1296	Насос дозаправки церием
1297	Реле дополнительного масляного насоса
1298	Датчик содержания углеводорода
1299	Передний датчик давления наддува
1300	Датчик давления природного газа на выходе
1301	Перепускной электромагнитный клапан СРОГ

ОБОЗН.	ЭЛЕМЕНТ
1302	Датчик температуры нагнетаемого воздуха
1303	Блок уборки экрана видеосистемы
1304	Датчик утечки топлива из топливного бака
1305	Датчик положения правого распределительного вала впускных клапанов
1306	Датчик положения левого распределительного вала впускных клапанов
1307	Датчик положения правого распределительного вала выпускных клапанов
1308	Датчик положения левого распределительного вала выпускных клапанов
1309	Катушка зажигания 1-го цилиндра с транзистором
1310	Катушка зажигания 2-го цилиндра с транзистором
1311	Катушка зажигания 3-го цилиндра с транзистором
1312	Катушка зажигания 4-го цилиндра с транзистором
1313	Катушка зажигания 5-го цилиндра с транзистором
1314	Катушка зажигания 6-го цилиндра с транзистором
1315	Реле защиты шагового электродвигателя
1316	Аналоговый датчик давления гидроусилителя рулевого управления
1317	Блок управления клапанами
1318	Лампа подсветки левого переднего сопла вентиляции
1319	Лампа подсветки правого переднего сопла вентиляции
1320	Лампа подсветки переднего центрального сопла вентиляции
1321	Реле дополнительного подогрева 4
1322	Электропривод замка двери задка
1323	Дисплей системы контроля давления в шинах
1324	Фонарь освещения номерного знака, центральный
1325	Реле отключения блока управления отопителем
1326	Реле электровентилятора системы охлаждения автономного отопителя 1
1327	Реле электровентилятора системы охлаждения автономного отопителя 2
1328	Реле времени отключения аккумуляторной батареи
1329	Выключатель перевода в исходное положение устройства отключения аккумуляторной батареи
1330	Реле электромагнитного клапана отключения аккумуляторной батареи
1331	Выключатель запуска и остановки
1332	Ножной выключатель запуска

ОБОЗН.	ЭЛЕМЕНТ
1333	Сигнальная лампа ножного запуска
1334	Выключатель подсветки зеркала в противосолнечном козырьке
1335	Лампа подсветки правой пепельницы
1336	Лампа подсветки левой пепельницы
1337	Блок защиты и коммутации
1338	Реле насоса омывателя фар 2
1339	Реле лампы подсветки порога
1340	Внутреннее заднего вида
1341	Электродвигатель шторки люка крыши
1342	Антенна крыши, автомобиль без ключа
1343	Антенна в бампере функции «свободные руки», автомобиль без ключа
1344	Резистор вентилятора отопителя салона 1
1345	Резистор вентилятора отопителя салона 2
1346	Резистор вентилятора отопителя салона 3
1347	Резистор вентилятора отопителя салона 4
1348	Реле испарителя
1349	Реле конденсора
1350	Выпрямительный диод фонаря подсветки порога 1
1351	Выпрямительный диод фонаря подсветки порога 2
1352	Лампа подсветка ручки боковой двери
1353	Диод лампы подсветки двери порога
1354	Передний пульт управления со стороны водителя
1355	Передний пульт управления со стороны пассажира
1356	Преднатяжитель центральной задней катушки ремня безопасности
1357	Фронтальная подушка безопасности, задний ремень безопасности со стороны водителя
1358	Фронтальная подушка безопасности, задний ремень безопасности со стороны пассажира
1359	Датчик сматывания заднего ремня безопасности со стороны водителя
1360	Датчик сматывания заднего ремня безопасности со стороны пассажира
1361	Датчик задней панели со стороны водителя
1362	Датчик задней панели со стороны пассажира
1363	Преднатяжитель передней катушки ремня безопасности со стороны водителя
1364	Преднатяжитель катушки ремня безопасности со стороны пассажира
1365	Датчик полки переднего сиденья со стороны водителя
1366	Датчик полки переднего сиденья со стороны пассажира

ОБОЗН.	ЭЛЕМЕНТ
1367	Пиротехнический патрон защиты аккумуляторной батареи
1368	Подушка безопасности для ног водителя
1369	Контрольграф
1370	Диод аудиосистемы после замка зажигания/«+» аккумуляторной батареи
1371	Датчик нейтрального положения КП
1372	Датчик высоты задней части кузова
1373	Датчик высоты передней части кузова
1374	Антенна обнаружения карточки с функцией «свободные руки» в левой передней двери
1375	Антенна обнаружения карточки с функцией «свободные руки» в правой передней двери
1376	Антенна обнаружения карточки с функцией «свободные руки» в левой задней двери
1377	Антенна обнаружения карточки с функцией «свободные руки» в правой задней двери
1378	Антенна обнаружения карточки с функцией «свободные руки» в двери задка

ОБОЗН.	ЭЛЕМЕНТ
1379	ЭБУ перераспределением крутящего момента
1380	Датчик продольного ускорения, полноприводные автомобили
1390	Реостат корректора фар
1391	Выключатель блокировки замков дверей/выключатель аварийной сигнализации
1392	Микропереключатель блокировки замка левой передней двери
1393	Микропереключатель блокировки замка правой передней двери системы
1394	Микропереключатель блокировки замка левой задней двери
1395	Микропереключатель блокировки замка правой передней двери системы
1396	Внутренняя антенна обнаружения карточки с функцией «свободные руки» 1
1397	Внутренняя антенна обнаружения карточки с функцией «свободные руки» 2
1398	Внутренняя антенна обнаружения карточки с функцией «свободные руки» 3
1399	Реле подачи электропитания на сиденья

ОБОЗН.	ЭЛЕМЕНТ
1400	Электродвигатель регулировки положения спинки водительского сиденья 1
1401	Электродвигатель регулировки положения спинки пассажирского сиденья 1
1402	Электродвигатель регулировки положения подушки водительского сиденья
1403	Электродвигатель регулировки положения подушки пассажирского сиденья
1404	Электродвигатель регулировки положения водительского сиденья в продольном направлении
1405	Электродвигатель регулировки положения пассажирского сиденья в продольном направлении
1406	Пульт регулировки водительского сиденья
1407	Пульт регулировки сиденья переднего пассажира
1408	Выпрямительный диод освещения салона
1409	Микропереключатель блокировки замка двери багажного отделения

Перечень разъемов жгутов проводов

ОБОЗН.	РАЗЪЕМ
R1	Приборная панель/правая задняя часть автомобиля
R2	Приборная панель/левая задняя часть автомобиля
R3	Приборная панель/дверь водителя
R4	Приборная панель/дверь пассажира
R5	Приборная панель/воздуховод системы отопления
R6	Приборная панель/скоба
R7	Приборная панель/аудиоустановка
R8	Приборная панель/правая часть крыши
R9	Приборная панель/передняя панель кузова
R10	Приборная панель/правый лонжерон
R11	Приборная панель/левый лонжерон
R12	Правая задняя часть кузова/правая задняя дверь
R13	Левая задняя часть кузова/левая задняя дверь
R14	Правая задняя часть кузова/правая дверь задка
R15	Левая задняя часть кузова/левая дверь задка
R16	Левая задняя часть кузова/задняя поперечина
R17	Воздуховод системы отопления/двигатель
R18	Воздуховод системы отопления/«+» аккумуляторной батареи
R19	Воздуховод системы отопления/масса двигателя
R20	Двигатель/система зажигания
R21	Двигатель/электровентилятор системы охлаждения
R22	Двигатель/АКП
R23	Двигатель/система снижения токсичности отработавших газов
R24	Двигатель/система впрыска
R25	Двигатель/«+» аккумуляторной батареи
R26	Двигатель/«масса» двигателя
R27	Двигатель/правый лонжерон
R28	Двигатель/левый лонжерон
R29	Двигатель/система предотвращения перегрева двигателя
R30	Скоба/правое переднее сиденье
R31	Скоба/левое переднее сиденье
R32	Передняя панель/стекло-омыватель фар
R33	Передняя панель/бампер
R34	Двигатель/приборная панель
R35	Педальный узел/приборная панель
R36	АБС/приборная панель
R37	Двигатель/система впрыска
R38	Приборная панель/левая часть крыши
R39	Левая задняя часть кузова/задняя поперечина
R40	Правая задняя часть кузова/задняя поперечина
R41	Задняя поперечина/дверь задка

ОБОЗН.	РАЗЪЕМ
R42	Передняя панель/указатель правого поворота
R43	Передняя панель/указатель левого поворота
R44	Приборная панель/«массовая» шина правой стороны кузова
R45	Приборная панель/«массовая» шина левой стороны кузова
R46	Двигатель/масса кузова
R47	Передняя панель/«массовая» шина правой стороны кузова
R48	Передняя панель/«массовая» шина левой стороны кузова
R49	Правая задняя часть кузова/«масса» правой задней части кузова
R50	Правая задняя часть кузова/ «масса» левой задней части кузова
R51	Двигатель/«масса» двигателя
R52	Кузов/«масса» двигателя
R53	Кузов/«масса» кузова
R54	Воздуховод системы отопления/механическая КП
R55	Концевой выключатель капота/ воздуховод системы отопления
R56	Капот/двигатель
R57	Основание кузова автомобиля/приборная панель
R58	Электровентилятор системы охлаждения двигателя/правый лонжерон
R59	Воздуховод системы отопления/система впрыска
R60	АБС/правый лонжерон
R61	Регулятор скорости движения/правый лонжерон
R62	Система впрыска/регулятор скорости
R63	Левый лонжерон/система впрыска
R64	Система впрыска/плата АКП
R65	Система впрыска/воздуховод системы отопления
R66	Система впрыска/правый лонжерон
R67	Передняя часть двигателя/ двигатель
R68	Система впрыска/датчики температуры
R69	Кузов автомобиля/АБС
R70	Система впрыска/водяной насос охлаждения подшипников турбокомпрессора
R71	Регулятор скорости движения/воздуховод системы отопления
R72	Приборная панель/антенна с электроприводом
R73	Электровентилятор системы охлаждения двигателя/электронная система зажигания со статическим распределением высоковольтного напряжения
R74	Двигатель/двухфункциональный датчик давления масла
R75	«Масса» электровентилятора системы охлаждения двигателя/электровентилятор
R76	Левый боковой повторитель указателя поворота/левая фара

ОБОЗН.	РАЗЪЕМ
R77	Правый боковой повторитель указателя поворота/правая фара
R78	Дополнительная фара/левый лонжерон
R79	Форсунки/система впрыска
R80	Воздуховод системы отопления/АБС
R81	Воздуховод системы отопления/левый лонжерон
R82	Двигатель/кондиционер
R83	Дополнительная фара/правый лонжерон
R84	Система вентиляции салона/система впрыска
R85	Двигатель/фонари заднего хода
R86	Воздуховод системы отопления/балластная катушка
R87	Воздуховод системы отопления/очистители фар
R88	Левый лонжерон/диод стартера
R89	Приборная панель/датчик износа тормозных колодок
R90	Воздуховод системы отопления/ система вентиляции салона
R91	Воздуховод системы отопления/отопитель
R92	Воздуховод системы отопления/ нагнетательный вентилятор системы вентиляции салона
R93	Воздуховод системы отопления/кондиционер
R94	Воздуховод системы отопления/ реле балластной катушки
R95	Воздуховод системы отопления/АКП
R96	Правая задняя часть кузова/ подкачивающий топливный насос
R97	Воздуховод системы отопления/ омыватель ветрового стекла
R98	Правый лонжерон/очистители и омыватели фар
R99	Приборная панель/отопитель
R100	АБС/левый лонжерон
R101	Правый лонжерон/правая фара
R102	Левый лонжерон/левая фара
R103	Крышка багажника/цепь управления крышкой багажника
R104	Воздуховод системы отопления/катушка зажигания
R105	Шунт обогревателя заднего стекла/кузов автомобиля
R106	Передняя часть двигателя/бампер
R107	Приборная панель/передняя часть двигателя
R108	Приборная панель/консоль
R109	Правая задняя часть кузова/ фонарь освещения номерного знака
R110	Двигатель/навесное оборудование передней части двигателя
R111	Приборная панель/навесное оборудование передней части двигателя
R112	Передняя часть двигателя/кузов
R113	«Массовая» шина: двигатель — аккумуляторная батарея — кузов/кузов
R114	Массовая шина: двигатель — аккумуляторная батарея — кузов/двигатель

Перечень разъемов жгутов проводов

ОБОЗН.	РАЗЪЕМ
R115	Двигатель/электропроводка двигателя
R116	Двигатель/топливный насос
R117	Правая задняя часть кузова/левая задняя дверь
R118	Правая задняя часть кузова/кузов автомобиля
R119	Передняя левая часть кузова/ охранная сигнализация люка крыши
R120	Ниша воздухозабора/охранная сигнализация такси
R121	Передняя правая часть кузова/люк крыши
R122	Приборная панель/противотуманные фары
R123	Скоба/аудиоустановка
R124	Приборная панель/шунт аудиоустановки
R125	Радиоустановка/шунт аудиосистемы
R126	Электровентилятор системы охлаждения двигателя/реле отключения кондиционера
R127	Система впрыска/реле отключения кондиционера
R128	Кузов/масса электровентилятора системы охлаждения двигателя
R129	Кузов/компрессор звукового сигнала
R130	Левый лонжерон/компрессор
R131	Электропроводка двигателя/компрессор
R132	Приборная панель/постоянный ближний свет фар
R133	Левая передняя часть кузова/ электромагнитный клапан продувки адсорбера
R134	Приборная панель/дополнительная электропроводка для прицепа
R135	Дополнительная электропроводка в задней правой части кузова/приборная панель
R136	Задняя левая дверь/ дополнительная электропроводка в правой задней части кузова
R137	Правая задняя дверь/ дополнительная электропроводка в правой задней части кузова
R138	Воздуховод системы отопления/АБС
R139	Двигатель/АБС
R140	Плата АКП/АКП
R141	Плафон освещения/передняя часть двигателя
R142	Двигатель/ТНВД
R143	Правый боковой повторитель указателя поворота/правый лонжерон
R144	Левый боковой повторитель указателя поворота/левый лонжерон
R145	Плата АКП/балластная катушка
R146	Приборная панель/переднее сиденье
R147	Бампер/левое переднее крыло
R148	Электровентилятор системы охлаждения/левое переднее крыло
R149	Двигатель/левое переднее крыло

ОБОЗН.	РАЗЪЕМ
R150	Салон/левое переднее крыло
R151	Двигатель/правое переднее крыло
R152	Салон/левое переднее крыло
R153	Салон/дверь водителя
R154	Салон/дверь пассажира
R155	Салон/ левая задняя дверь
R156	Салон/правая задняя дверь
R157	Салон/дверь задка
R158	Салон/правая часть крыши
R159	Салон/скоба
R160	Разъем АКП/система впрыска
R161	Система впрыска/масляно-воздушный охладитель
R162	Сиденье с запоминанием положения/датчики
R163	Система впрыска/разъем датчика положения дроссельной заслонки
R164	Электровентилятор системы охлаждения двигателя/приборная панель
R165	Электровентилятор системы охлаждения двигателя/топливный насос
R166	Двигатель/датчик износа тормозных колодок
R167	Воздуховод системы отопления/система зажигания
R168	Двигатель/фонари заднего хода
R169	Фонари заднего хода/регулятор тормозных сил
R170	Фонари заднего хода/фонари освещения номерного знака
R171	Стояночный тормоз/воздуховод системы отопления
R172	Стеклоомыватель/приборная панель
R173	Приборная панель/консоль
R174	Воздуховод системы отопления/аудиоустановка
R175	Кожух отопителя/разъем АКП
R176	Приборная панель/вещевой ящик
R177	Левая задняя часть кузова/ разъем воздуховода системы отопления
R178	Разъем кожуха отопителя/дверь багажного отделения
R179	АБС/левое переднее крыло
R180	Салон/электропроводка рулевого управления с усилителем и регулируемой подвески
R181	Салон/педальный узел
R182	Салон/аудиоустановка
R183	Салон/АБС
R184	Система регулирования обогащения смеси на холостом ходу/двигатель
R185	Фонари освещения номерного знака/промежуточная электропроводка к фонарям освещения номерного знака
R186	Приборная панель/разъем противотуманных фар
R187	Салон/центральный плафон
R188	Карбюратор/двигатель
R189	Бампер/левое переднее крыло
R190	Правое переднее крыло/регулятор скорости движения
R191	Передняя панель/омыватели фар

ОБОЗН.	РАЗЪЕМ
R192	ЭБУ системы предотвращения перегрева двигателя
R193	Разъем дверь багажного отделения/правое заднее крыло
R194	Подкачивающий топливный насос/правое заднее крыло
R195	Разъем очистителя заднего стекла
R196	Разъем датчика уровня тормозной жидкости
R197	Выключатель обогрева сидений/приборная панель
R198	Разъем потолочной консоли
R199	Передняя поперечина/правое крыло
R200	Дверь задка/электродвигатель привода двери задка
R201	Салон/фонарь освещения вещевого ящика
R202	Правая задняя часть кузова/ разъем третьего стоп-сигнала
R203	Салон/прикуриватель
R204	Двигатель/шунт кислородного датчика
R205	Шунт насоса омывателя фар/передняя поперечина
R206	Салон/фонарь освещения моторного отсека
R207	Левая фара/дополнительная фара
R208	Левое переднее крыло/ветровое стекло с электрообогревом
R209	Разъем электромагнитного клапана регулируемой подвески
R210	Приборная панель/бампер
R211	Педальный узел/воздуховод системы отопления
R212	Двигатель/салон (автомобиль с однообъемным кузовом)
R213	Датчик скорости рулевого управления с адаптивным усилителем/салон
R214	Скоба/разъем скобы
R215	Разъем скобы/сиденья с обогревом
R216	Левая задняя часть кузова/ разъем датчика уровня топлива
R217	Разъем датчика уровня топлива/салон
R218	Топливный насос/разъем топливного насоса
R219	Приборная панель/ левая задняя дверь
R220	Приборная панель/правая задняя дверь
R221	Приборная панель/салон объемного кузова
R222	Правая задняя часть кузова/амортизаторы с изменяемой жесткостью
R223	Разъем датчика положения дроссельной заслонки
R224	Соединение с «массой» цепи регулирования УОЗ по признаку детонации
R225	Приборная панель/педальный узел инструктора учебного автомобиля

Перечень разъемов жгутов проводов

ОБОЗН.	РАЗЪЕМ
R226	Разъем электромагнитного клапана рециркуляции отработавших газов и пускового устройства дизельного двигателя
R227	Передняя панель/разъем омывателей фар
R228	Салон/выключатель режима кик-даун
R229	Приборная панель/разъем жиклера с обогревом
R230	Разъем радиотелефона
R231	Плафоны освещения/зеркало в противосолнечном козырьке
R232	Левая задняя часть кузова/правая задняя часть кузова
R233	Разъем для подключения электрооборудования жилого прицепа
R234	Приборная панель/датчики ускорения
R235	Приборная панель/АКП
R236	Левая задняя часть кузова/освещение номерного знака
R237	АБС в моторном отсеке/АБС под днищем автомобиля
R238	Левая задняя часть кузова/дверь водителя
R239	Левая задняя часть кузова/дверь пассажира
R240	Ветровое стекло с электро-обогревом/приборная панель
R241	Левая задняя часть кузова/третий стоп-сигнал
R242	Разъем приборной панели/ амортизатор с изменяемой жесткостью
R243	Правая задняя дверь/электро-проводка в задней левой части кузова
R244	Левая задняя часть кузова/крышка багажника
R245	Дверь задка/заднее стекло с электрообогревом
R246	Дверь задка/третий стоп-сигнал
R247	Амортизатор с изменяемой жесткостью/промежуточный разъем
R248	Левая задняя часть кузова/компрессор системы поддержания высоты кузова
R249	АКП А4/датчик давления в магистрали
R250	Дверь задка/фонарь освещения номерного знака
R251	Приборная панель/радиотелефон
R252	Приборная панель/кабель-удлинитель ключа охранной сигнализации
R253	Разъем системы поддержания высоты кузова/система поддержания высоты кузова (К 56)
R254	Приборная панель/шина воздухозабора
R255	АБС/ шина воздухозабора
R256	Ветровое стекло с электрообогревом/ниша воздухозабора
R257	Приборная панель/АКП

ОБОЗН.	РАЗЪЕМ
R258	АКП/левое переднее крыло
R259	Салон/задний бампер
R260	Салон/левая часть крыши
R261	Салон/воздуховод системы отопления
R262	Салон/двигатель
R263	Салон/АКП
R264	Салон/правая дверь задка
R265	Салон/передняя панель
R266	Салон/бампер
R267	Салон/система поддержания высоты кузова
R268	Салон/разъем датчиков износа тормозных колодок
R269	Разъем датчика уровня топлива/ устройства АБС под днищем автомобиля
R270	Салон/правое переднее сиденье
R271	Салон/левое переднее сиденье
R272	Двигатель/система электронной противоугонной блокировки запуска двигателя
R273	Разъем системы поддержания высоты кузова/жилой прицеп
R274	Разъем системы поддержания высоты кузова/среднее положения кузова
R275	Салон/электровентилятор
R276	Салон/прицеп
R277	Салон/преднатяжитель ремня безопасности водителя
R278	Салон/преднатяжитель ремня безопасности пассажира
R279	Салон/разъем дисплея аудиоустановки
R280	Задняя часть автомобиля/ складная крыша
R281	Разъем правая дверь задка/ электродвигатель привода двери задка
R282	Двигатель/автономный отопитель
R283	Двигатель/контейнер для аккумуляторных батарей
R284	Двигатель/зарядная вилка
R285	Приборная панель/переключатель направления движения
R286	Разъем каталитический нейтрализатор/приборная панель
R287	Разъем ЭБУ
R288	Распределение высоковольтного напряжения/электрический модуль управления
R289	Распределение высоковольтного напряжения/преобразователь
R290	Разъем электропроводки двигателя/педальный узел
R291	Салон/цепь воспламенения
R292	Салон/подушка безопасности пассажира
R293	Приемная часть разъема вилки розеточного соединения
R294	Разъем вилки светящейся линии
R295	Правая задняя часть кузова/днище автомобиля
R296	Салон/правая задняя часть кузова
R297	Салон/ левая задняя часть кузова
R298	Салон/дополнительное радиооборудование

ОБОЗН.	РАЗЪЕМ
R299	Разъем электропроводки: оборудование передней/задней части автомобиля
R300	Свечи предварительного подогрева/двигатель
R301	Приборная панель/плафон освещения
R302	Разъем воздуховод системы отопления/крыша
R303	Система навигации/салон
R304	Дополнительный резервуар со сжиженным газом/салон
R305	Двигатель/втягивающее реле стартера
R309	АБС/разъем АБС
R326	Двигатель/система питания сжиженным газом
R442	Сирена/правое переднее крыло
R495	Салон/преднатяжитель ремня безопасности пассажира
R496	Салон/сигнальная лампа незастегнутого ремня безопасности
R618	Крыша/консоль крыши
R620	Левая задняя часть автомобиля/разъем левой двери задка
R621	Разъем левой двери задка/левая дверь задка
R622	Двигатель/высоковольтная электропроводка
R715	Приборная панель/радиотелефон
R757	Салон/преднатяжитель ремня безопасности водителя
R758	Салон/преднатяжитель ремня безопасности пассажира
R900	Приборная панель/воздуховод дополнительной системы отопления
R980	Правый лонжерон/омыватель фар
R981	Салон/регулятор скорости движения
R982	Регулятор скорости движения/задние датчики
RA	Передняя часть двигателя/приборная панель
RB	Передняя часть двигателя/датчик положения распределительного вала
RC	Передняя панель/омыватели фар
RD	Передняя часть двигателя/ЭБУ двухтонального звукового сигнала
RE	Приборная панель/ электровентилятор
RF	Пульт управления/ электровентилятор
RG	Приемник инфракрасного излучения/электропроводка дополнительной охранной сигнализации
RH	Двигатель/электромагнитный клапан регулирования опережения впрыска
RI	Левый лонжерон/электропроводка электромагнитного клапана продувки адсорбера
RJ	Правый лонжерон/дополни-тельная охранная сигнализация
RK	Приборная панель/охранная сигнализация

ОБОЗН.	РАЗЪЕМ
RL	ЭБУ системой поддержания высоты кузова/узел компрессора
RM	Приборная панель/дополнительная электропроводка по правому борту салона для системы поддержания высоты кузова
RN	Задняя левая часть кузова/ разъем третьего стоп-сигнала
RP	Салон/система впрыска
RQ	Салон/двигатель
RS	Передняя панель/правая фара
RT	Передняя панель/левая фара
RU	Двигатель/генератор
RV	Топливный насос/датчик уровня топлива
RW	Правая сторона салона/крышка лючка наливной горловины
RX	Моторный отсек/разъем правого датчика износа тормозных колодок
RY	Моторный отсек/разъем левого датчика износа тормозных колодок
RZ	Моторный отсек/дополнительный разъем прицепа
RBA	Потолочная консоль/люк крыши
RBC	Автономный отопитель/двигатель
RBD	Передняя часть кузова/крышка зарядного разъема
RBE	Блок дроссельной заслонки/двигатель
RBF	Кислородный датчик/двигатель
RBG	Силовой модуль зажигания/двигатель
RBH	Приборная панель/дополнительная электропроводка 16-местного автобуса № 1
RBI	Приборная панель/дополнительная электропроводка 16-местного и 9-местного автобуса № 2
RBJ	Дополнительная электропроводка 1 6-местного автобуса № 2/ плафон пассажира
RBK	Правая боковая подушка безопасности/салон
RBL	Левая боковая подушка безопасности/салон
RBM	Дополнительная подушка безопасности водителя/салон
RBN	Дополнительная подушка безопасности пассажира/салон

Перечень соединений на «массу»

ОБОЗН.	СОЕДИНЕНИЕ НА «МАССУ»
M1	«Масса» правой передней стороны автомобиля
M2	«Масса» левой передней стороны автомобиля
M3	«Масса» коробки передач
M4	«Масса» кузова автомобиля
M5	«Масса» двери задка
M6	«Масса» правого заднего фонаря
M7	«Масса» левого заднего фонаря
M8	«Масса» системы впрыска
M9	«Масса» правой передней стойки
M10	«Масса» левой передней стойки
M11	«Масса» приборной панели
M12	«Масса» кронштейна крепления рулевого механизма
M13	«Масса» скобы
M14	«Масса» кронштейна звукового сигнала
M15	«Масса» воздуховода системы отопления
M16	Двигатель/«масса» кузова
M17	Кузов/«масса» двигателя
M18	«Масса» АБС
M19	Электронная «масса» АБС
M20	Масса элемента обогрева заднего стекла
M21	Электронная «масса» электронной системы зажигания со статическим распределением высокого напряжения при увеличении УОЗ в сторону опережения
MA	Электрическая «масса» правой передней стороны автомобиля
MAA	Электрическая «масса» корпуса ЭБУ
MAB	Электрическая «масса» на заднем мосту
MAC	«Масса» верхнего кронштейна крепления КП
MAD	«Масса» датчика уровня топлива и топливного насоса
MAE	Электрическая «масса» пассажирского прицепа
MAG	Электрическая «масса» кронштейна узла АБС
MAH	«Масса» АБС
MAJ	«Масса» электровентилятора
MAK	Электрическая «масса» сигнальной лампы предподогрева
MAL	«Масса» подушки безопасности пассажира
MB	Электрическая «масса» левой передней стороны автомобиля
MC	«Масса» АКП
MD	Электрическая «масса» задней полки
ME	«Масса» кузова (общая)
MF	Электрическая «масса» правой задней стороны автомобиля
MG	Электрическая «масса» задней левой стороны автомобиля
MH	Электрическая «масса» двигателя
MJ	Электрическая «масса» передней правой стойки
MJQ	Радиатор/«масса» кузова
MK	Электрическая «масса» передней левой стойки
ML	Электрическая «масса» аккумуляторной батареи

ОБОЗН.	СОЕДИНЕНИЕ НА «МАССУ»
MM	Электрическая «масса» кронштейна крепления рулевой колонки
MN	Электрическая «масса» скобы
MP	Электрическая «масса» держателя звукового сигнала
MQ	Электрическая «масса» воздуховода системы отопления
MR	Электронная «масса» КП
MS	«Масса» кронштейна крепления узла электронасоса
MT	Электрическая «масса» аудиосистемы
MU	«Масса» решетки
MV	«Масса» аудиосистемы
MW	Электрическая «масса» передней части автомобиля
MX	«Масса» радиотелефона
MY	Электрическая «масса» заднего багажного отделения
MYH	«Масса» левой двери задка
MZ	Электрическая «масса» левой задней панели задка
MZA	«Масса» ветрового стекла с электрообогревом
MZB	Электронная «масса» TUP щитка приборов
NA	Электронная «масса» правой передней стойки
NAC	Электронная «масса» верхнего кронштейна крепления КП
NB	Электронная «масса» воздуховода системы отопления
NC	Электронная «масса» левой передней стойки
ND	Электронная «масса» АБС
NE	Электронная «масса» левой задней стороны автомобиля
NF	Электронная «масса» двигателя
NH	Электронная «масса»
NG	Электронная «масса» TPP
NJ	Электронная «масса» правой передней стойки
NK	Электронная «масса» двигателя
NL	Электронная «масса» аудиосистемы
NO	Электронная «масса» воздуховода системы отопления
NR	Электронная «масса» двигателя
NS	Электронная «масса» правой задней стороны двигателя
NT	Электронная «масса» левого переднего лонжерона 1
NU	Электронная «масса» левого переднего лонжерона 2